
Included accessories:


Typ	Draw	Number	Name
1		4PCS	Self-tapping screw
2		4PCS	Expansion tube
3		1PC	Aluminum strip

Tool requirements:

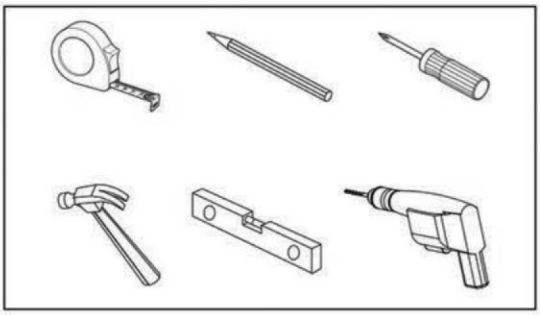


Step1

Measure and mark the desired location on the wall where you want to hang the mirror. Ensure that it is level and at the right height for your preference. Make sure the wall is strong and firm enough to hold the mirror.

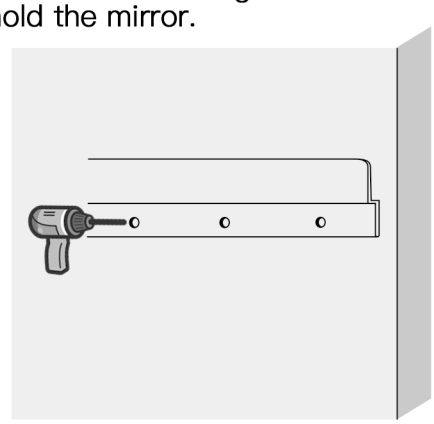

Step2

Attach the long piece of the French Cleat to the wall. Make sure it is securely fastened to the wall studs or uses appropriate wall anchors for added stability. Use a level to ensure that it is straight.

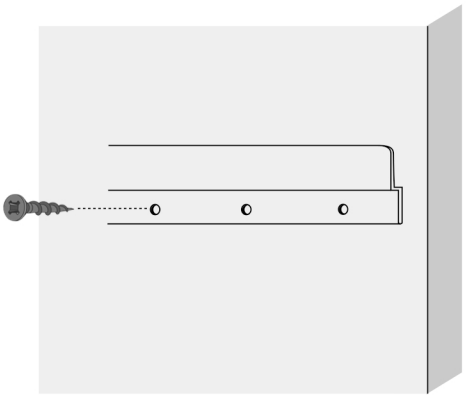

Step3

Slide the mirror downward, allowing the frame and the wall hanger to interlock.

