

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in Seat frame for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.

QUEEN BED

N758P482018 - N758P482019



WARNING

STRANGULATION HAZARD.

NEVER place bed near windows where cords from blinds or drapes may strangle a child.
NEVER suspend strings over bed.
NEVER place items with a string, cord, or ribbon, such as hood strings or pacifier cords, around a child's neck. These items may catch on bed parts.
ALWAYS follow assembly instructions.



WARNING!

Not intended for children under the age of six. **INFANTS HAVE DIED FROM BECOMING ENTRAPPED IN BEDS.** Openings in and between bed parts can entrap the neck and head of a small child. **NEVER** use bed for child under the age of six.


The mattress must be appropriately sized for the bed. If the mattress is undersized, dangerous gaps can exist and a person can become entrapped or entangled in the frame and suffocate.

Note: This Bed is NOT a TOY.

Keep your child/children at bay during the assembly process.

The BED is HEAVY.





To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting it.

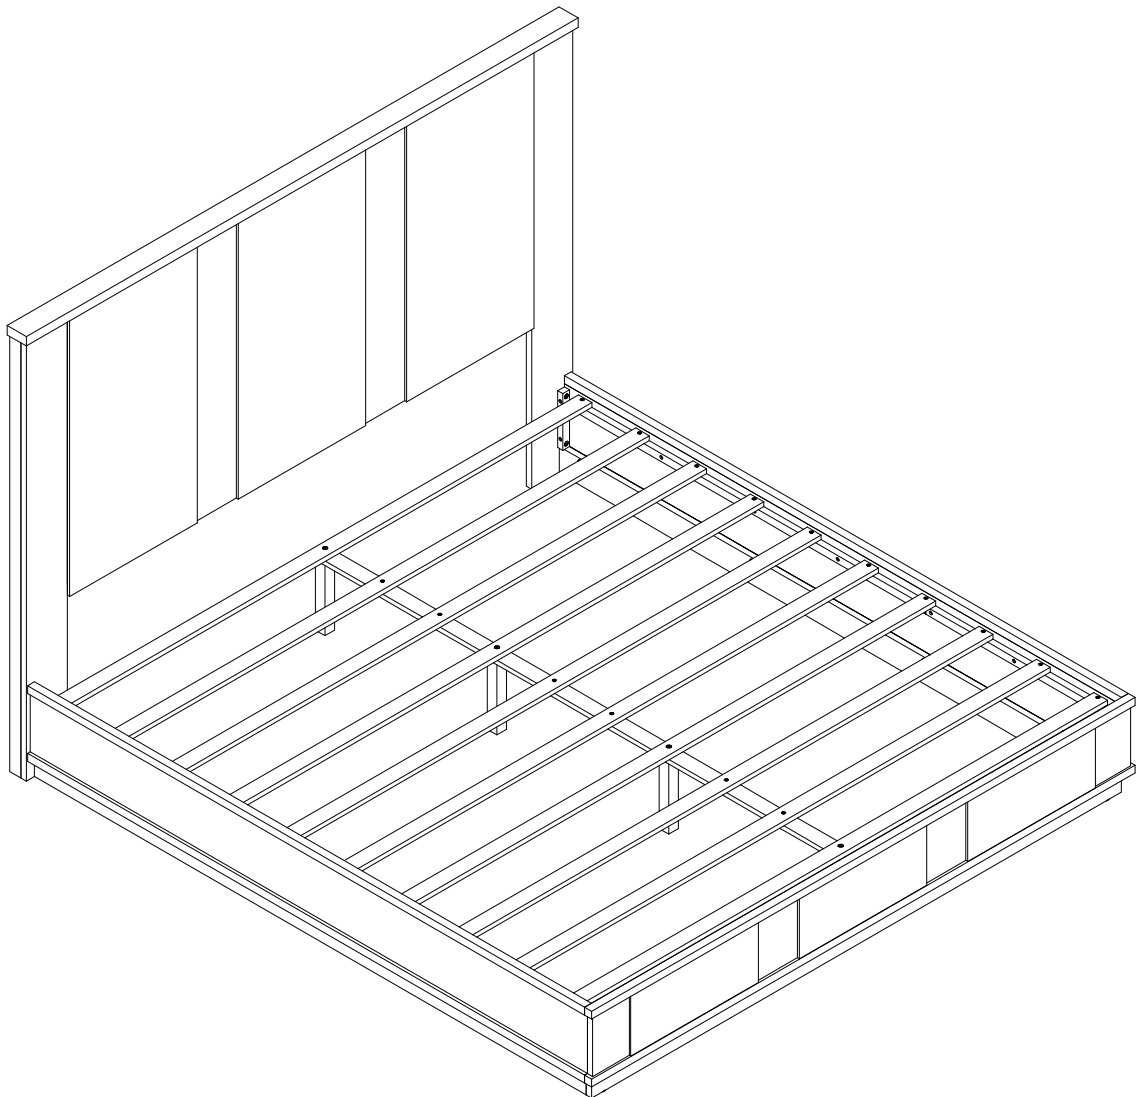





CAUTION: This Queen Bed is NOT a TOY.
Keep your child / children at bay in the process of assembly.
For turning the Queen Bed and to prevent damage to the Queen Bed.
2 persons may be needed to execute this action.

PARTS LIST

N758P482018





①	Headboard right leg 	1PC	⑫	Slats support 	1PC
②	Headboard left leg 	1PC	⑬	Left side bar 	1PC
⑩	Side rails 	2PCS	⑯	Bottom bar footboard 	1PC
⑪	Right side bar 	1PC			

N758P482019


③	Headboard 1 	1PC	⑧	Headboard Bottom trim 	1PC
④	Headboard 2 	2PCS	⑨	Middle leg 	4PCS
⑤	Headboard 3 	1PC	⑭	Slats 1 	6PCS
⑥	Headboard 4 	1PC	⑮	Slats 2 	4PCS
⑦	Headboard top trim 	1PC	⑰	Footboard 	1PC

HARDWARE LIST

N758P482019

A	Allen wrench 	1PC +1	E	Vis flat head 4*55 mm 	5PCS +1
B	Bolts 1/4*30mm 	32PCS +2	F	Vis flat head 4*30 mm 	26PCS +2
C	Vis umbrella head 3.5*12mm 	16PCS +1	G	Flat washer 2*8*11MM 	8PCS +1
D	Bolts 1/4*50mm 	6PCS +1	ASSEMBLY TOOLS REQUIRED (NOT INCLUDED) 		

PRODUCT DETAILS

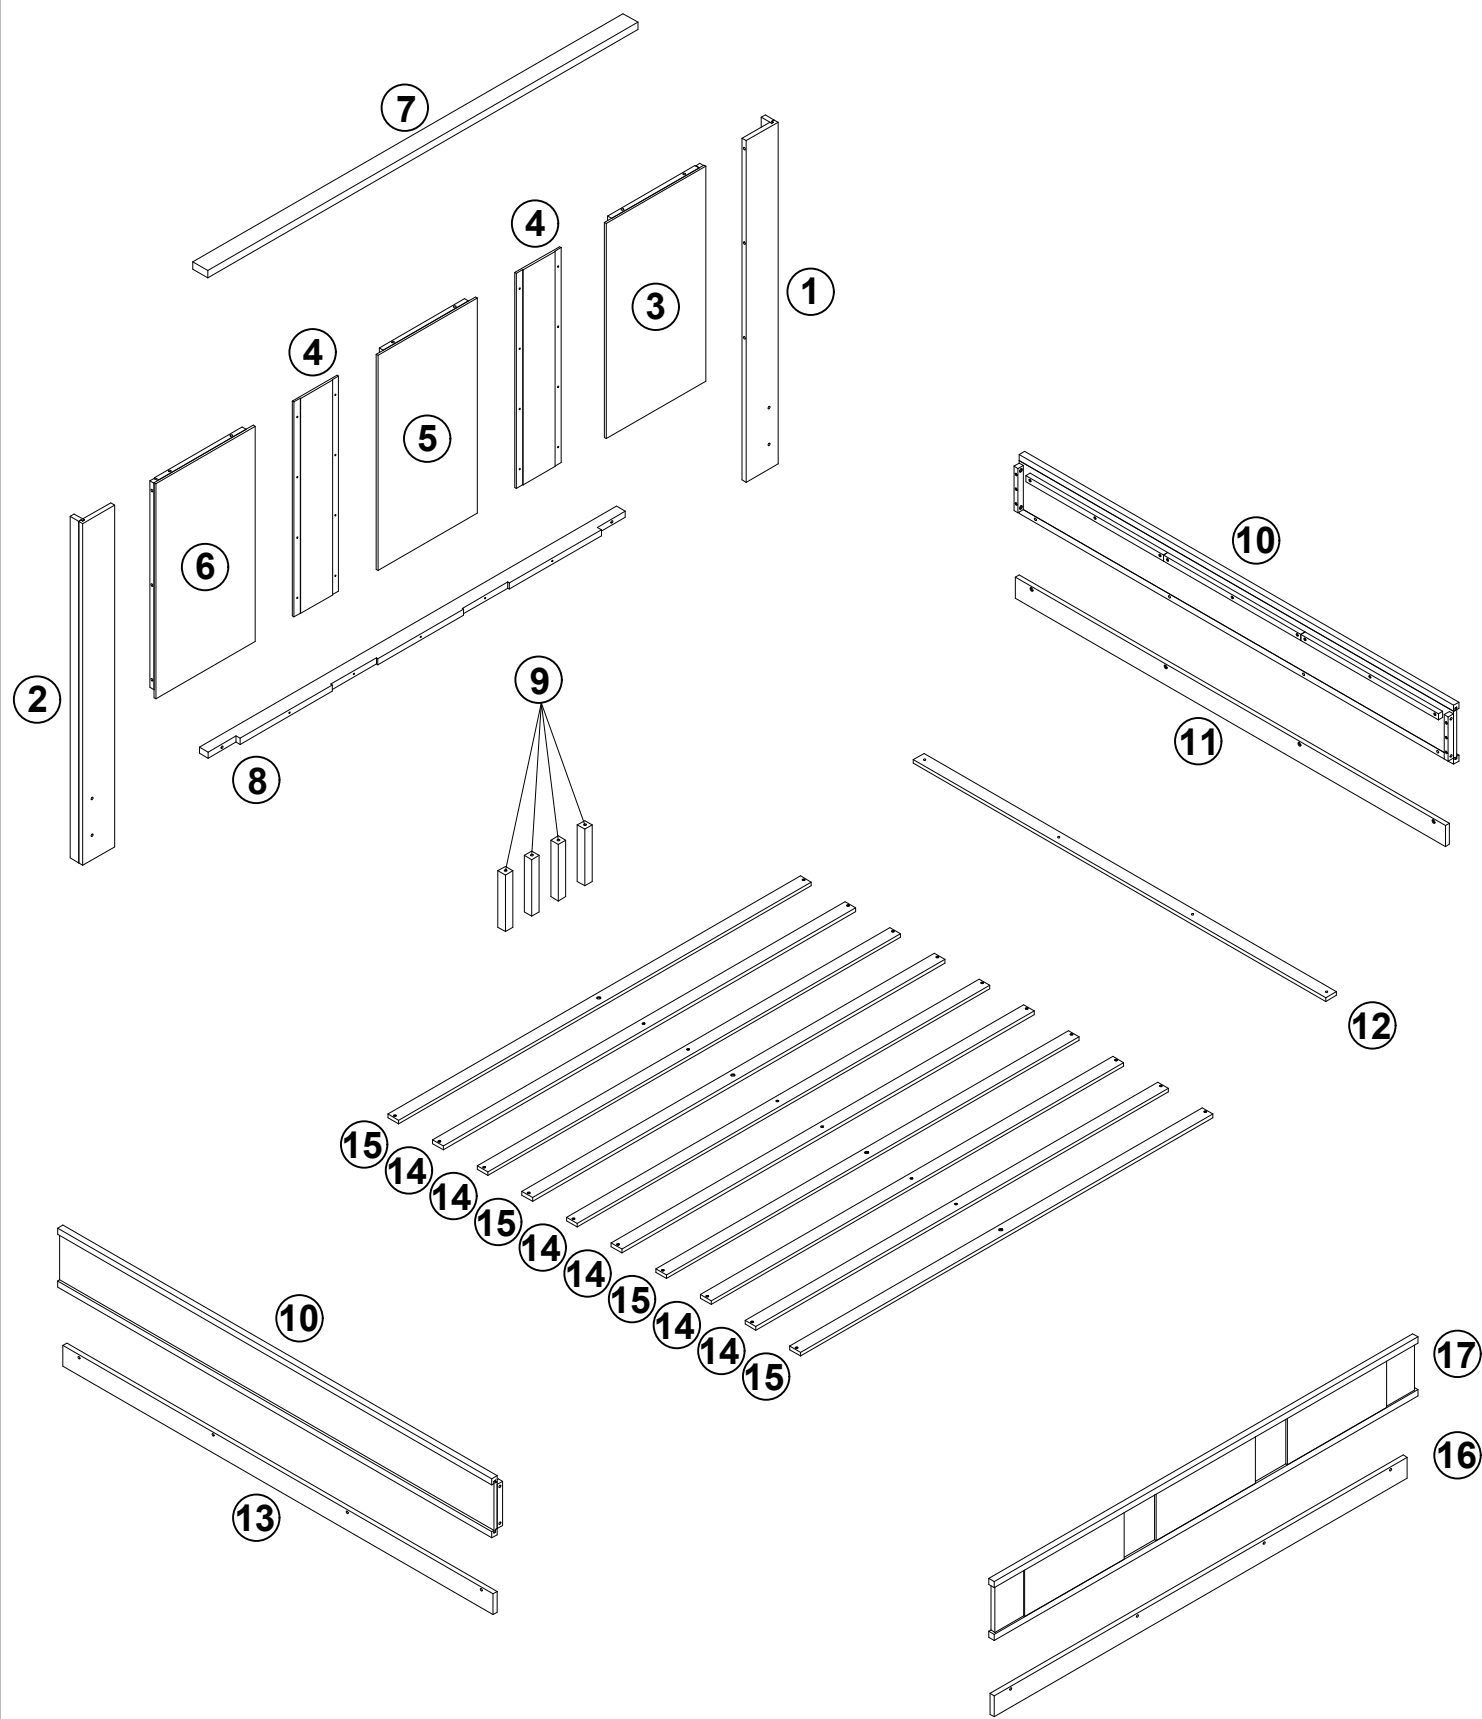

ASSEMBLY PREPARATION




① 1PC



② 1PC



③ 1PC




④ 2PCS




⑤ 1PC



⑥ 1PC



⑦ 1PC



⑧ 1PC



⑨ 4PCS




⑩ 2PCS



⑪ 1PC



⑫ 1PC



⑬ 1PC




⑭ 6PCS





⑮ 4PCS



⑯ 1PC



⑰ 1PC

Ⓐ	Allen wrench / clé Allen 	1PC +1
Ⓑ	Bolts / Boulons 1/4*30mm 	32PCS +2
Ⓒ	Vis umbrella head 3.5*12mm Tête de parapluie Vis 3.5*12 mm 	16PCS +1
Ⓓ	Bolts / Boulons 1/4*50mm 	6PCS +1
Ⓔ	Vis flat head 4*55 mm Vis à tête plate 4*55 mm 	5PCS +1
Ⓕ	Vis flat head 4*30 mm Vis à tête plate 4*30 mm 	26PCS +2
Ⓖ	Flat washer Rondelle plate 2*8*11MM 	8PCS +1



• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



• Do not assemble on flooring or carpet-




• Assemble on a clean non-marring surface (packing foam)-



• Save all packaging until finished-


ASSEMBLY STEPS

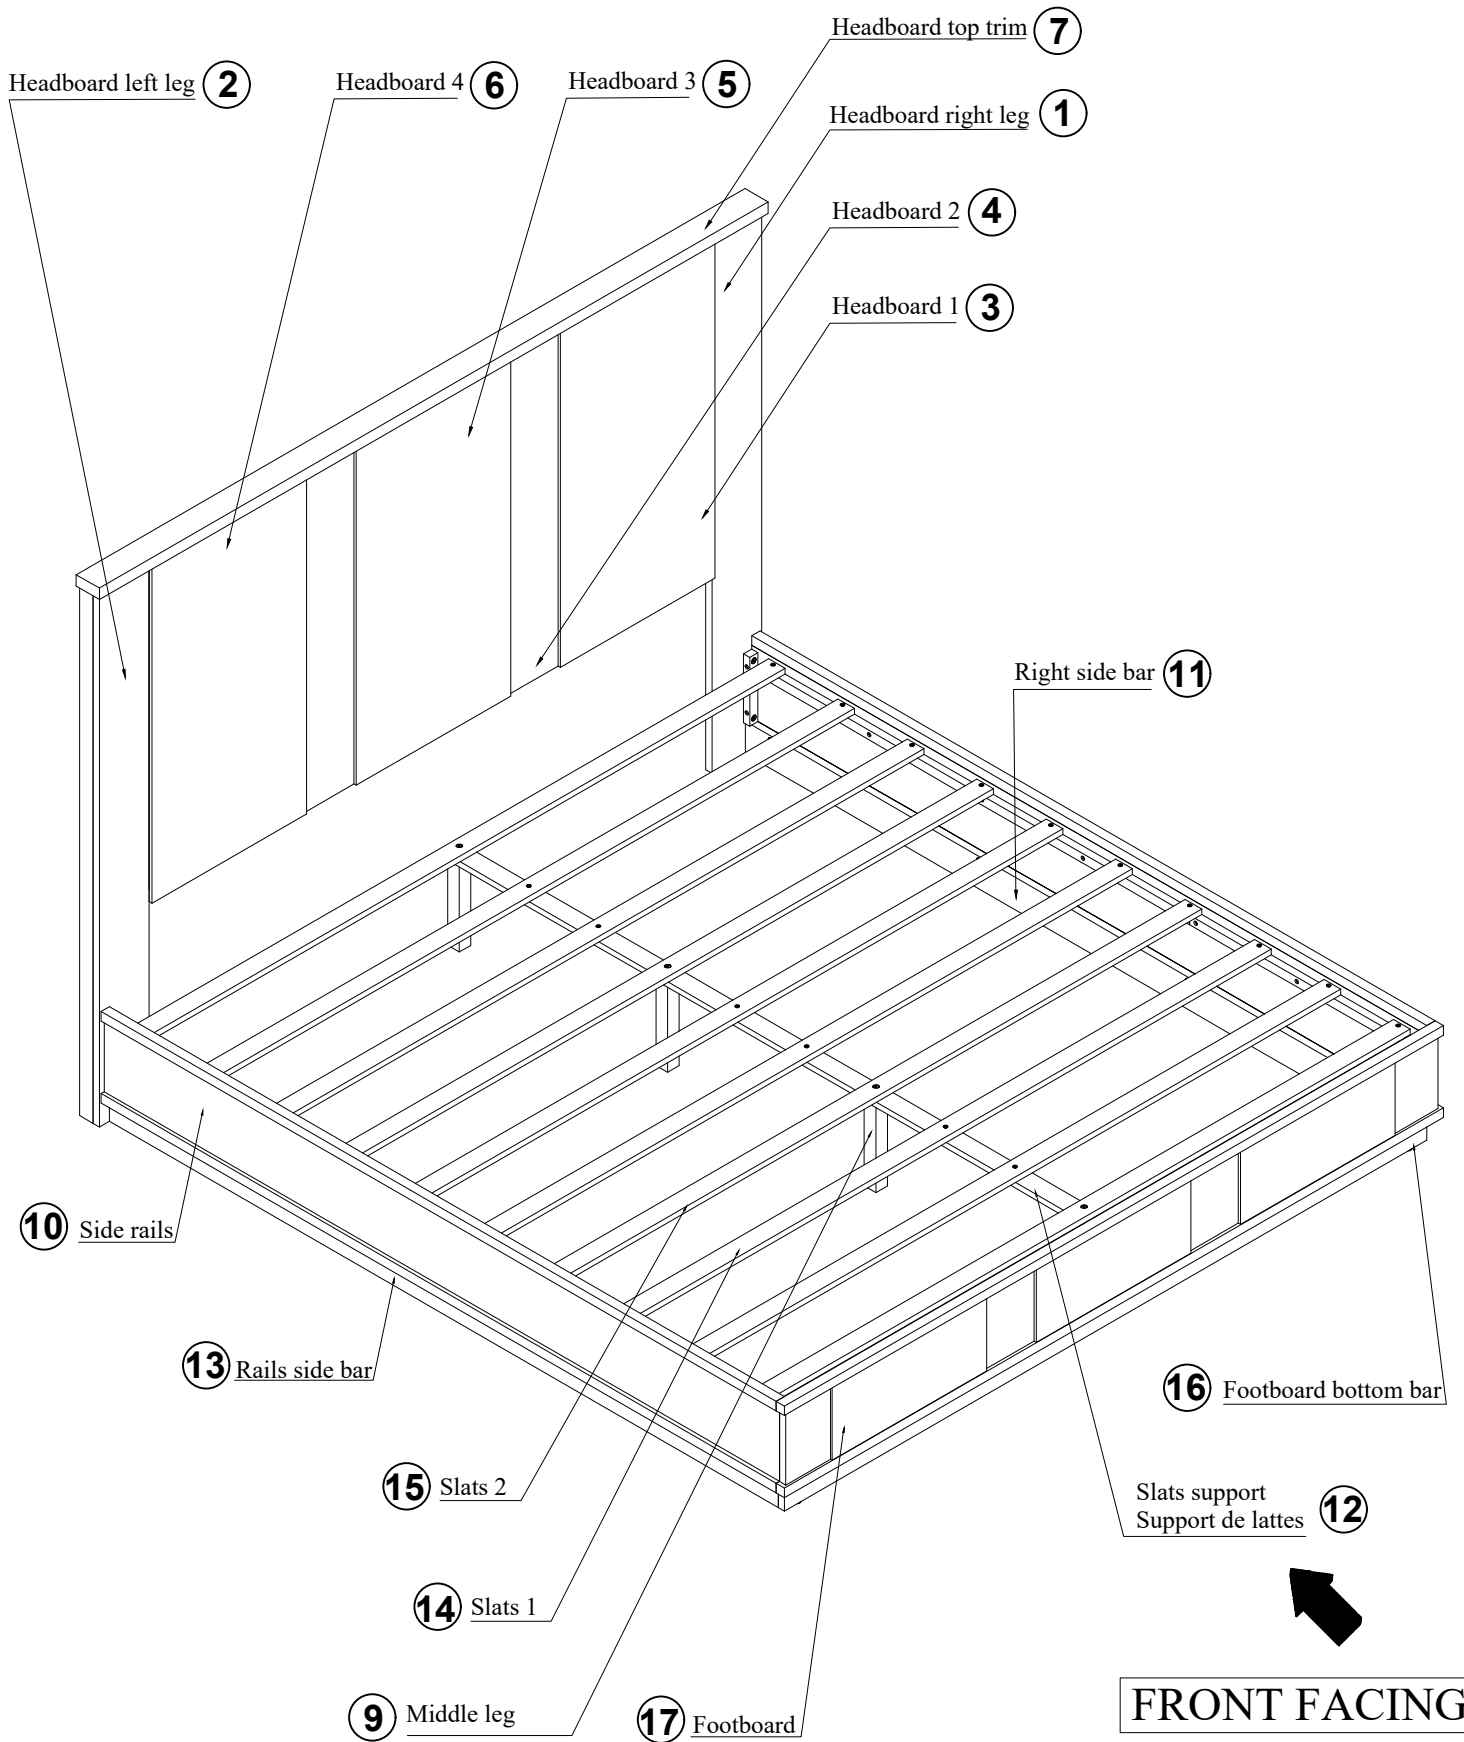


This bed has multiple parts and may require up to some 30 minutes - 1H minutes to assemble. To give you an overview of the upholstered bed parts, the above picture is to help you put the various parts into perspective. please read through the instructions below to familiarise yourself with the parts and steps before assembly.

STEP 1
ÉTAPE 1


- 1





10
- 2






11
- 3






12
- 4






13
- 5



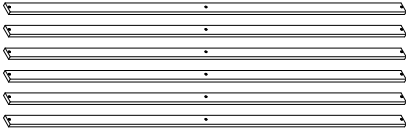



14
- 6






15
- 7






16
- 8







17
- 9



First step Unpack and place all part on a clean, non-marring surface.

STEP 2 ÉTAPE 2



(A) Allen wrench / clé Allen		1PC	(B) Bolts / Boulons 1/4*30mm		6PCS
--	--	------------	---	--	-------------

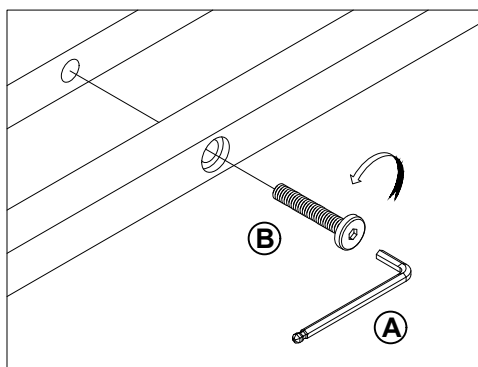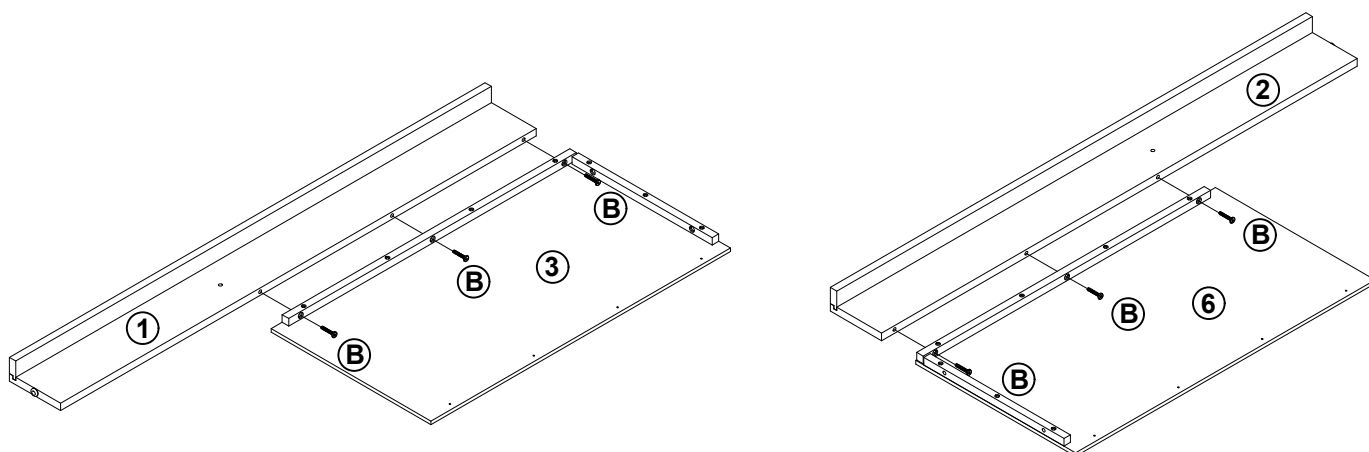

With the help of your adult partner, attach the Headboard 1 ((3)), headboard 4 ((6)) to the Right Leg Headboard ((1)) and Headboard left leg ((2)) by using Bolts ((B)) and Allen Wrench ((A)) as shown above.
Fully tighten the Bolts at this stage

STEP 3 ÉTAPE 3


(C)	Vis umbrella head 3.5*12mm Tête de parapluie Vis 3.5*12 mm		16PCS
------------	---	---	--------------

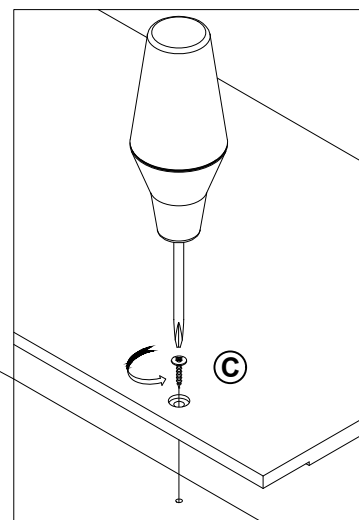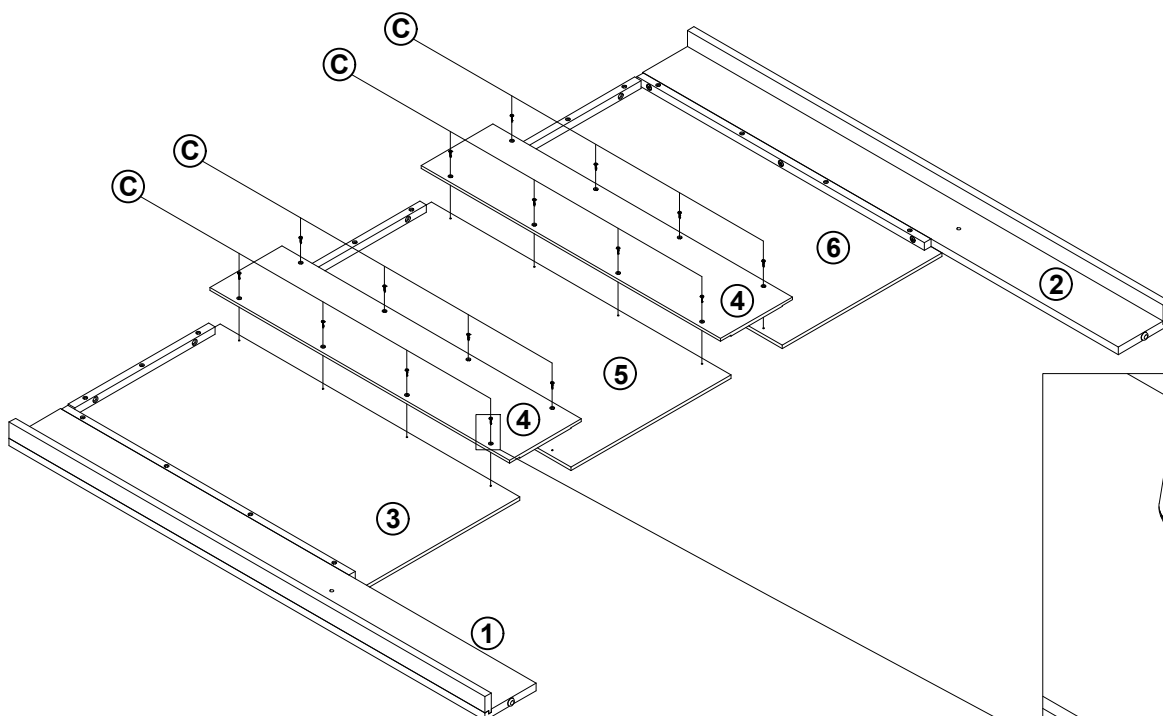


With the help of your adult partner, attach the Headboard 2 ((4)), headboard 3 ((5)) into the assembled frame in step 2 by using Screws ((C)) and a Screwdriver (not provided) as shown above.
Fully tighten the Screws at this stage


STEP 4 ÉTAPE 4	(E)	Vis flat head 4*55 mm Vis à tête plate 4*55 mm		5PCS	(B)	Bolts / Boulons 1/4*30mm		6PCS
	(D)	Bolts / Boulons 1/4*50mm		2PCS				

4.1

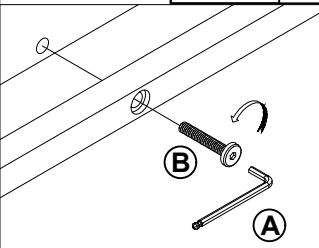

4.2

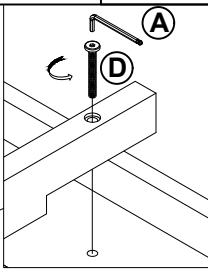

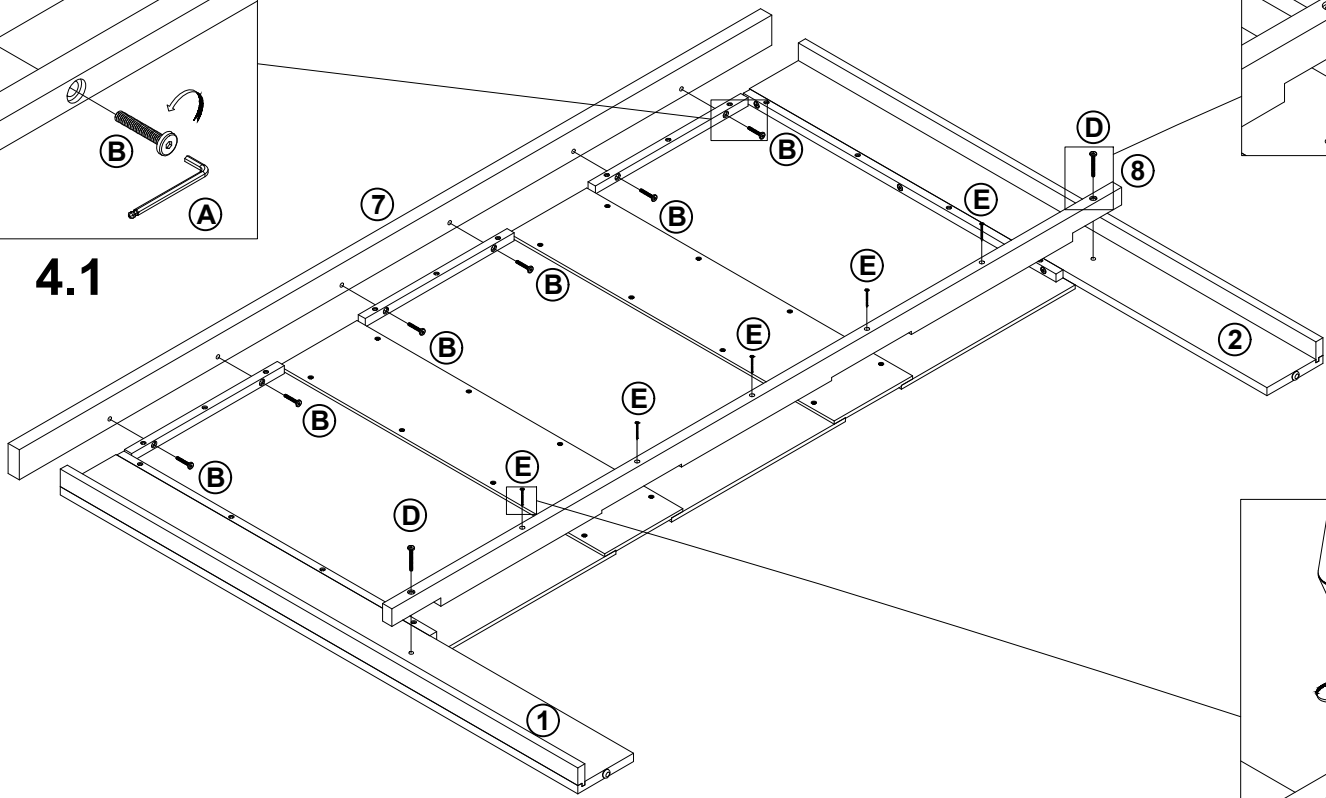


With the help of your adult partner, attach the Headboard top trim ((7)) and Headboard Bottom trim ((8)) into assembled frame in step 3 then:


4.1: Secure Headboard top trim to assembled frame in step 3 by using Bolt ((B)) and Allen Wrench ((A)) as shown above

4.2 : Secure Headboard Bottom trim to assembled frame in step 3 by using Bolts ((D)), Screw ((E)) with Allen Wrench ((A)) and Screwdriver (not provided) as shown above

Fully tighten the Bolts and Screws at this stage

STEP 5 ÉTAPE 5	(B)	Bolts / Boulons 1/4*30mm		8PCS
-------------------	-----	-----------------------------	---	------

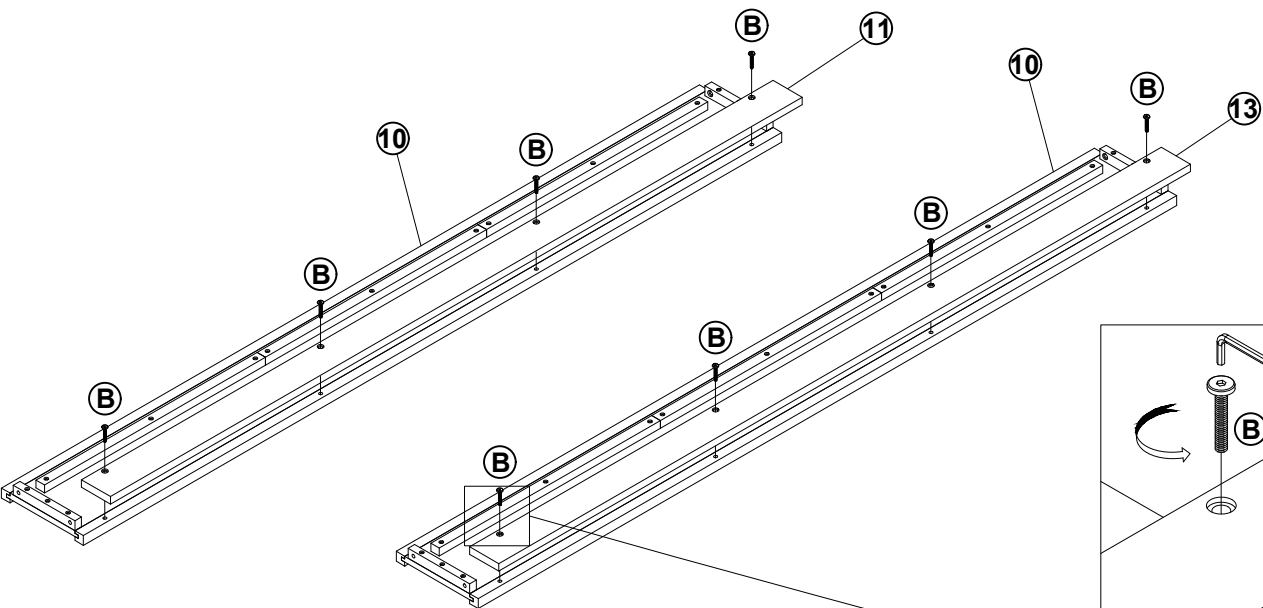

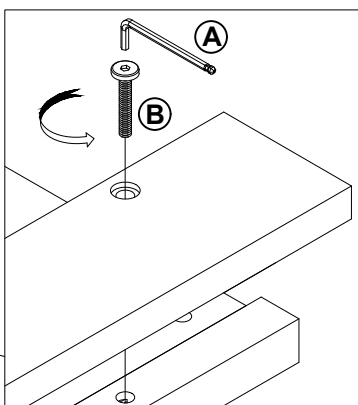


With the help of your adult partner, attach the Right side bar ((11)) and Left side bar ((13)) into Side Rail ((10)) by using Bolts ((B)) and Allen Wrench ((A)) as shown above.

Fully tighten the Bolts at this stage

STEP 6
ÉTAPE 6

(B)	Bolts / Boulons 1/4*30mm		4PCS
------------	-----------------------------	--	------

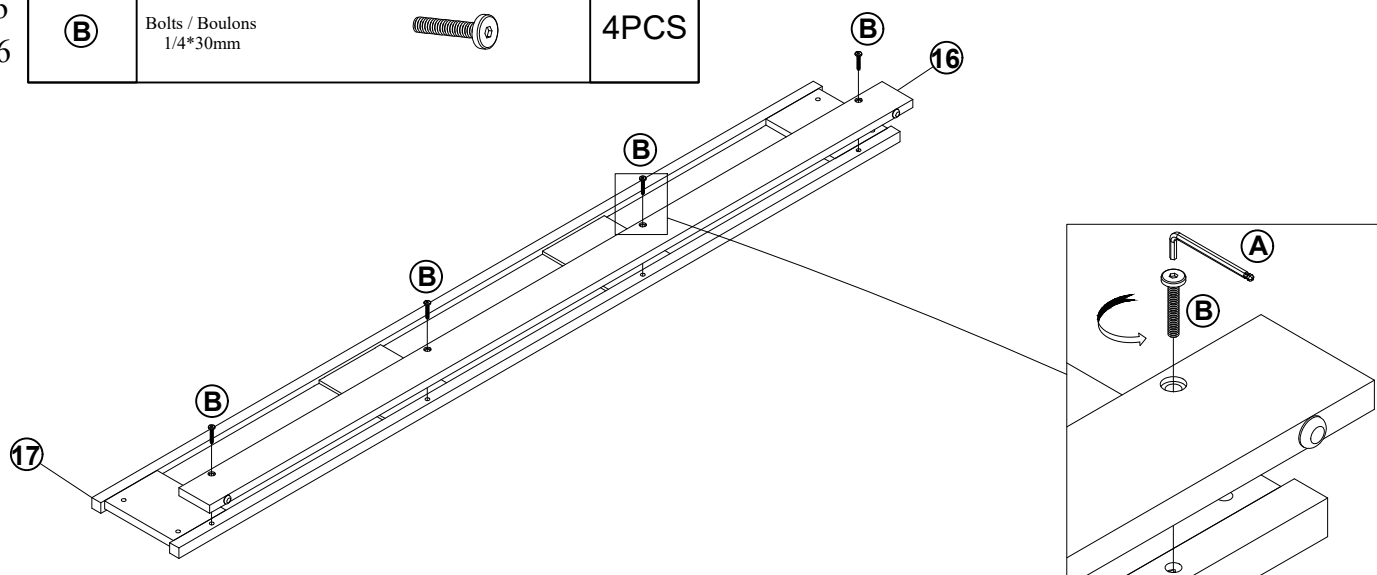


With the help of your adult partner, attach the Footboard bottom bar (16) into Footboard (17) by using Bolts (B) and Allen Wrench (A), as shown above.

Fully tighten the Bolts at this stage

STEP 7
ÉTAPE 7

(G)	Flat washer Rondelle plate 2*8*11MM		8PCS	(B)	Bolts / Boulons 1/4*30mm		8PCS
------------	---	---	------	------------	-----------------------------	---	------

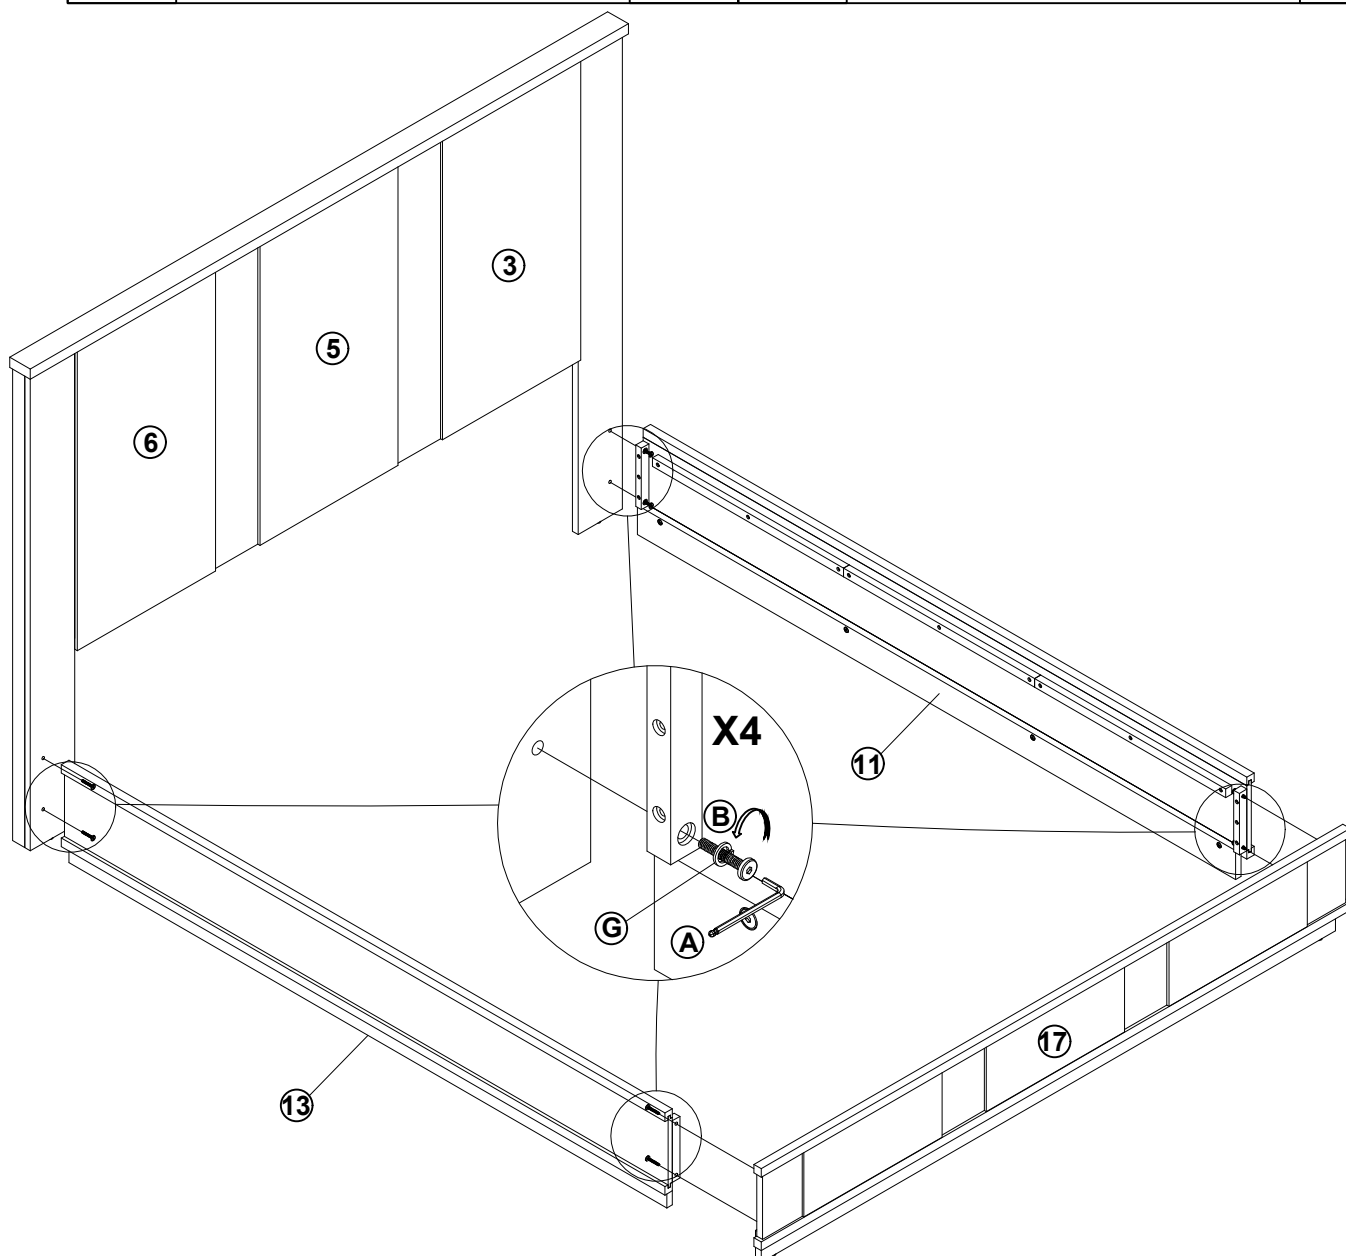

With adult assistance, attach the left and right bed rails assembled in step 5 to the headboard assembled in step 4 and the footboard (6) using bolts (B), flat washers (G), and hex wrench (A), as shown above.

WARNING: Tighten all the Bolts before you proceed to next step.



STEP 9
ÉTAPE 9

(D)

Bolts / Boulons
1/4*50mm



4PCS

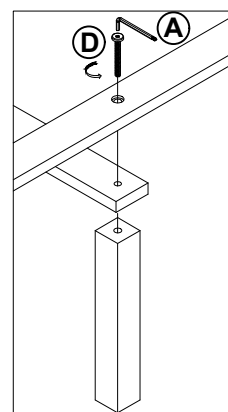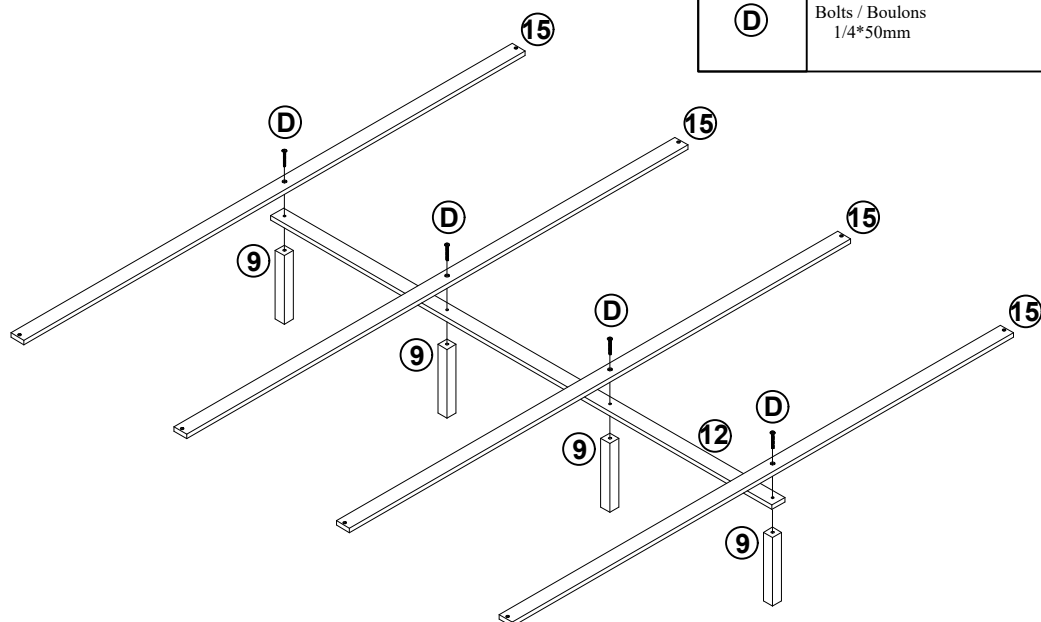

With the help of your adult partner, insert the Slats 2 (15) into the Slat Support (12) and Middle Leg (9) by using Bolts (D) and the Allen Wrench (A) as shown above.

Do not fully tighten the Bolts.



STEP 10
ÉTAPE 10

(F)

Vis flat head 4*30 mm
Vis à tête plate 4*30 mm




8PCS

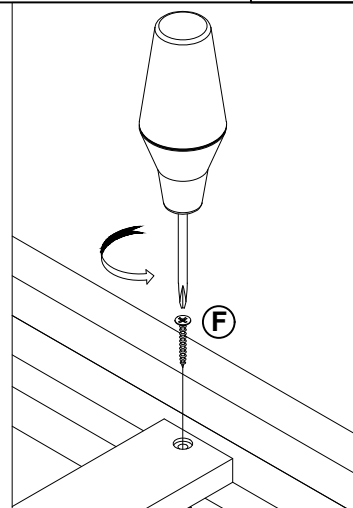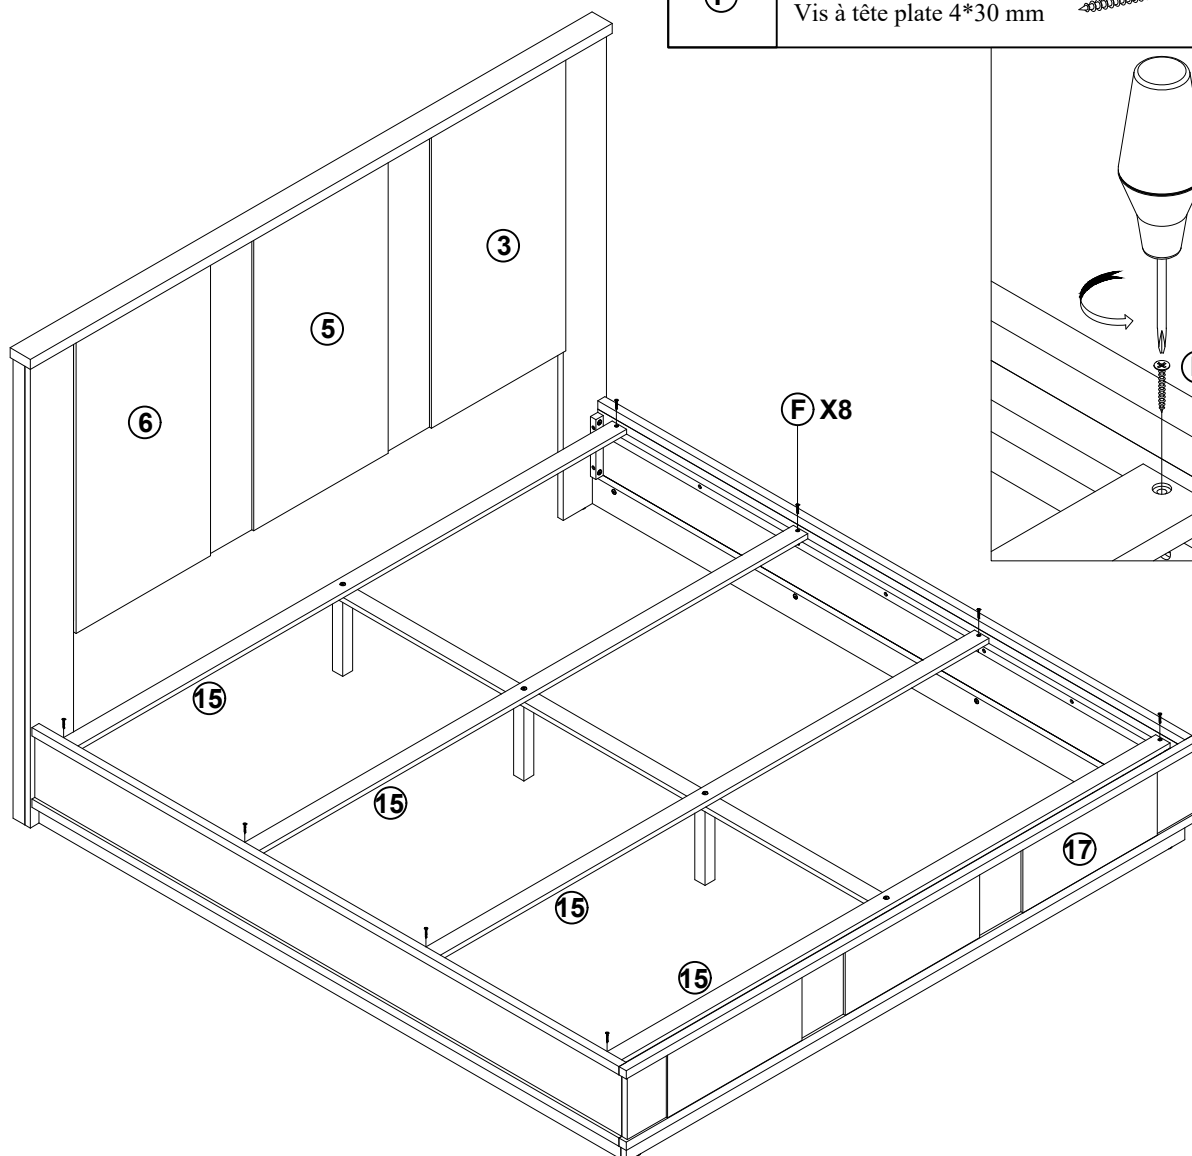

With the help of your adult partner, attach the assembled frame in step 8 to the Side Rail (10) using Screws (F) and a Screwdriver (not provided), as shown above.

Do not fully tighten the Screws.

STEP 11
ÉTAPE 11

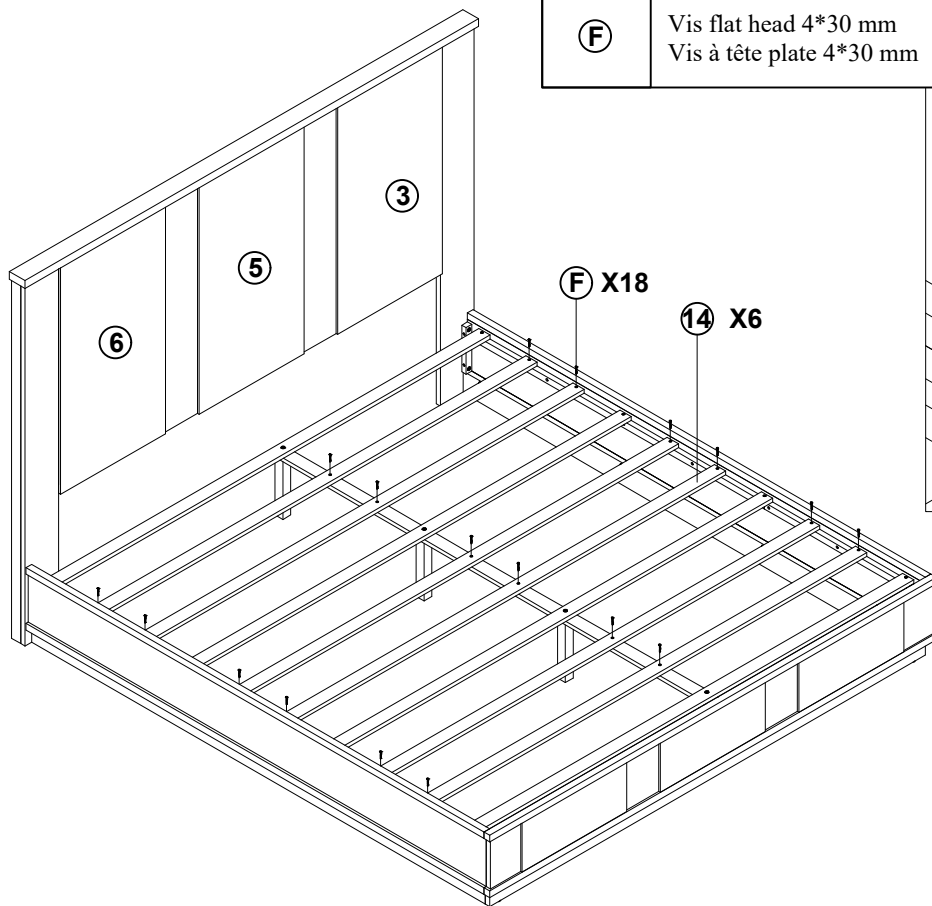

(F)


Vis flat head 4*30 mm
Vis à tête plate 4*30 mm



18PCS



(F) X18

(14) X6

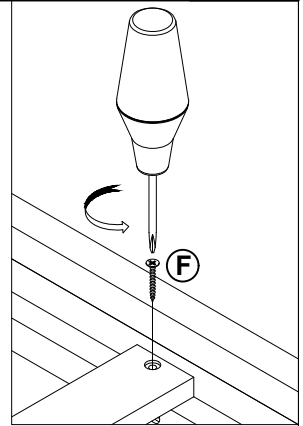

With the help of your adult partner, attach the Slats 1 (14) to the Side Rail (10) using Screws (F) and a Screwdriver (not provided), as shown above.
Do not fully tighten the Screws.

STEP 11
ÉTAPE 11

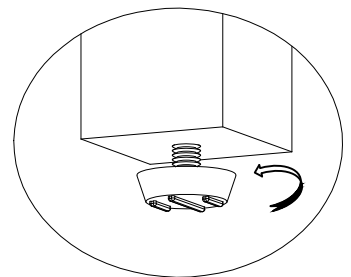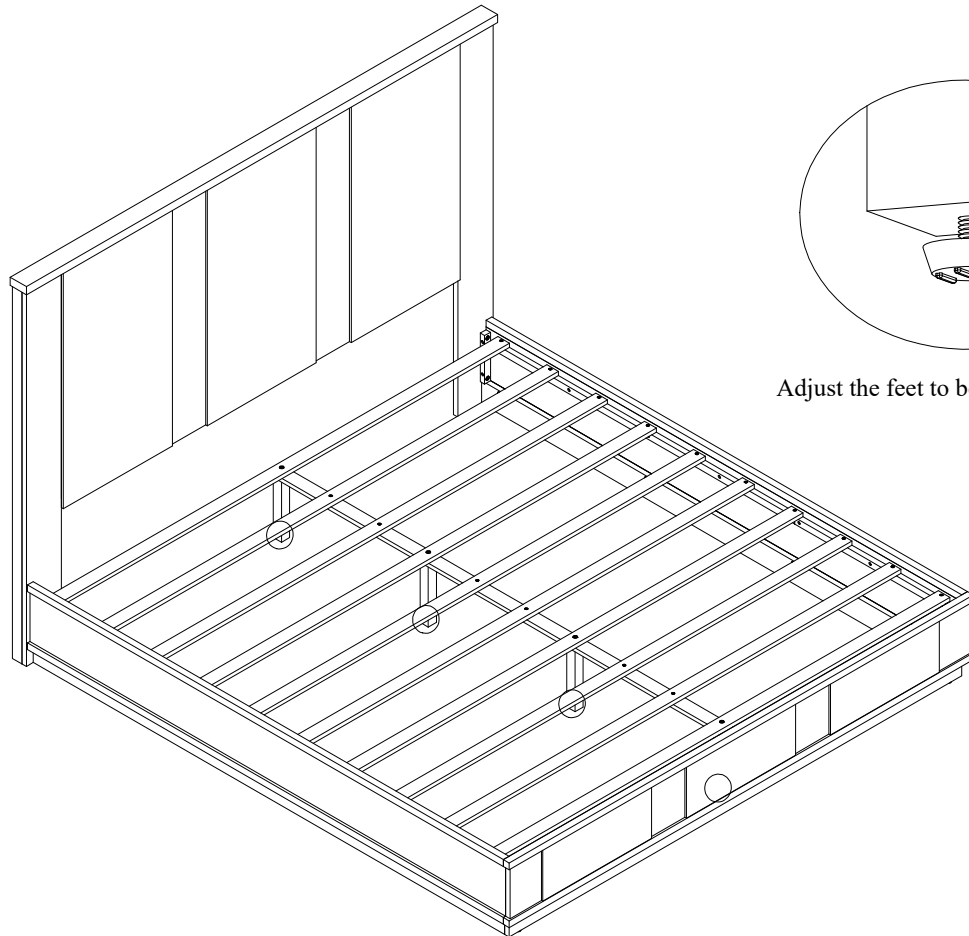

Adjust the feet to be level with the floor.

Check for wobbles.

In a sequential manner, gradually tighten all Bolts until evenly secured.

Inspect the Bed and make sure all parts are adequately connected.

With assistance from your adult partner, adjust the Levelers to desired height to avoid wobbles

To adjust the Levelers, get assistance from an adult partner to lift/ lean and hold the Bed while you are working.

Your Bed is ready for use.

This Bed can only be used on a flat, level surface