


ASSEMBLY INSTRUCTION

430 - 324/326 LINEAGE PANEL BED HEADBOARD



5/0 HEADBOARD


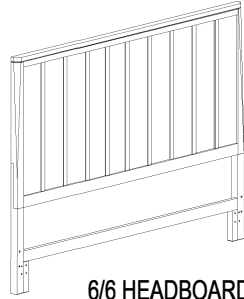


6/6 HEADBOARD

3) Assembly is completed.

IMPORTANT NOTES :

- . Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children.

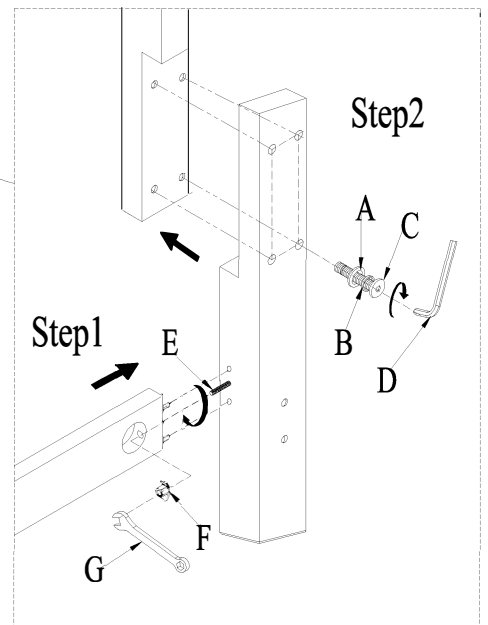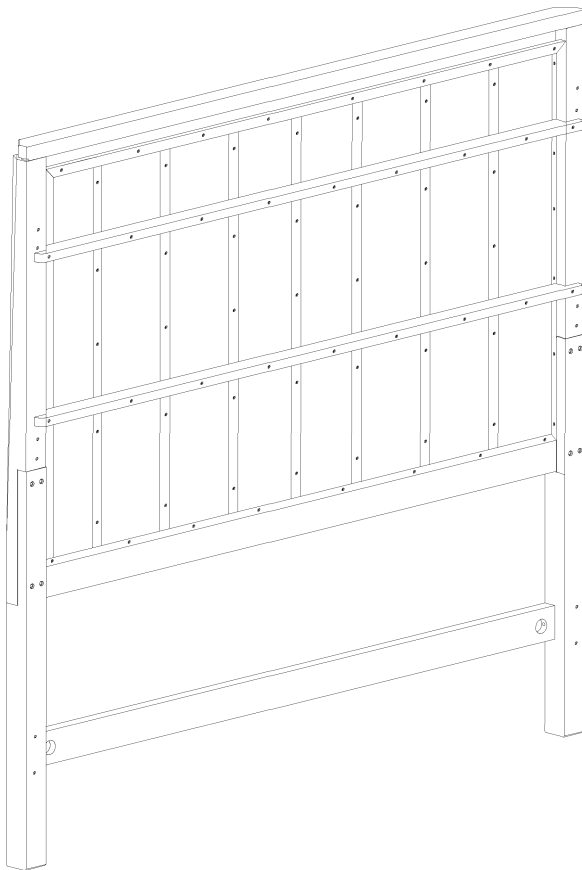


NO.	Dimension	Shape	Quantity
A	Flat Washer Ø5/16"*19mm		8pcs
B	Lock Washer Ø5/16"		8pcs
C	Bolt 5/16"*45mm		8pcs
D	Allen Key 4mm		1pc
E	Thread Rod 5/16"*88mm		2pcs
F	Curved Slotted Washer 5/16"		2pcs
G	Wrench 12mm		1pc

ASSEMBLY INSTRUCTION


430-324/314 5/0 LINEAGE PANEL BED - HDBD - FTBD - W/RAILS

430-326/317 6/6 LINEAGE PANEL BED - HDBD - FTBD - W/RAILS

430-326/318 6/0 LINEAGE PANEL BED - HDBD - CAL FTBD - W/RLS

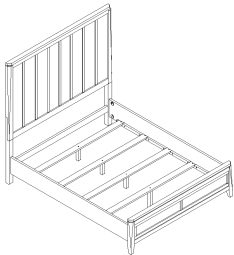

5/0 HDBD-FTBD W/RAILS

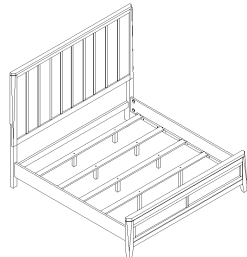


6/6 HDBD-FTBD W/RAILS

4) Assembly is completed. 6/0 HDBD-CAL FTBD W/RLS

IMPORTANT NOTES :

- . Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all screws and bolts until completely assembled.
- . Keep all hardware out of the reach of children.

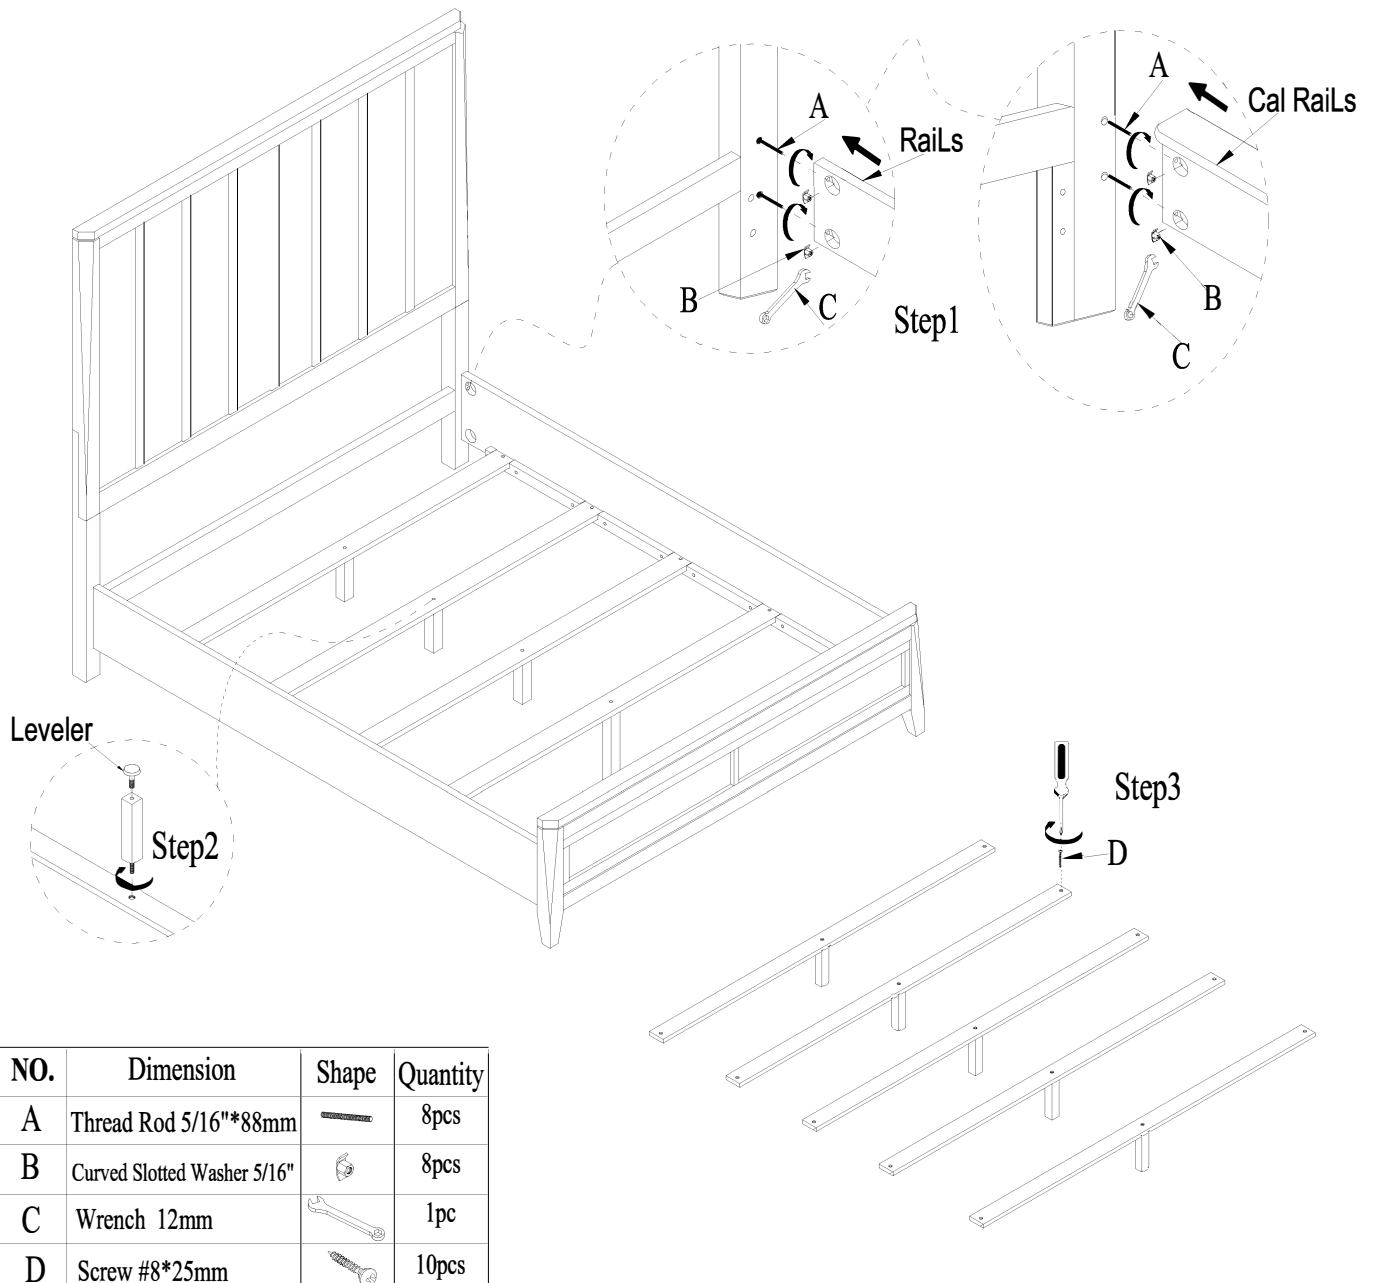

NO.	Dimension	Shape	Quantity
A	Thread Rod 5/16"*88mm		8pcs
B	Curved Slotted Washer 5/16"		8pcs
C	Wrench 12mm		1pc
D	Screw #8*25mm		10pcs