
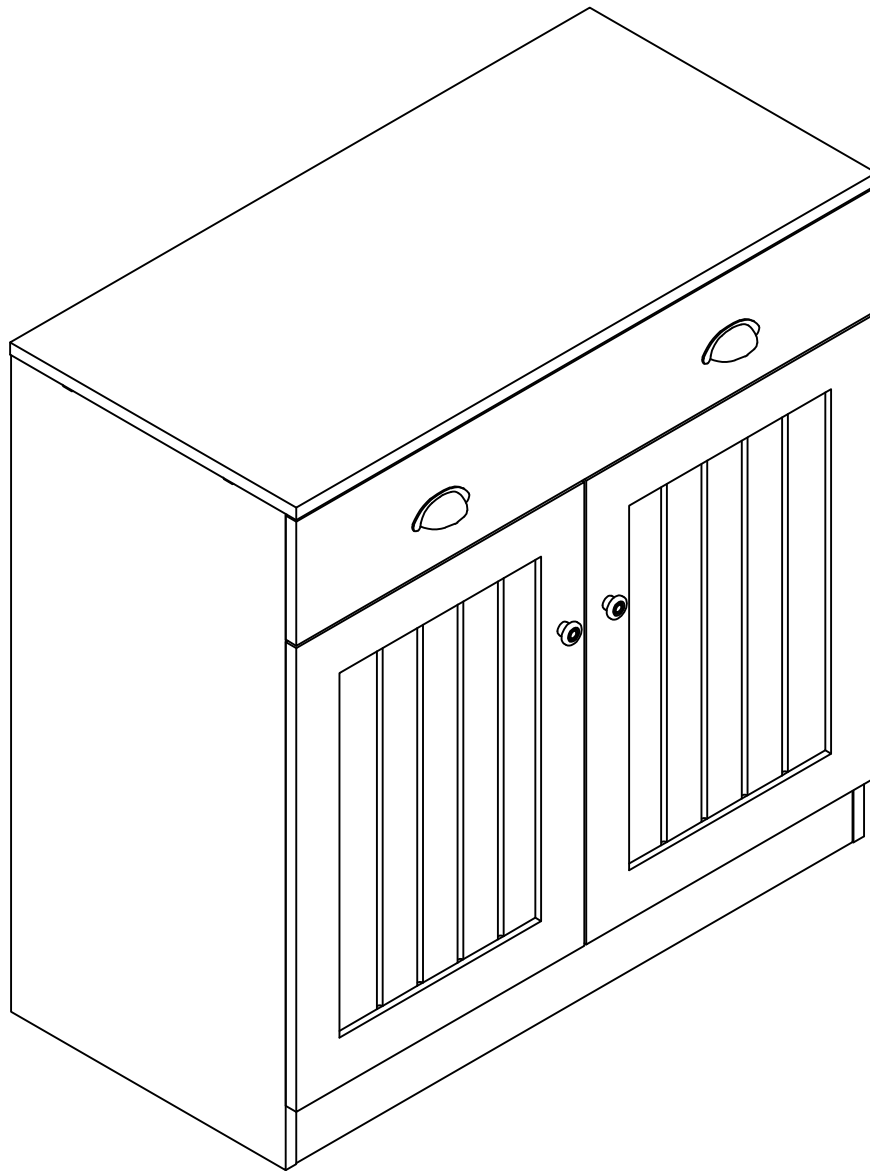
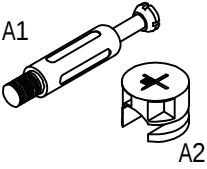

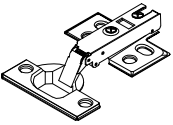



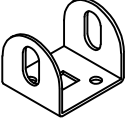
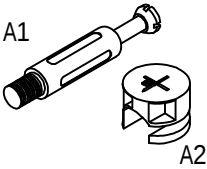






Installation & Assembly




Hardware

	 $\Phi 8*30$	 $\Phi 3*14$	 $\Phi 3.5*14$	
$A \times 24$	$B \times 10$	$C \times 8$	$D \times 36$	$E \times 8$
			 $4*20$	 J1 J2  J3 J4 J5
$F \times 4$	$G \times 4$	$H \times 2$	$I \times 2$	$J \times 2$
 $\Phi 20$		 $\Phi 3.5*35$		 $4*10$
$L \times 24$	$M \times 6$	$N \times 6$	$O \times 2$	$P \times 4$
 CL×1 CR×1 DL×1 DR×1				
$S \times 1$	$T \times 2$	$U \times 2$	$V \times 4$	

Spare hardware			
	 $\Phi 8*30$	 $\Phi 3*14$	 $\Phi 3.5*14$
$A \times 2$	$B \times 2$	$C \times 2$	$D \times 2$
	 $\Phi 20$	 $\Phi 3.5*35$	
$E \times 2$	$L \times 2$	$N \times 1$	

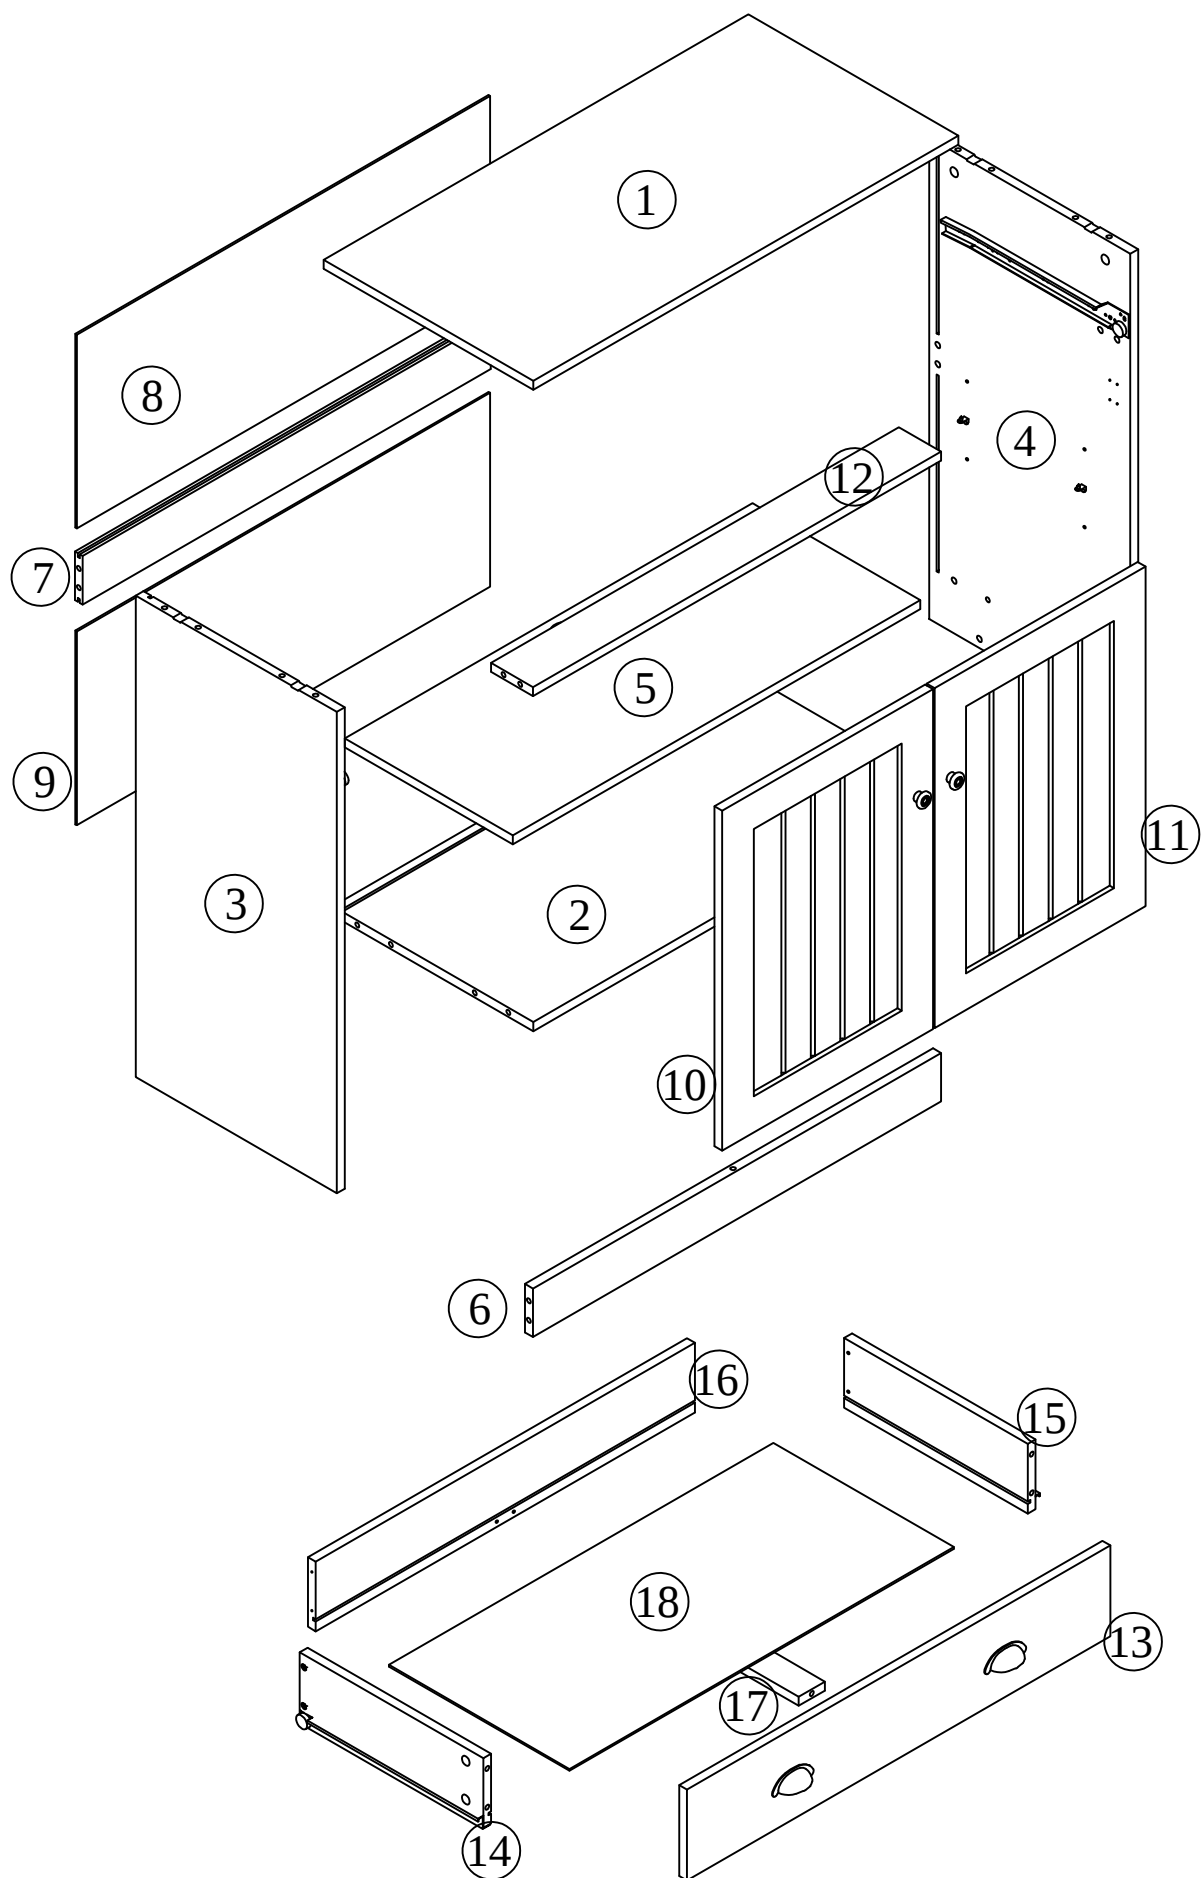


1

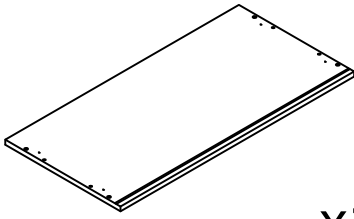


x1

2

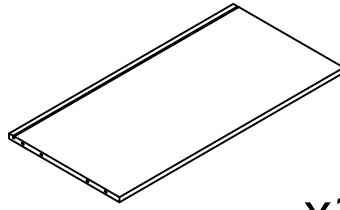


x1

3

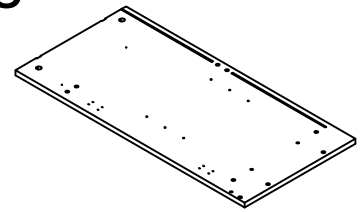


x1

4

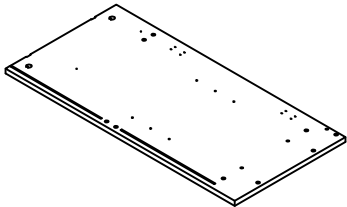


x1

5

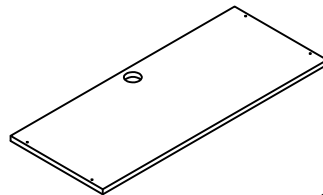


x1

6

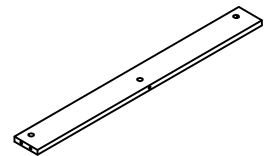


x1

7

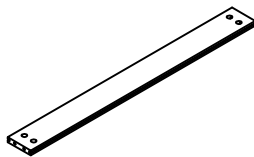


x1

8

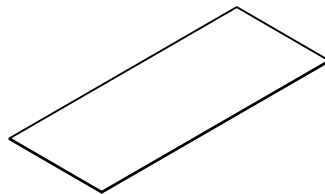


x1

9

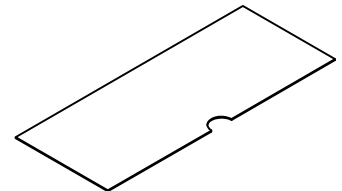


x1

10

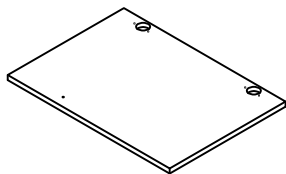


x1

11

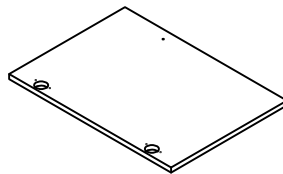


x1

12

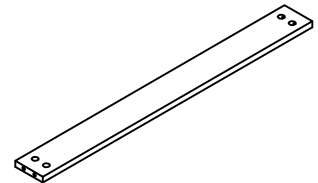


x1

13

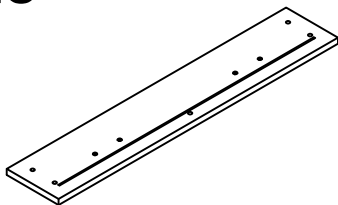


x1

14

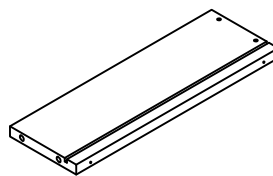


x1

15

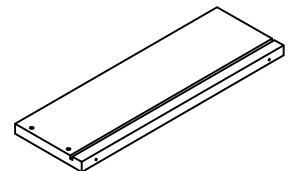


x1

16

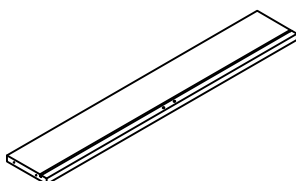


x1

17

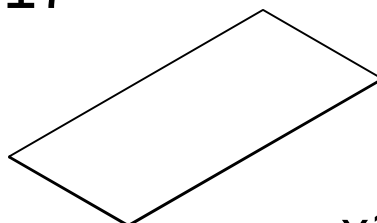


x1

18

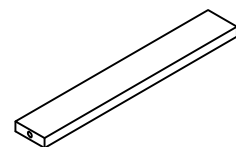


x1




1

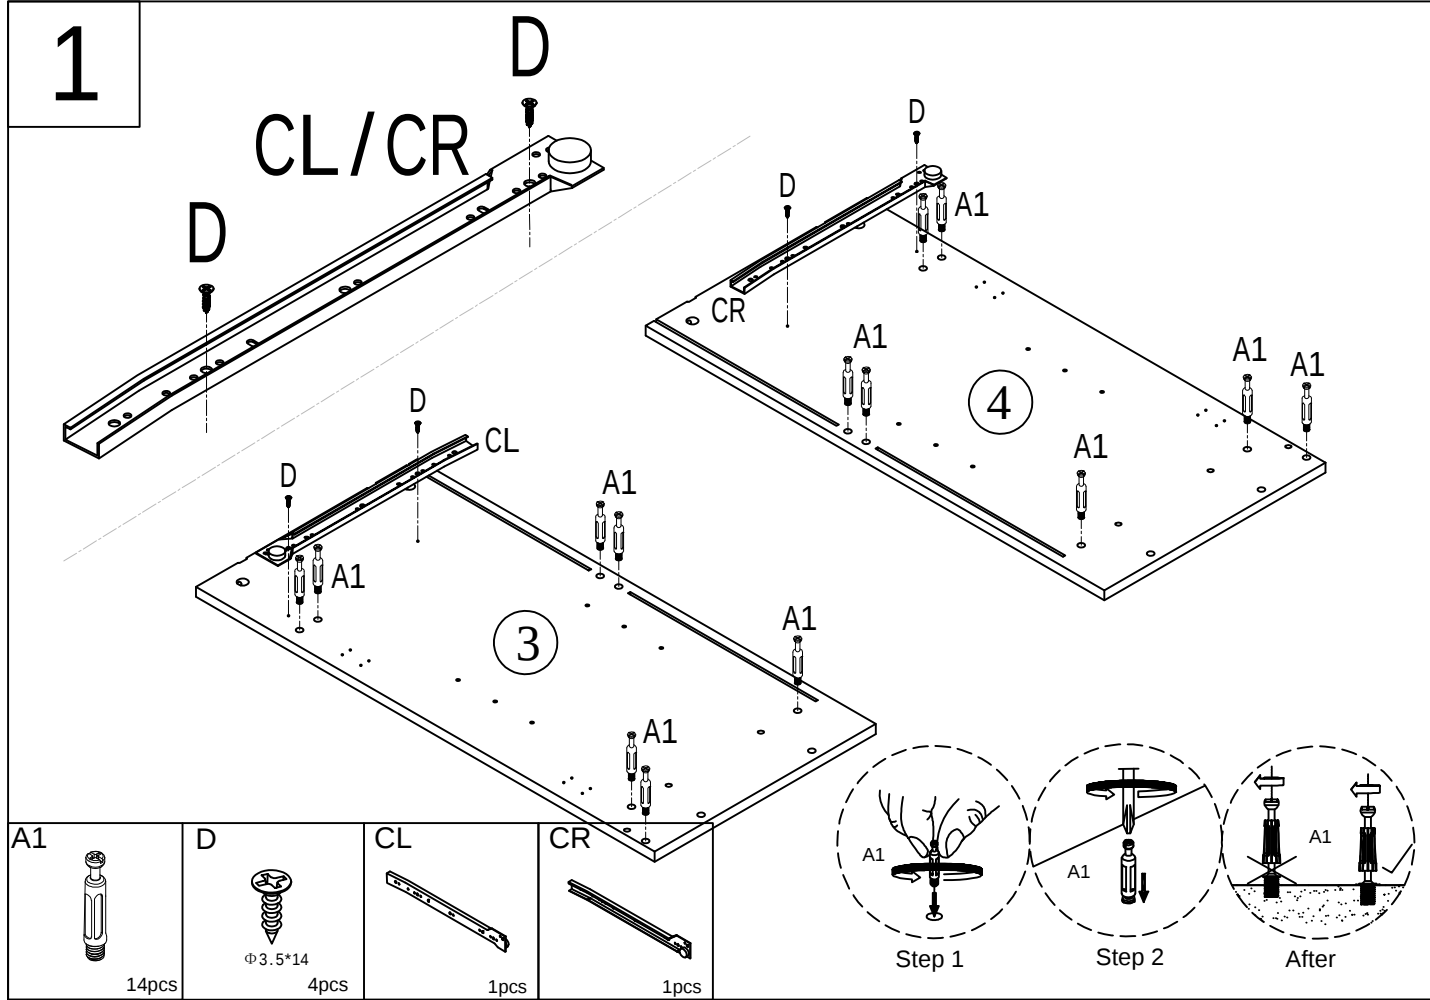




2

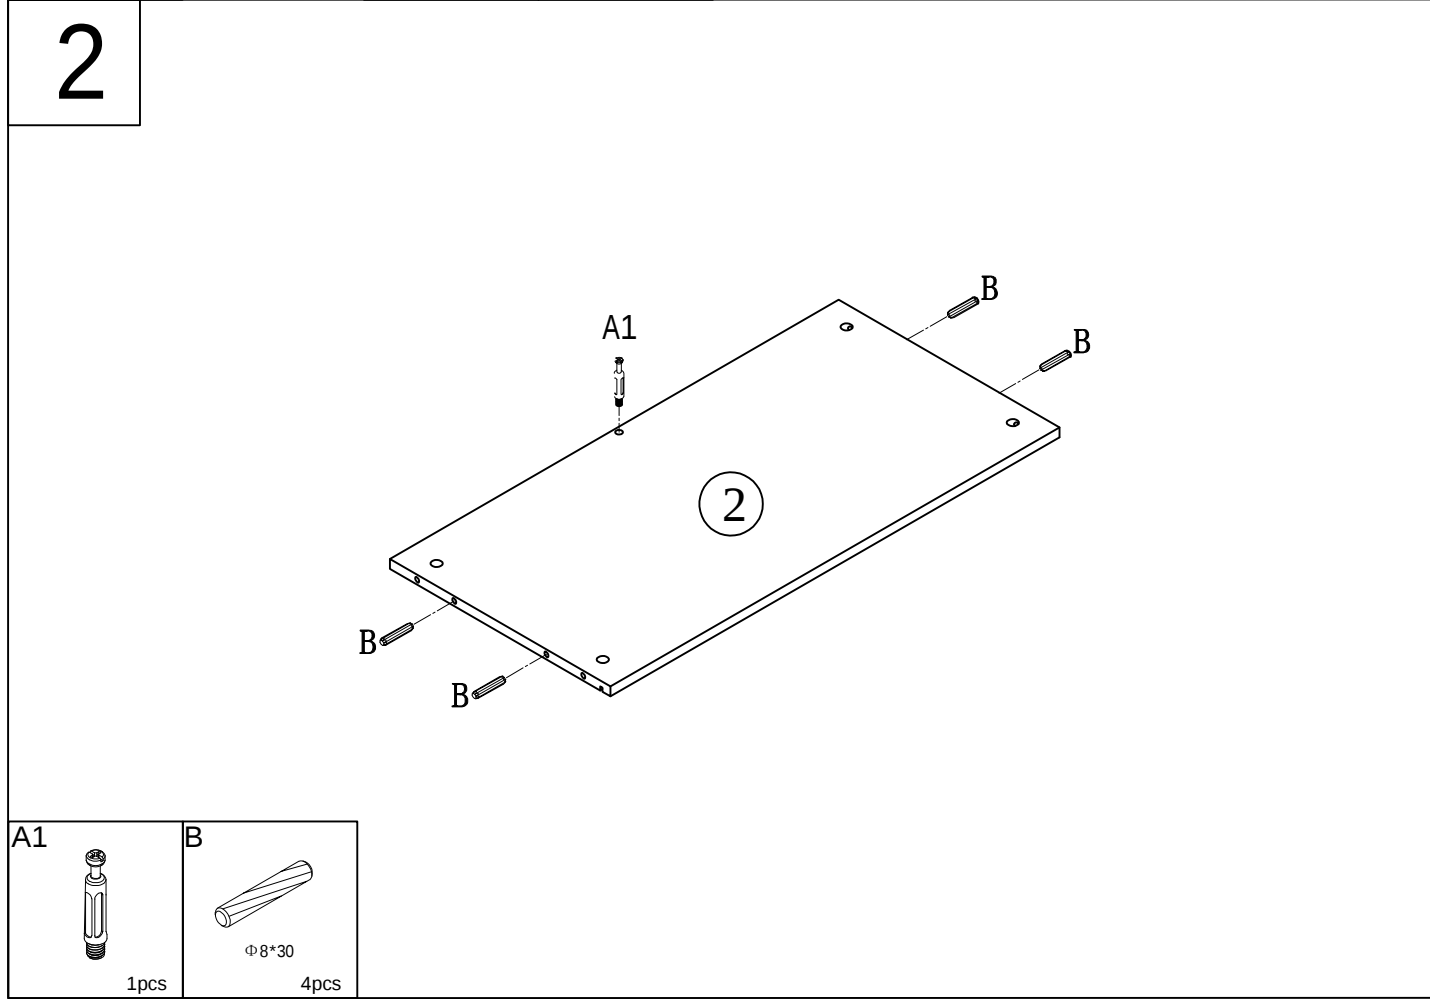




3

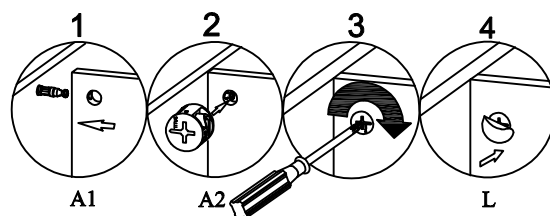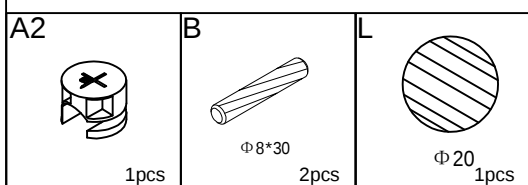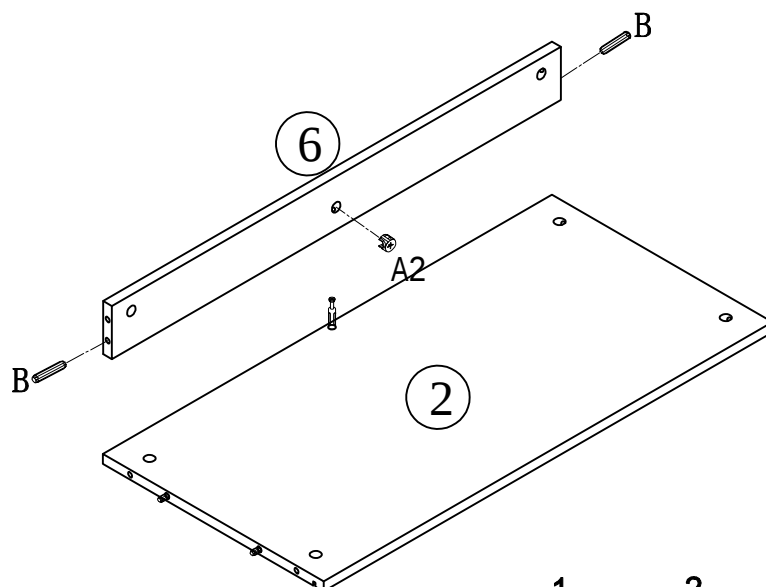




4

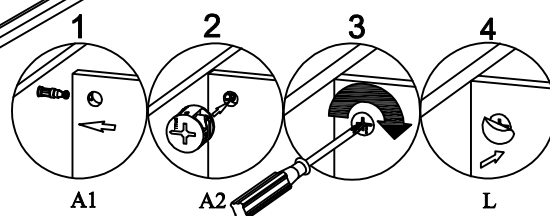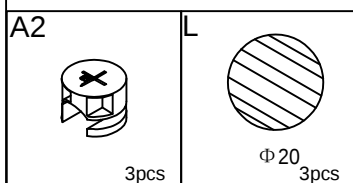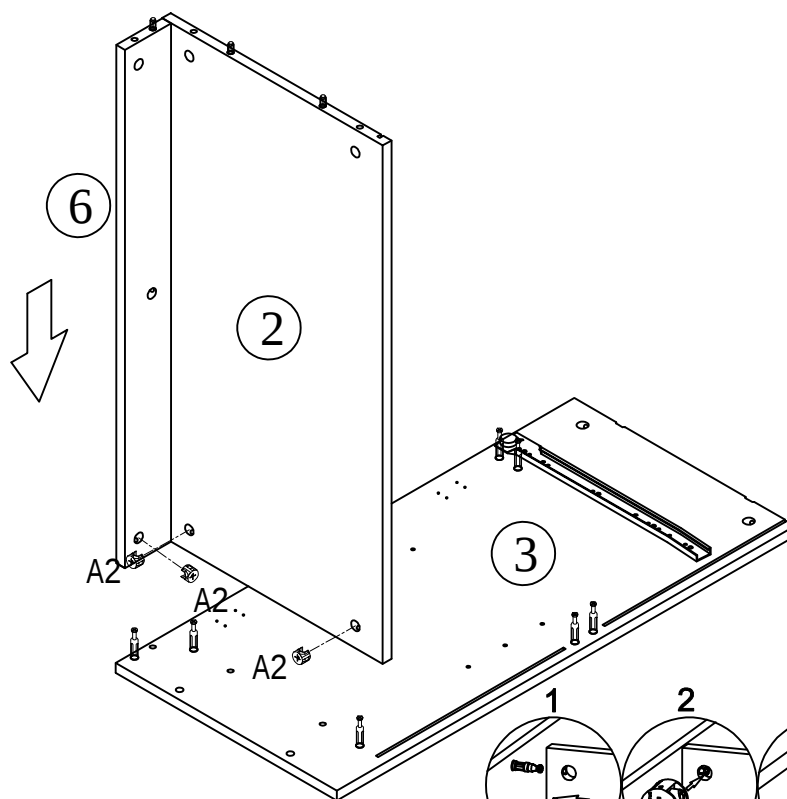


5

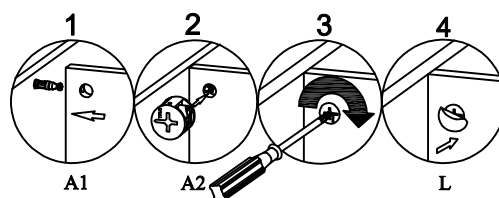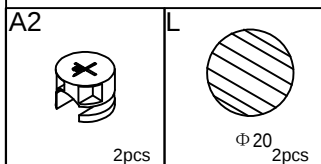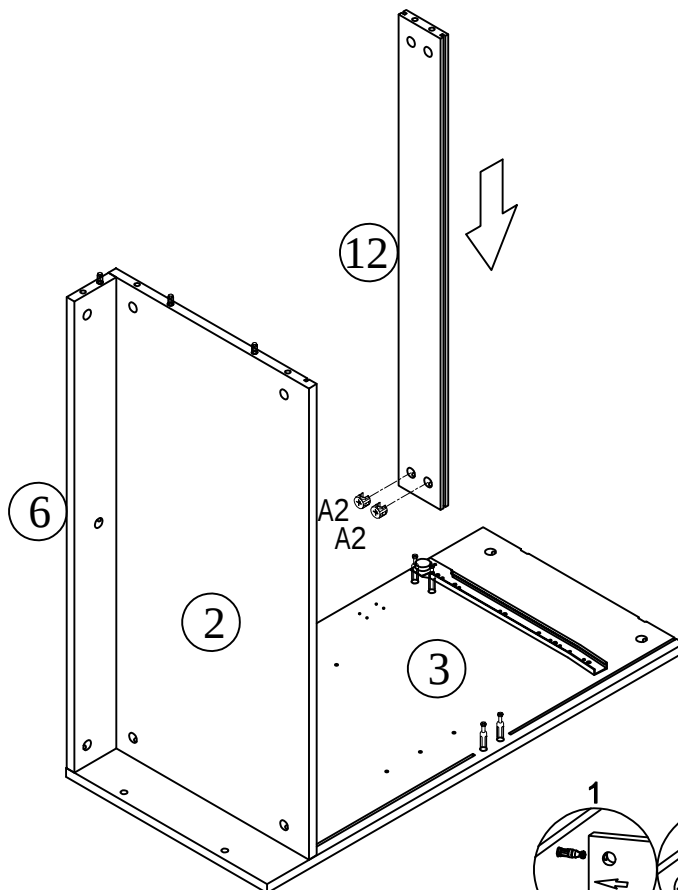



6

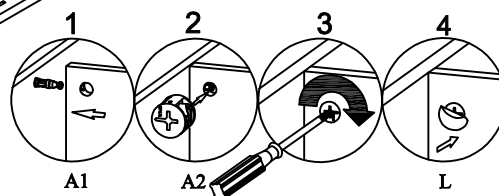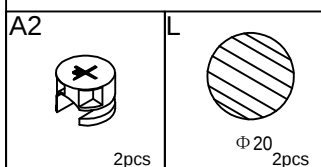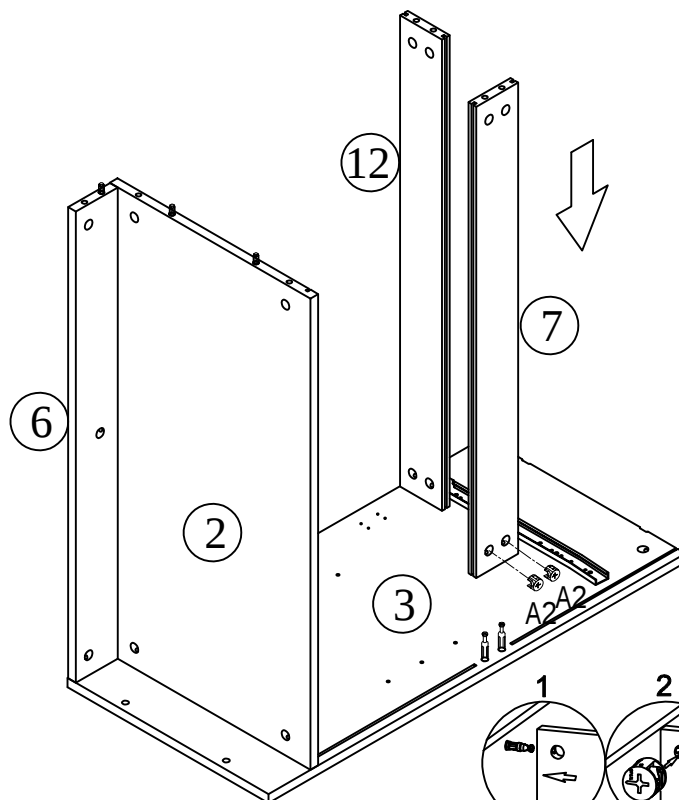


7

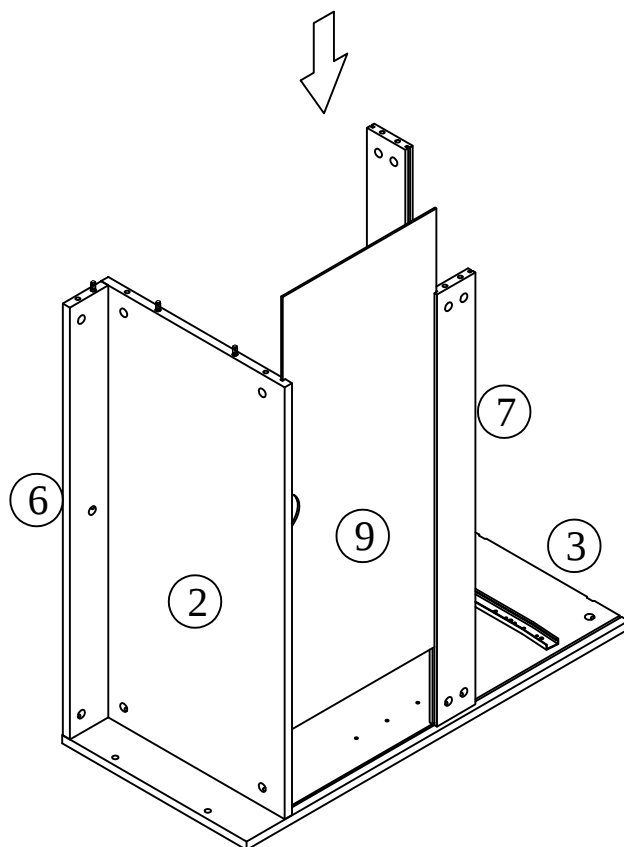


8

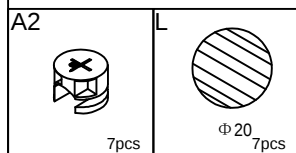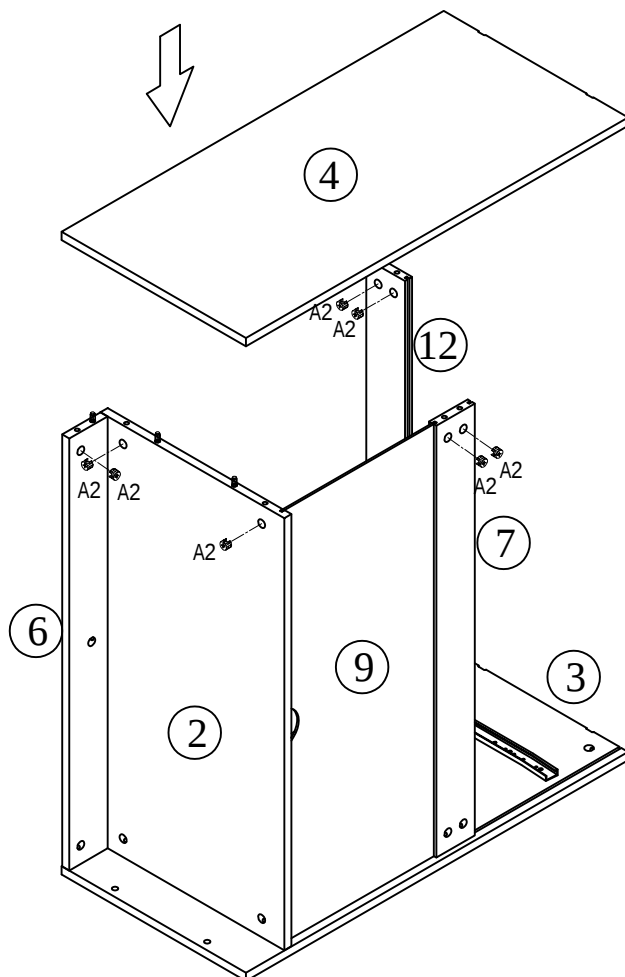

9

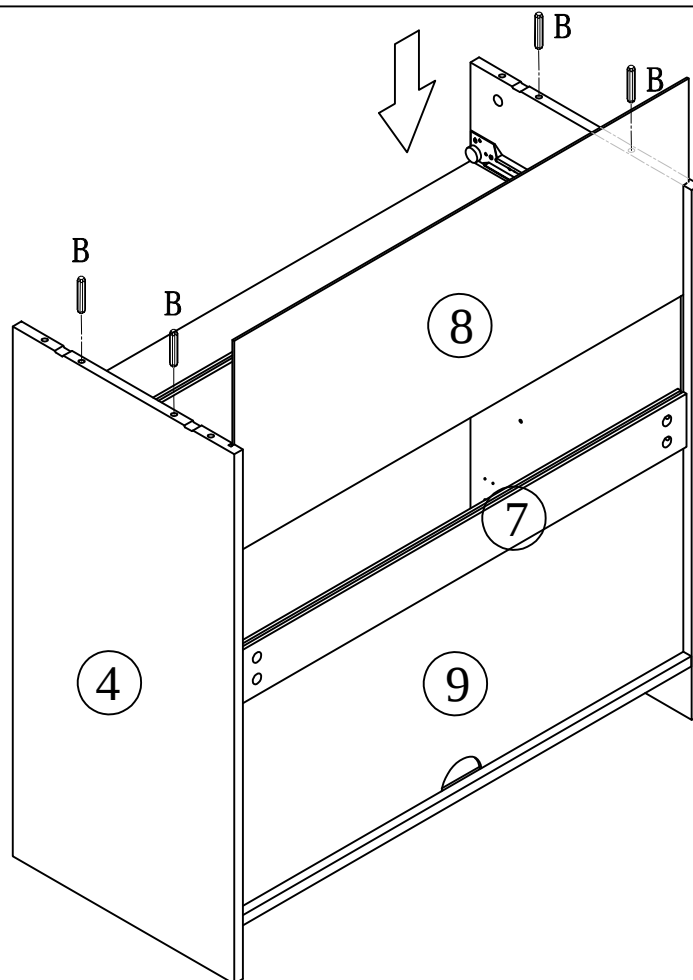


B



Φ 8*30

4pcs

10



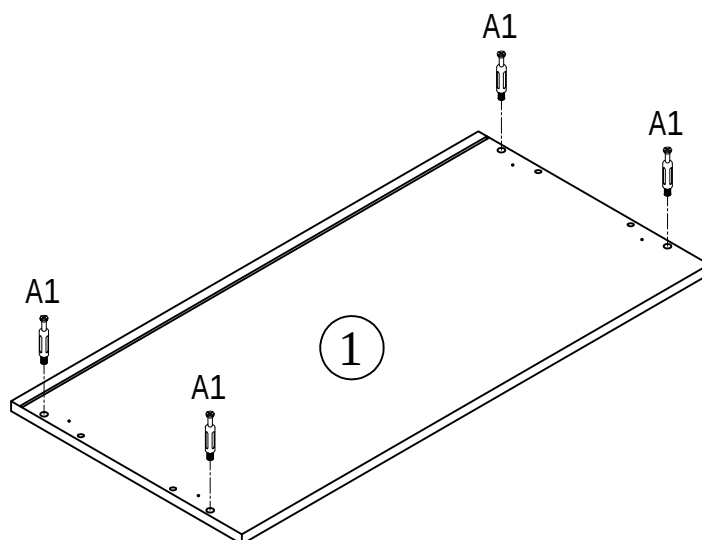


A1







4pcs




11

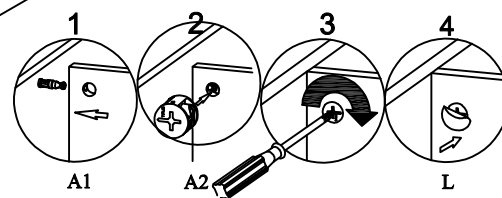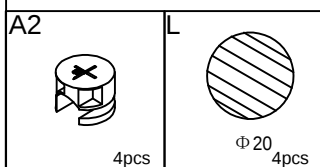
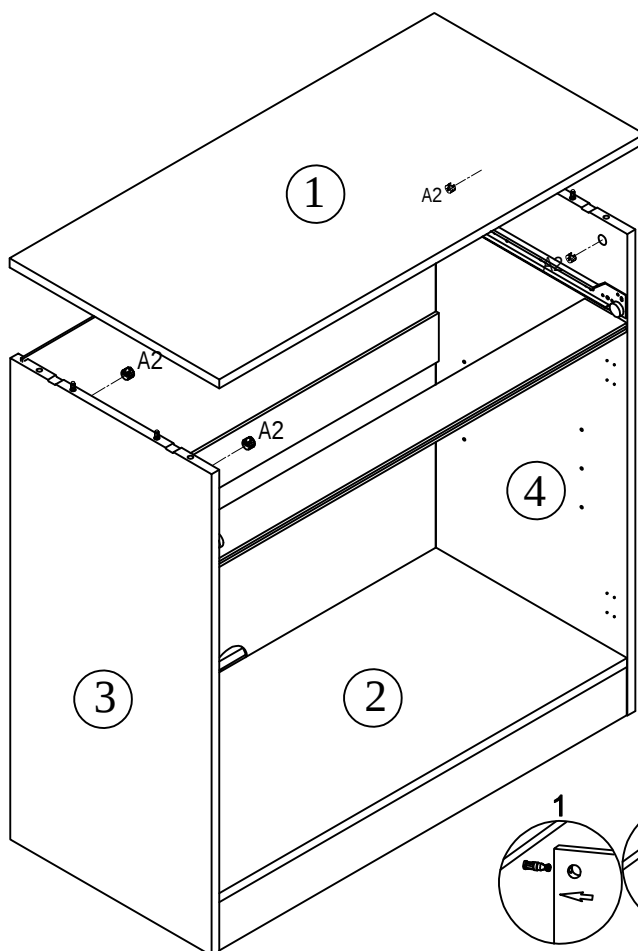


12

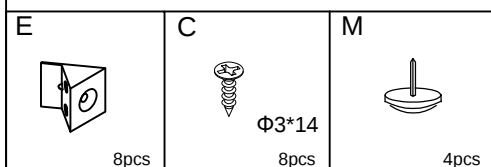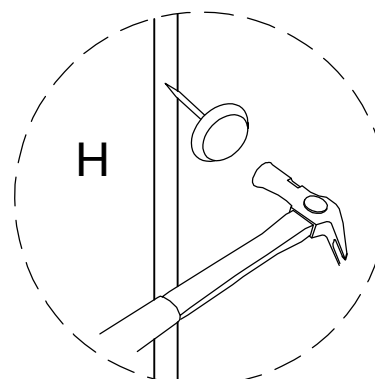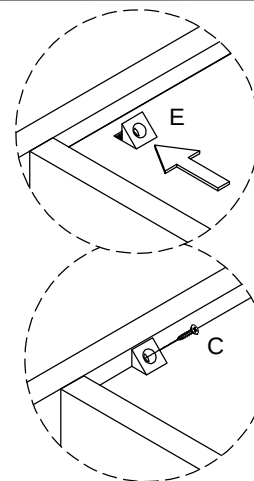
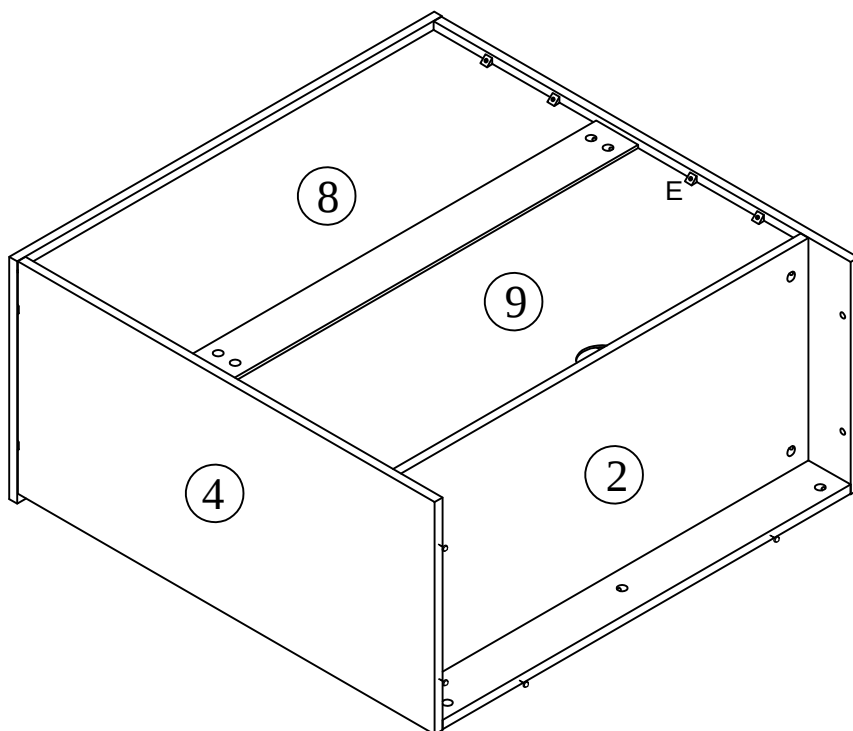


12-2

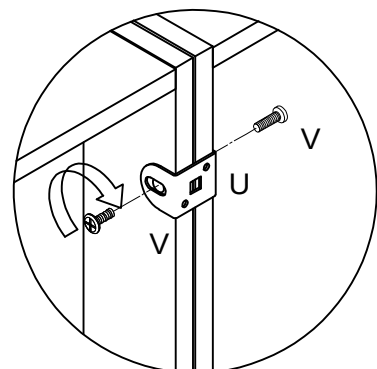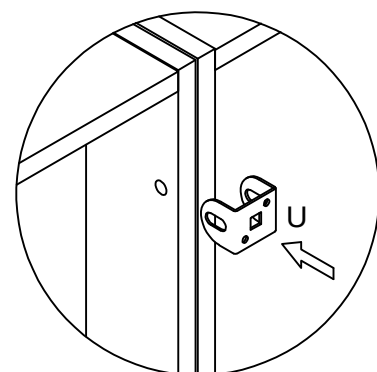
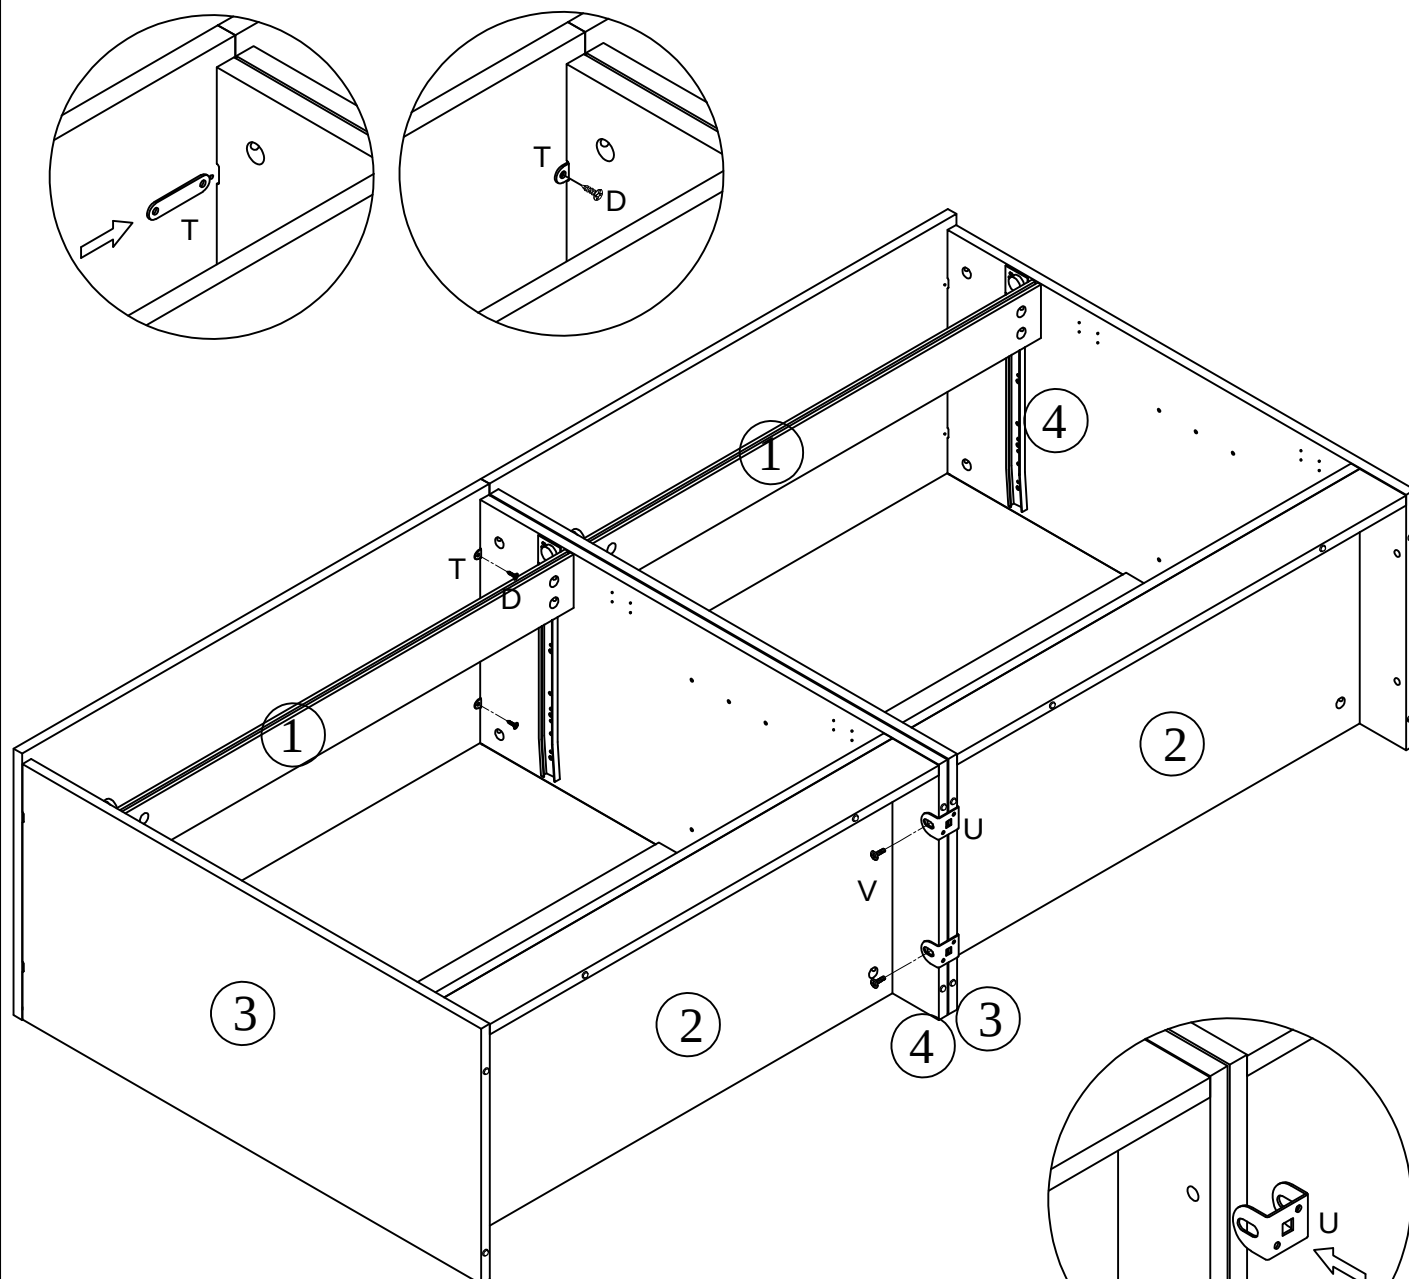


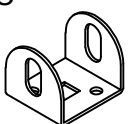U	D	V	T
			
2pcs	Φ3.5*14 4pcs	4pcs	2pcs



13

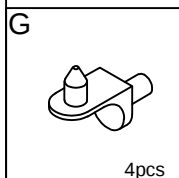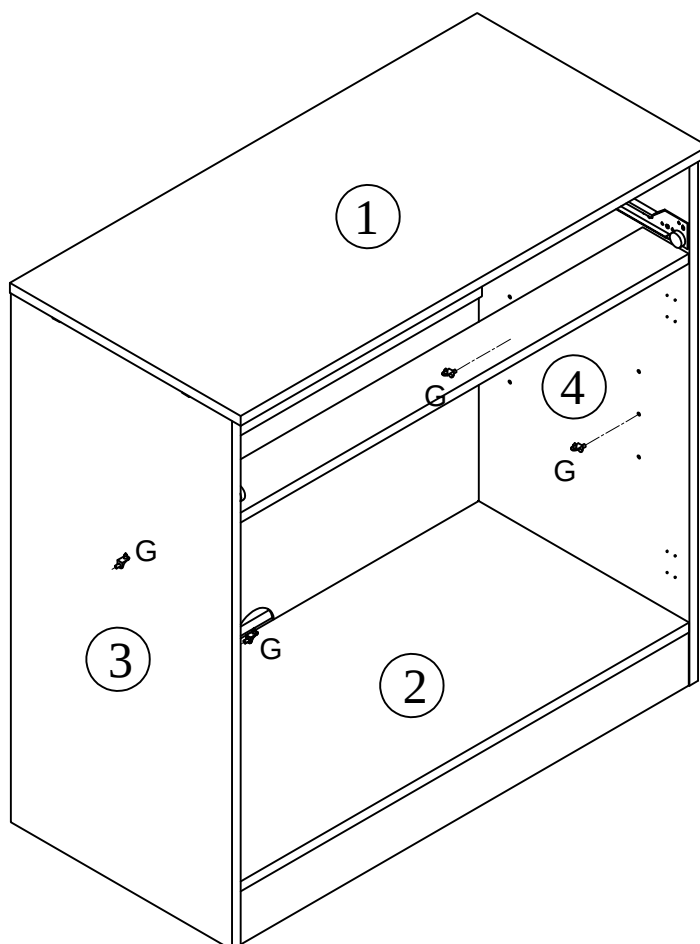



14

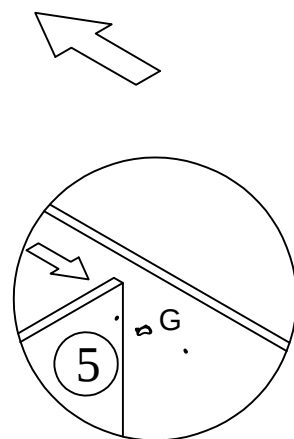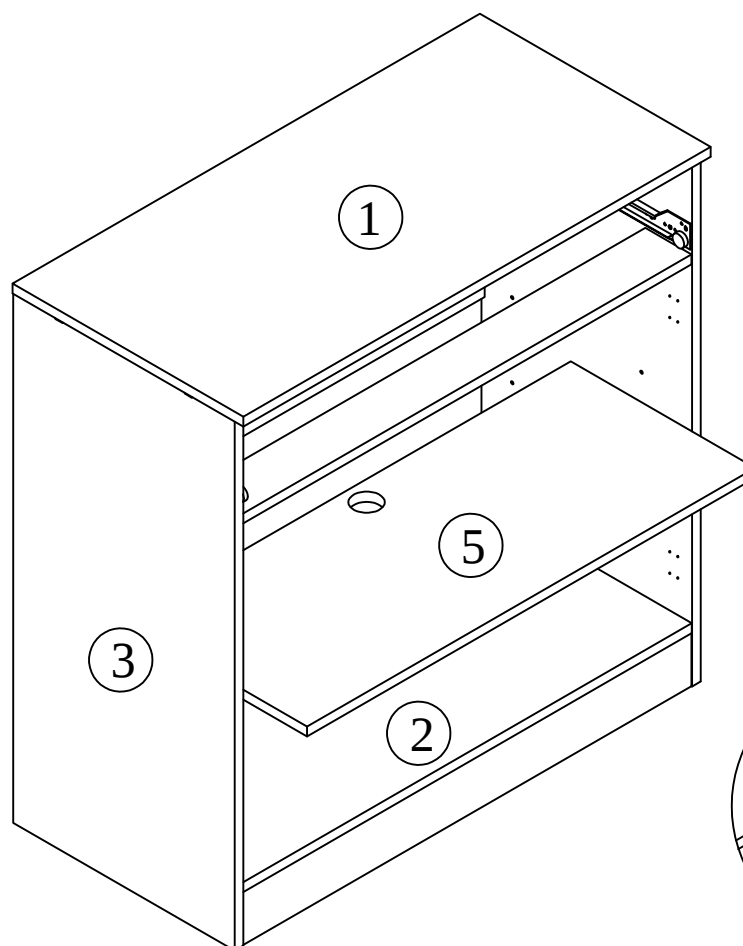


15

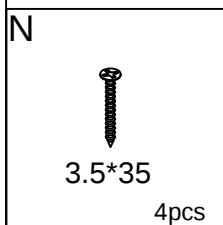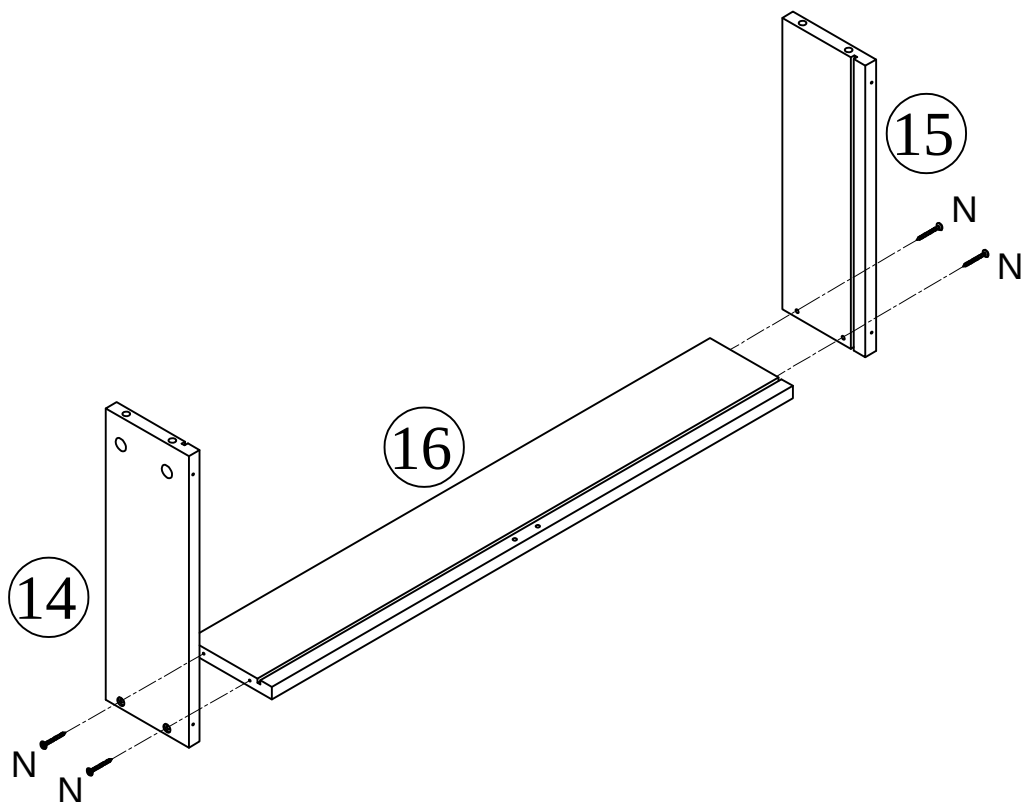


16

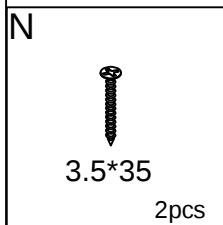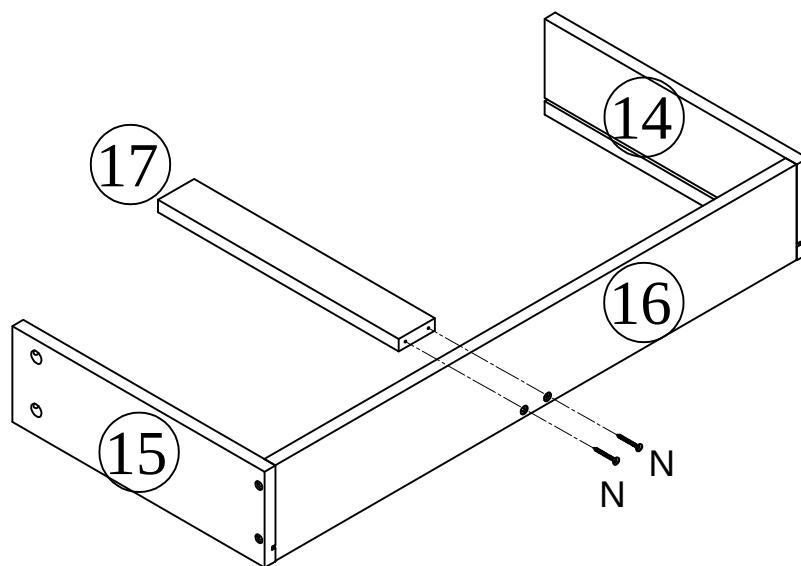

17

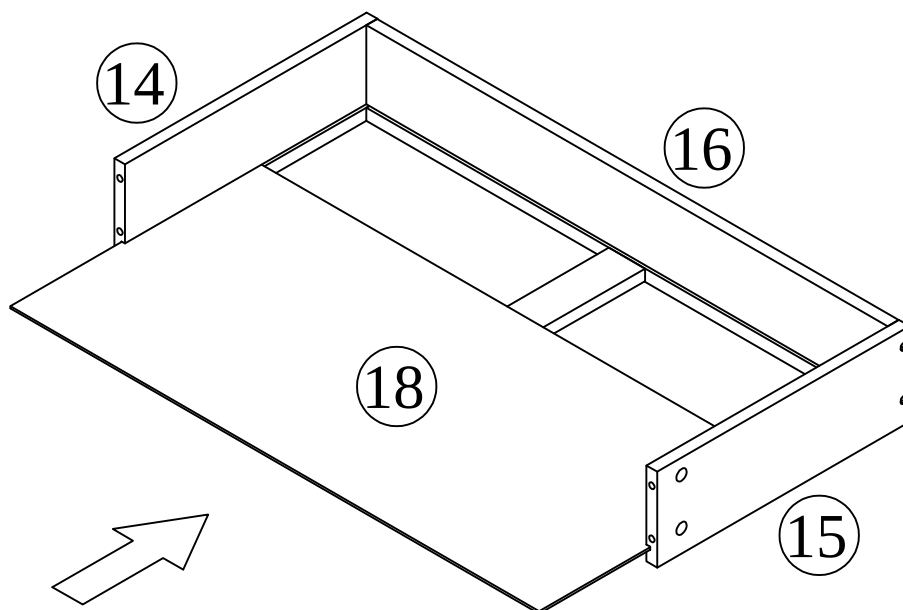

18

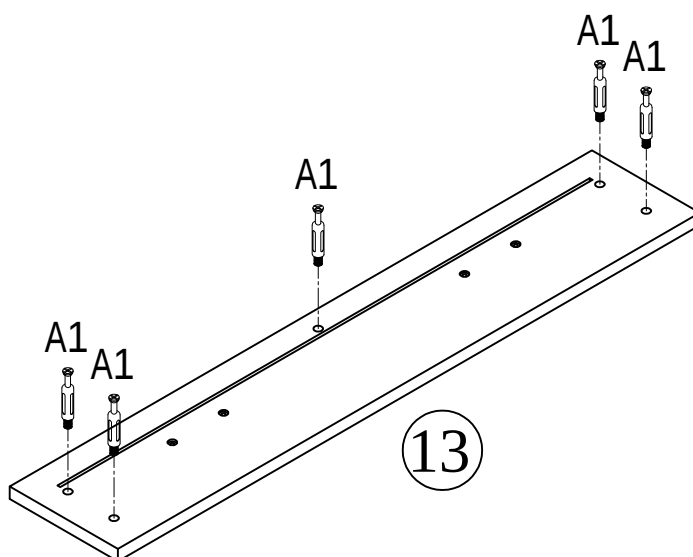


A1



5pcs

19

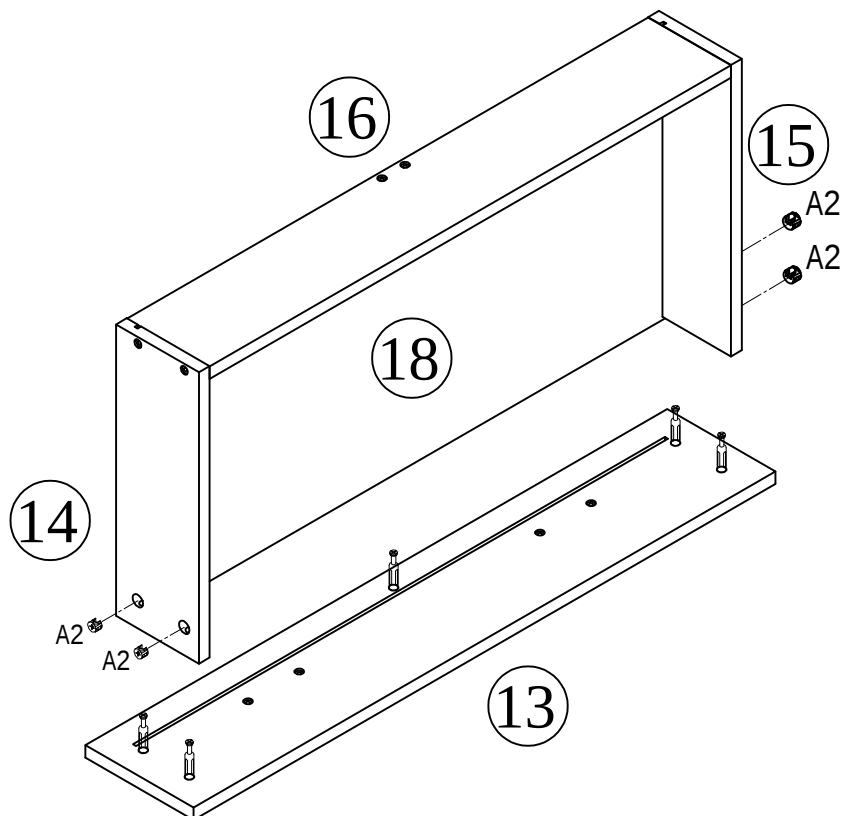


A2



4pcs

20


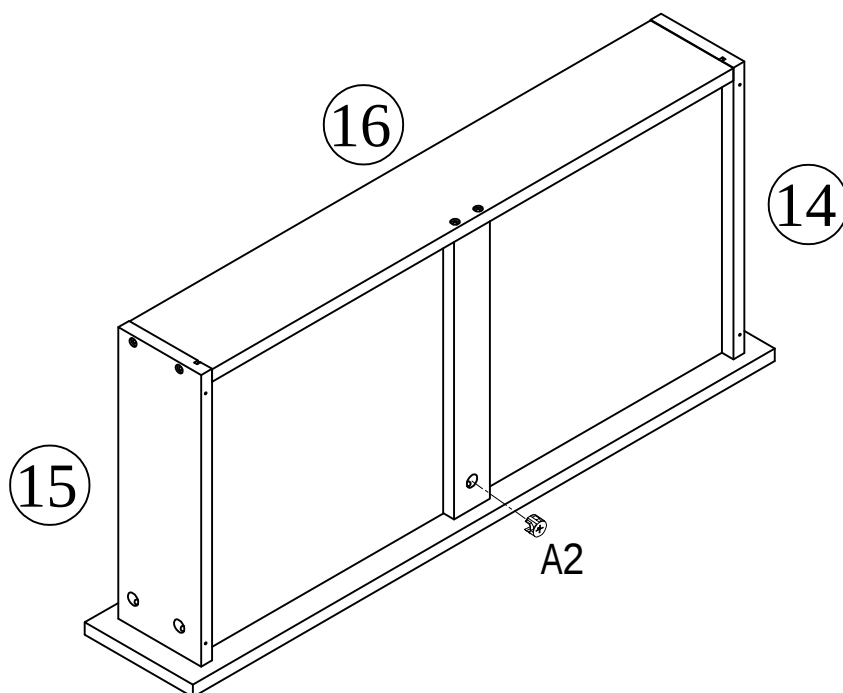


A2





1pcs


21

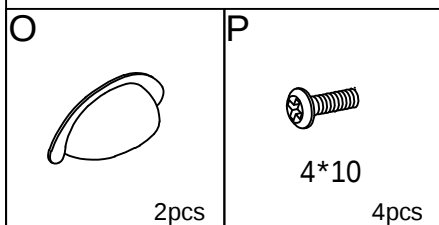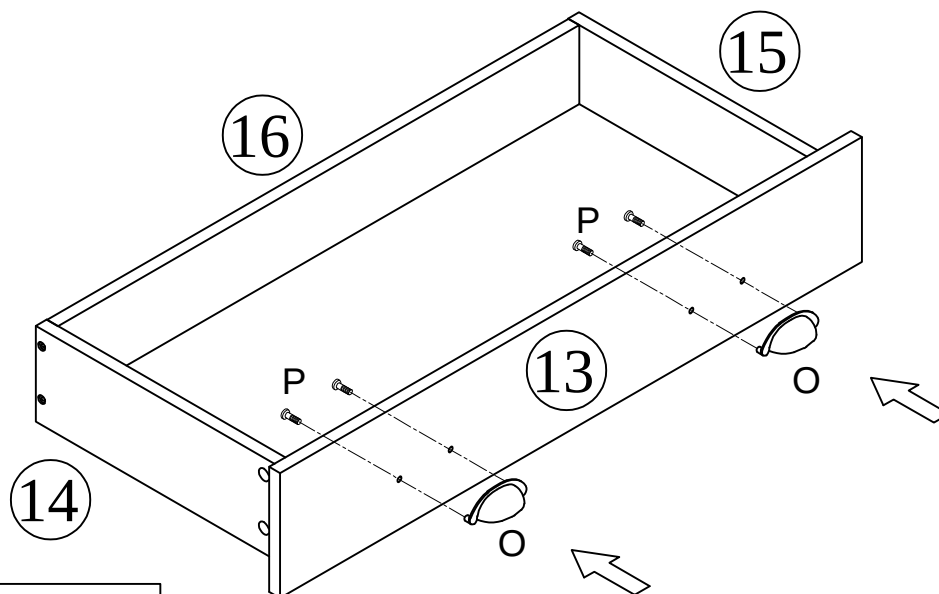



22

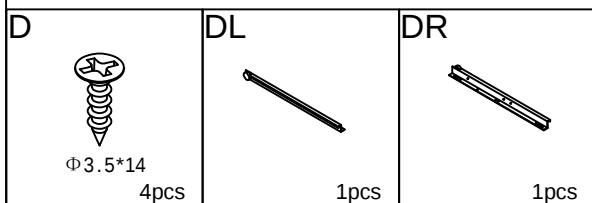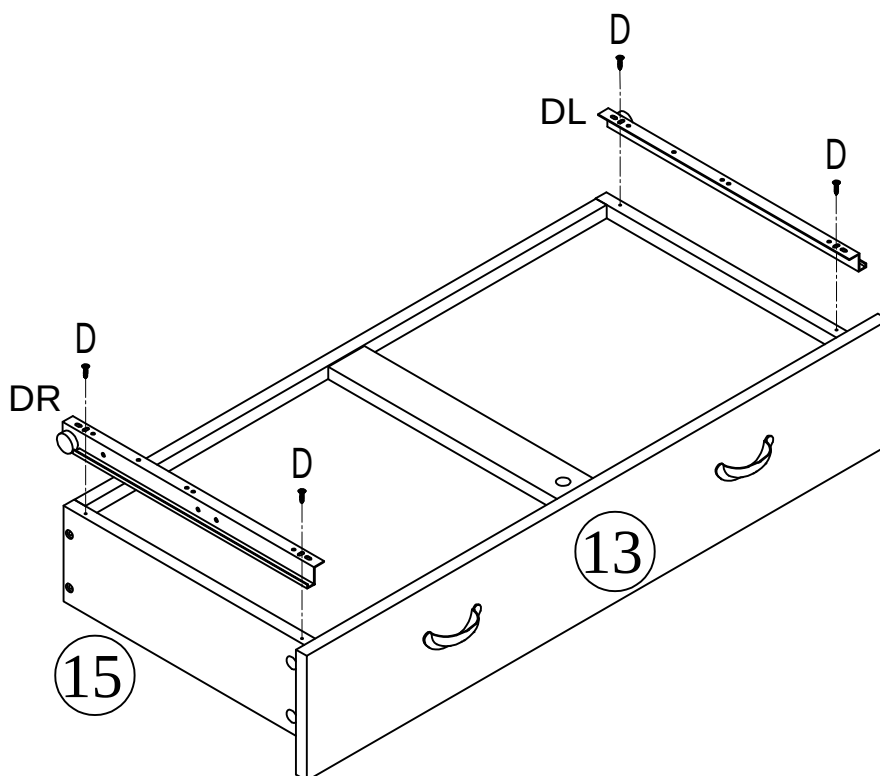

23

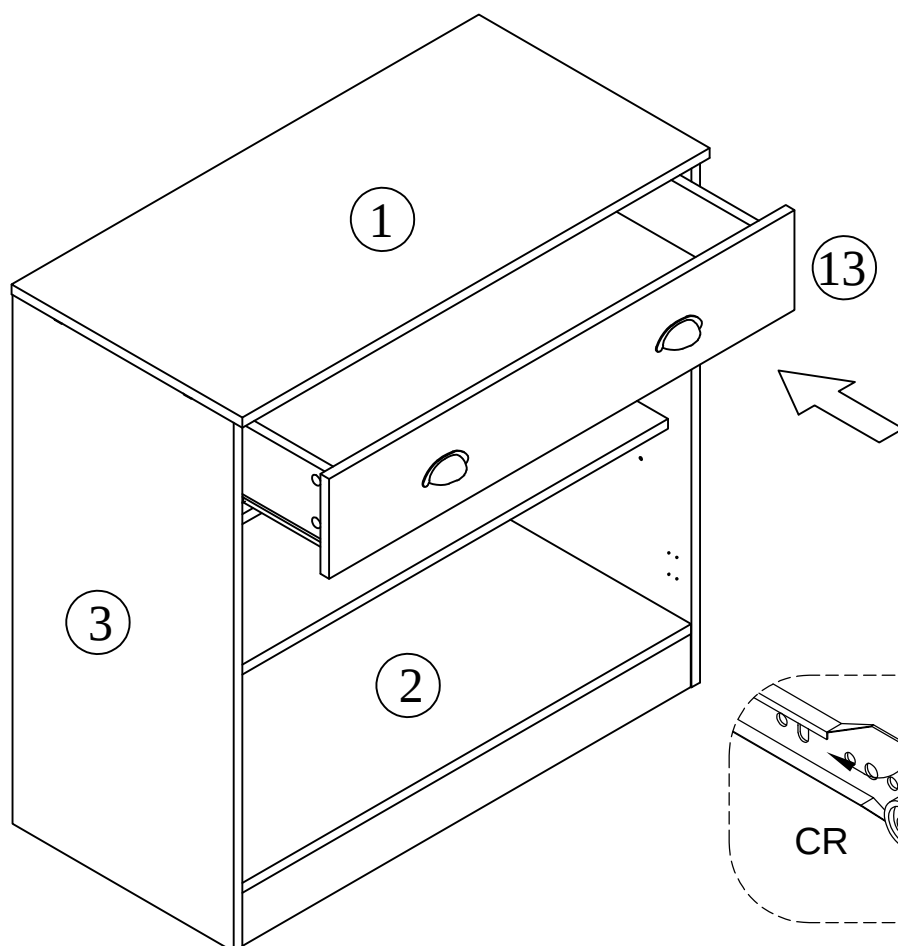

24

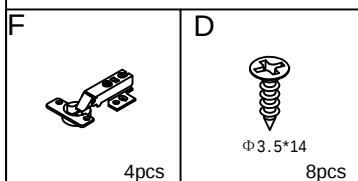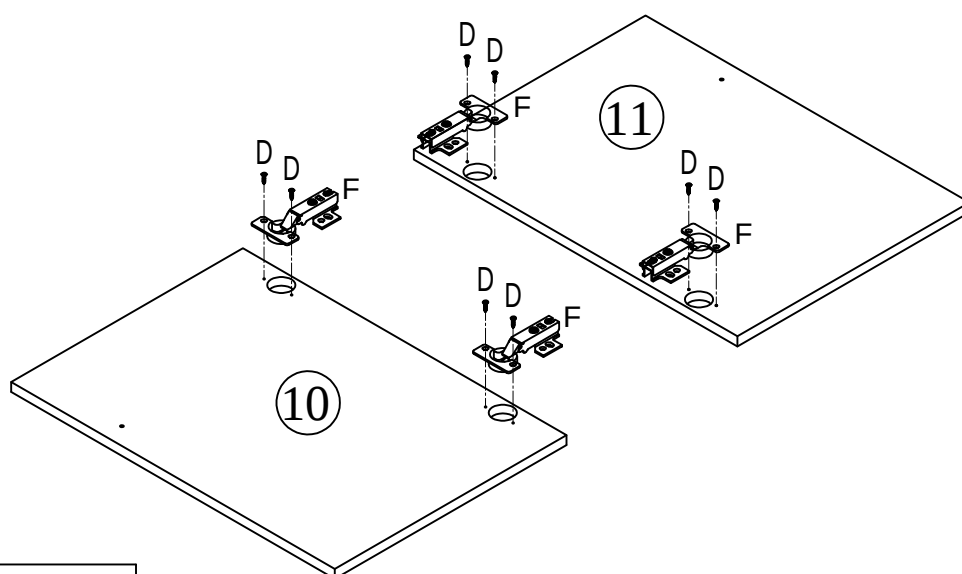

25

Hinge Installation Instructions




1. Attach the hinge using the two pre-drilled round holes and align the door.

2. Tighten the two screws to secure.

△ Two holes are pre-drilled by design.


△ The door works properly with these two screws.

△ Additional screws are optional after alignment.

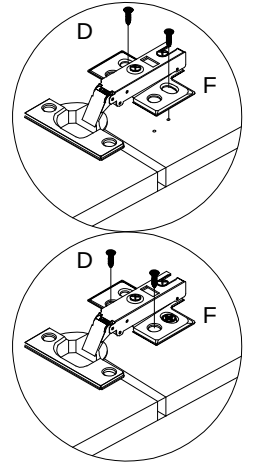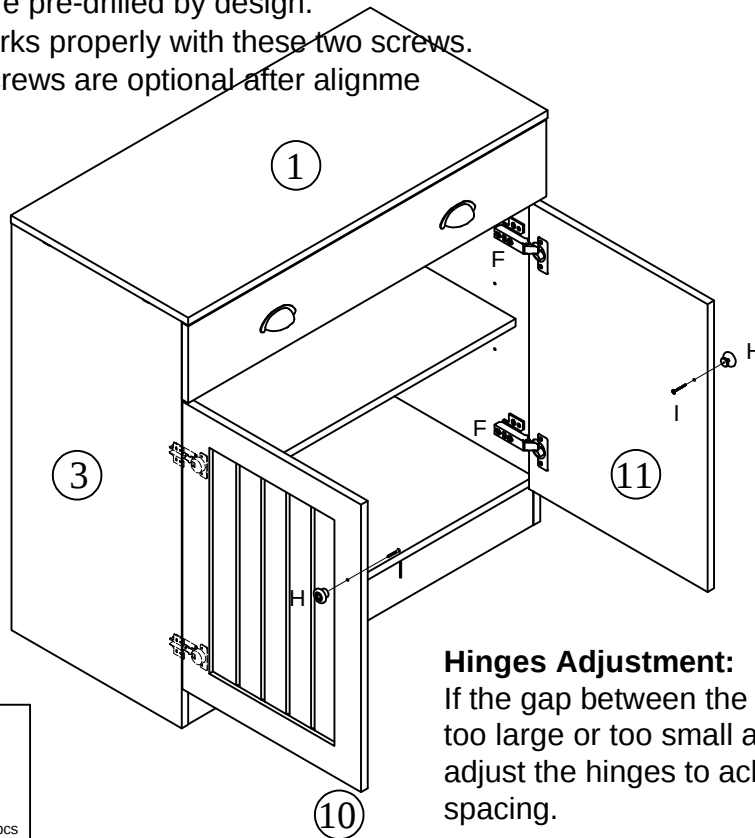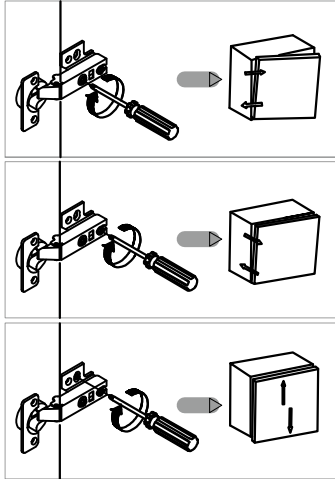

Hinges Adjustment:

If the gap between the door and frame is too large or too small after installation, adjust the hinges to achieve the desired spacing.

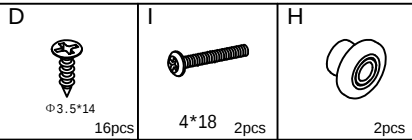

26

