


Bed Frame with Storage Headboard & Charging Station Assembly Instructions


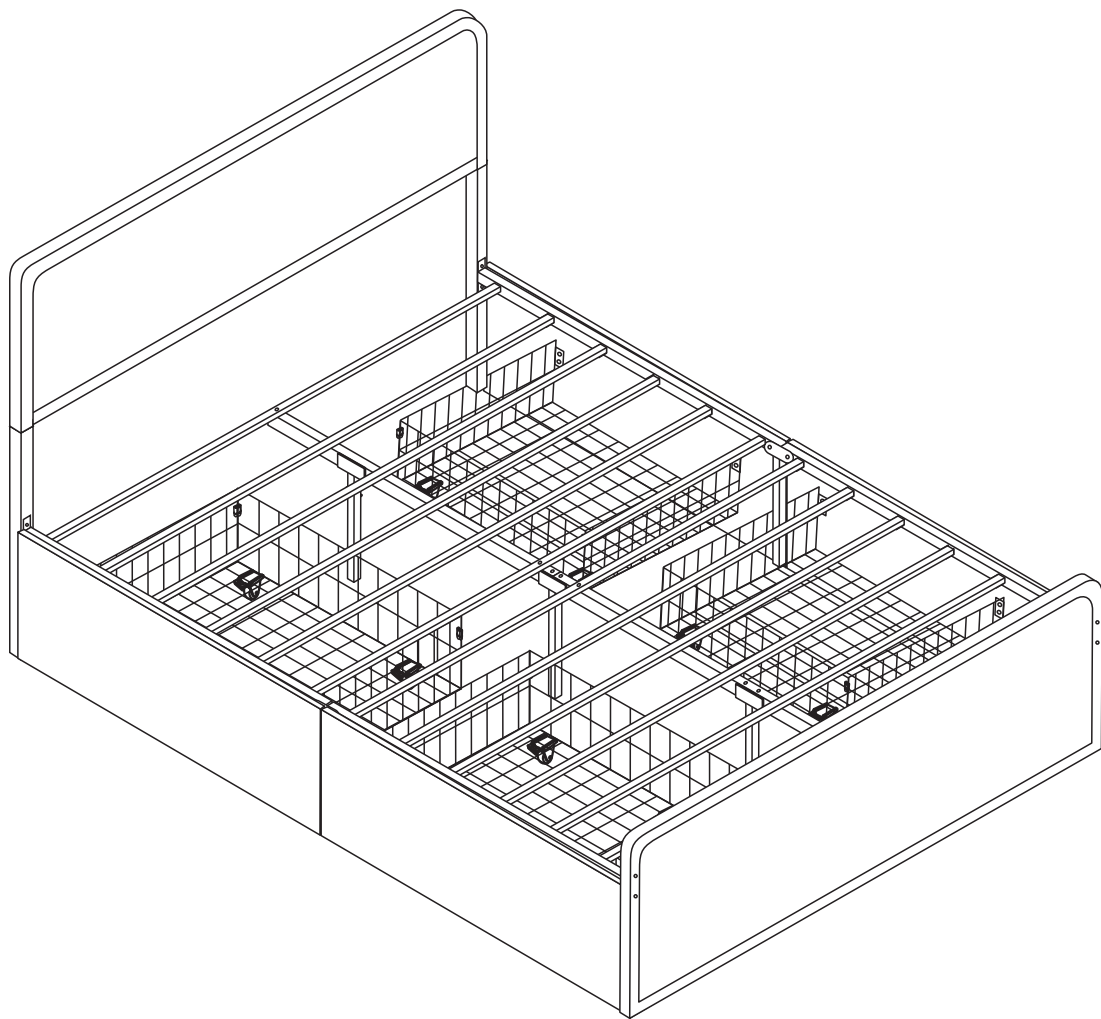


Dear Customers,

Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

MADEINCHINA












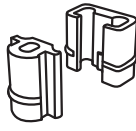

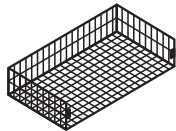




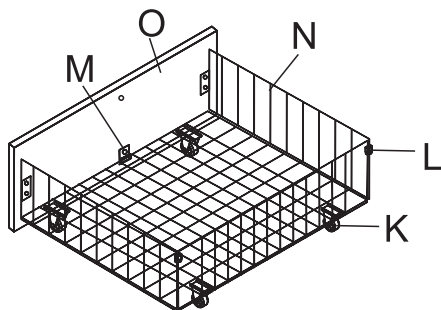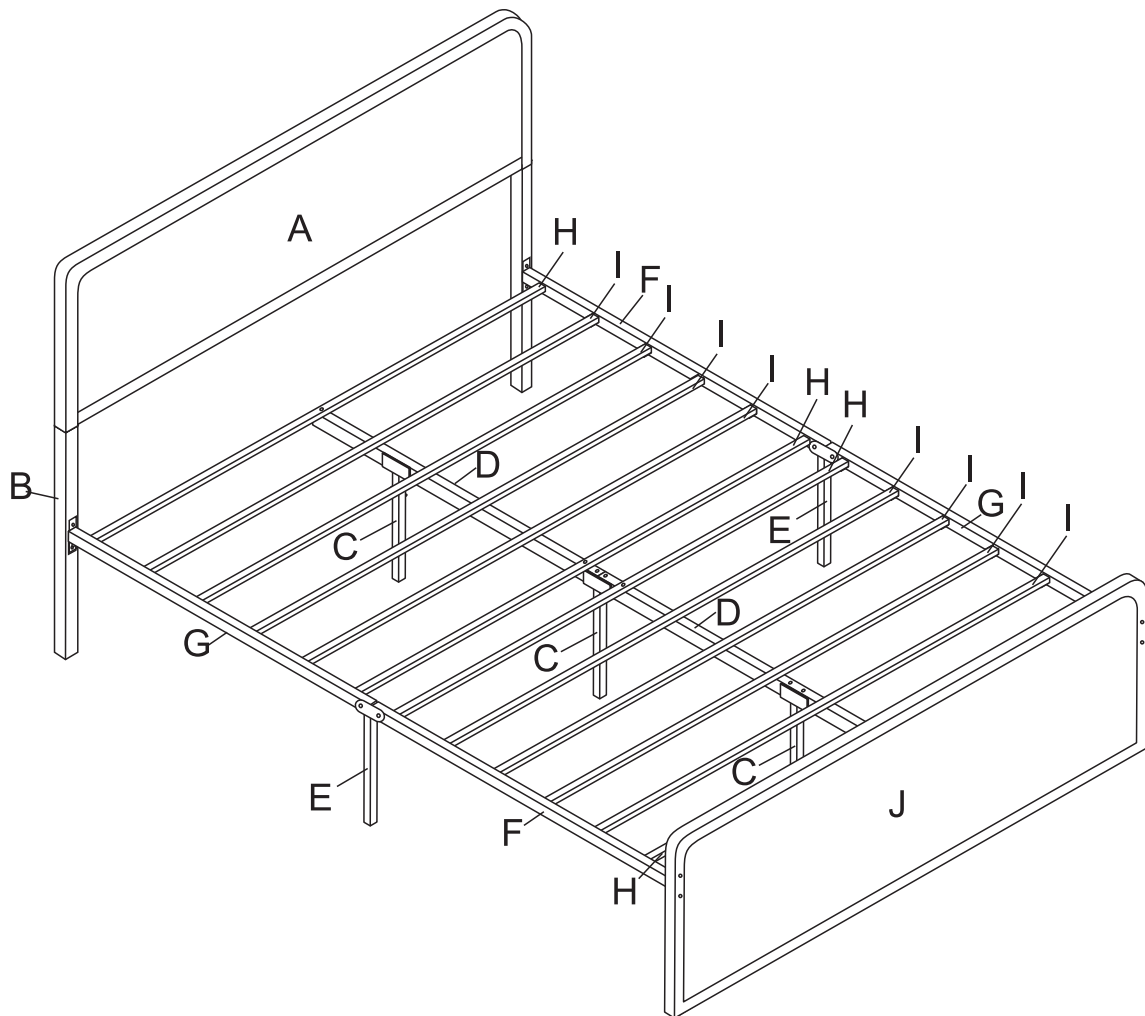


ASSEMBLY INSTRUCTIONS



Notice: Do not tighten the screws too tightly at the beginning of the assembly. After each hole position is matched well, with gently force to screw, if there is no problem, then tighten all the screws.

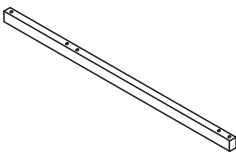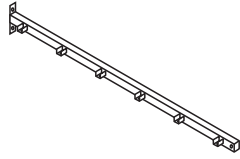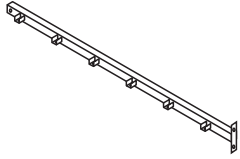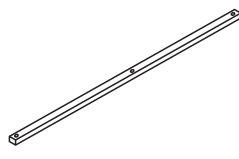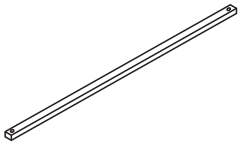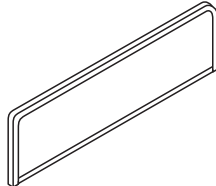
ASSEMBLY INSTRUCTIONS

PARTSLIST

A	x1PC	B	x2PCS	C	x3PCS	D	x2PCS		
									
E	x2PCS	F	x2PCS	G	x2PCS	H	x4PCS		
									
I	x8PCS	J	x1PC	K	x16PCS	L	x8PCS		
									
M	x4PCS	N	x4PCS	O	x4PCS				
									
1	x12PCS	2	x4PCS	3	x6PCS	4	x28PCS	5	x24PCS
									
M8x20mm		M8x30mm		M6x35mm		M6x25mm		M6x13mm	
6	x1PC								
									

ASSEMBLY INSTRUCTIONS

1

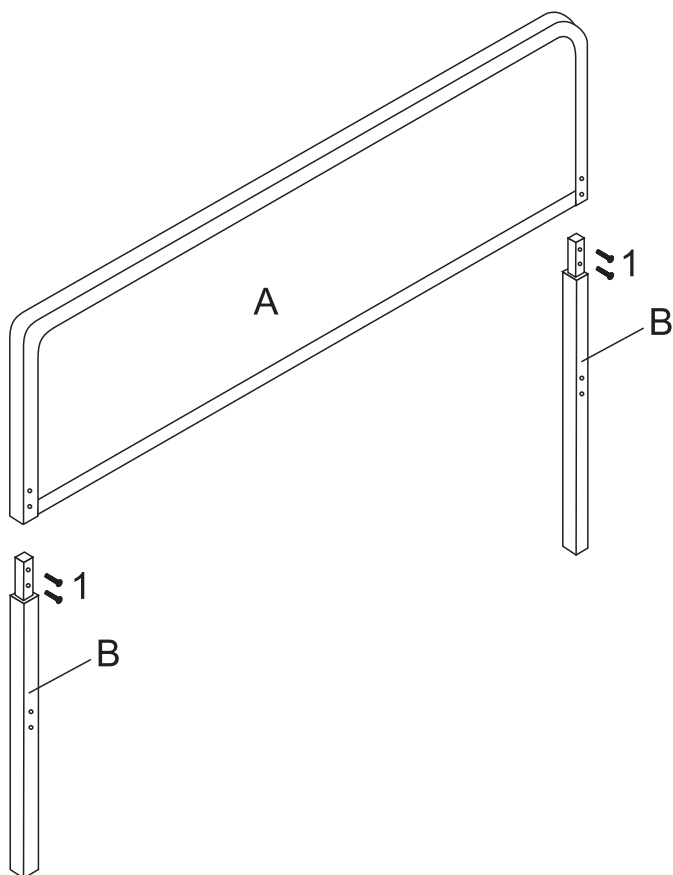


1

M8x20mm

4PCS

2

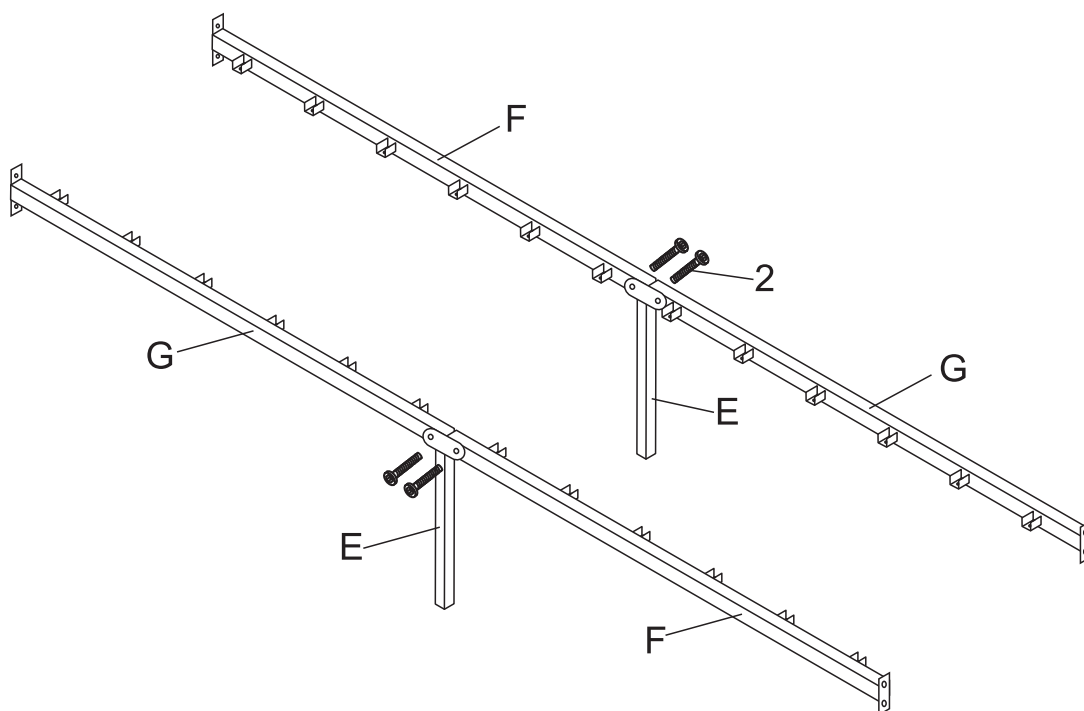


2

M8x30mm

4PCS

ASSEMBLY INSTRUCTIONS

3

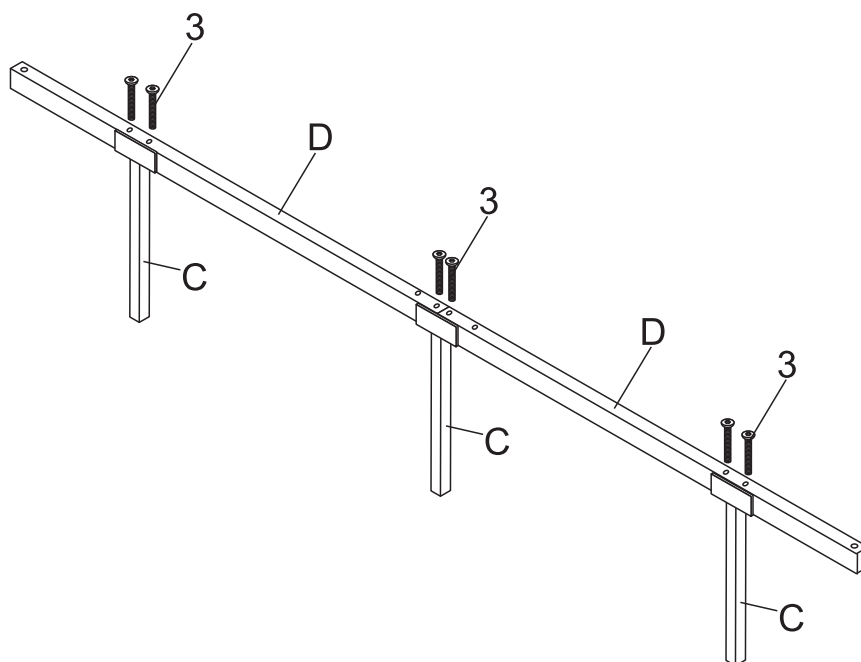


3


M6x35mm

6PCS

4

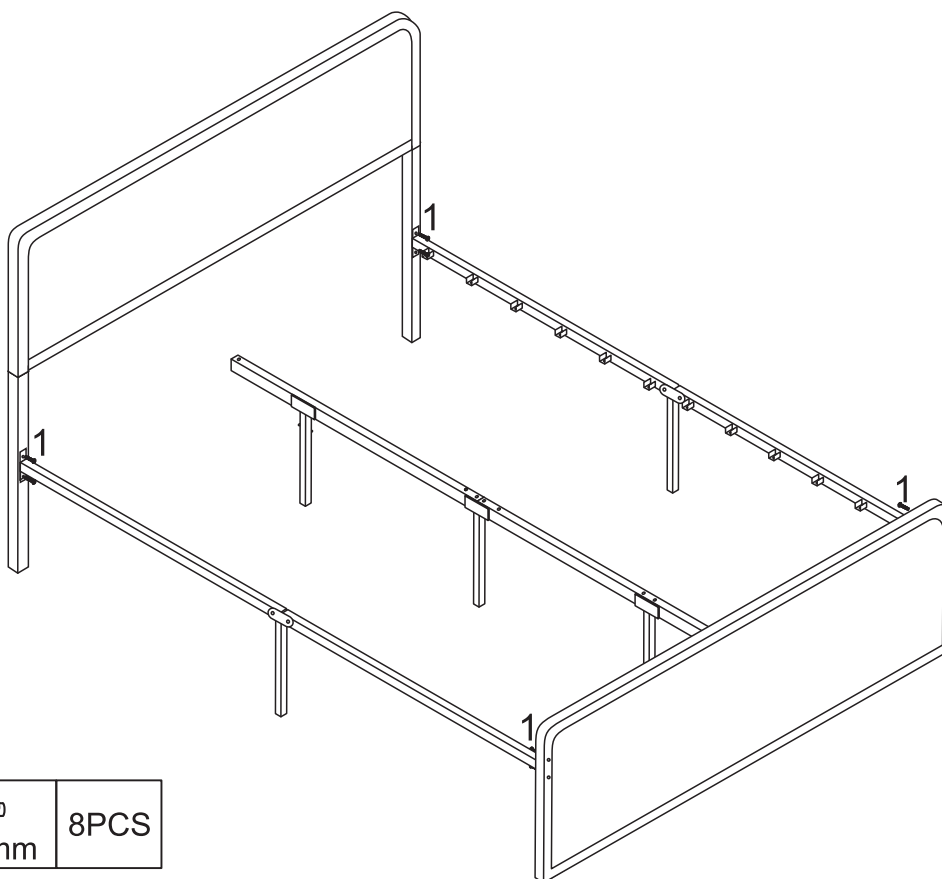

1


M8x20mm

8PCS

5




12PCS

6




16PCS



7

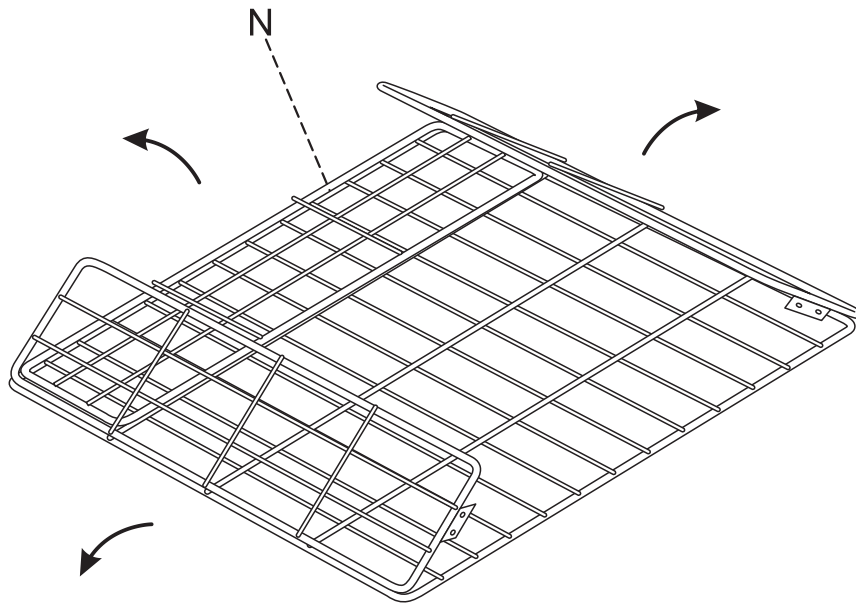



8

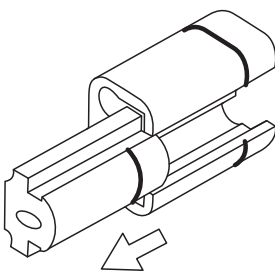

You can pull the buckle out by following the direction indicated by the arrow

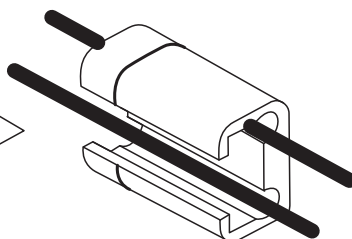


Place round iron tube as shown for better drawer assembly

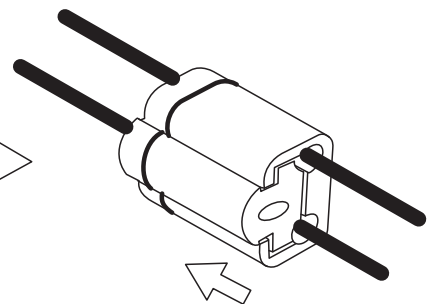


This is the only direction that can be locked.

9

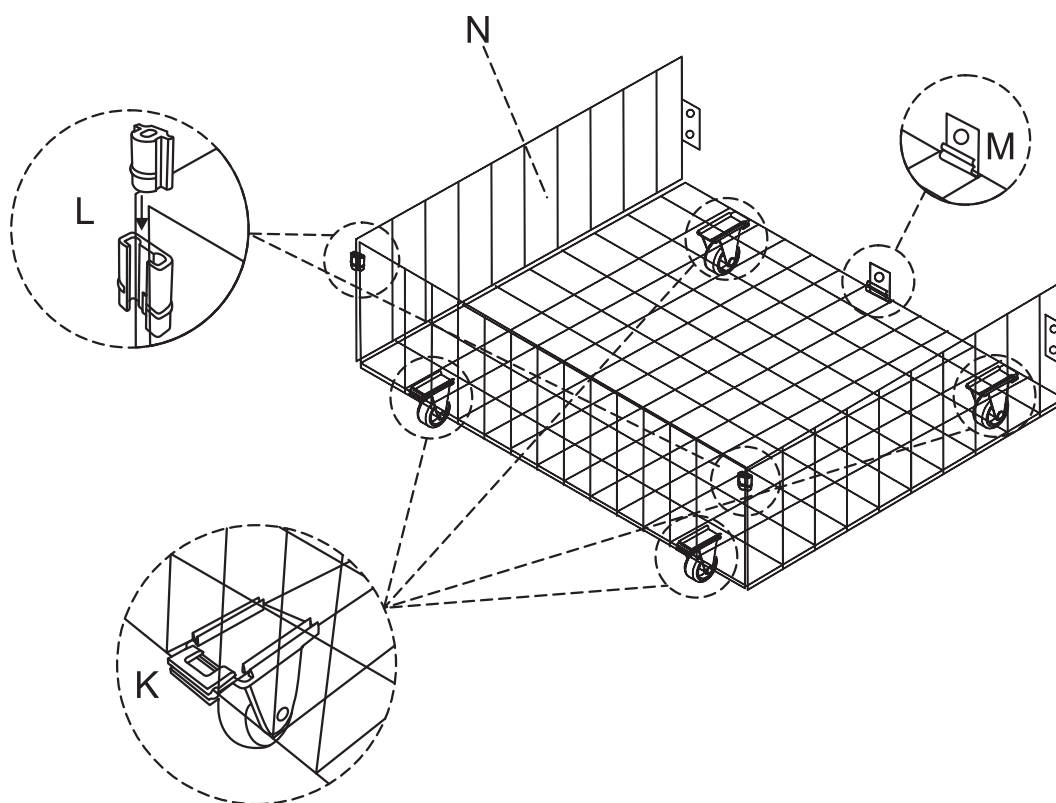

10

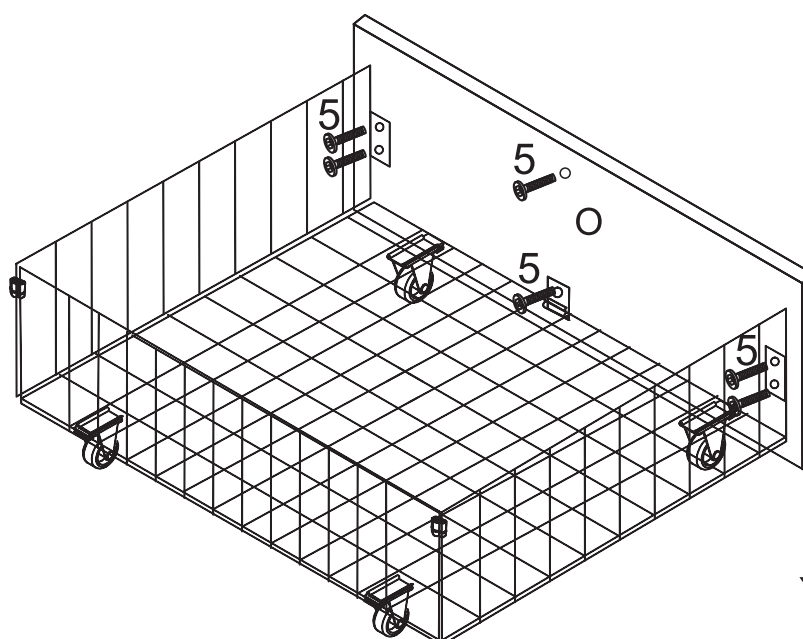

x4


5




M6x13mm

24PCS

11

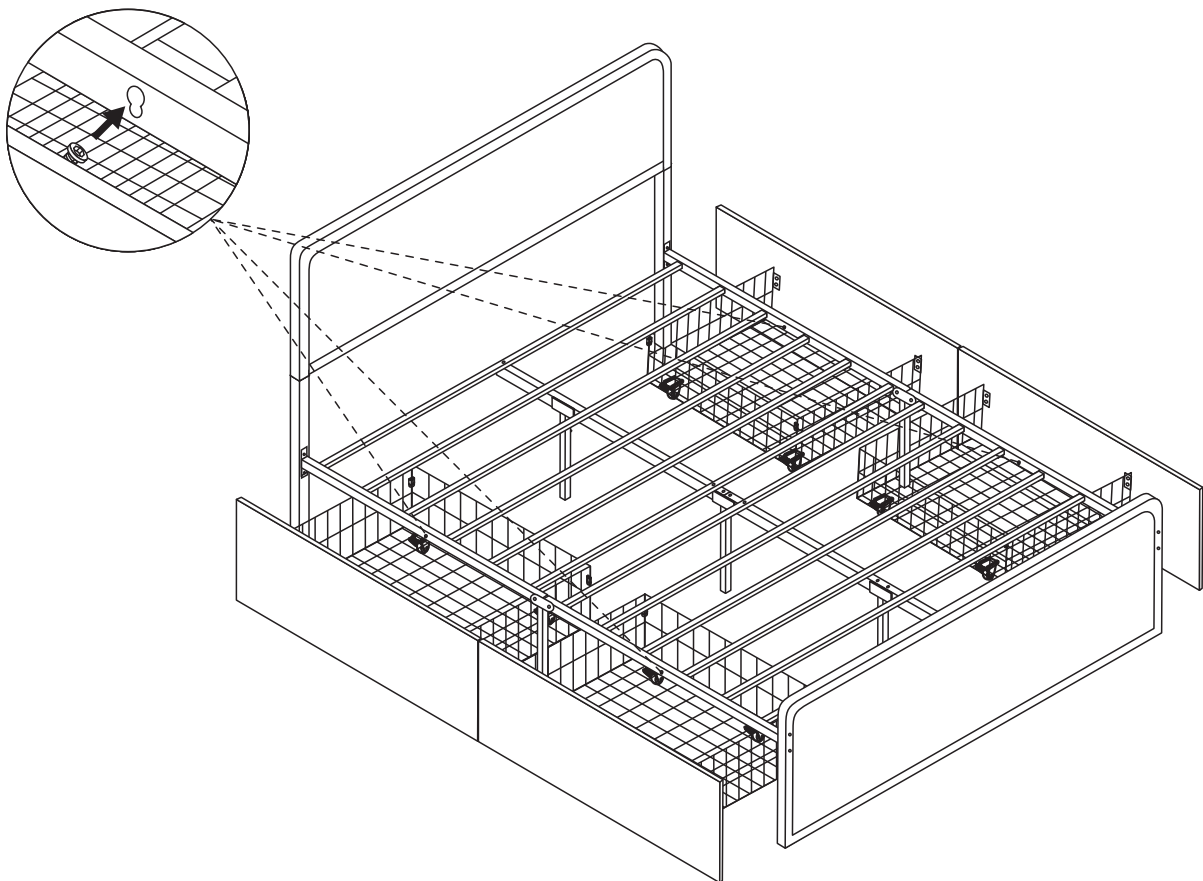

12

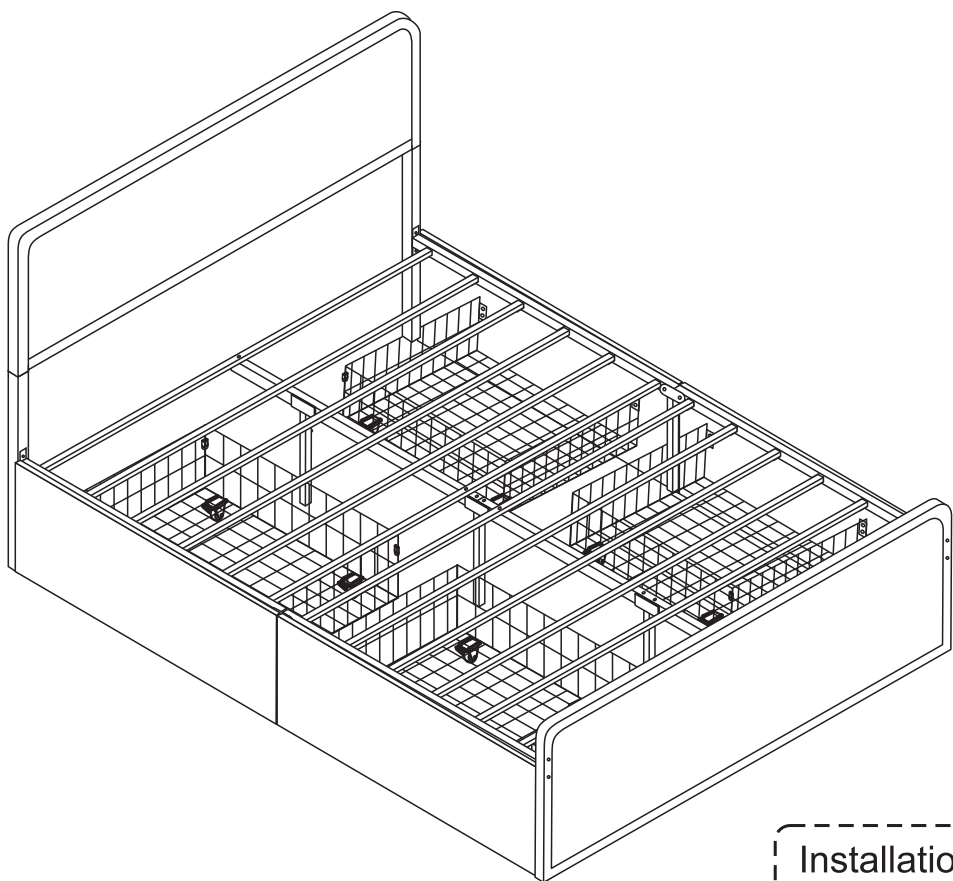

Installation Complete