




# Product Installation Instructions

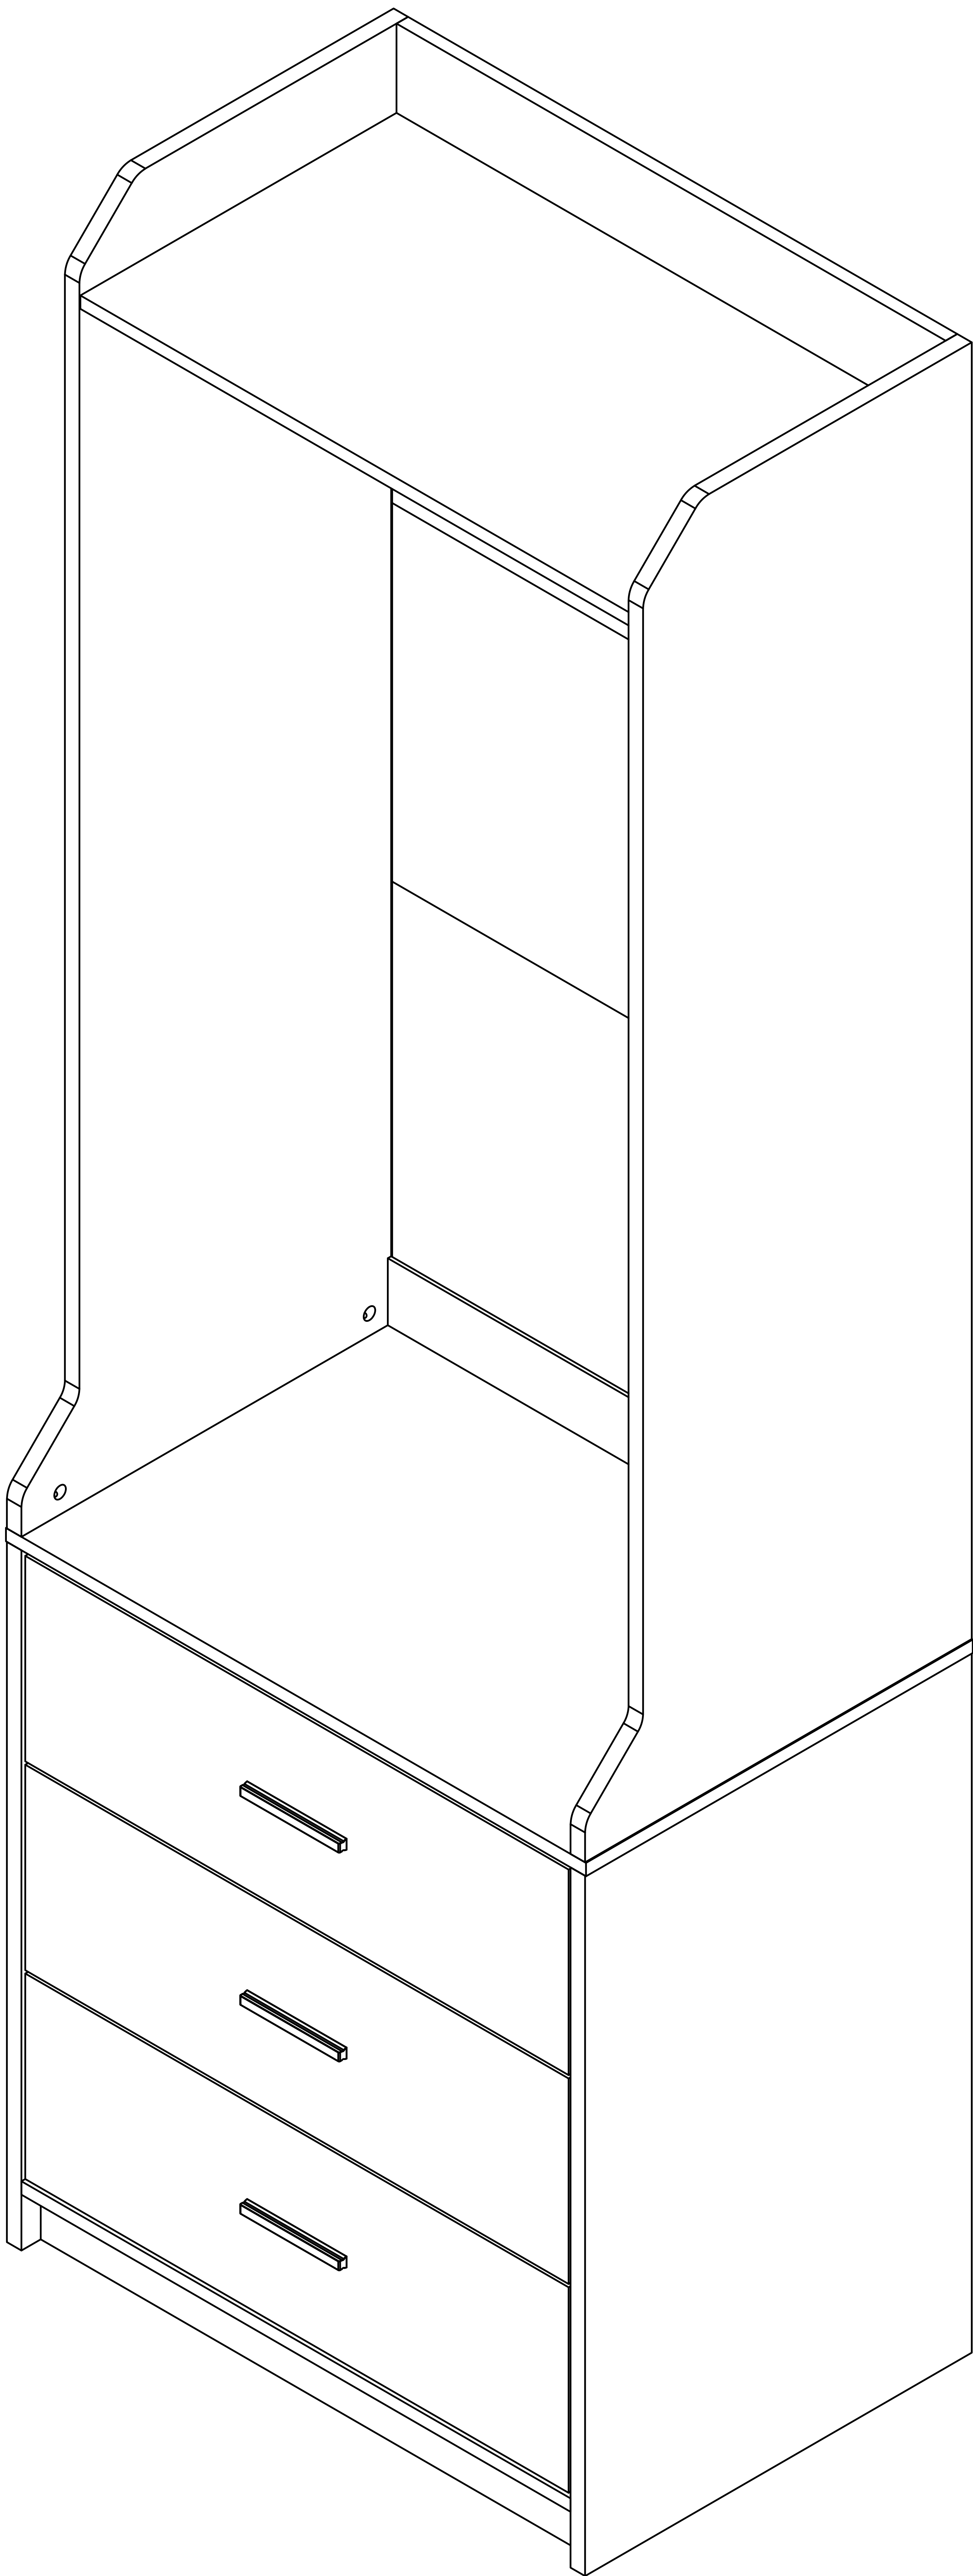


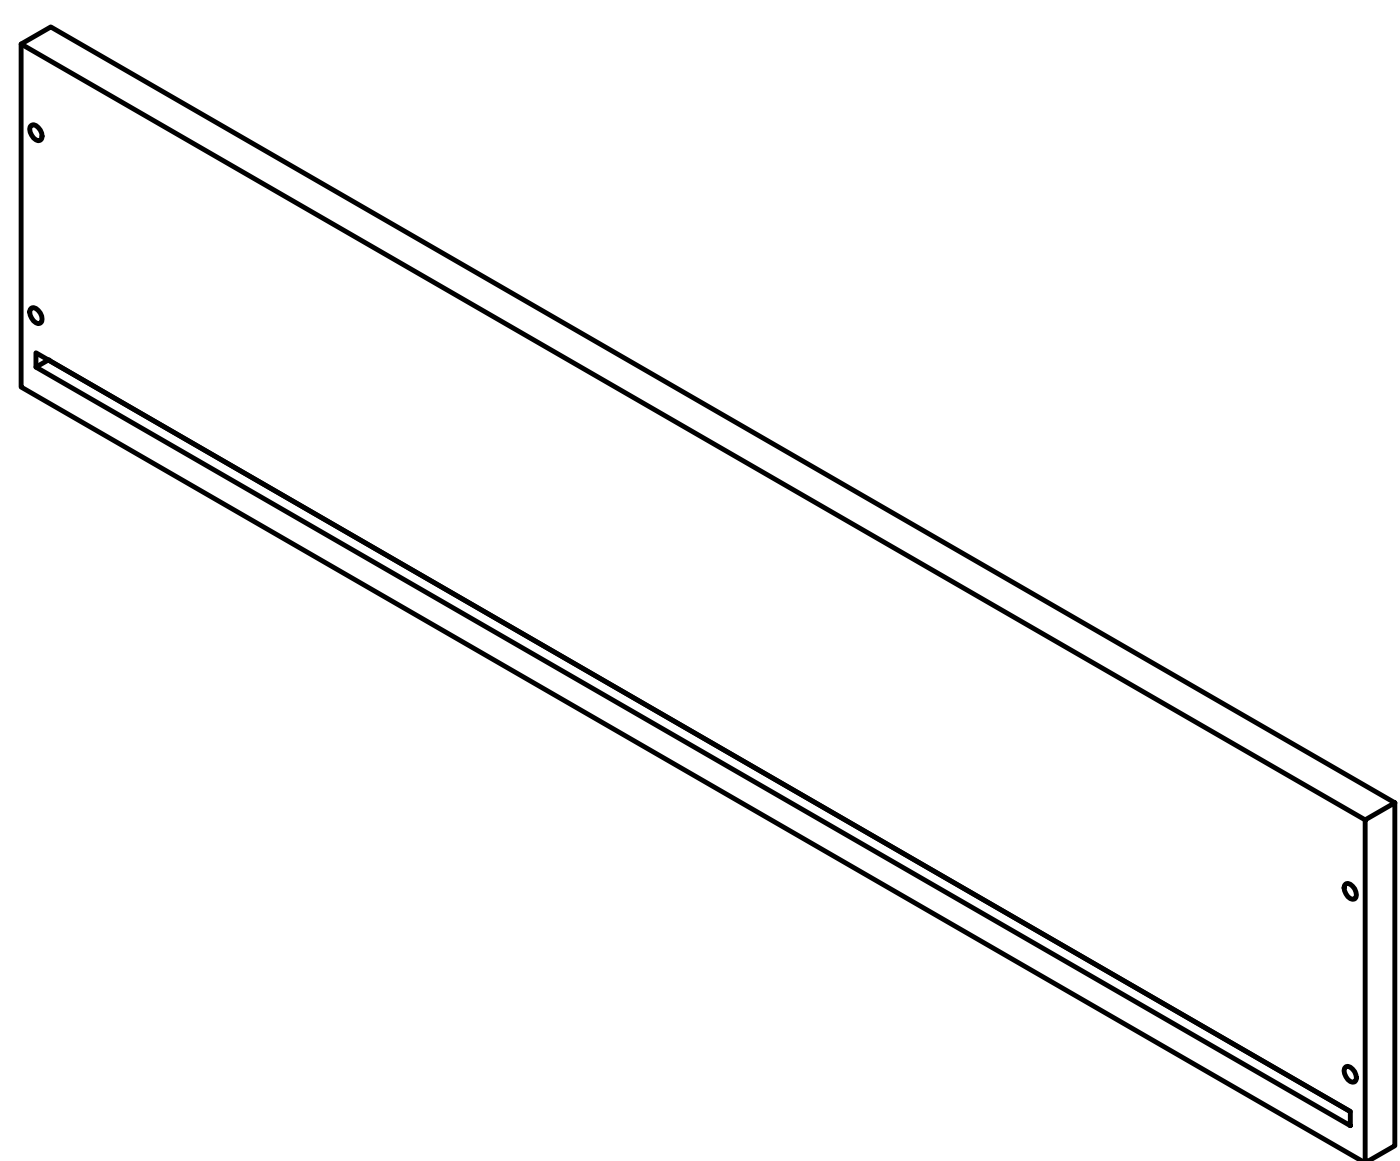


A x3

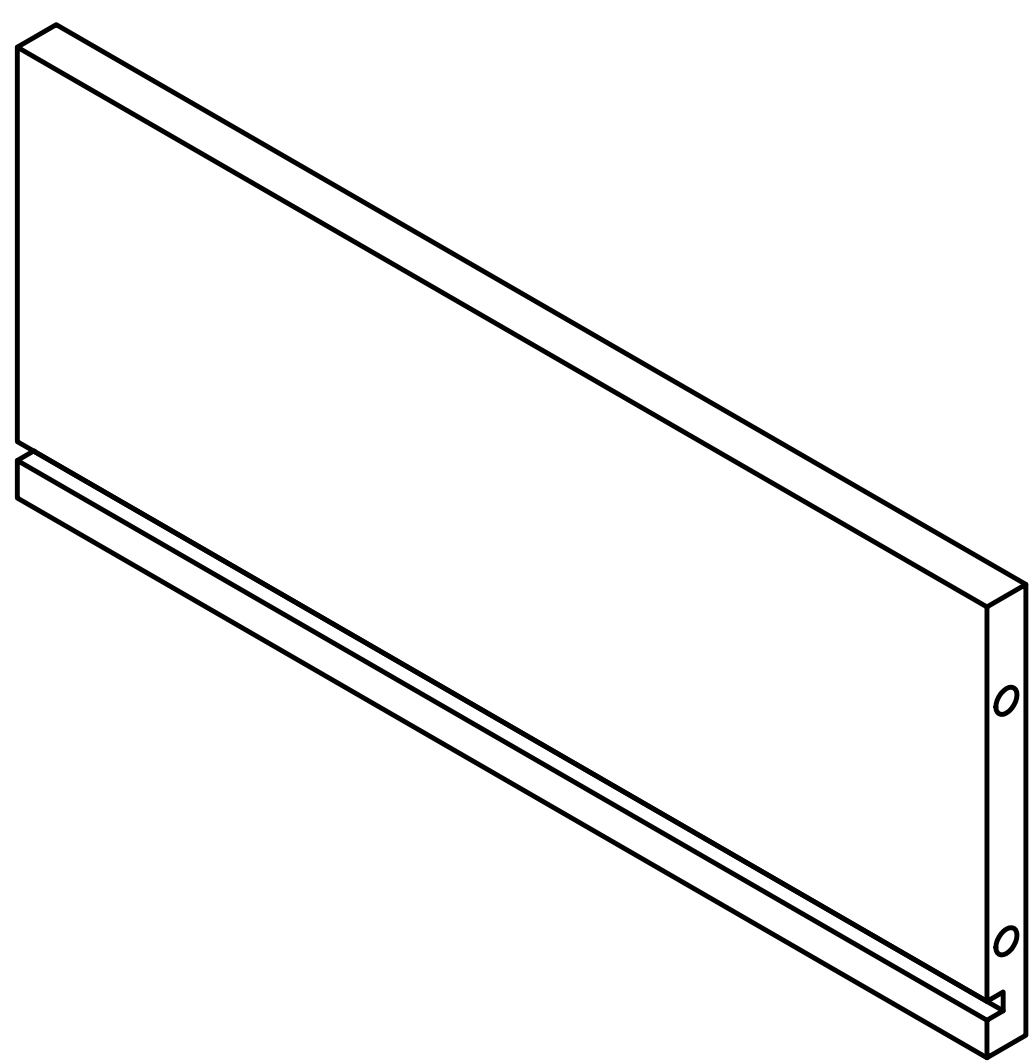


B x6

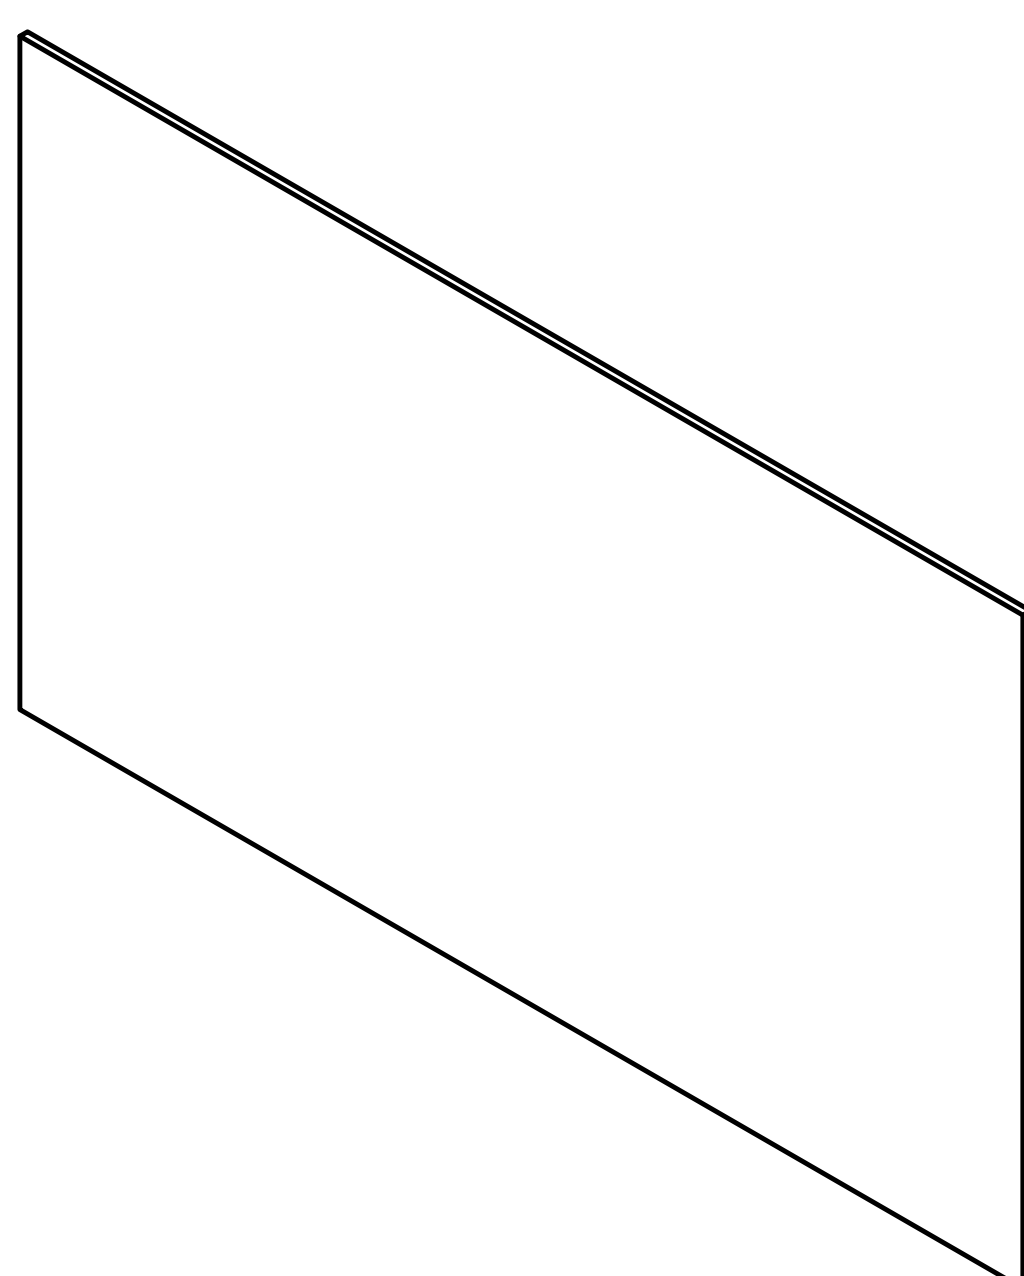


C x3

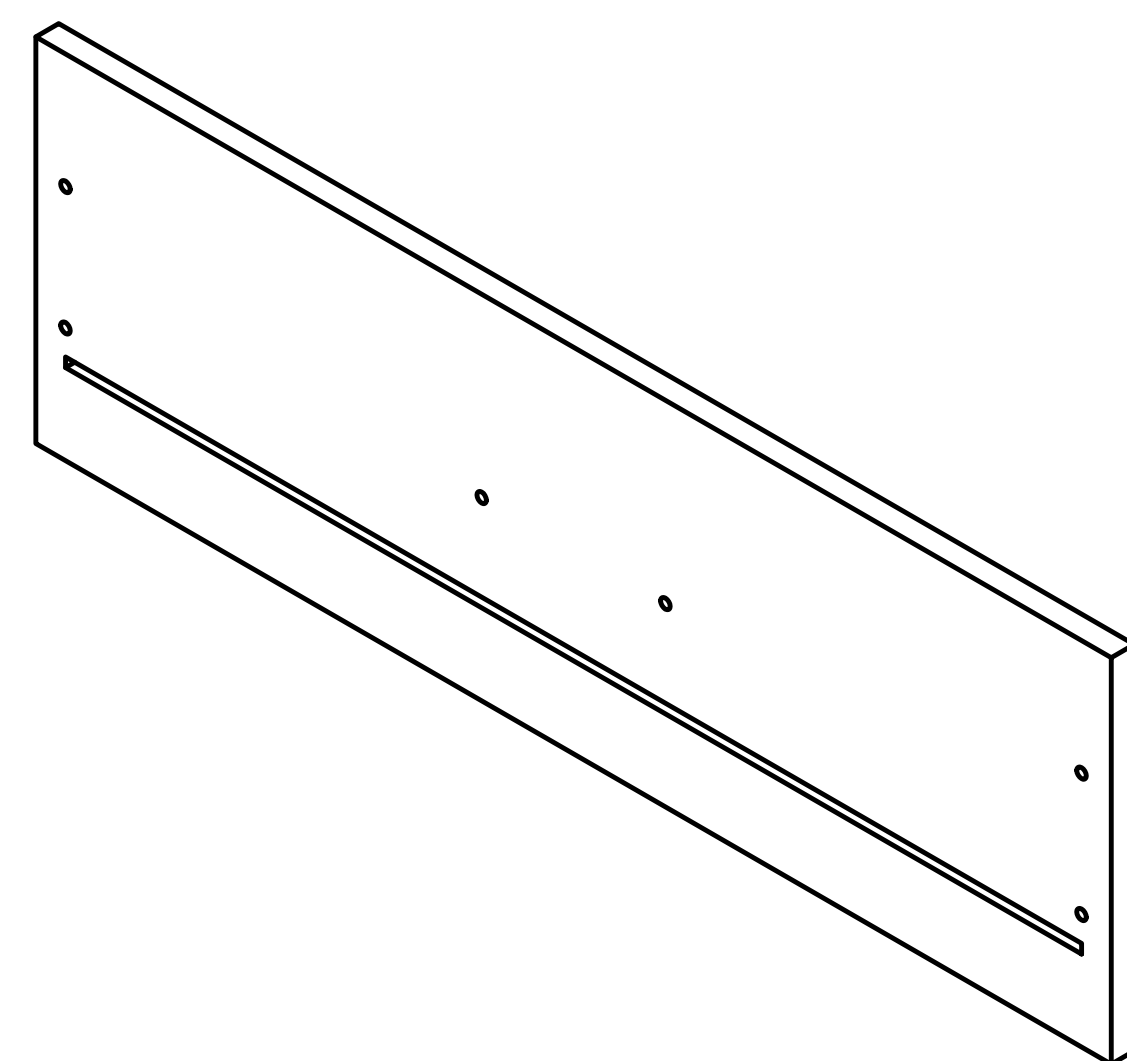


D x3

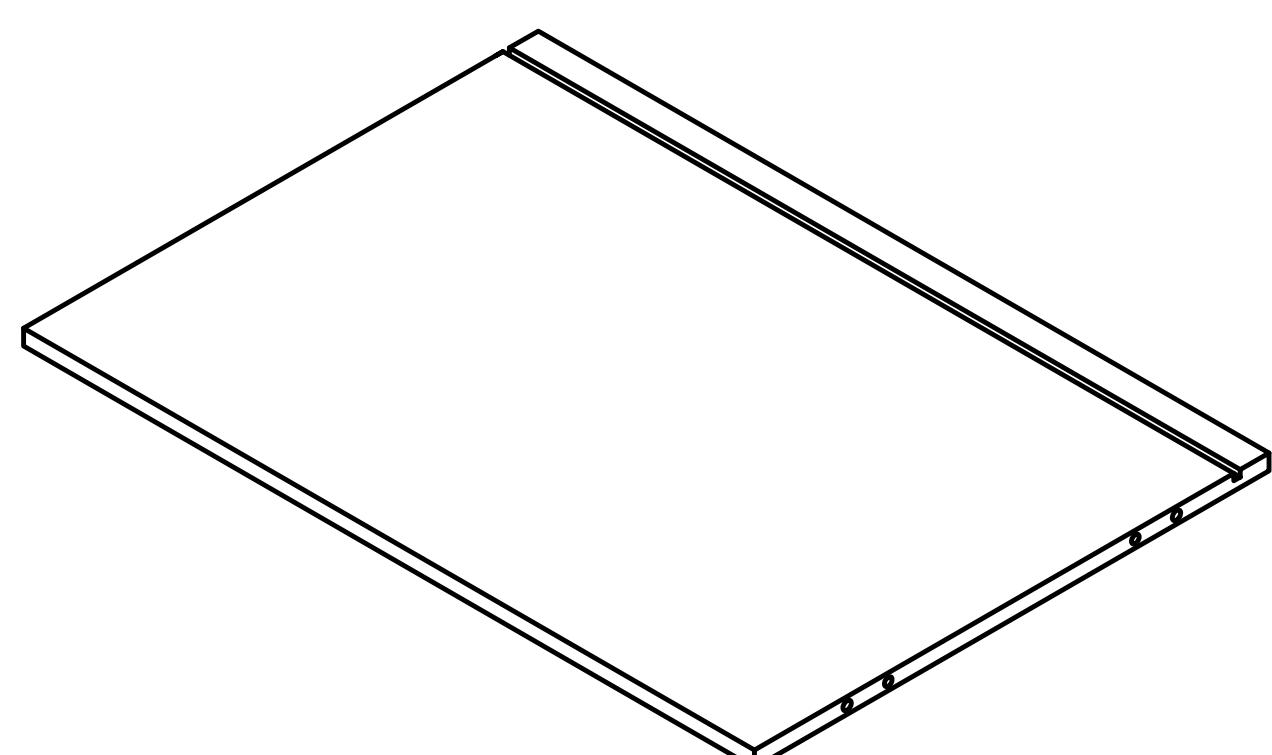


E x1

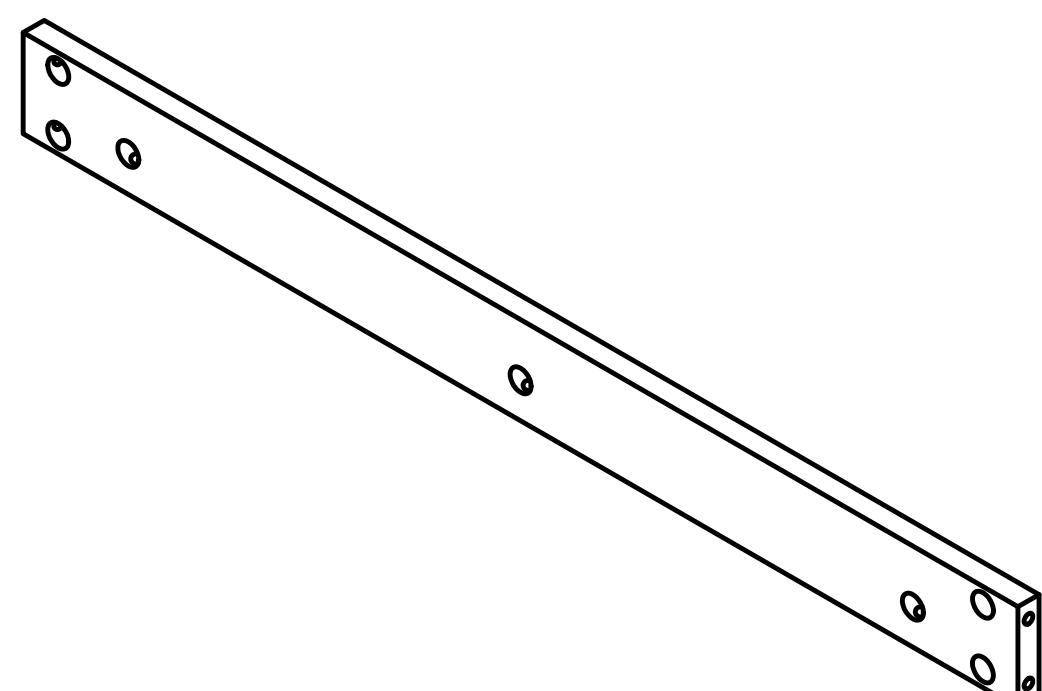


F x2

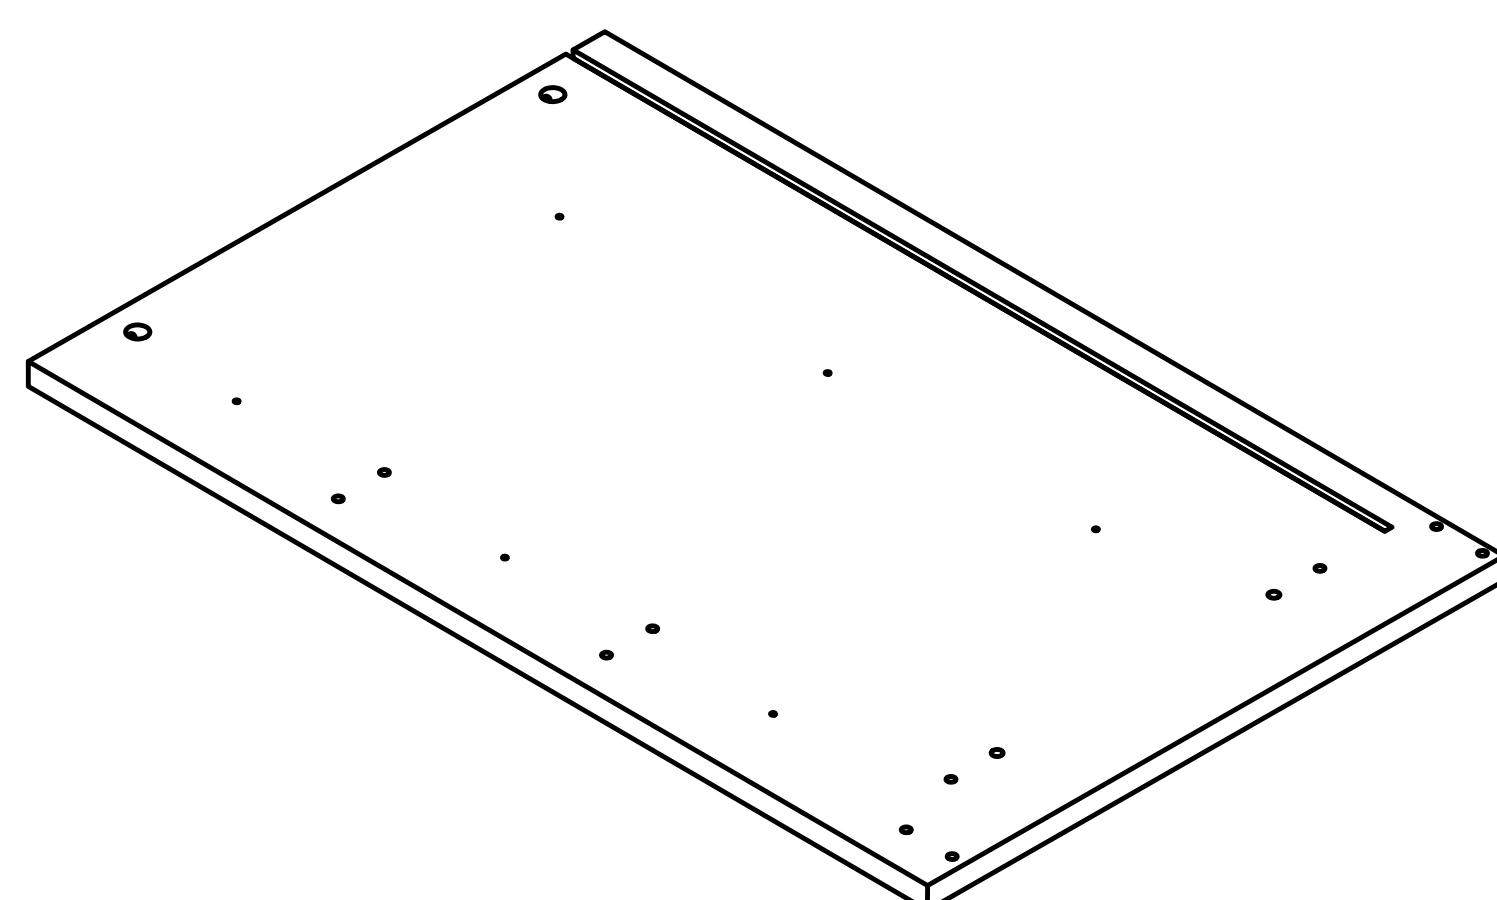


G x1

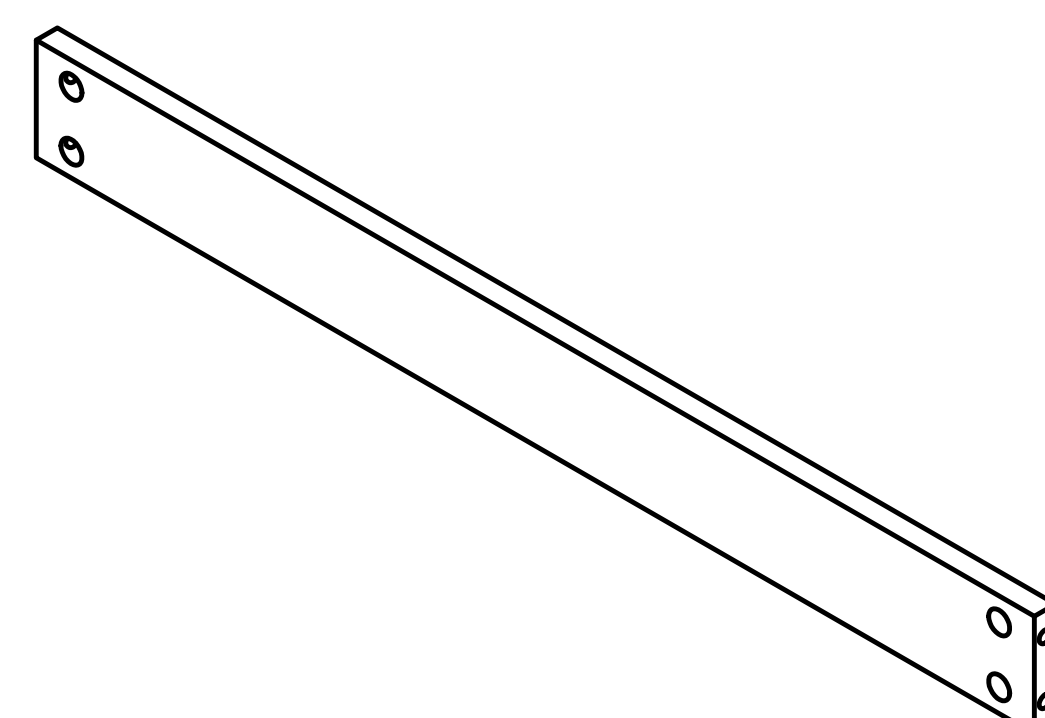


H x2

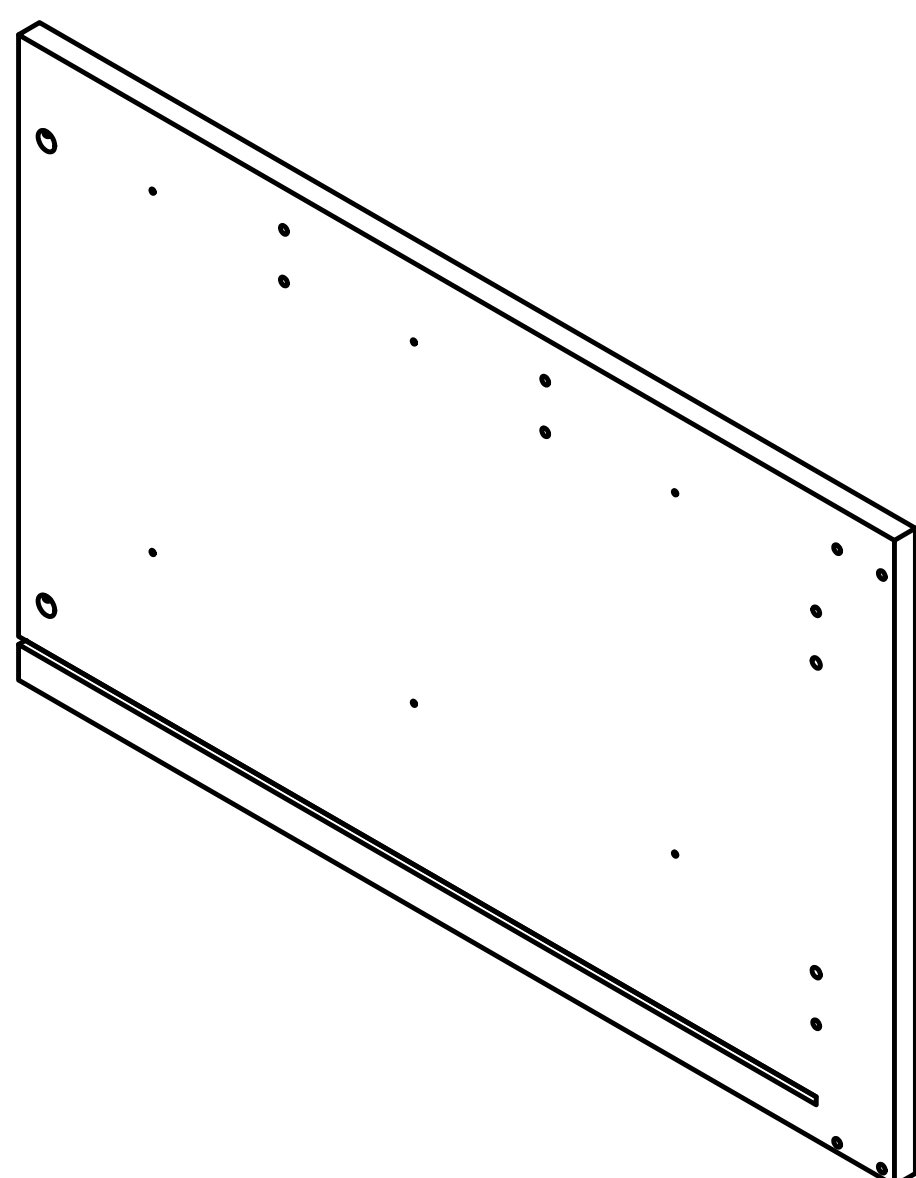


I x1

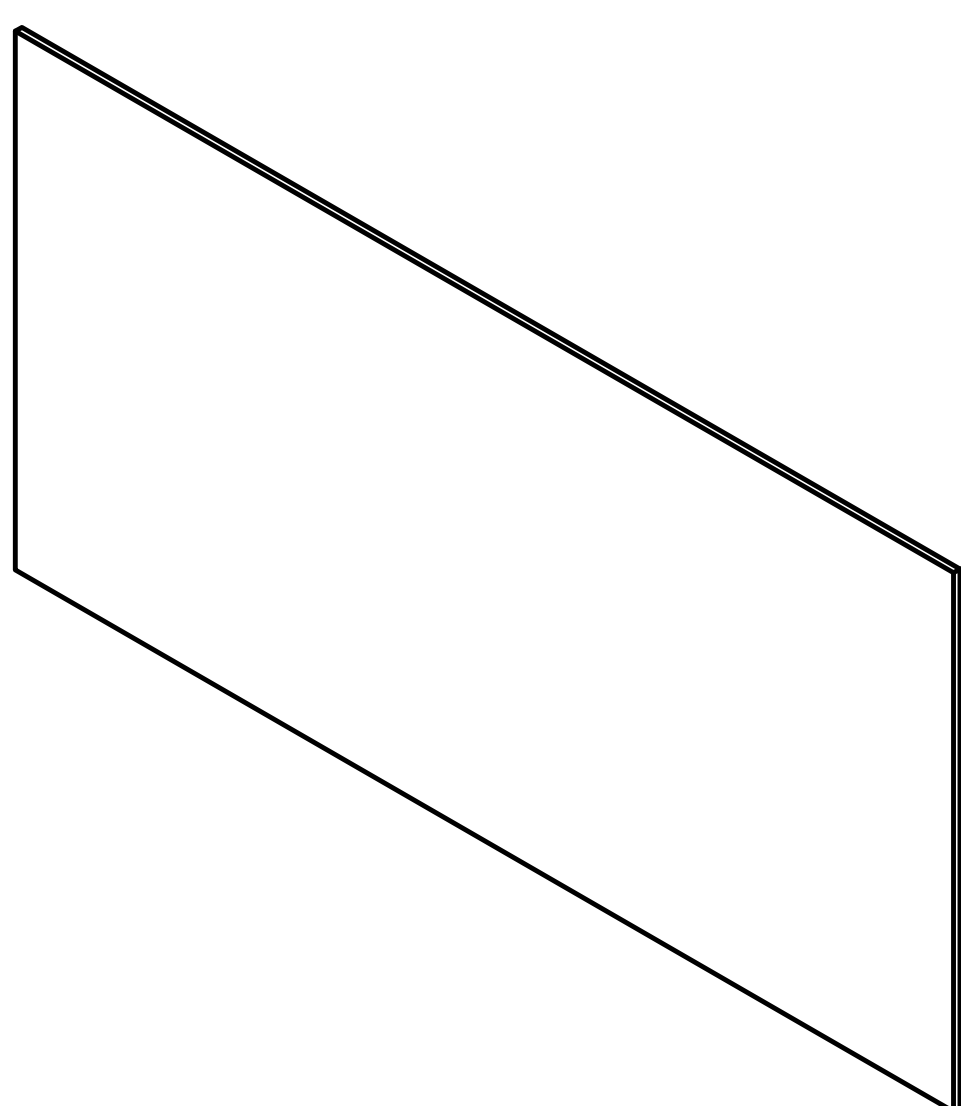


J x2

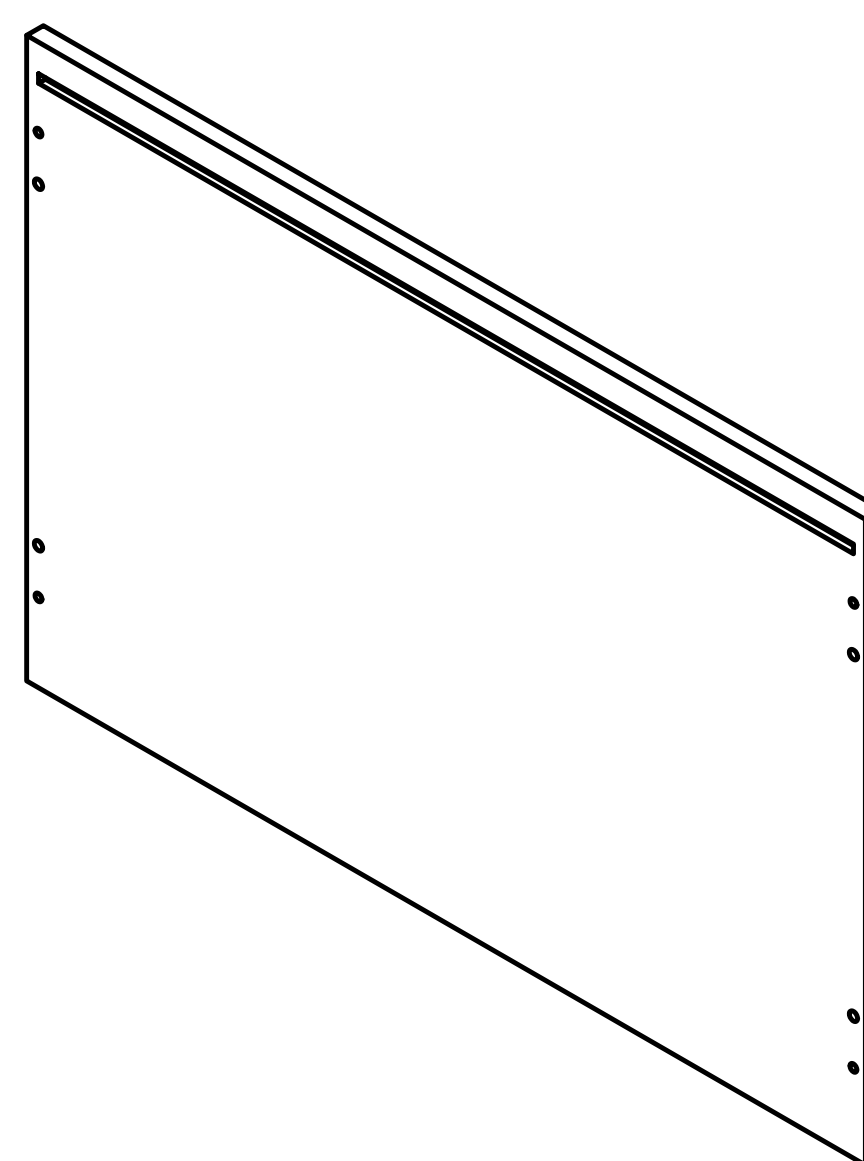


K x1

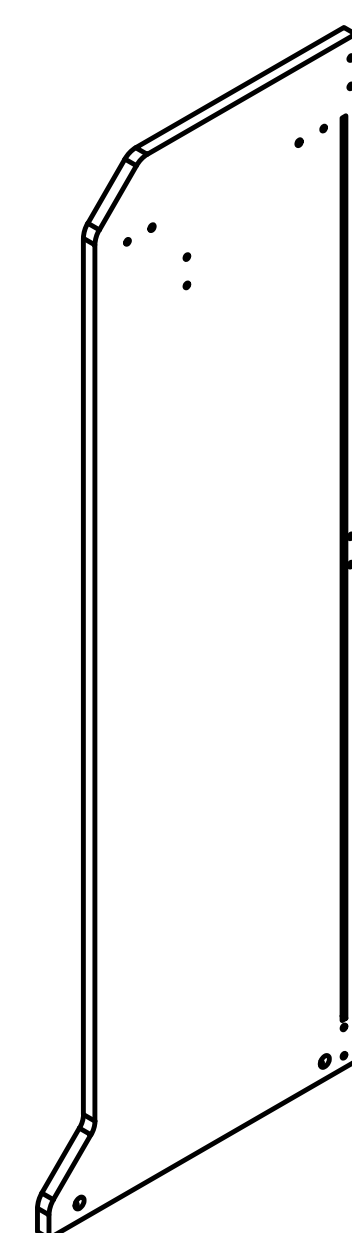


L x1

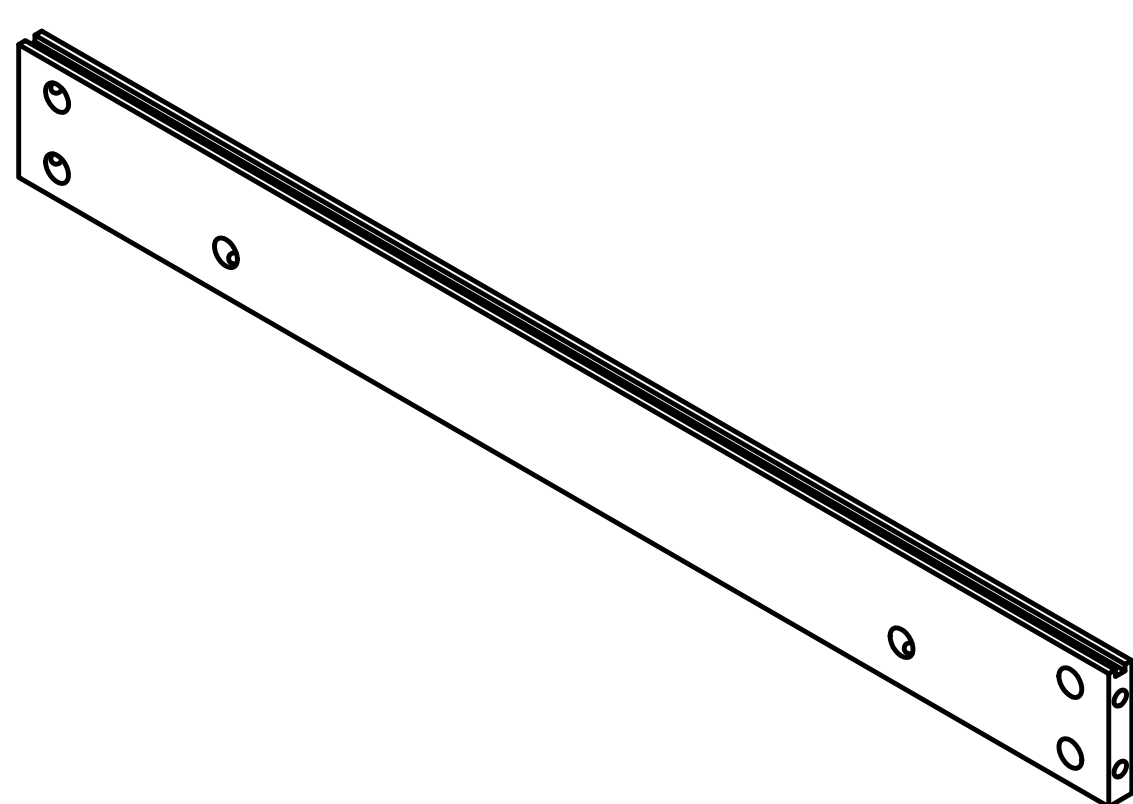


M x1

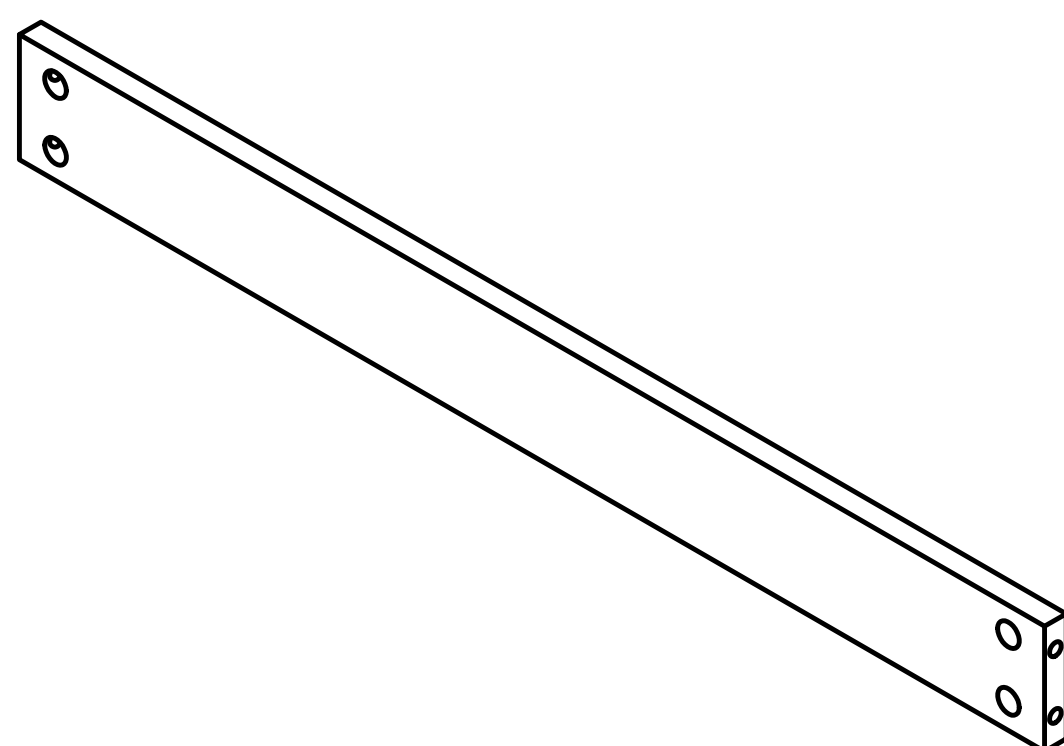


N x1

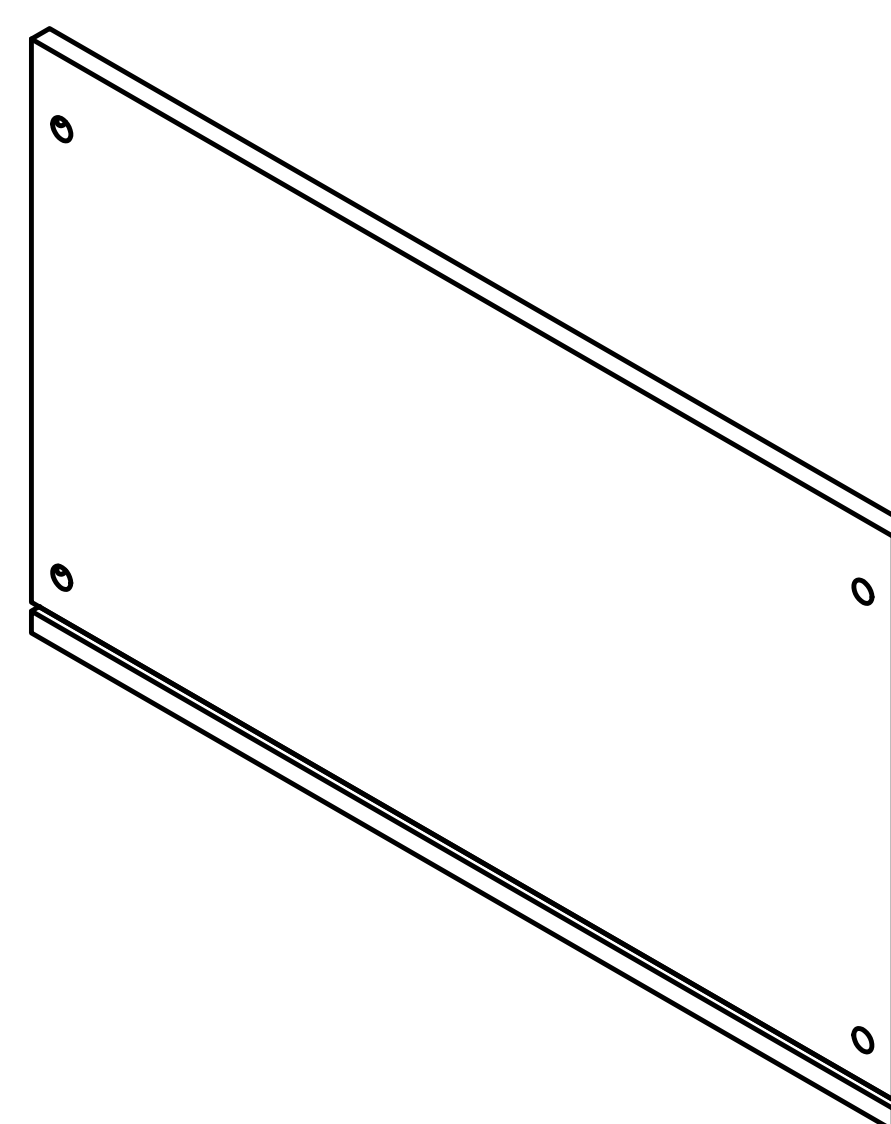


O x1

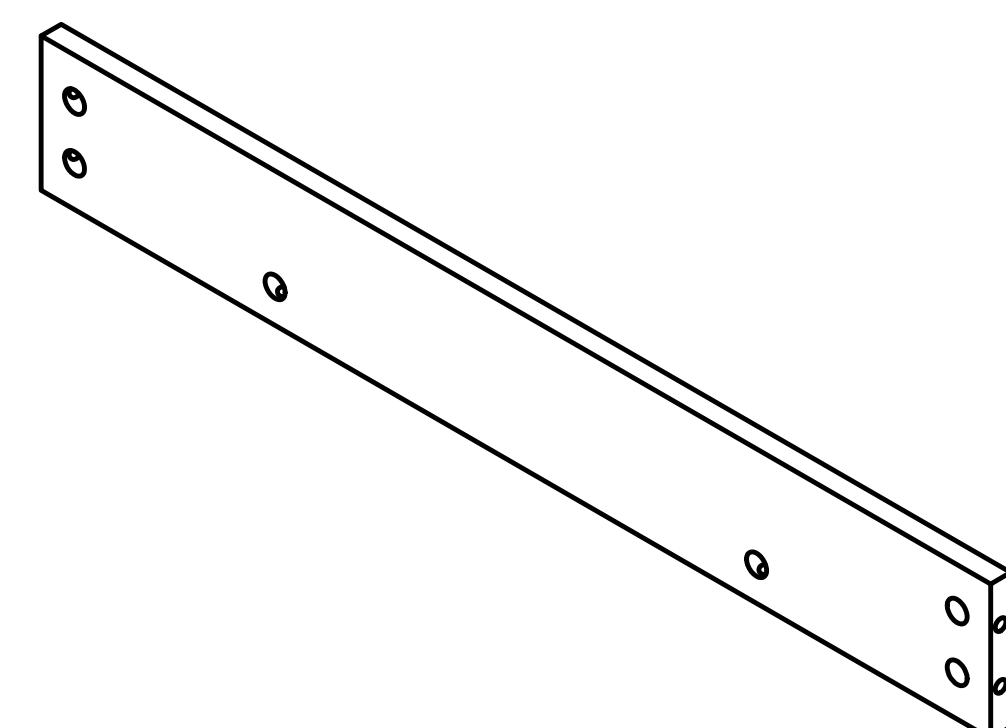


P x1

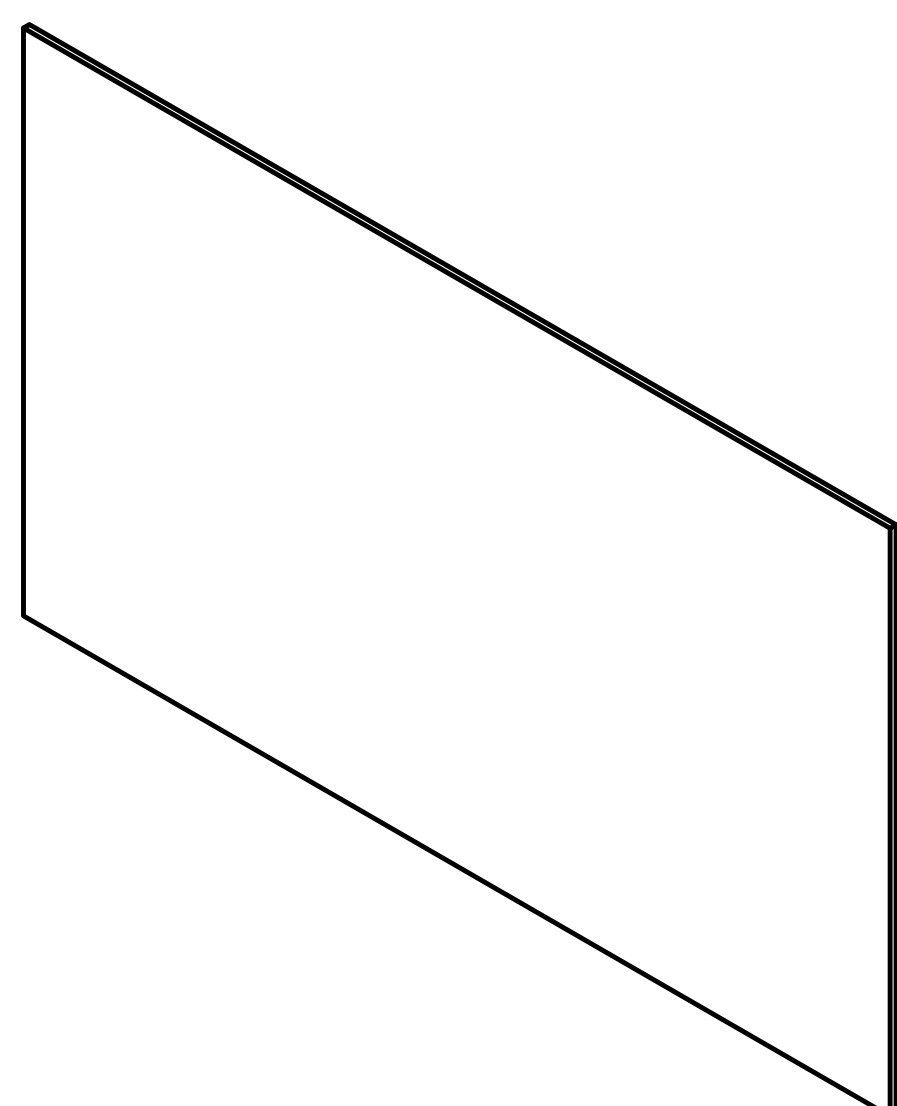


Q x3

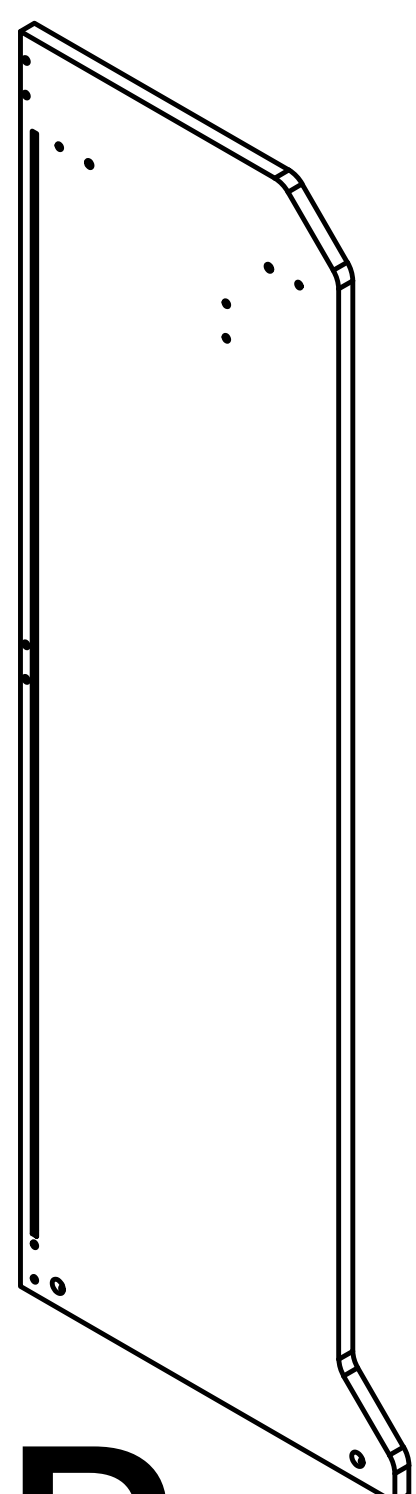


R x1

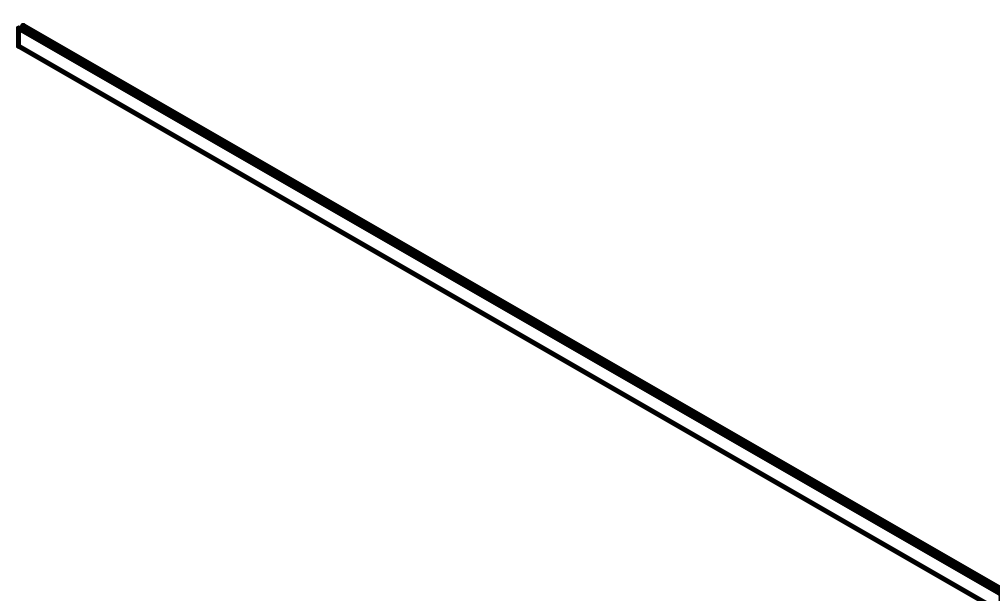

S x3







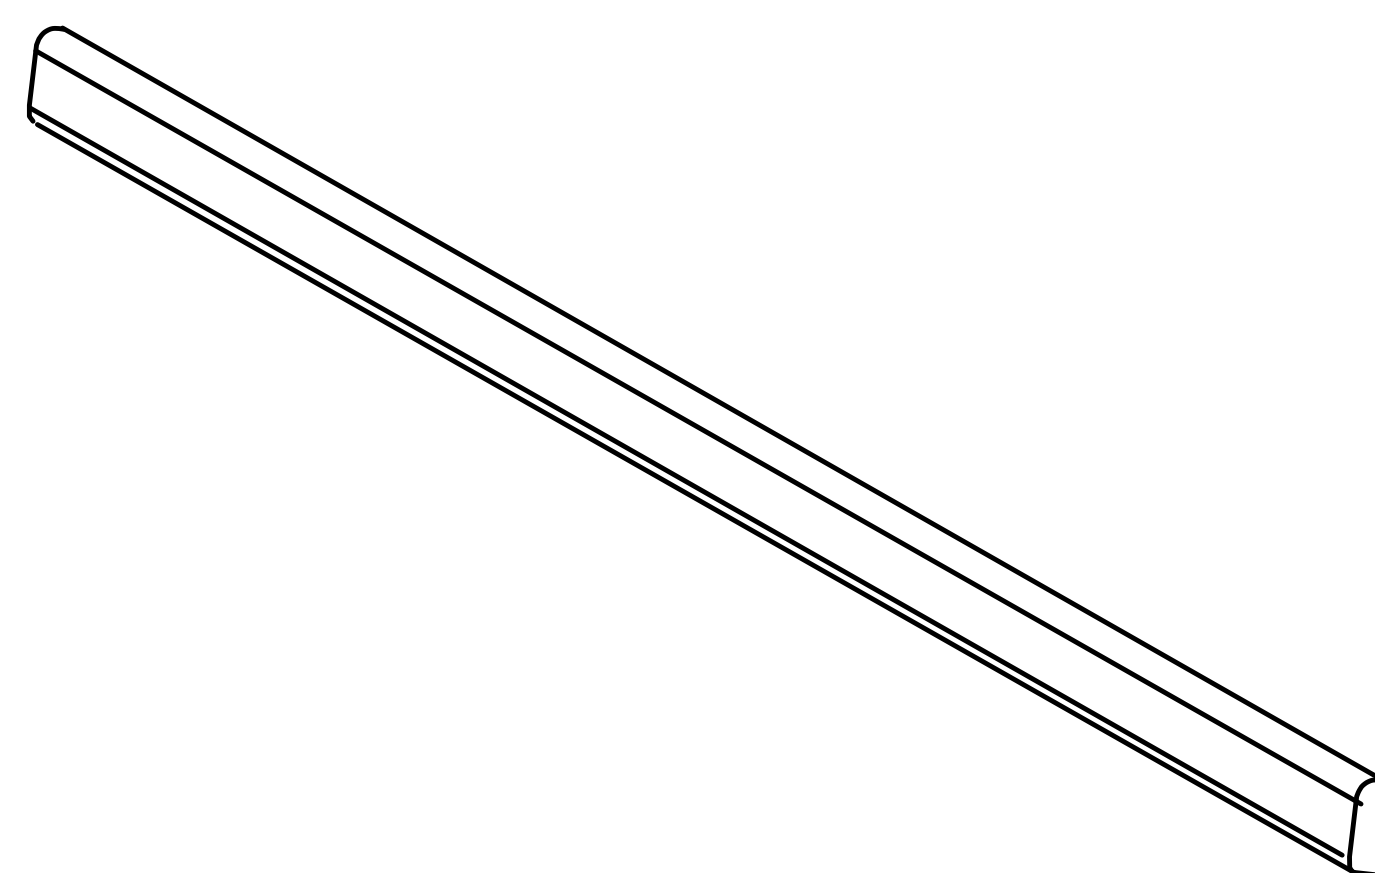



T x1

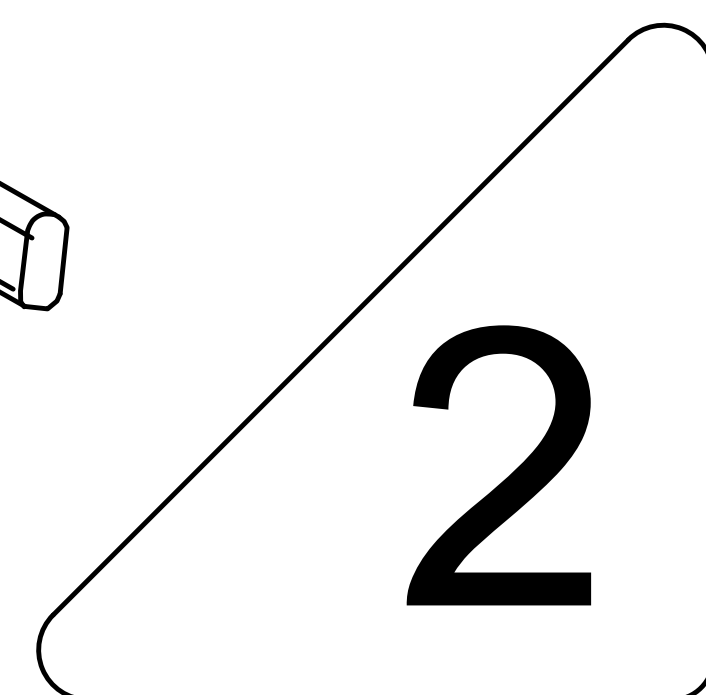


2

# Accessories list
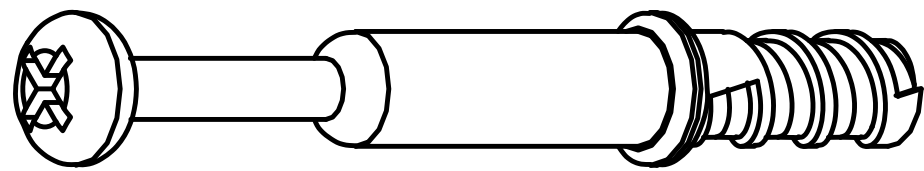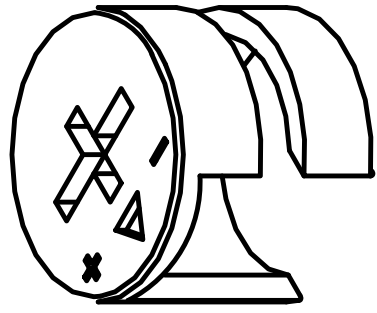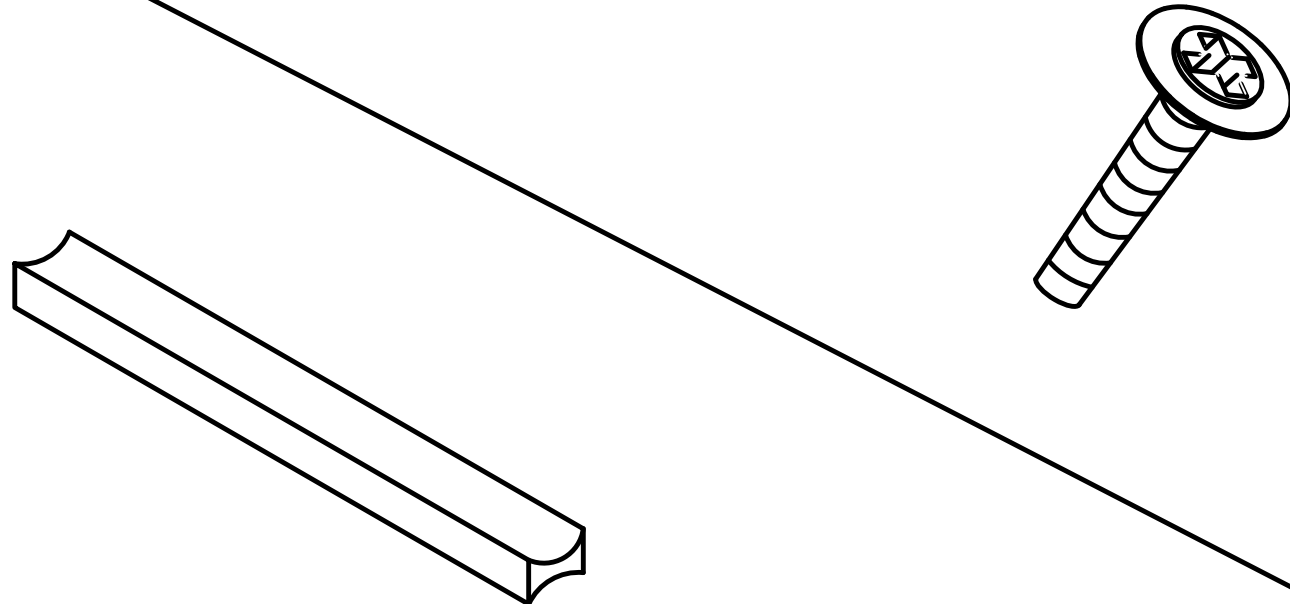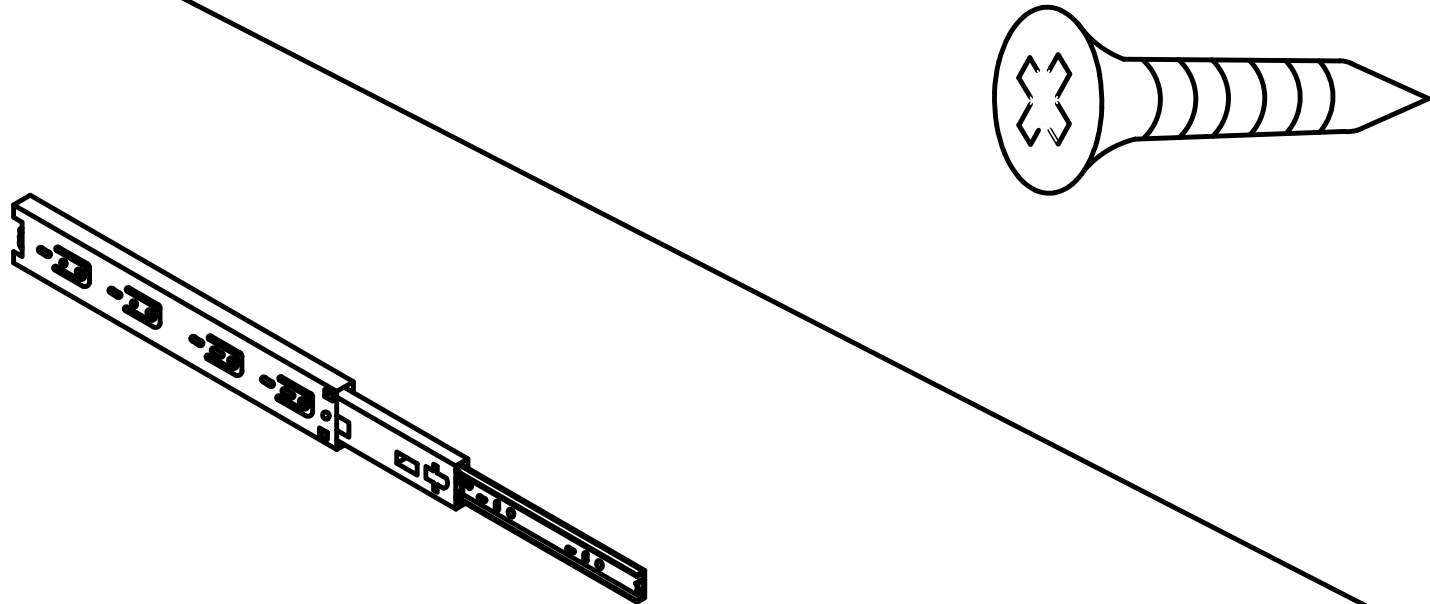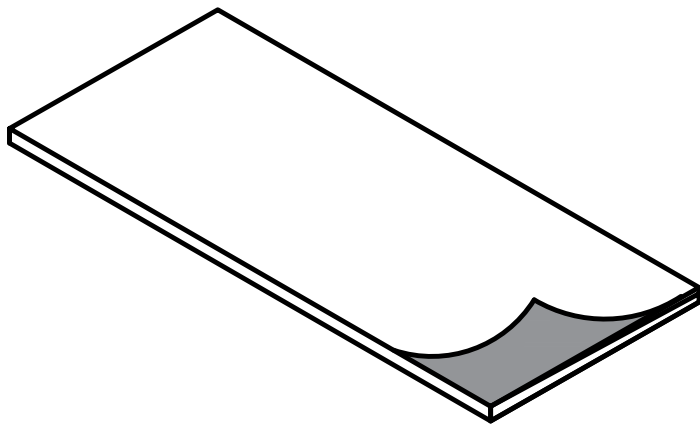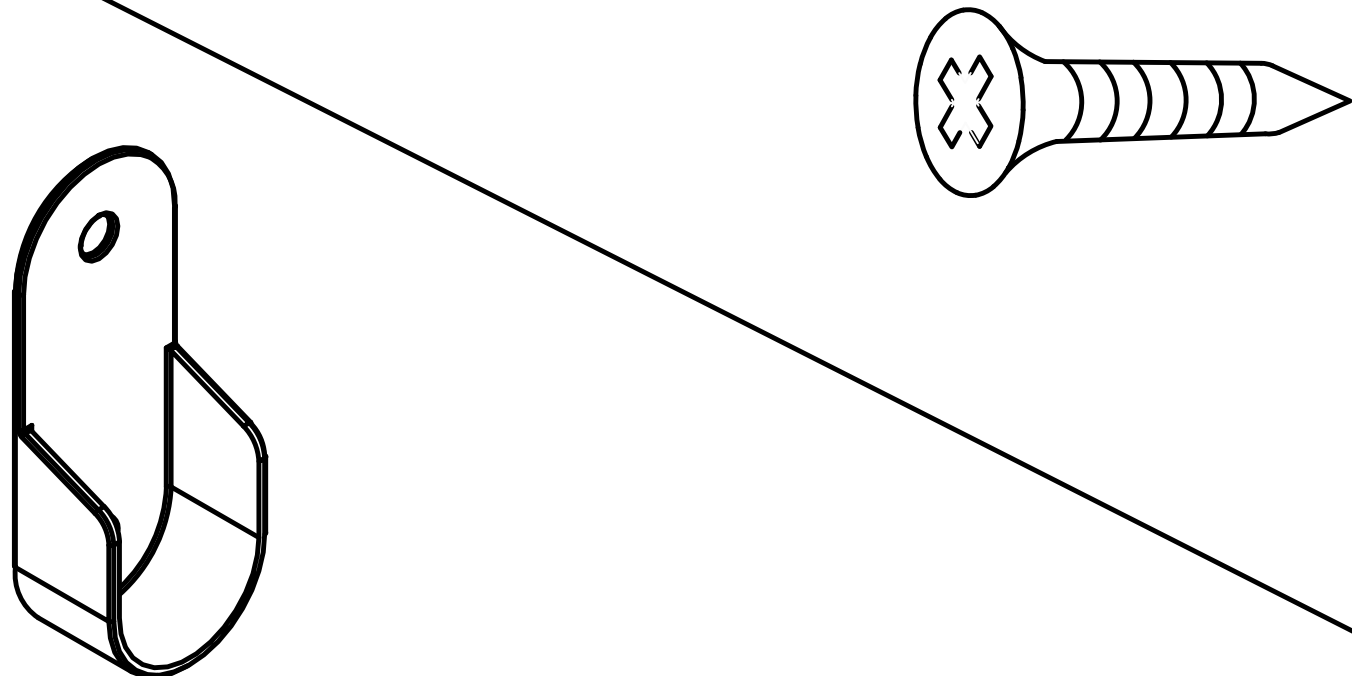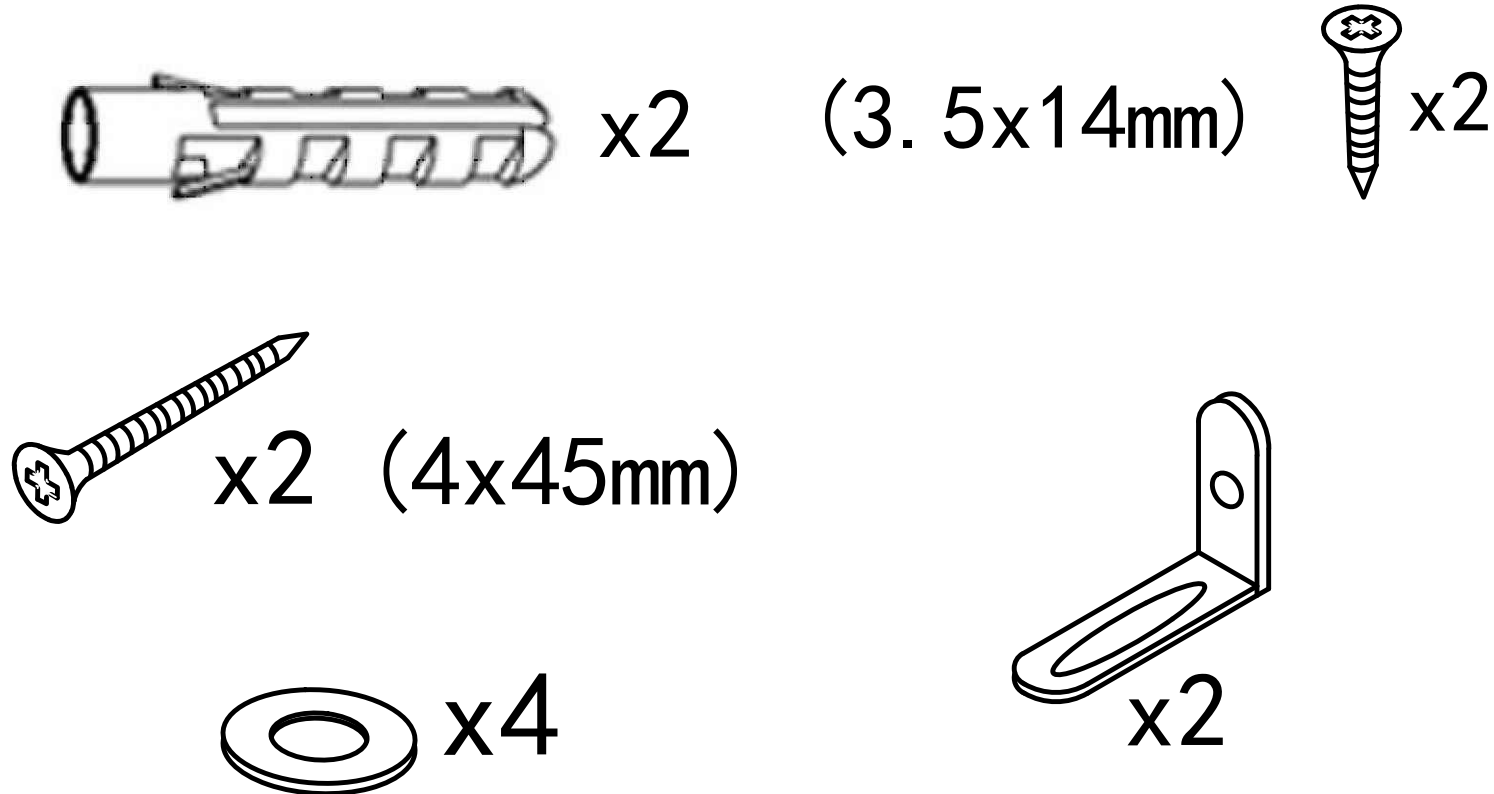
|   |                                                                                     |                                          |                        |
|---|-------------------------------------------------------------------------------------|------------------------------------------|------------------------|
| ① |    | Two In One Screw<br>(6x28mm)             | 78pcs<br>+7pcs         |
| ② |    | Two In One Nut<br>(10x12mm)              | 78pcs<br>+7pcs         |
| ③ |    | Wood Chipping<br>(6x30mm)                | 16pcs<br>+4pcs         |
| ④ |   | Handle & Screw<br>(4x16mm)               | 6pcs<br>+1pcs<br>3pcs  |
| ⑤ |  | Guide rails & screws<br>(3x12mm)<br>29cm | 30pcs<br>+6pcs<br>6pcs |
| ⑥ |  | Non-slip pads<br>(50x10mm)               | 4pcs<br>+2pcs          |
| ⑦ |  | Clothes Rod Hook & Screw<br>(3.5x14mm)   | 4pcs<br>+2pcs<br>2pcs  |
| ⑧ |  | Fixing clip & screw<br>(3x16mm)          | 15pcs<br>+2pcs         |
| ⑨ |  | Anti Fall Hardware                       | 1pcs                   |

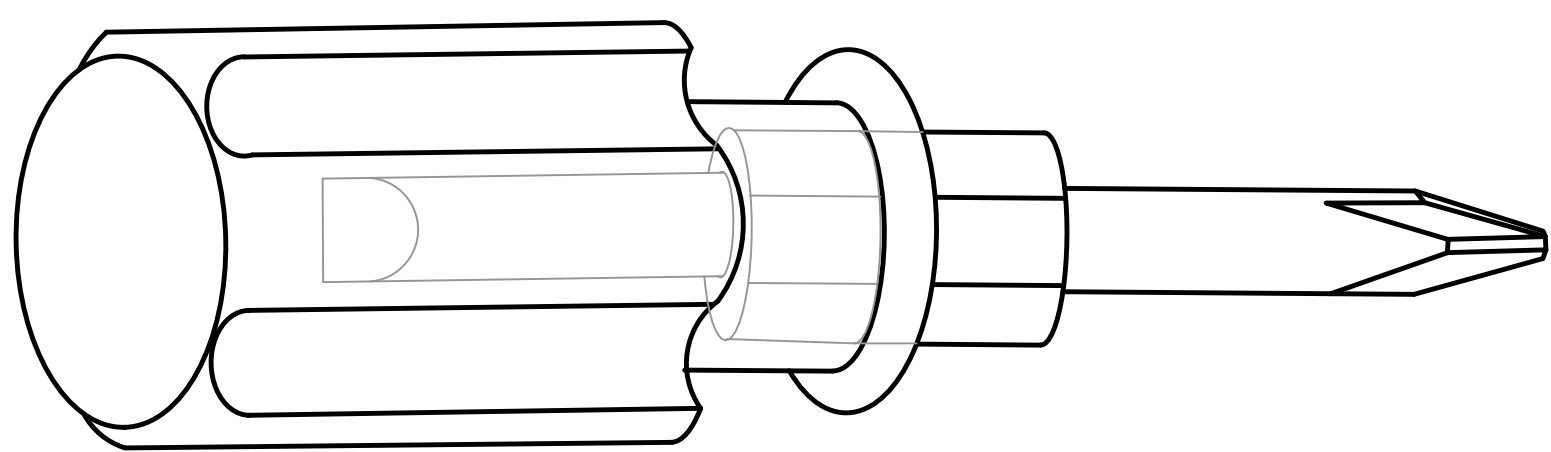


1pcs

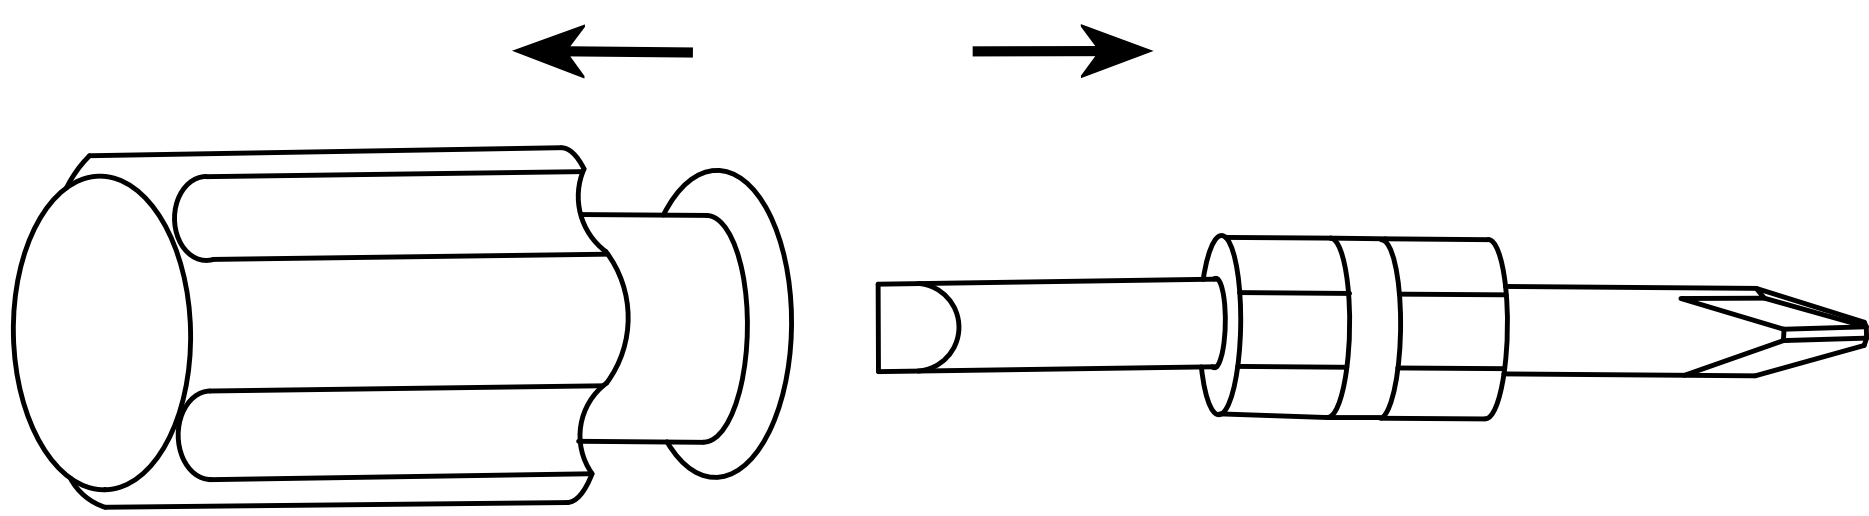

Double-head screwdriver, use as required




# Product structure decomposition

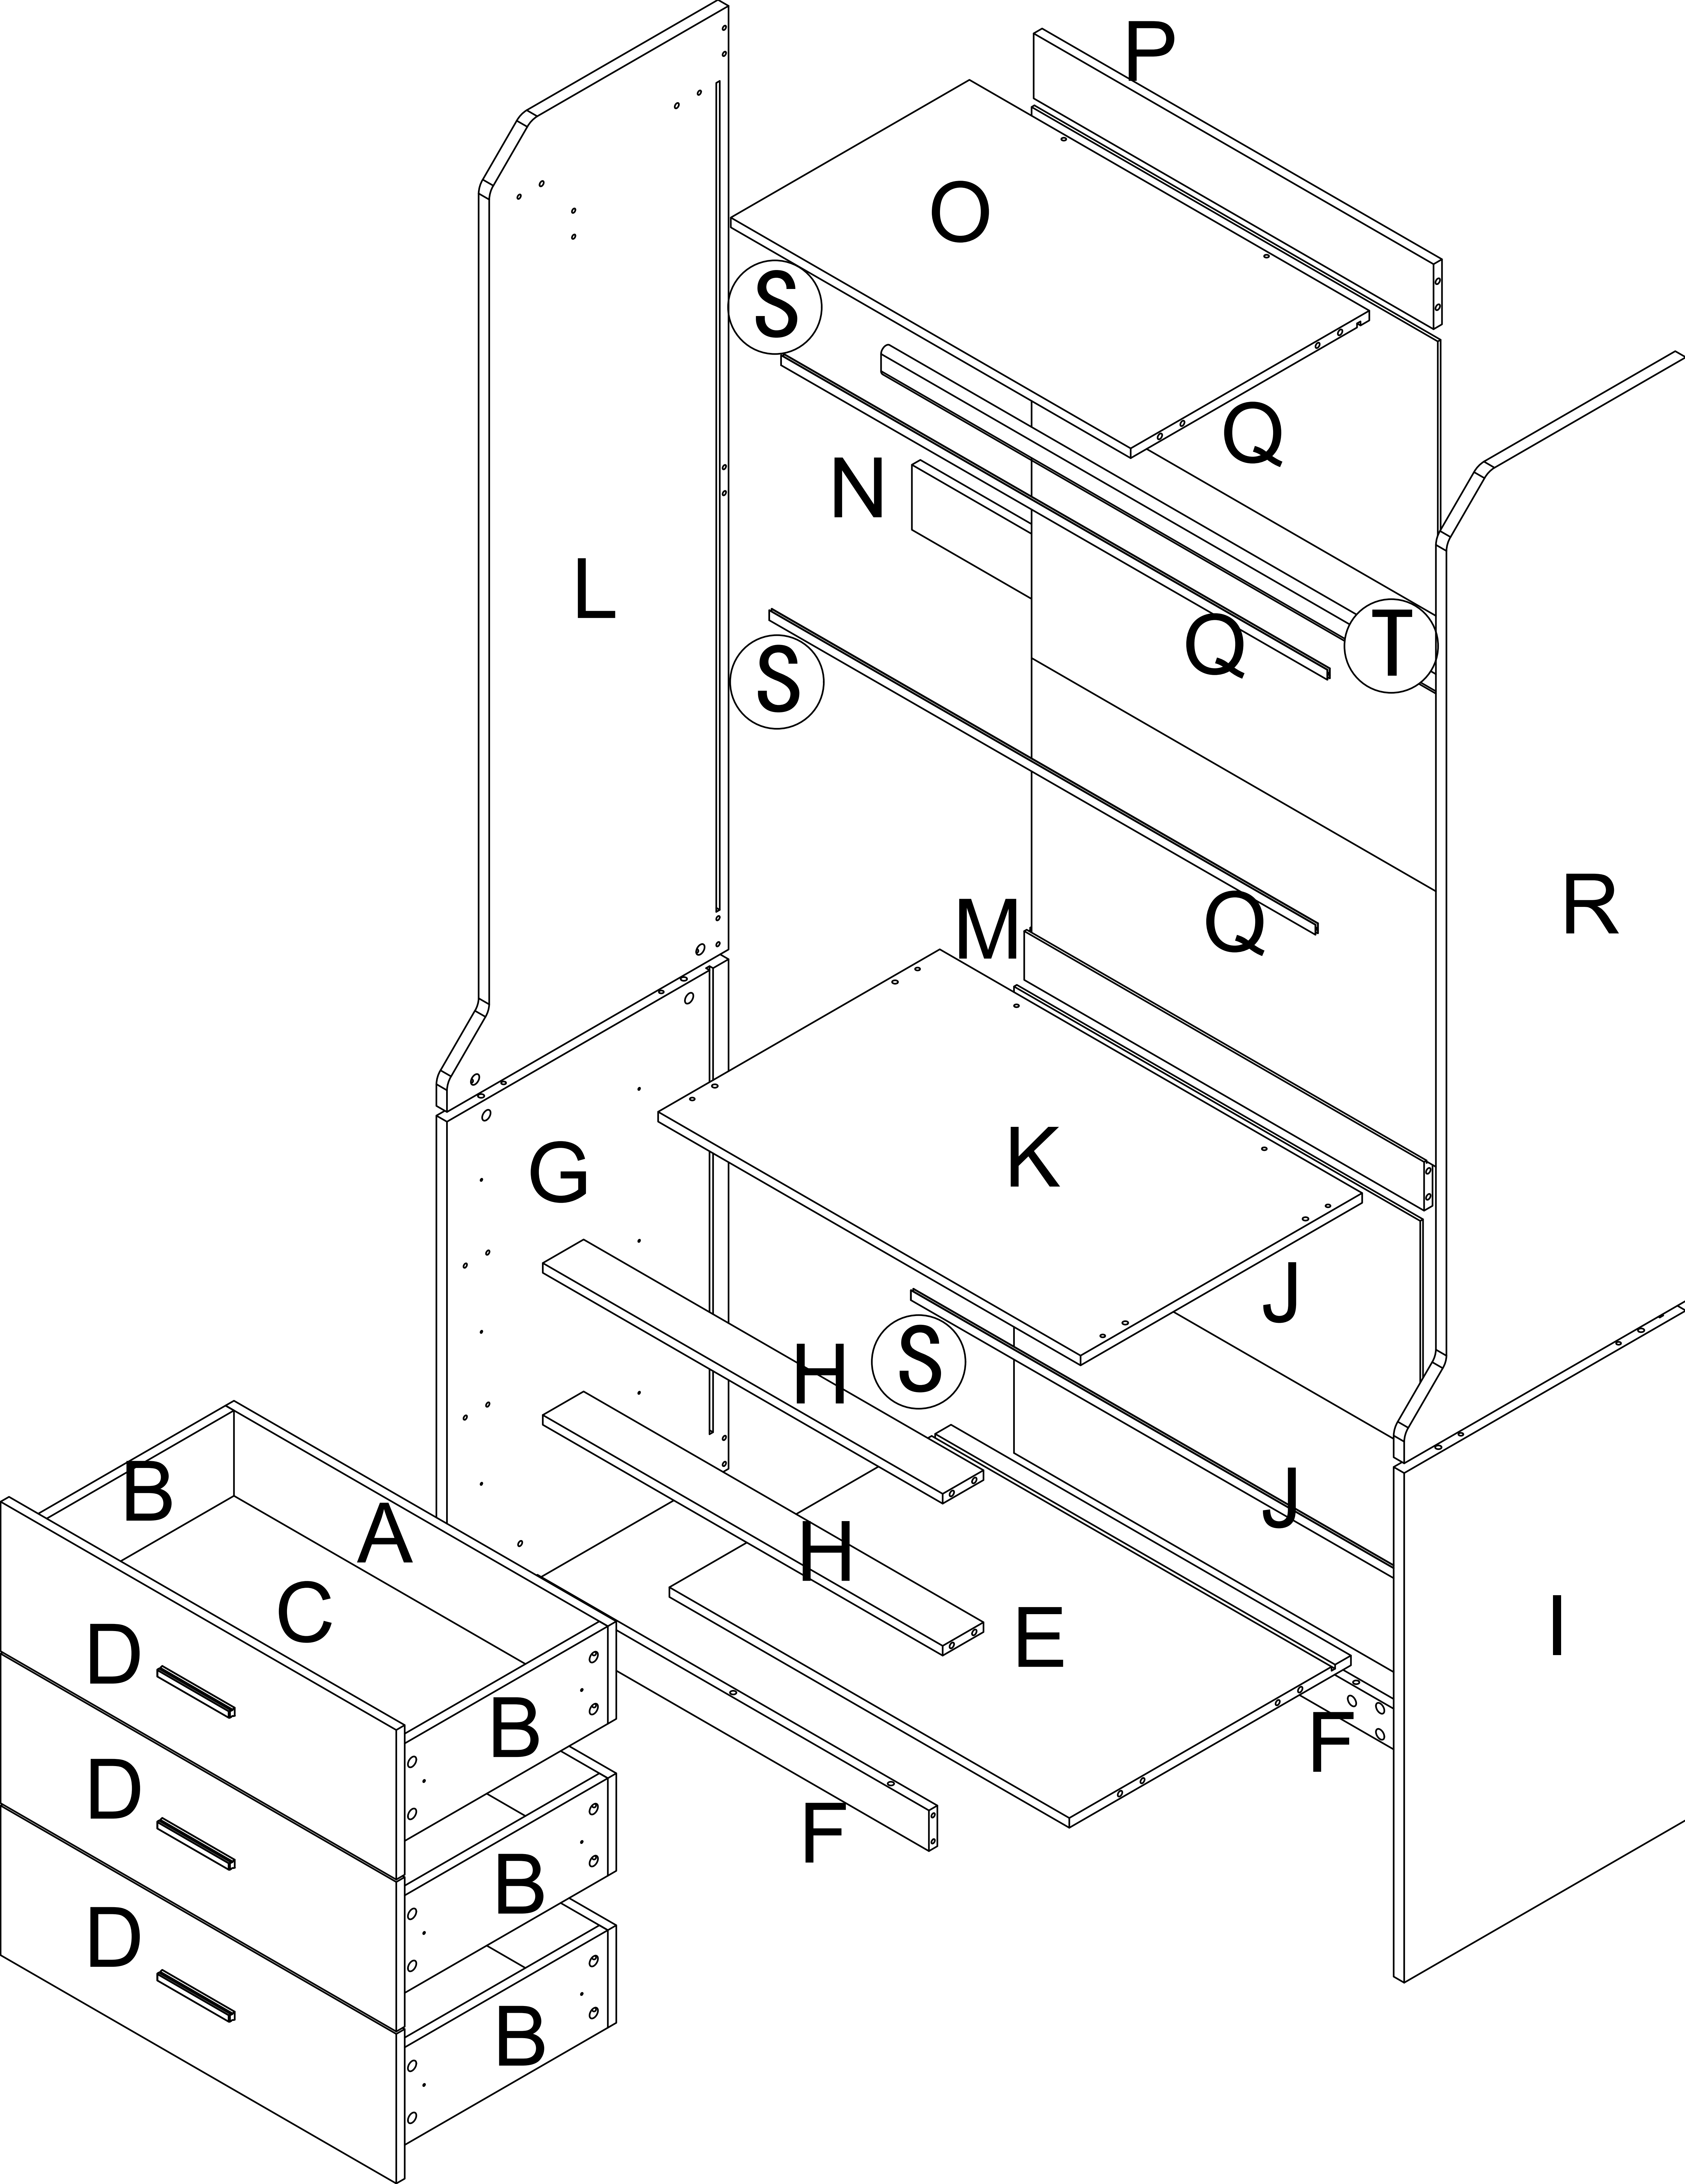


Use parts ① and ②




Step1

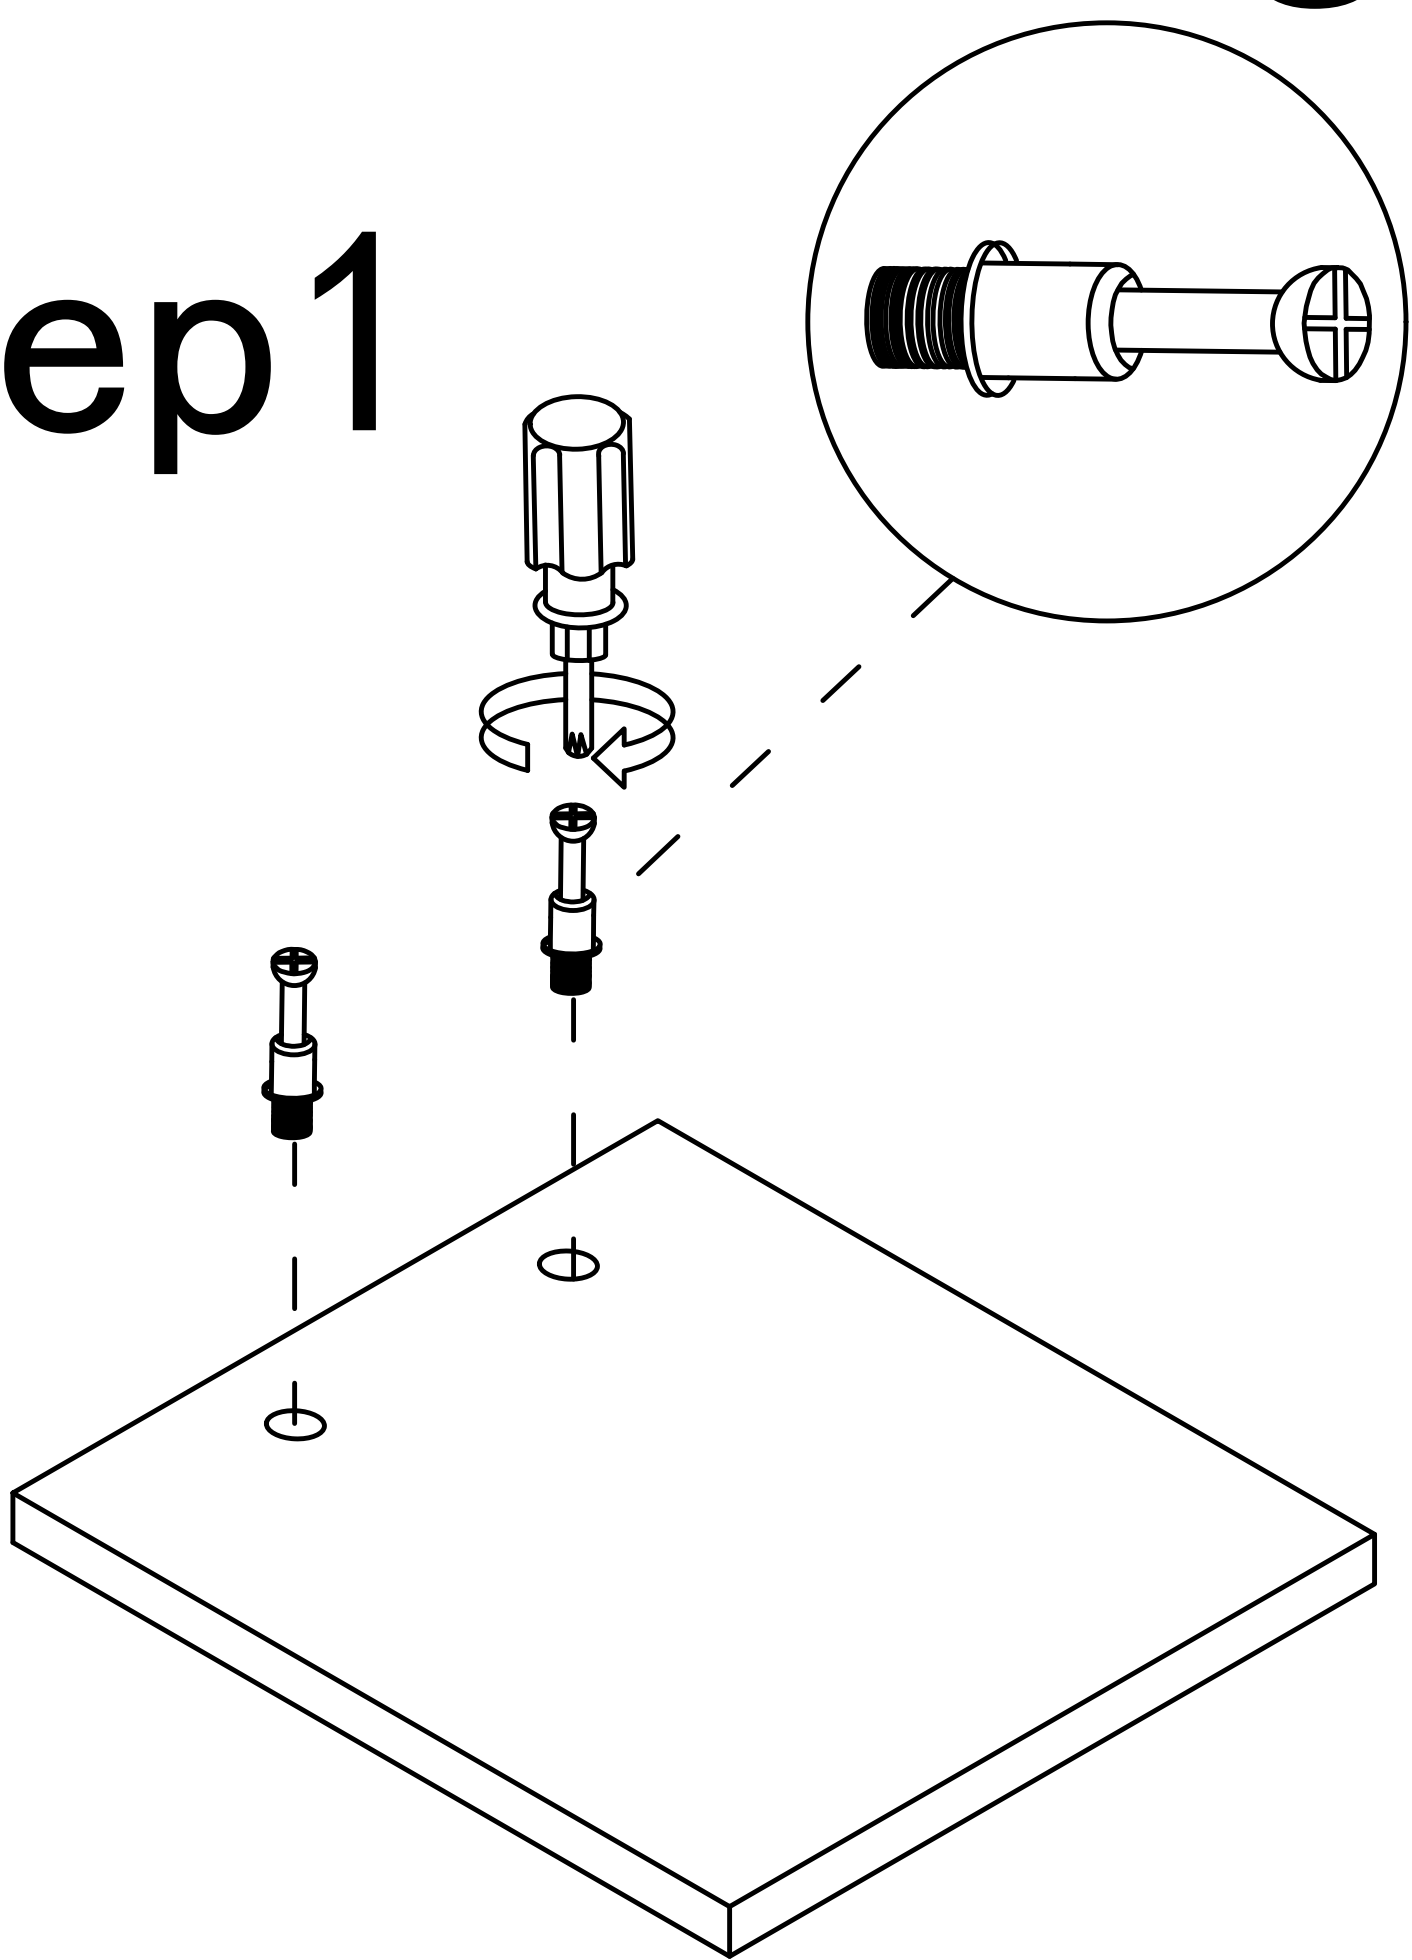

Step2

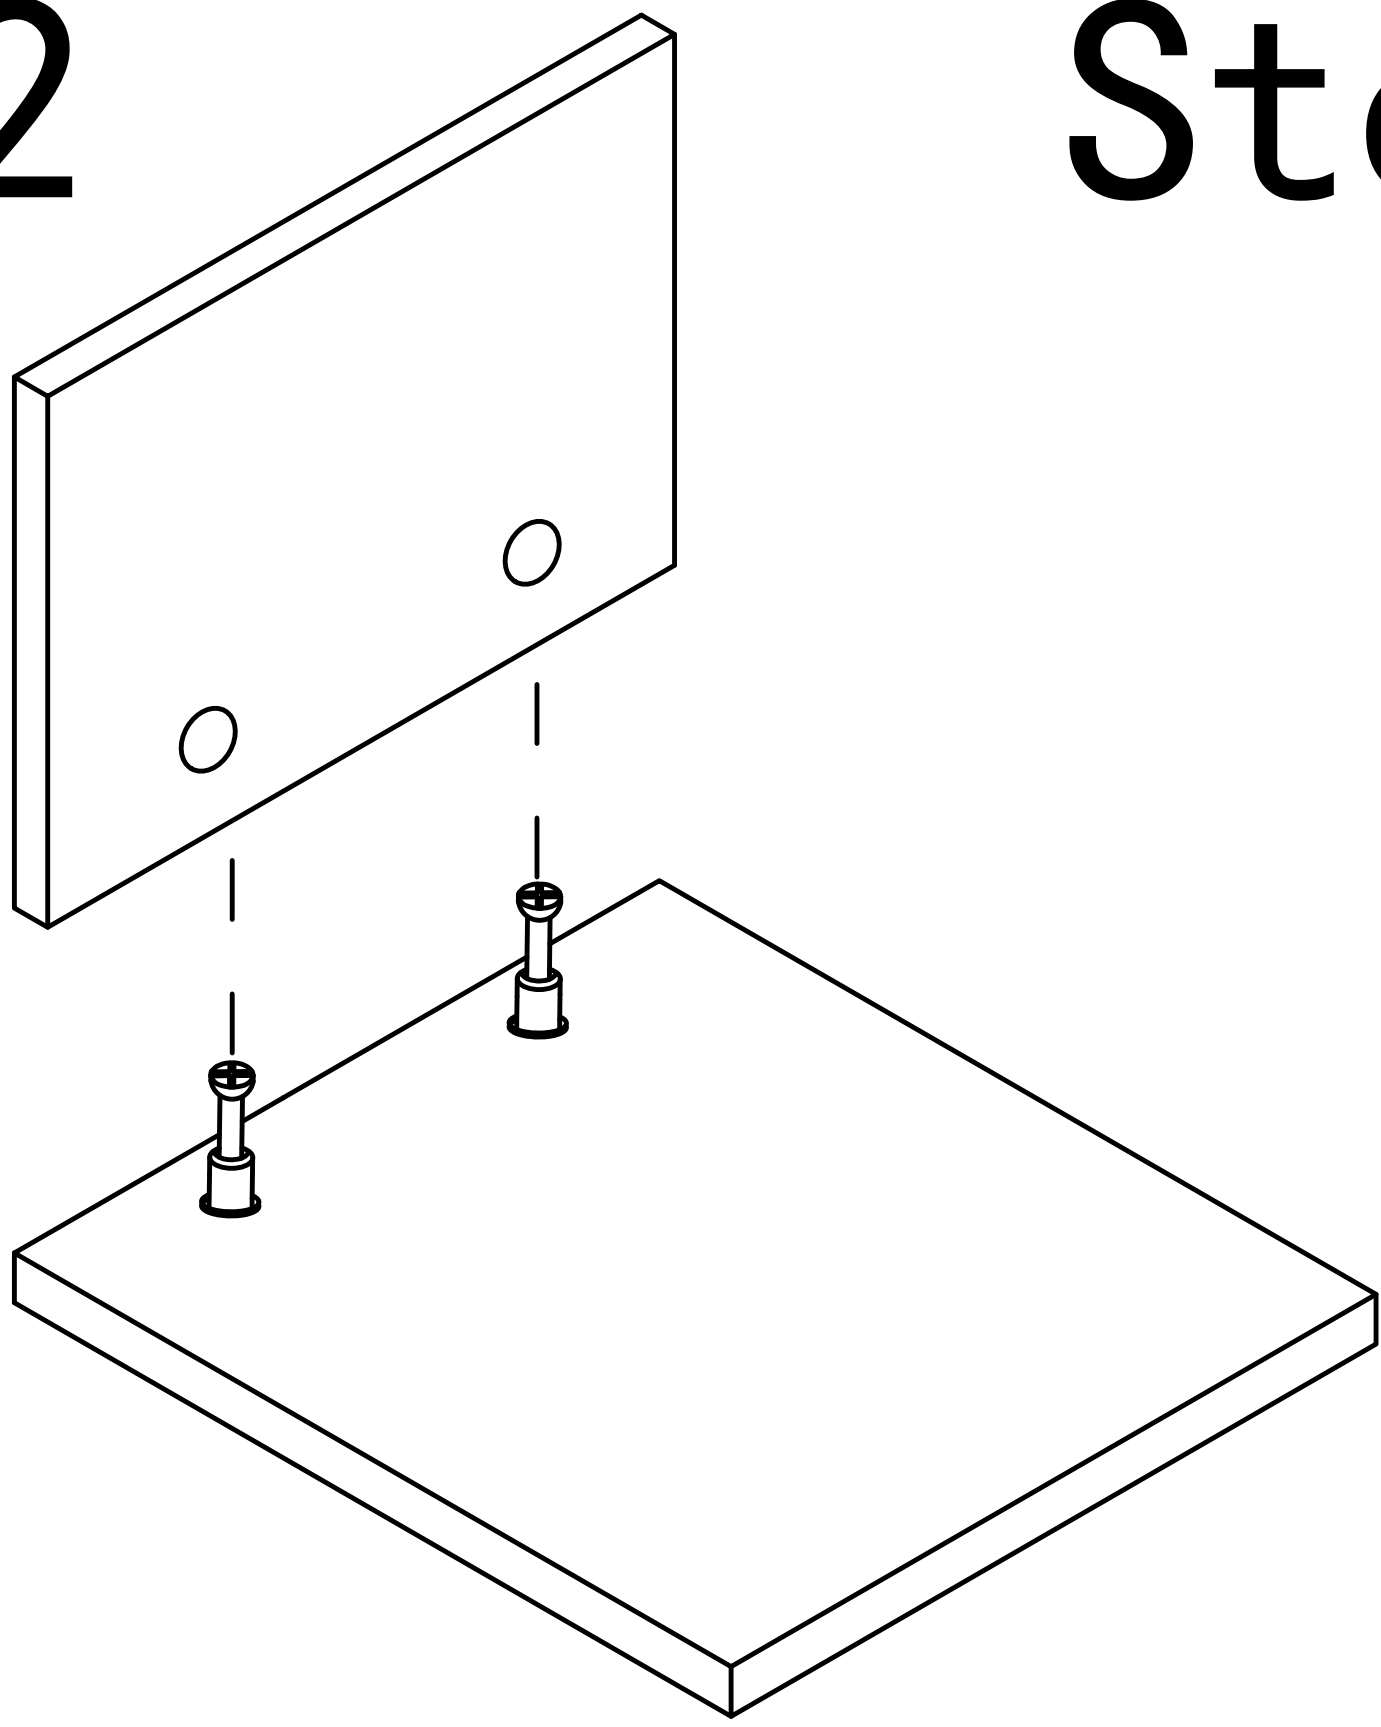



Step3

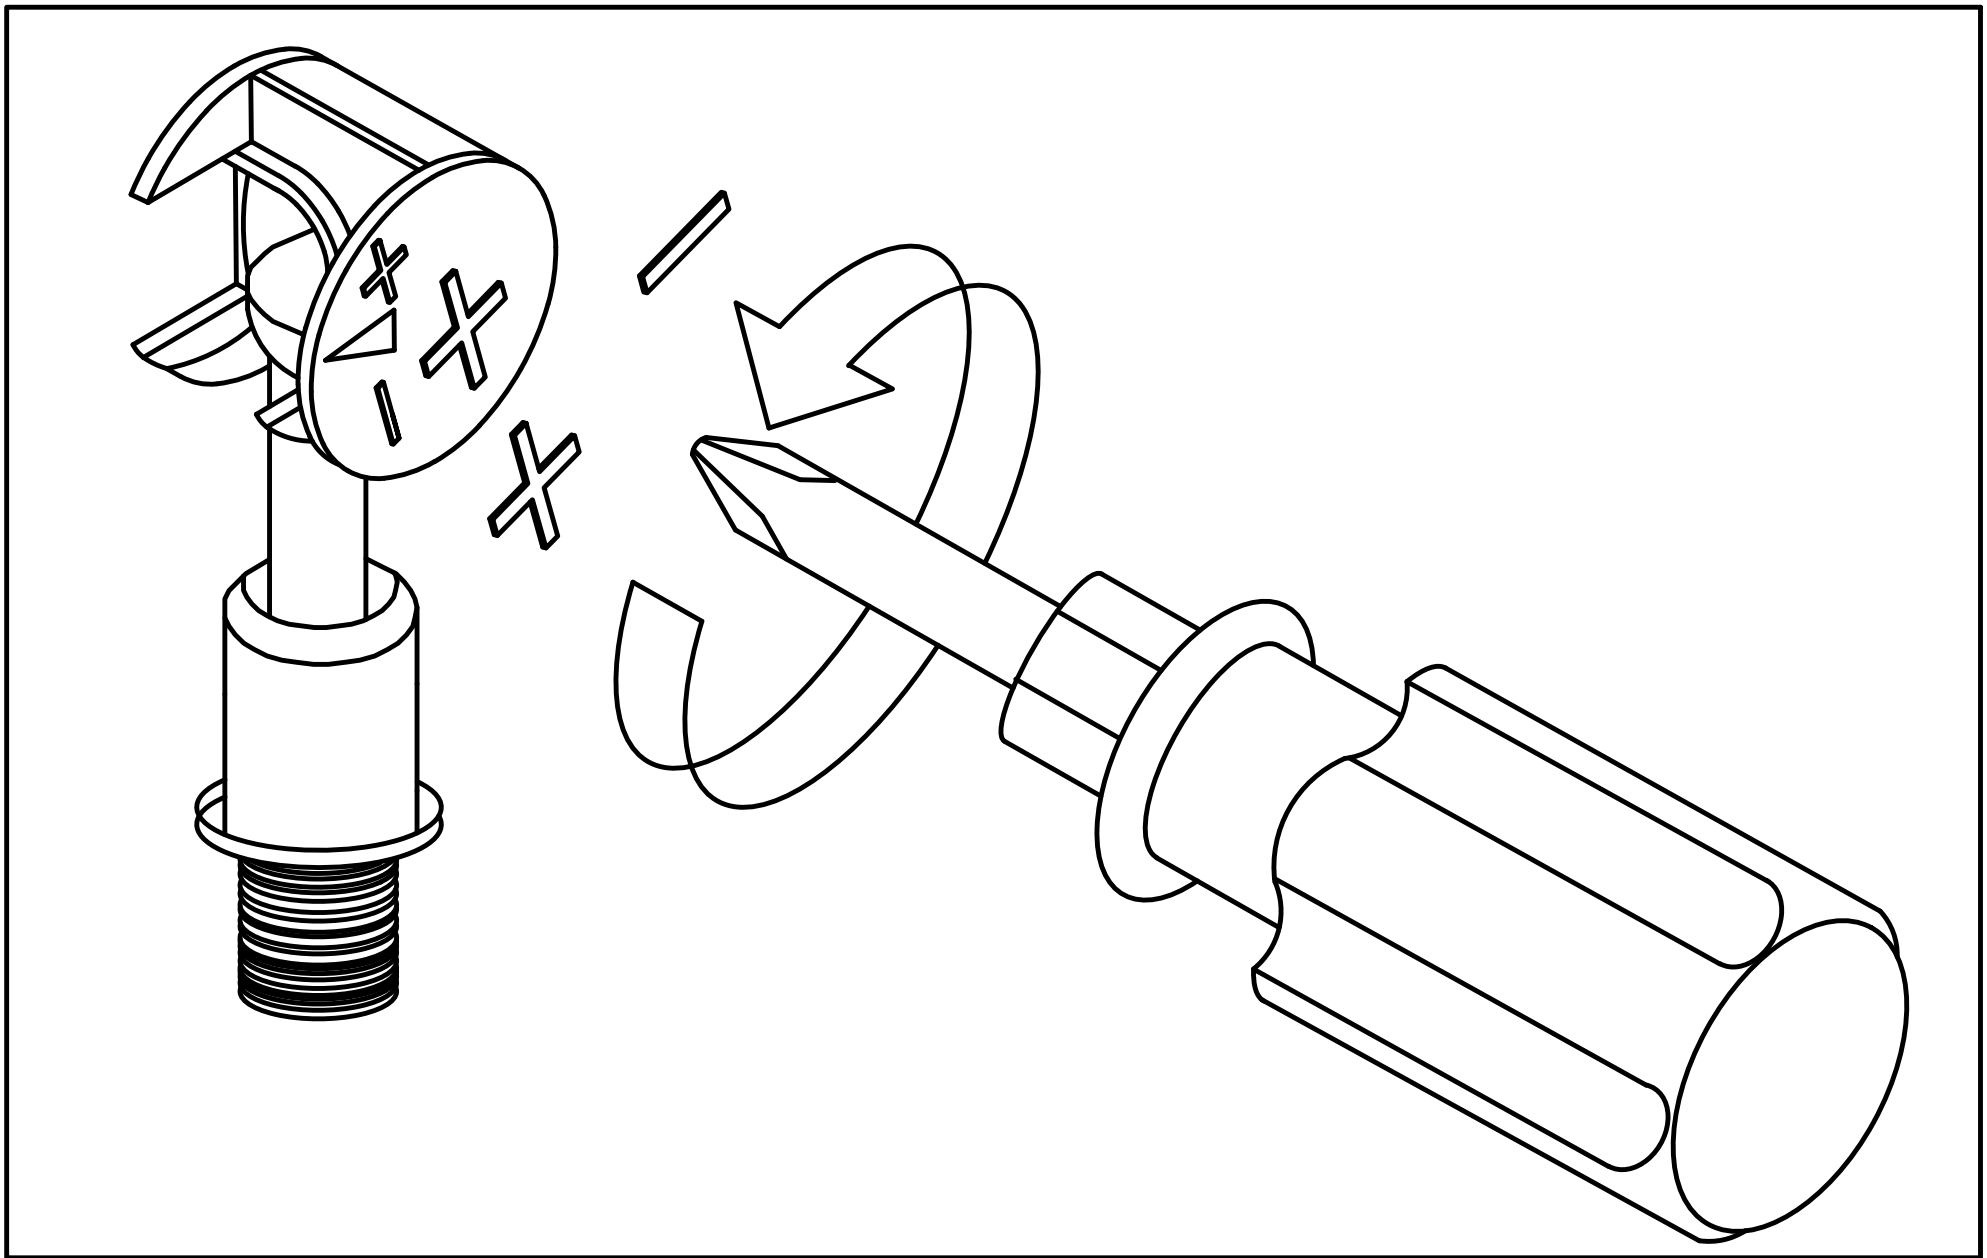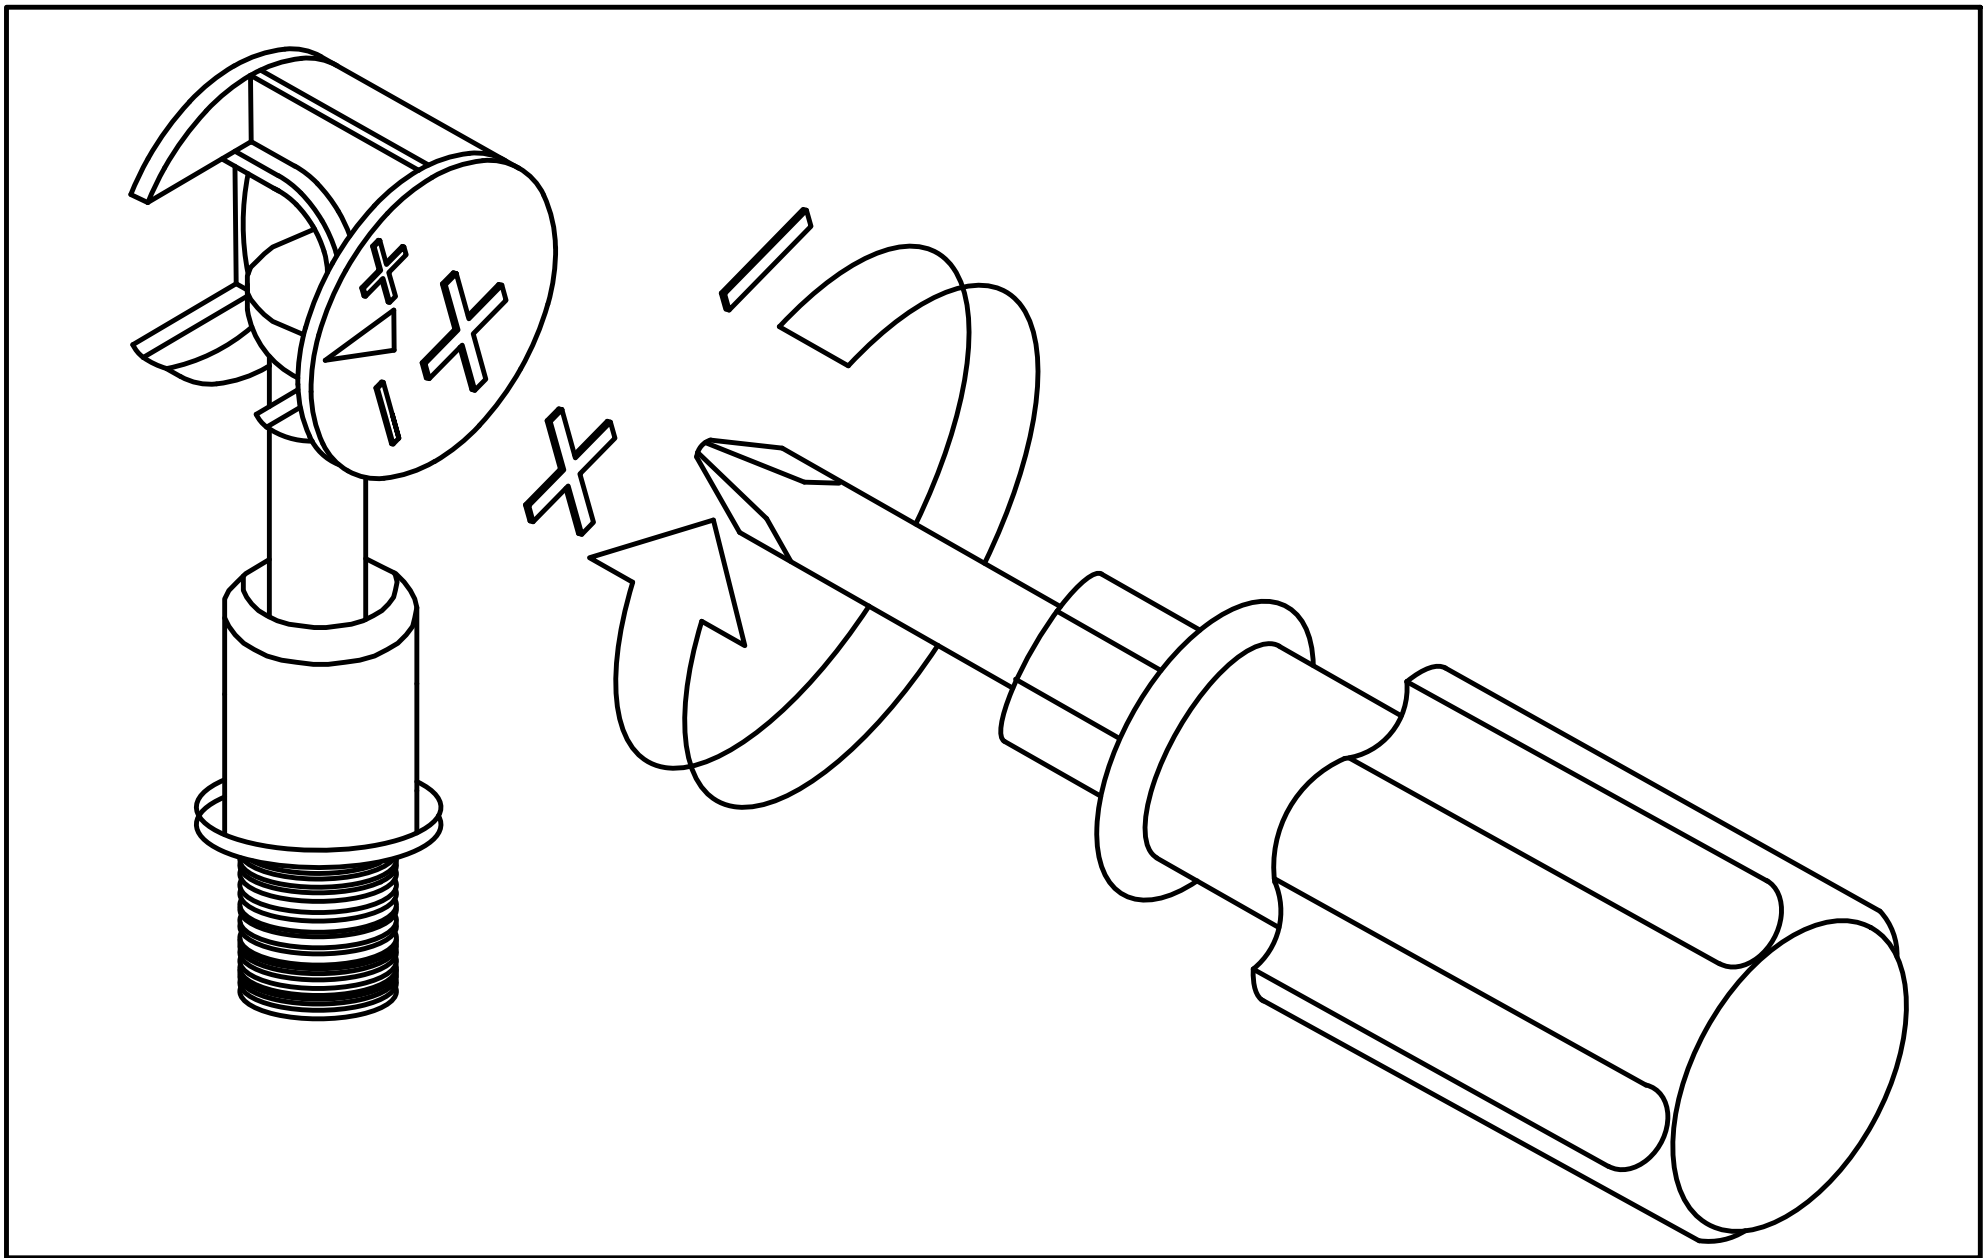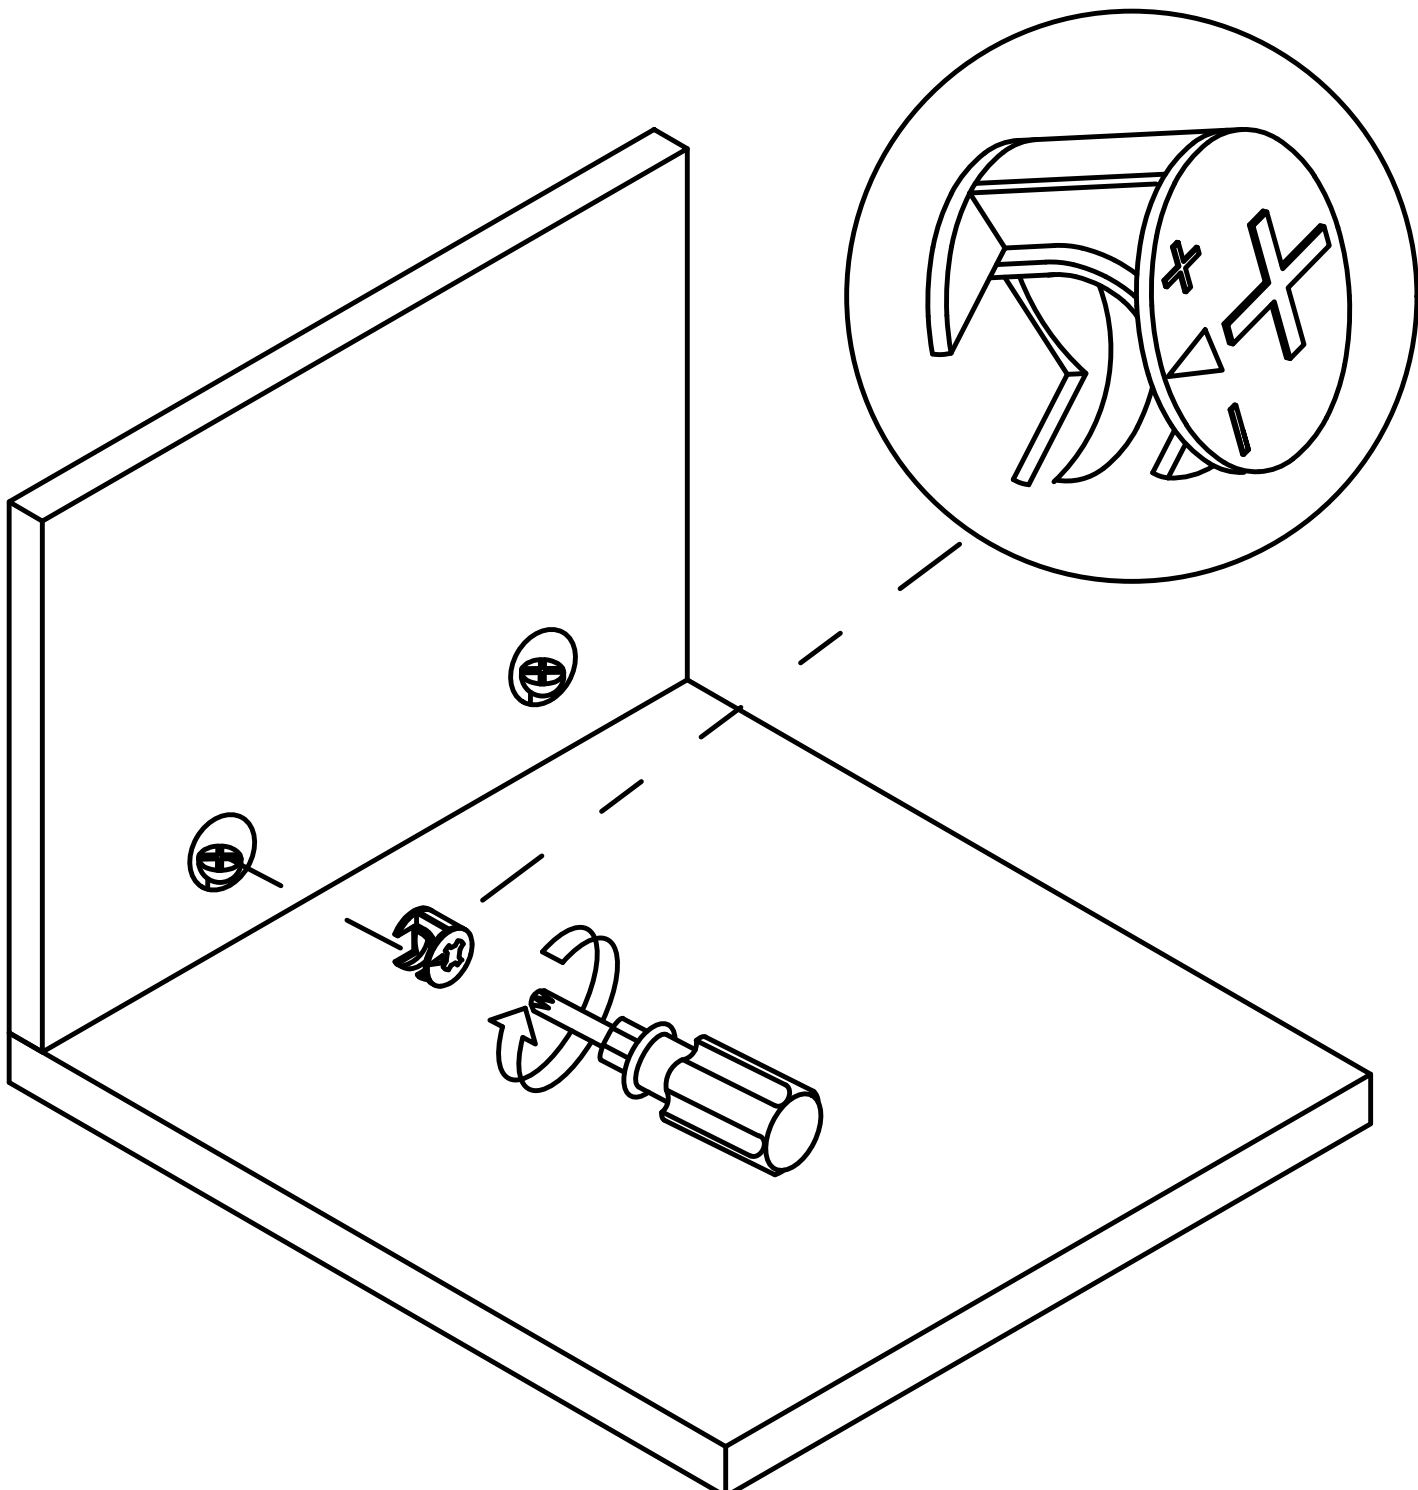


Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign



Step 1

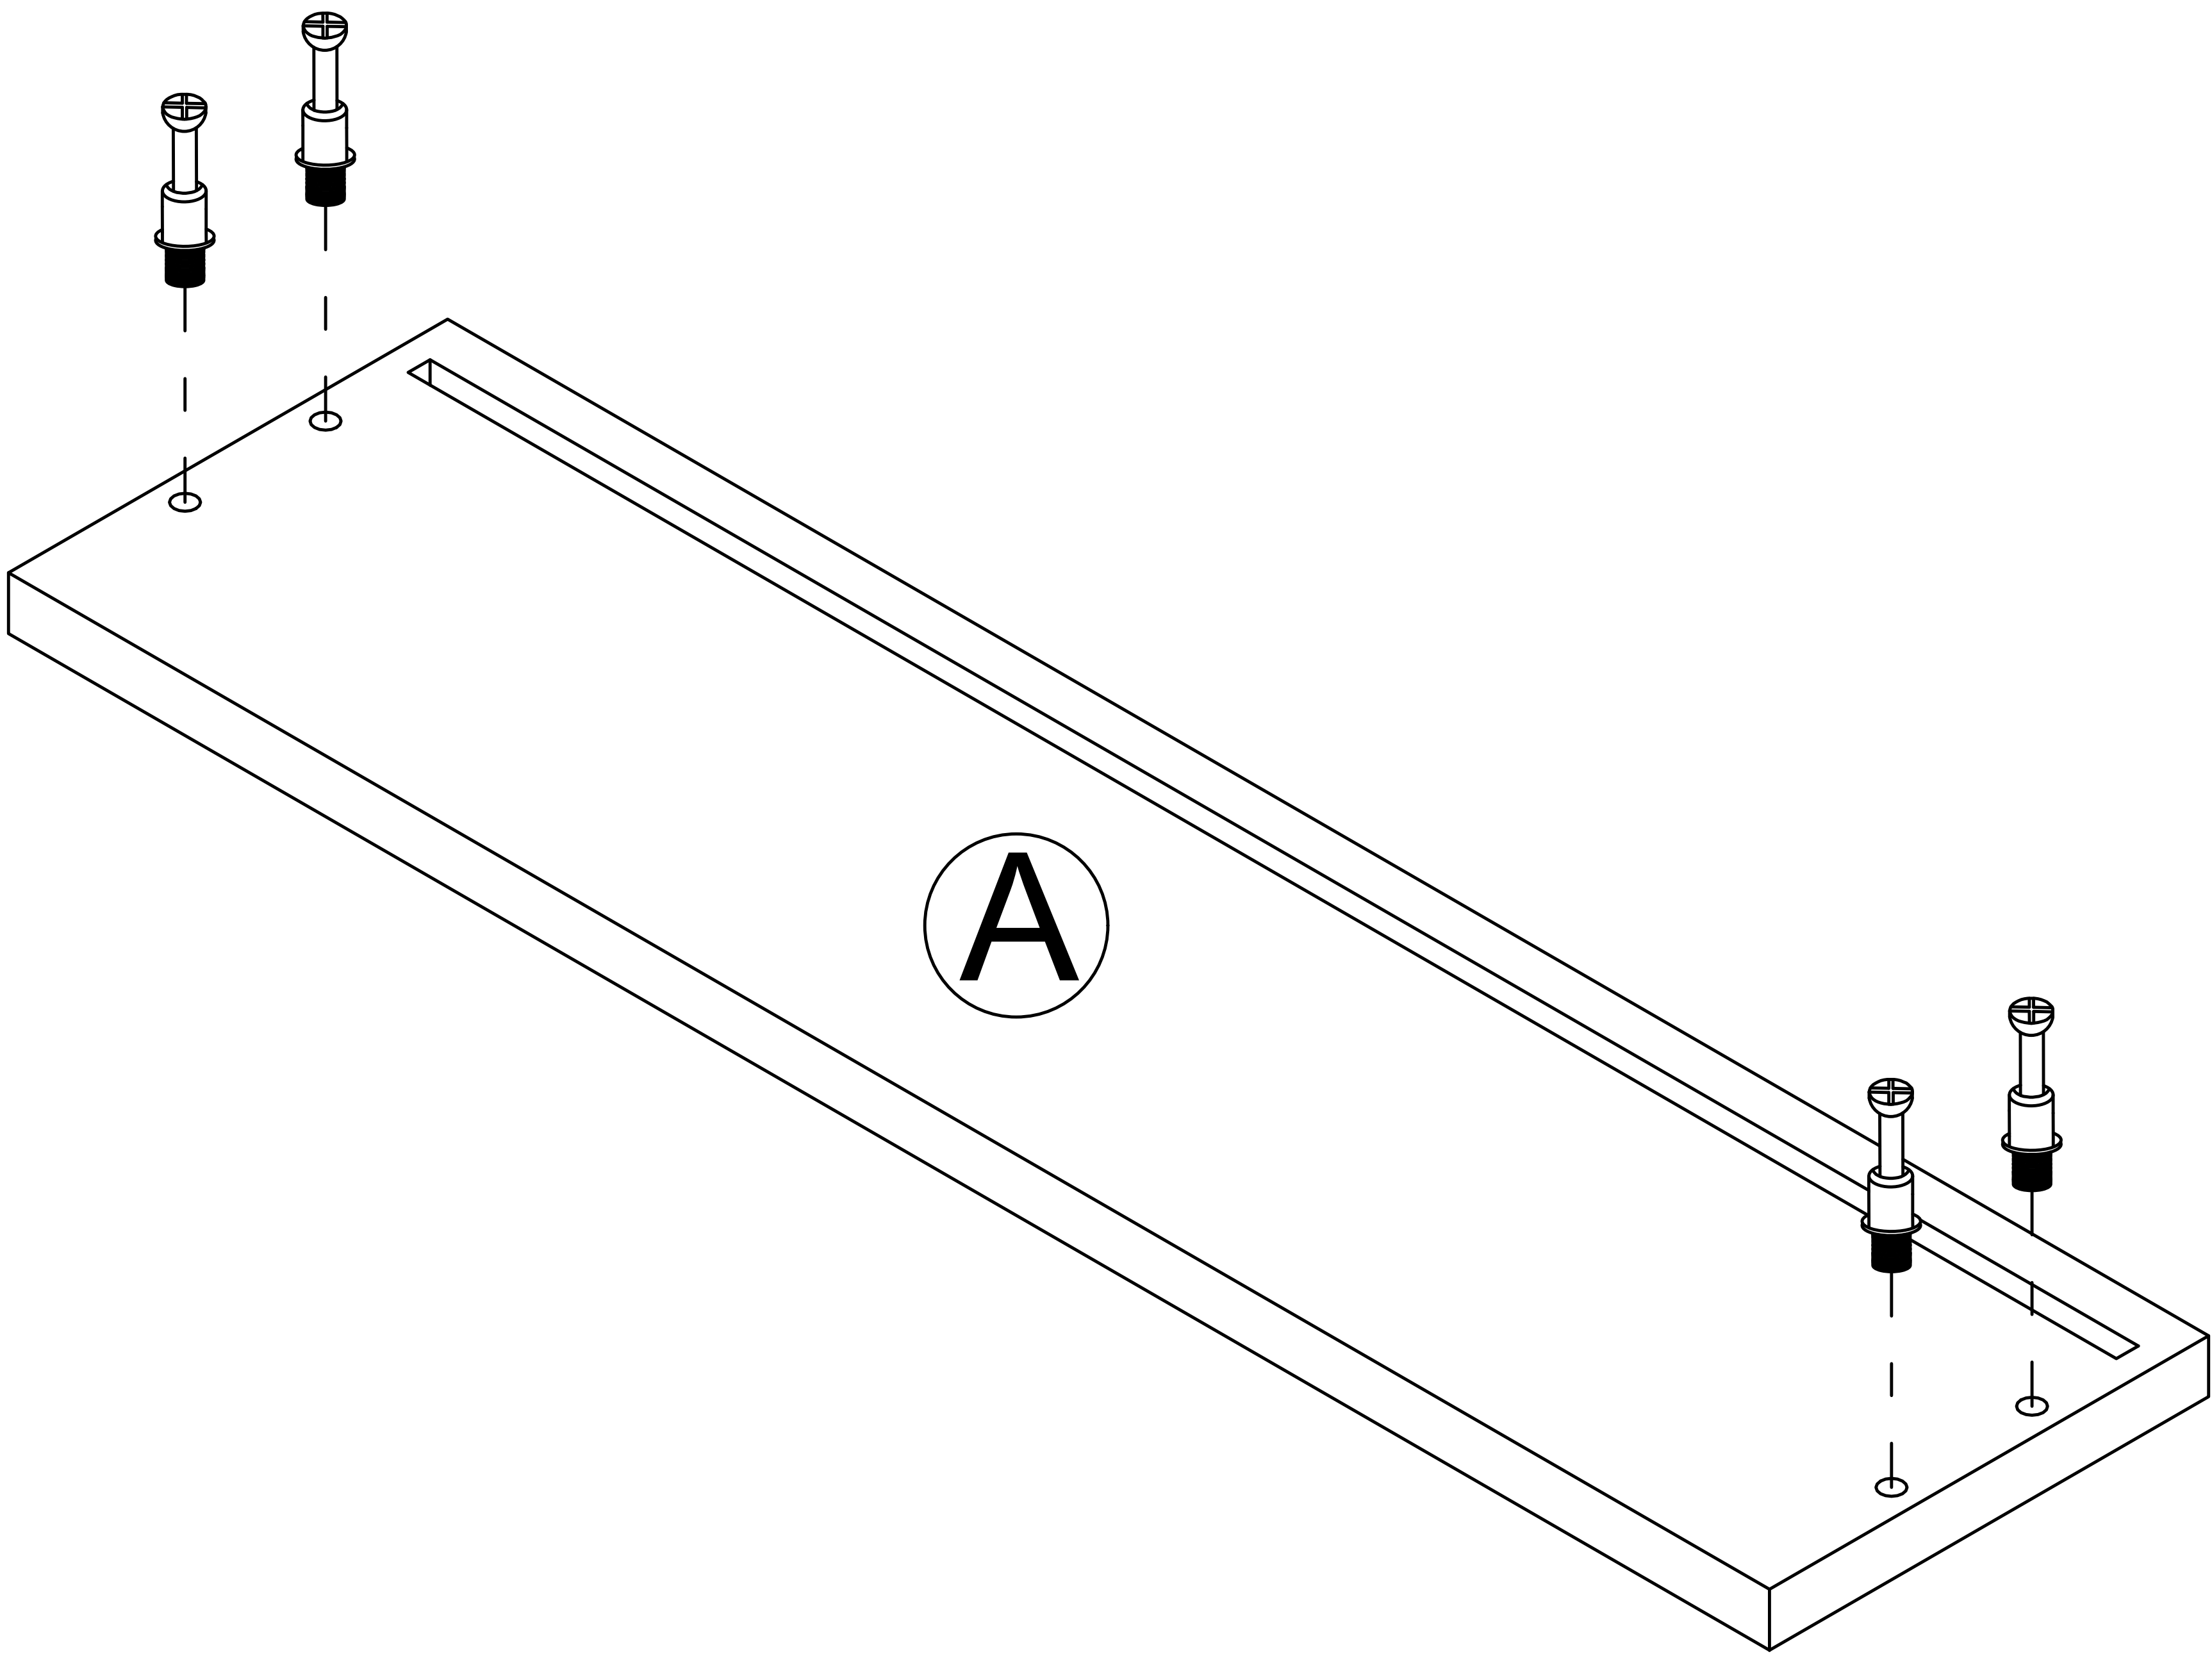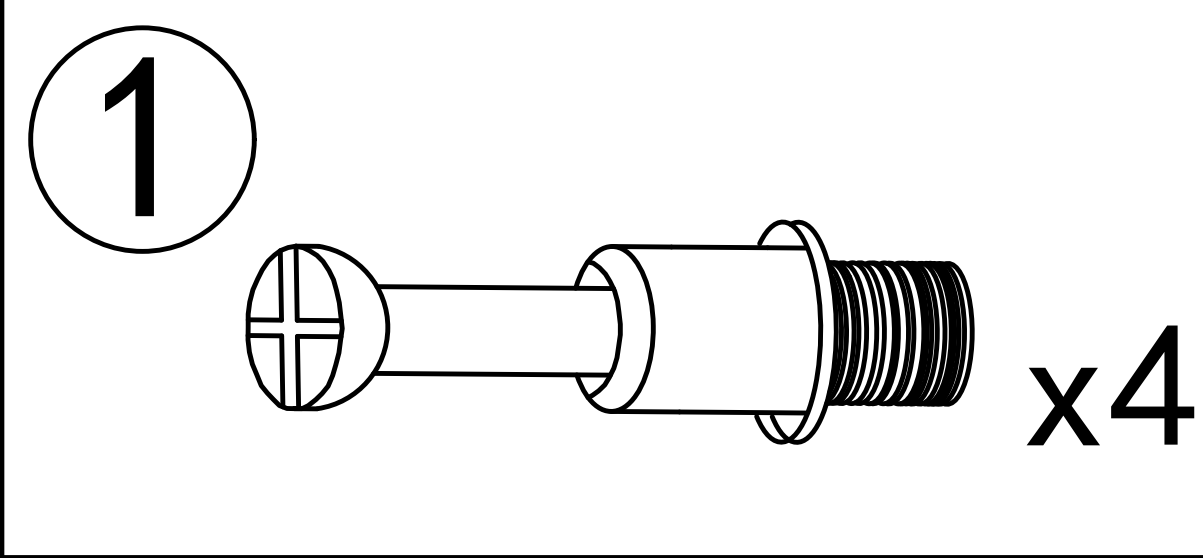



Step 2

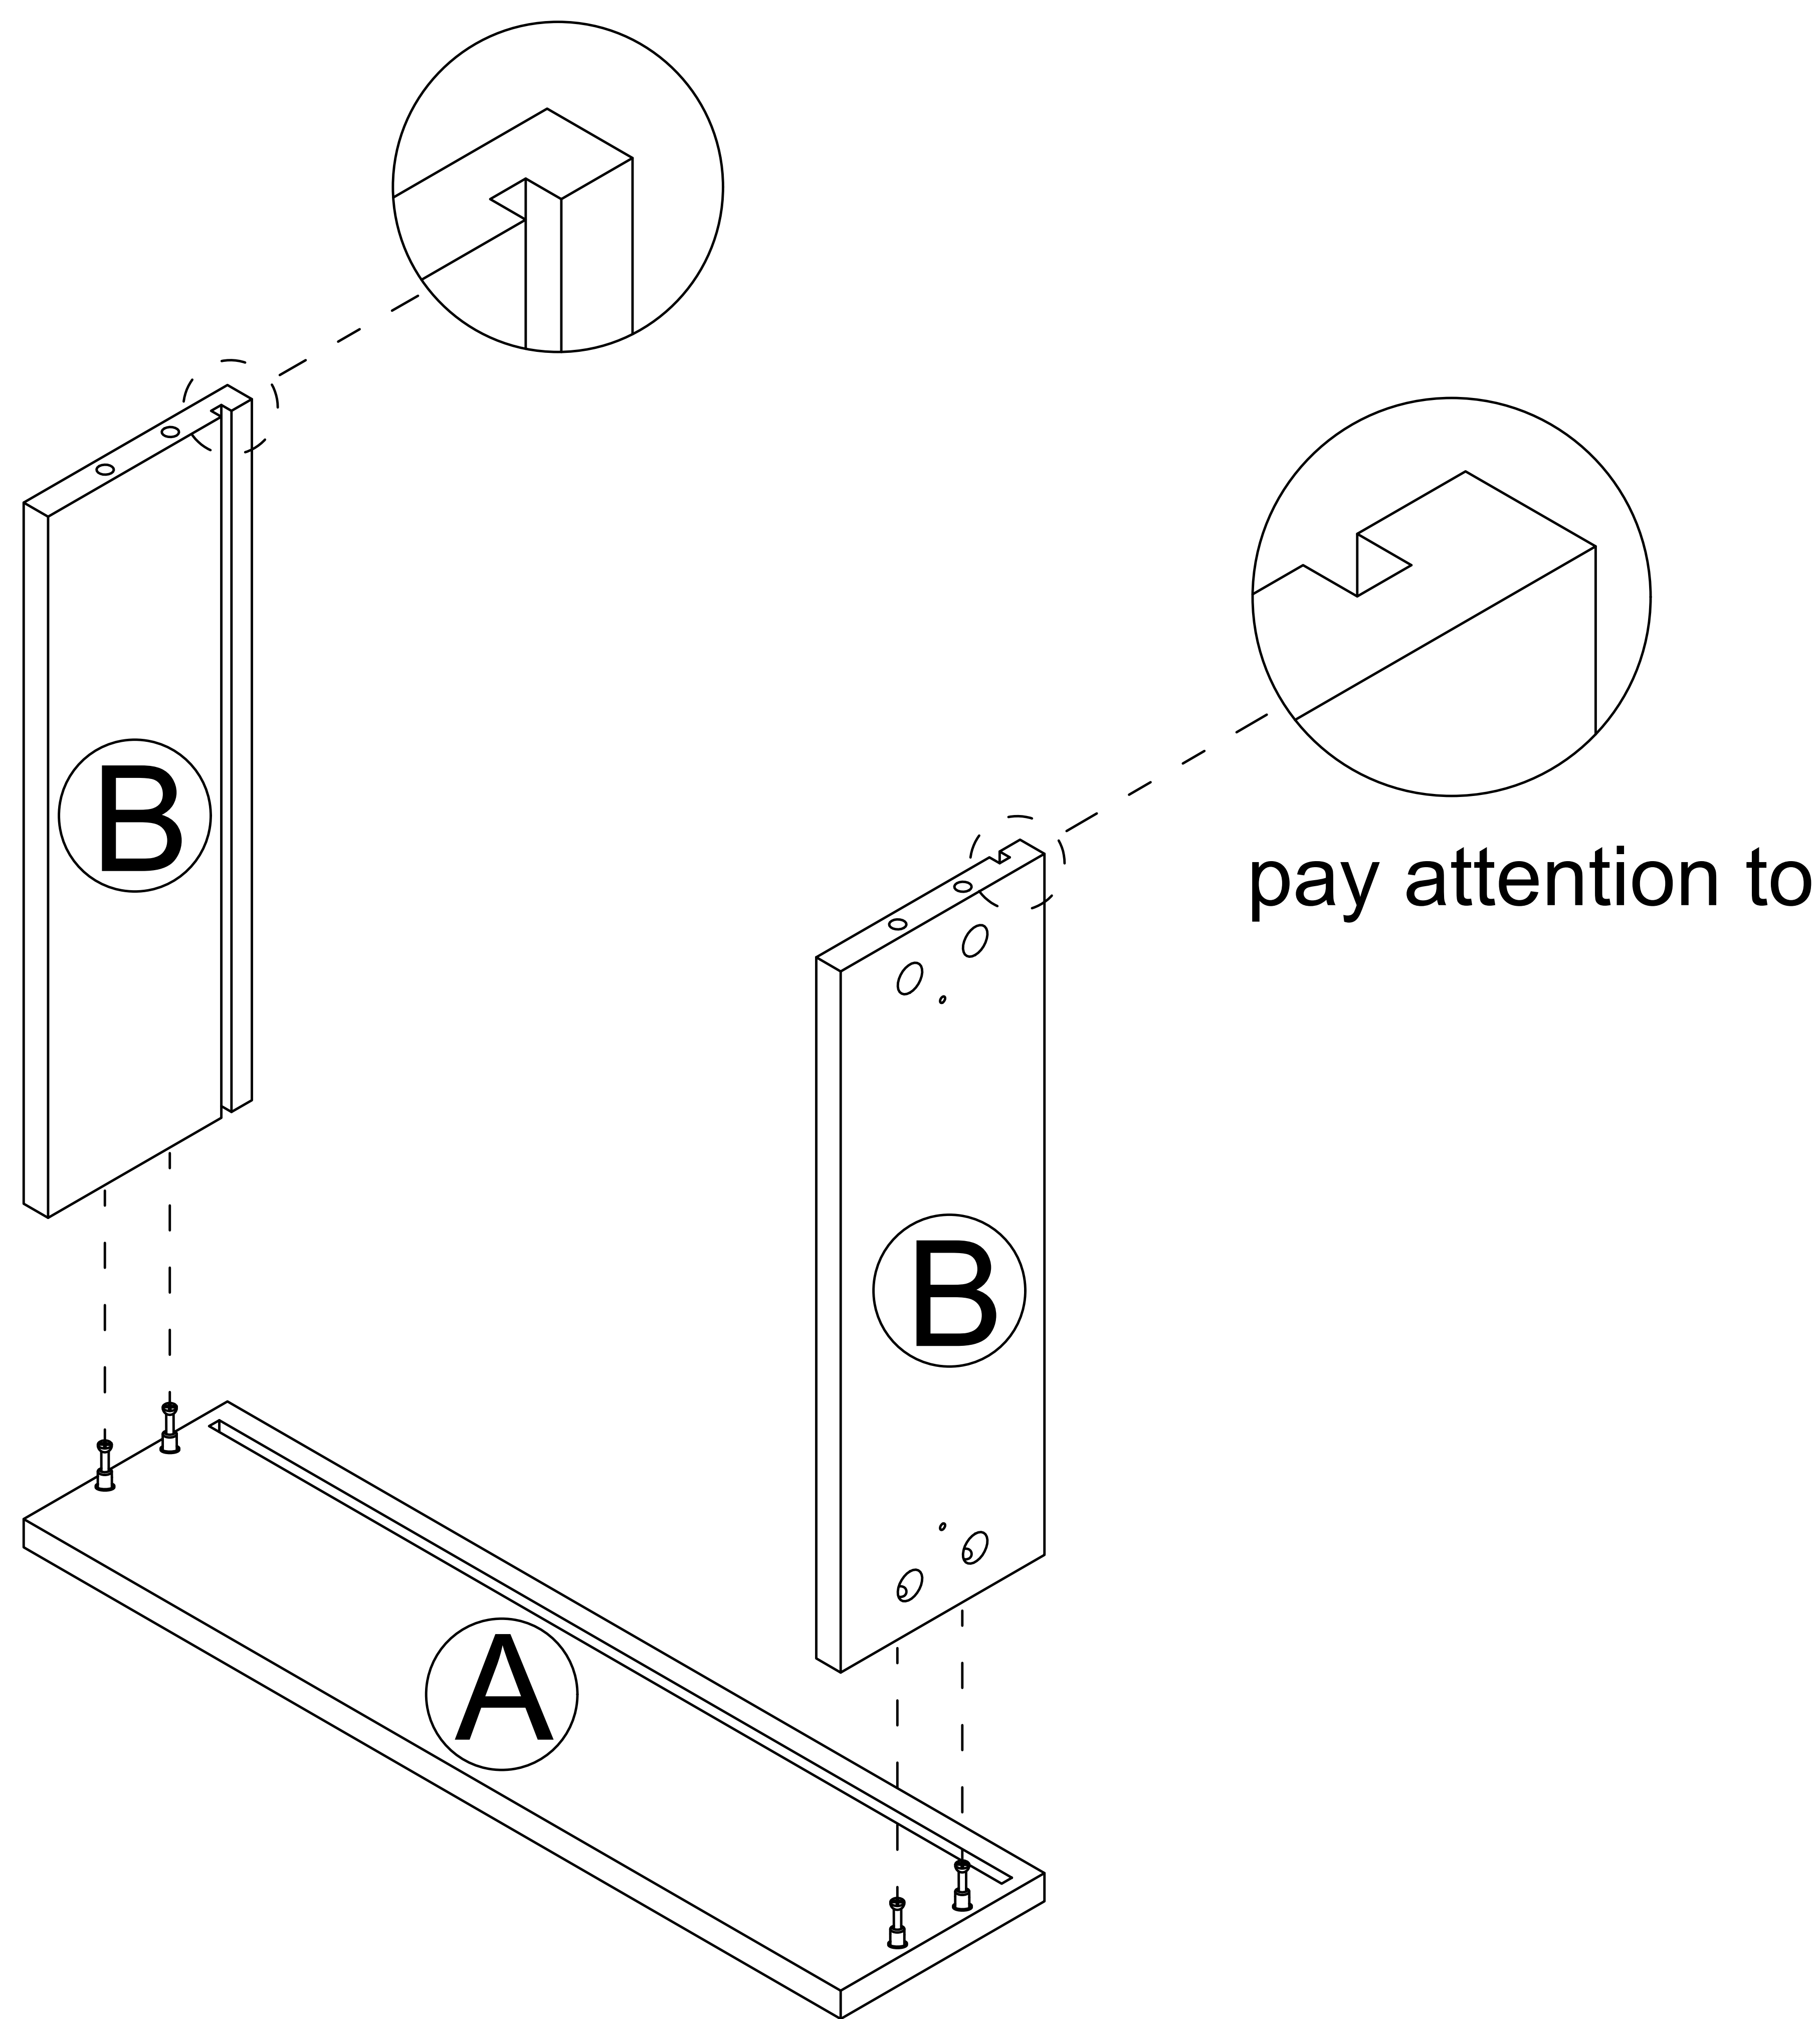



Step 3

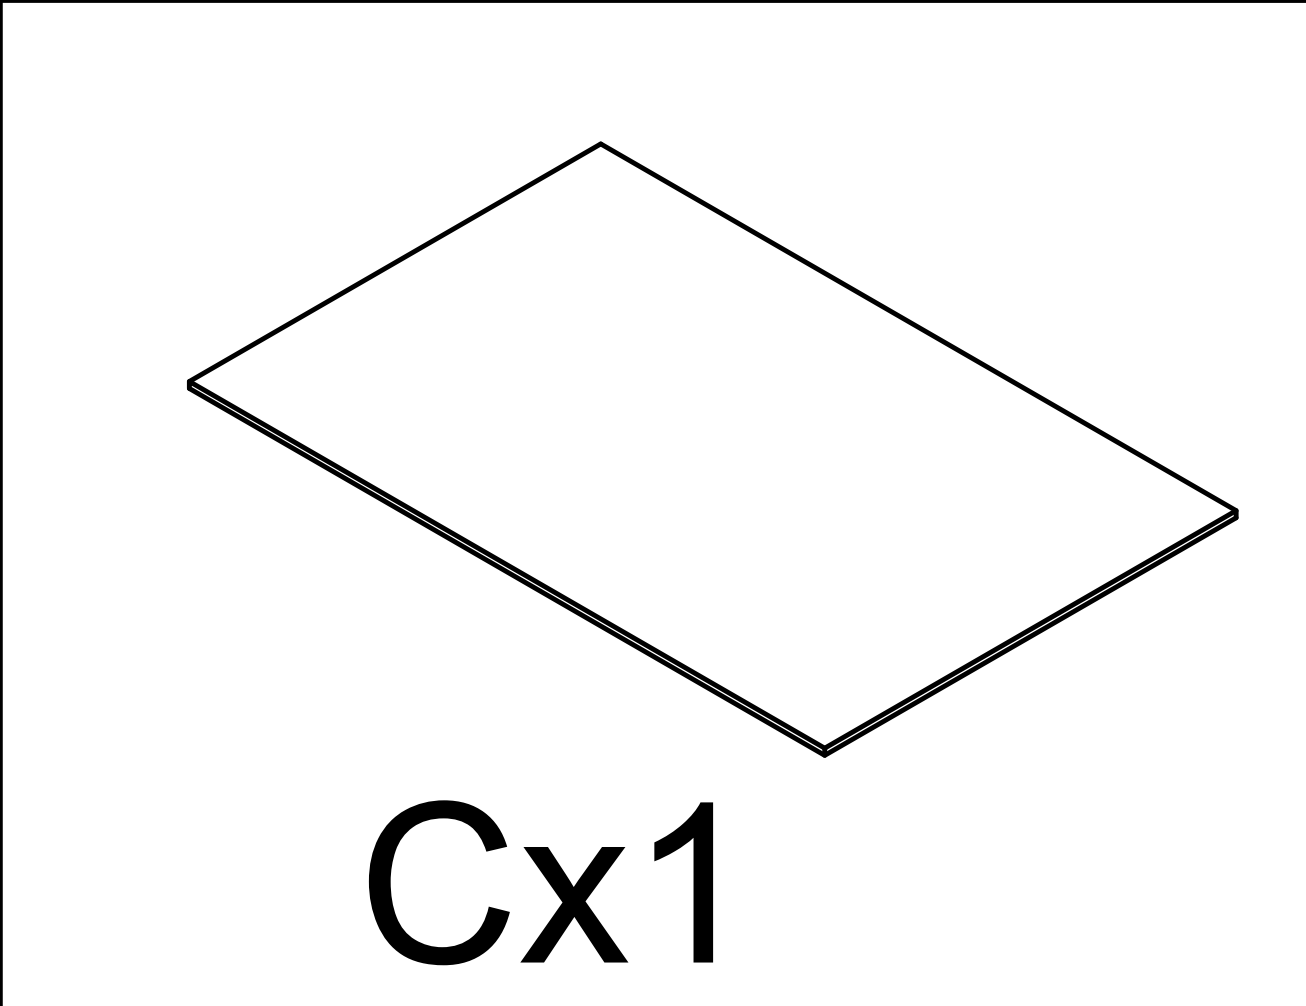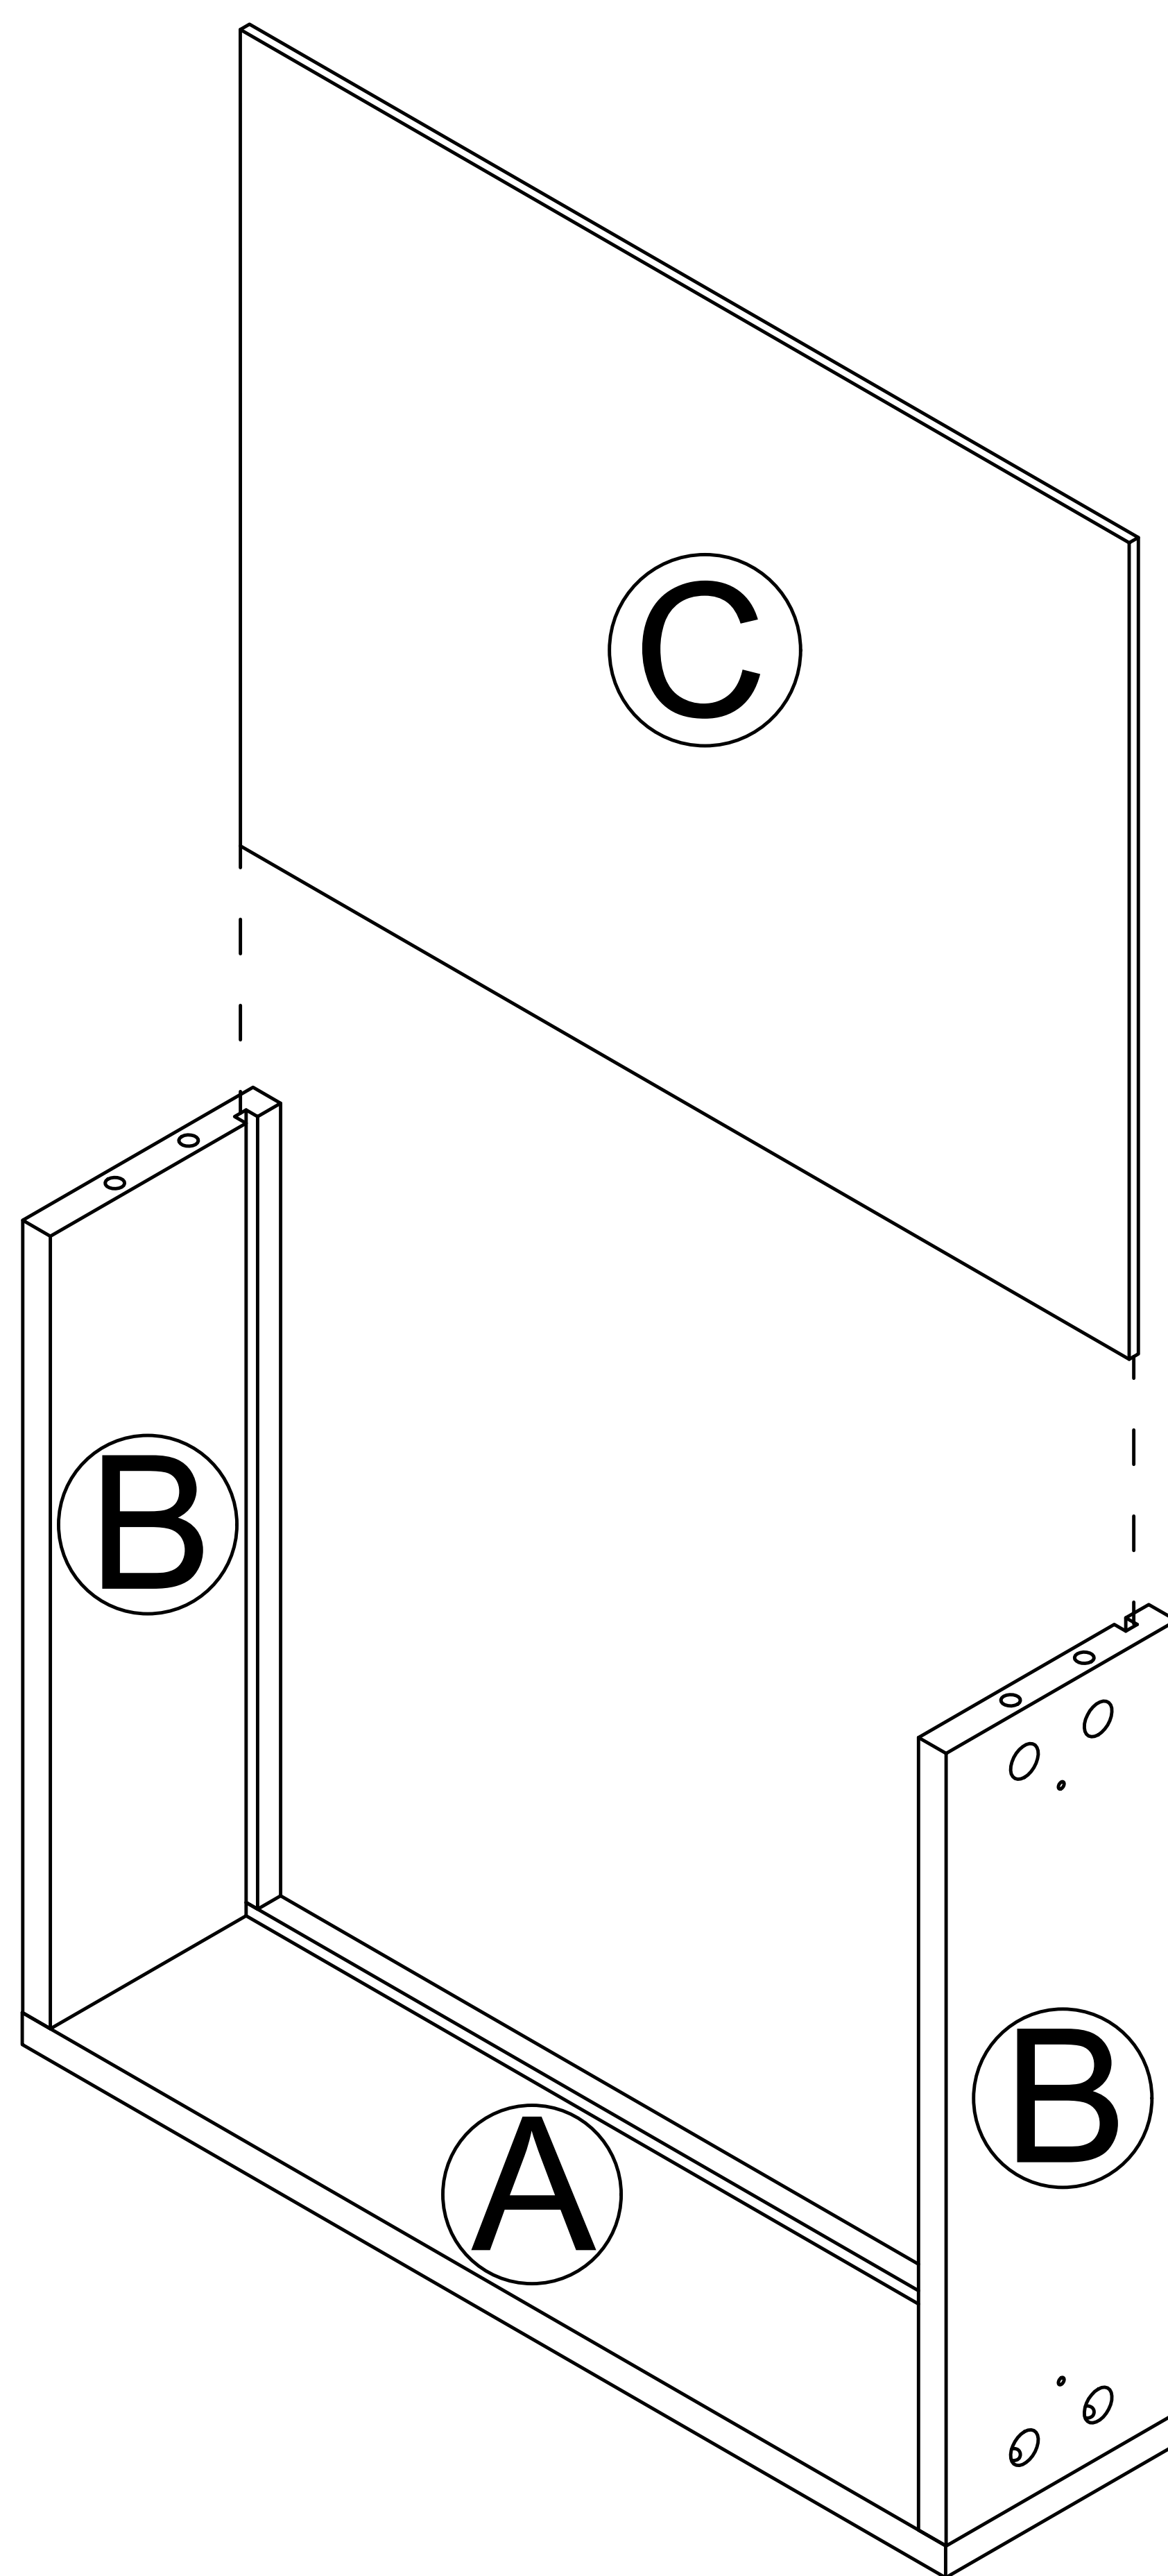

Step 4

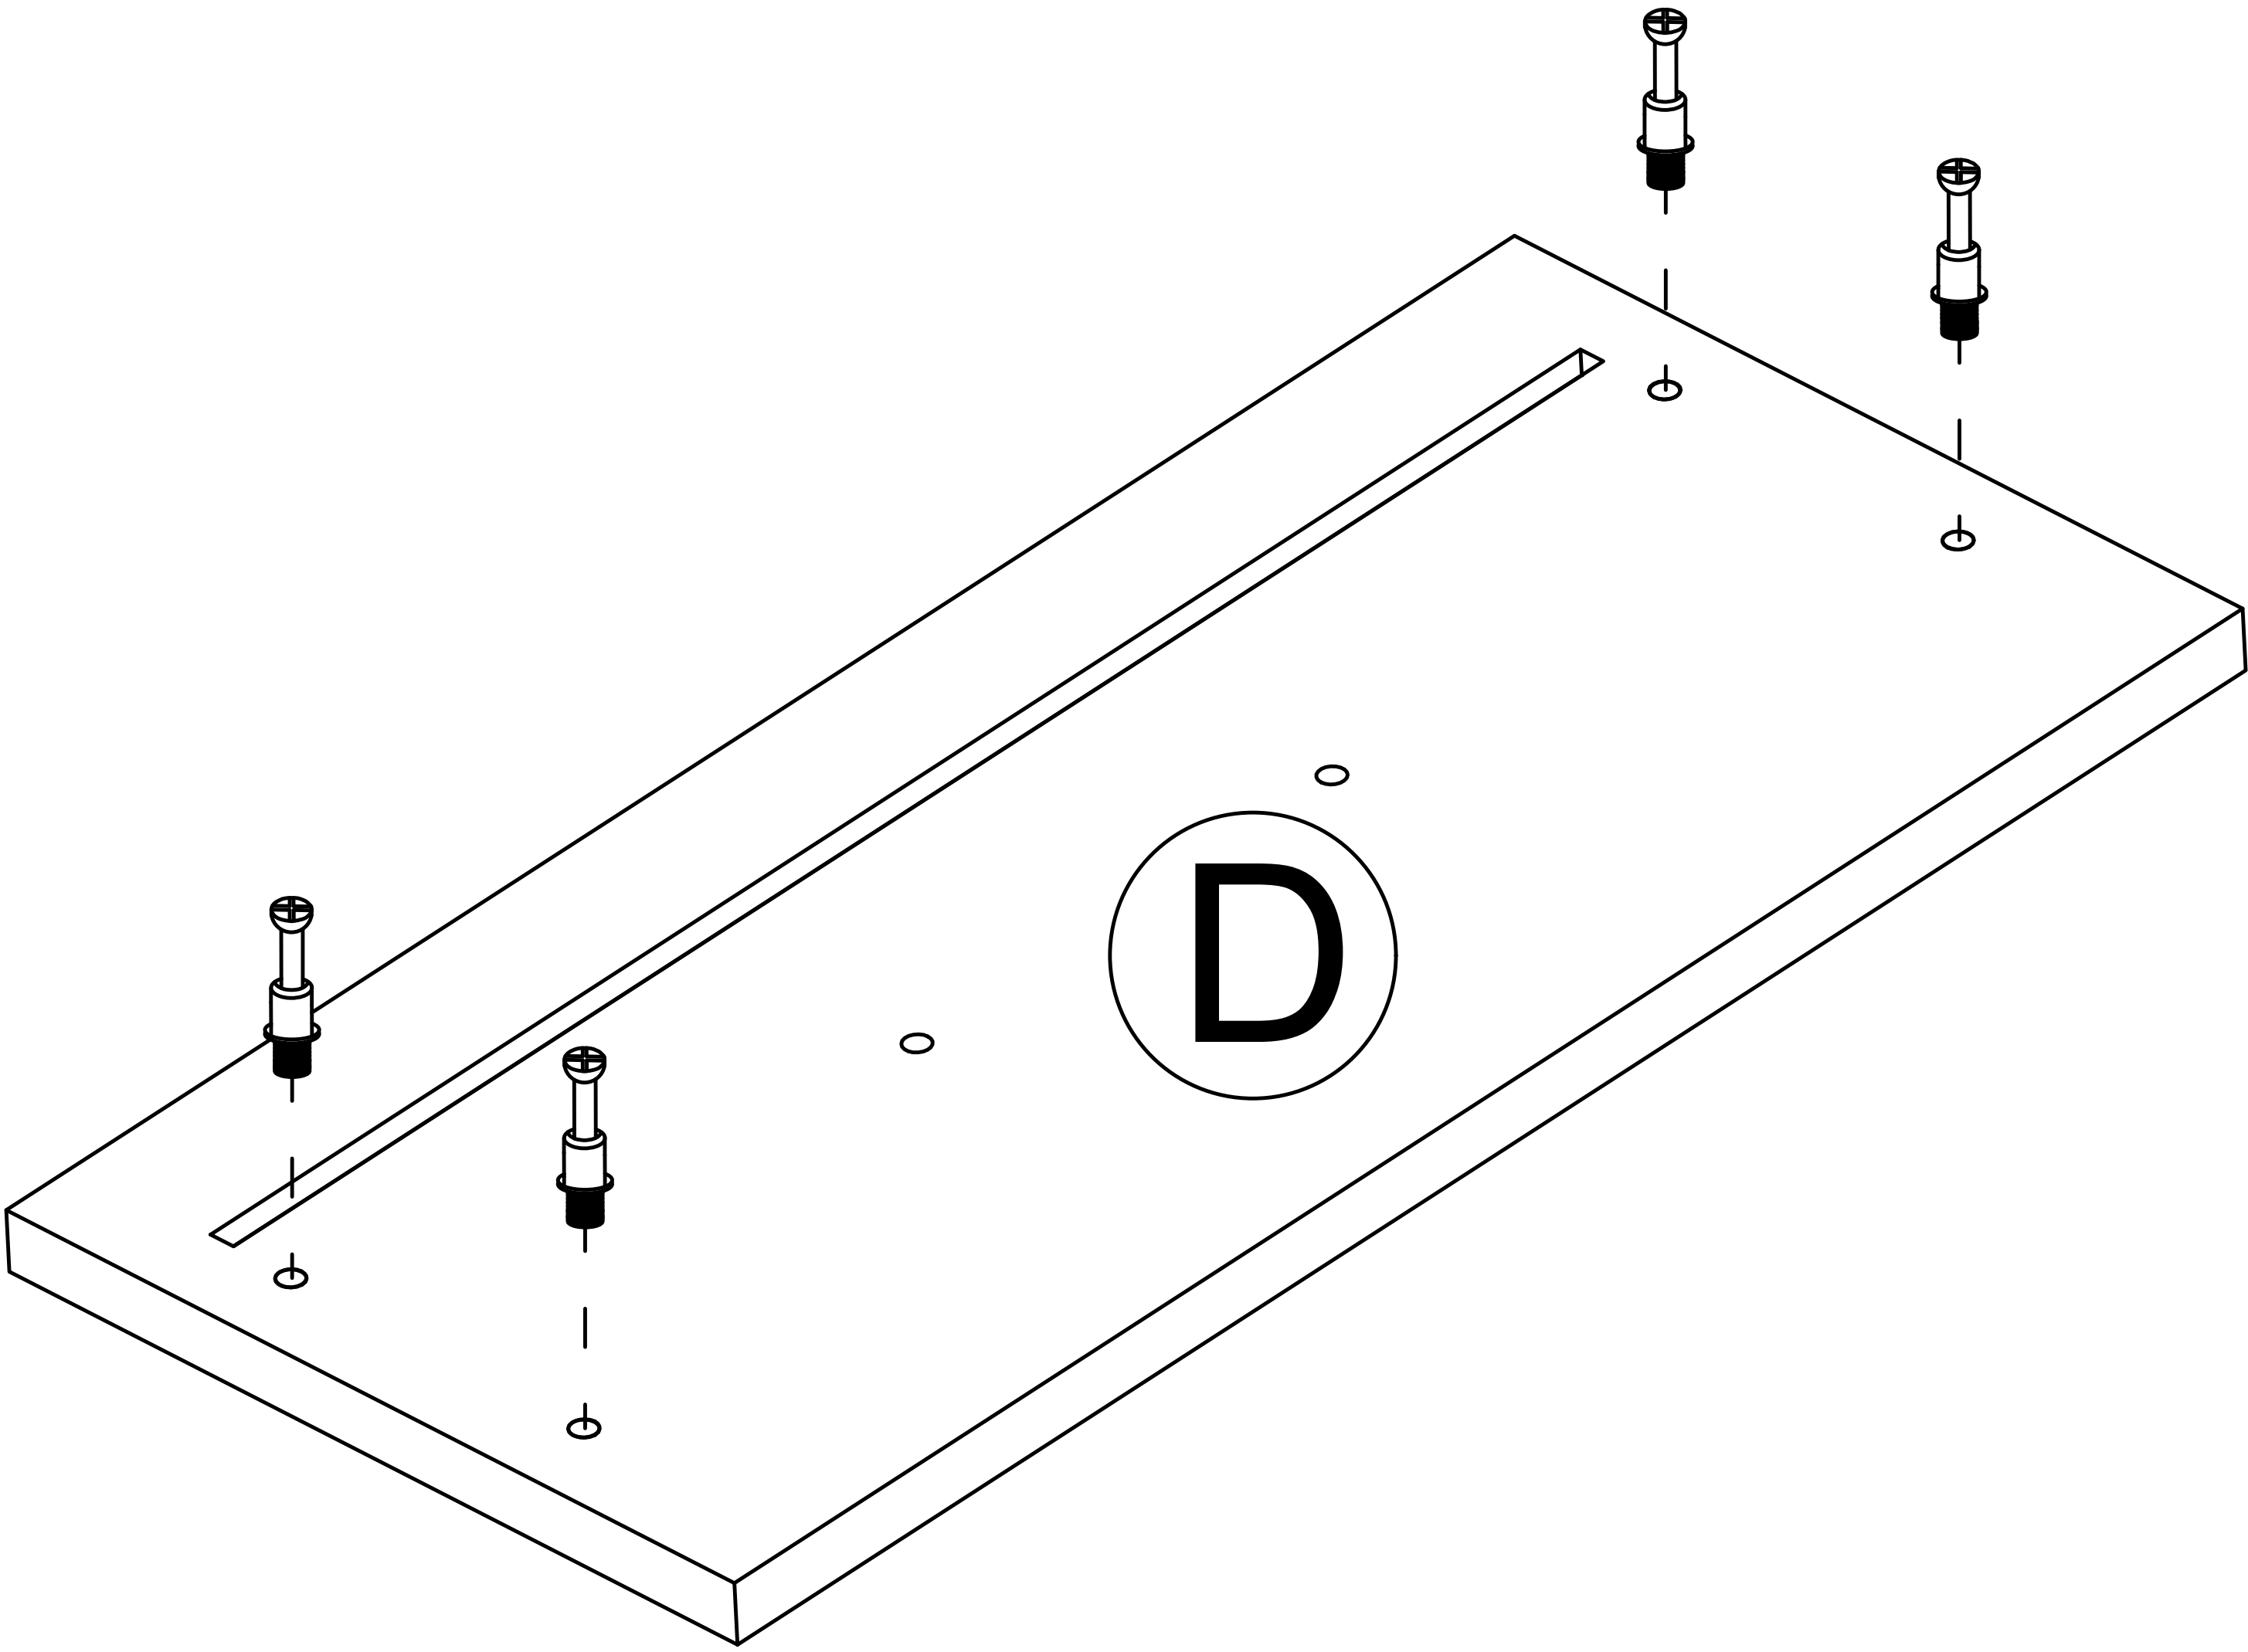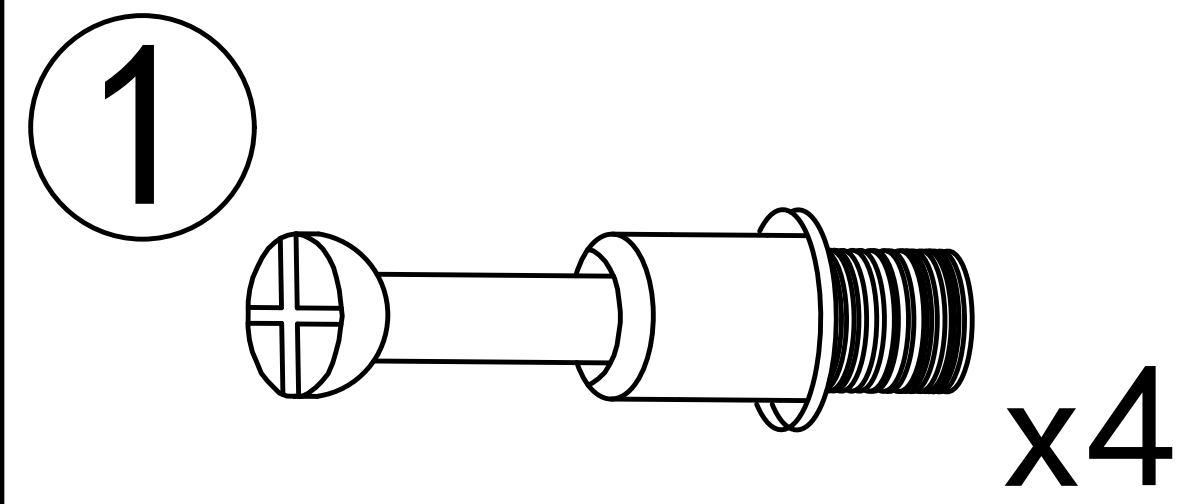


Step 5

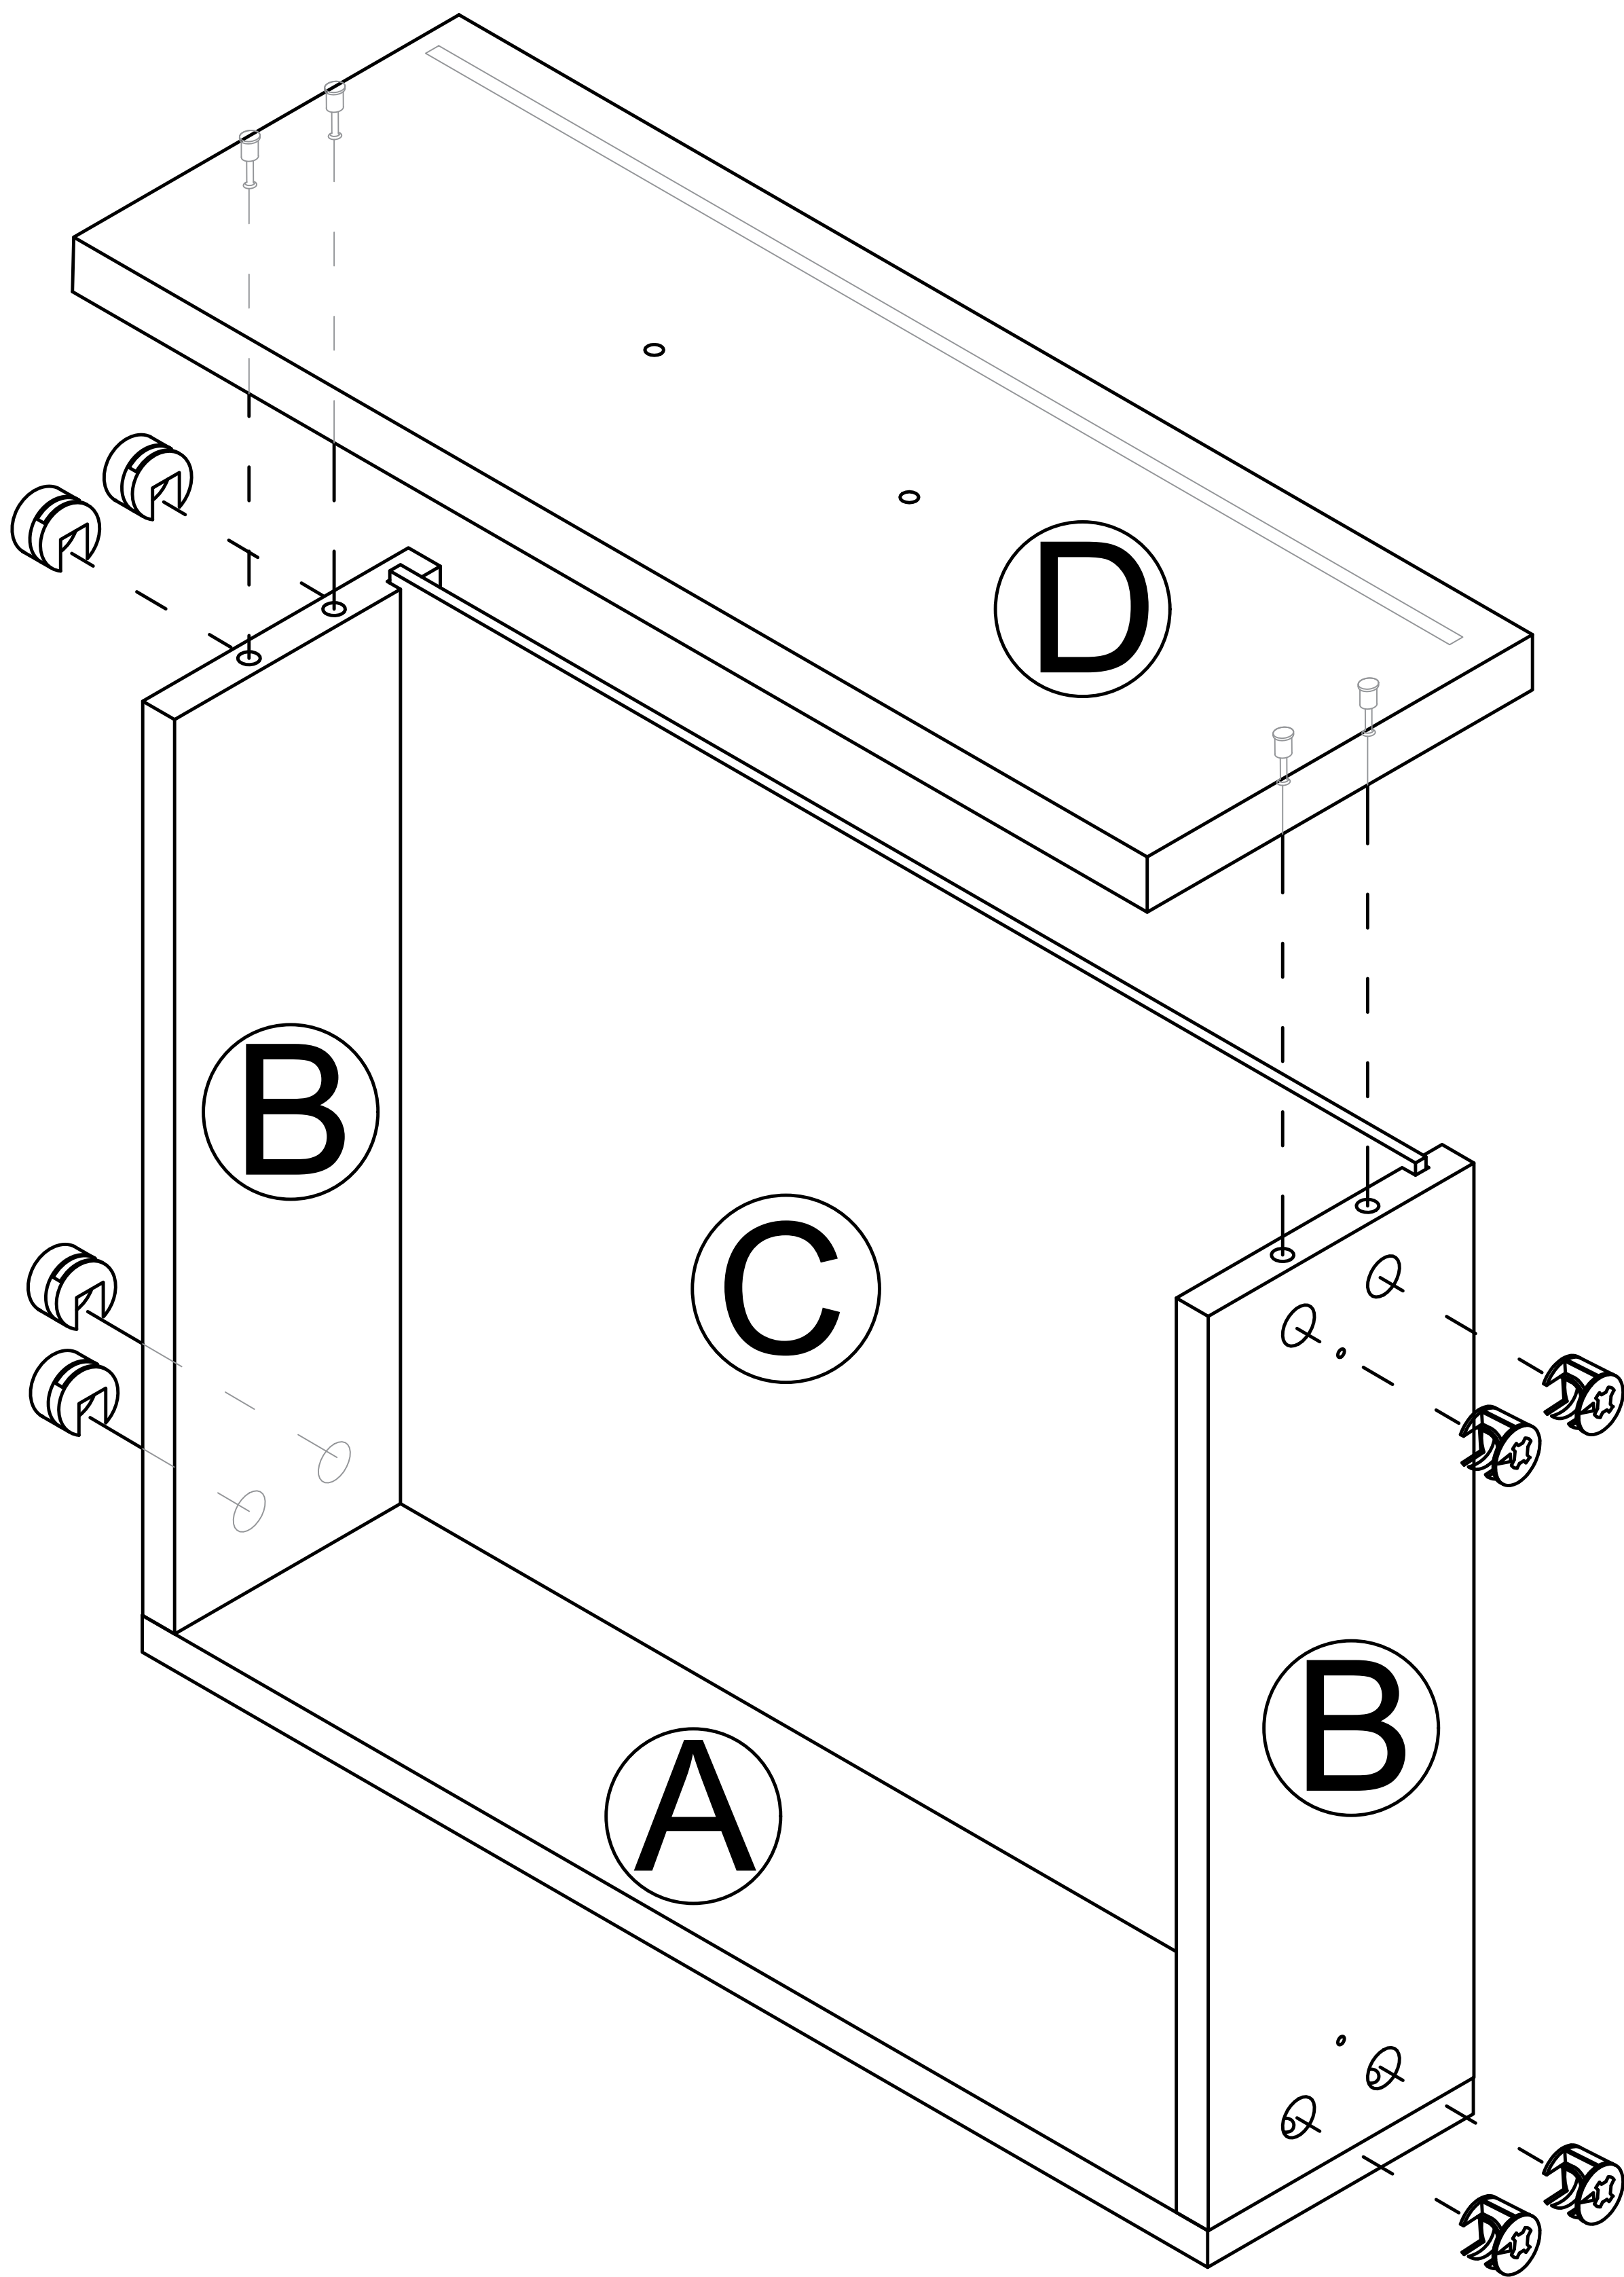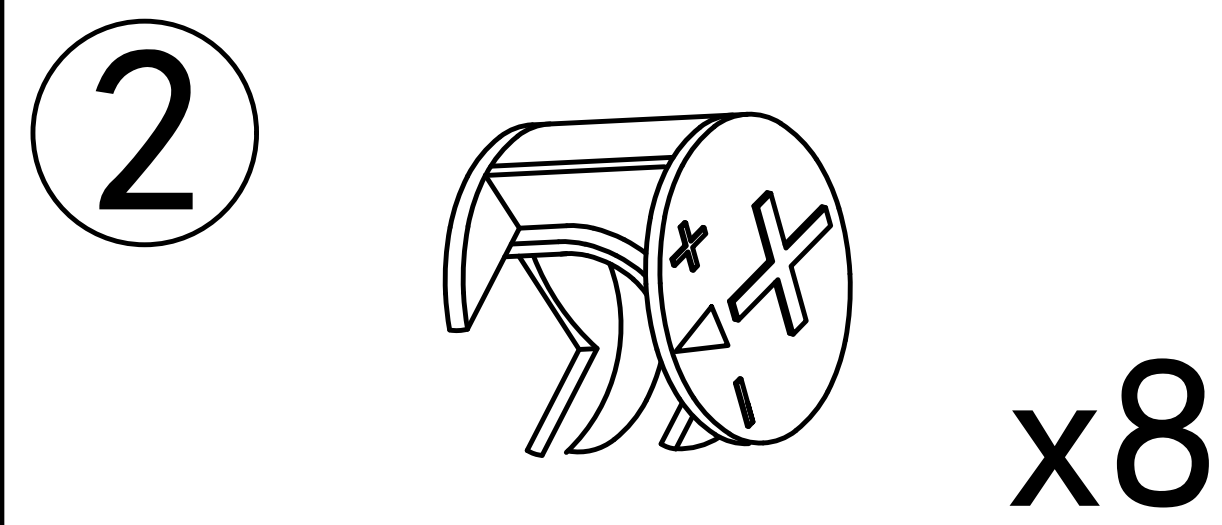


Use parts ⑤

Drawer rail breakdown diagram

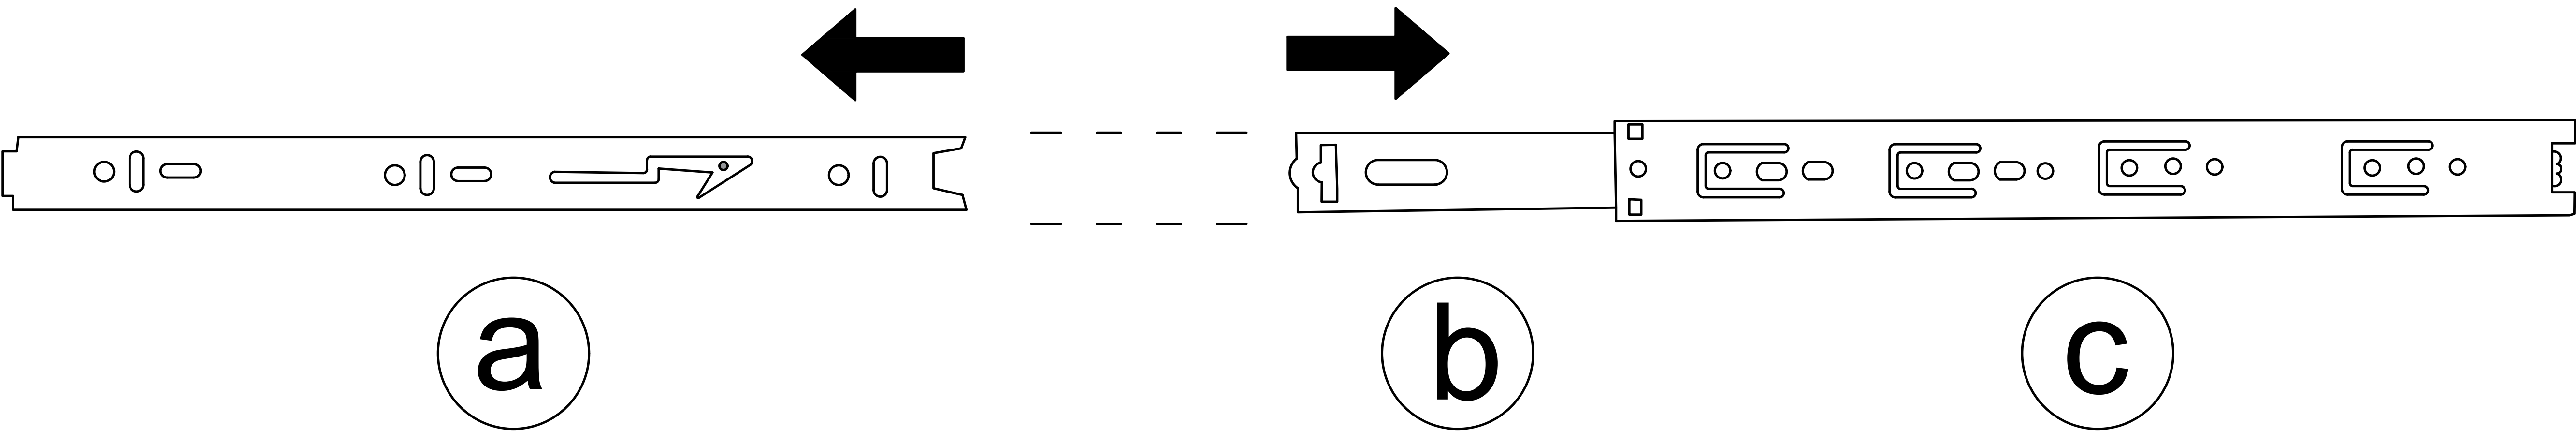


① Dismantle the schematic diagram

Step 1 : Pull the rails apart






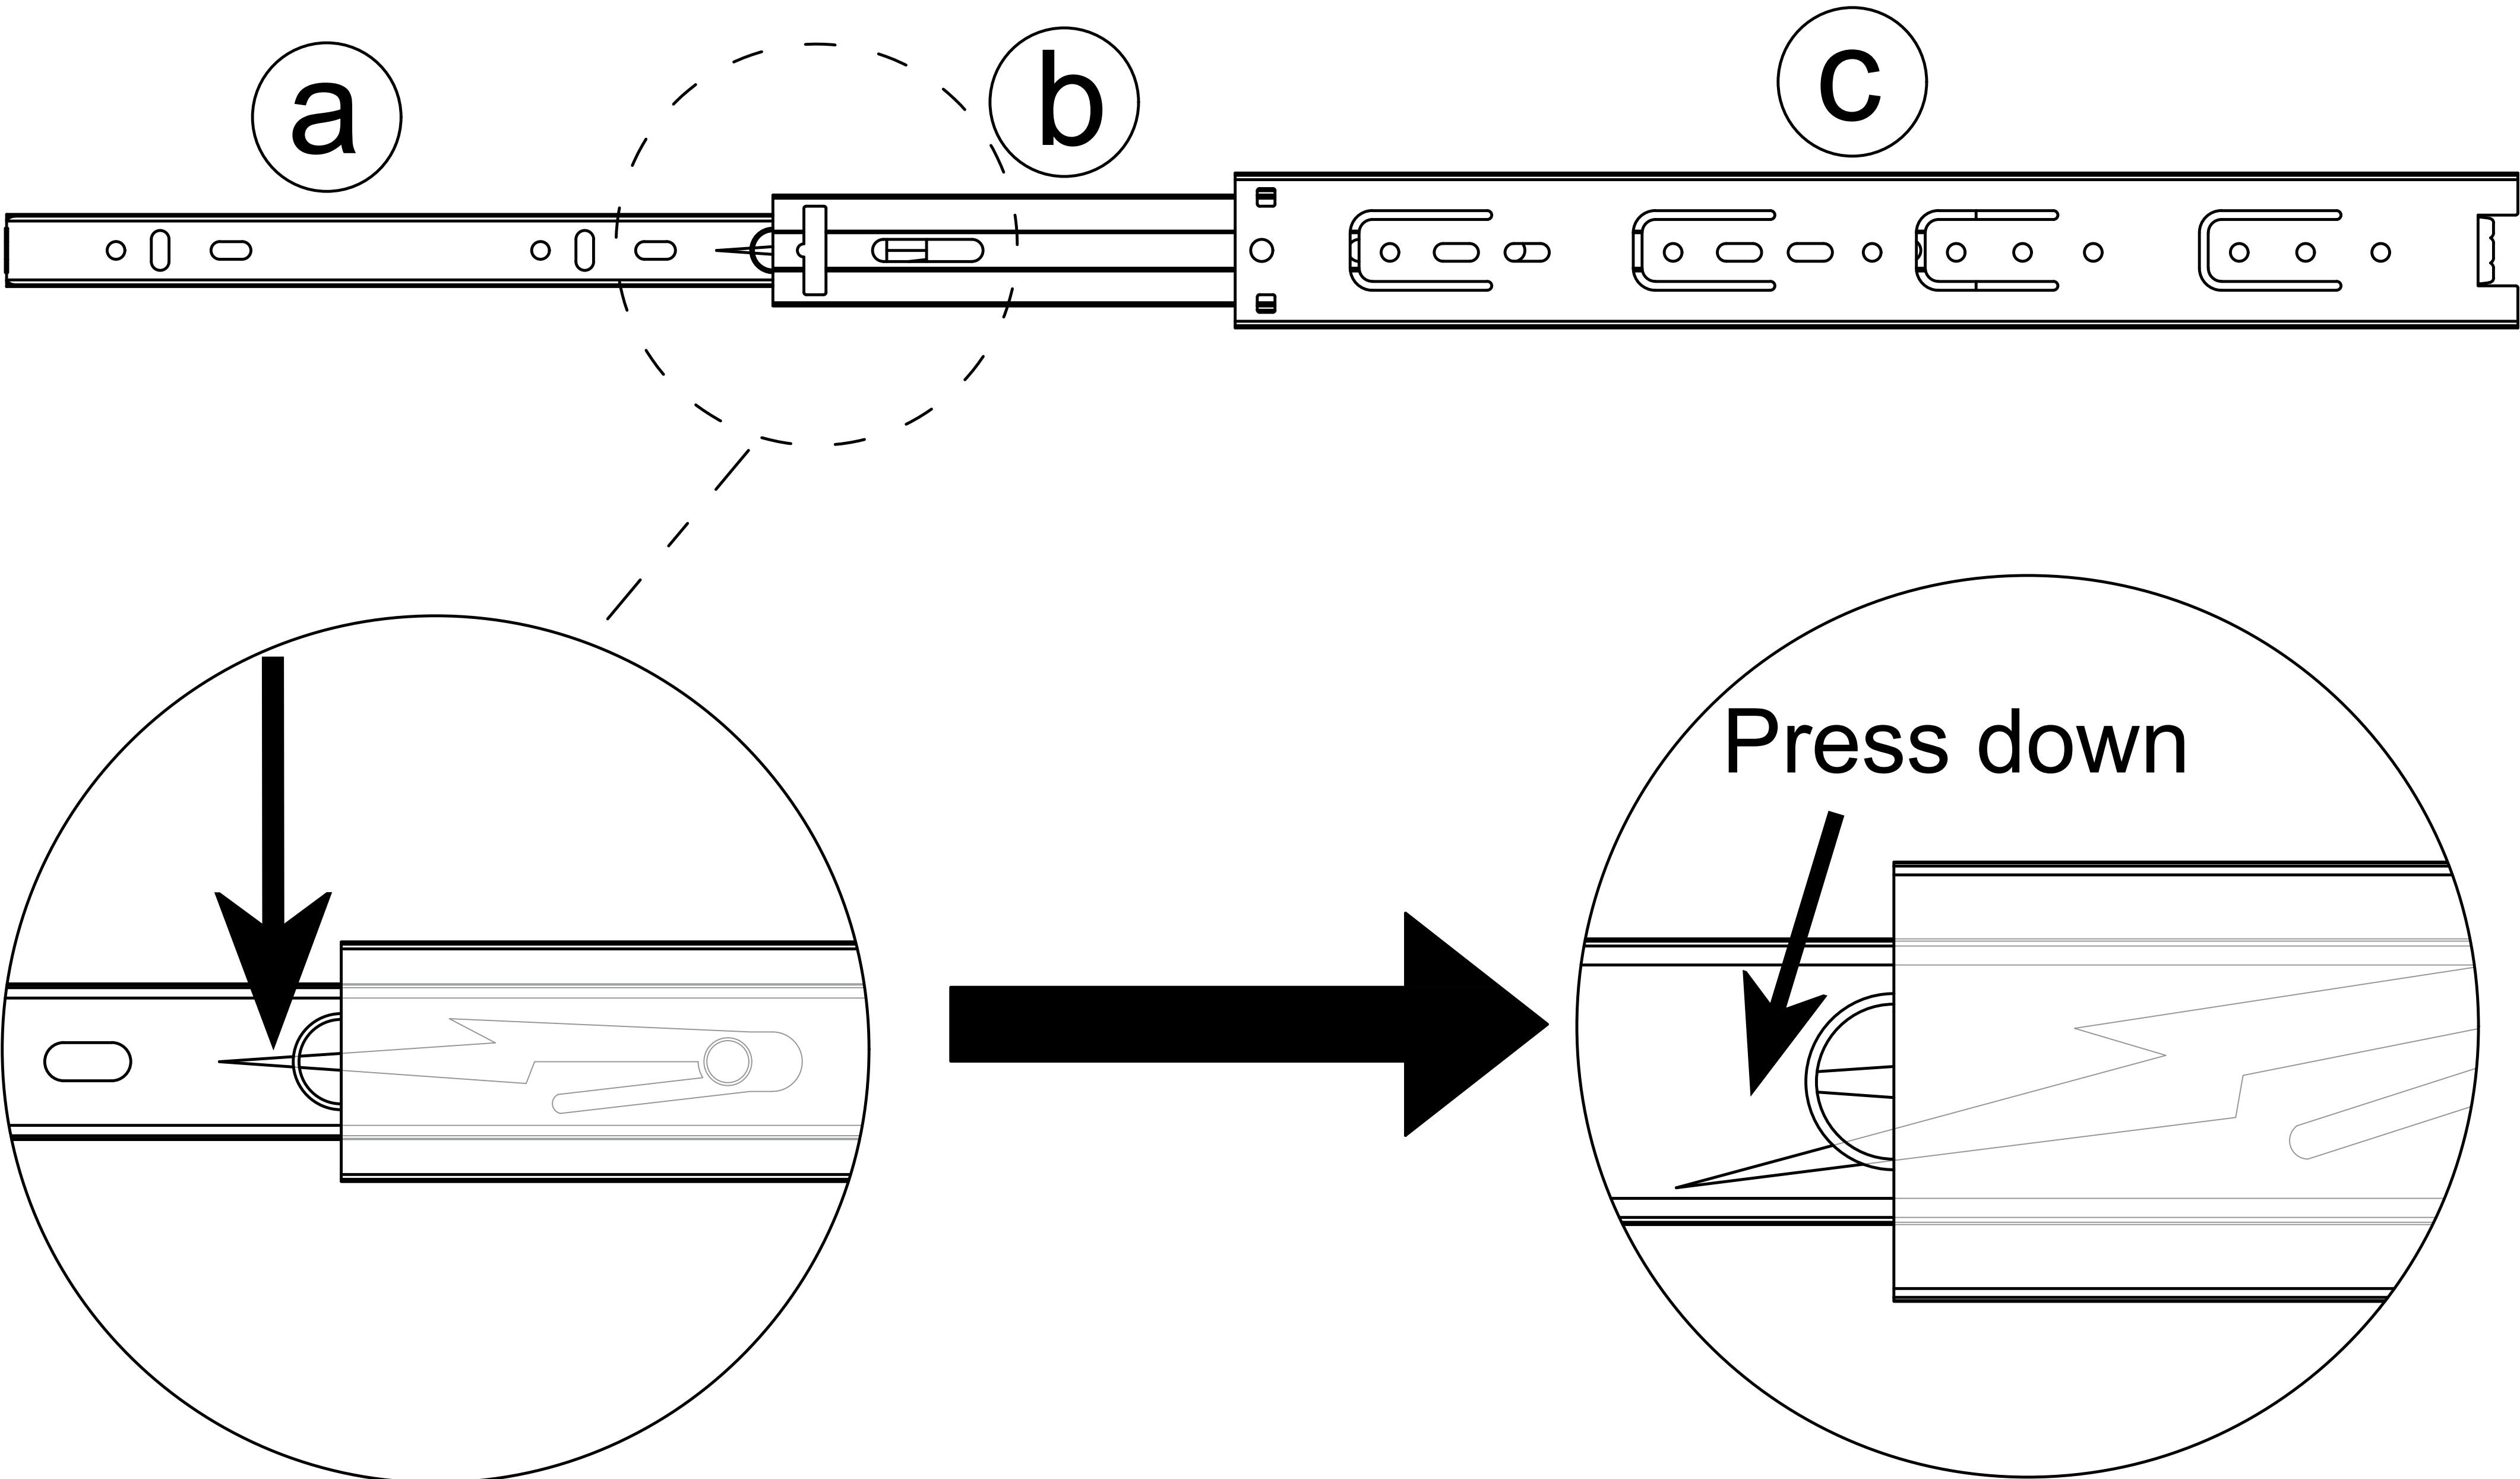


Step 2 : Press the nylon button and pull out (a).



Drawer rail decomposition completed schematic diagram

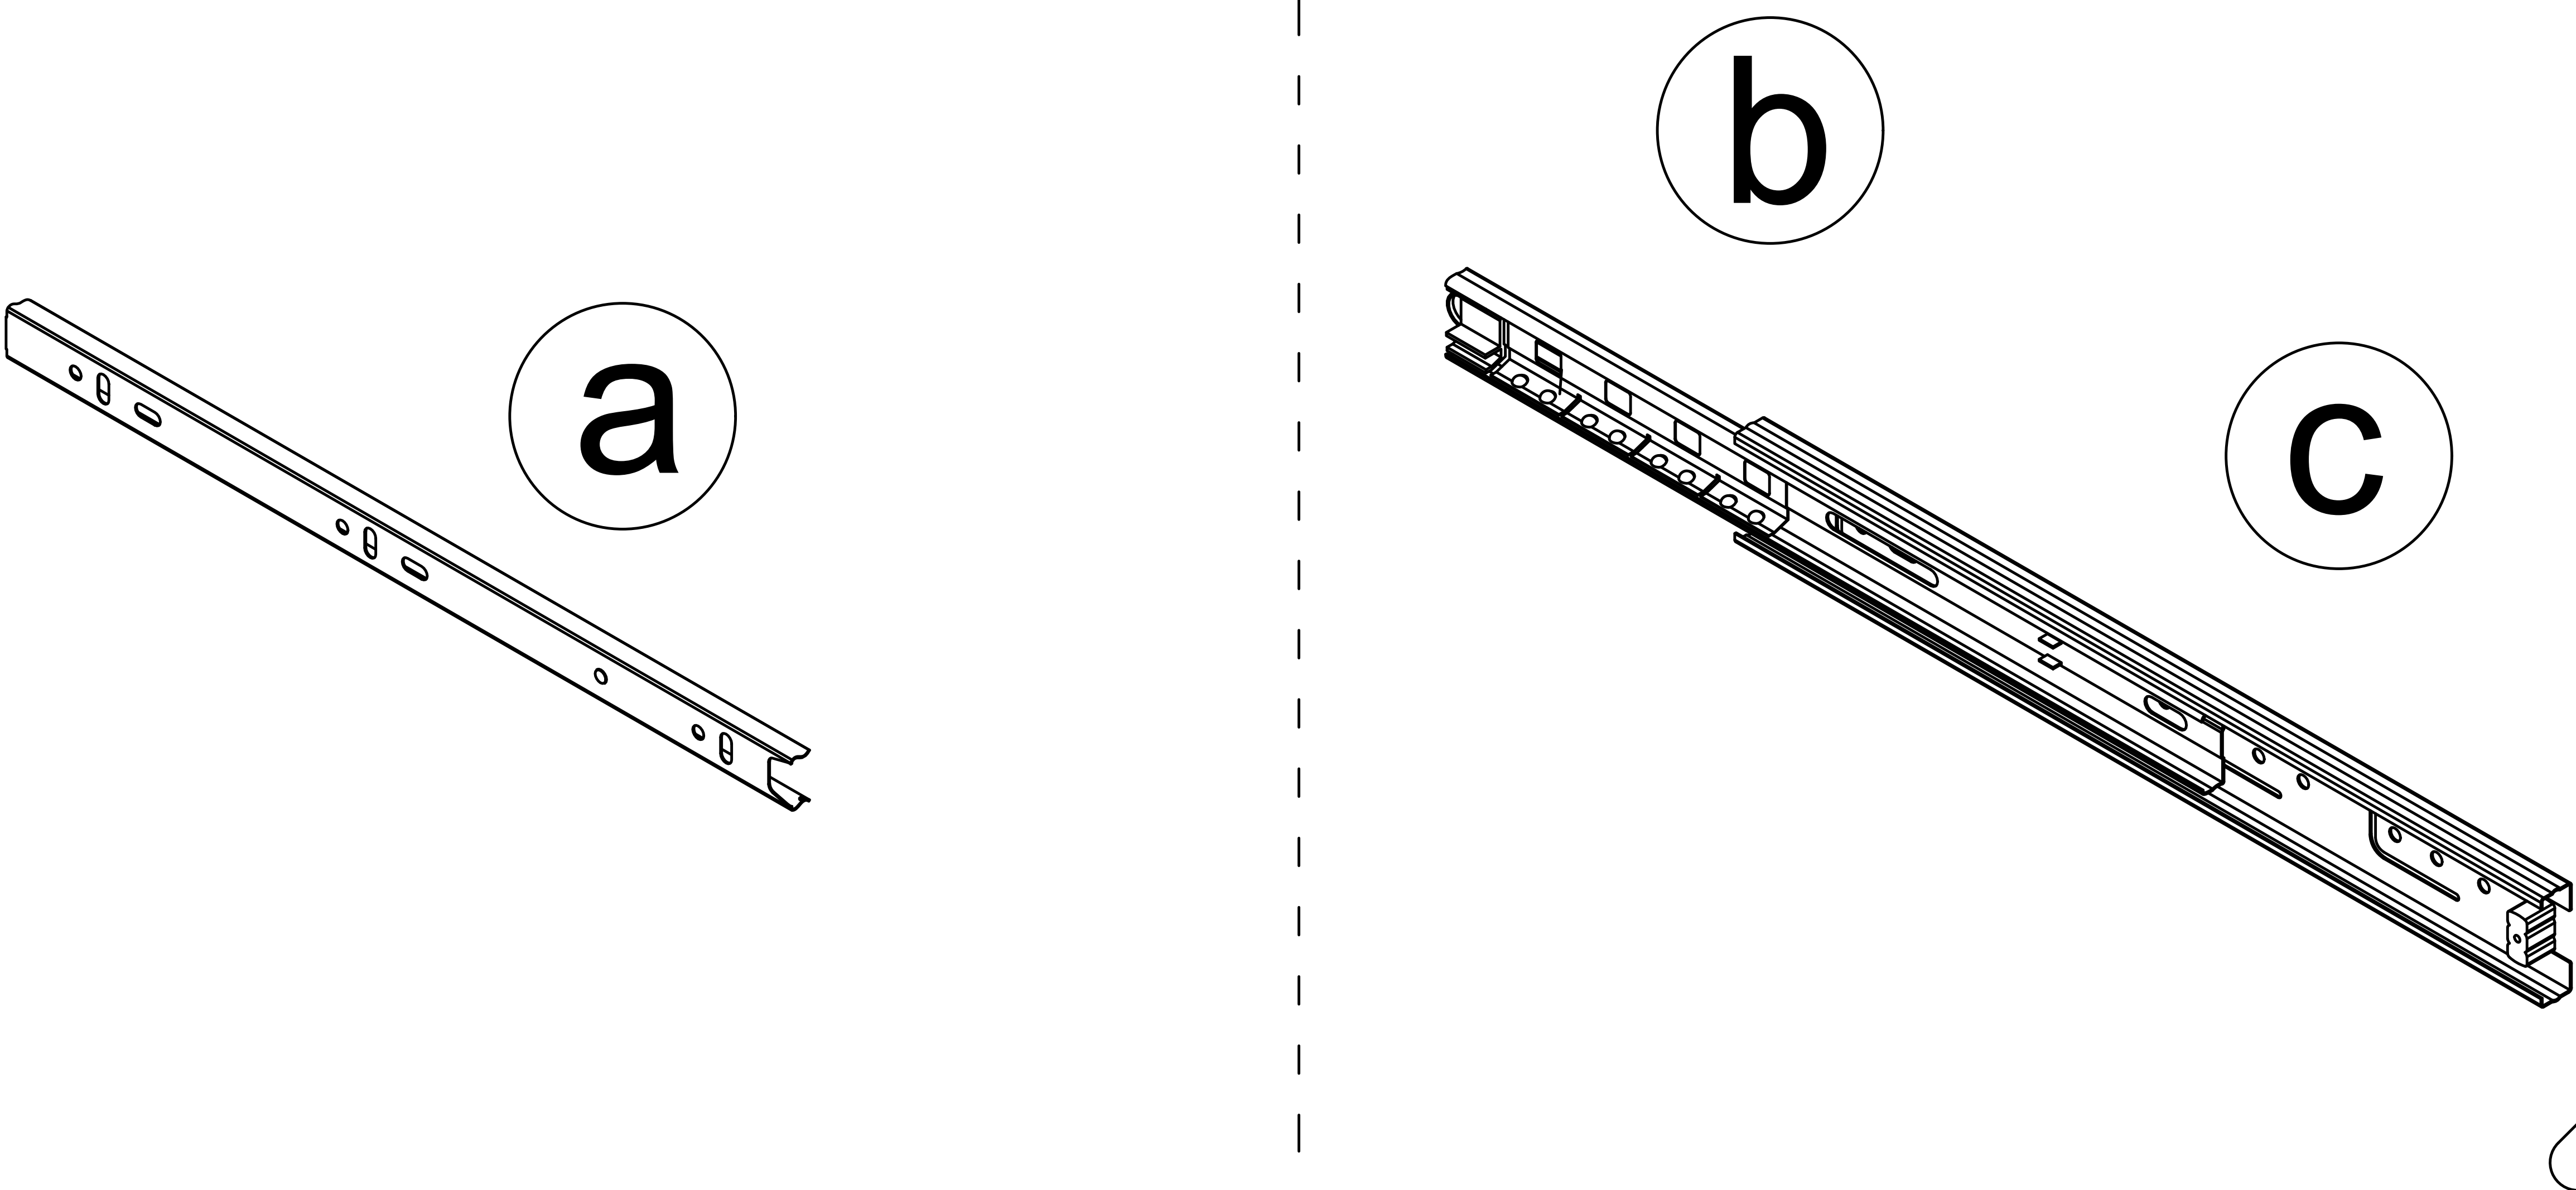

Step 6

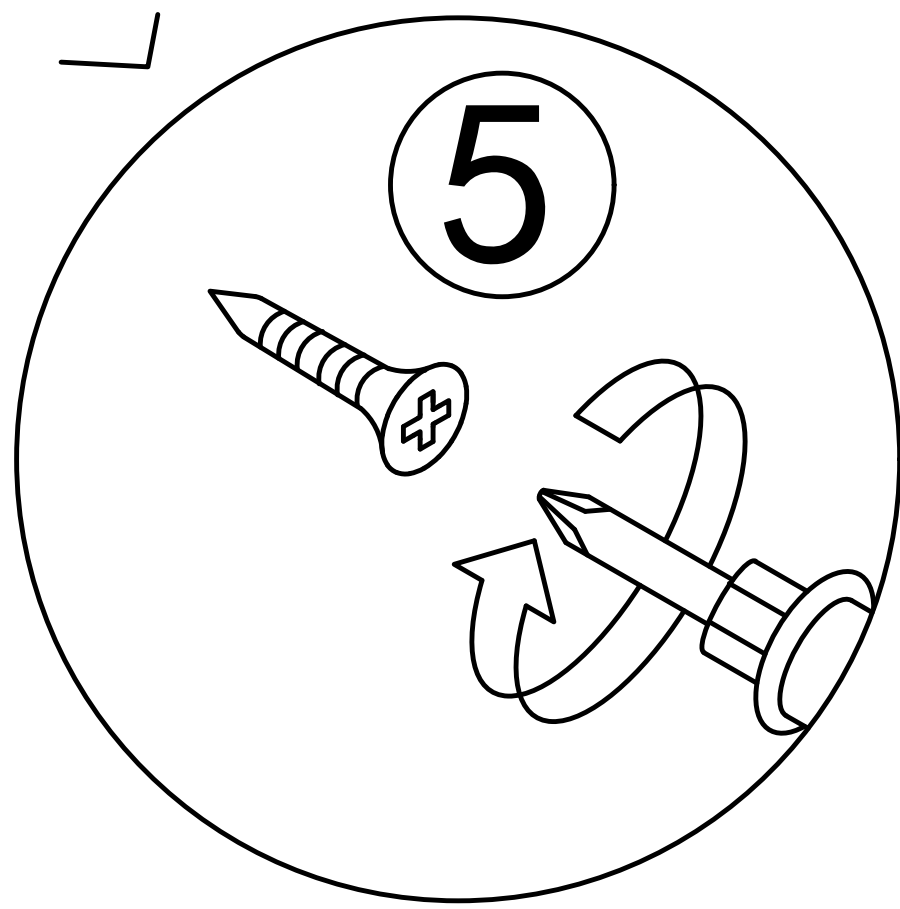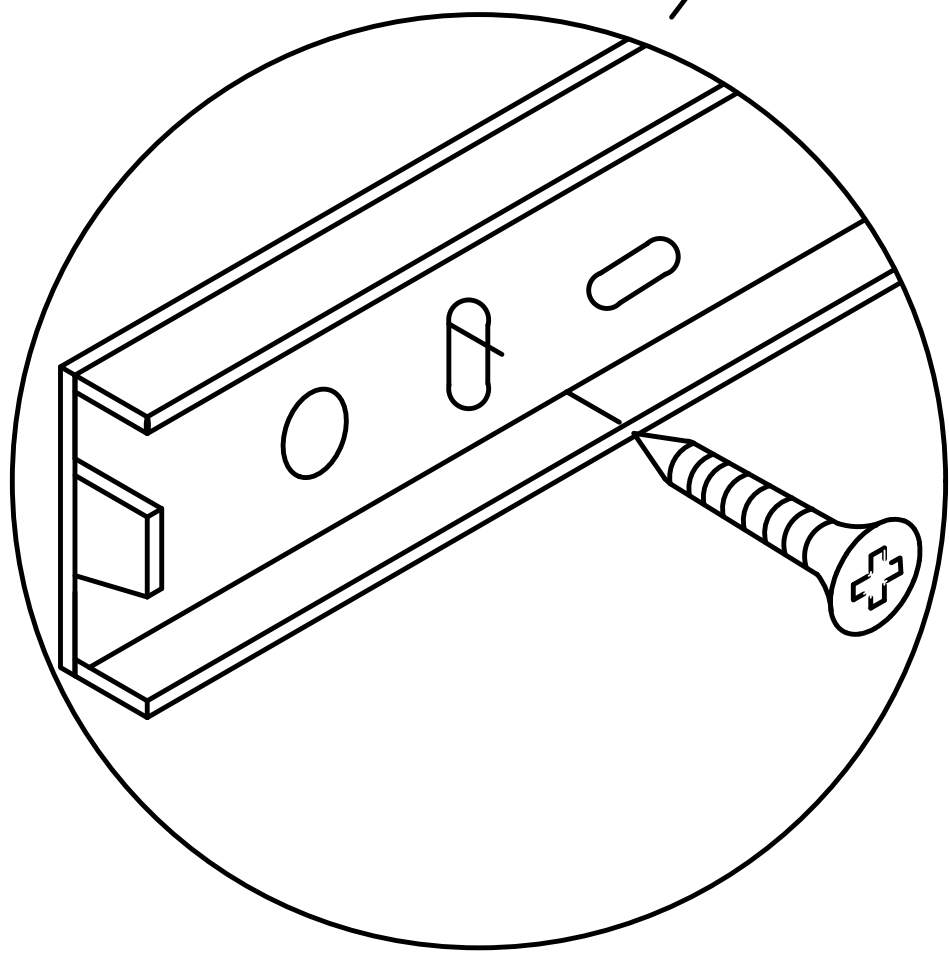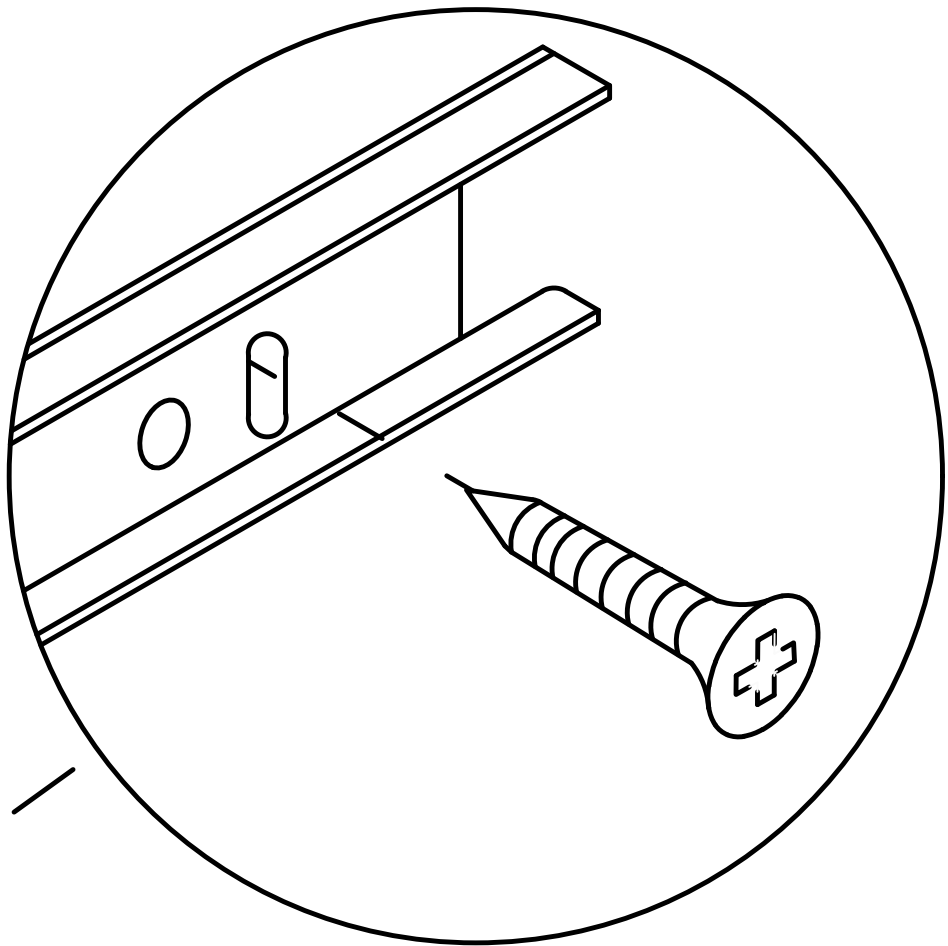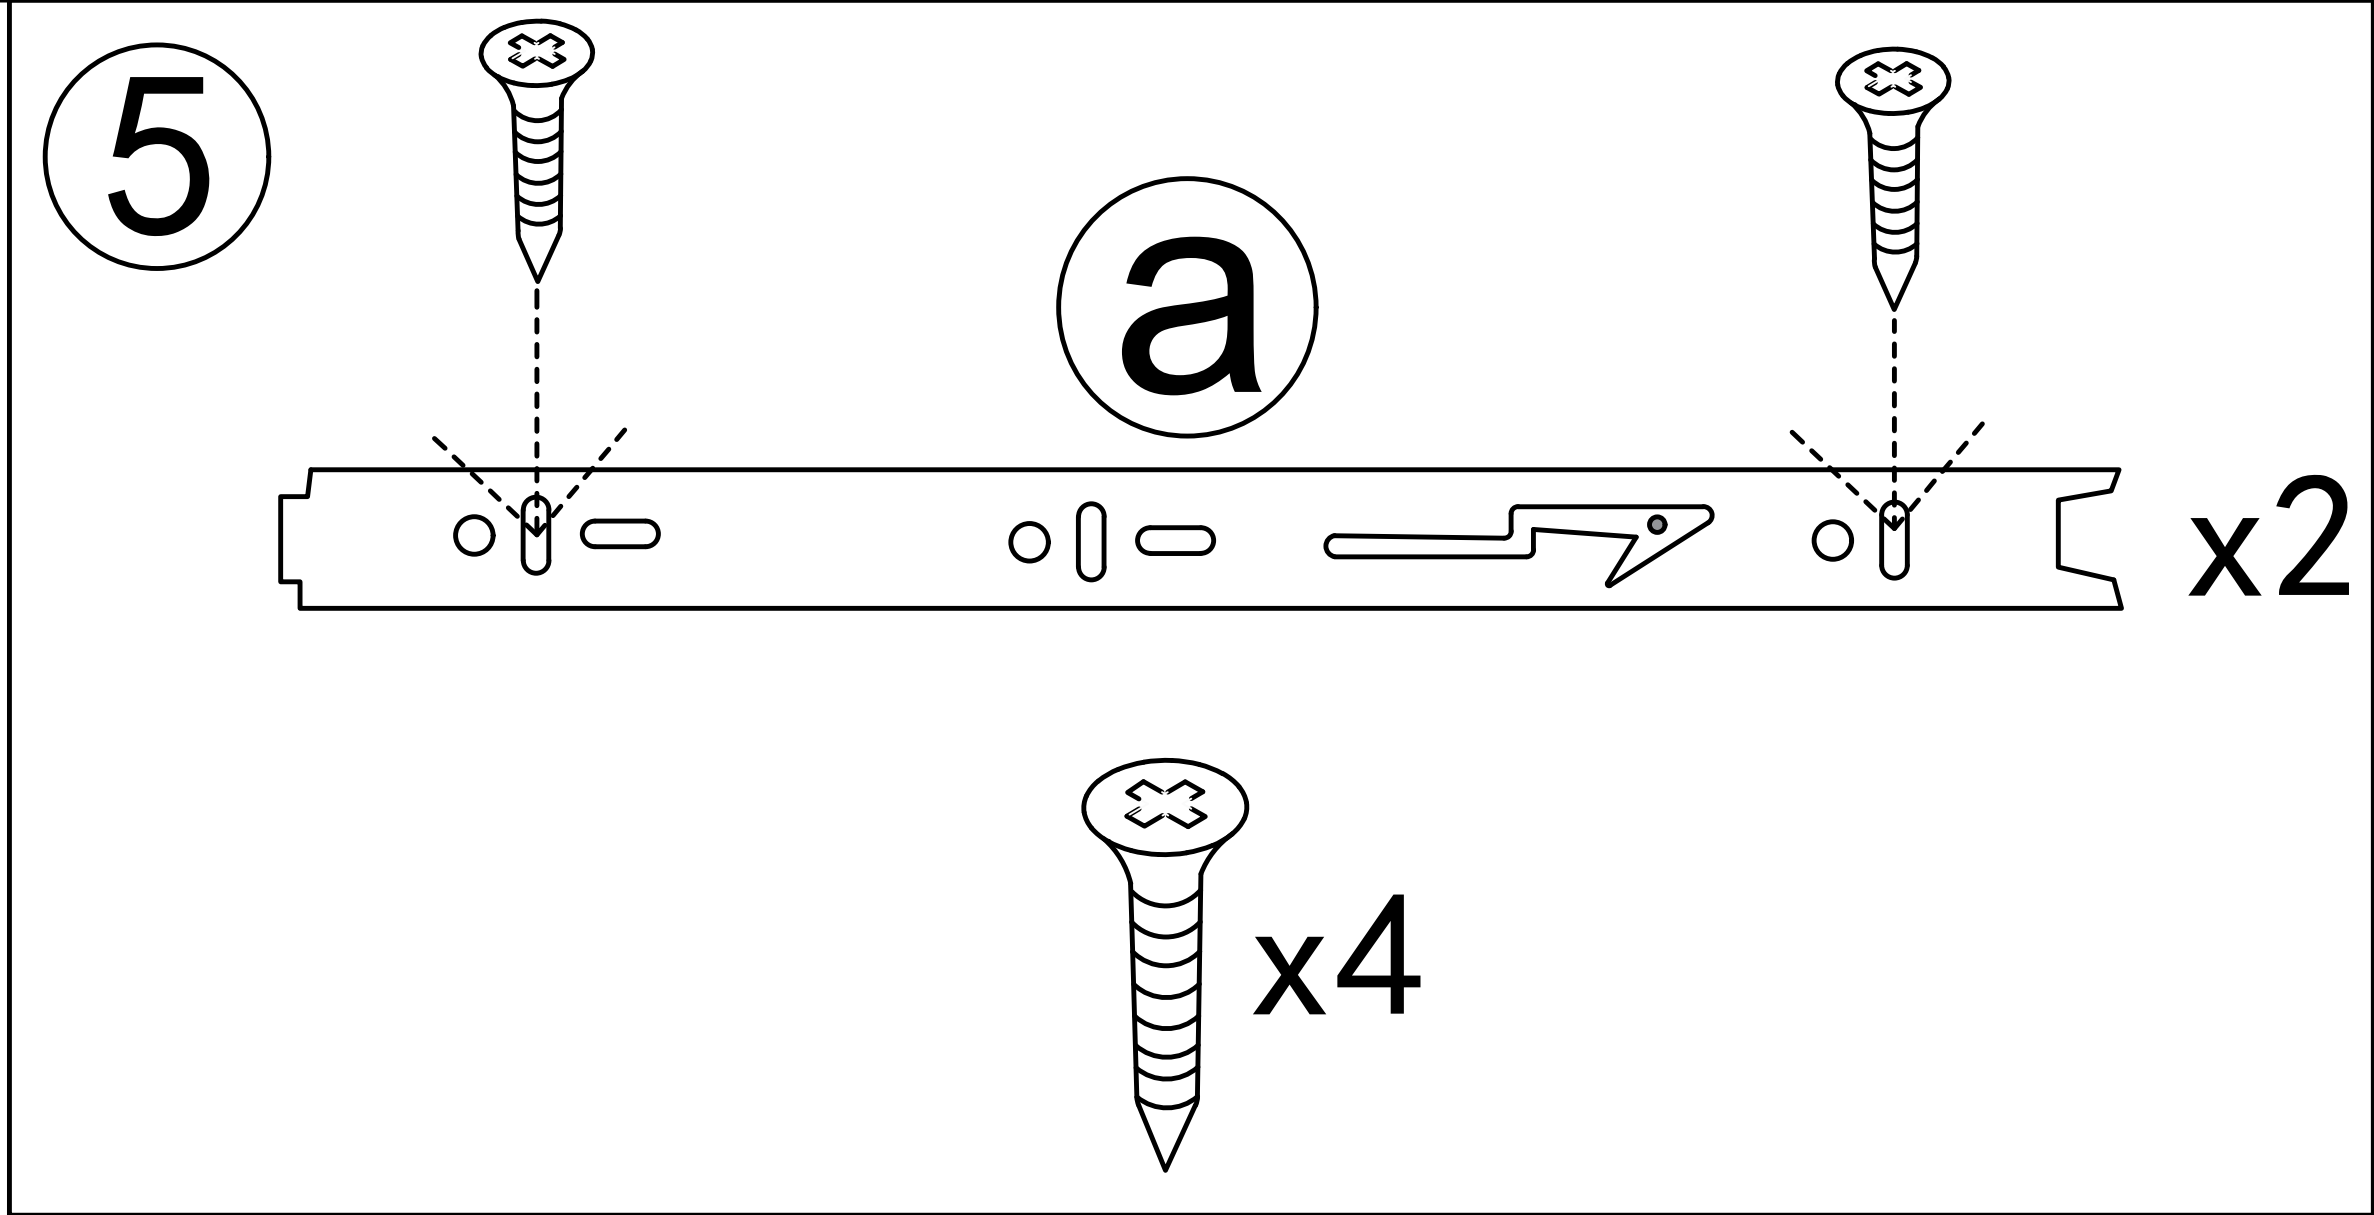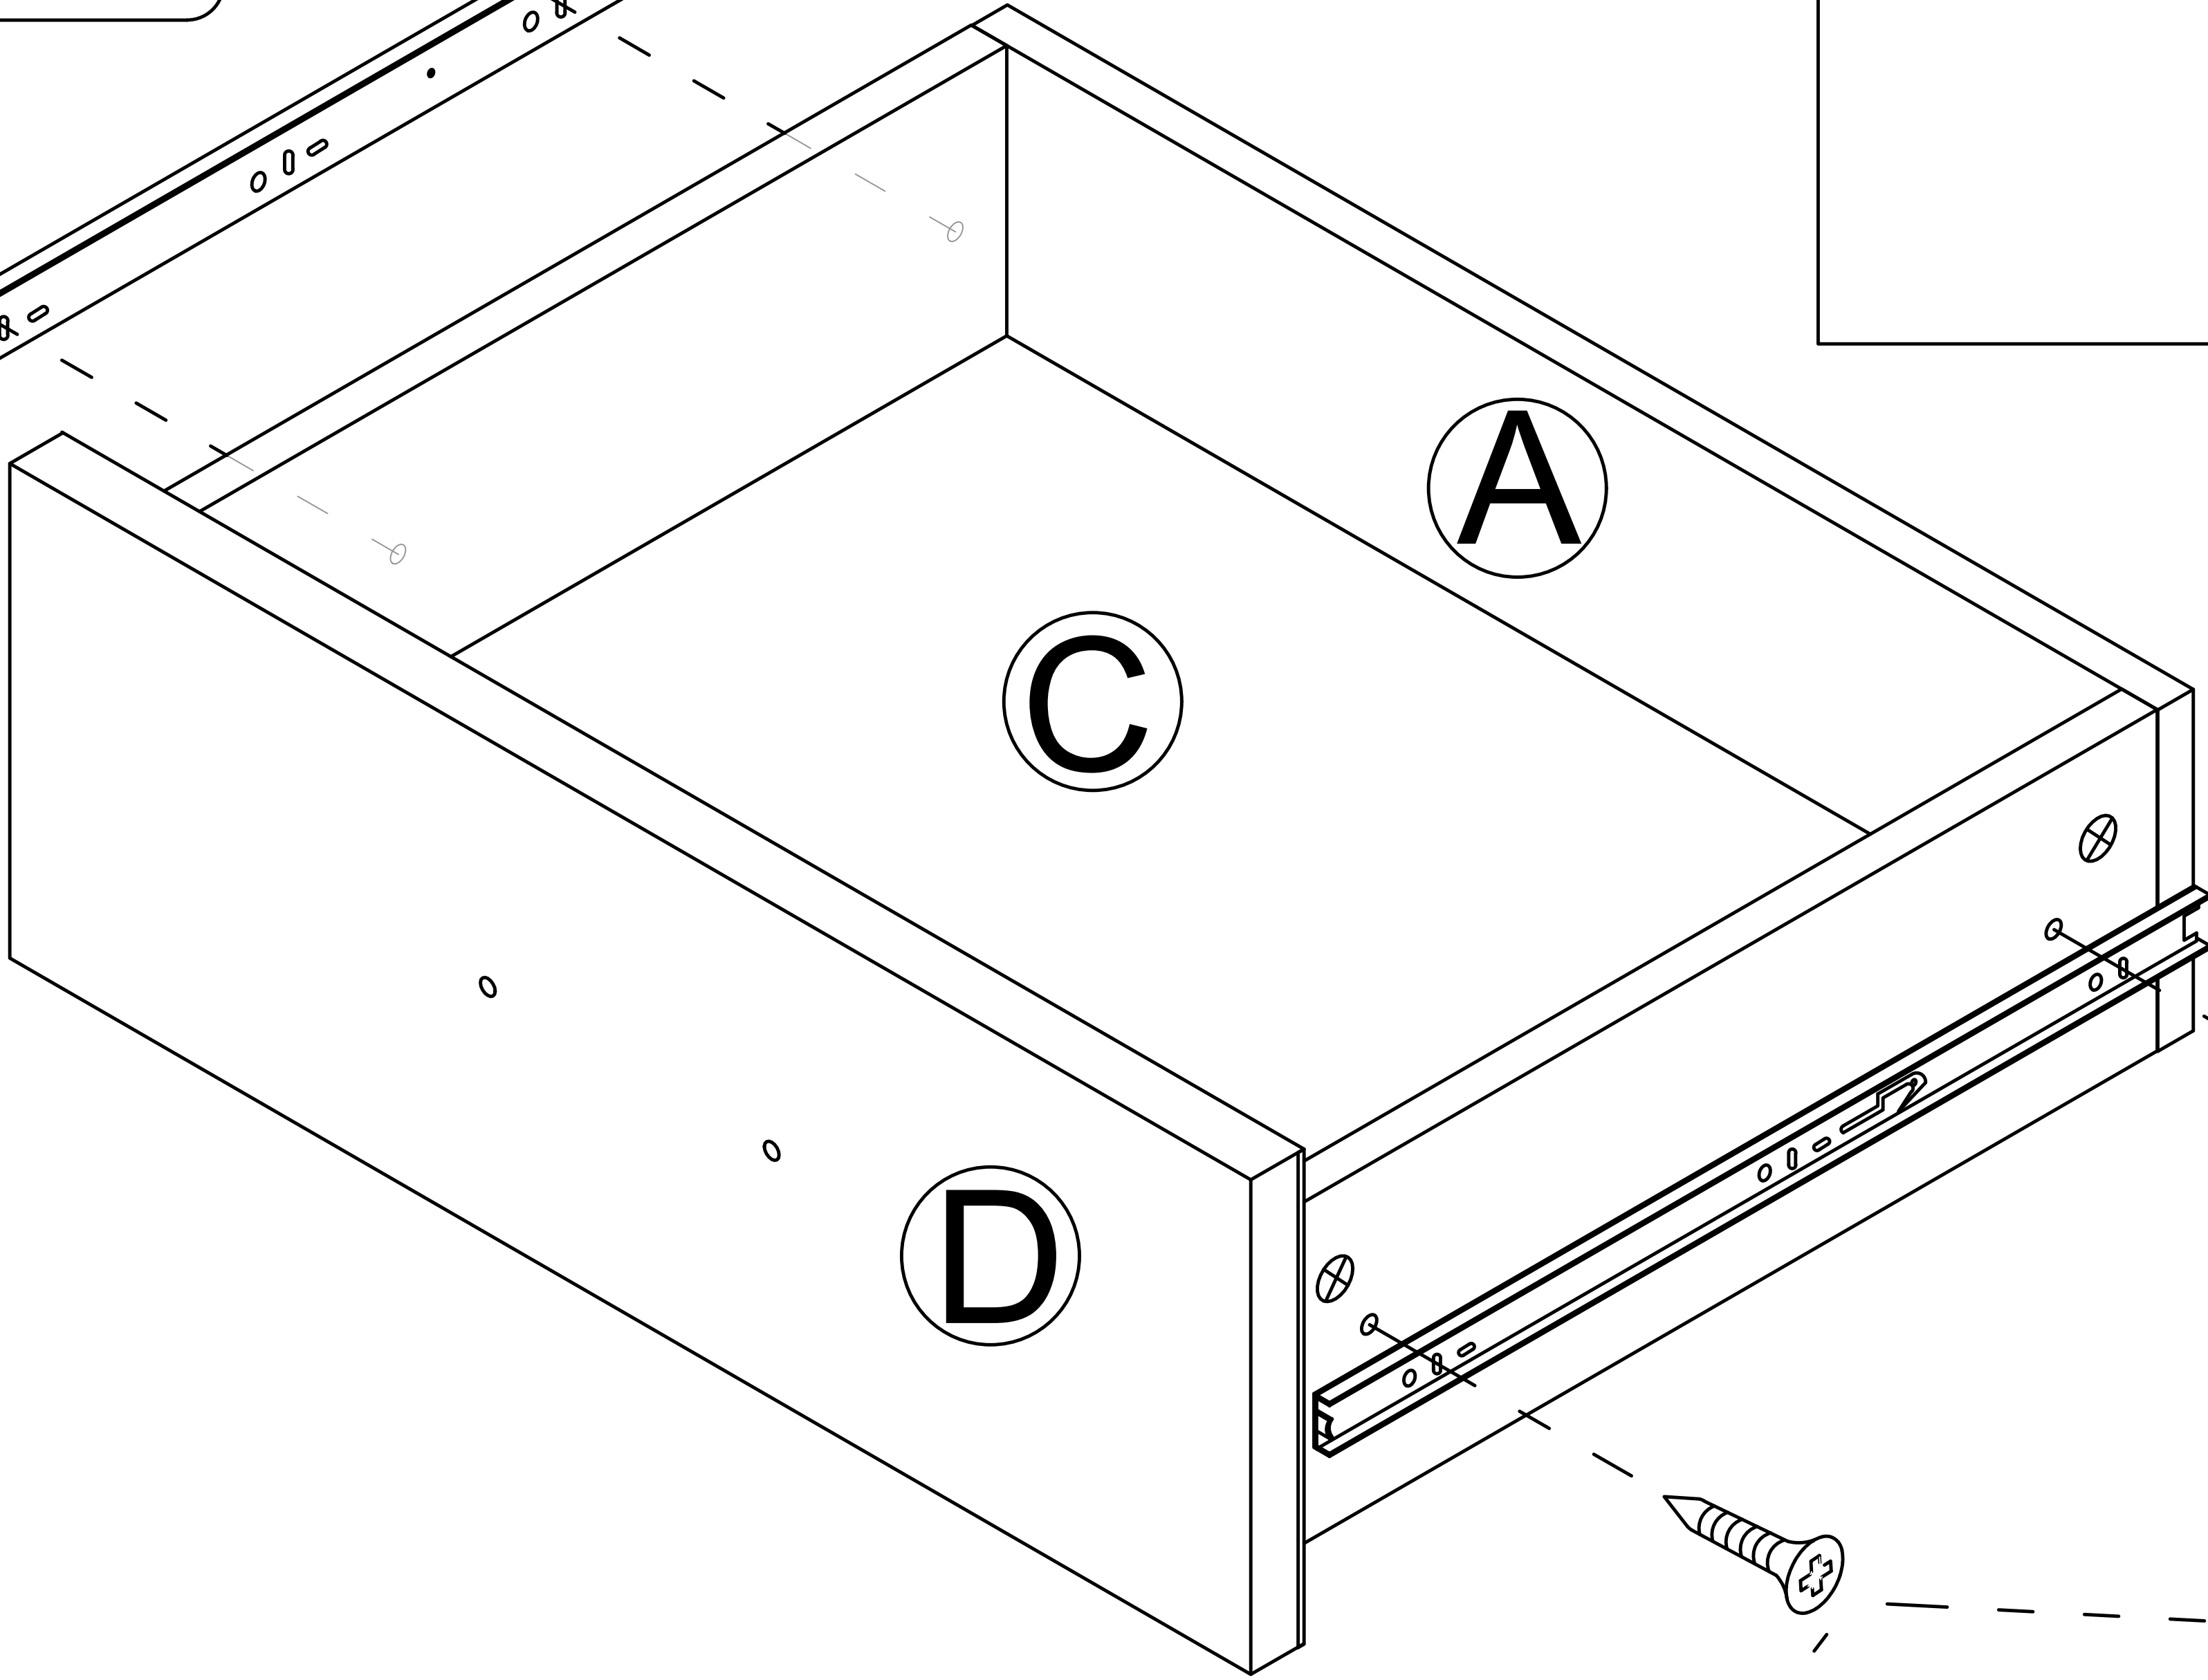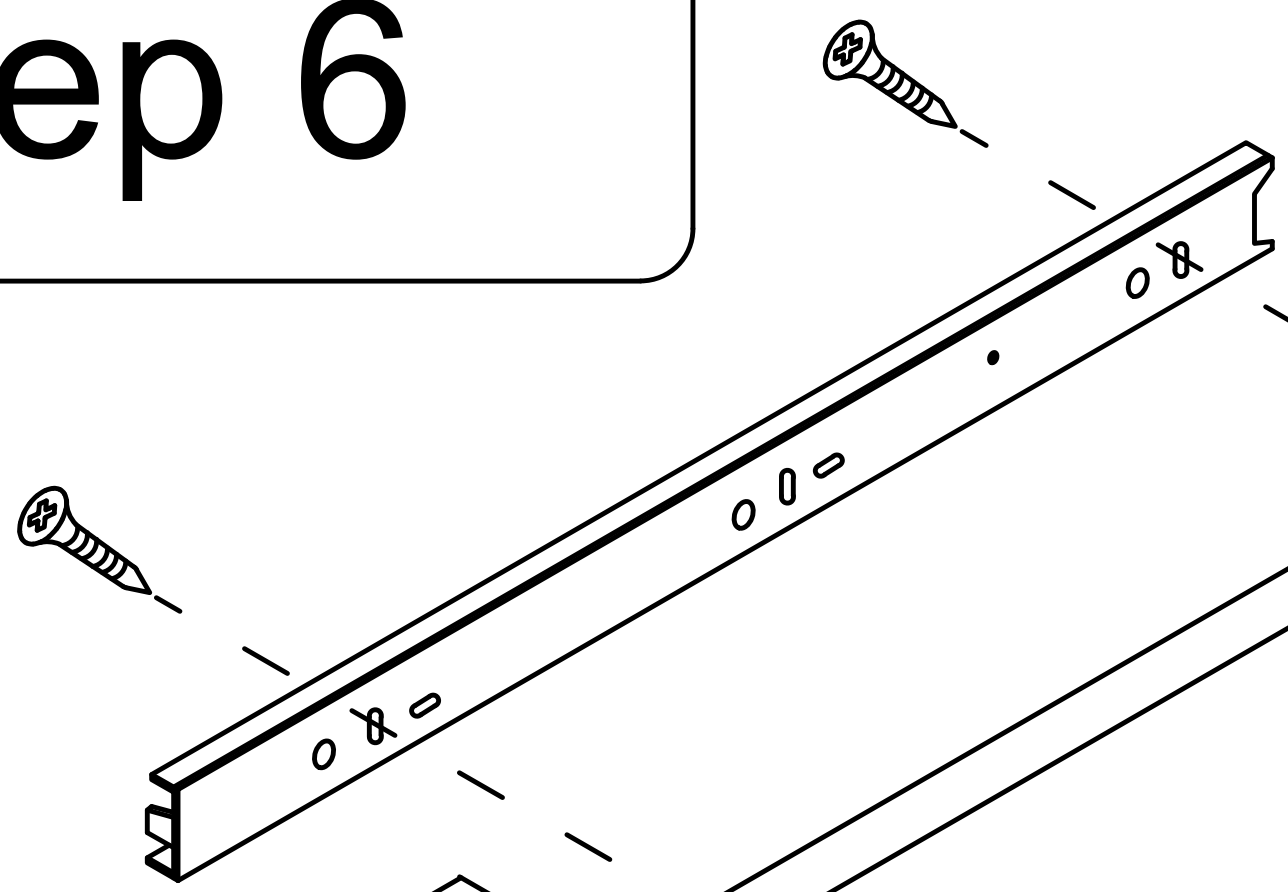


Step 7

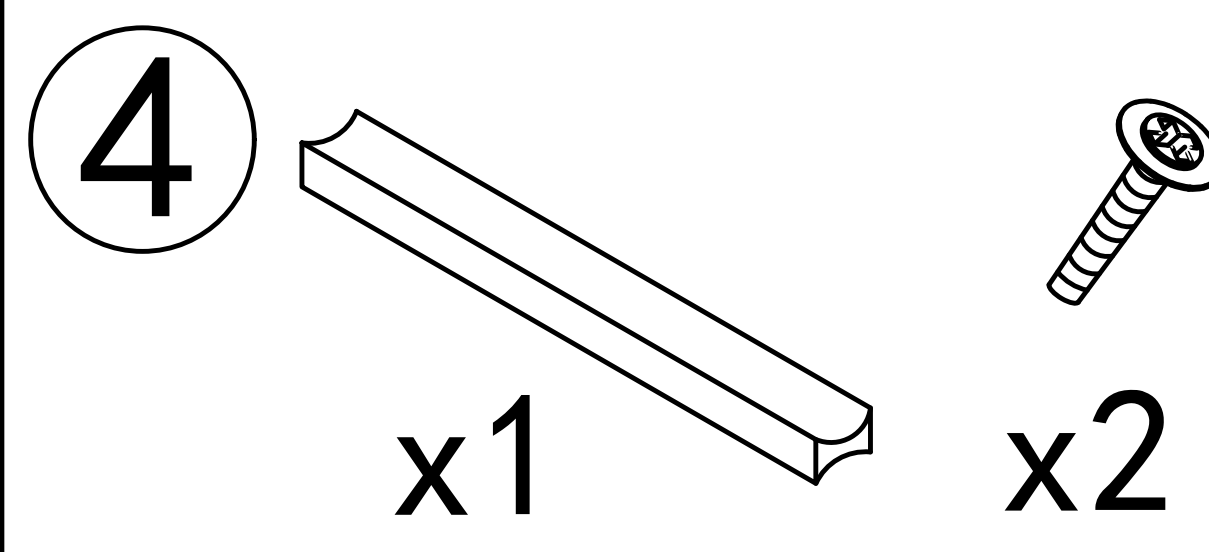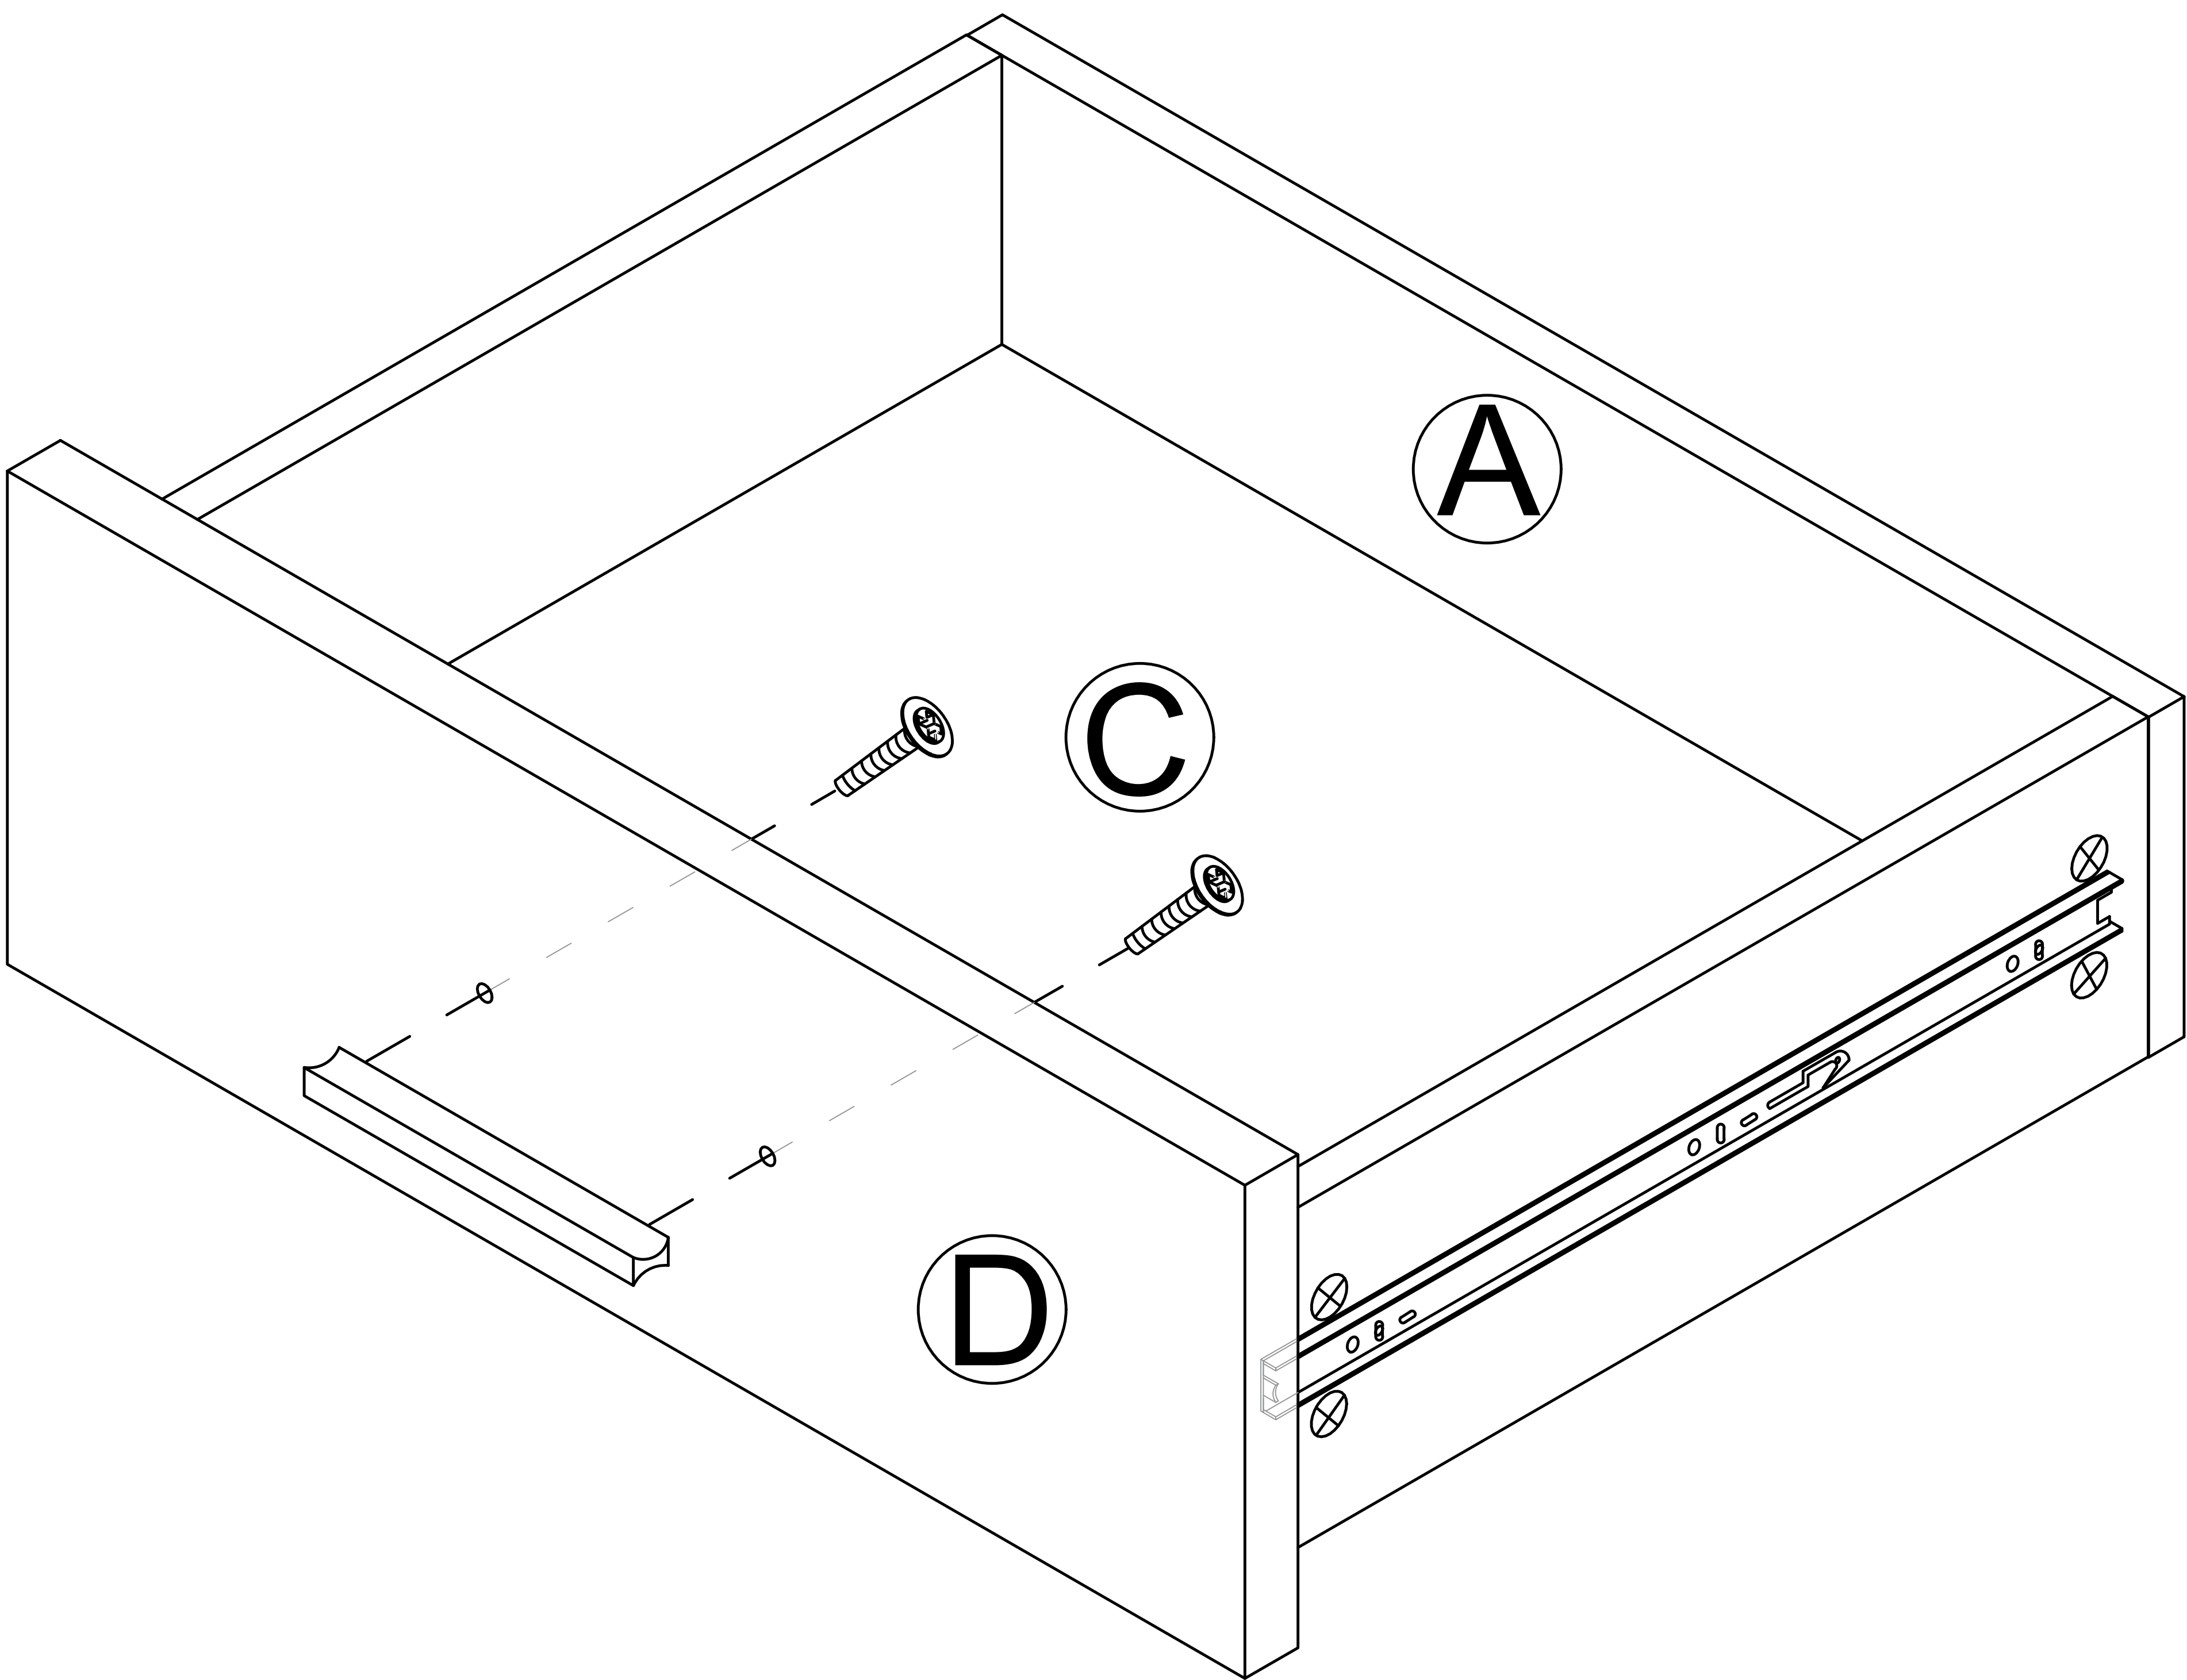


Step 8


- 1

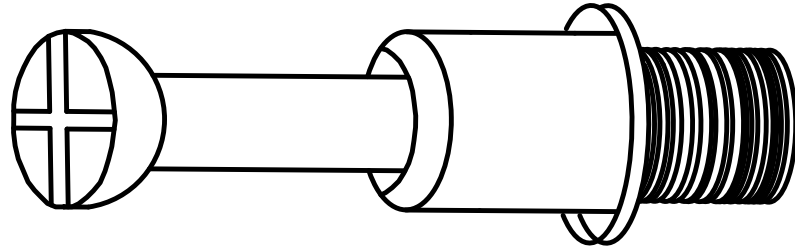


x16
- 2

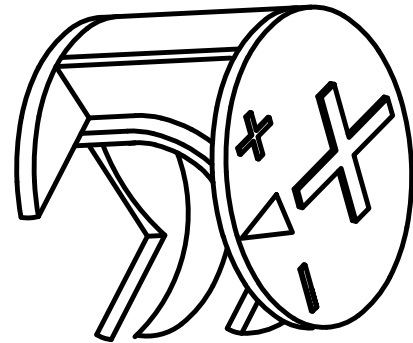



x16
- 4

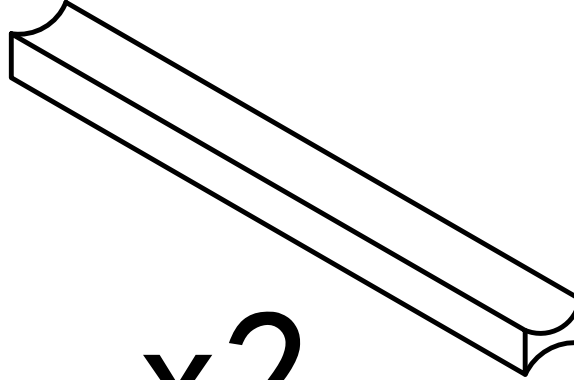

x2

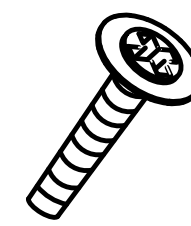


x4
- 5

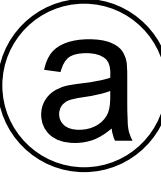

x4




x8

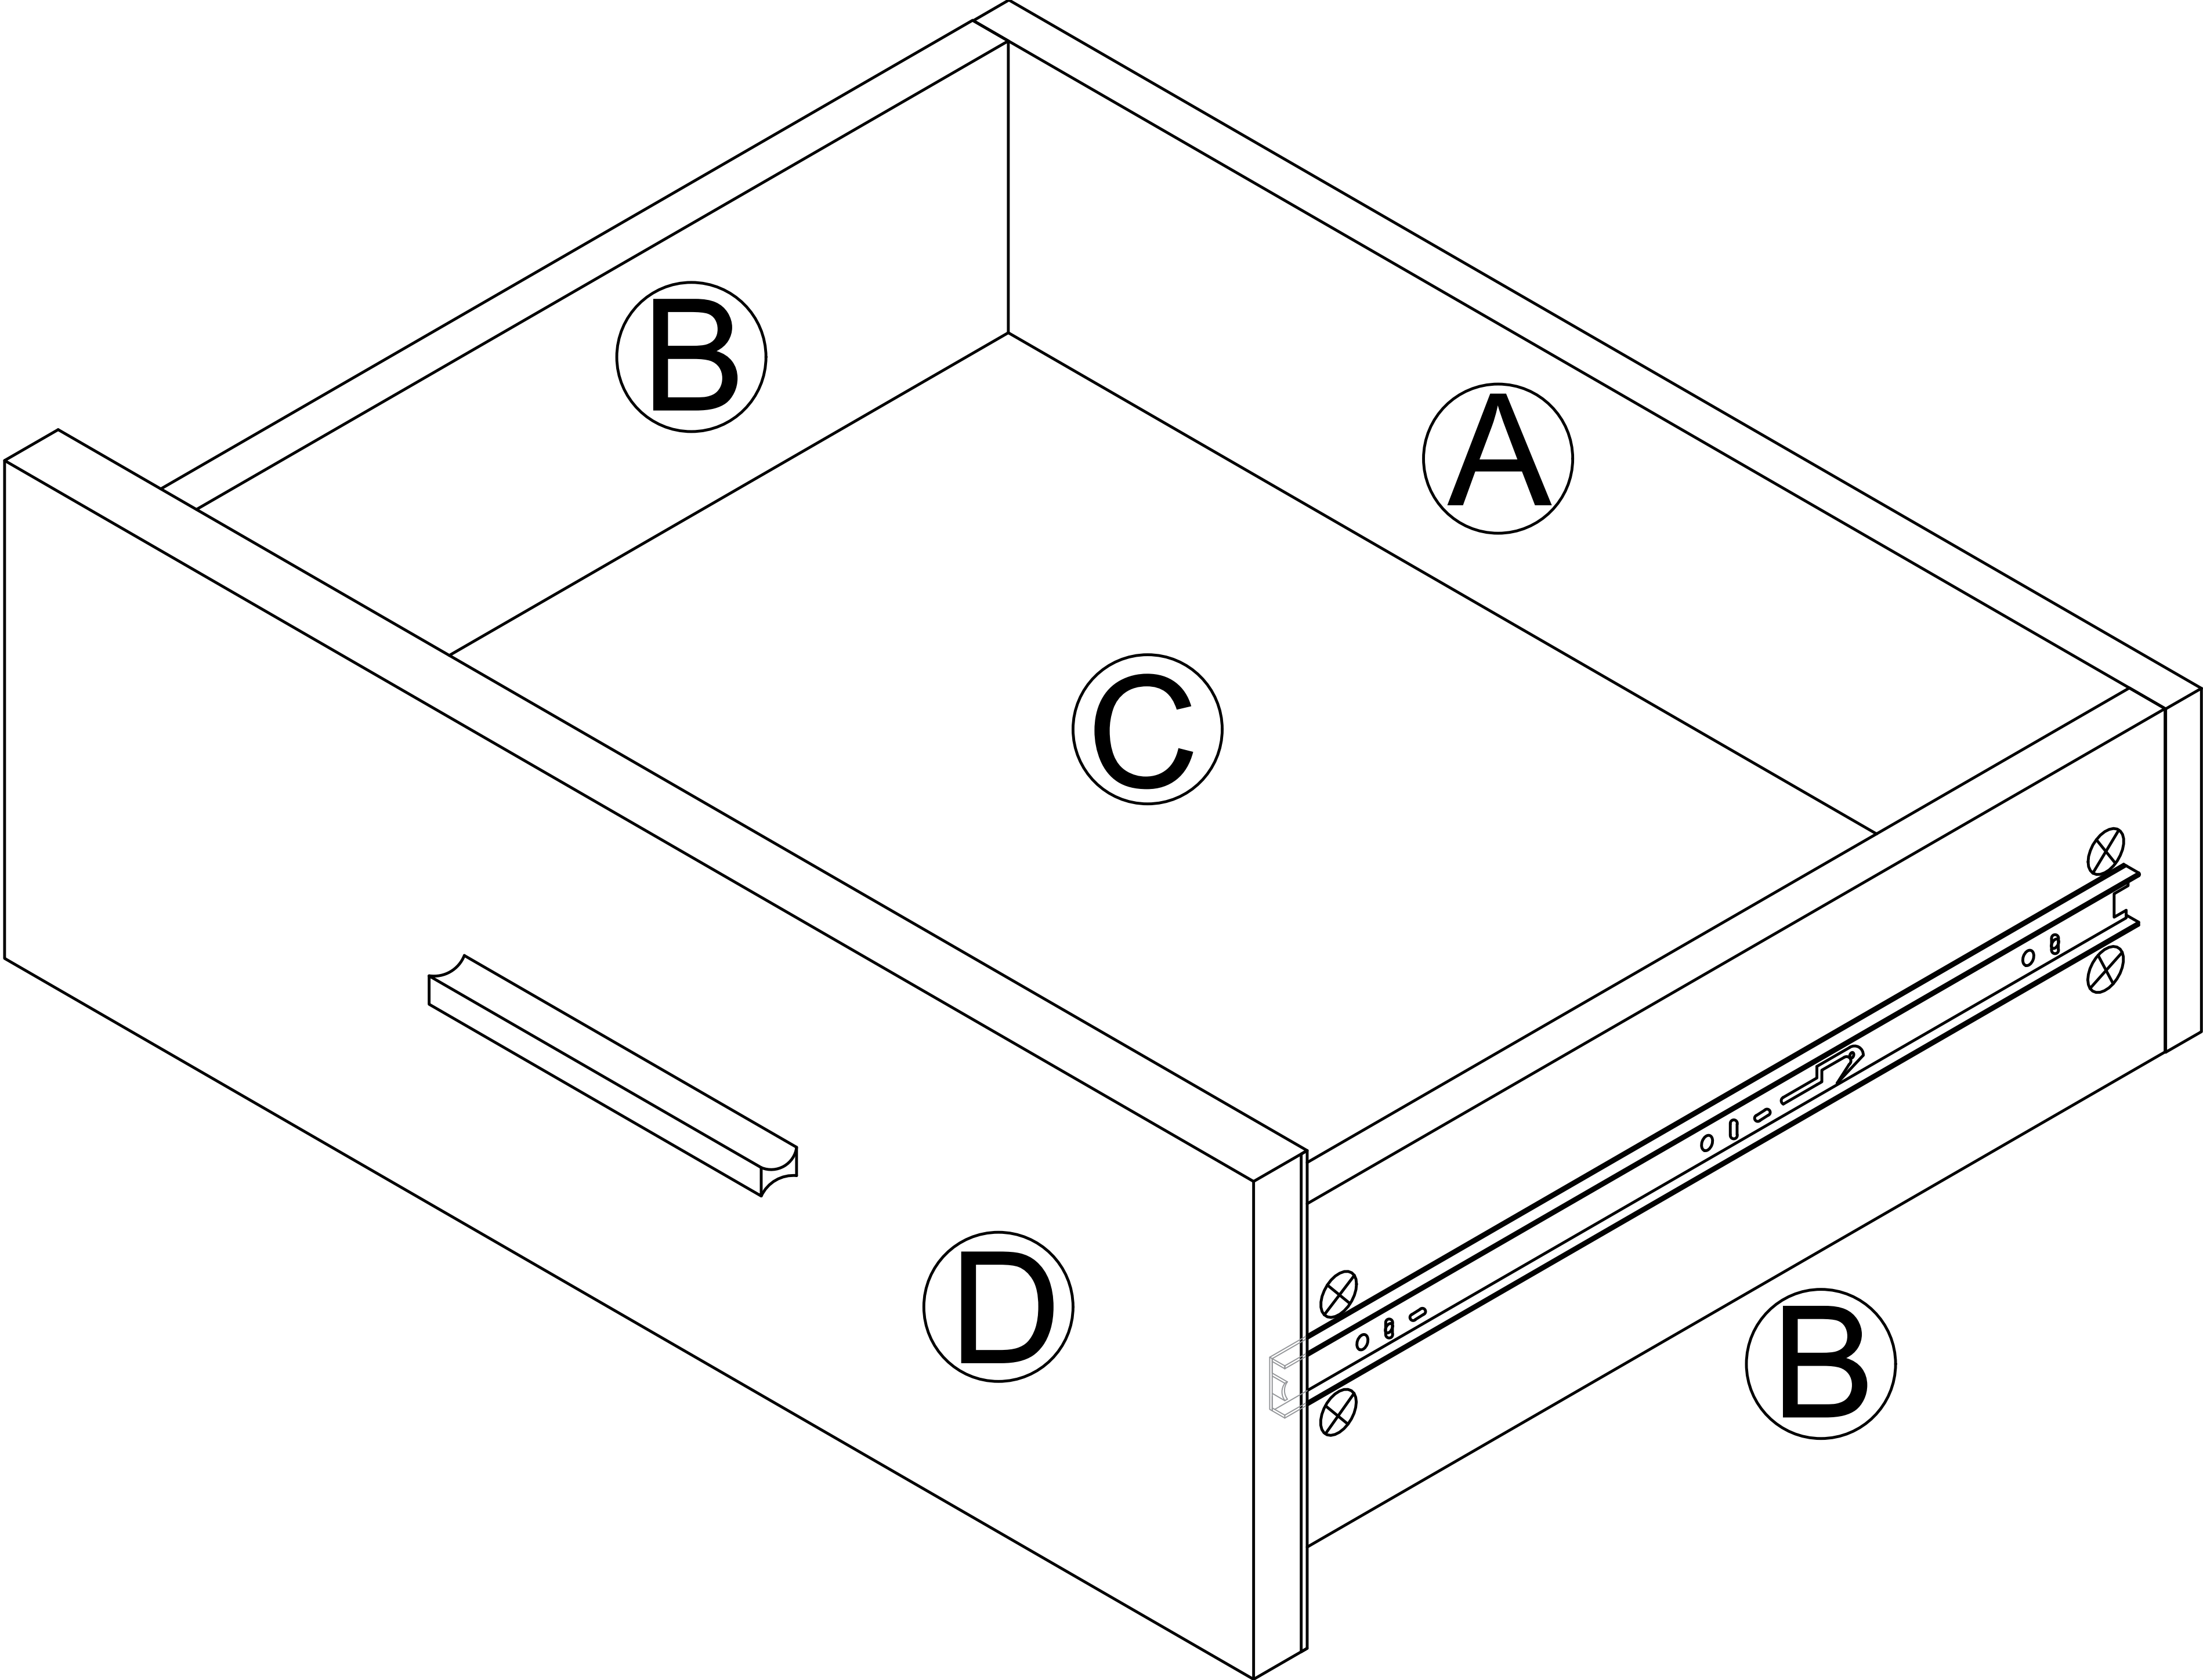

x3


Use the same way to install another drawer

# Product structure decomposition

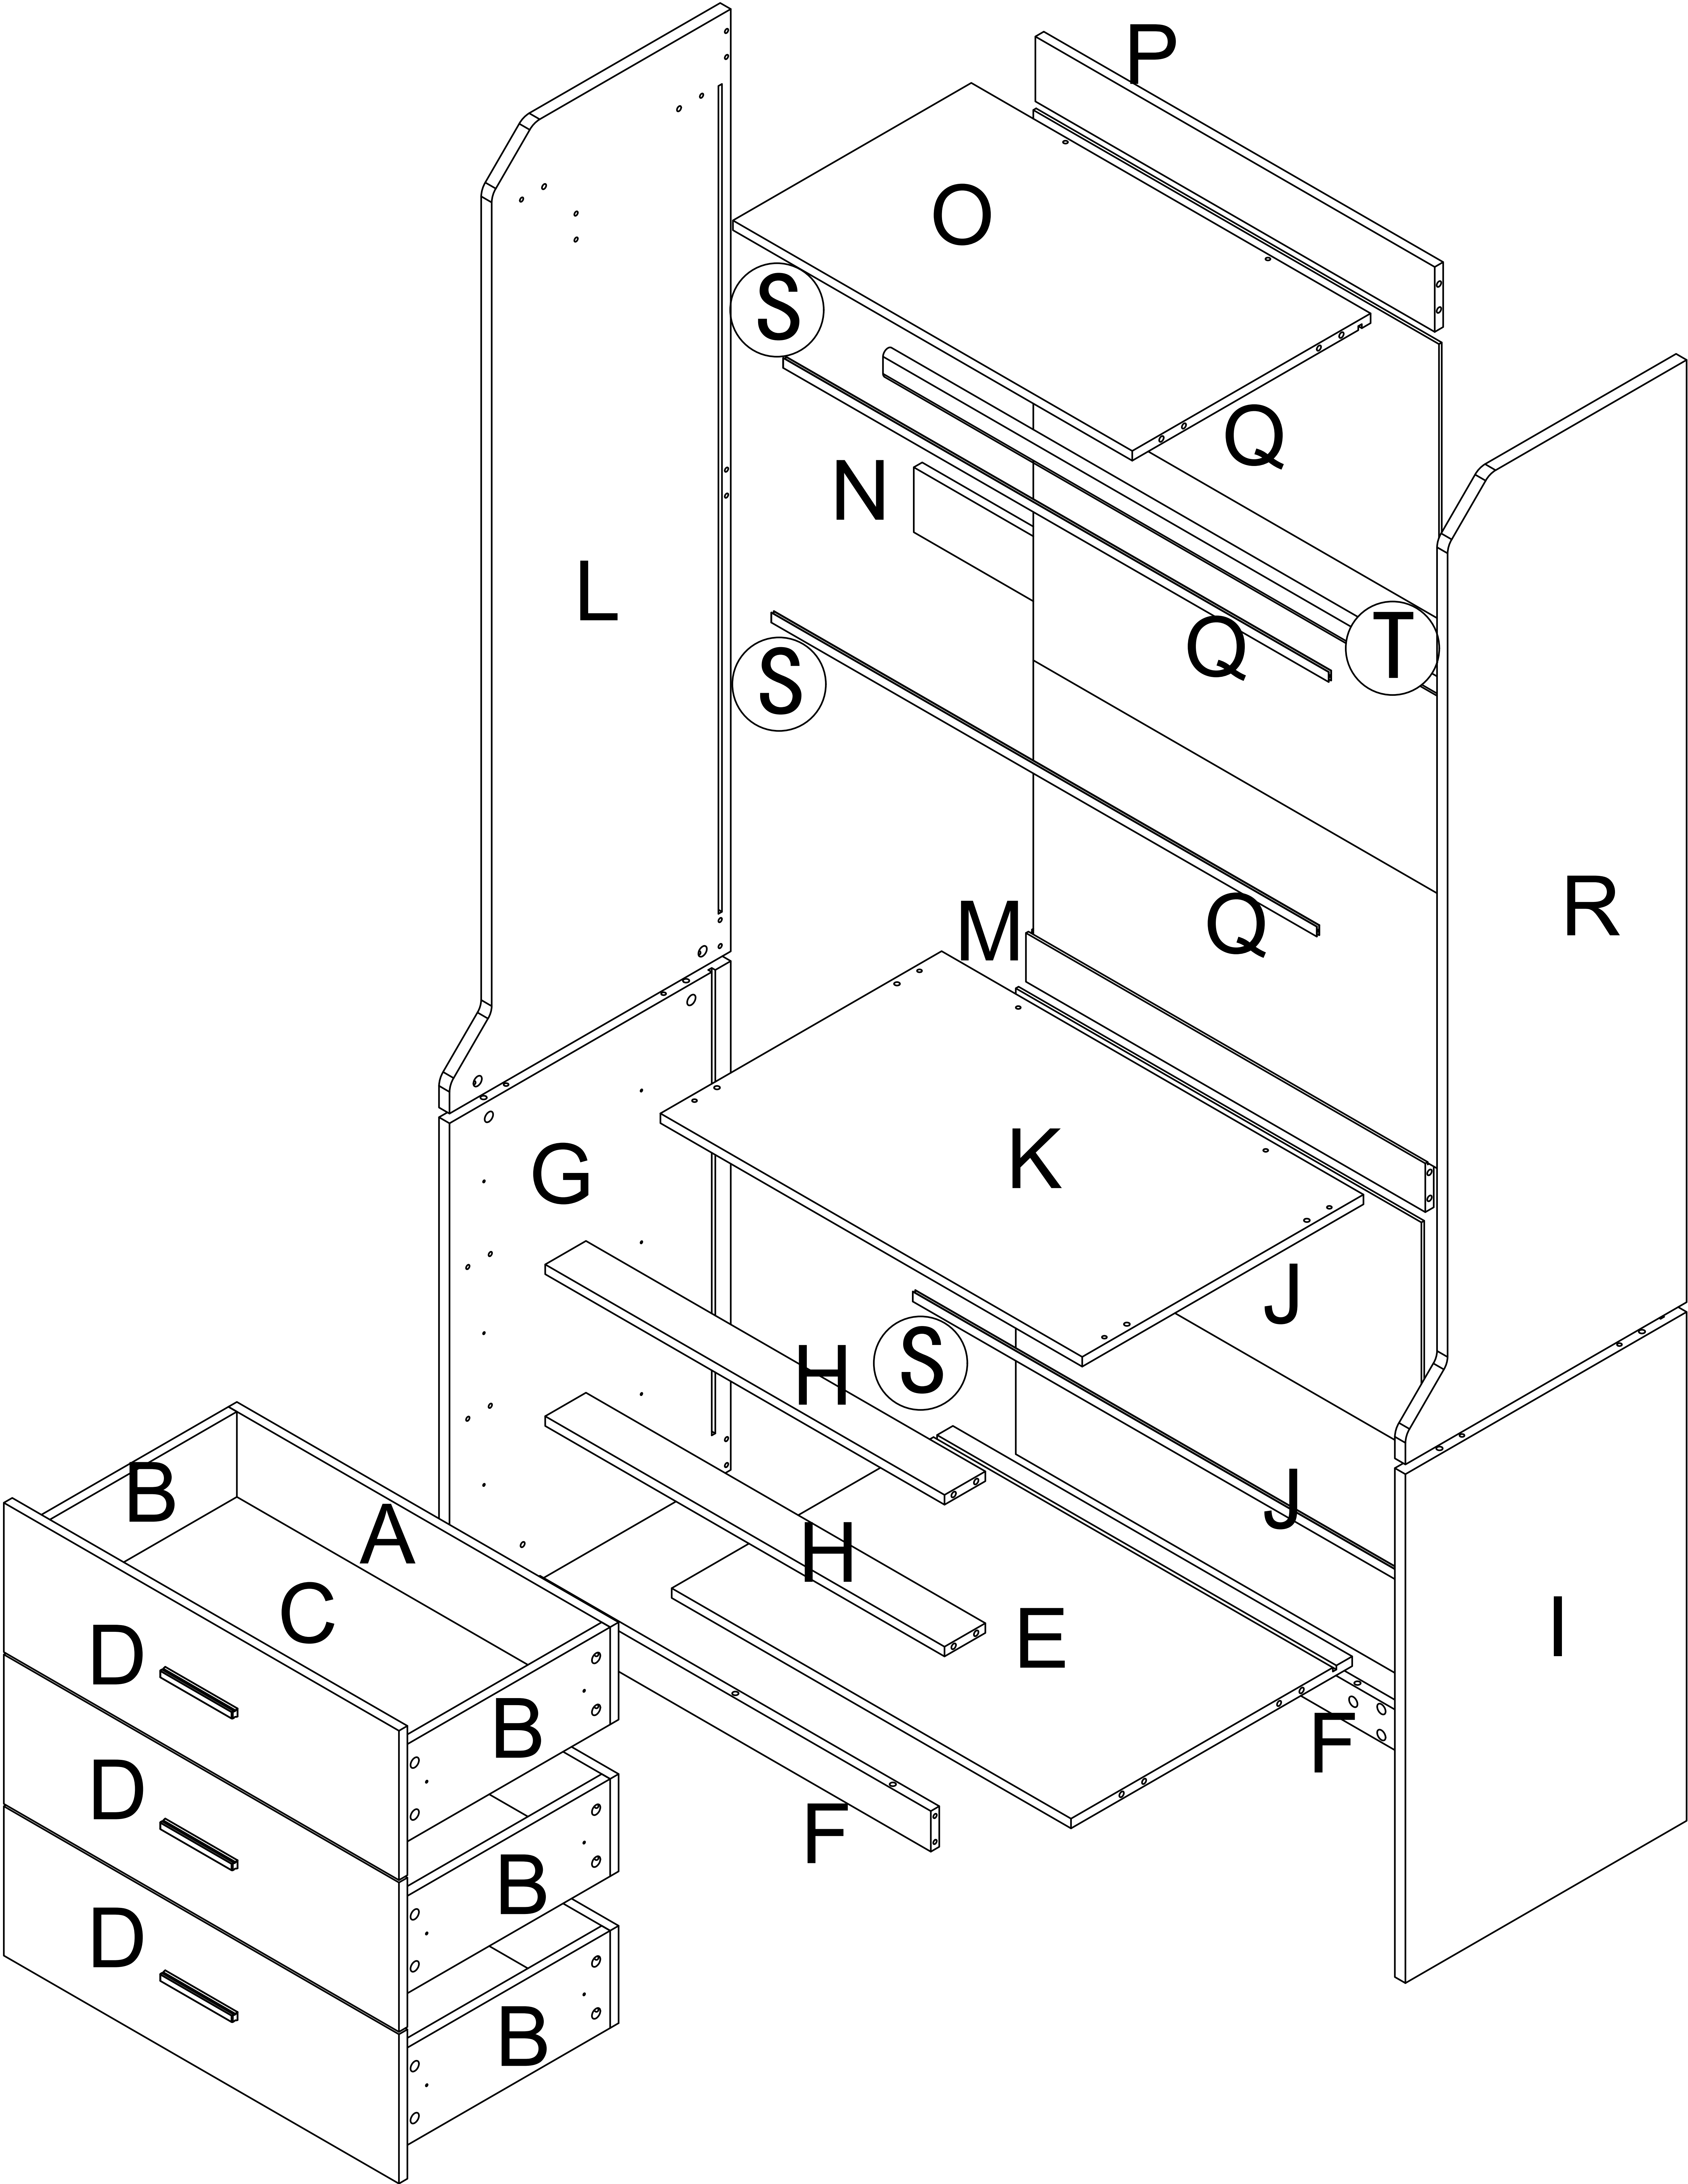


Step 9

1

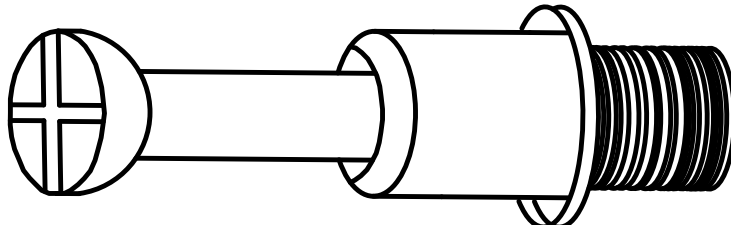


x6

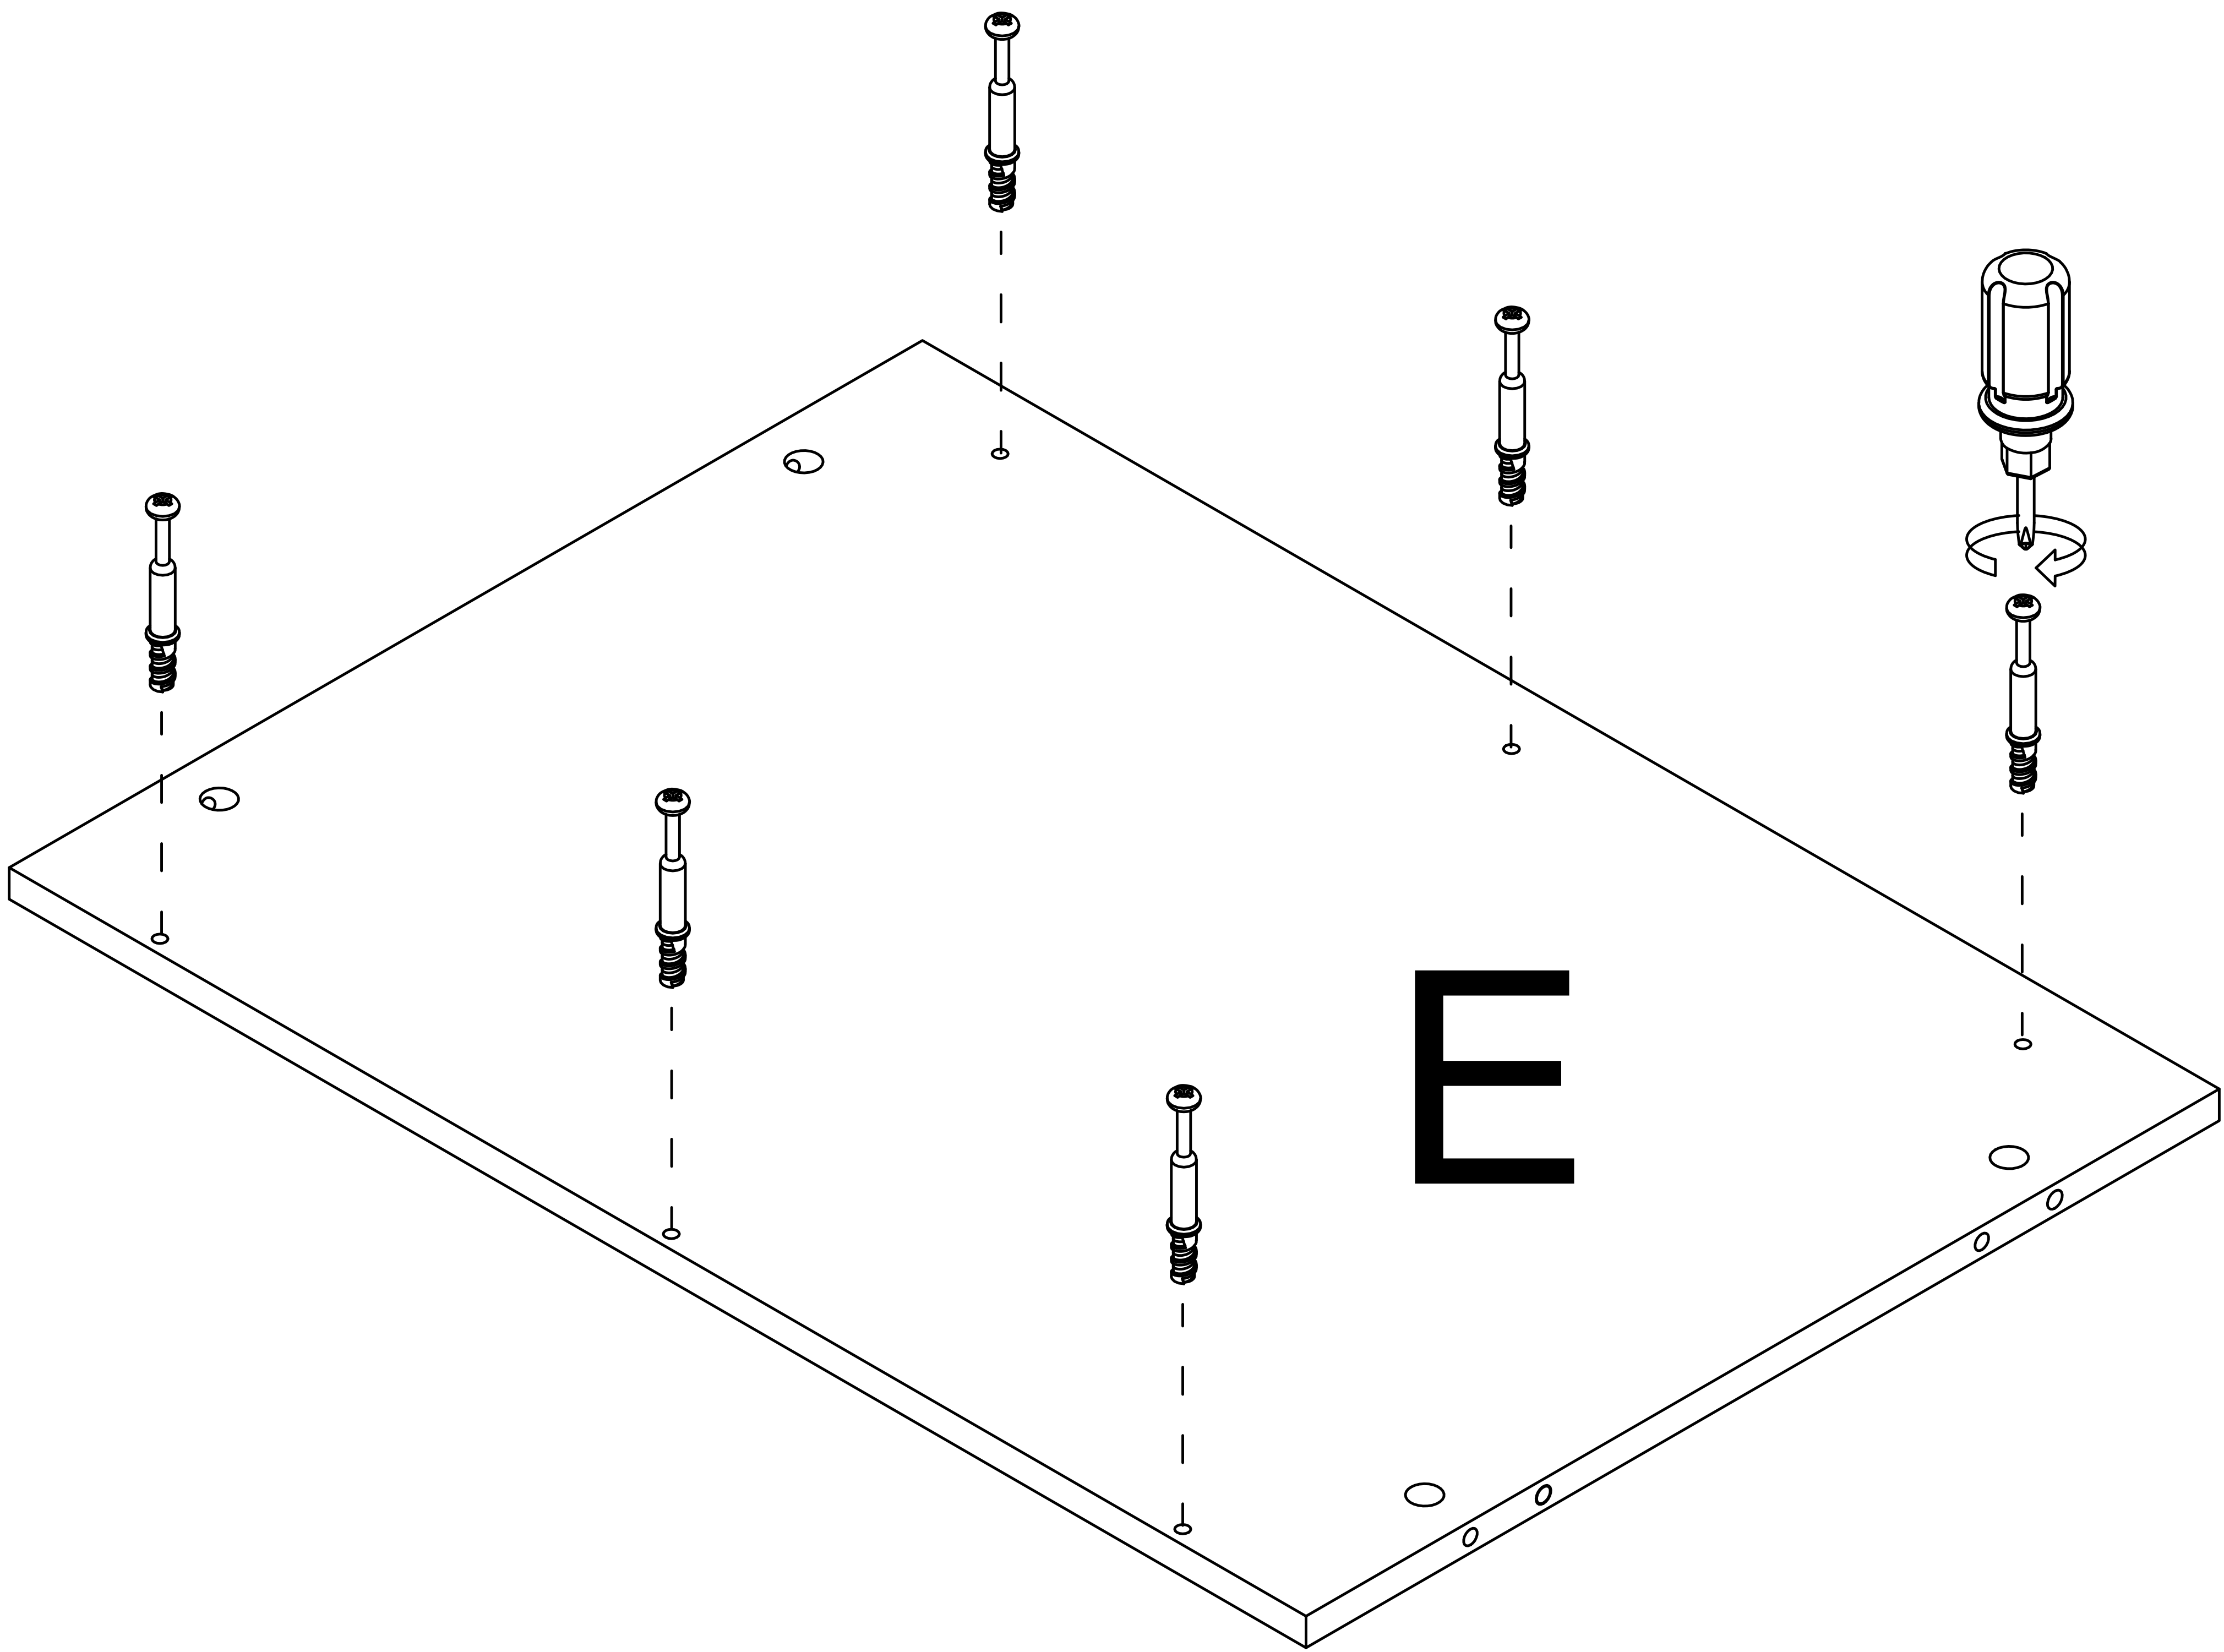


Step 10

2

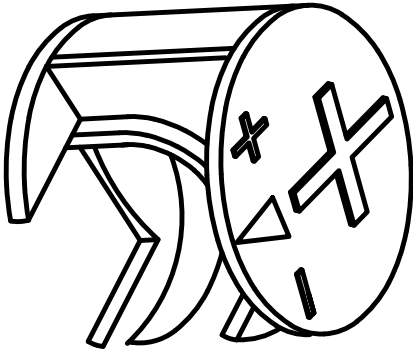


x3

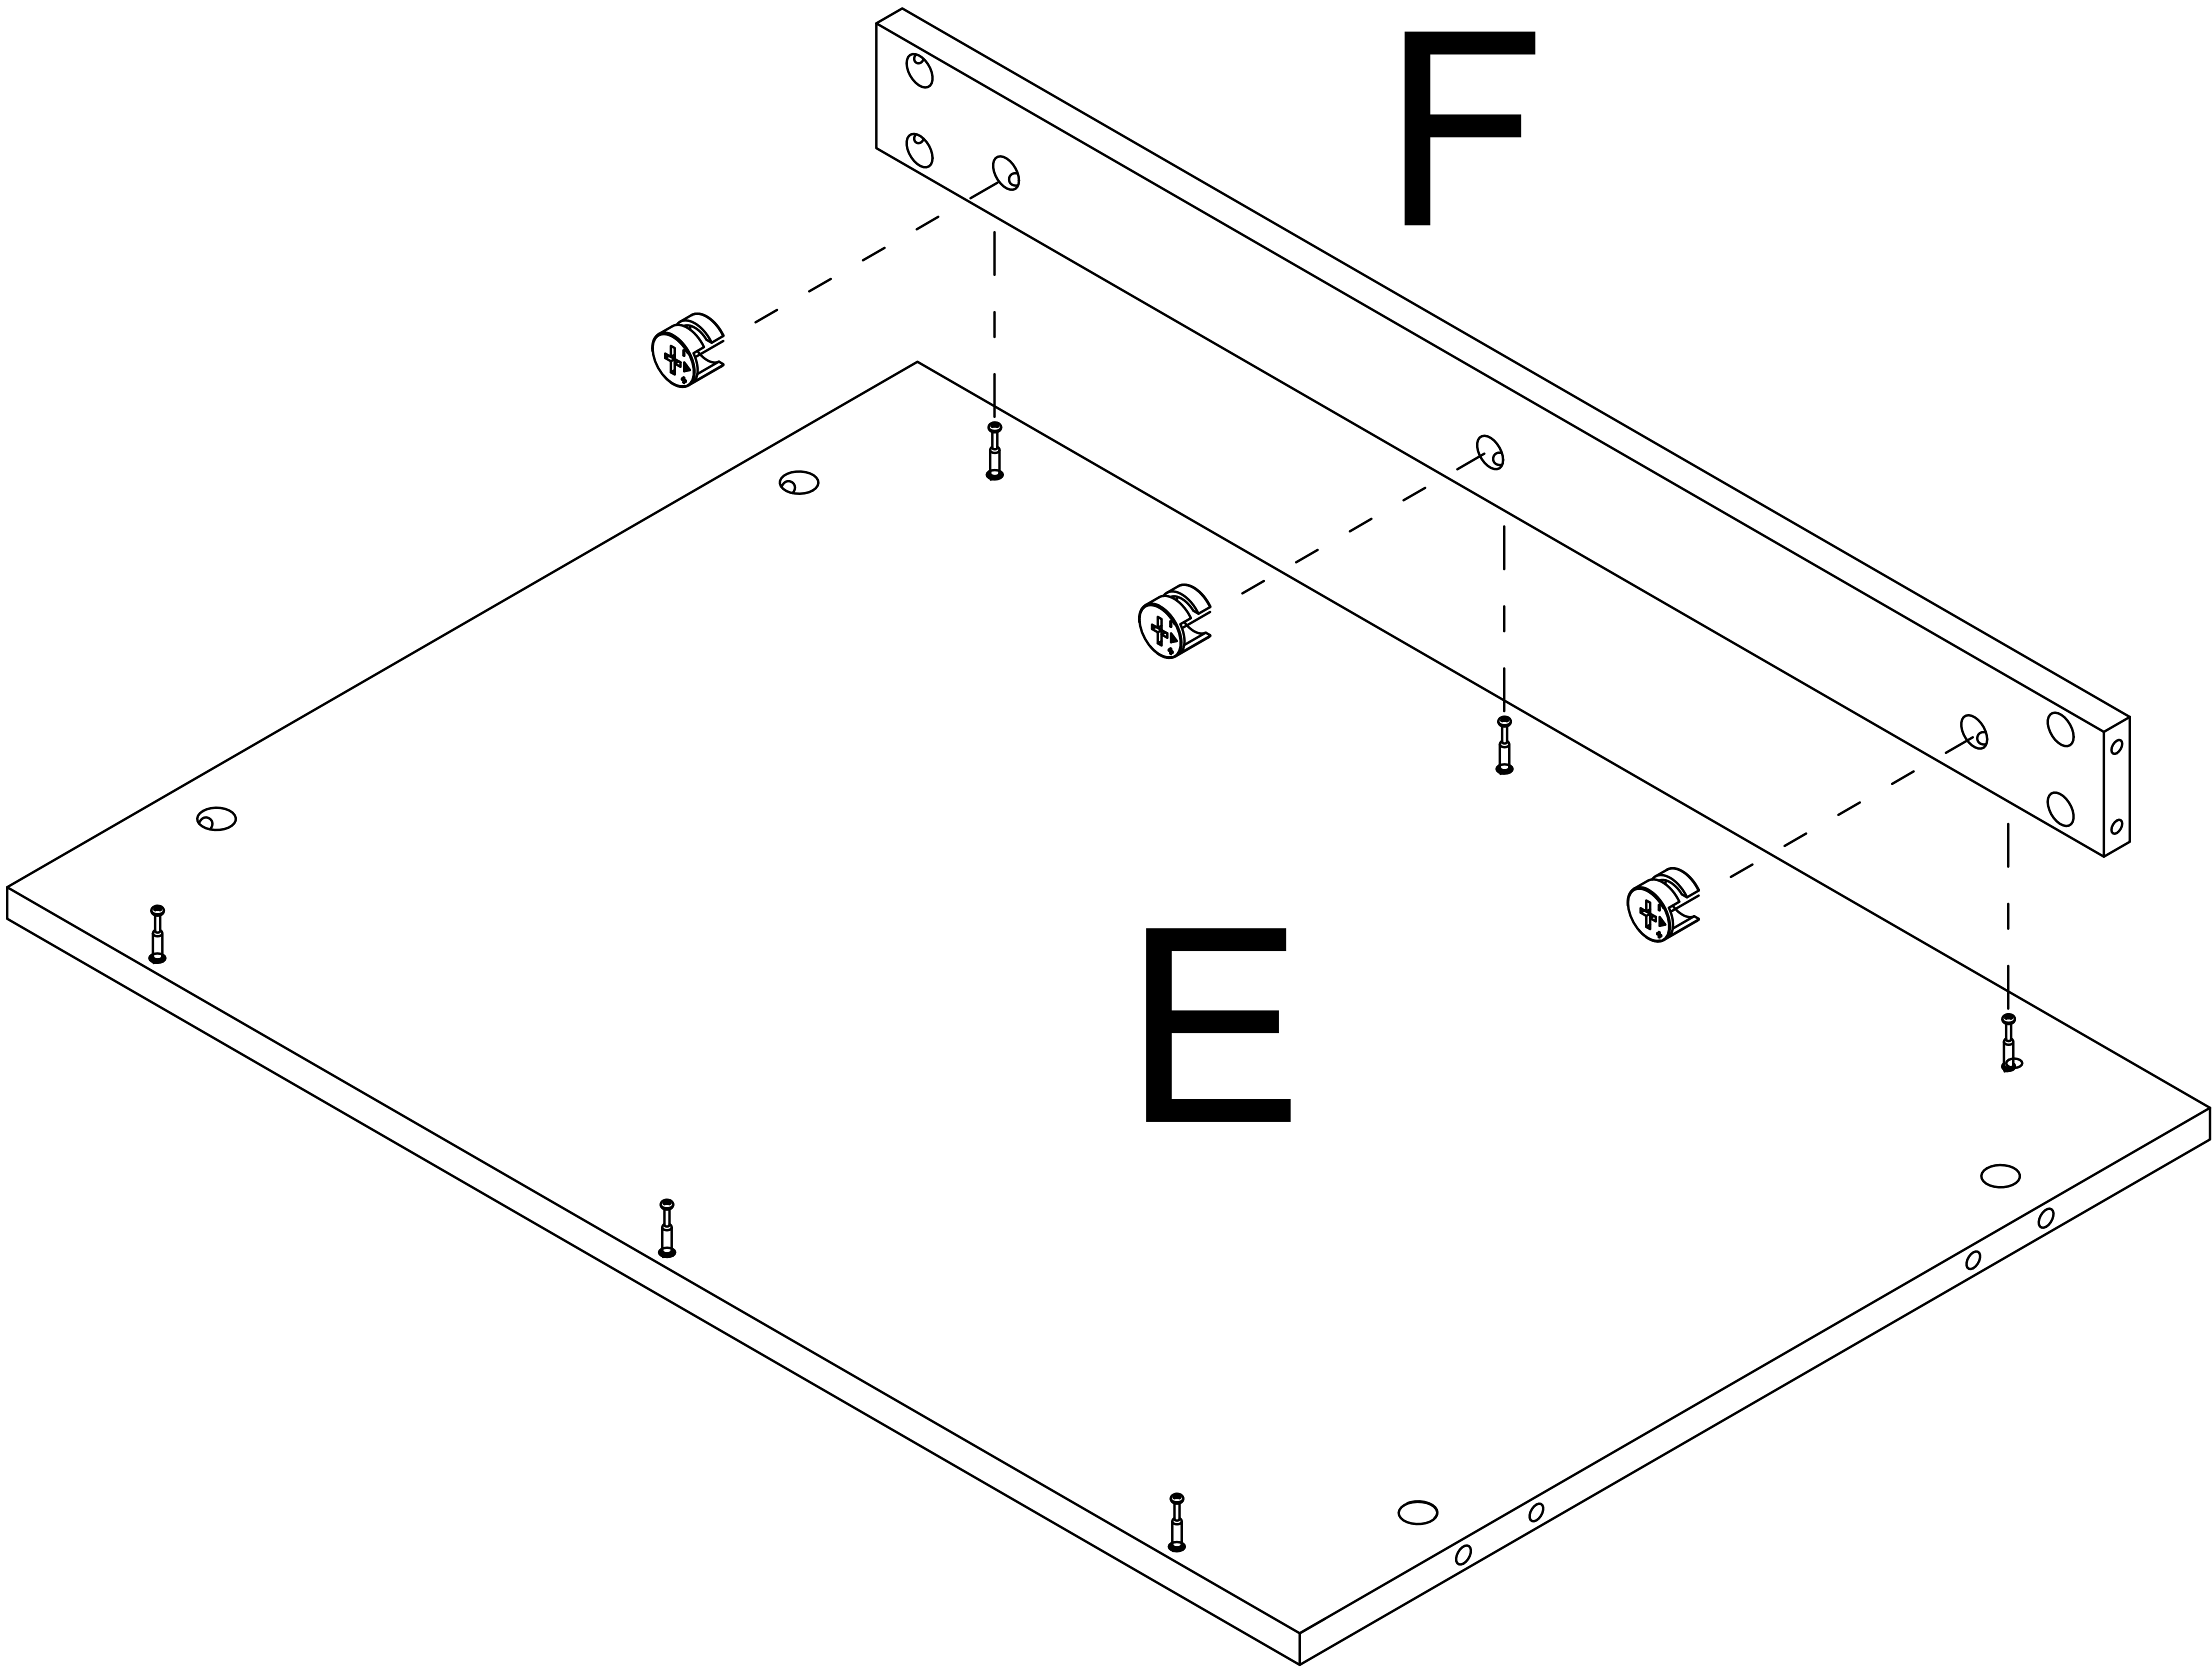


Step 11

2

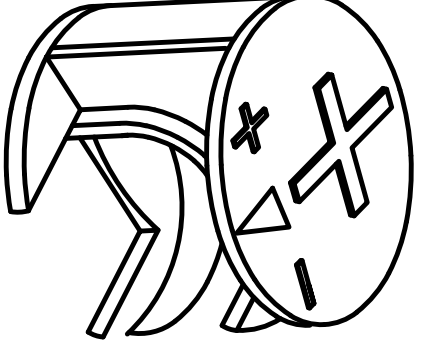

x3

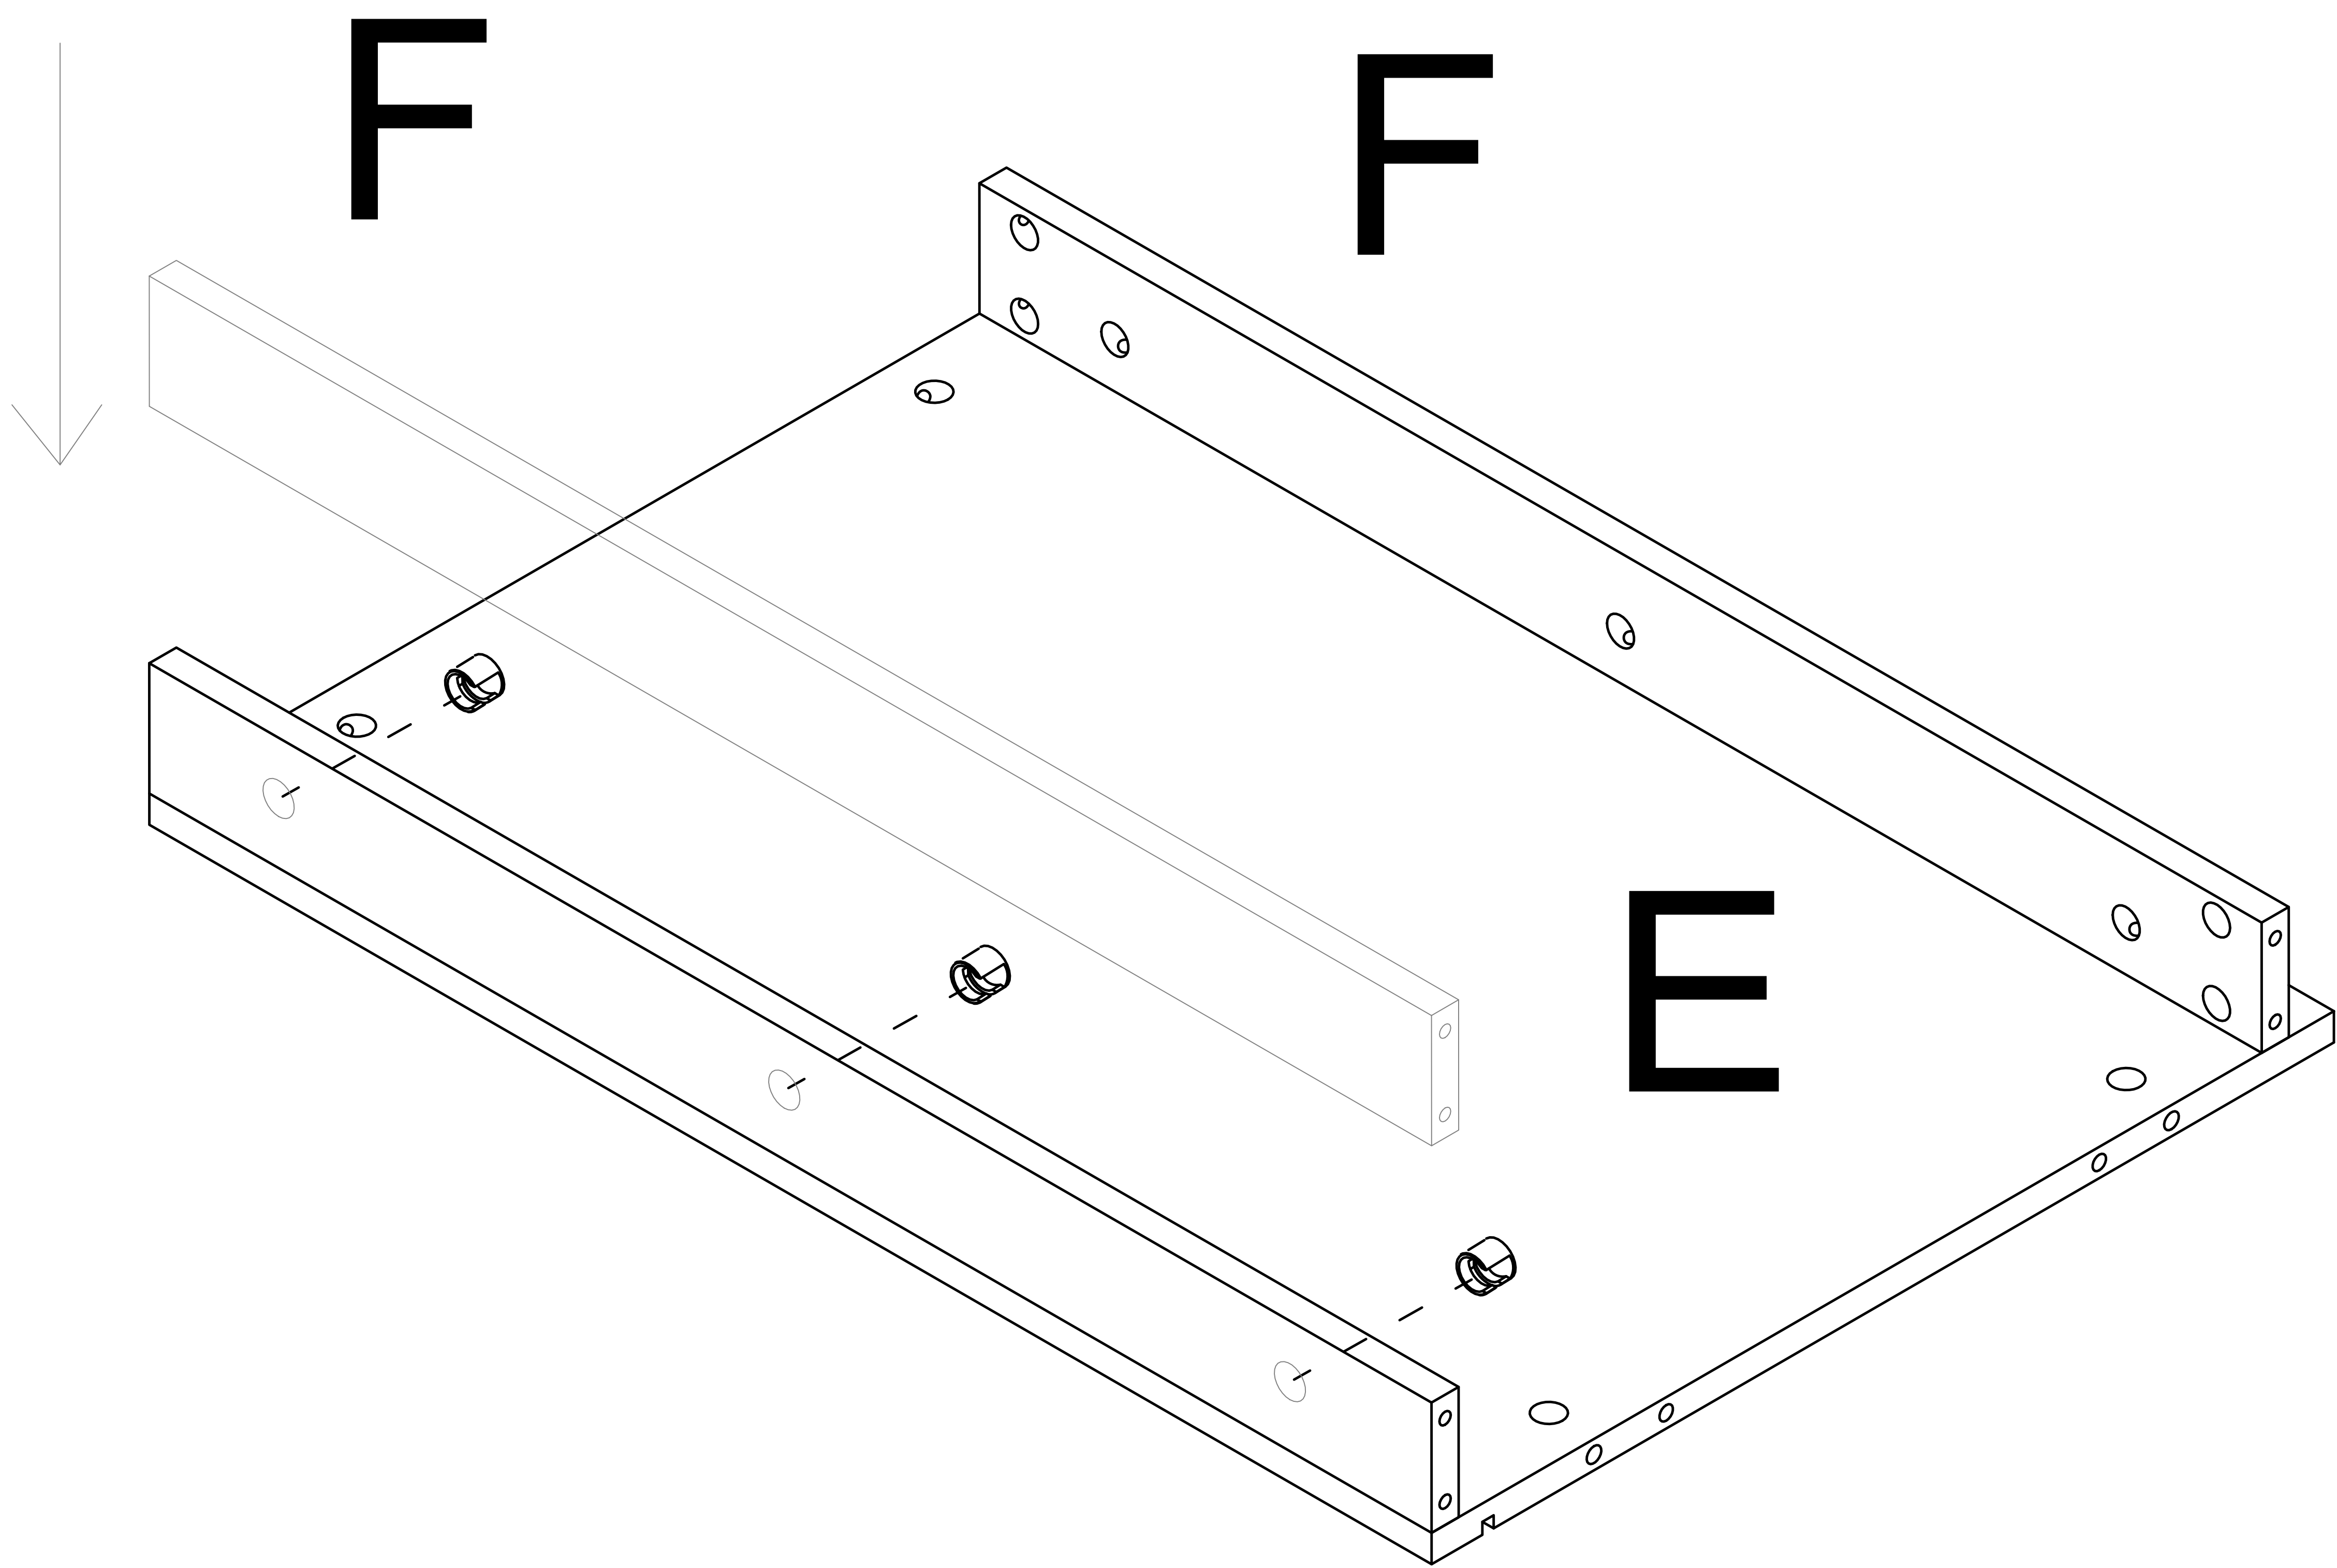


Step 12


3




x4

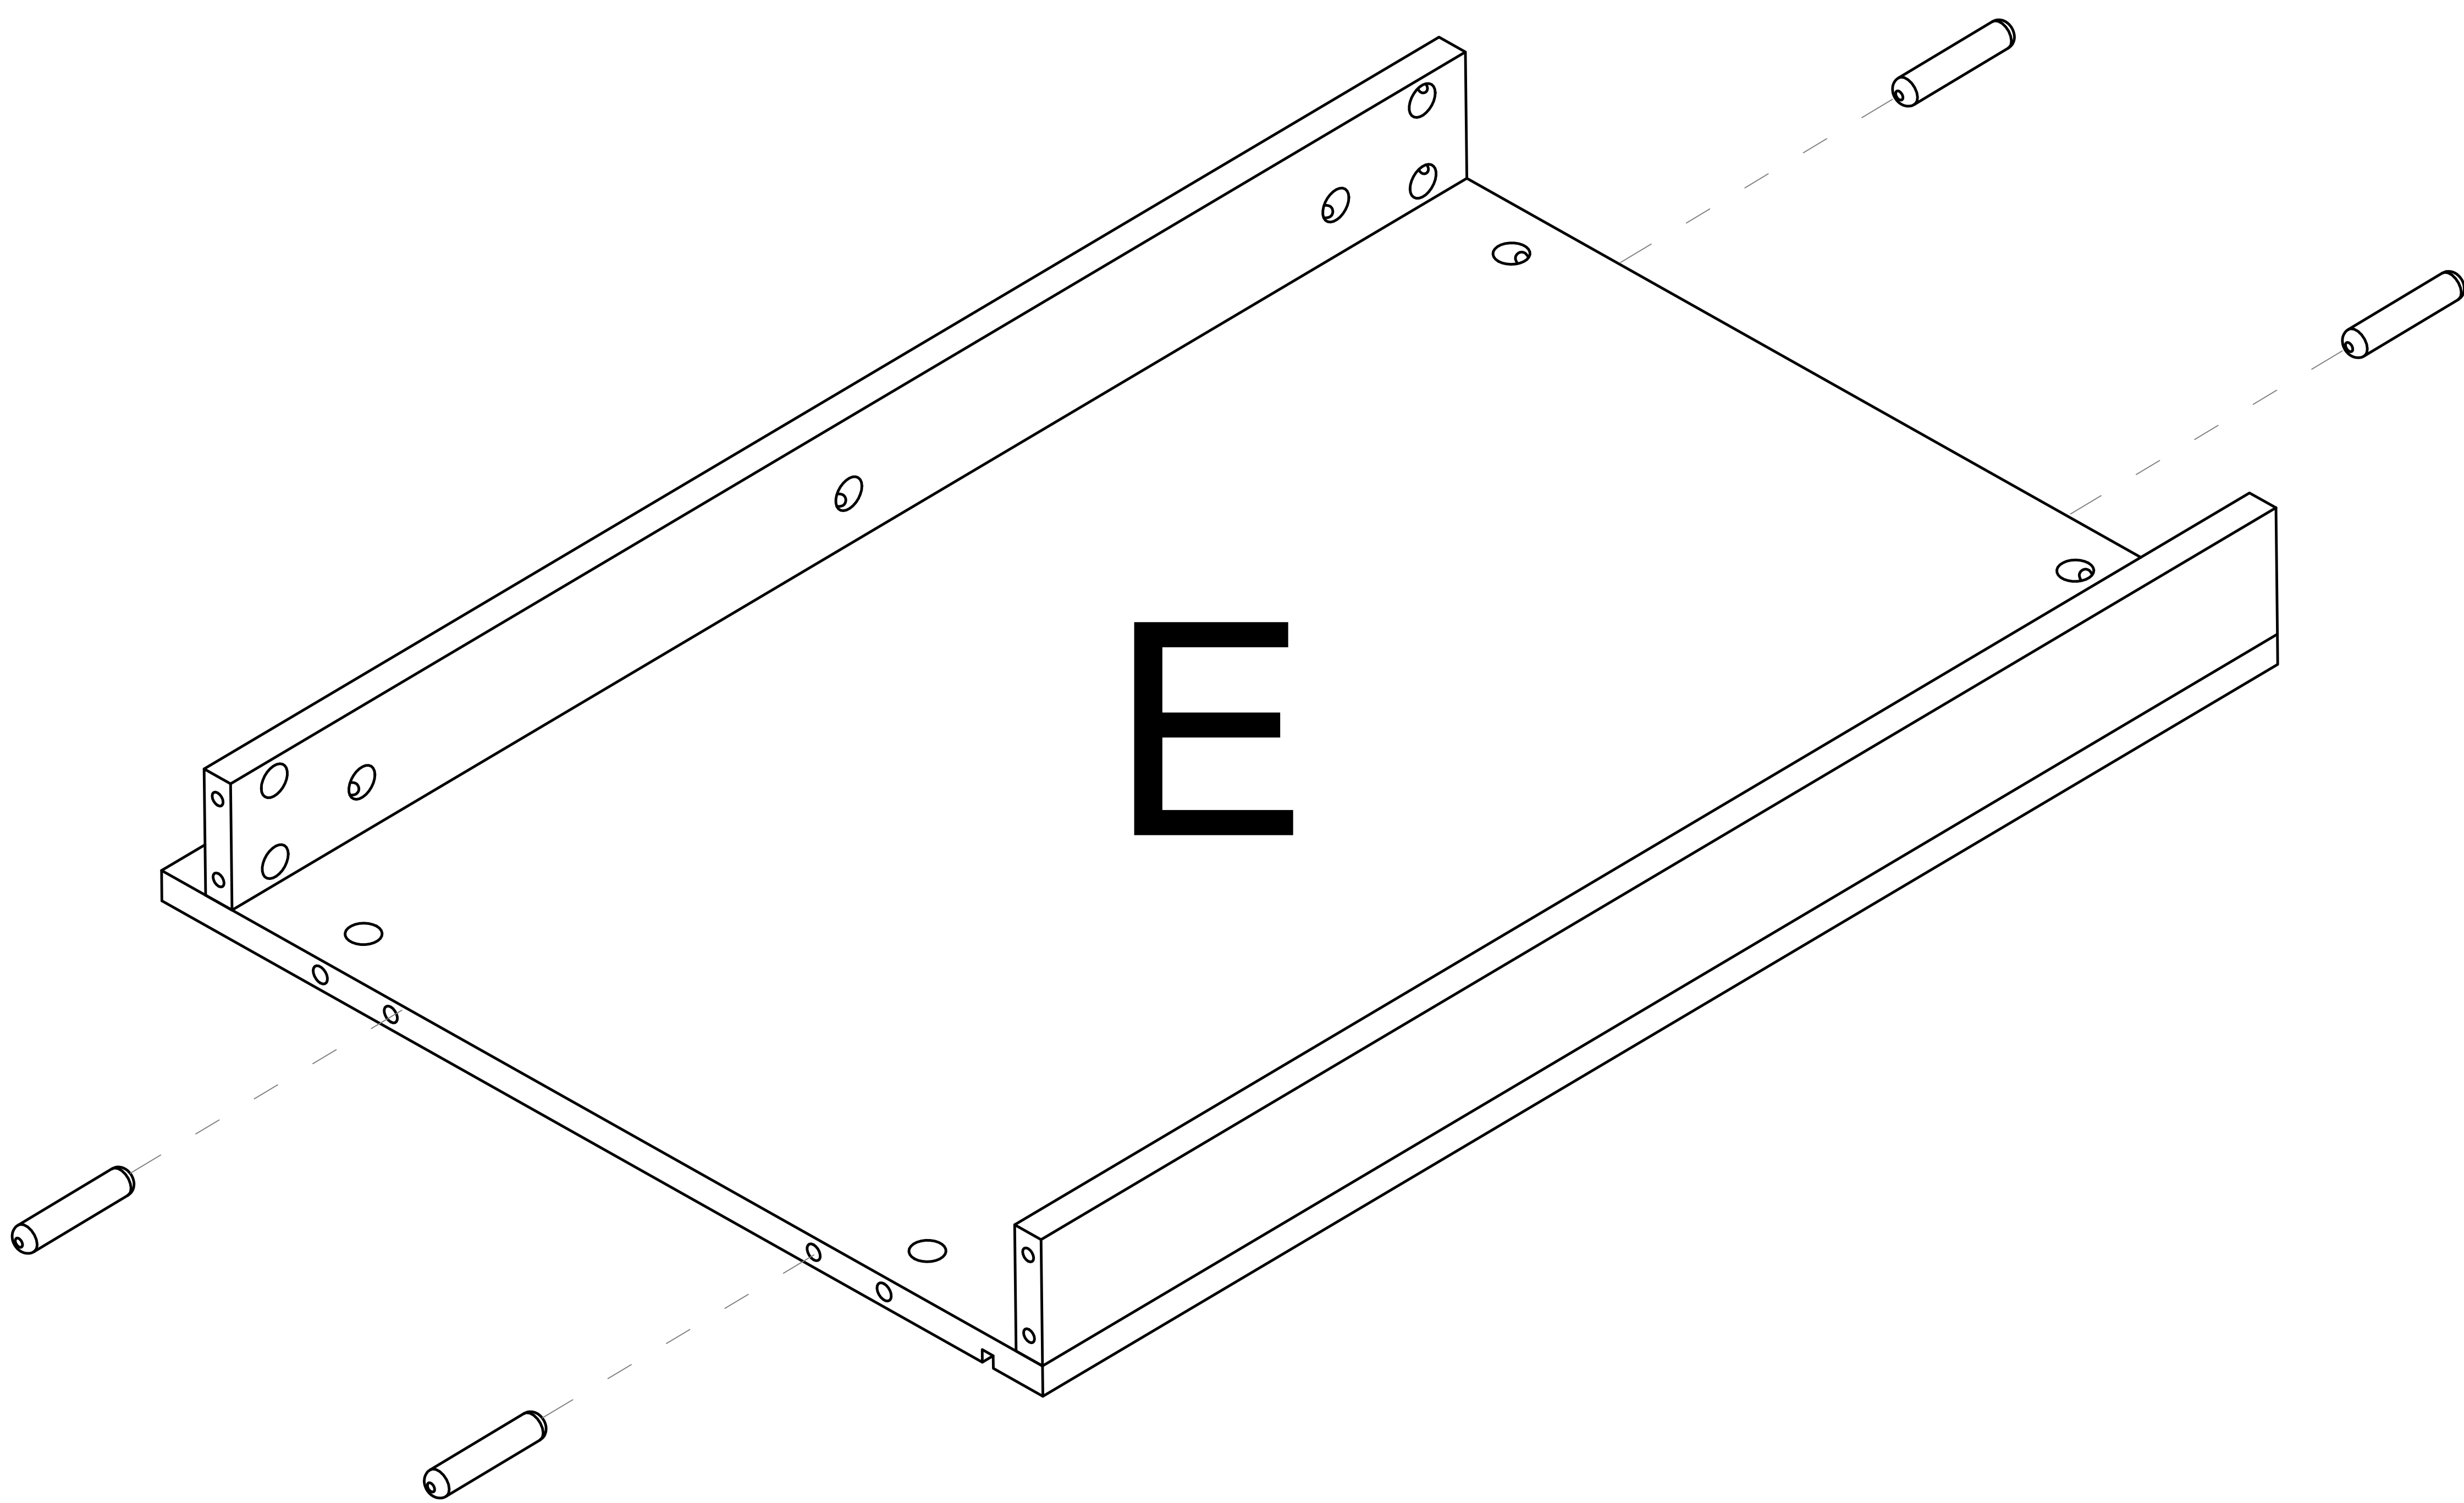


Step 13

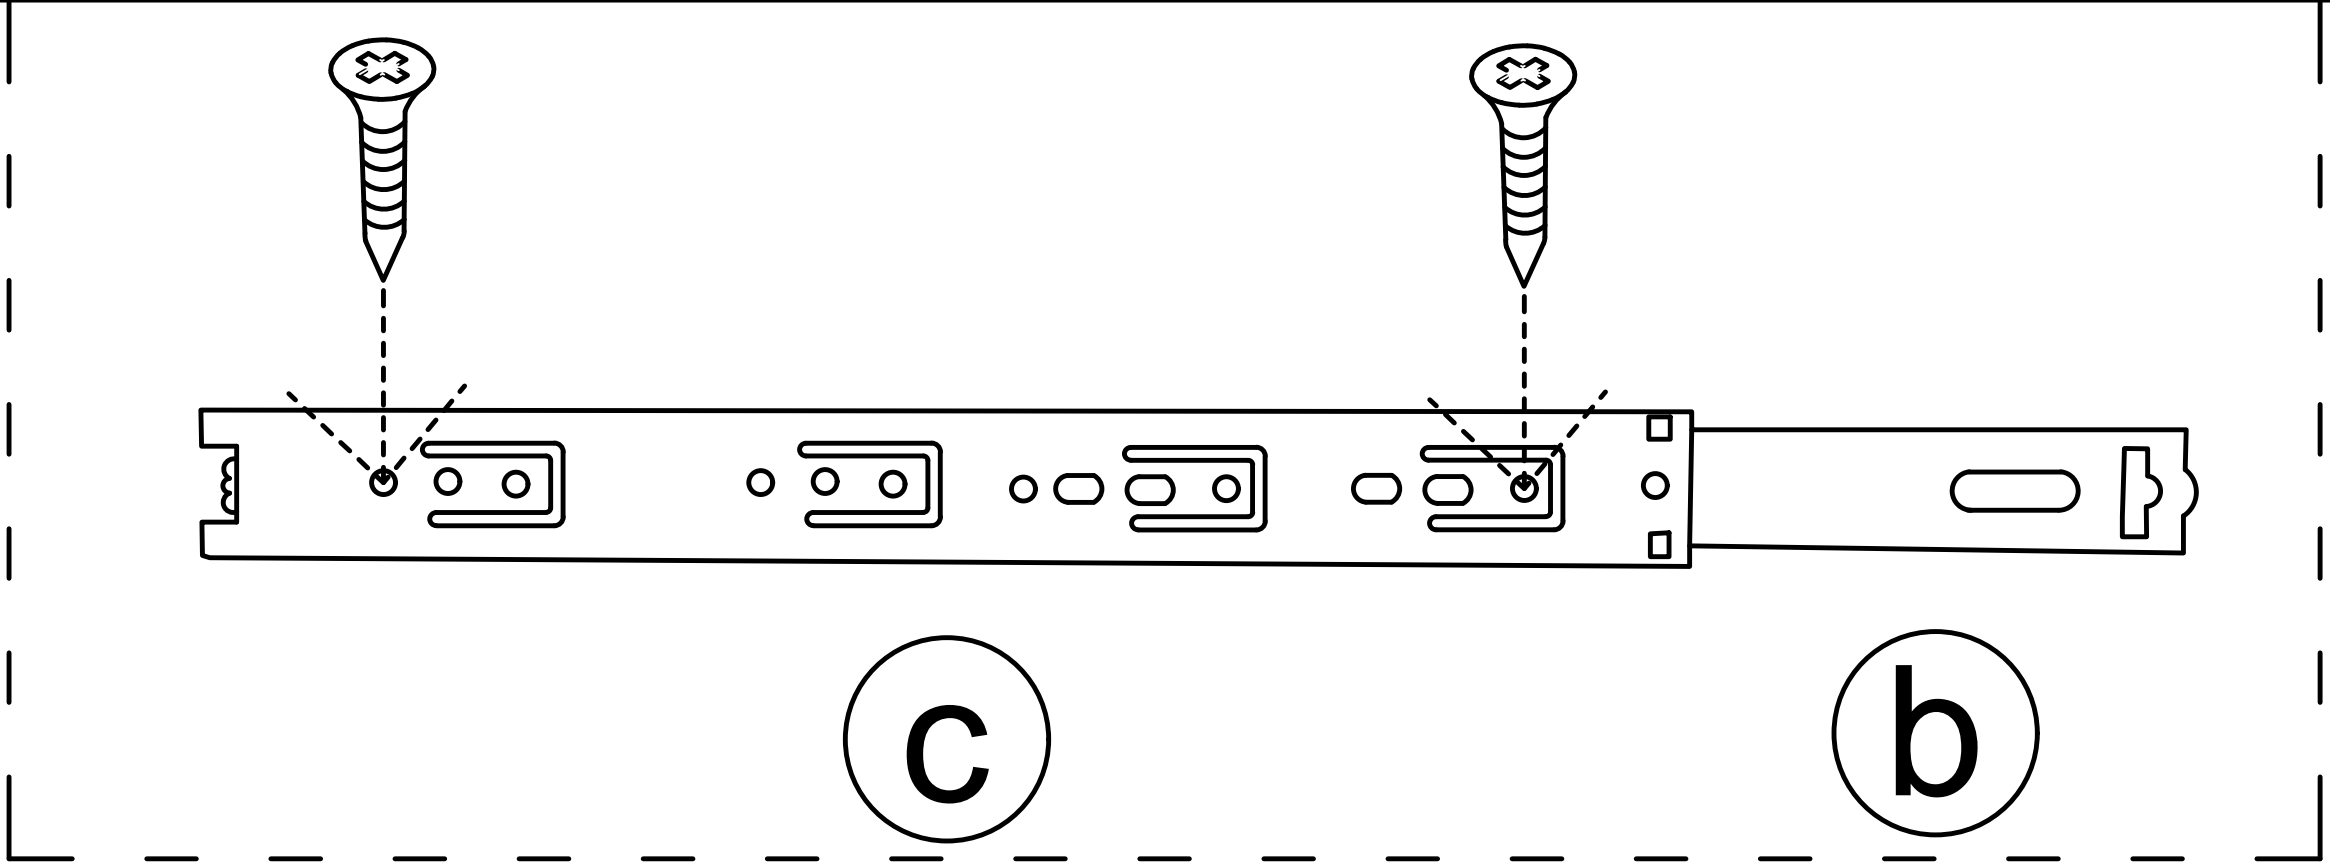




5

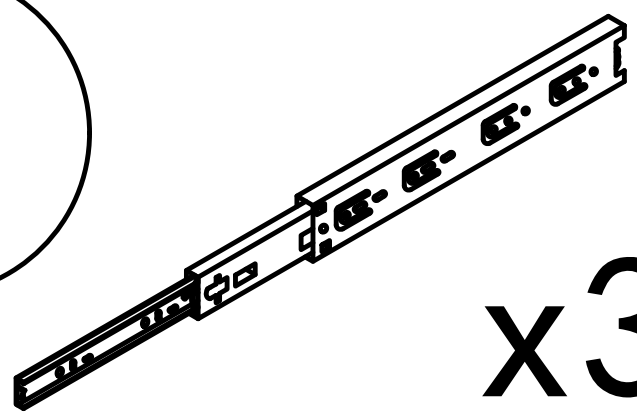


x3

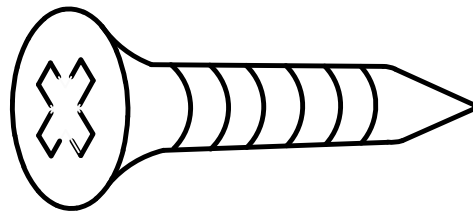


x6

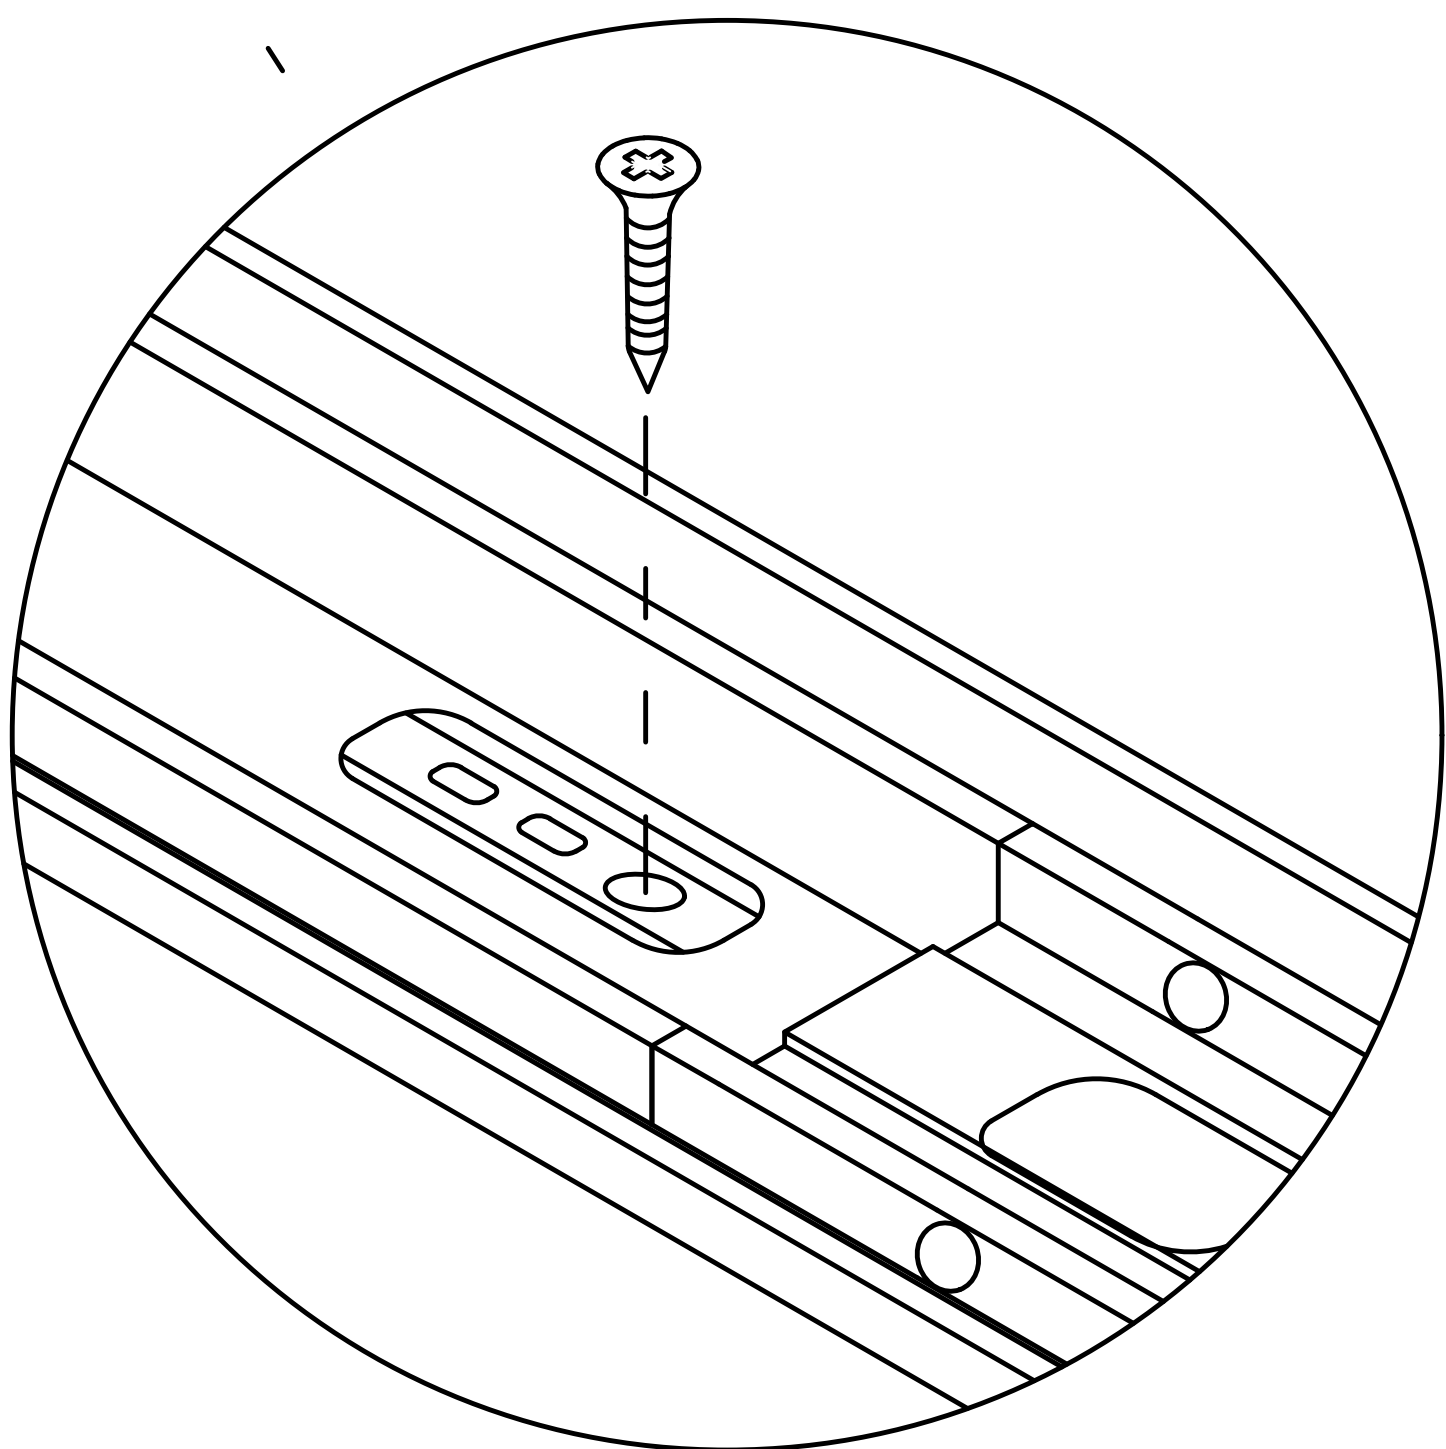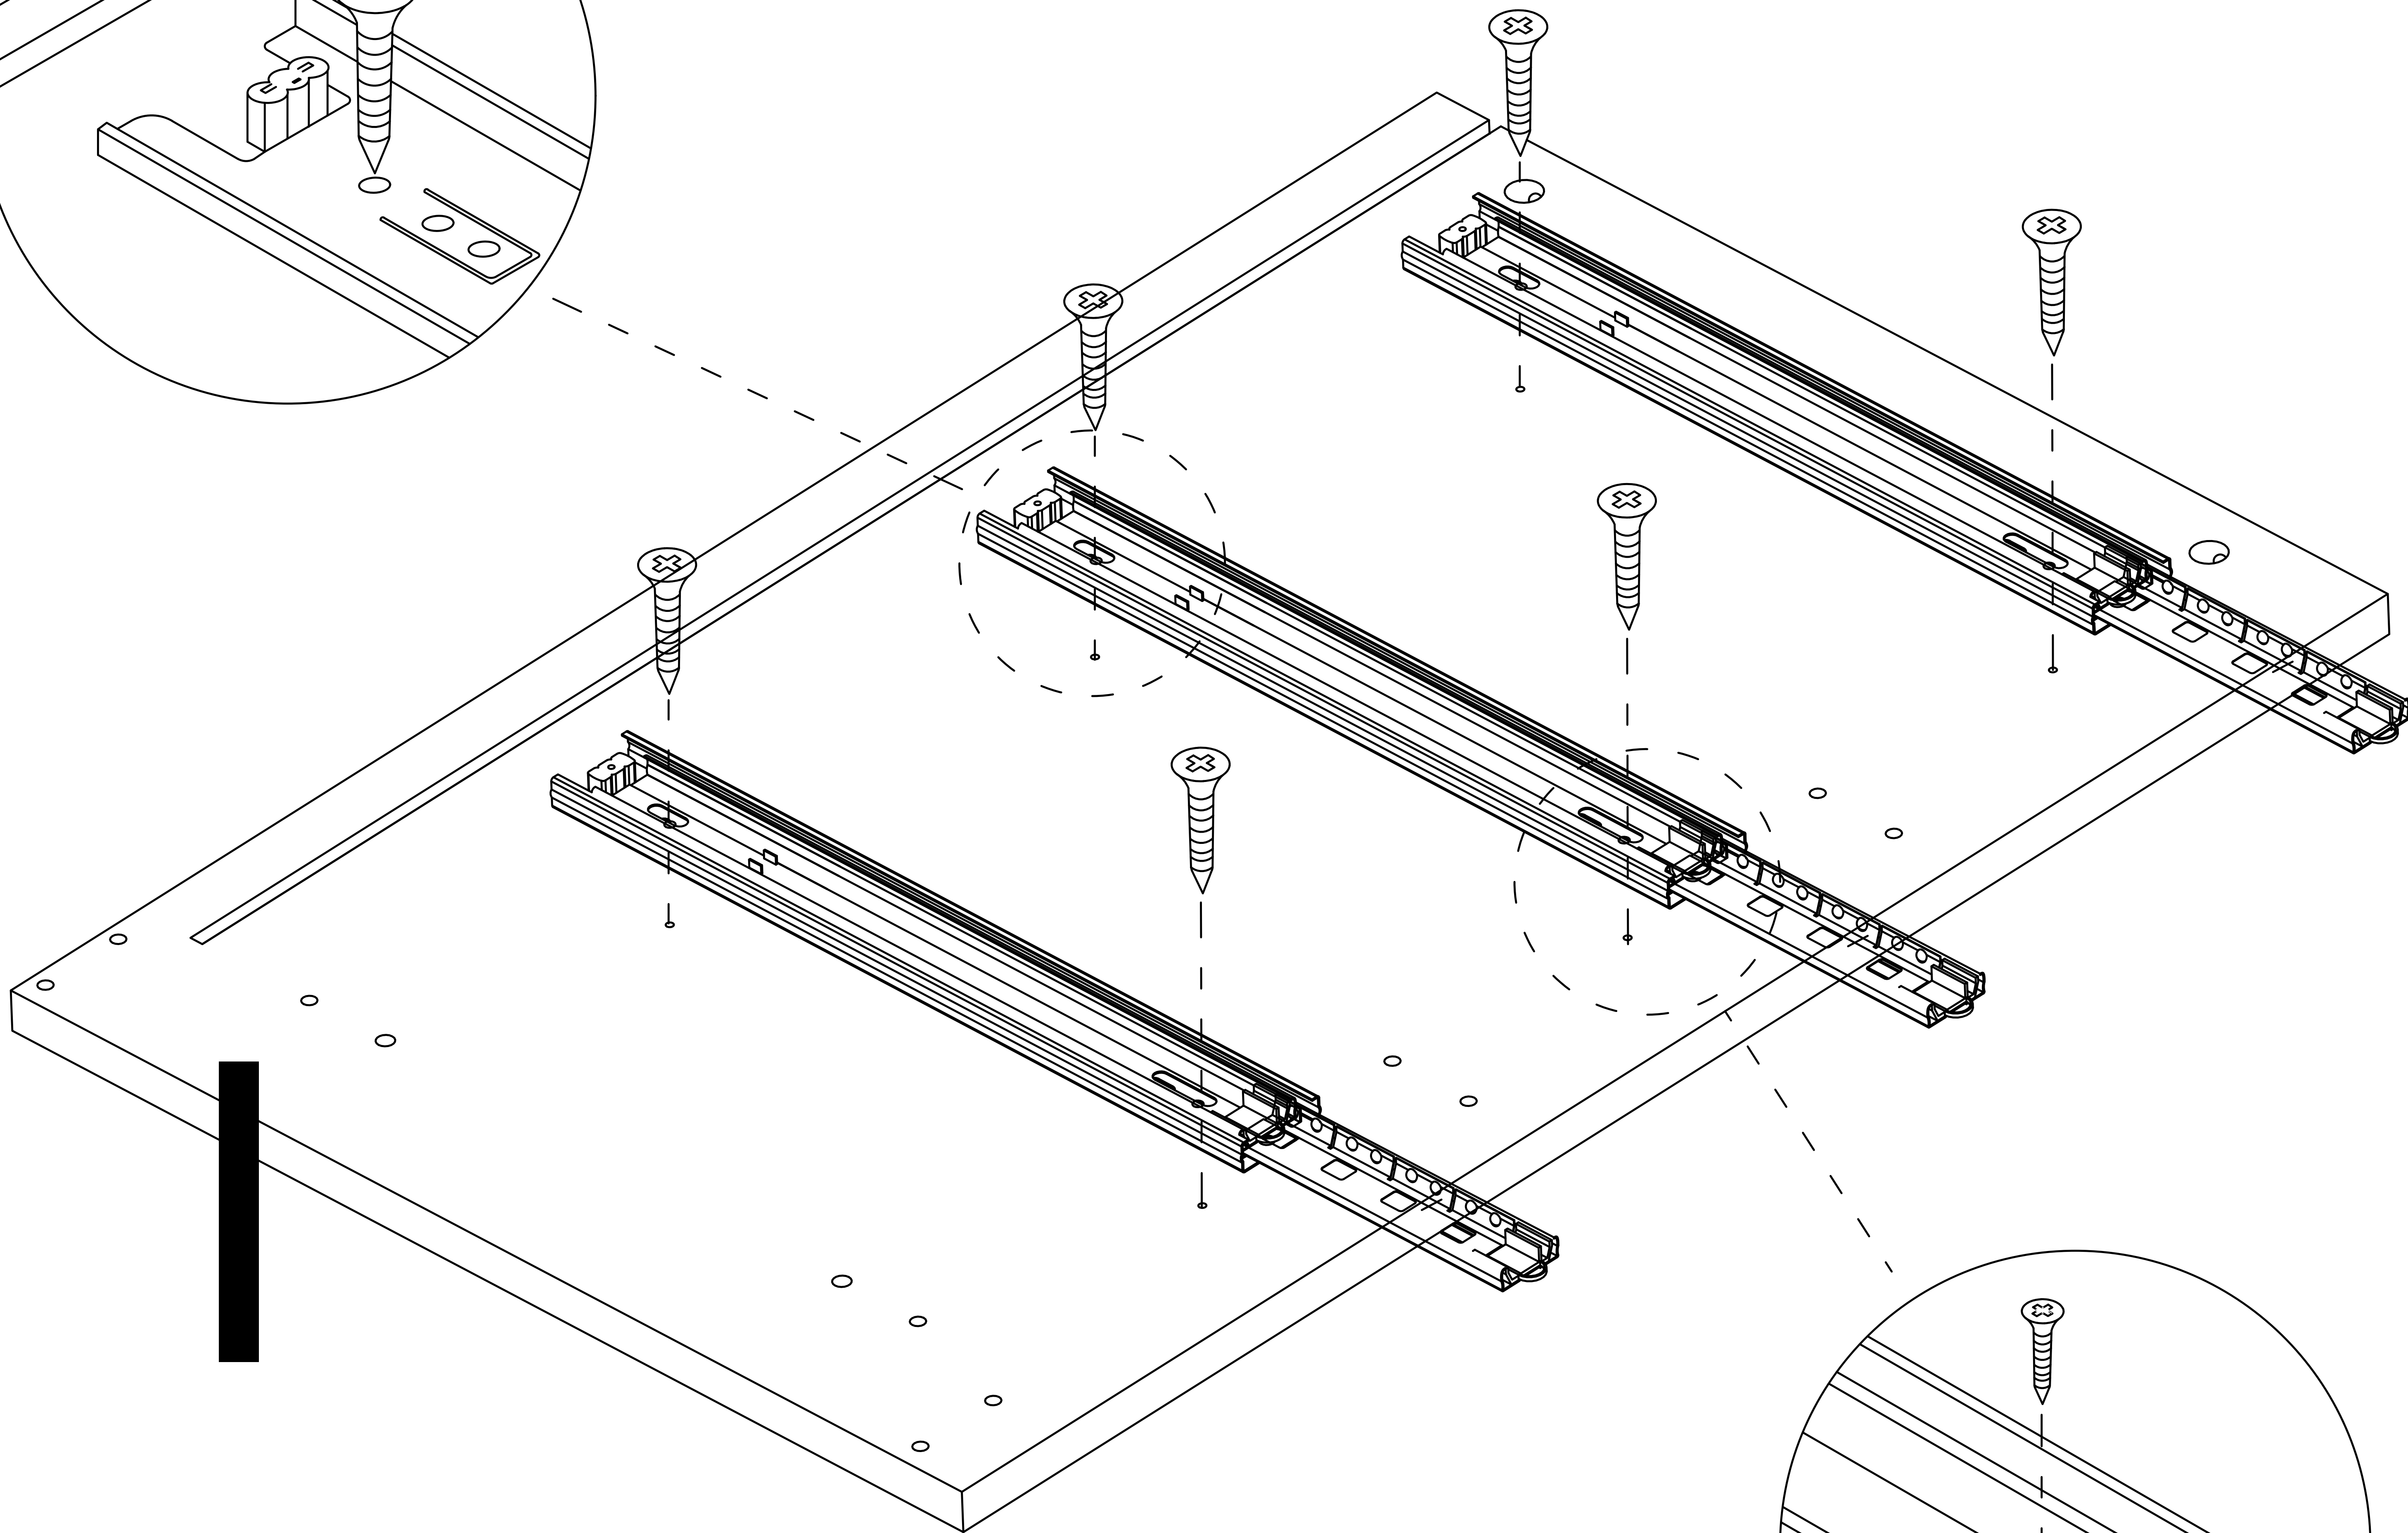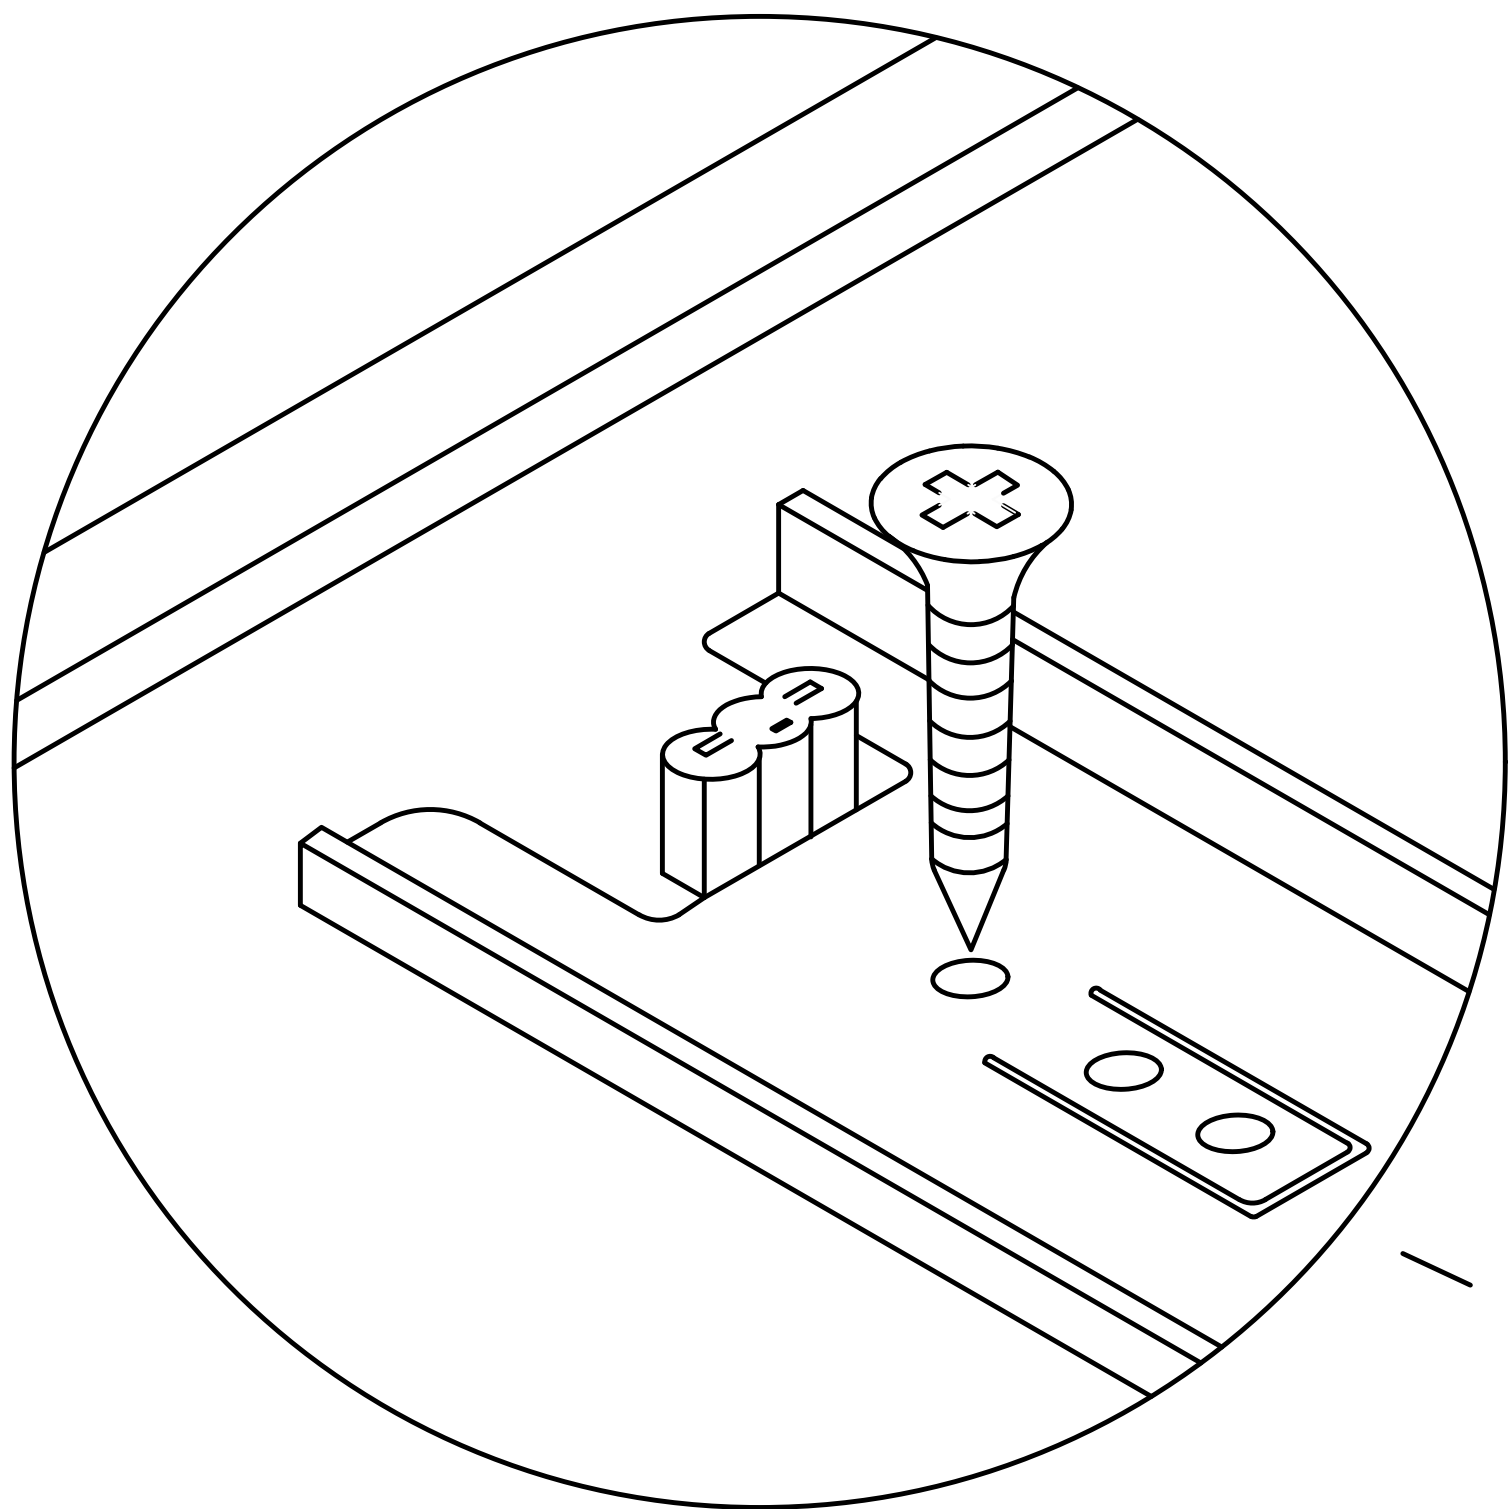



Step 14

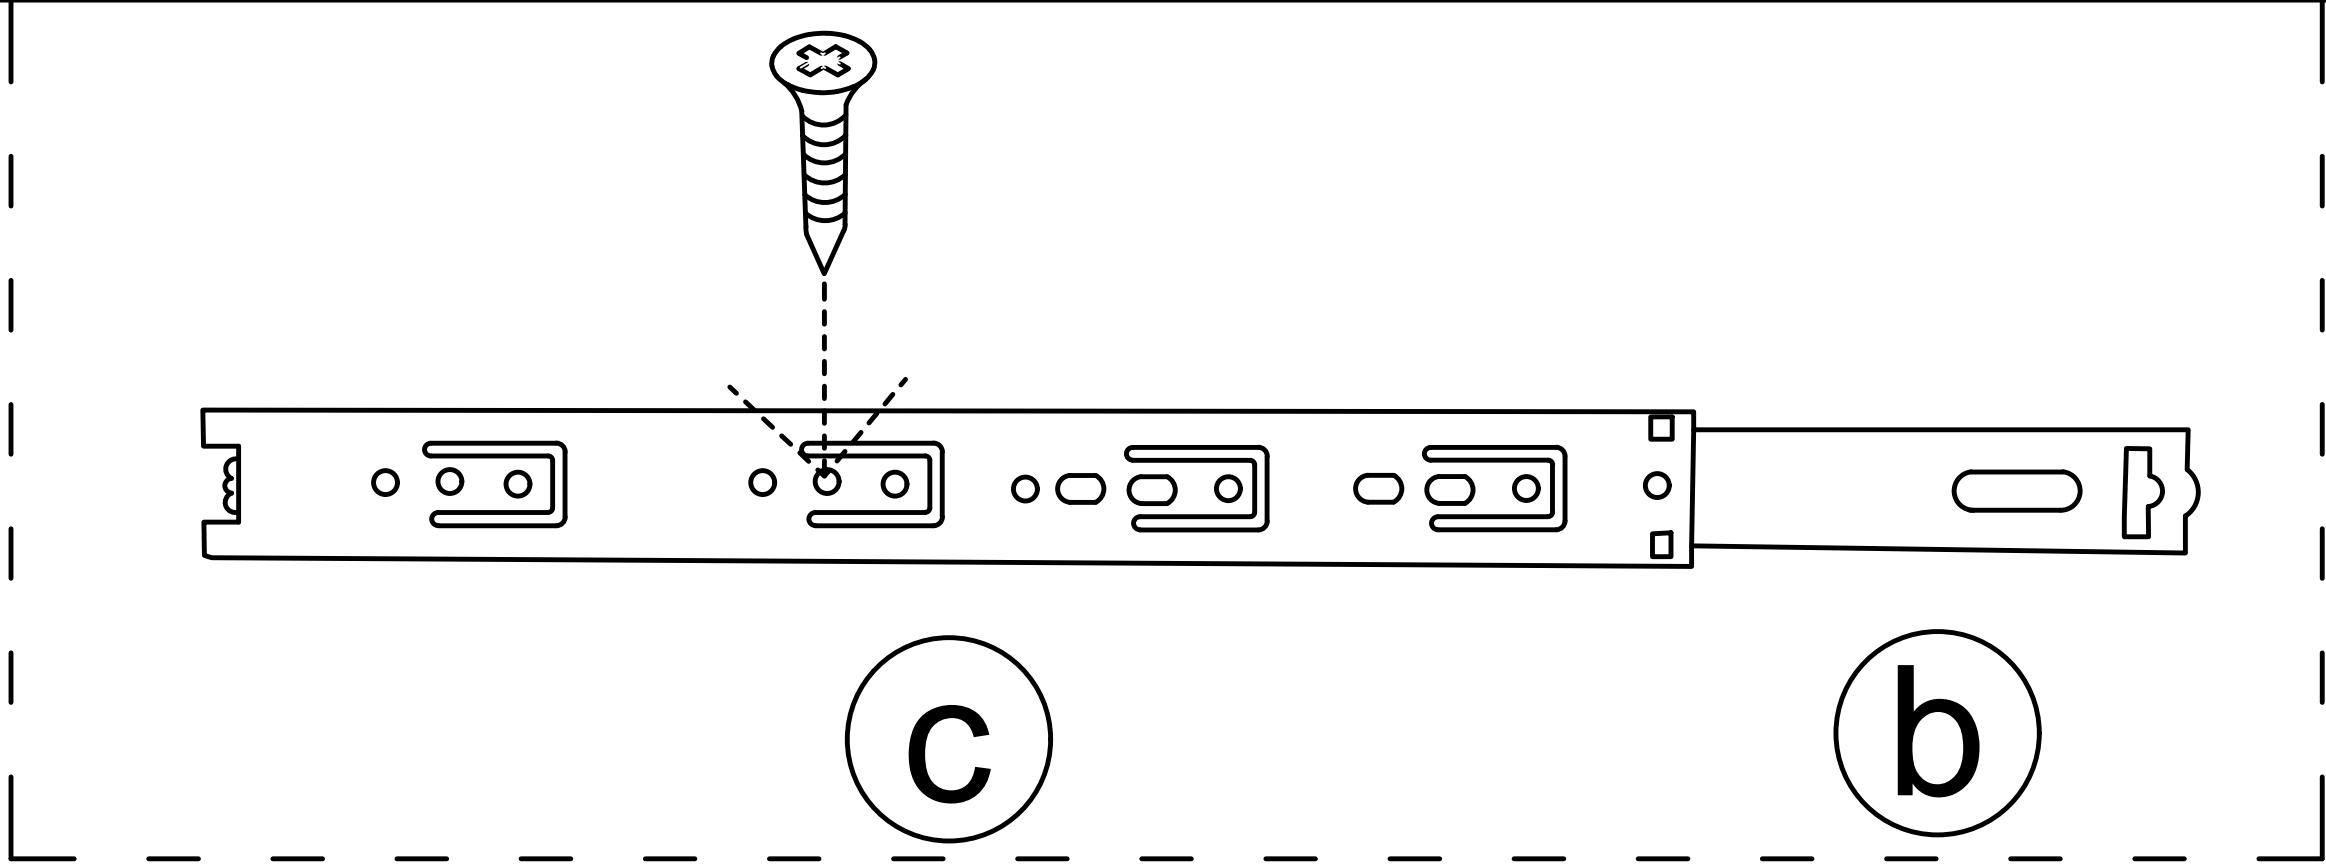

5

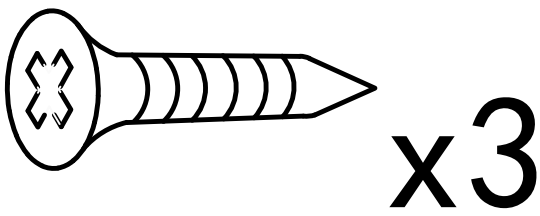


x3

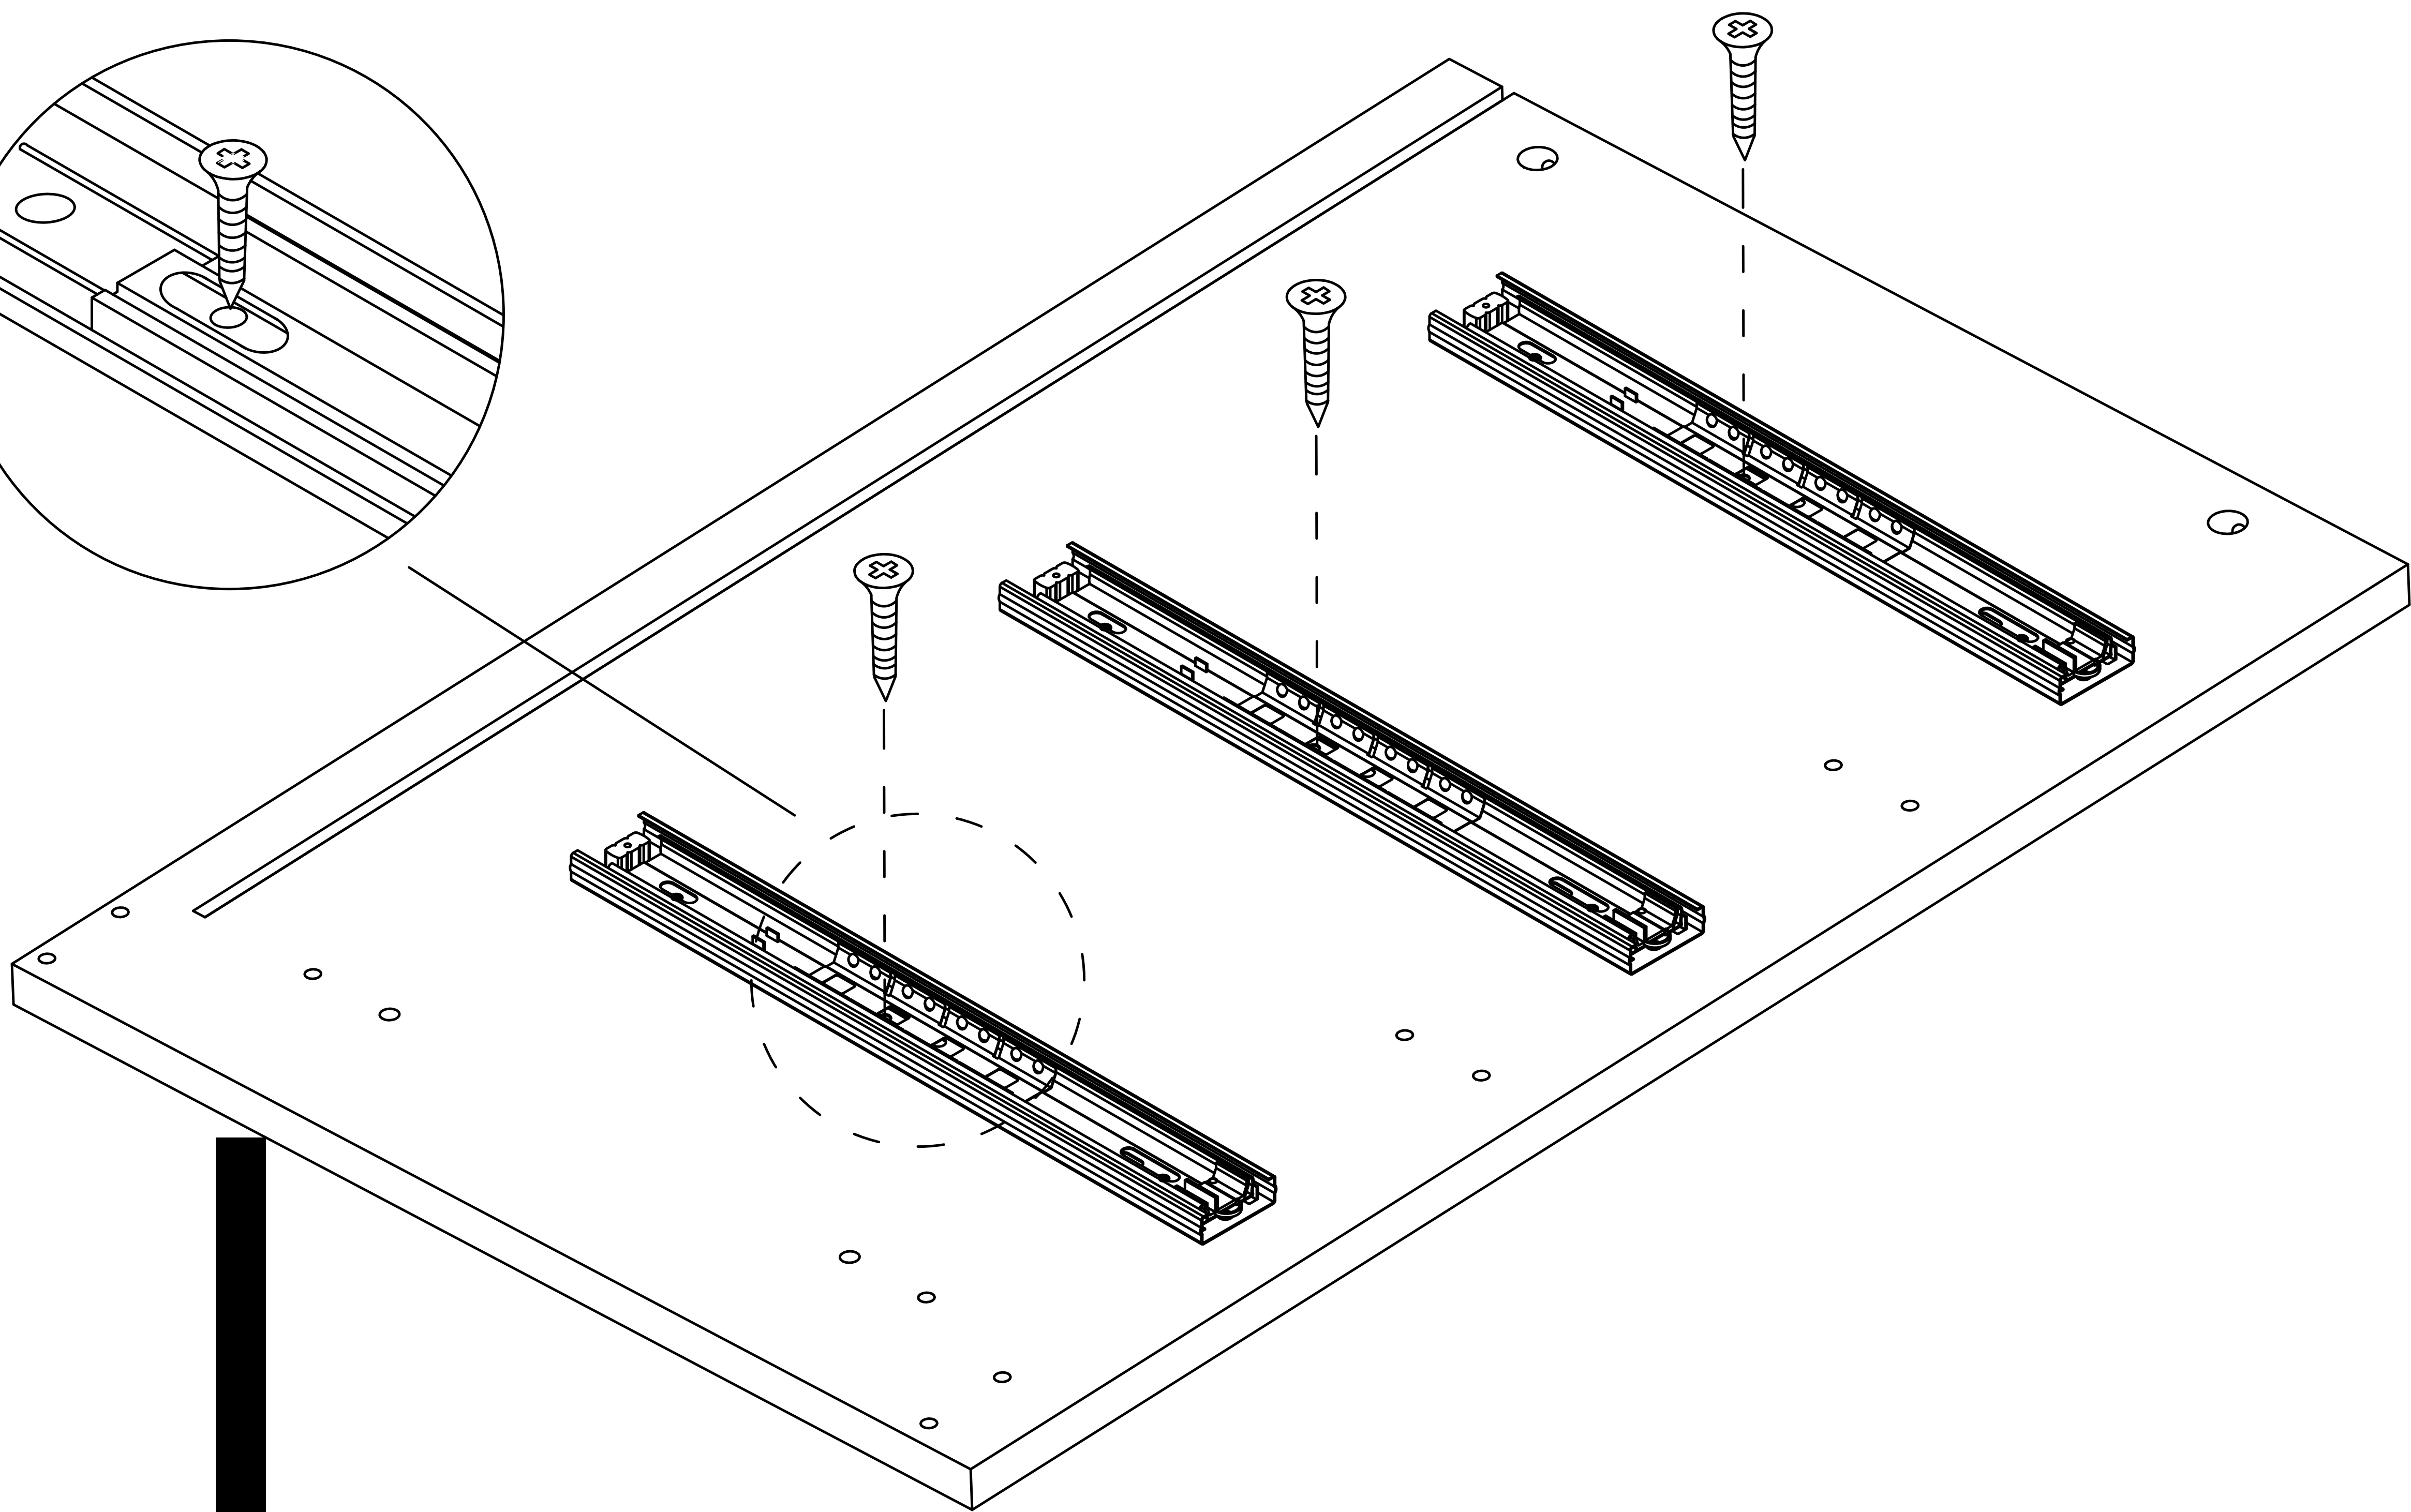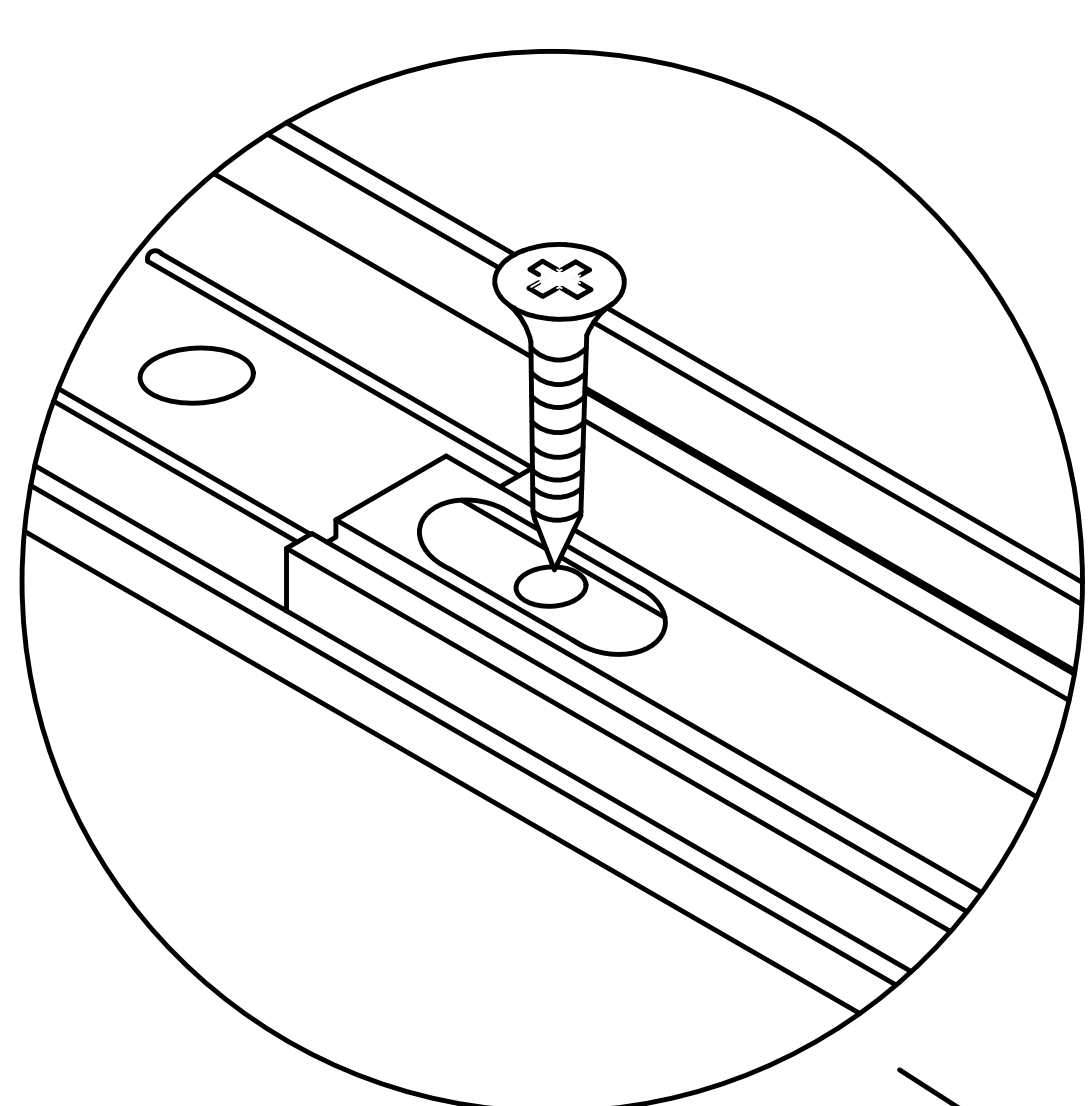


Step 15

1

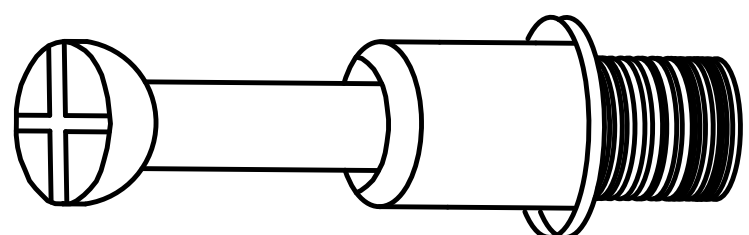


x10

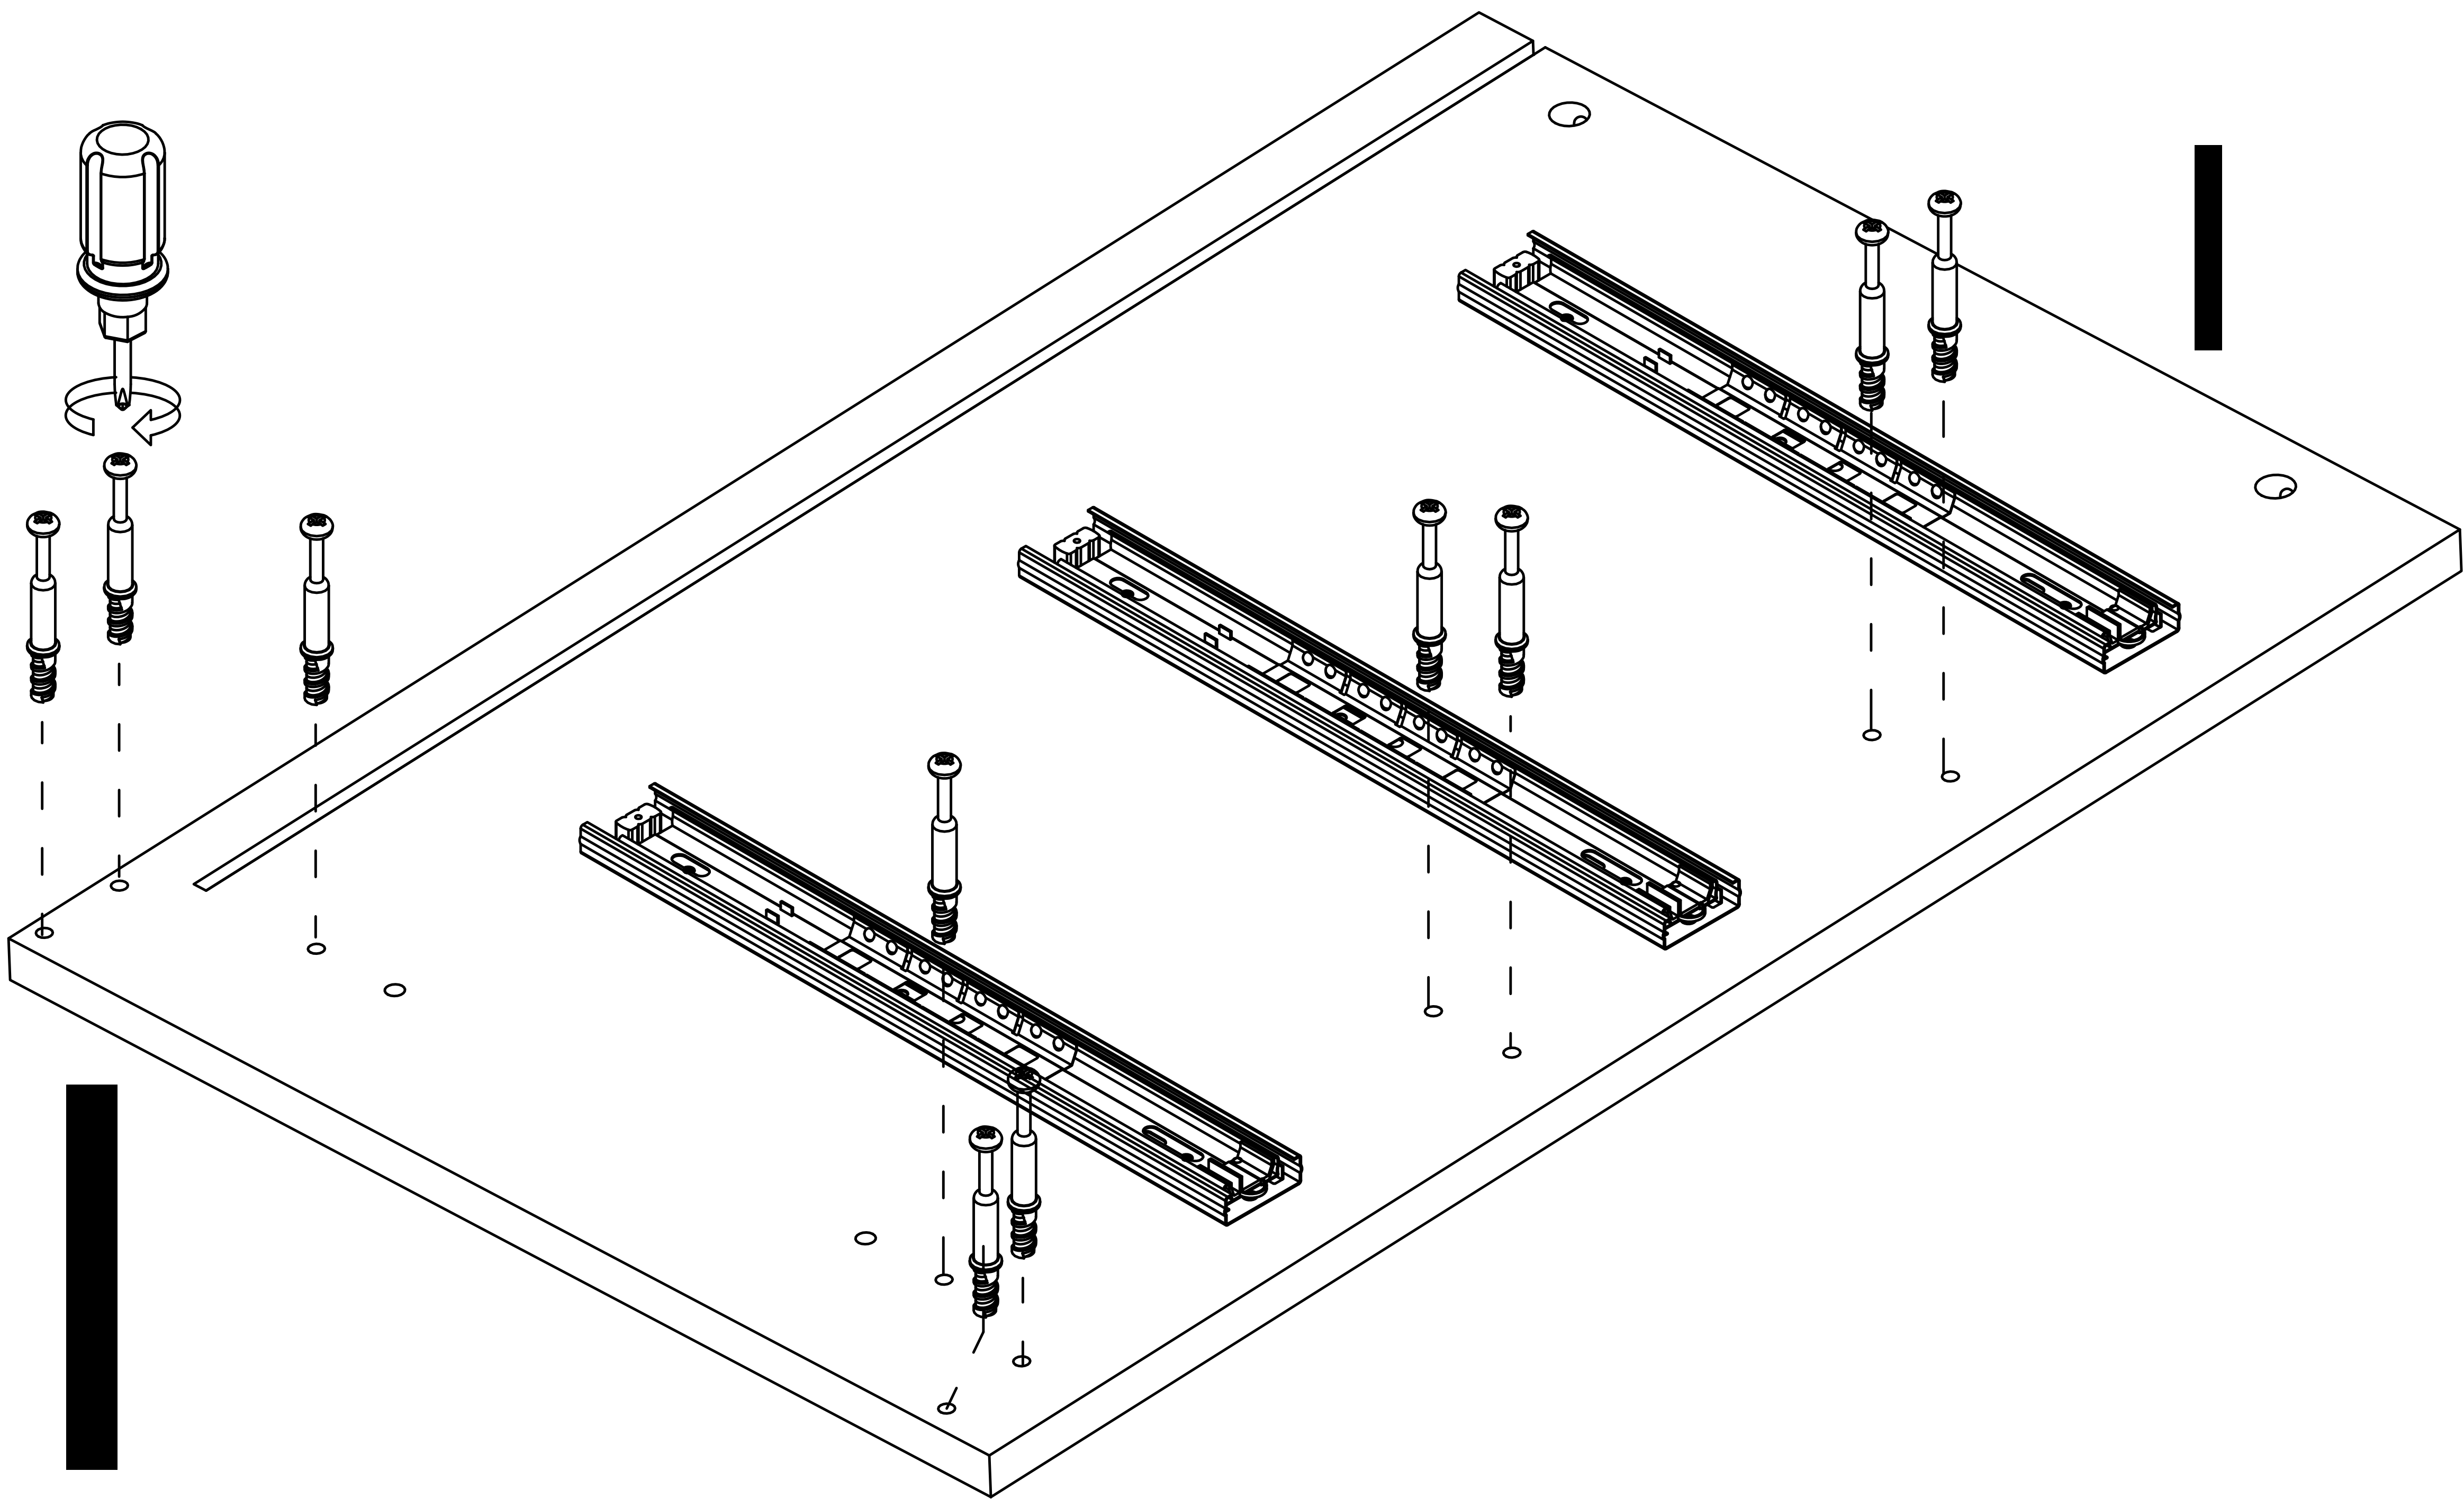


Step 16

2

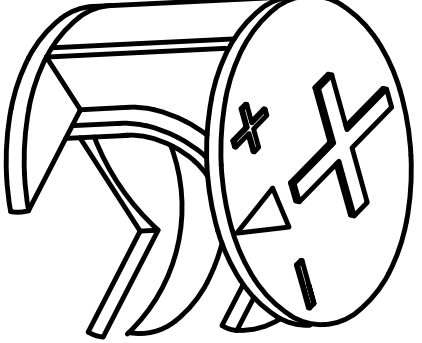


x4

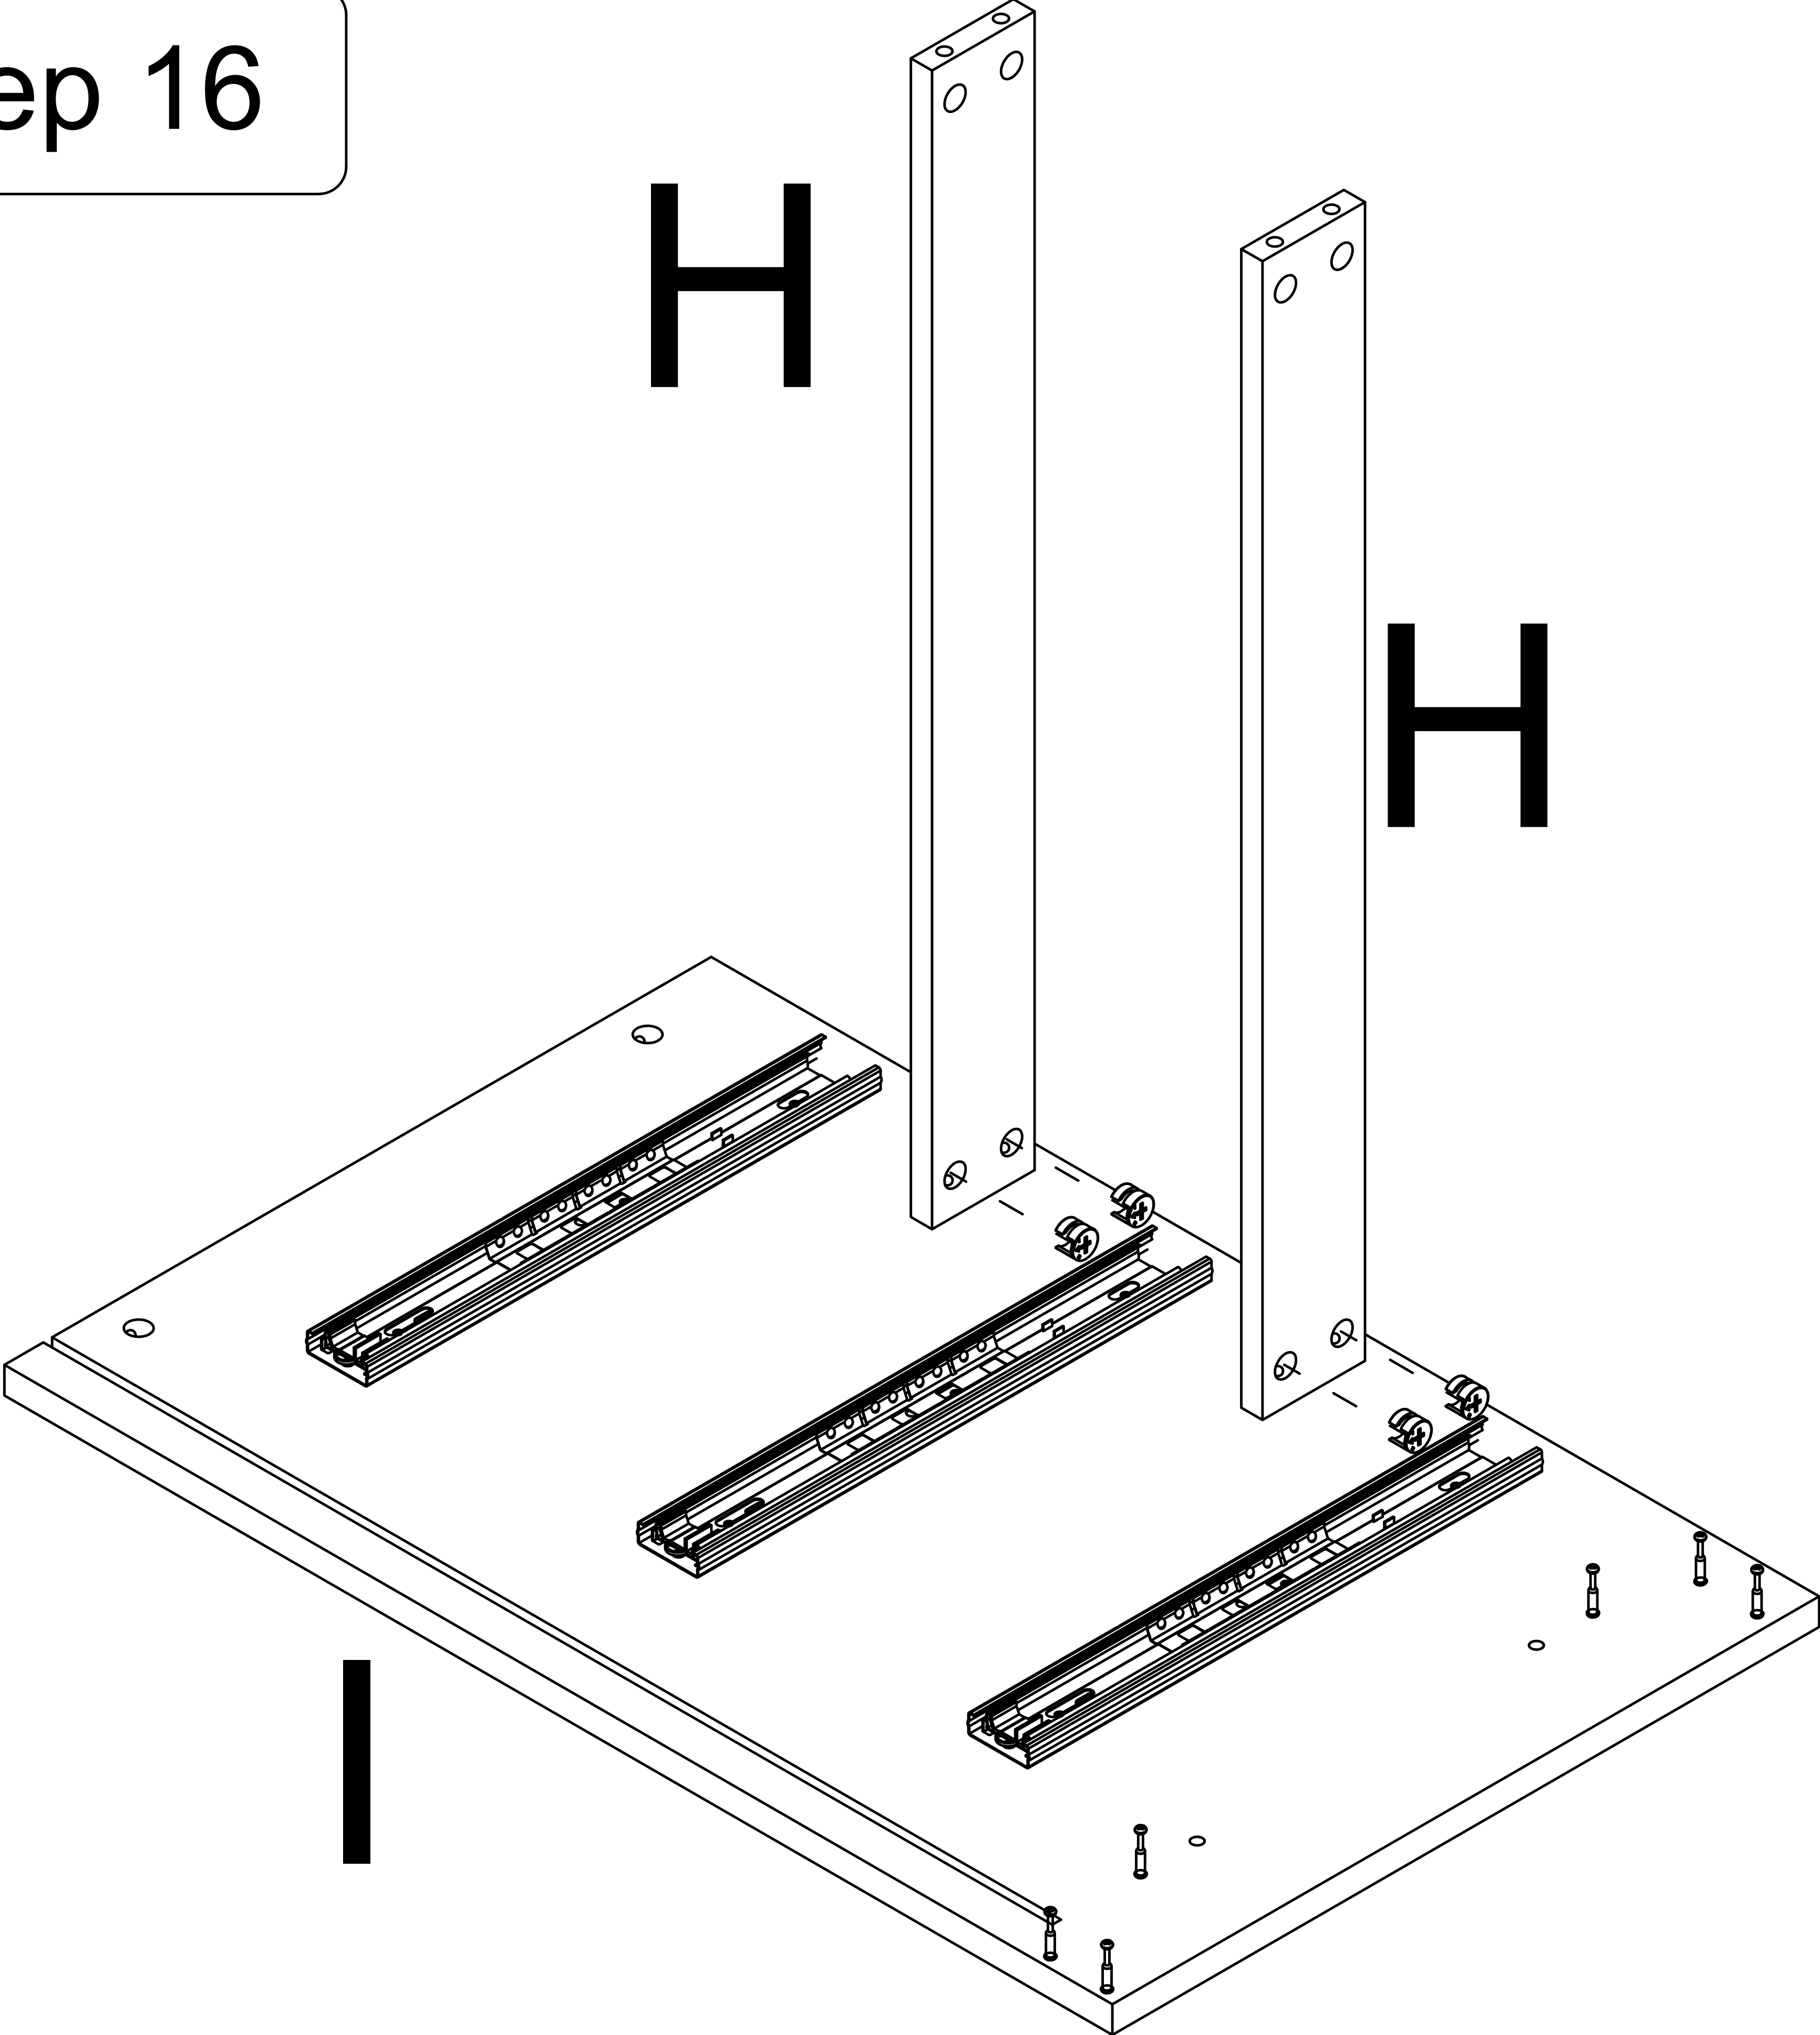


Step 17


2

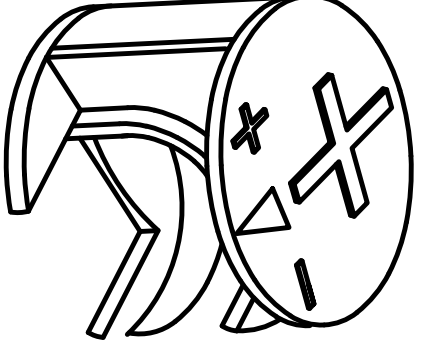



x6

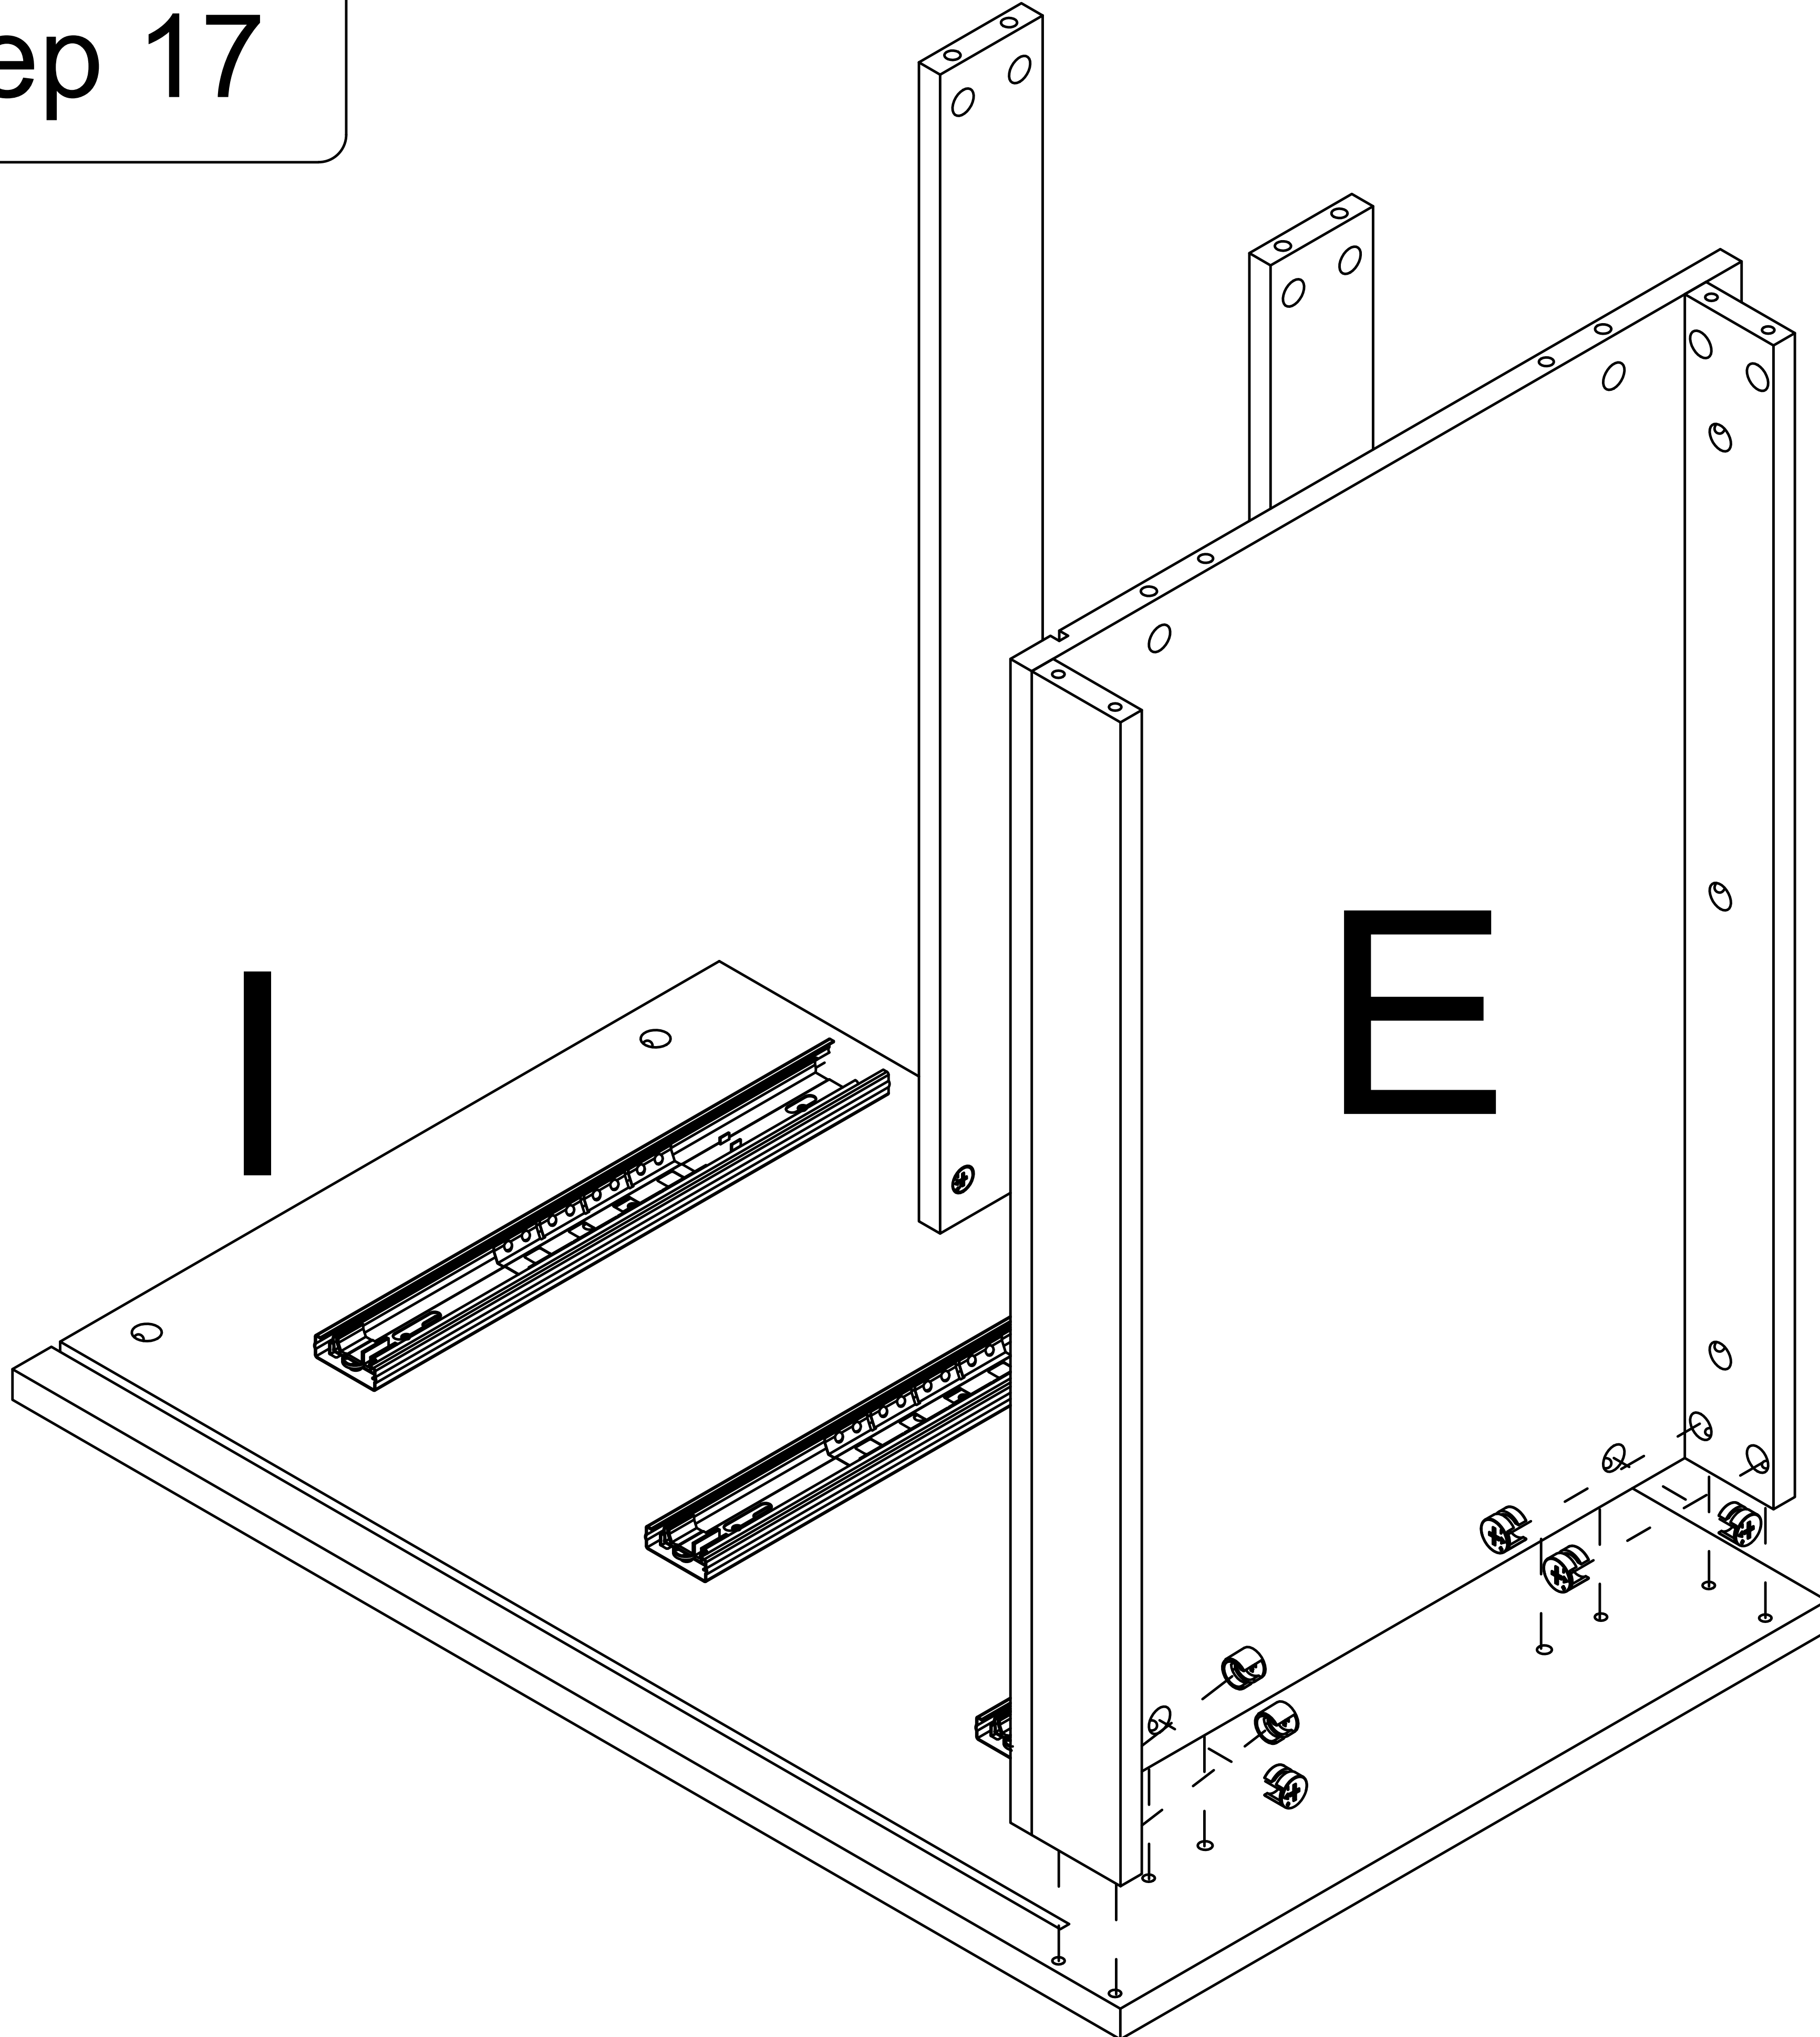


Step 18

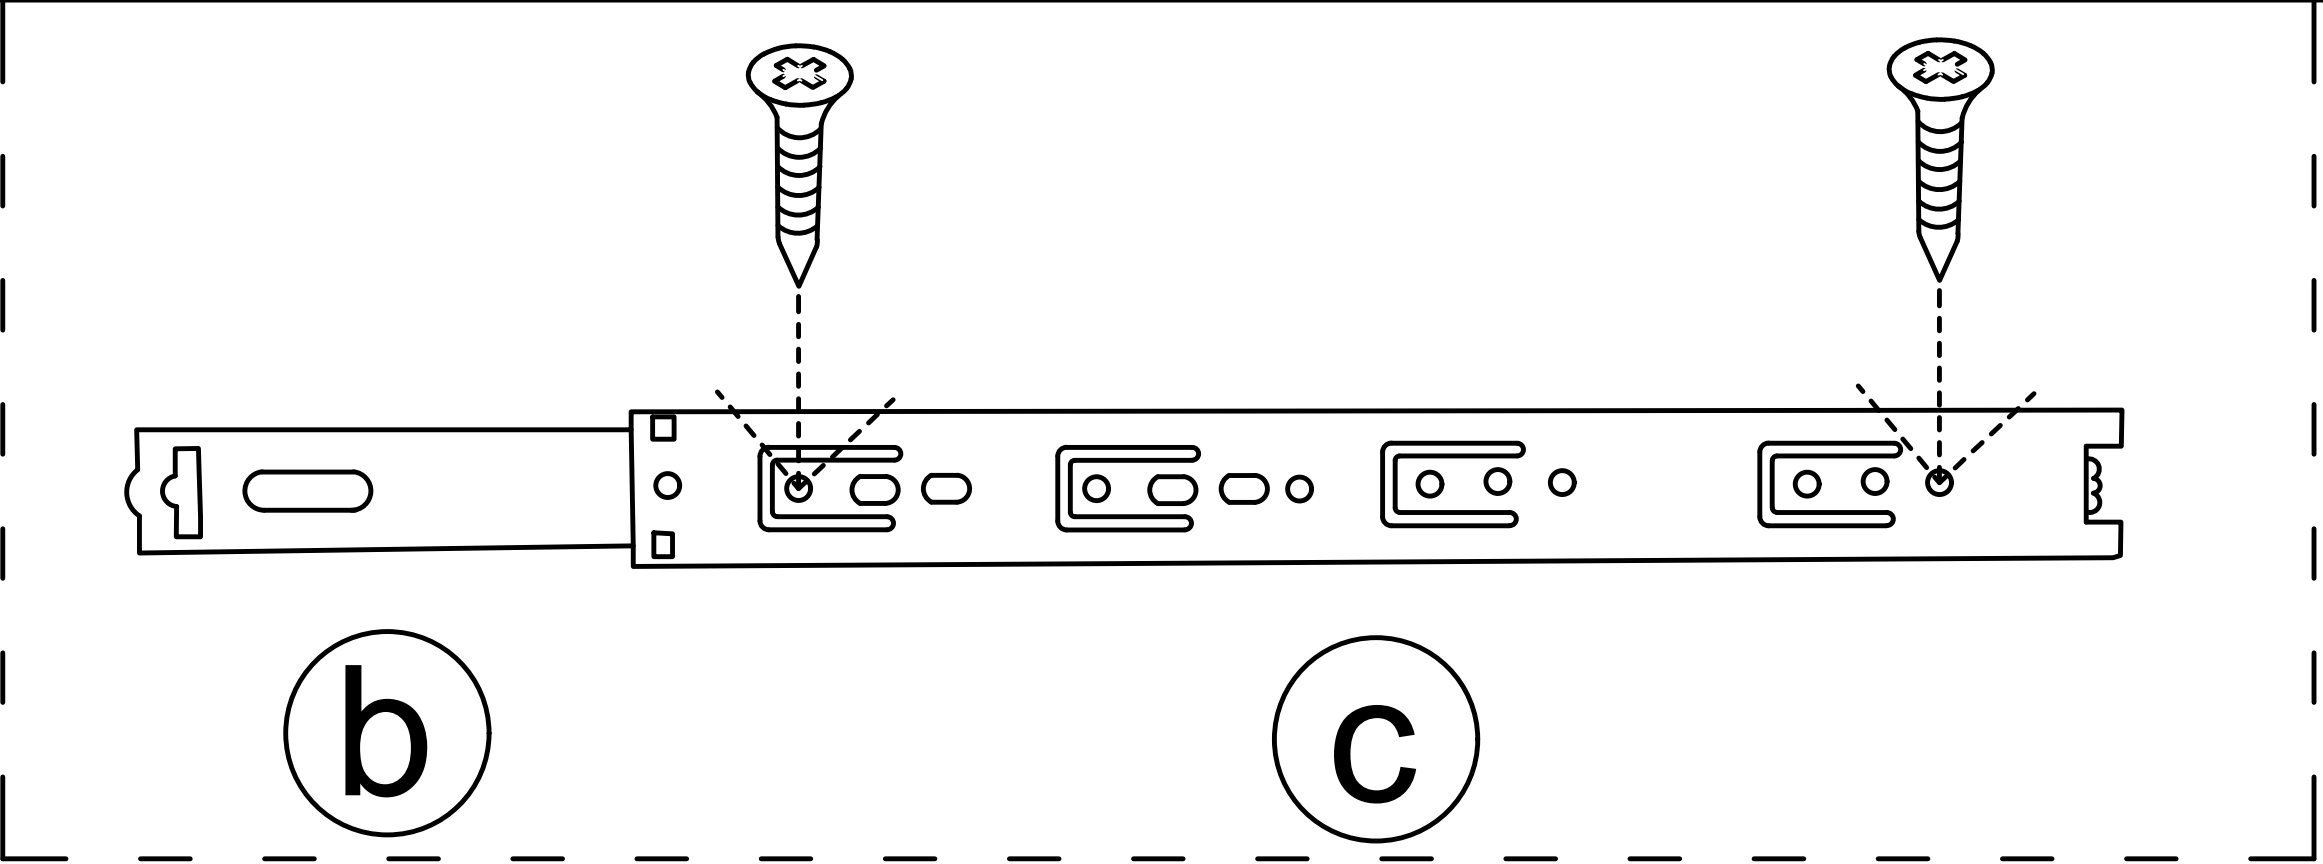

5

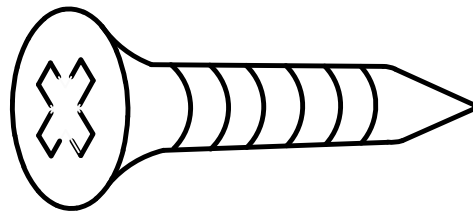
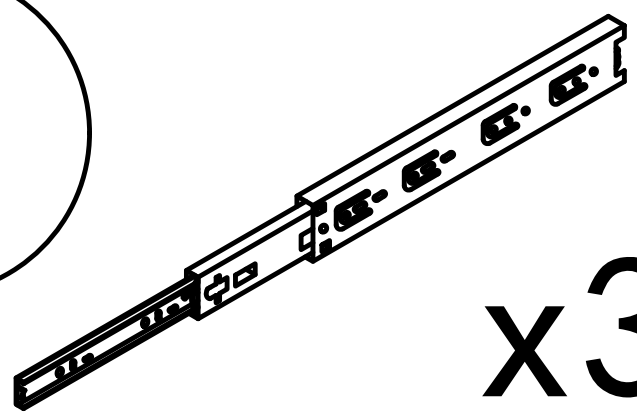


x6

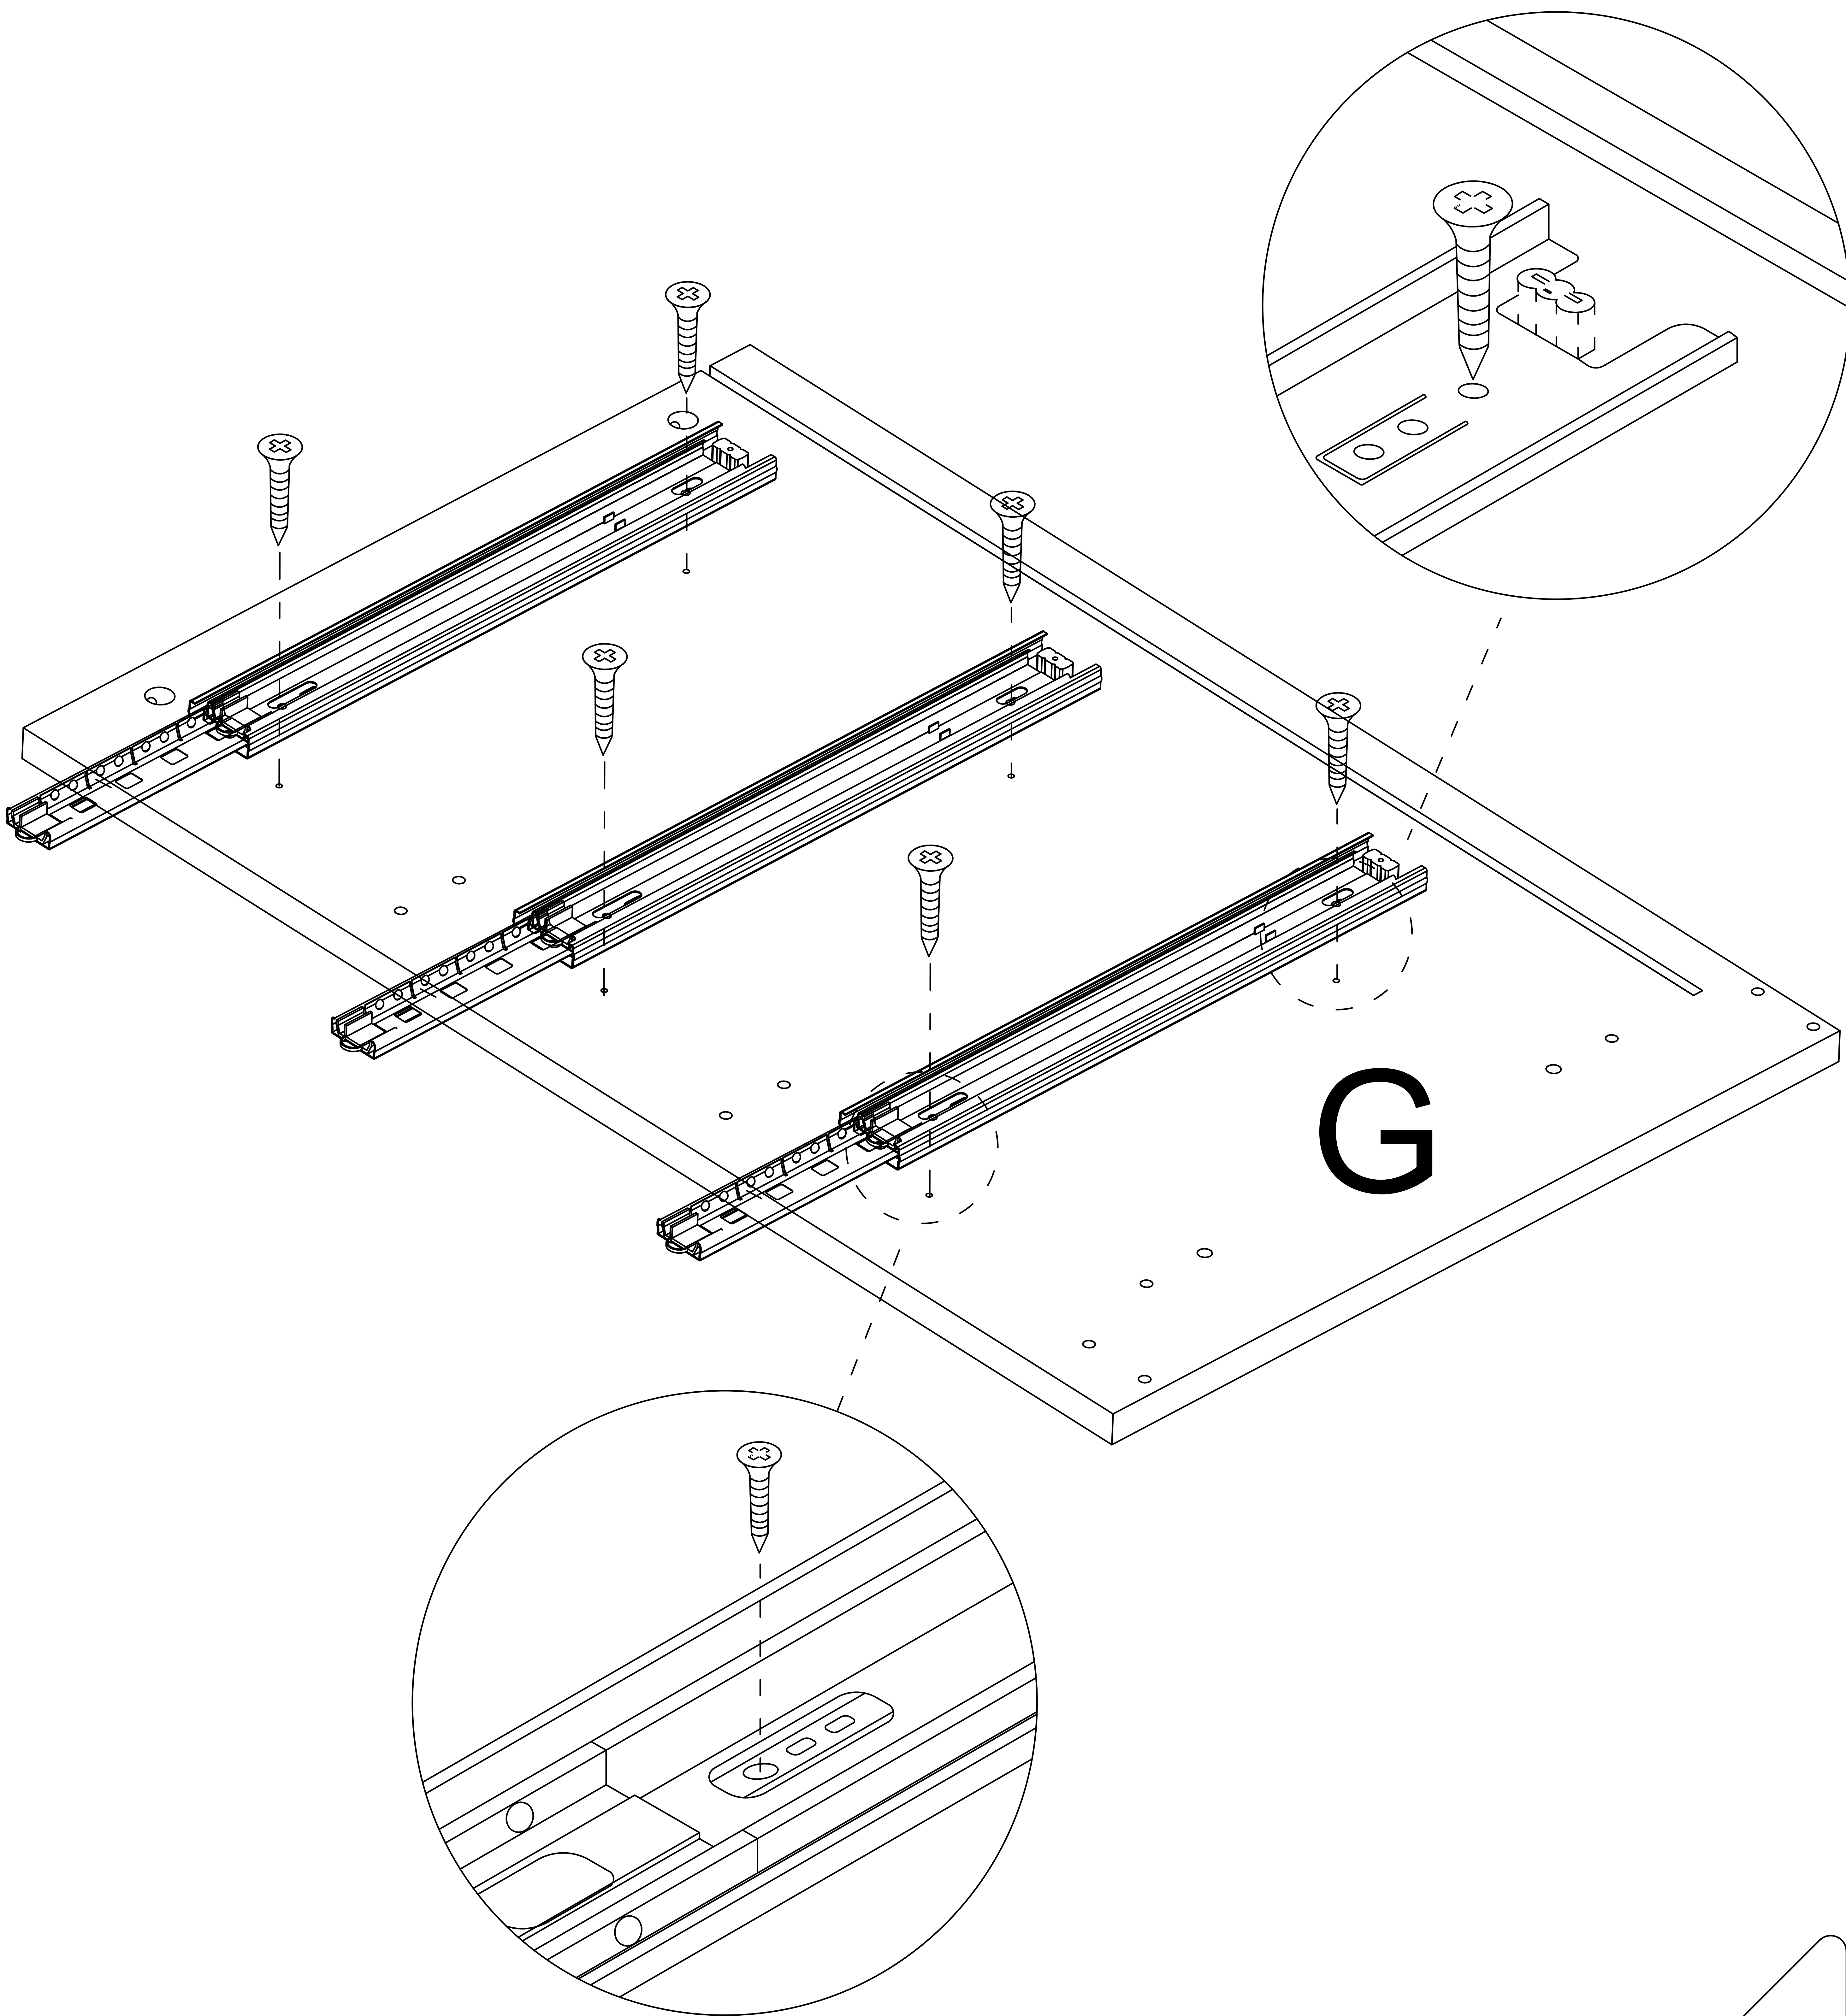



Step 19

5

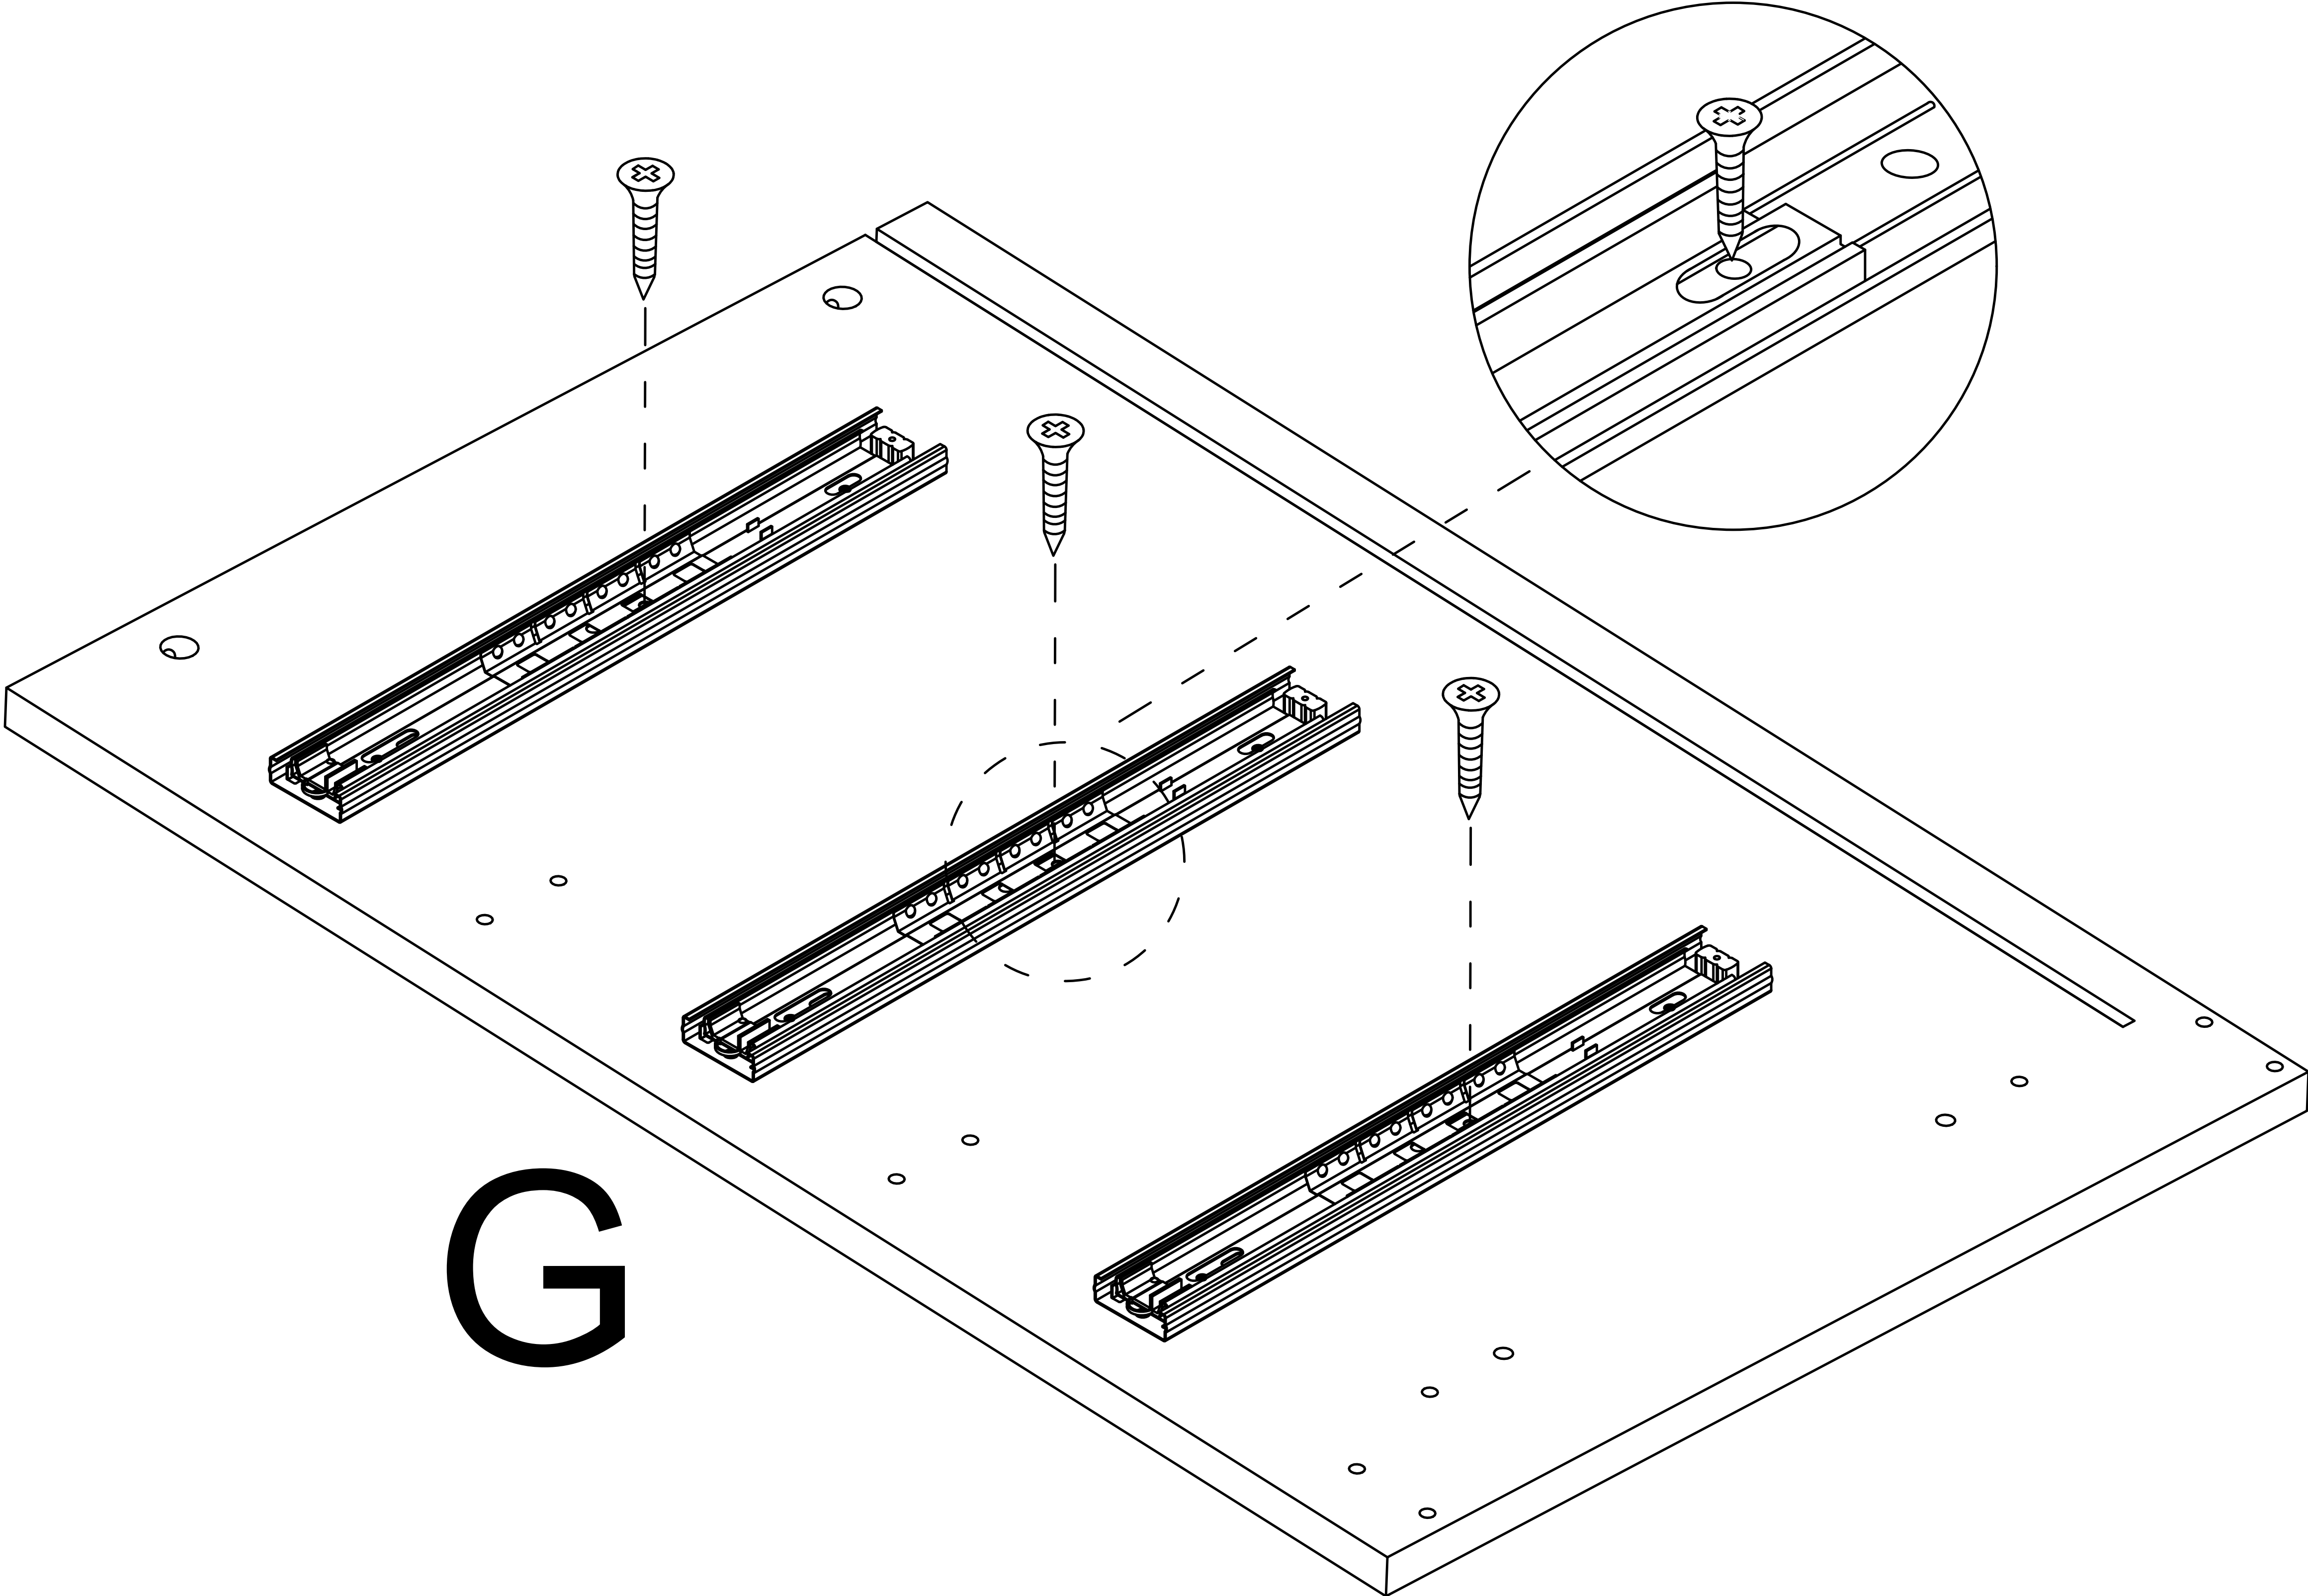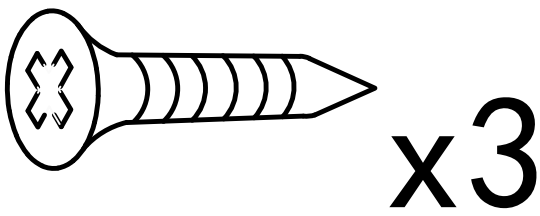


Step 20

1

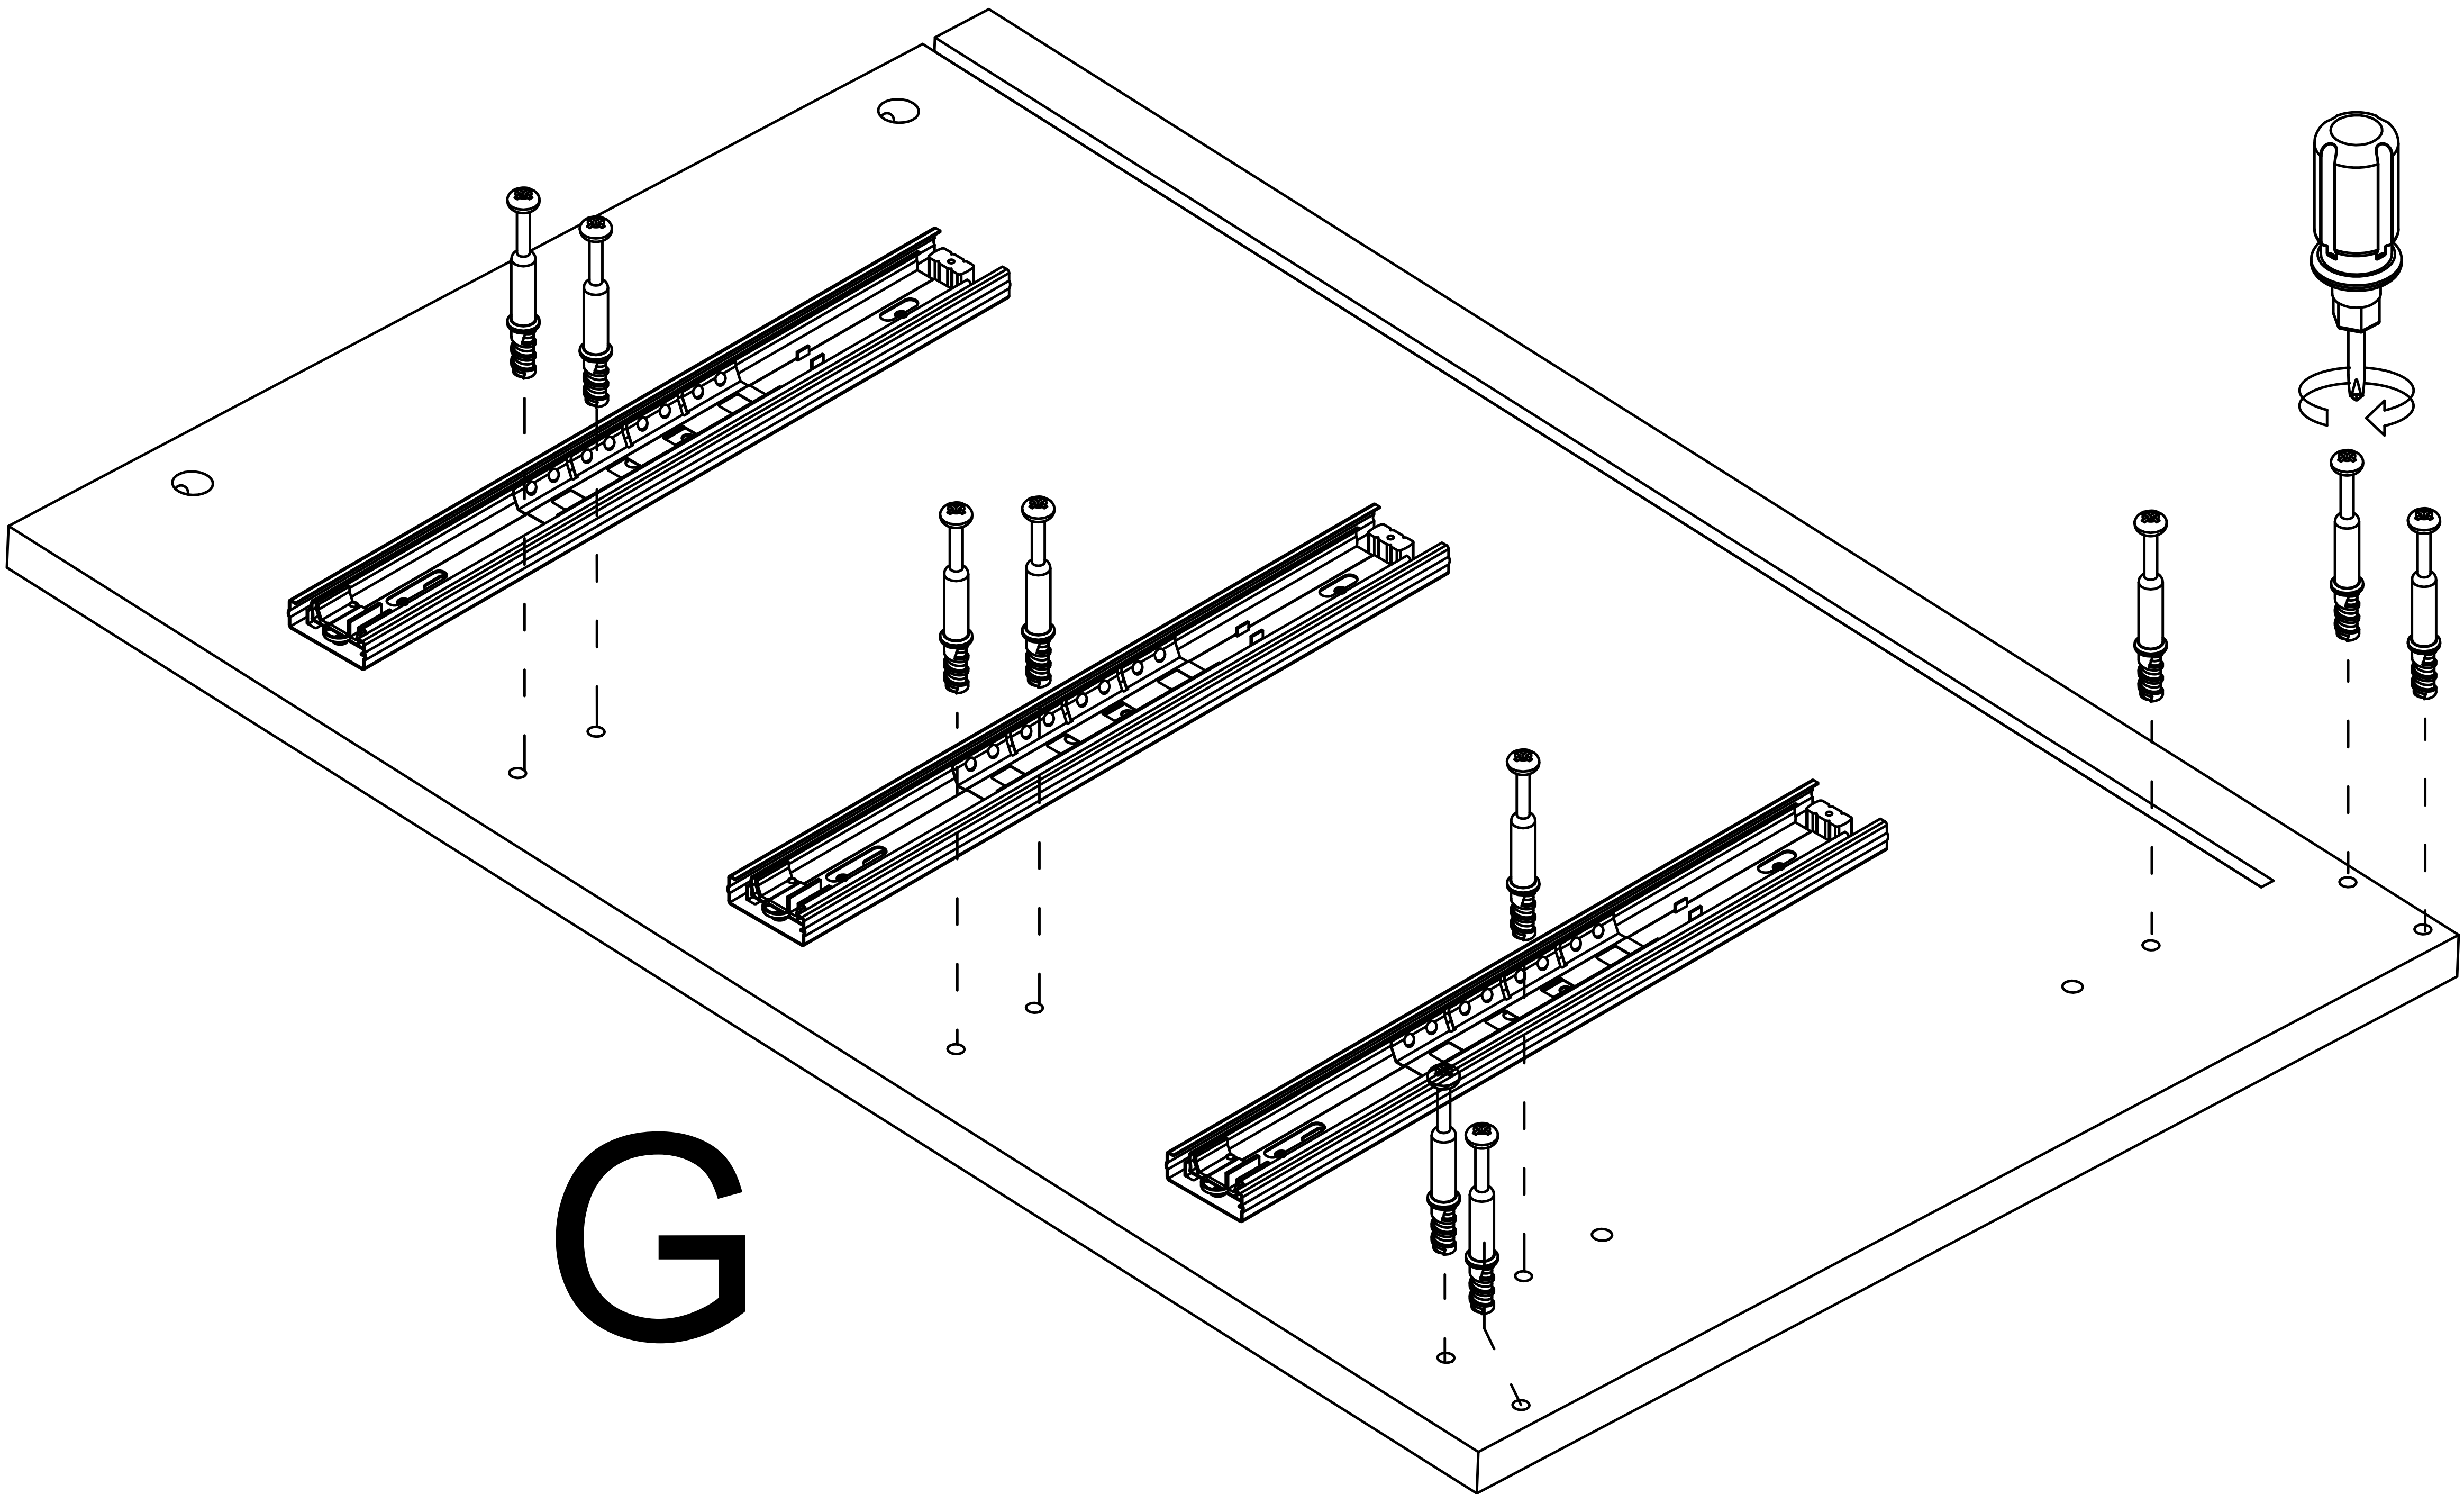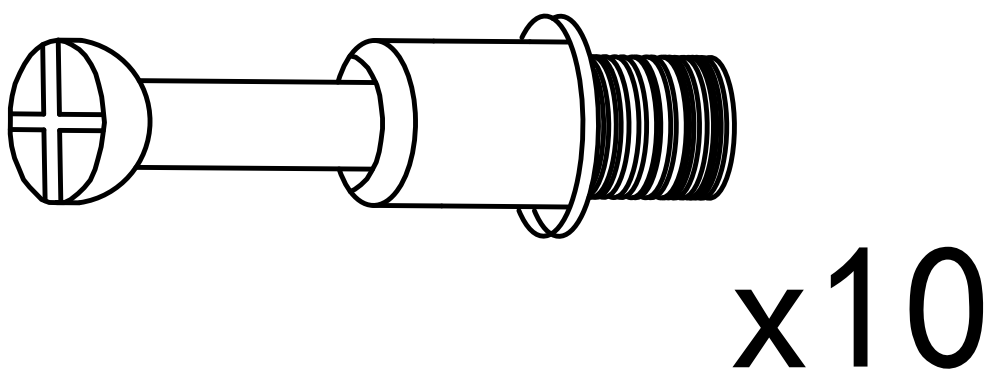


## Step 21


2

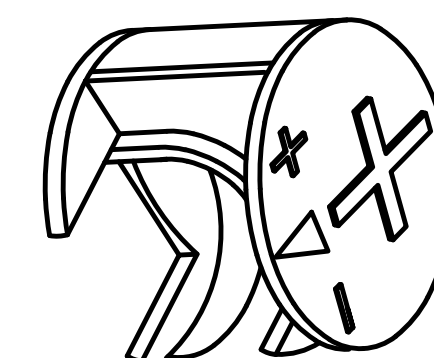


x10

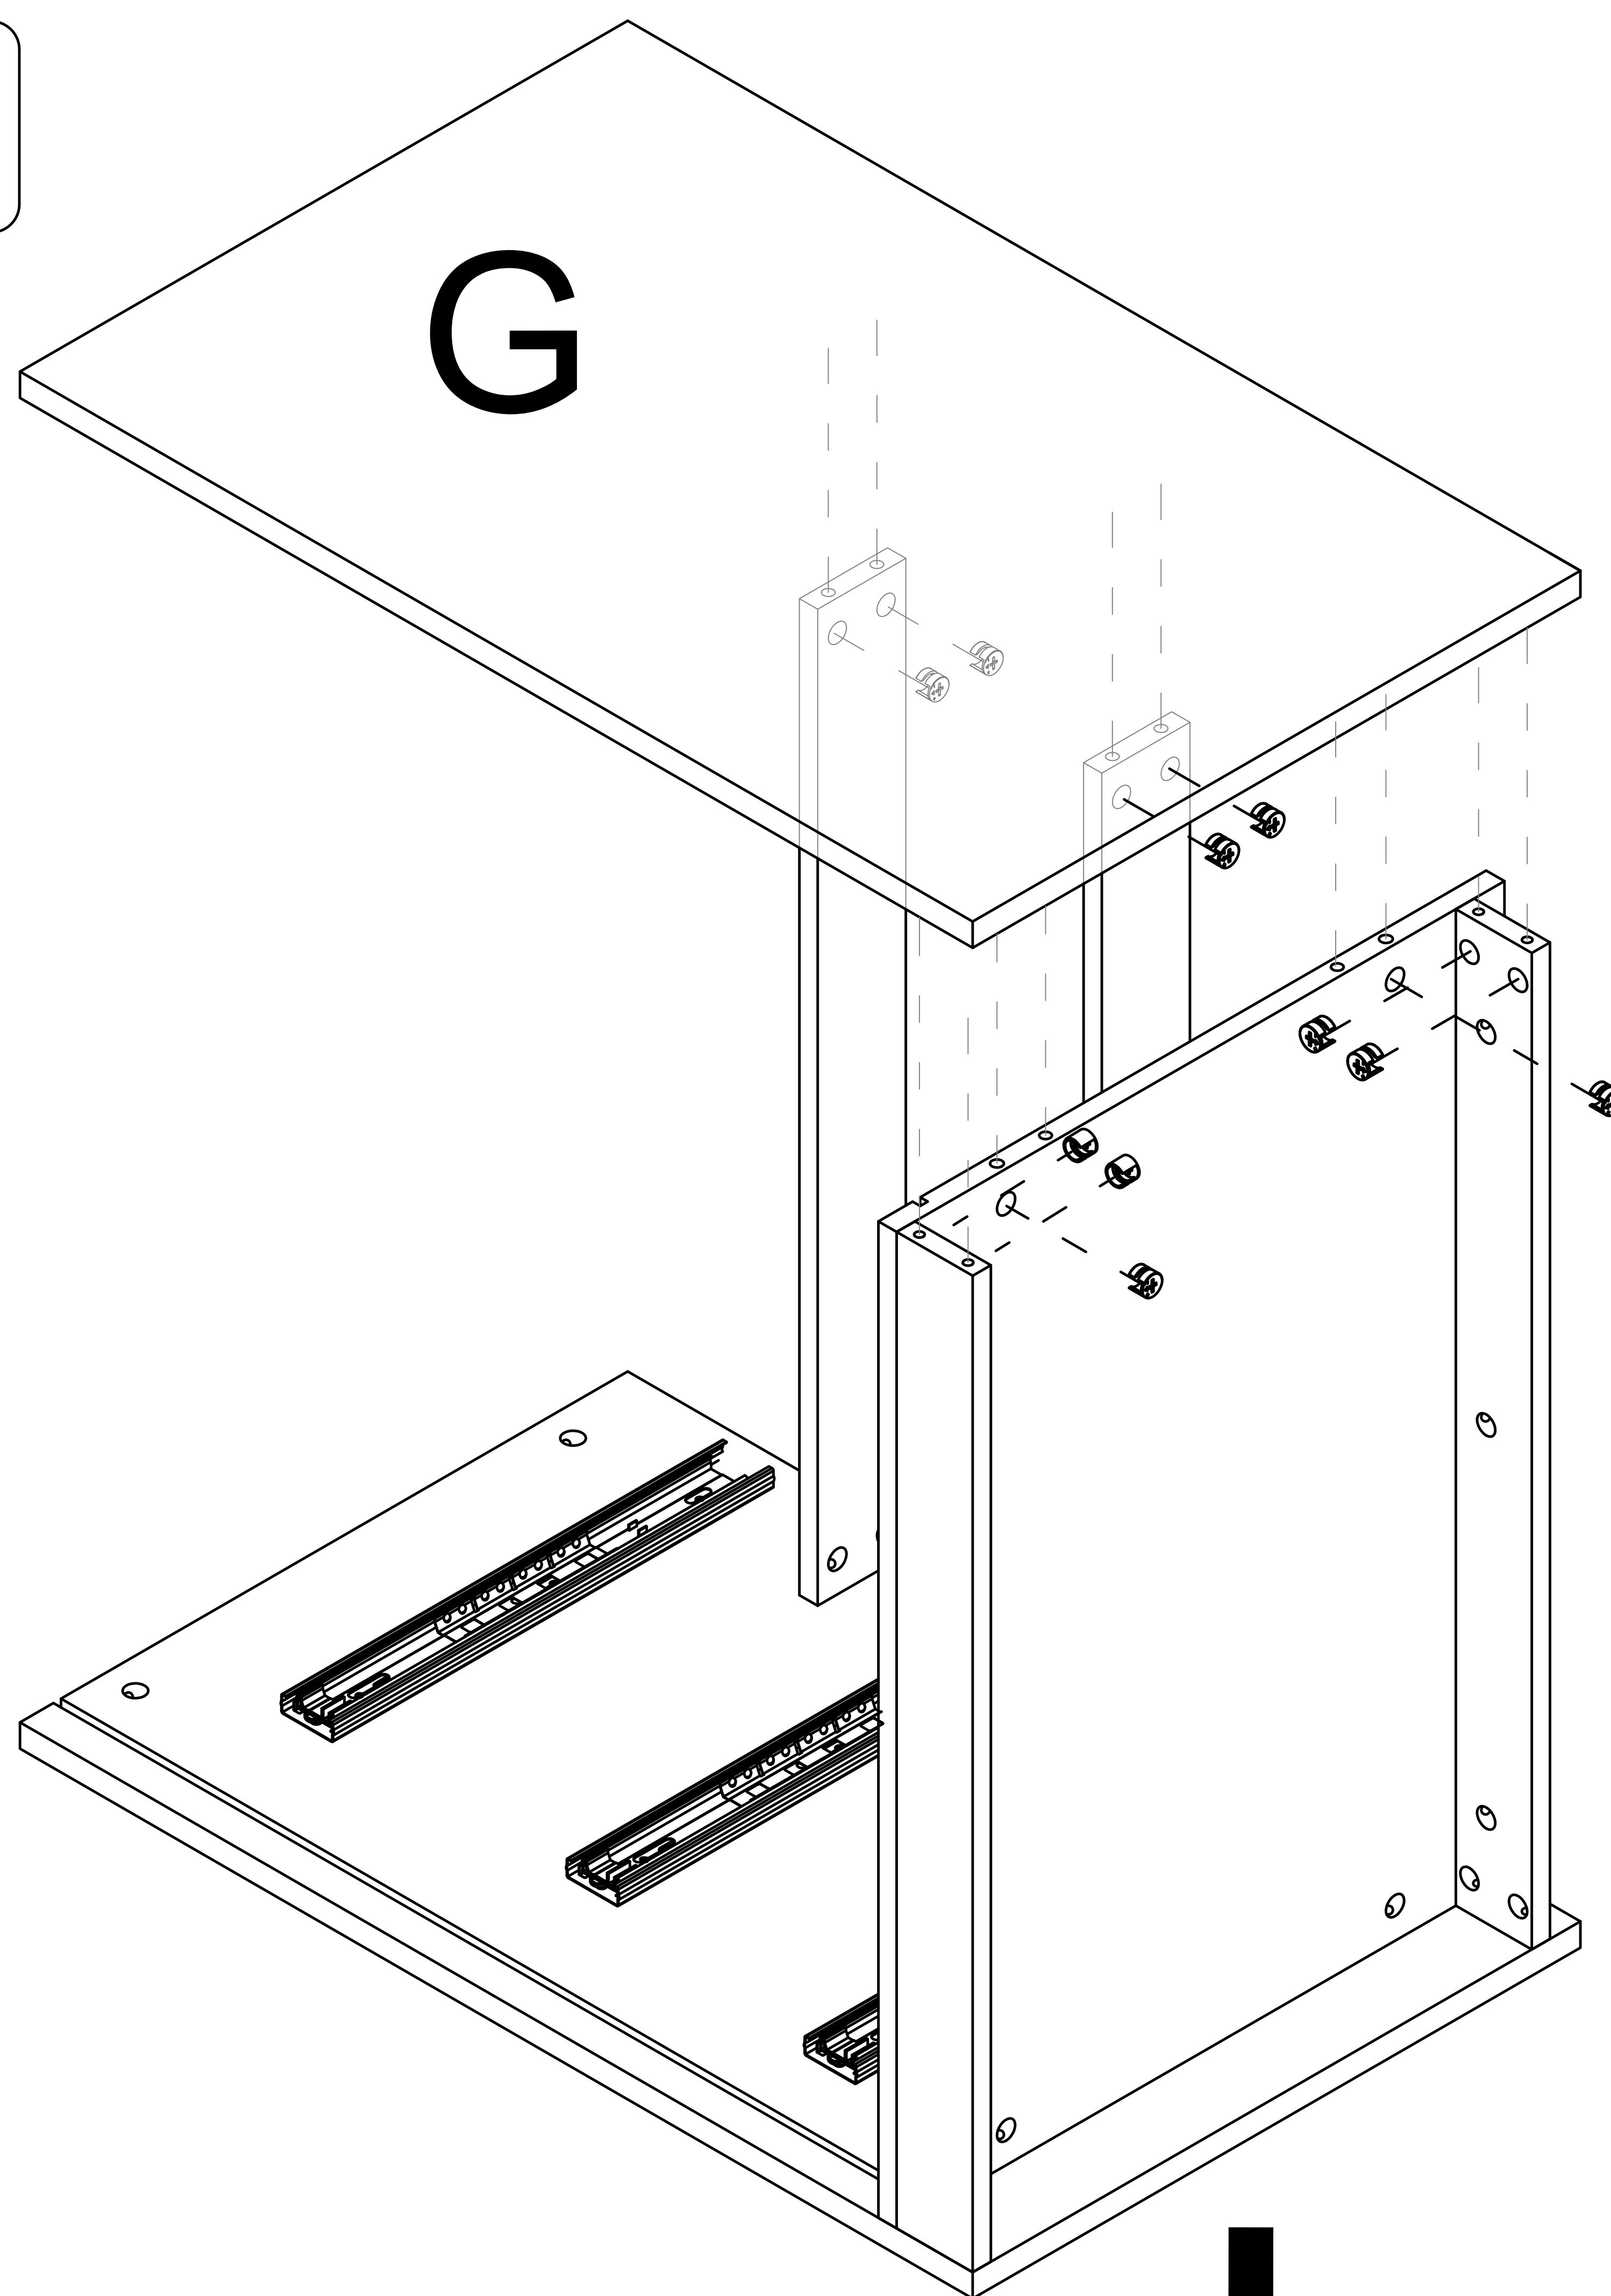

6

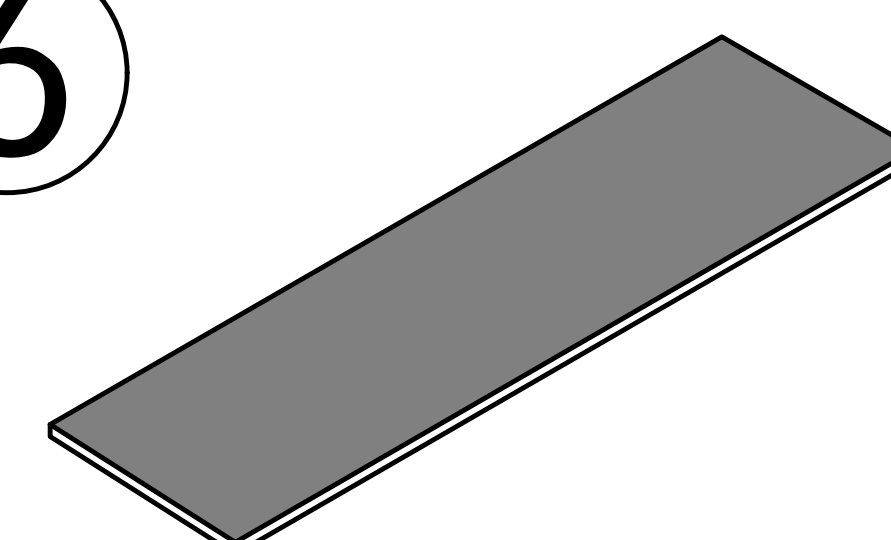


x4

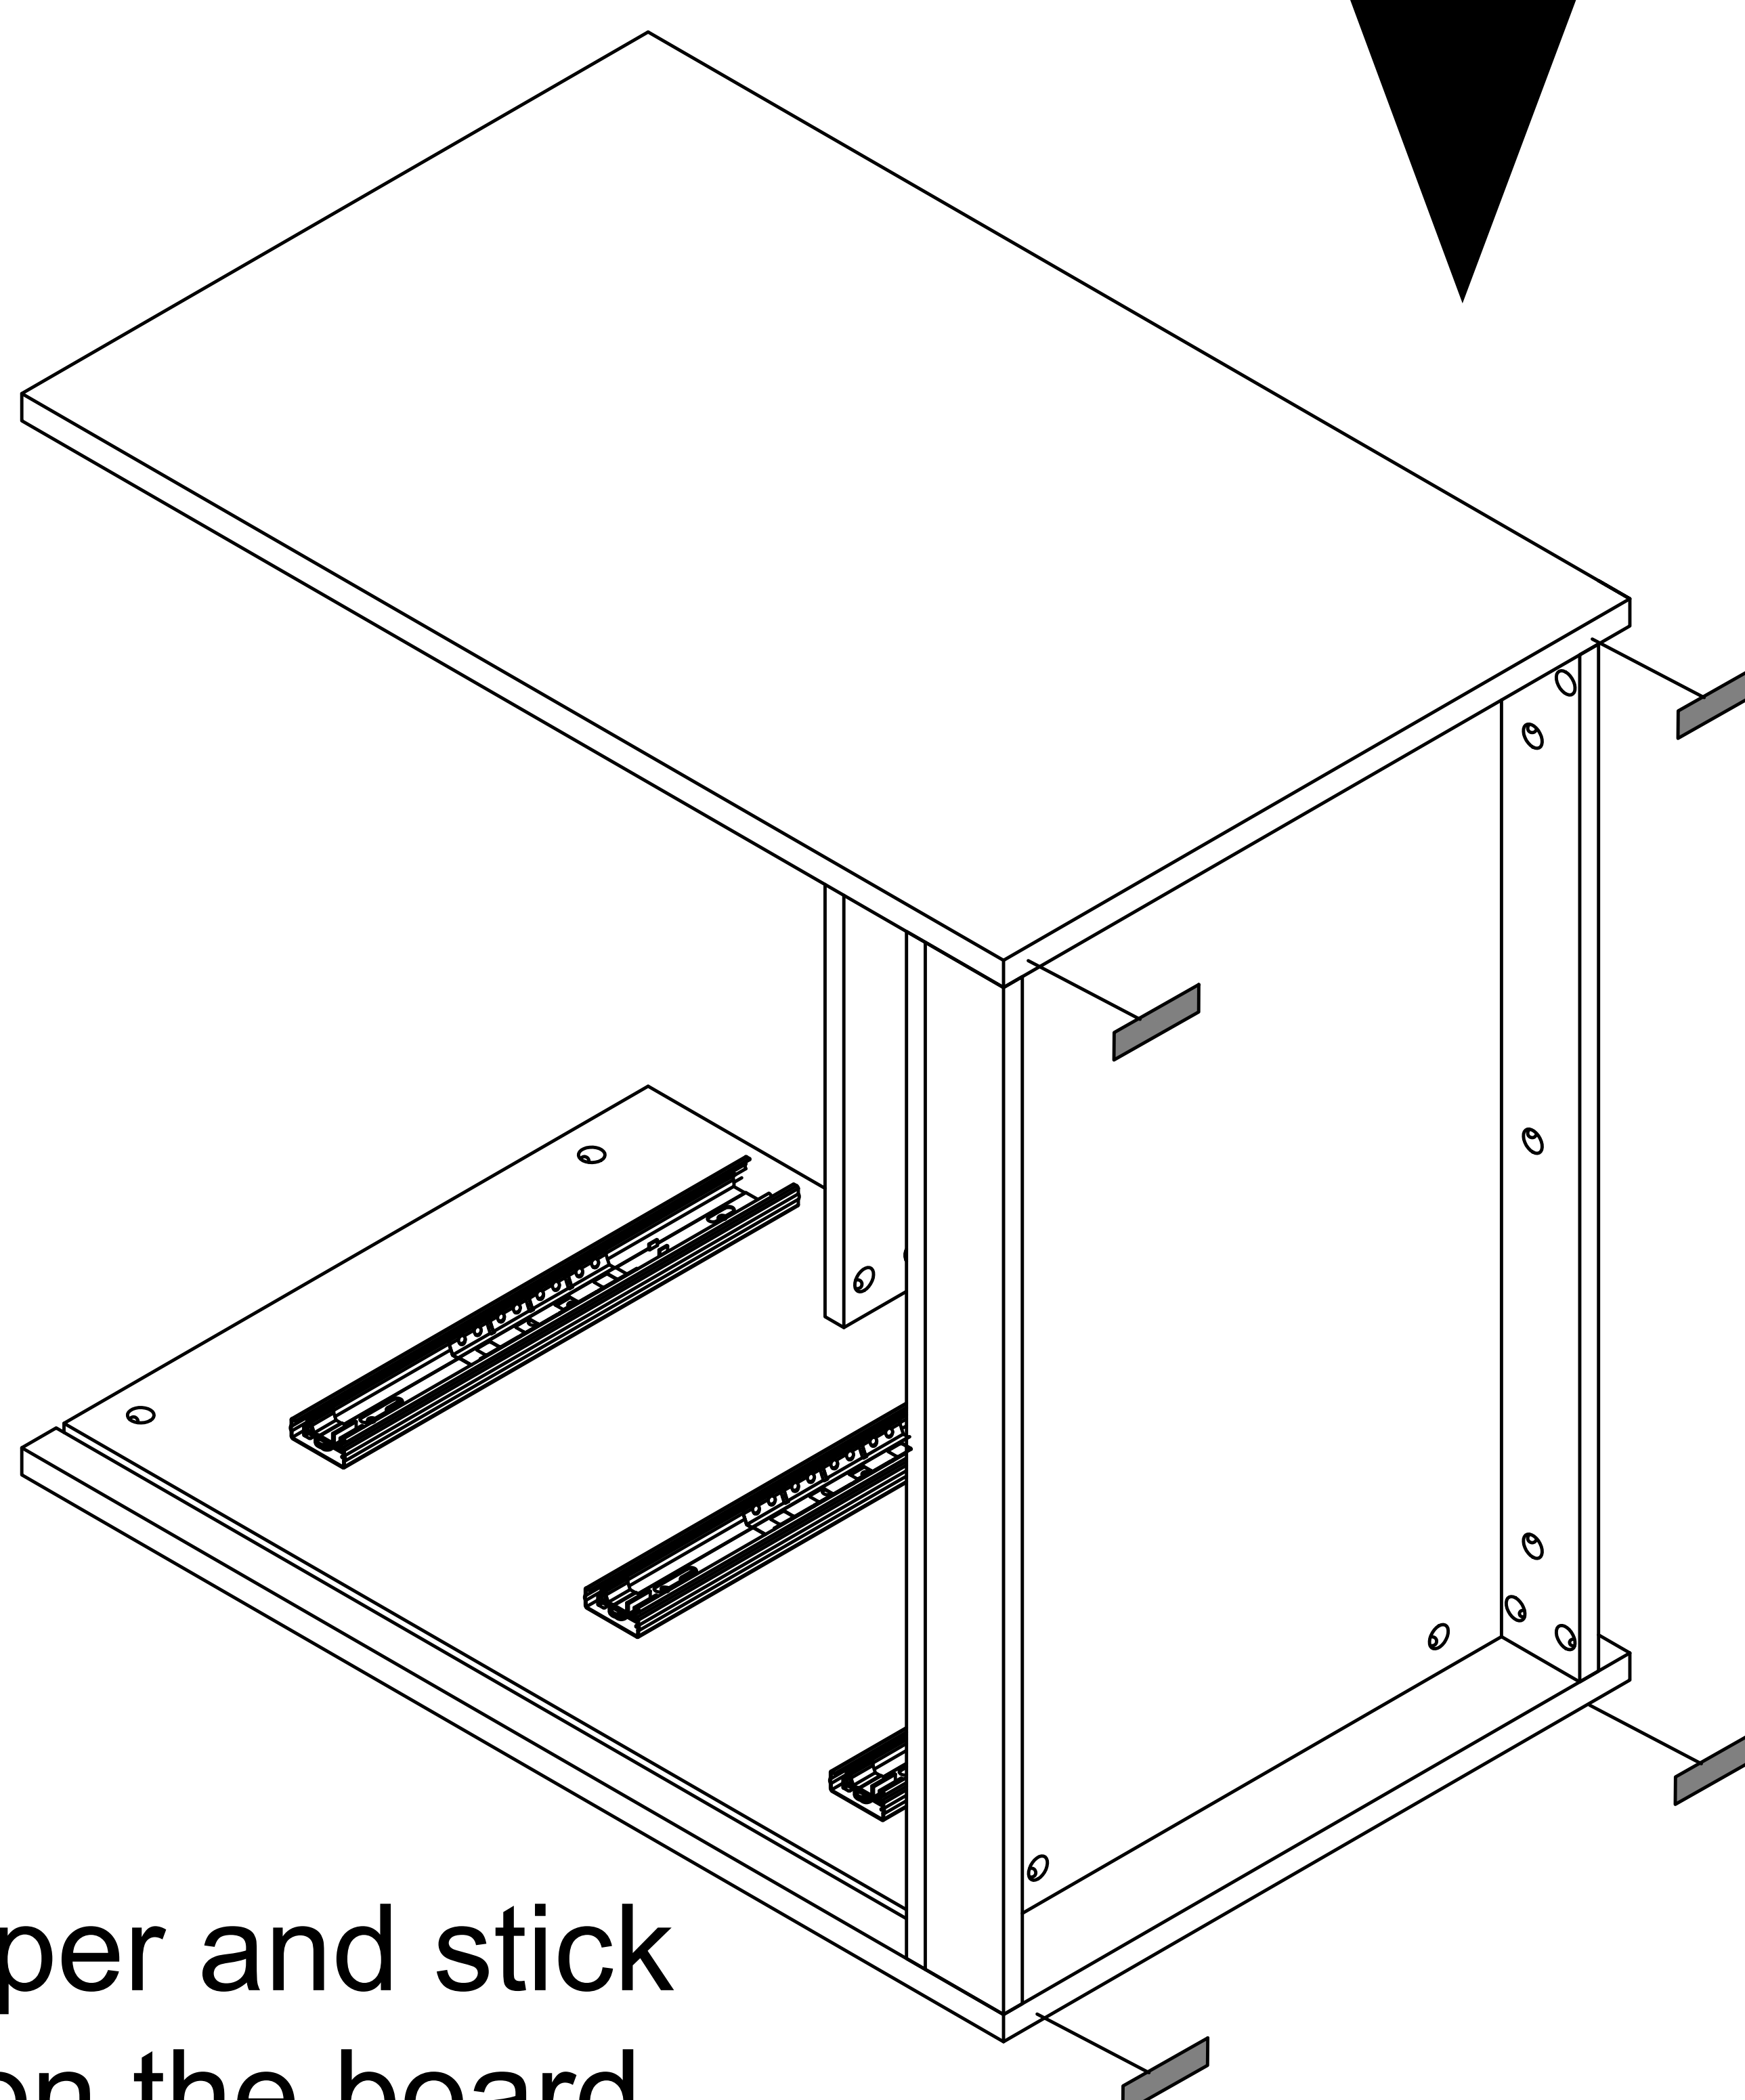


Tear off release paper and stick the black foot pad on the board

19

Step 22

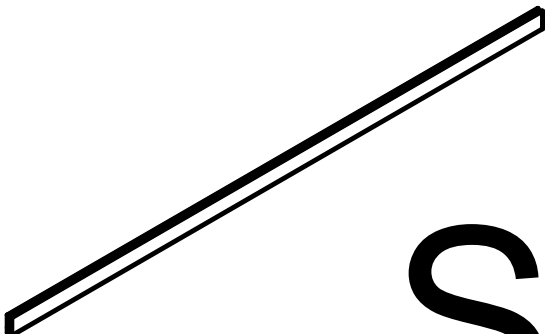 S x1

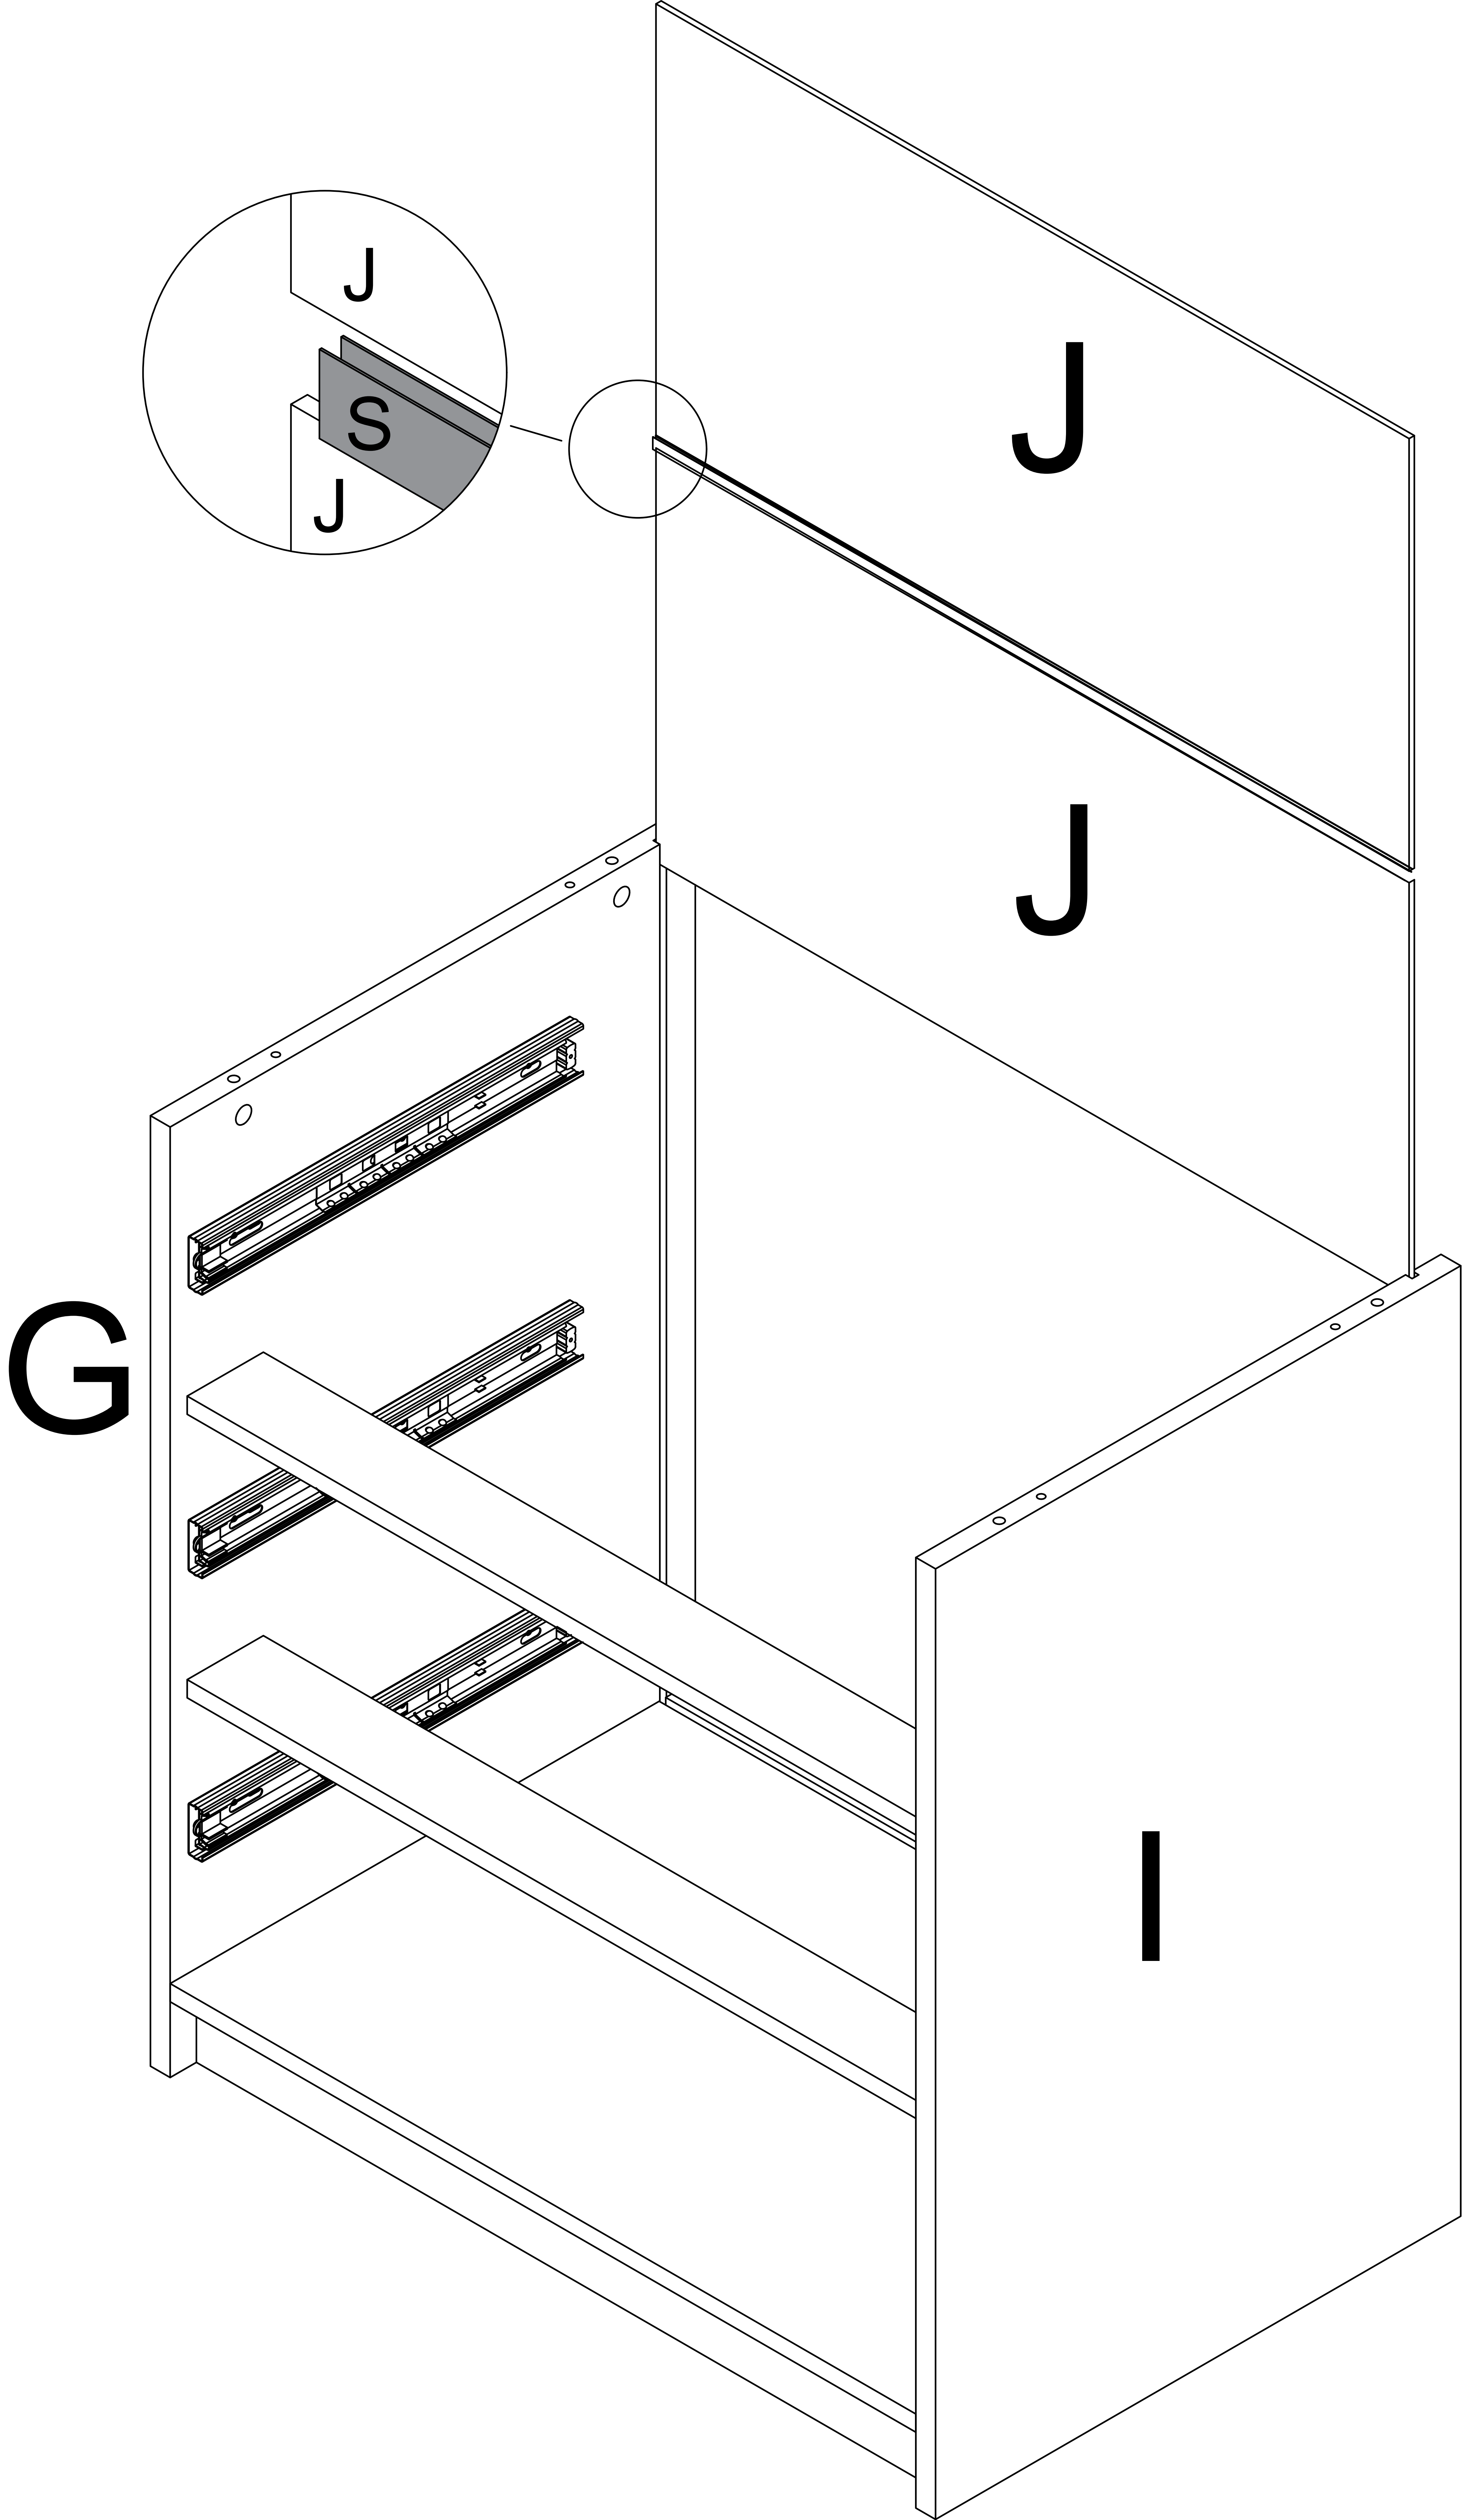


Step 23

3





x4

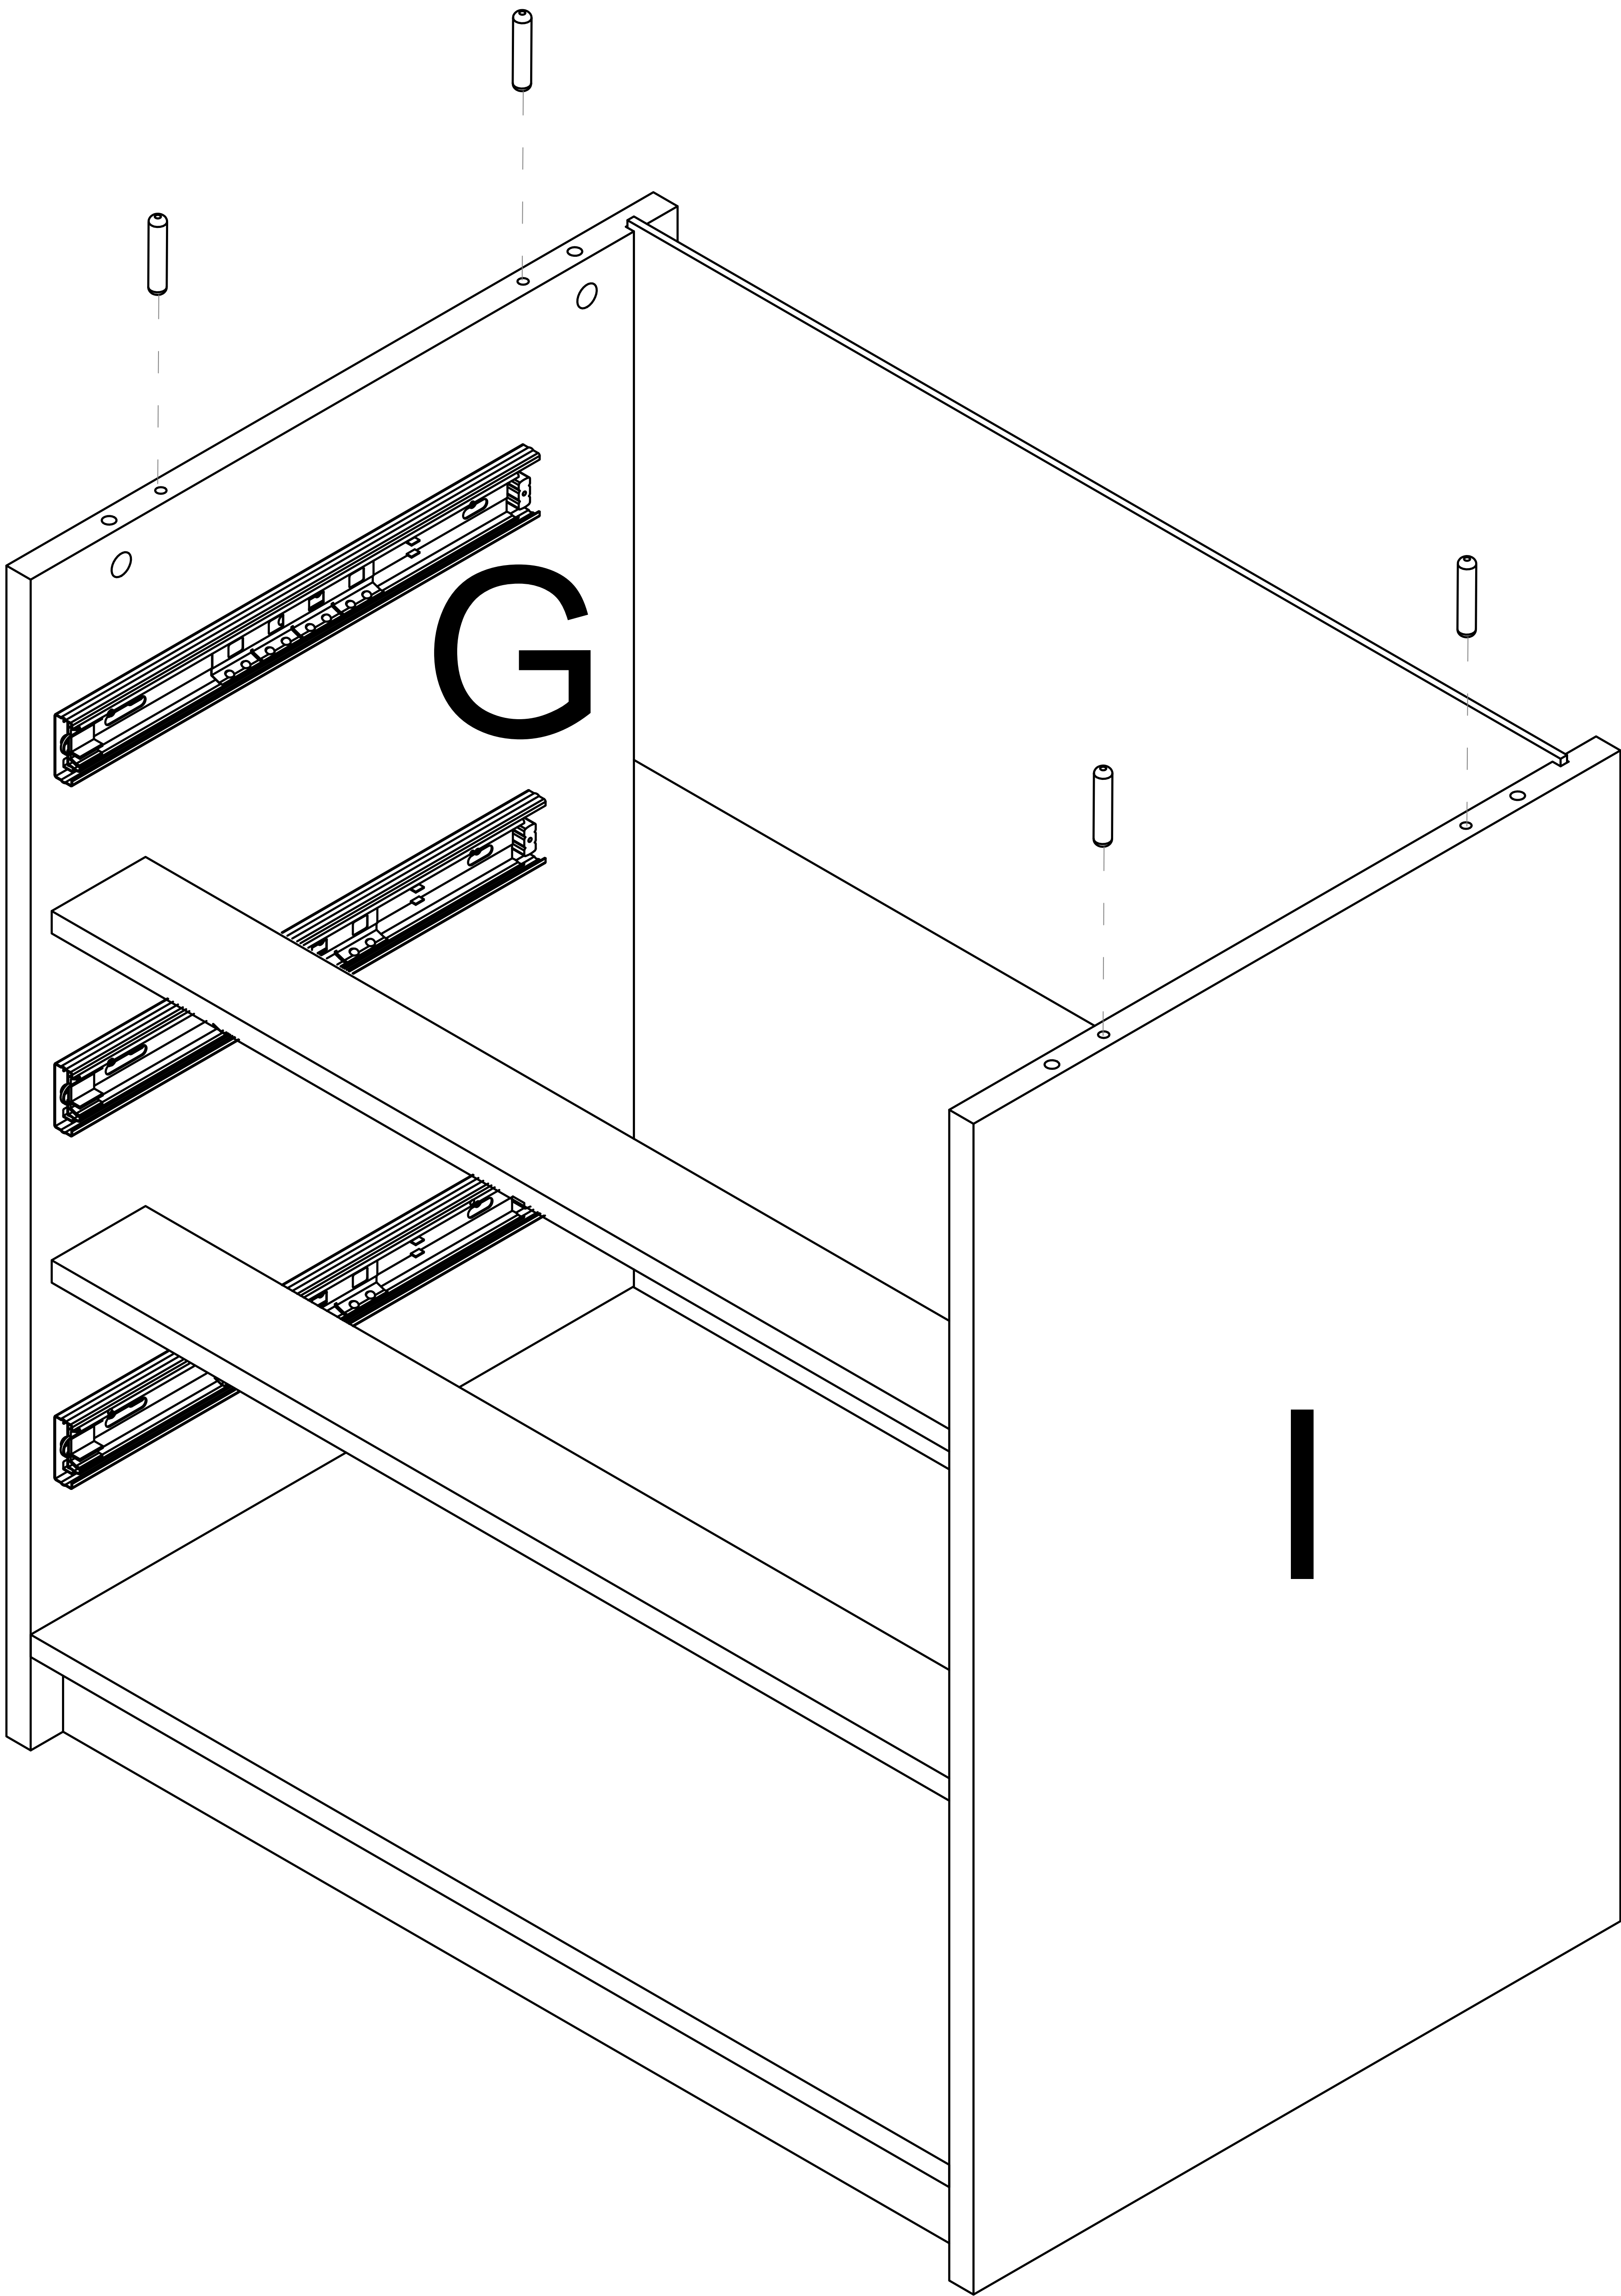

Step 24


1

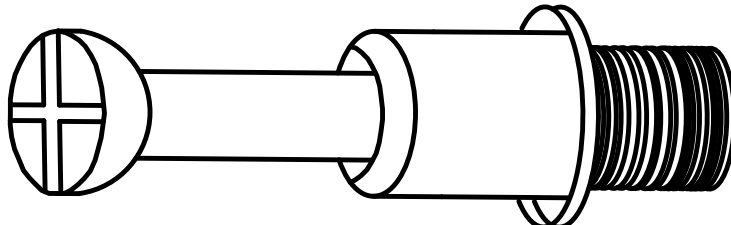
  
x4

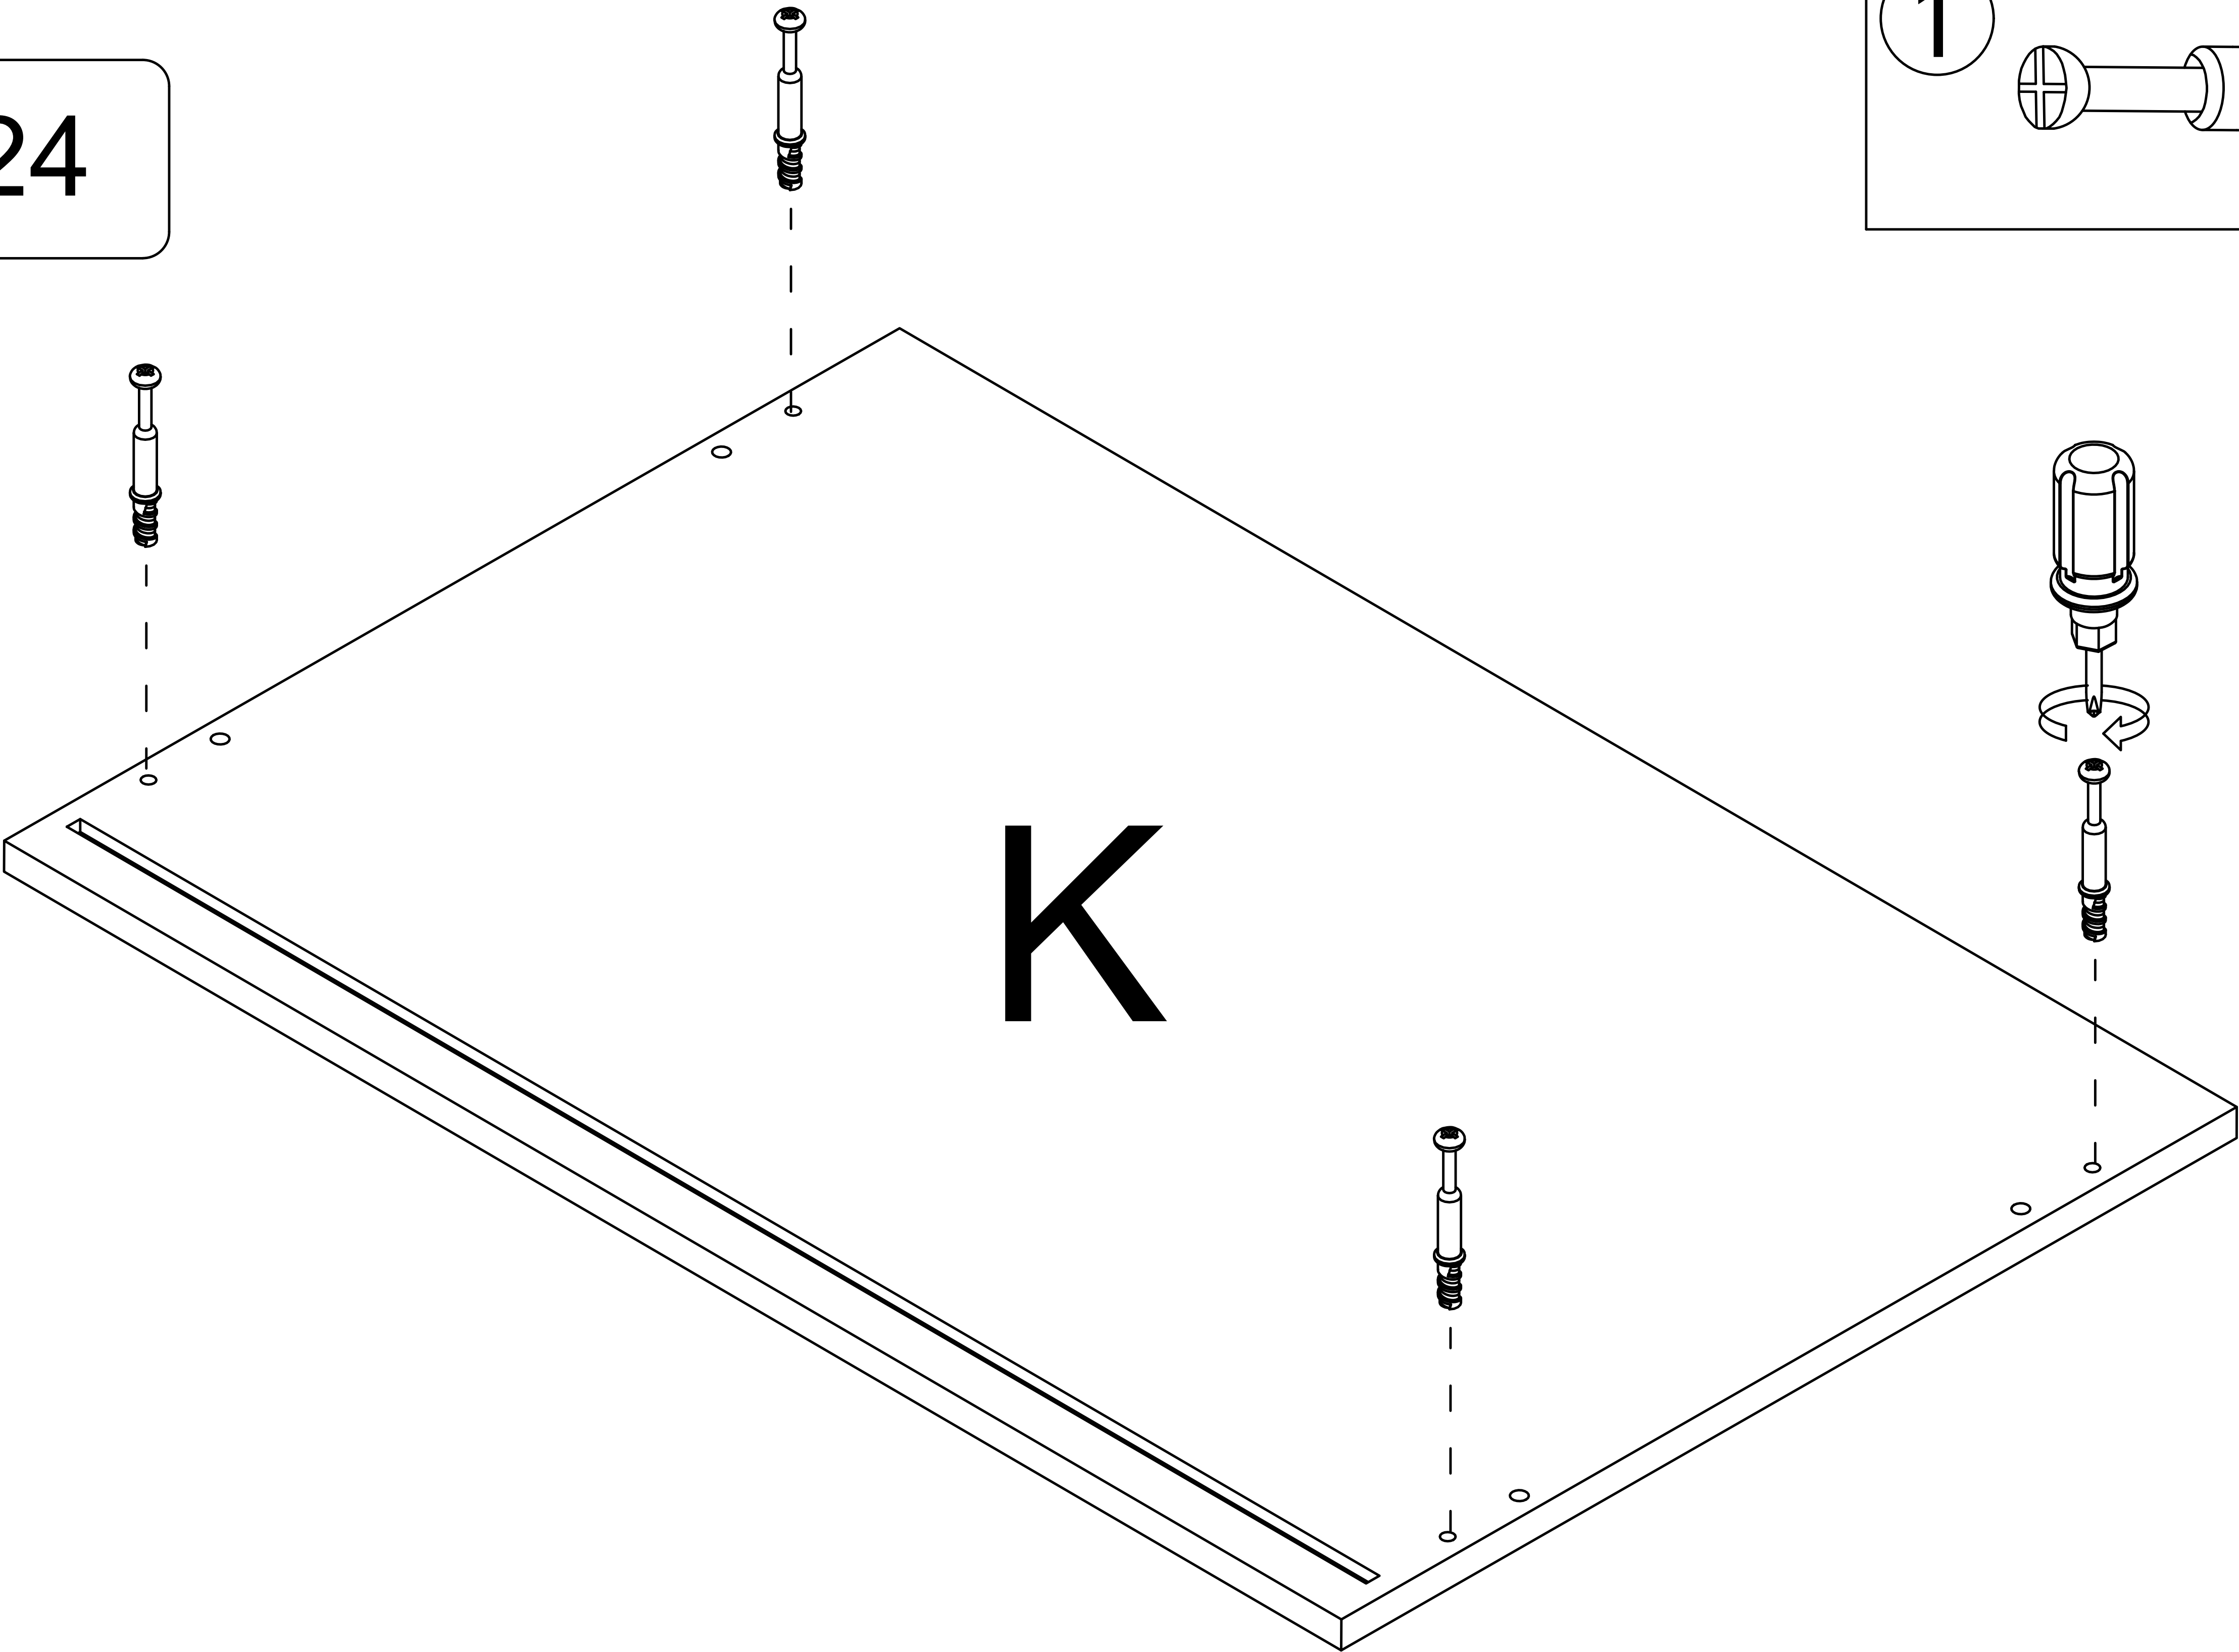


Step 25

2

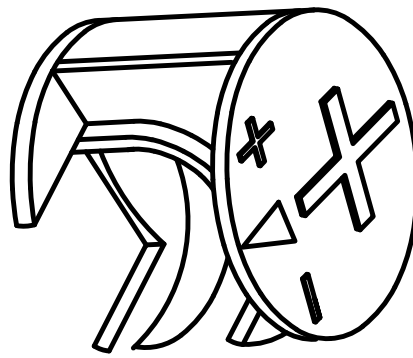  
x4

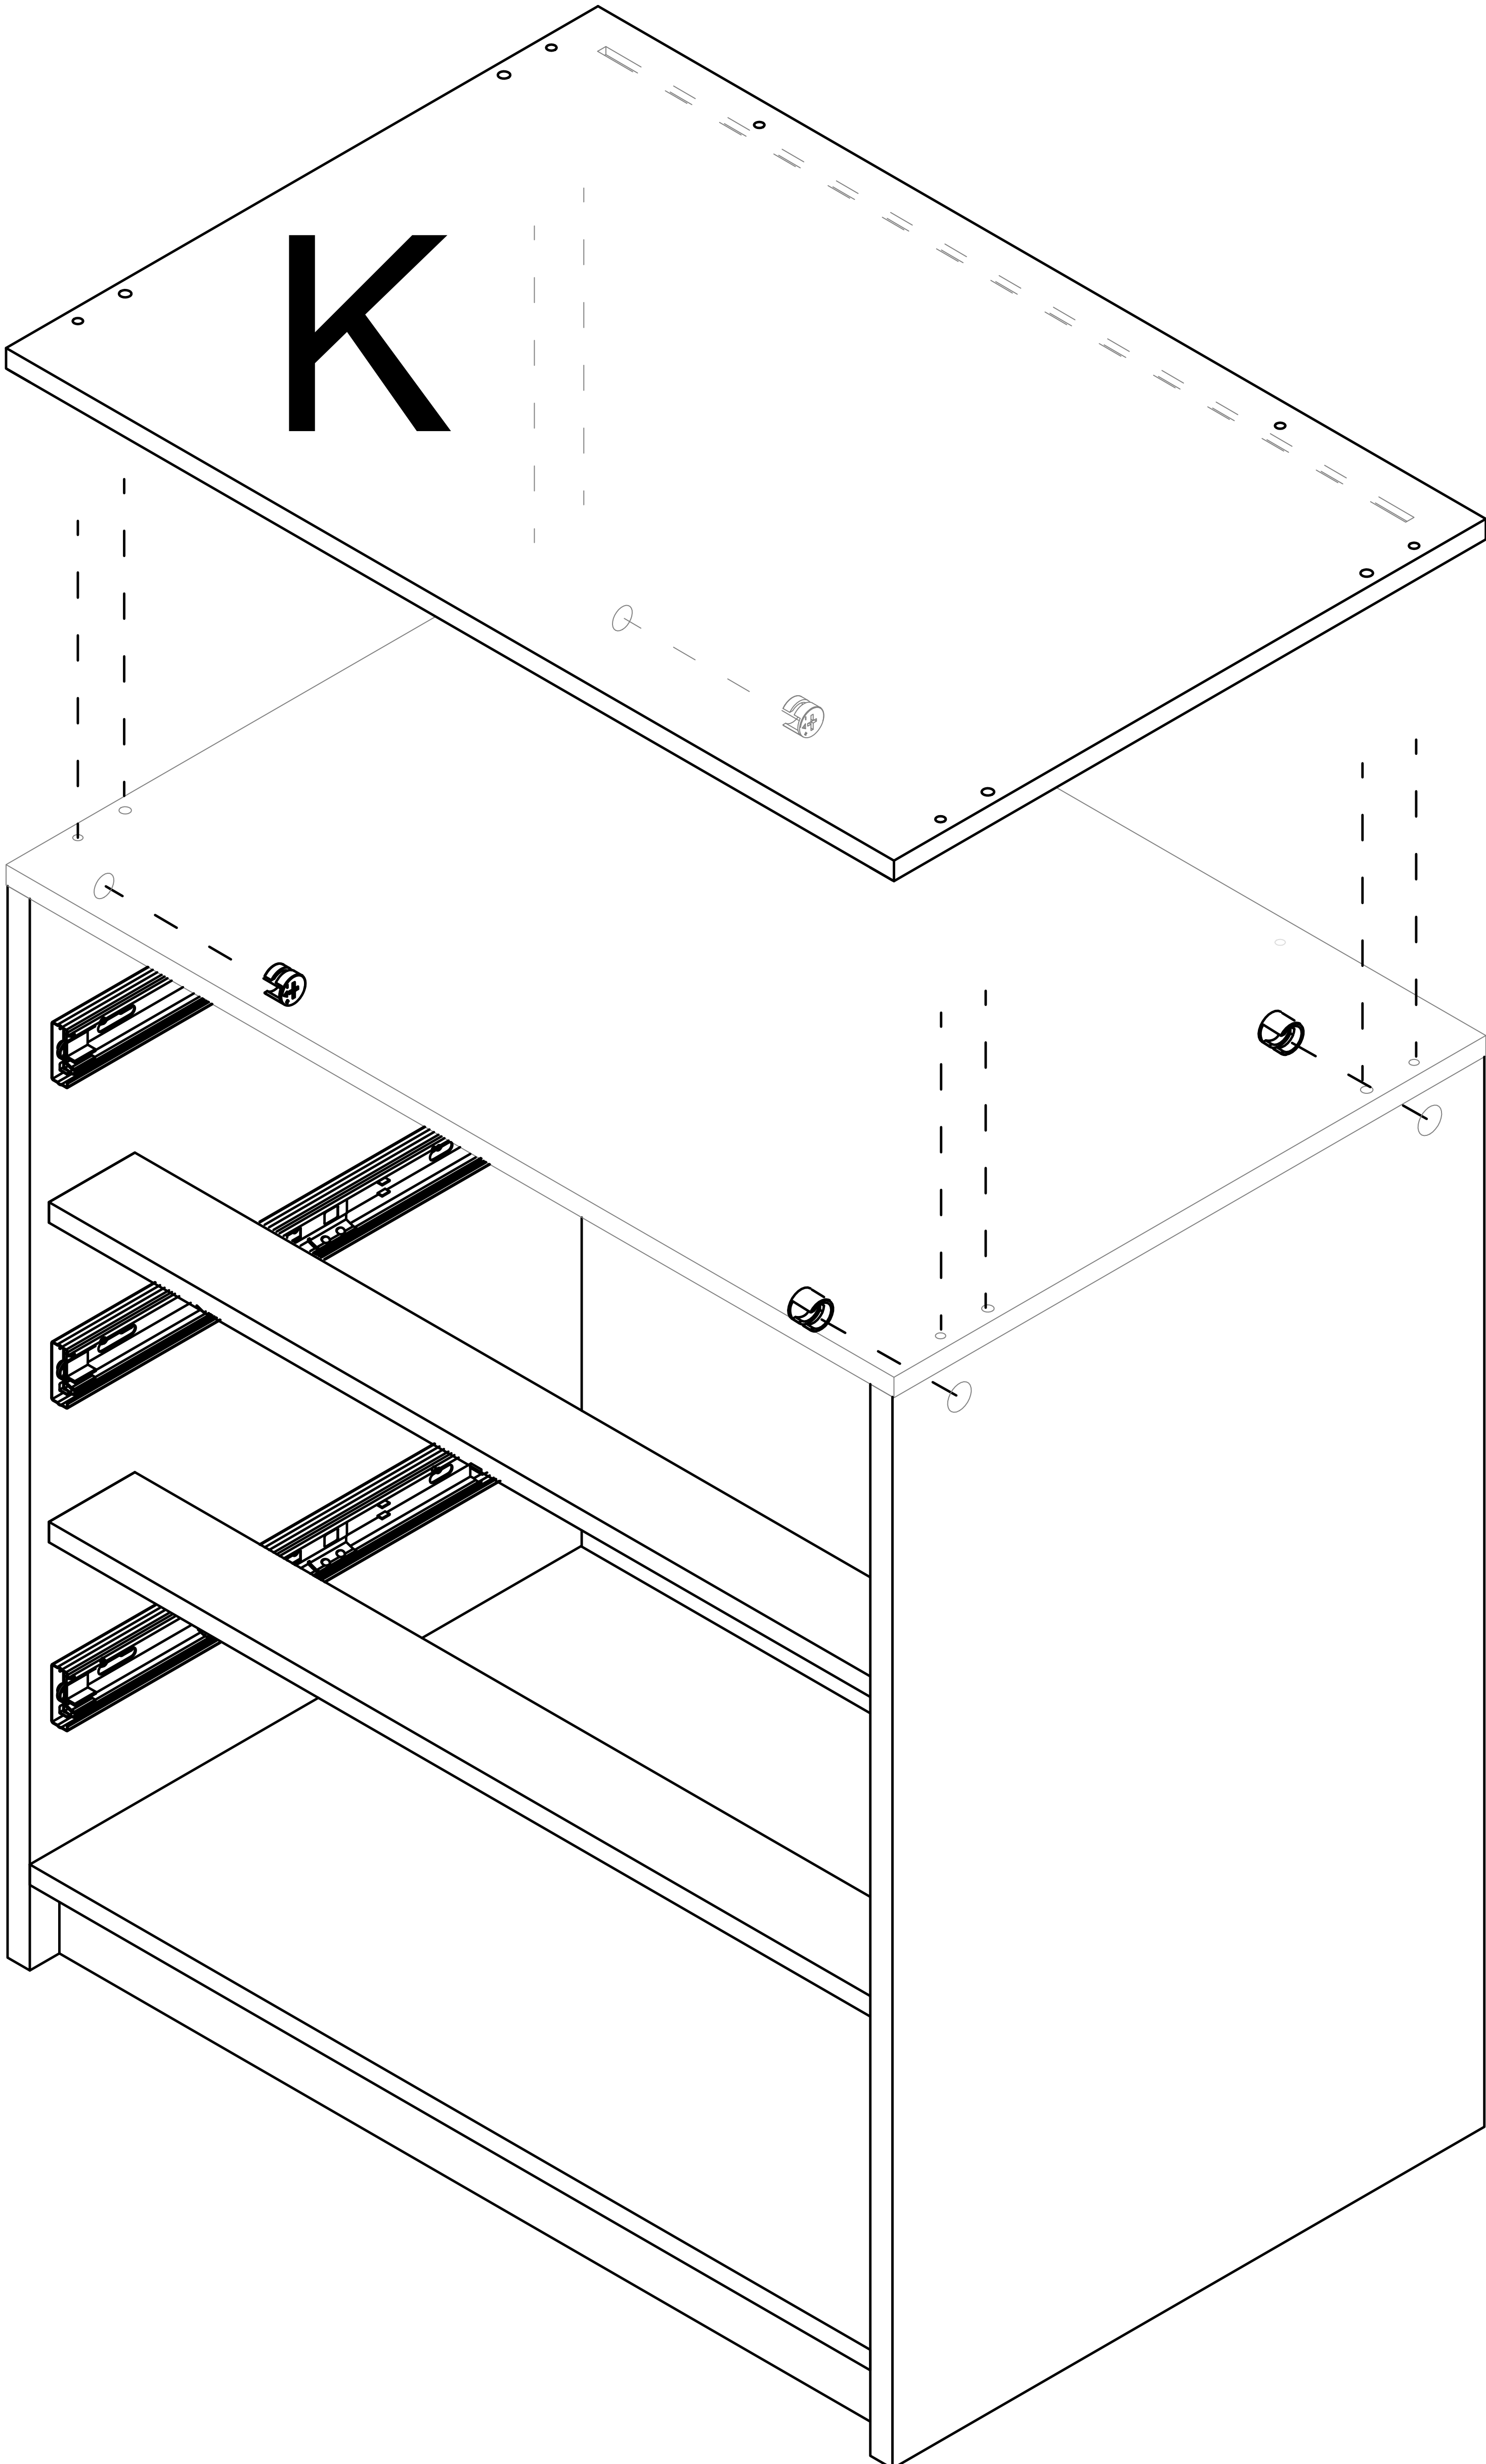


Step 26

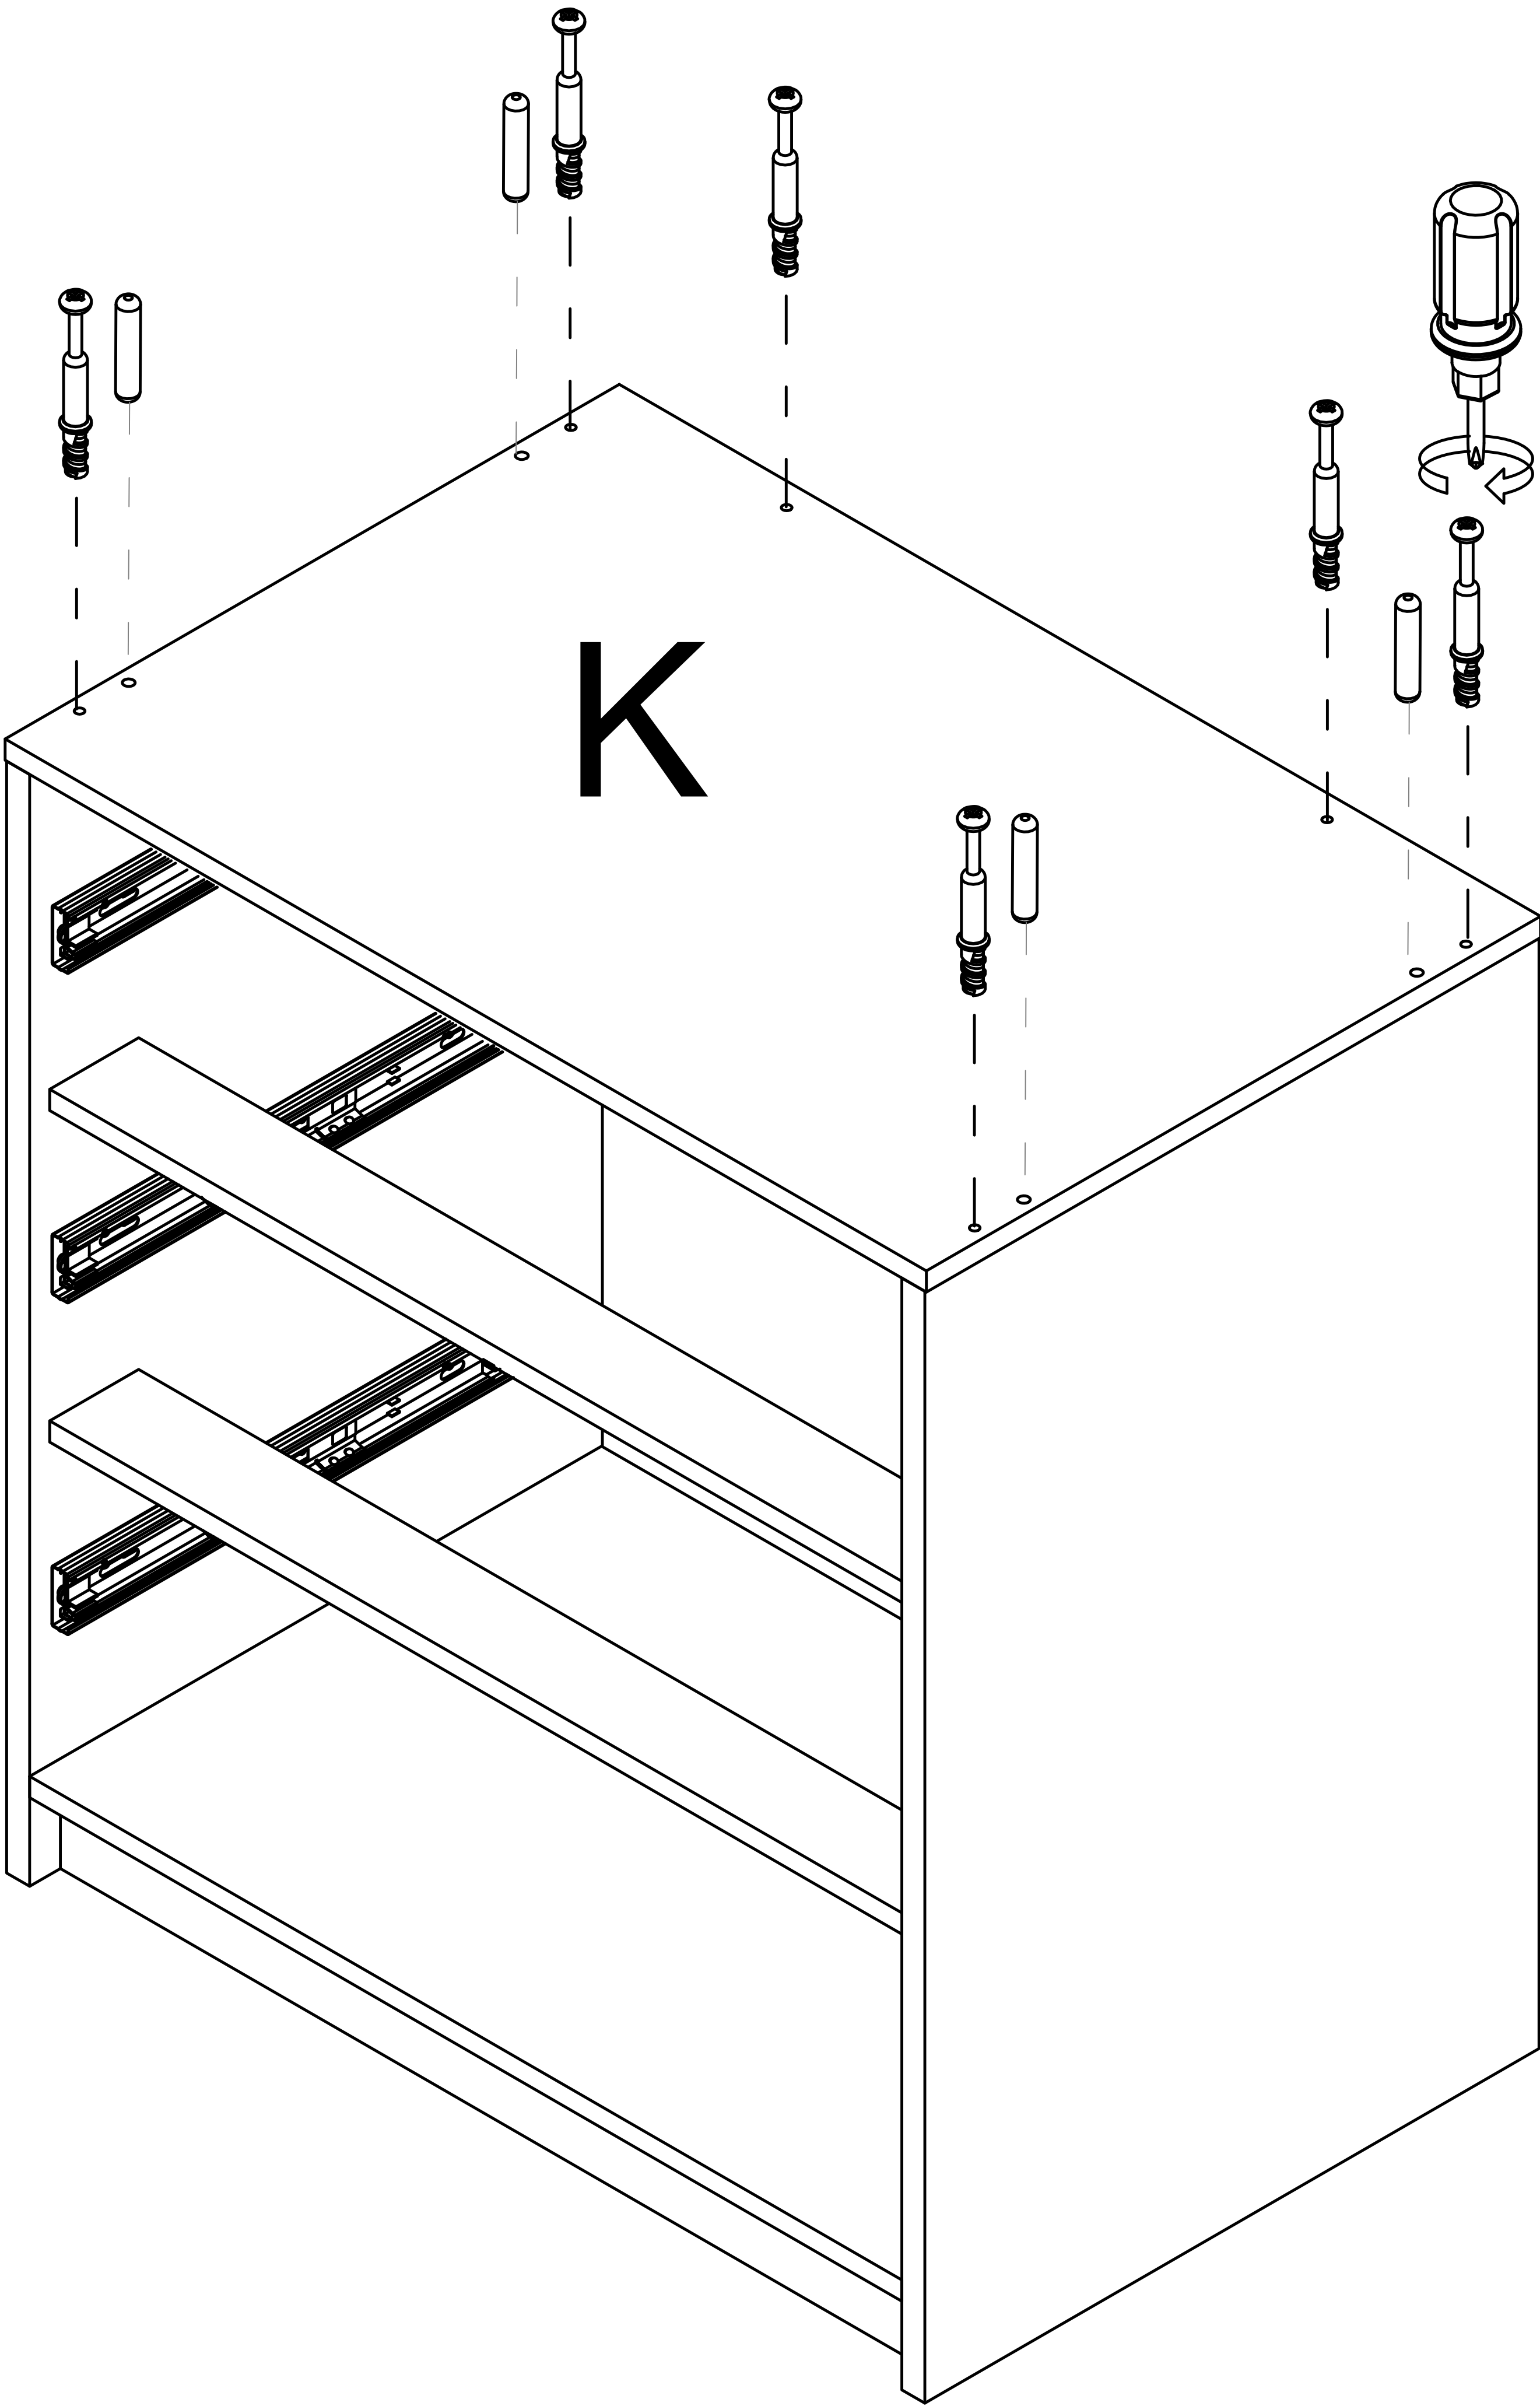

1 x6

3 x4


Step 27

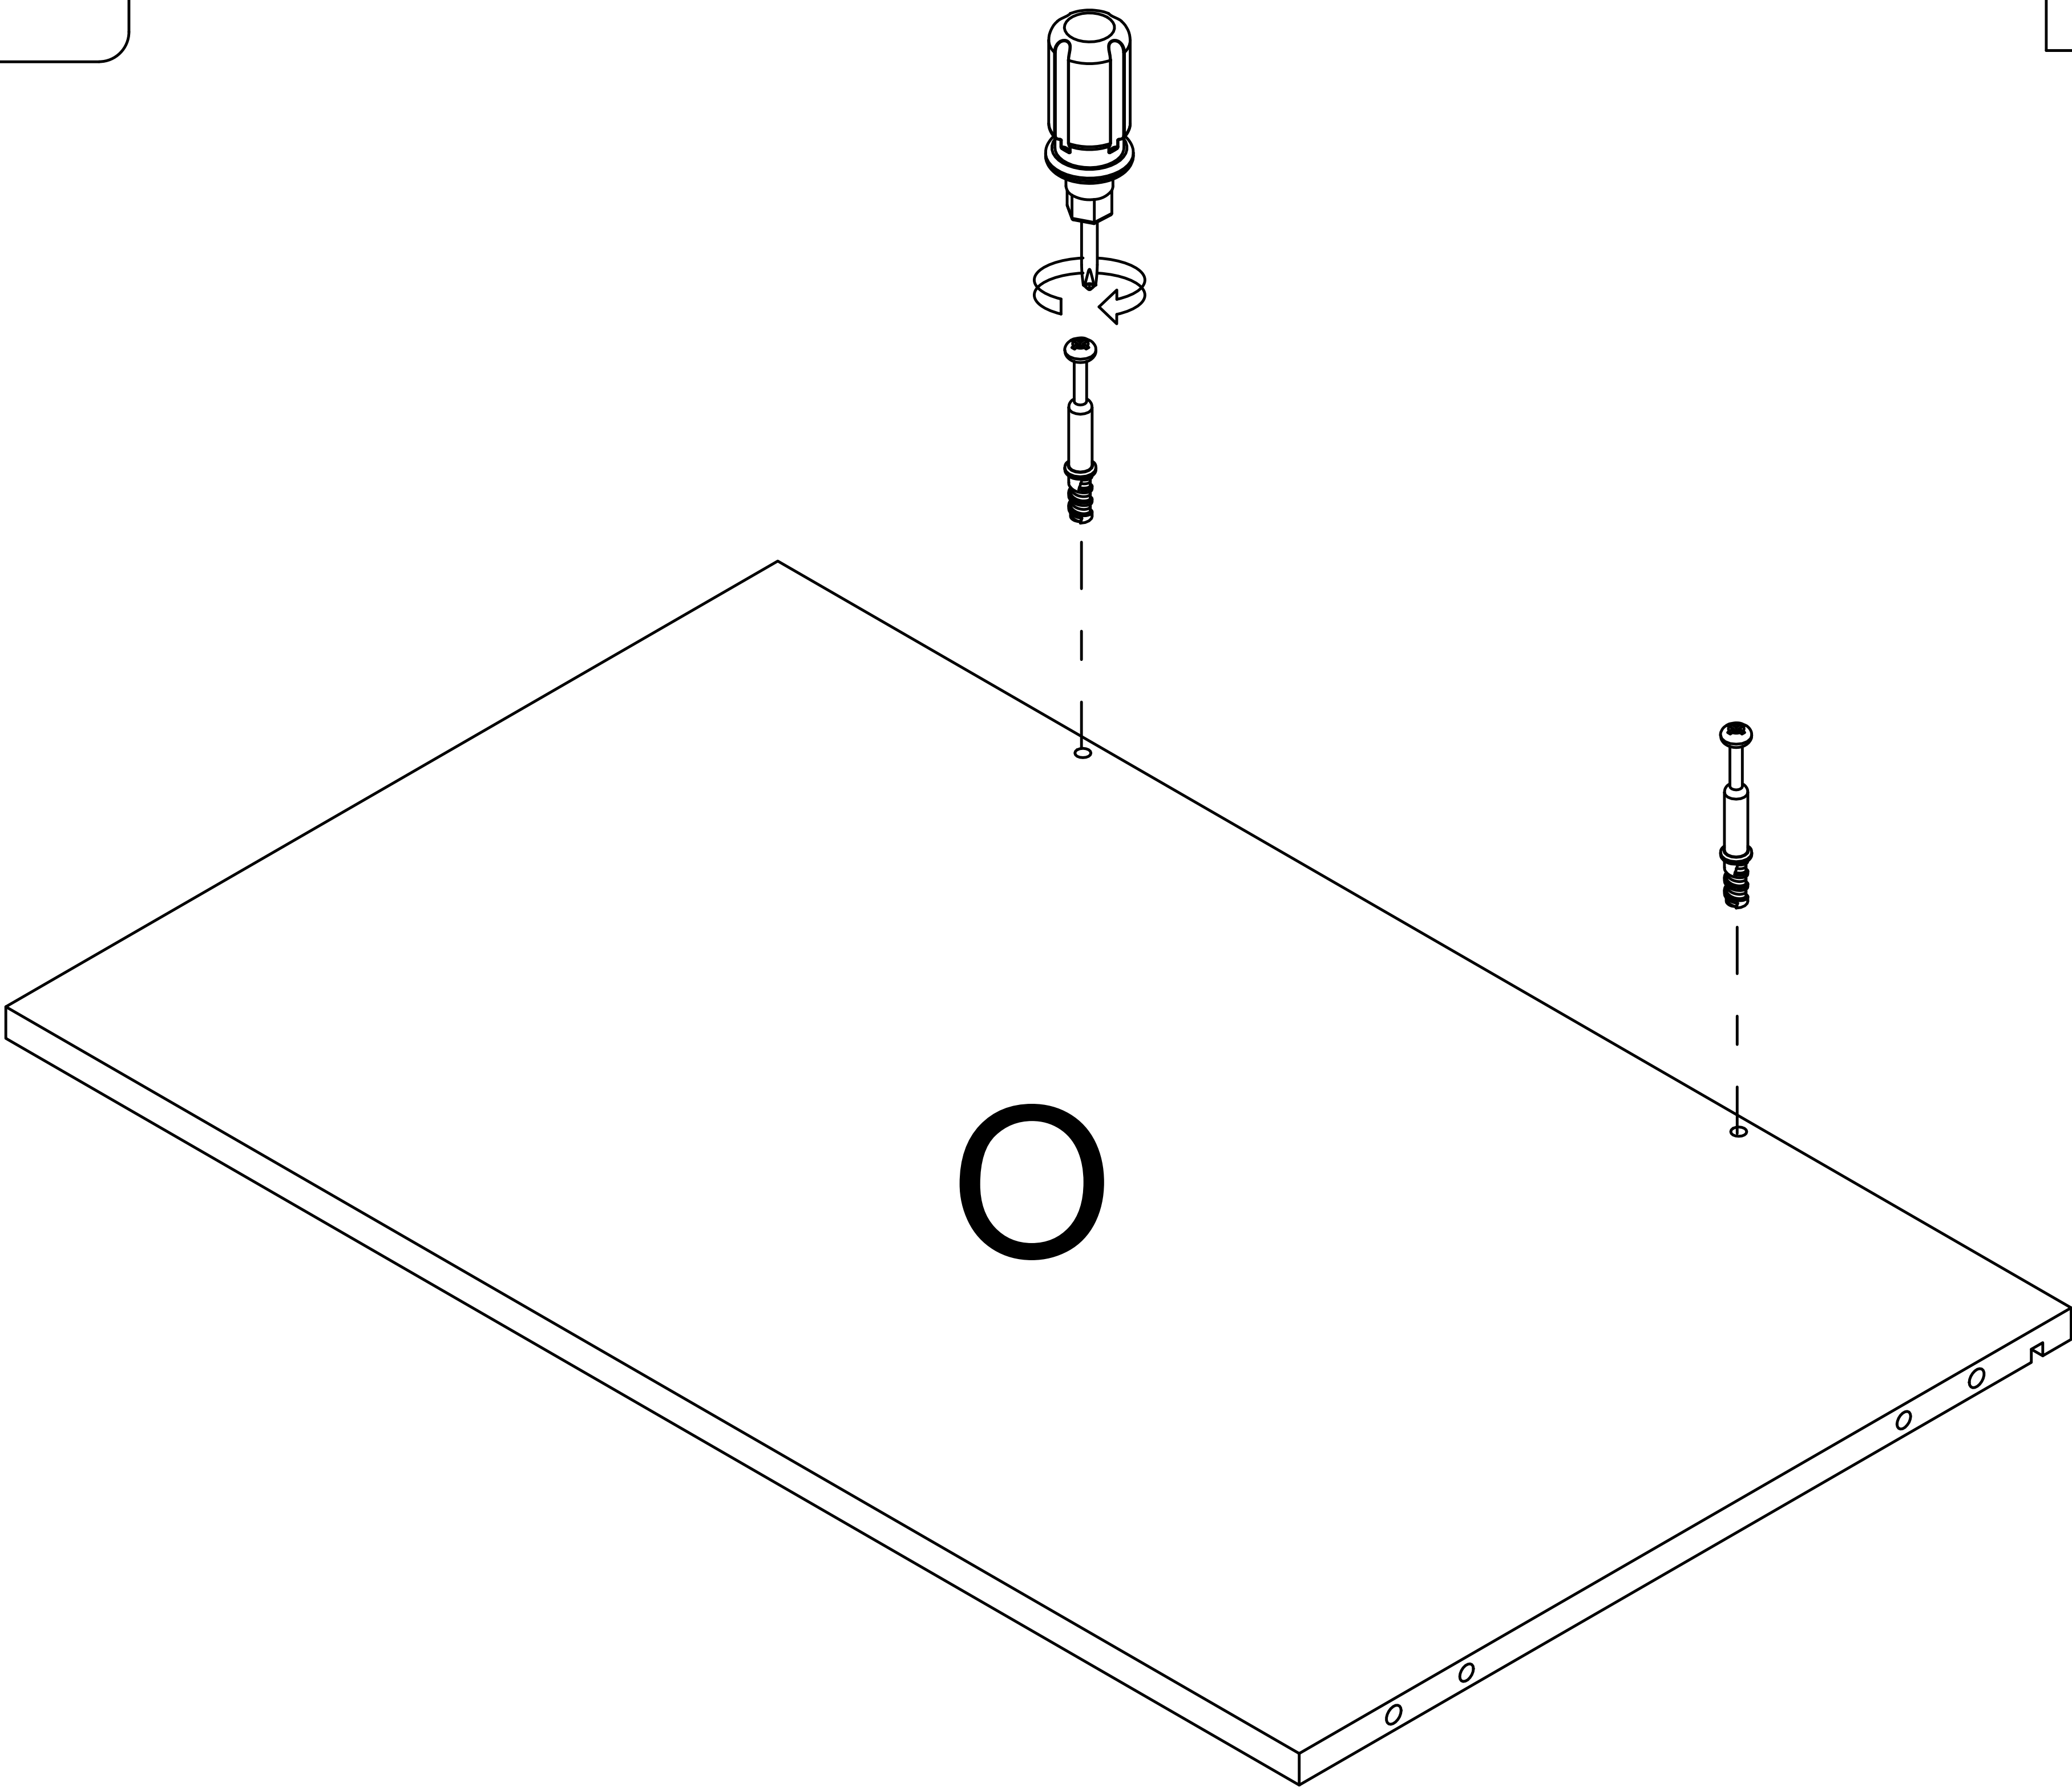

1 x2

Step 28


- 2

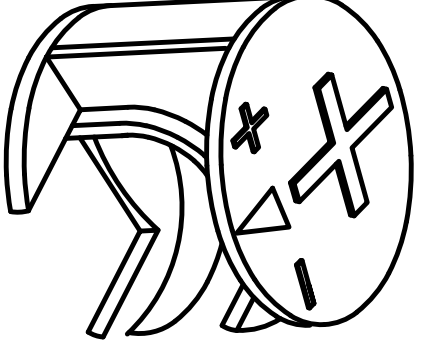

x2
- 3



x4

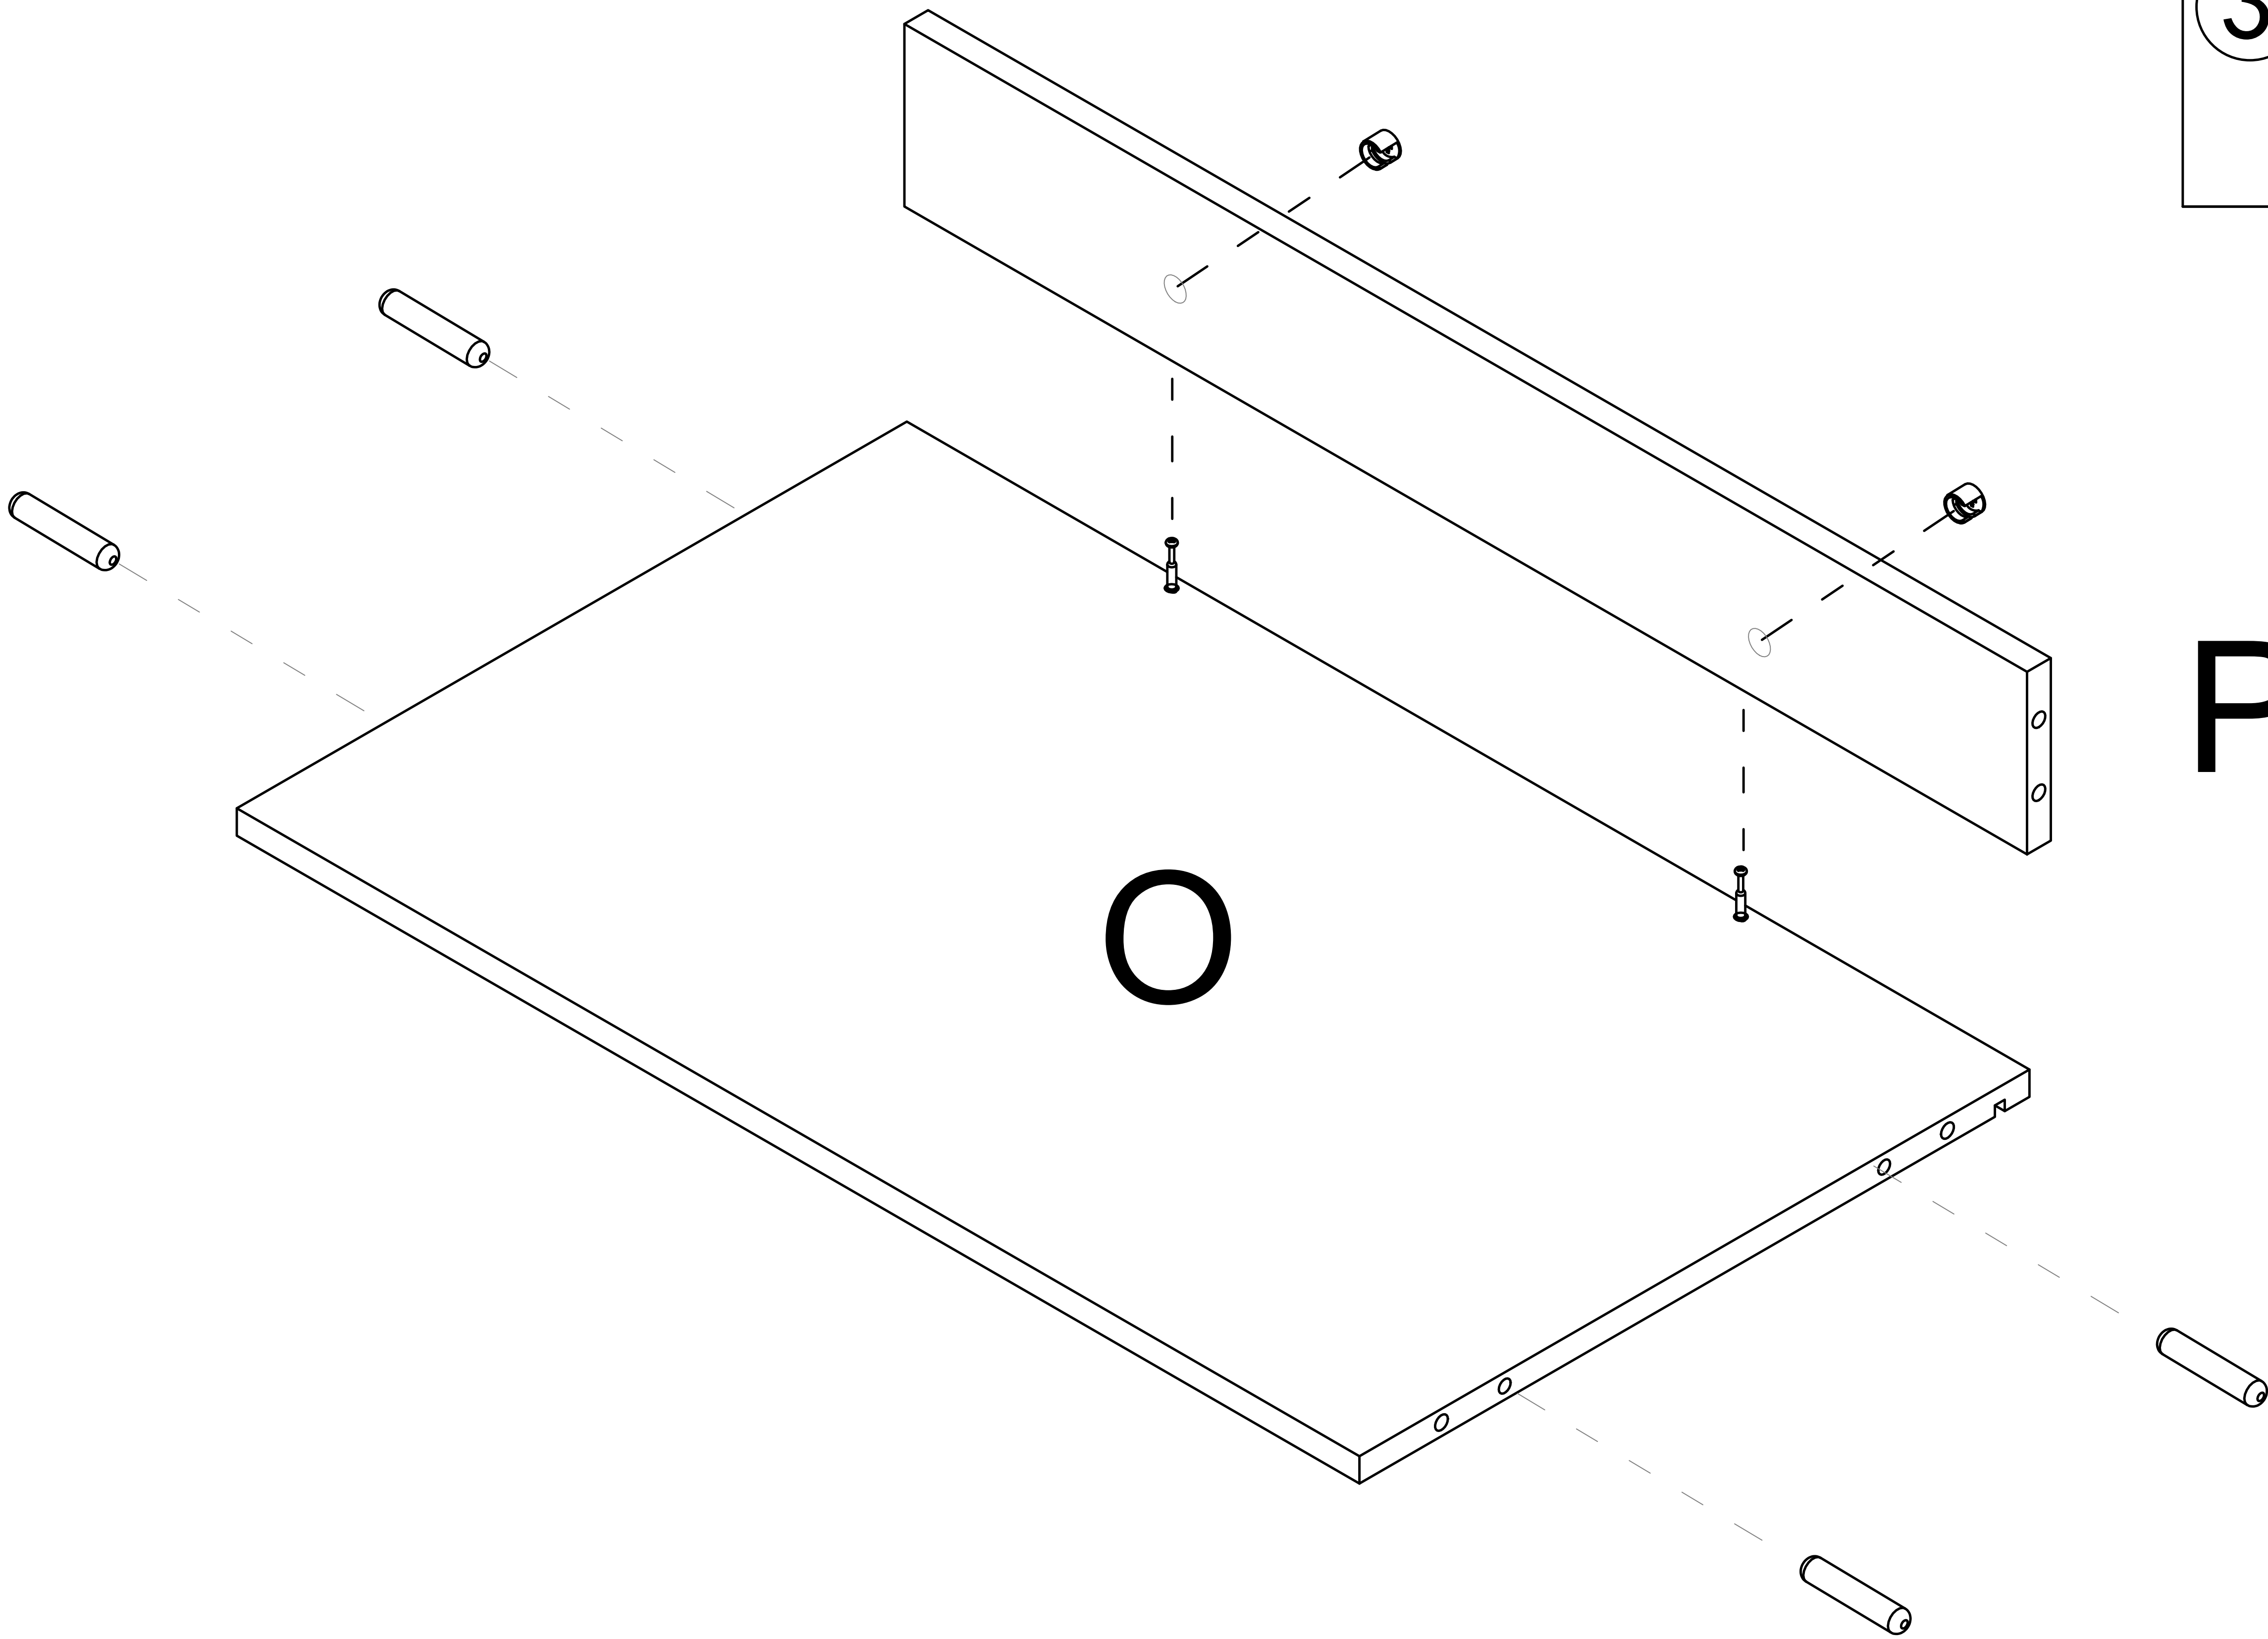


P


O

Step 29

- 1

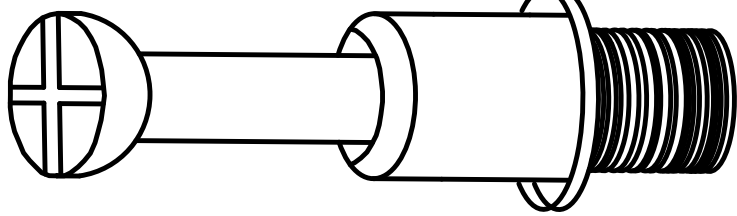


x8

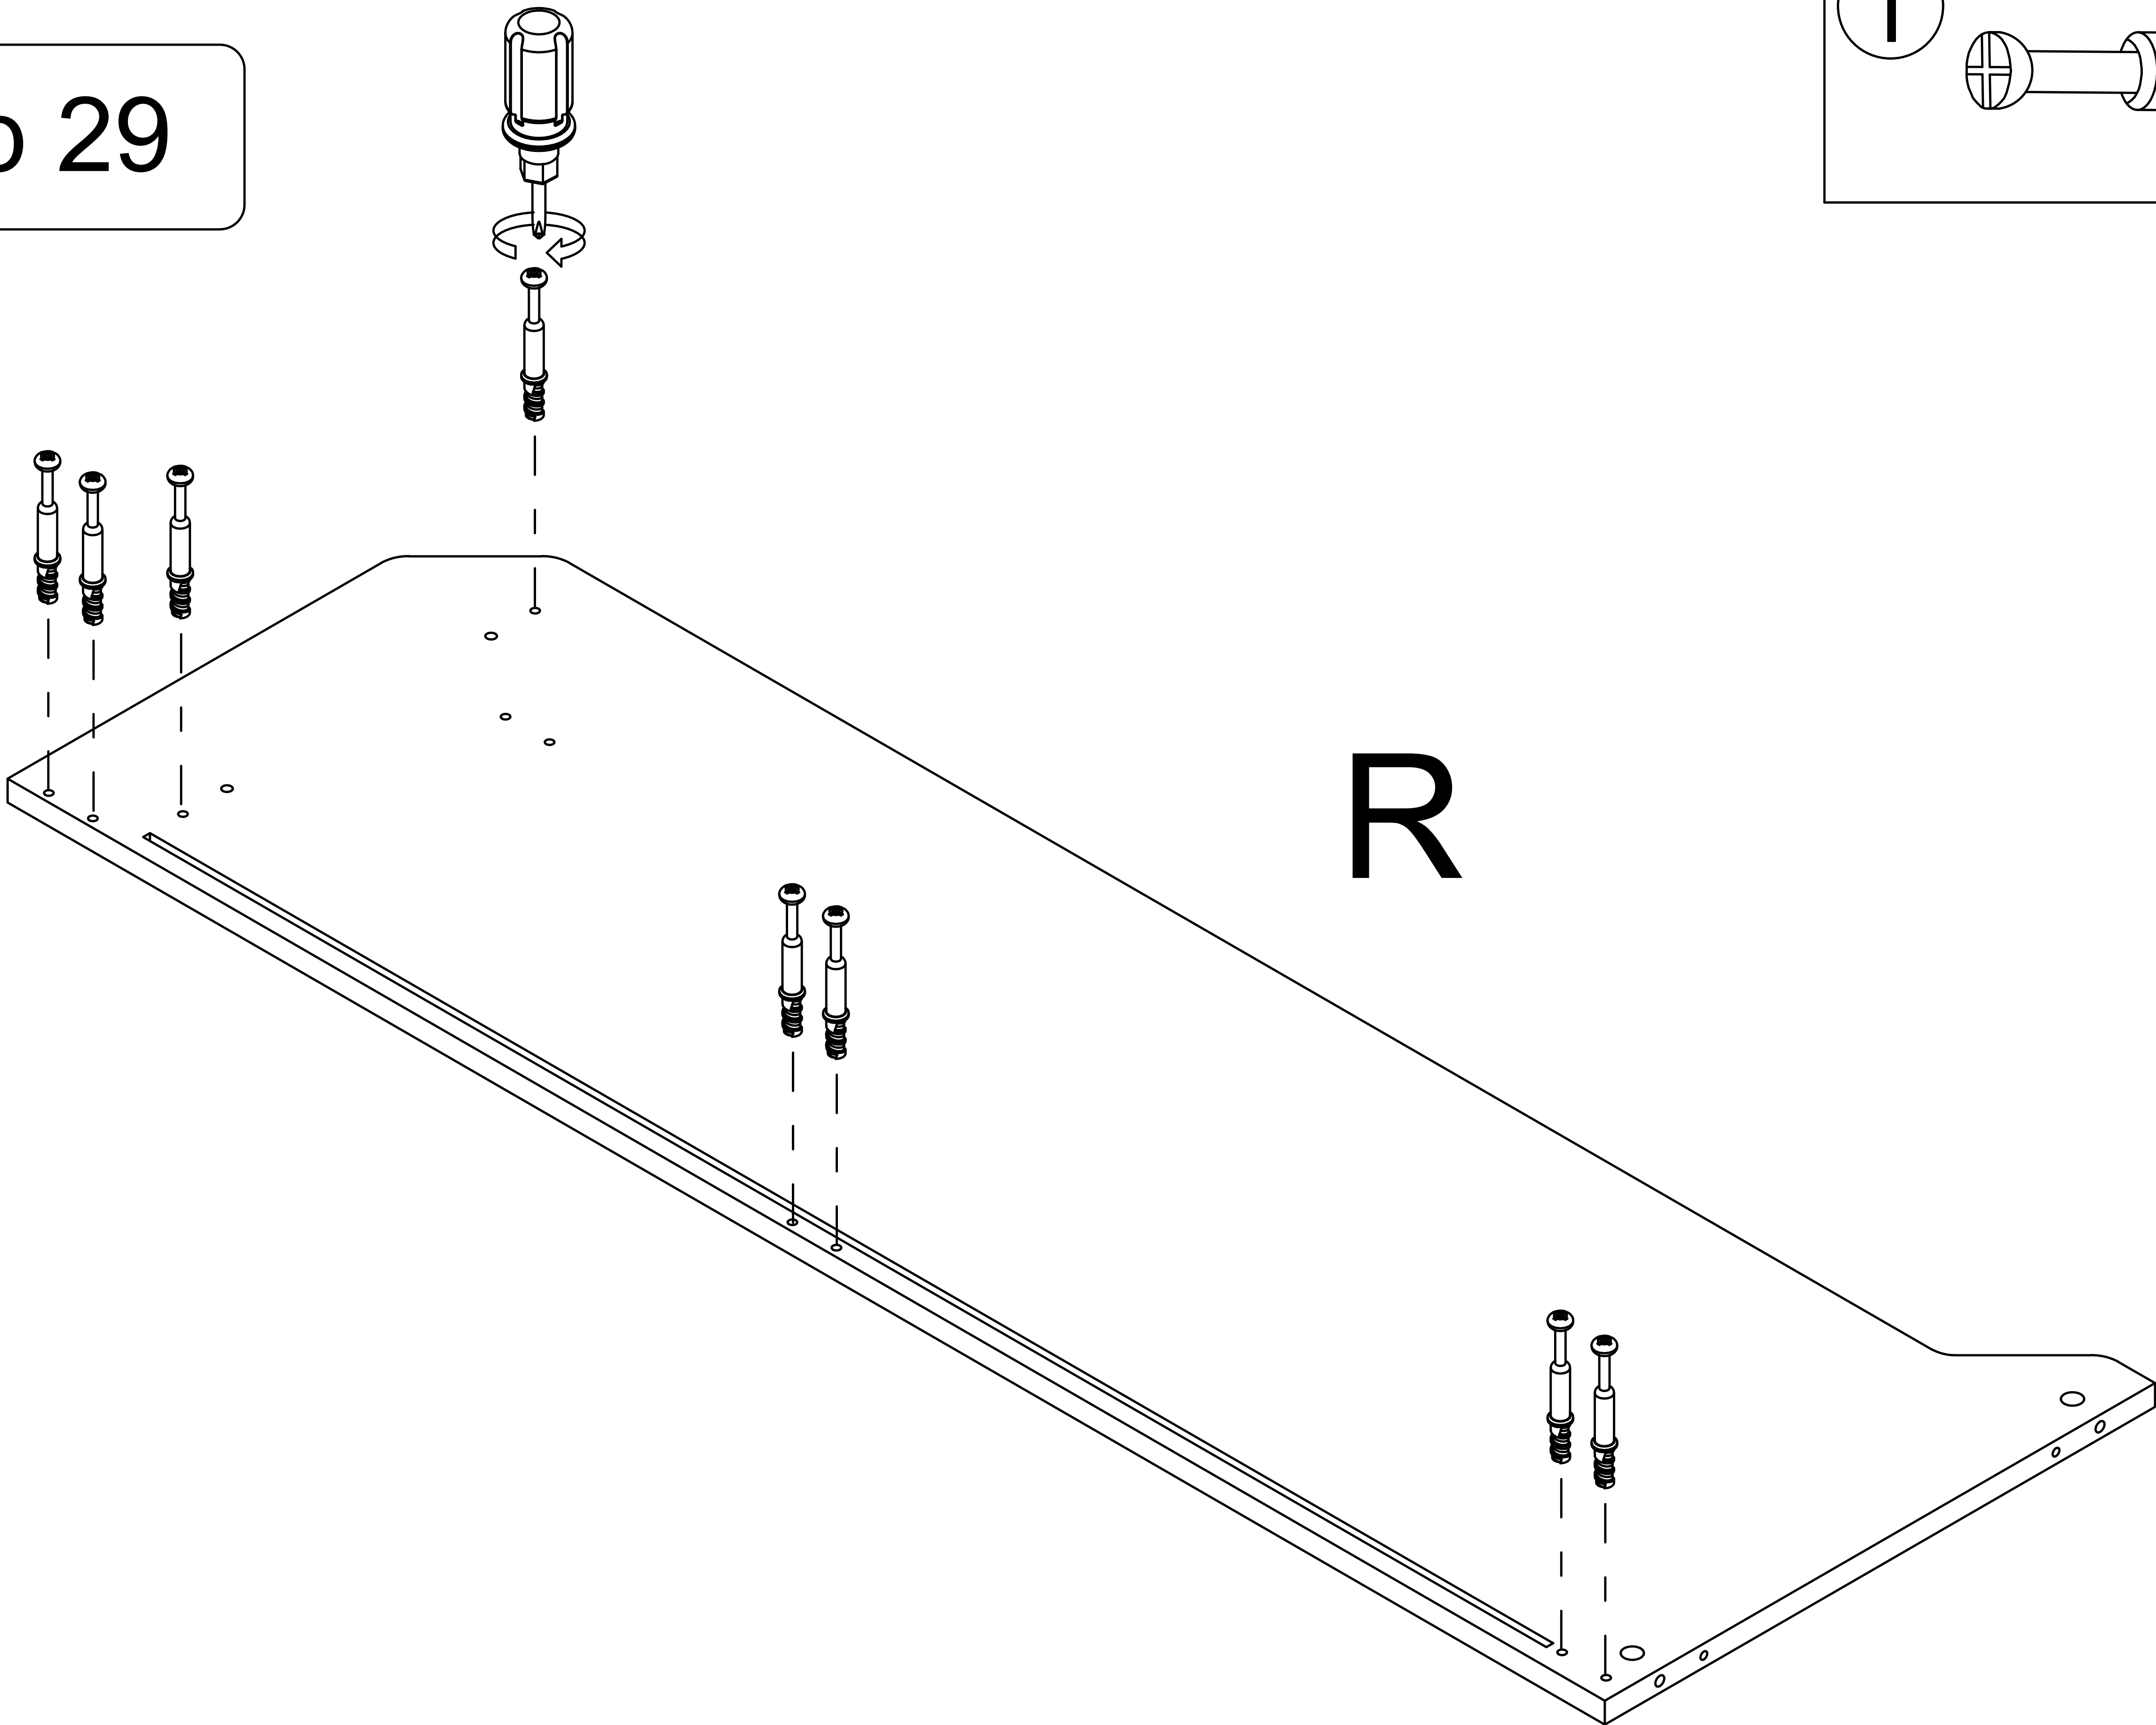



R

Step 30

7

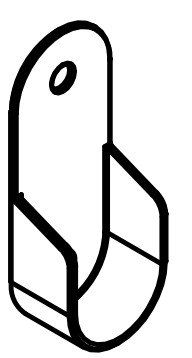x1

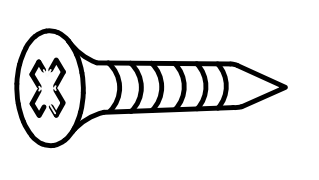
x2

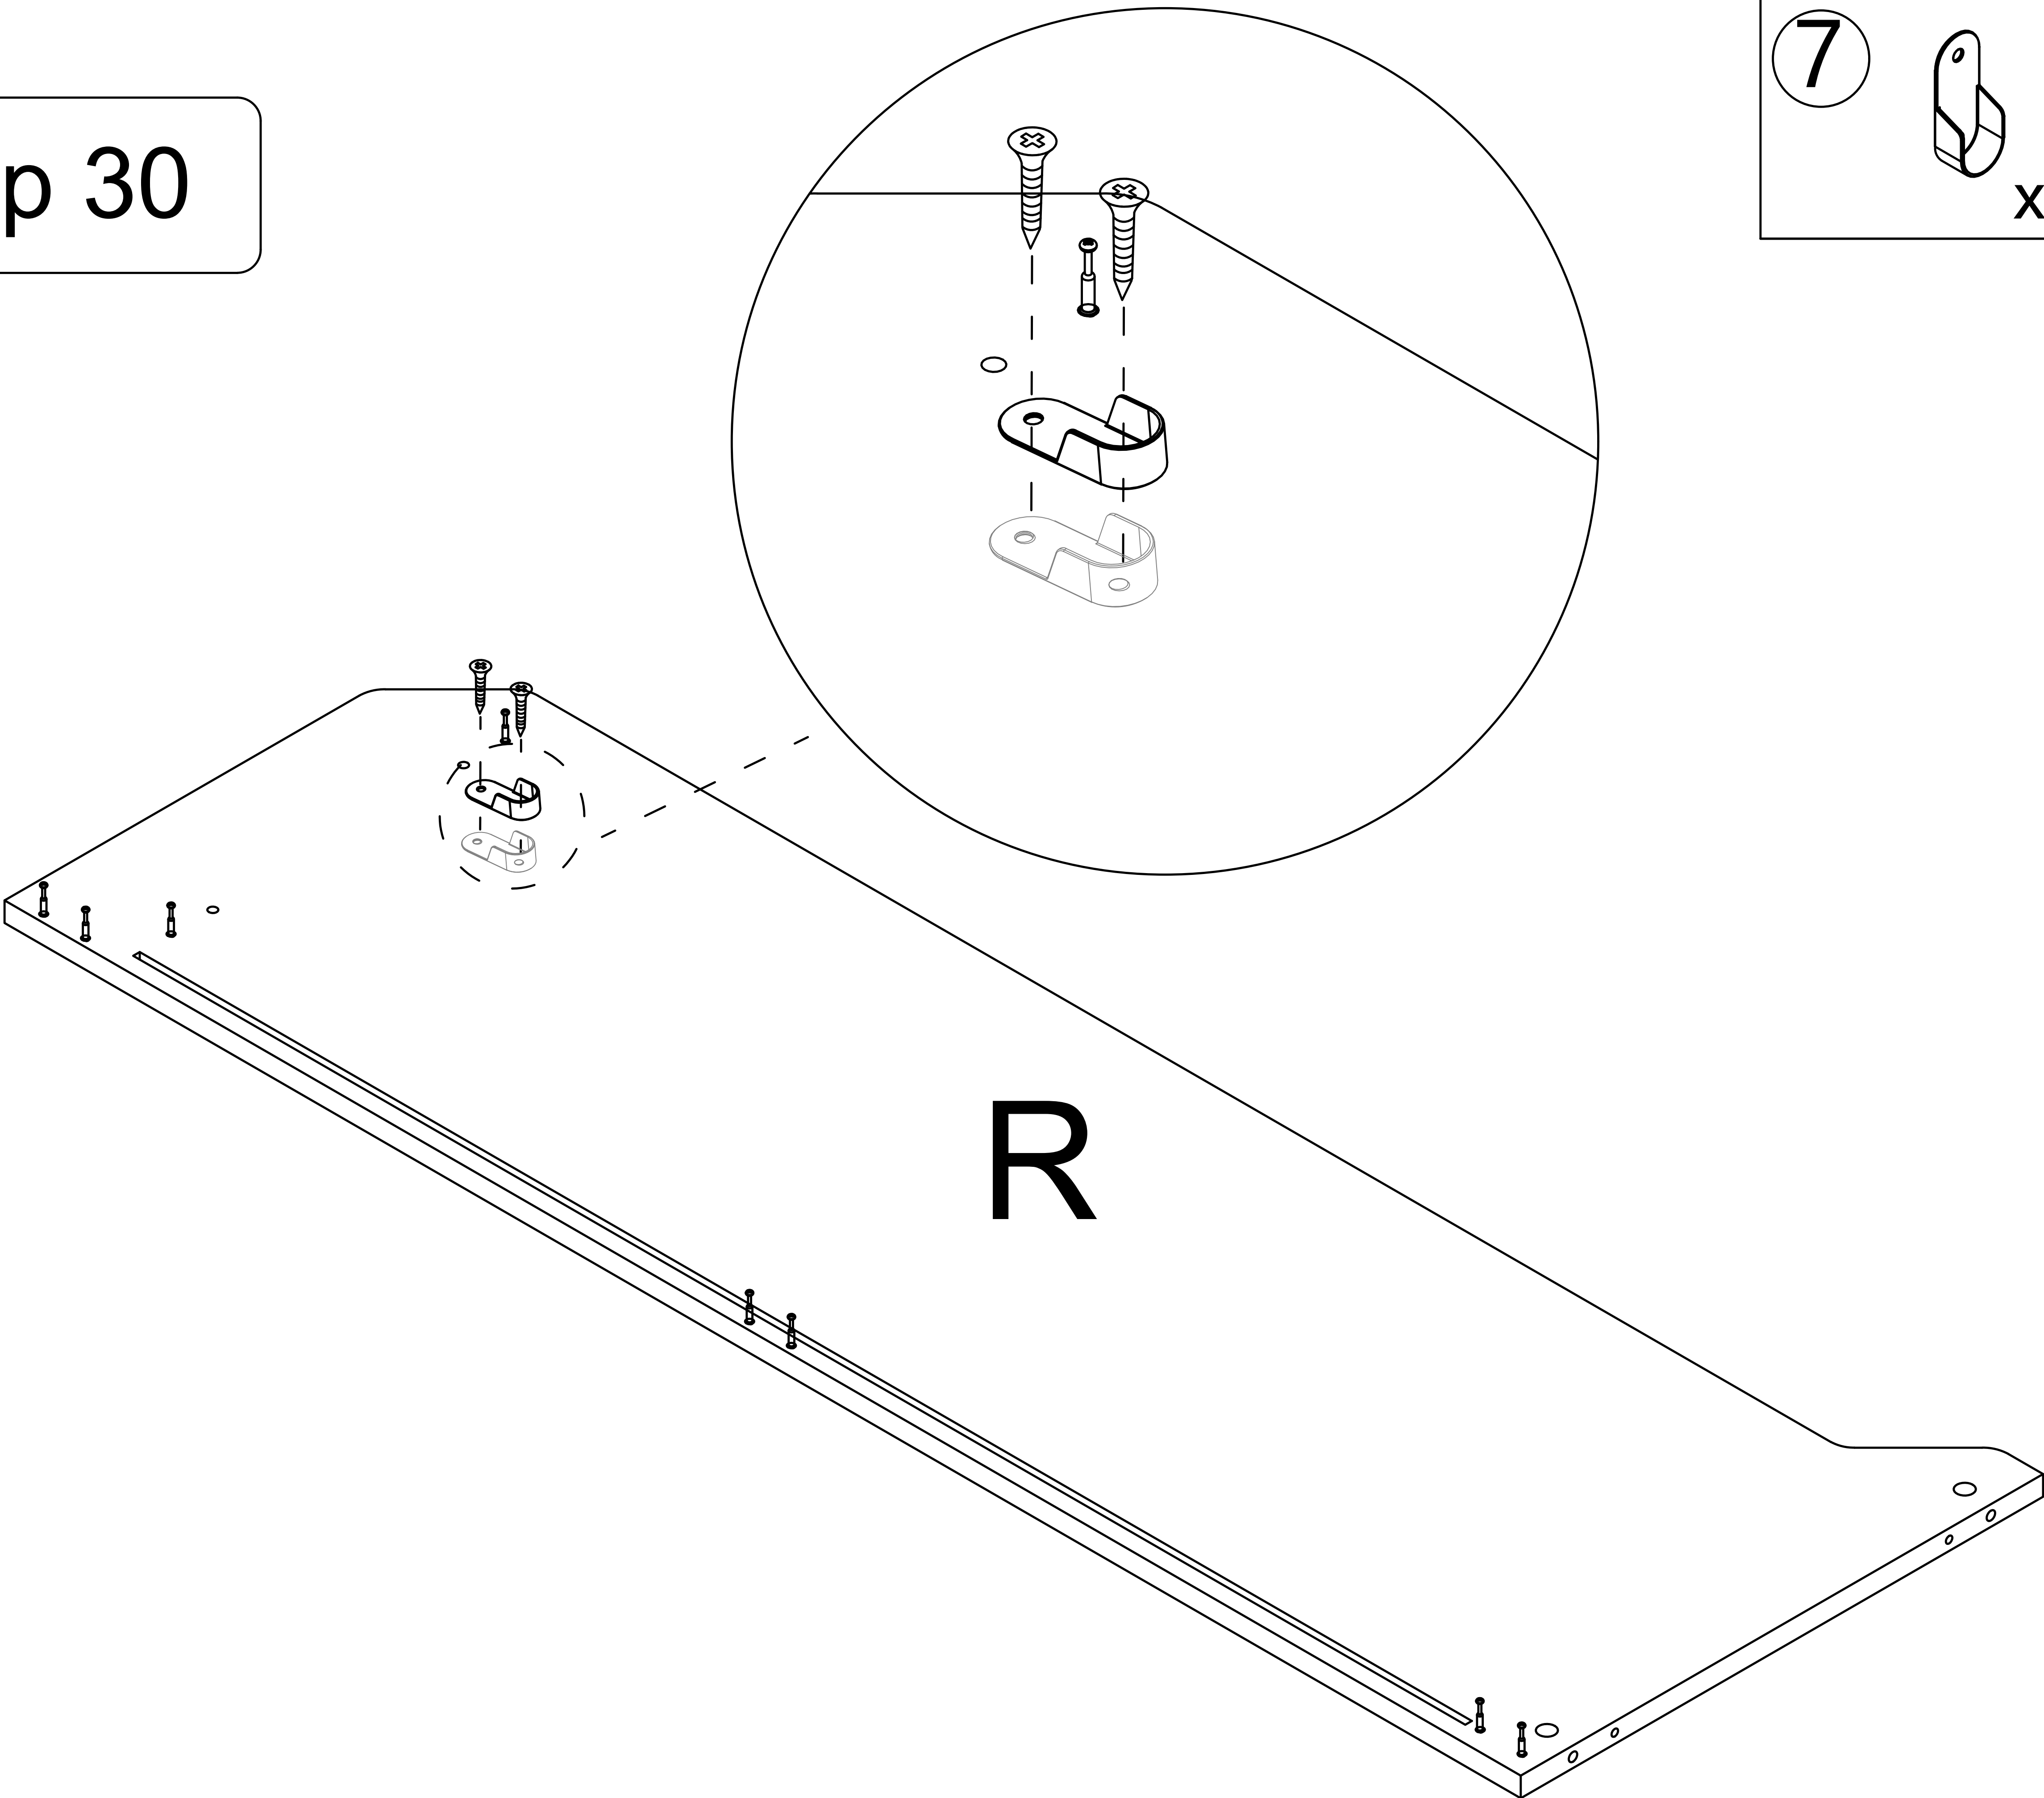


R

Step 31

2

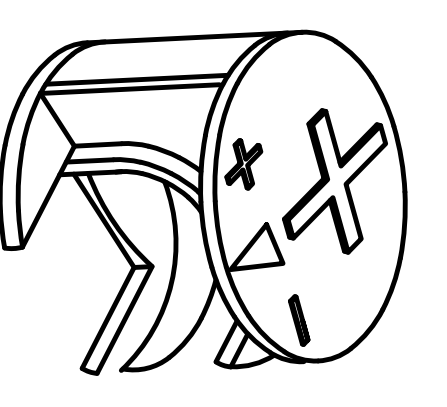x4

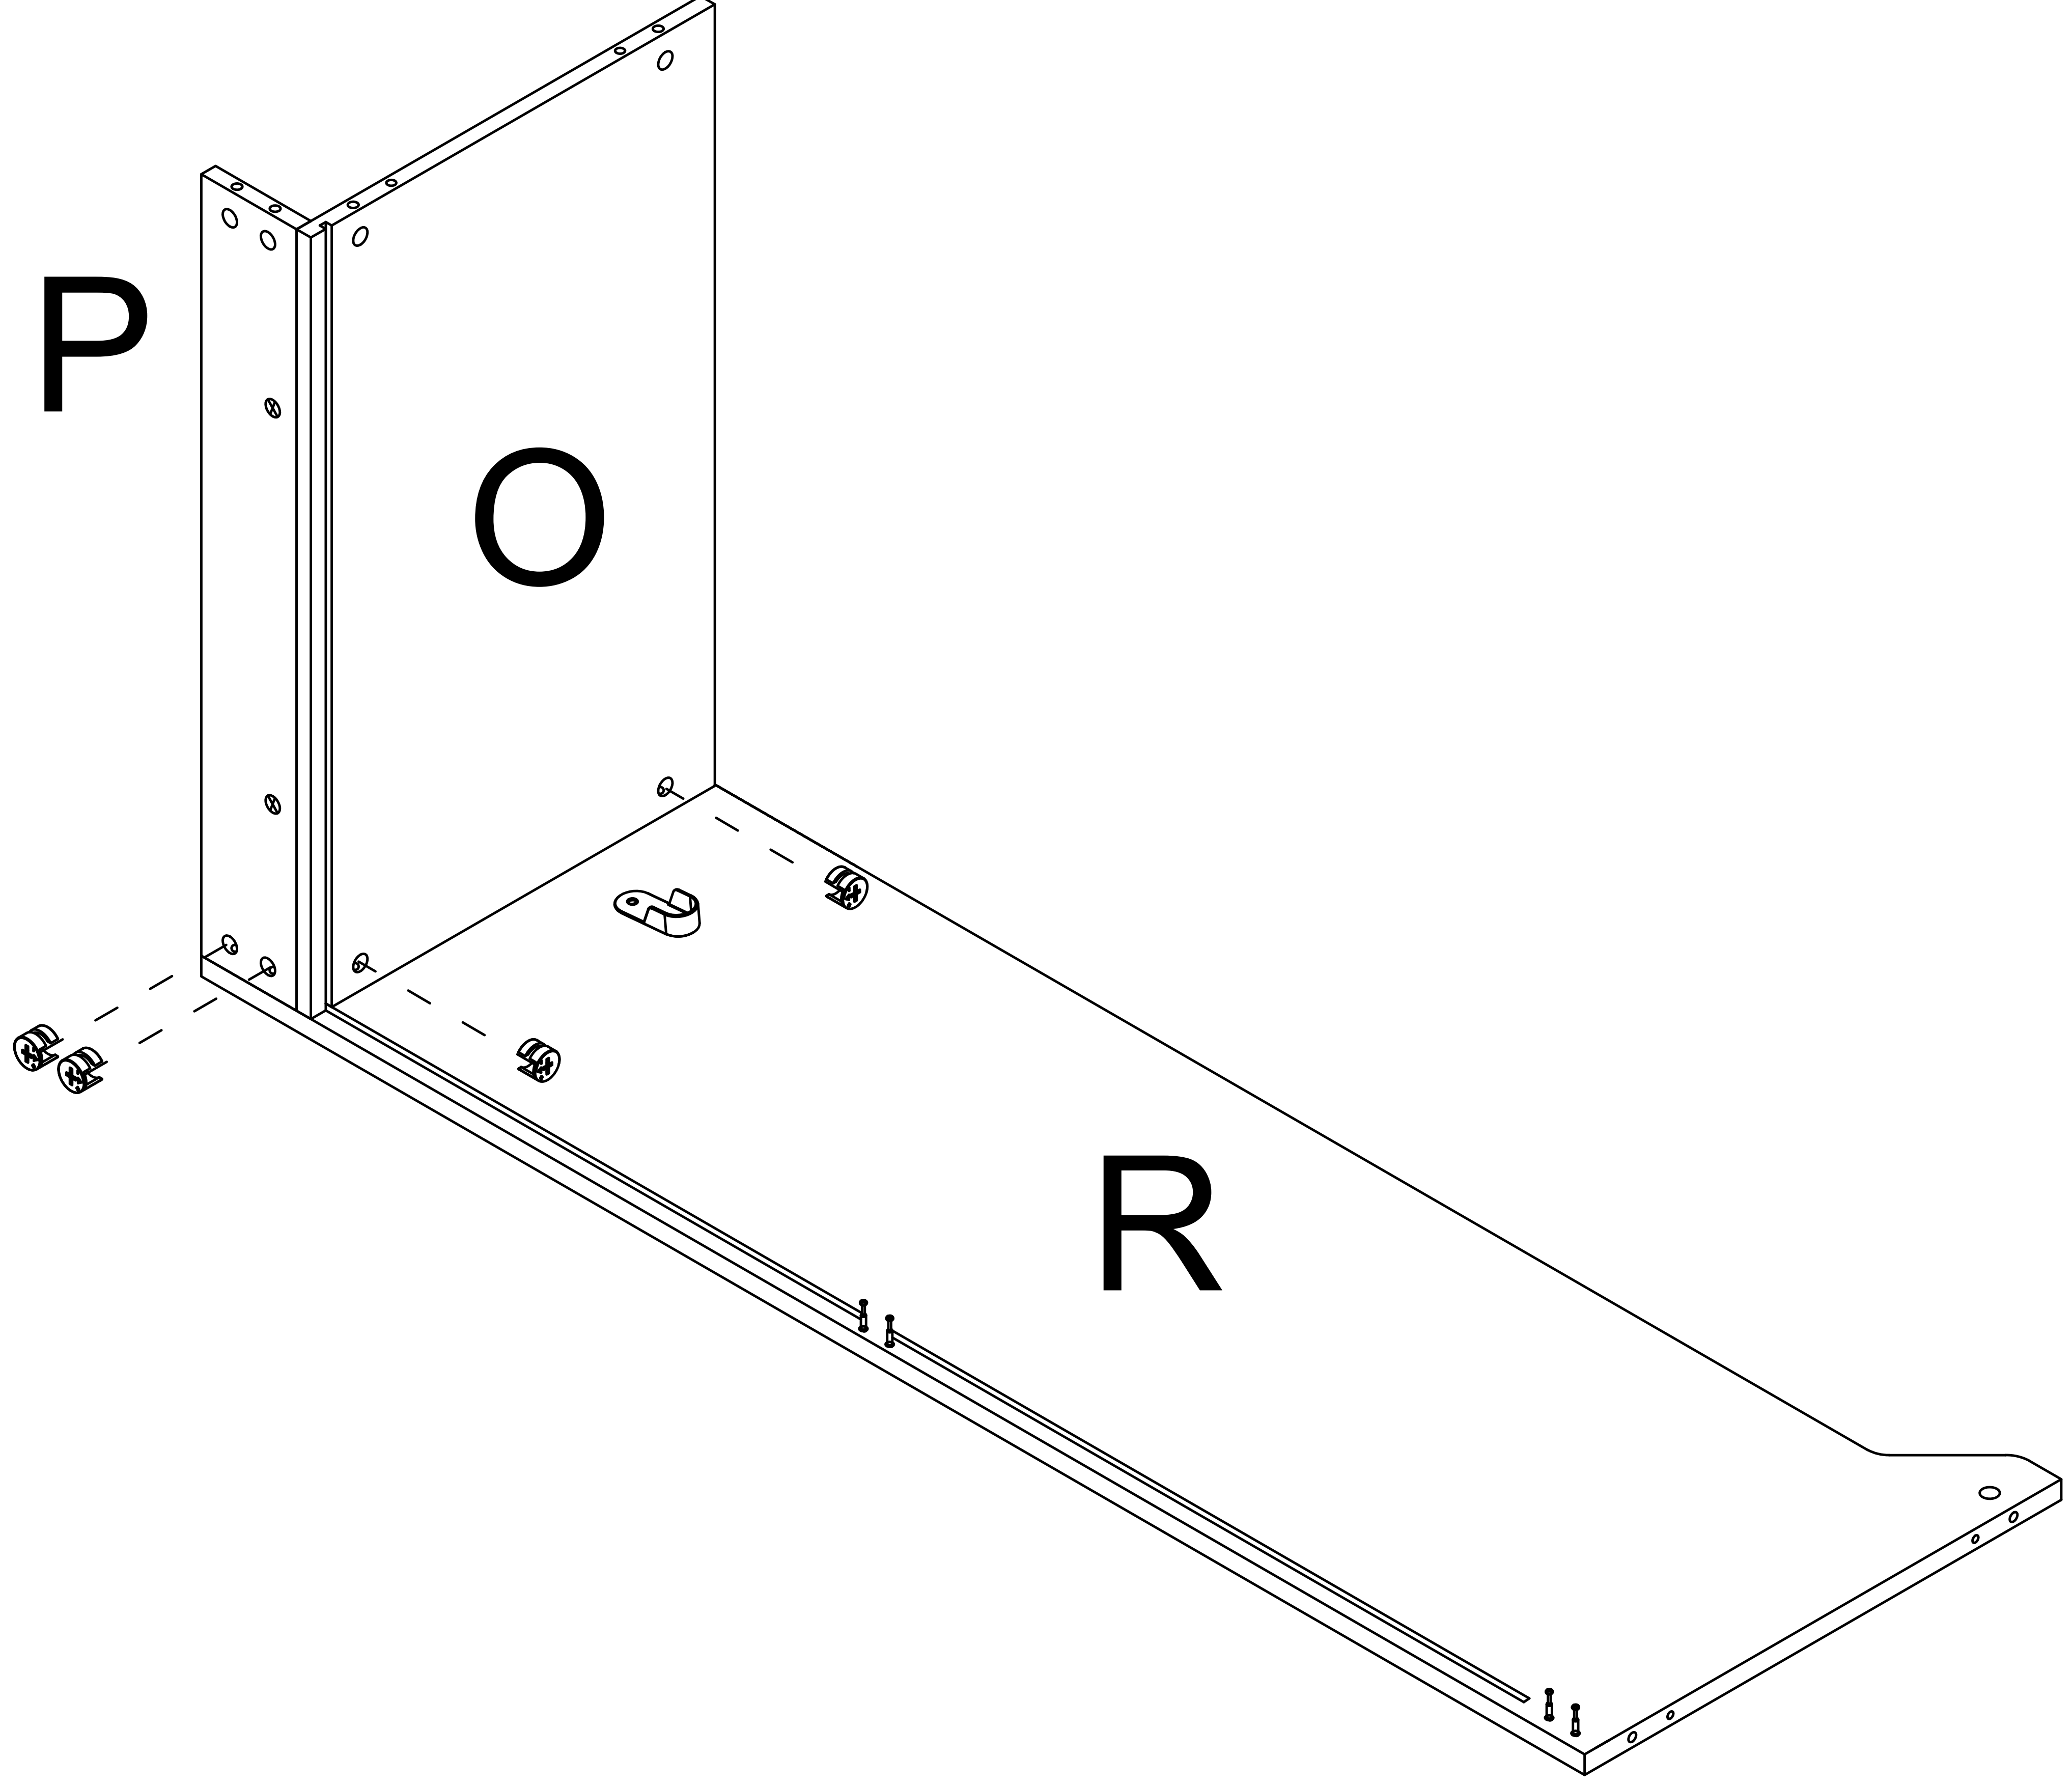


P

O


R

Step 32


2

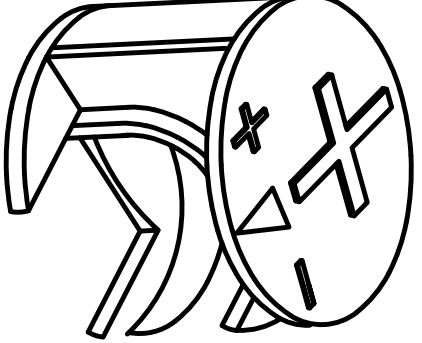


x4

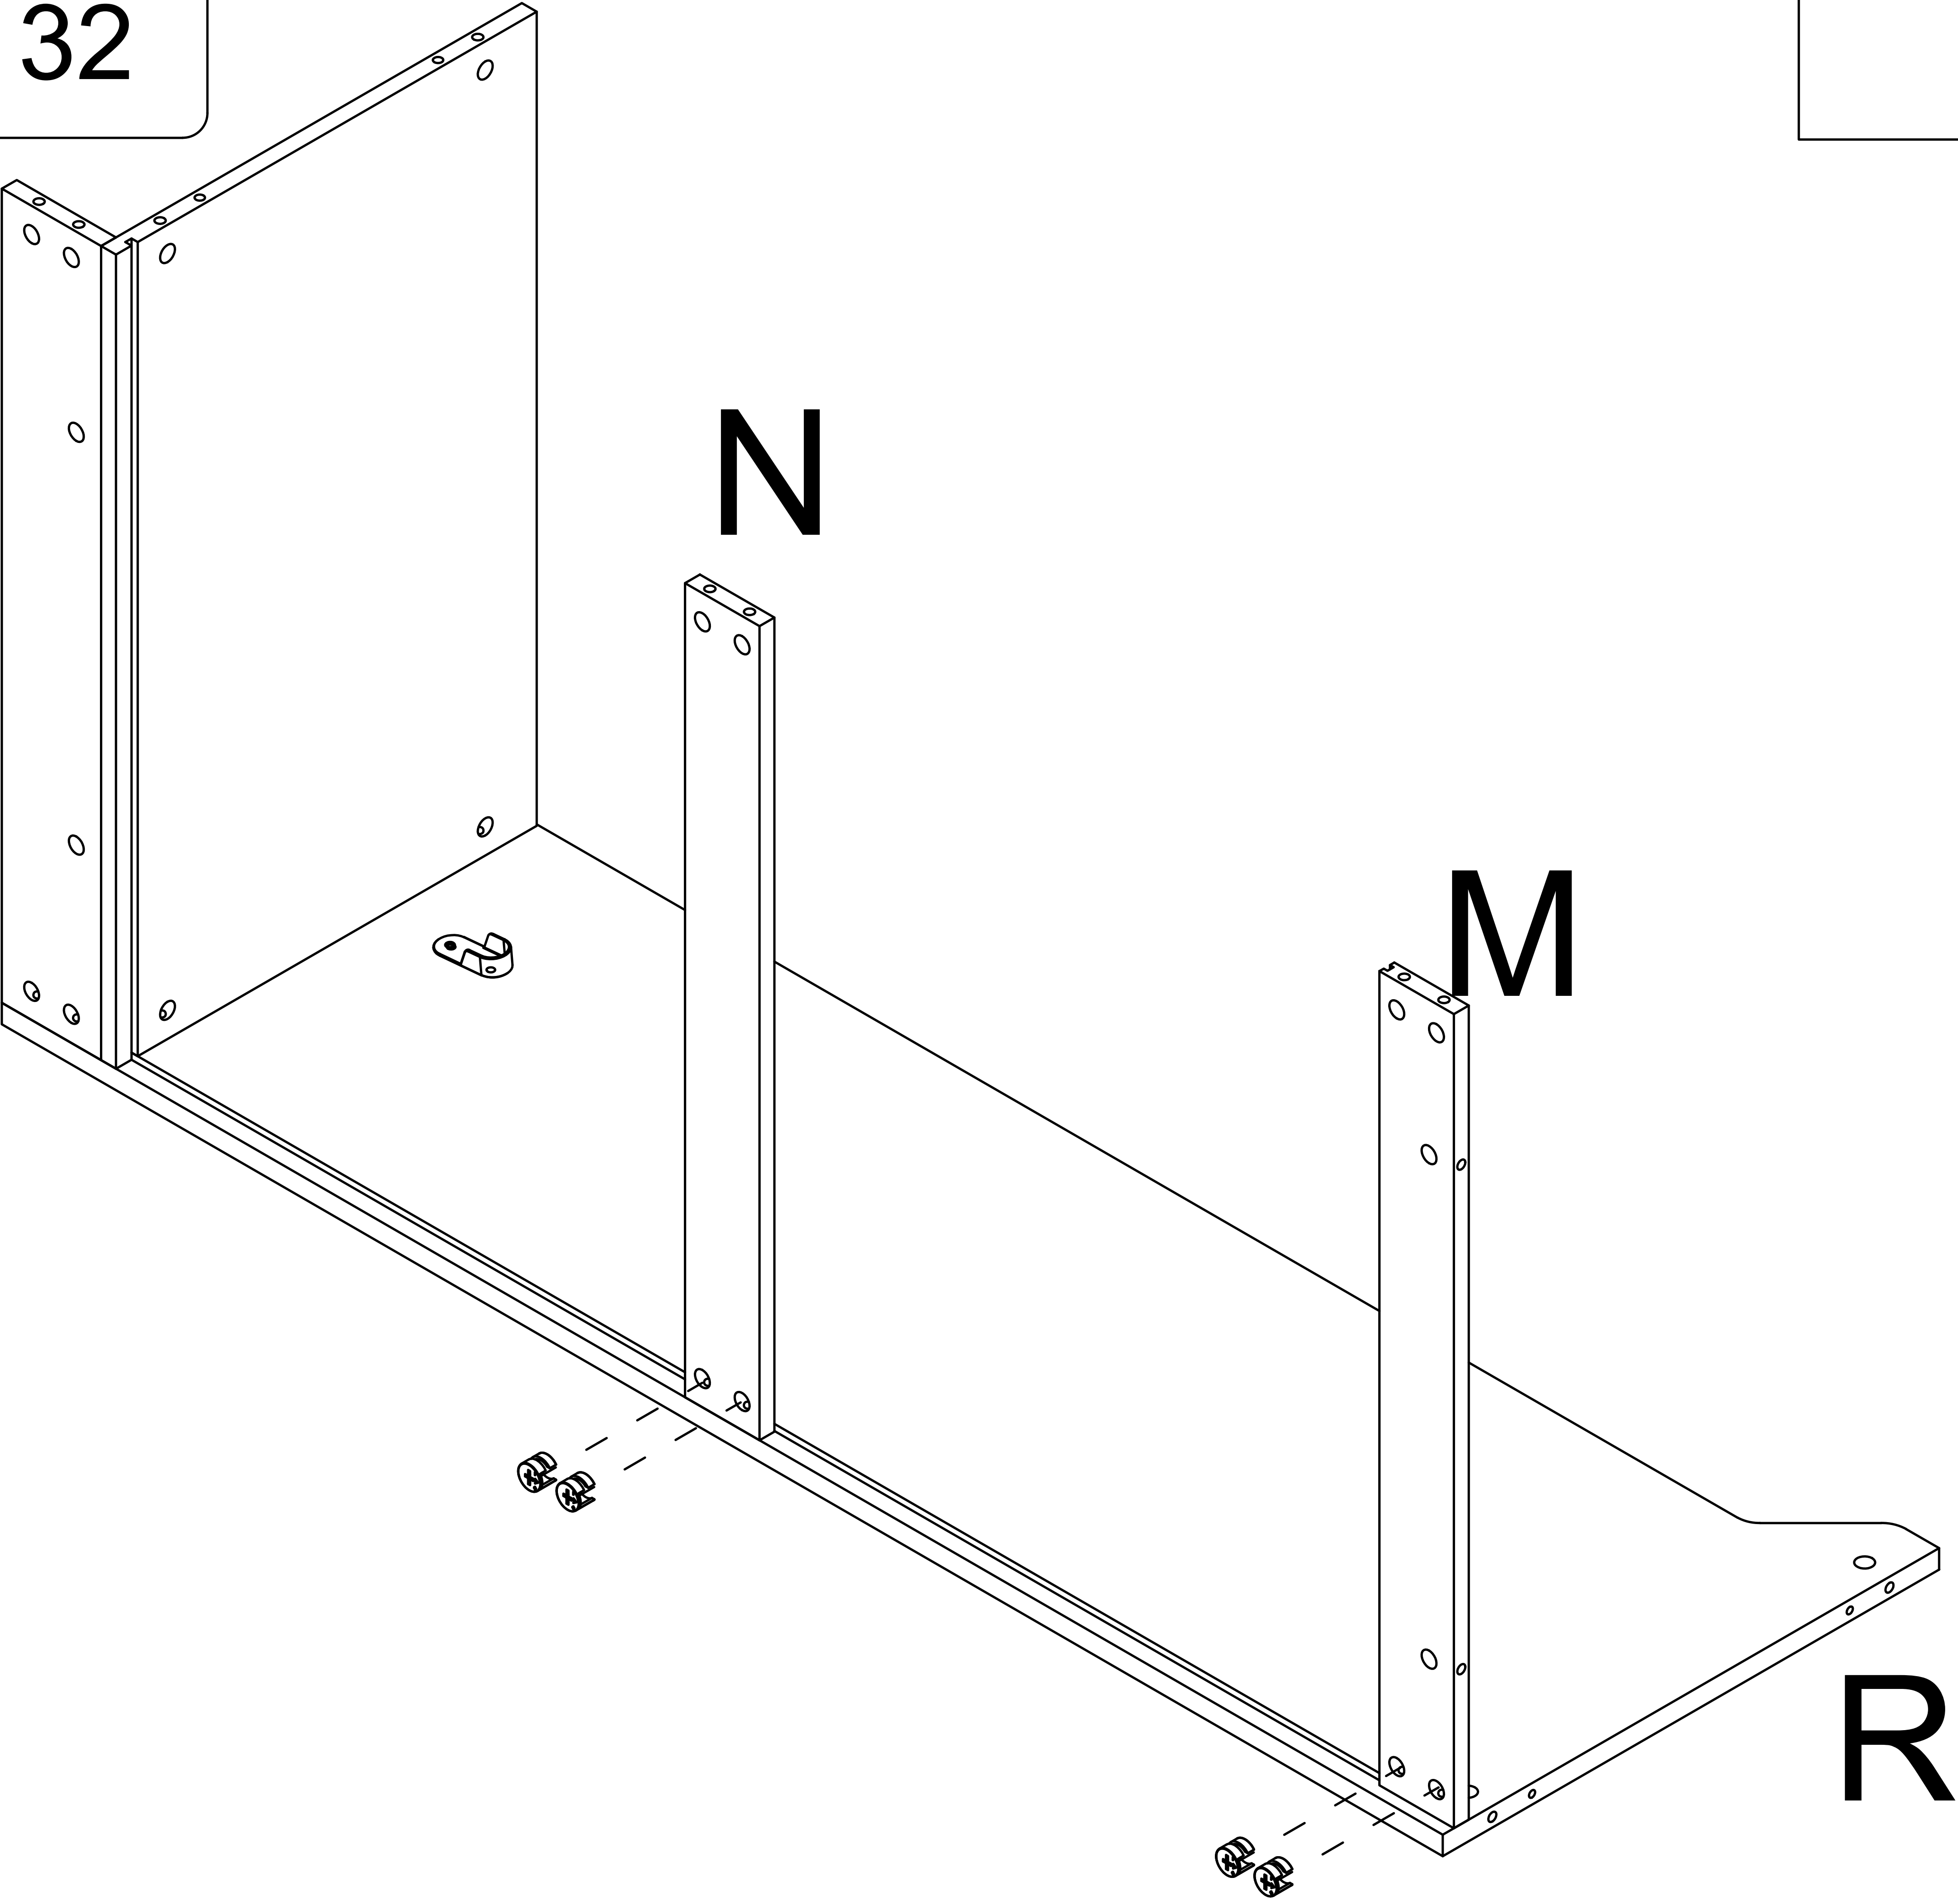


Step 33

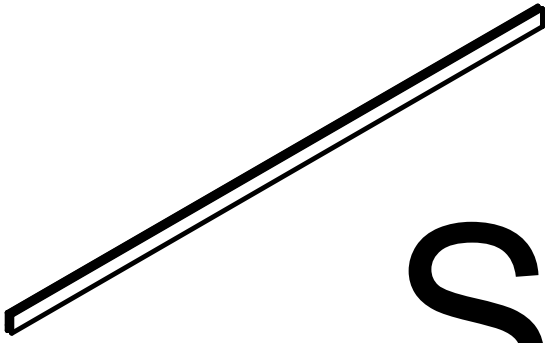


S x2

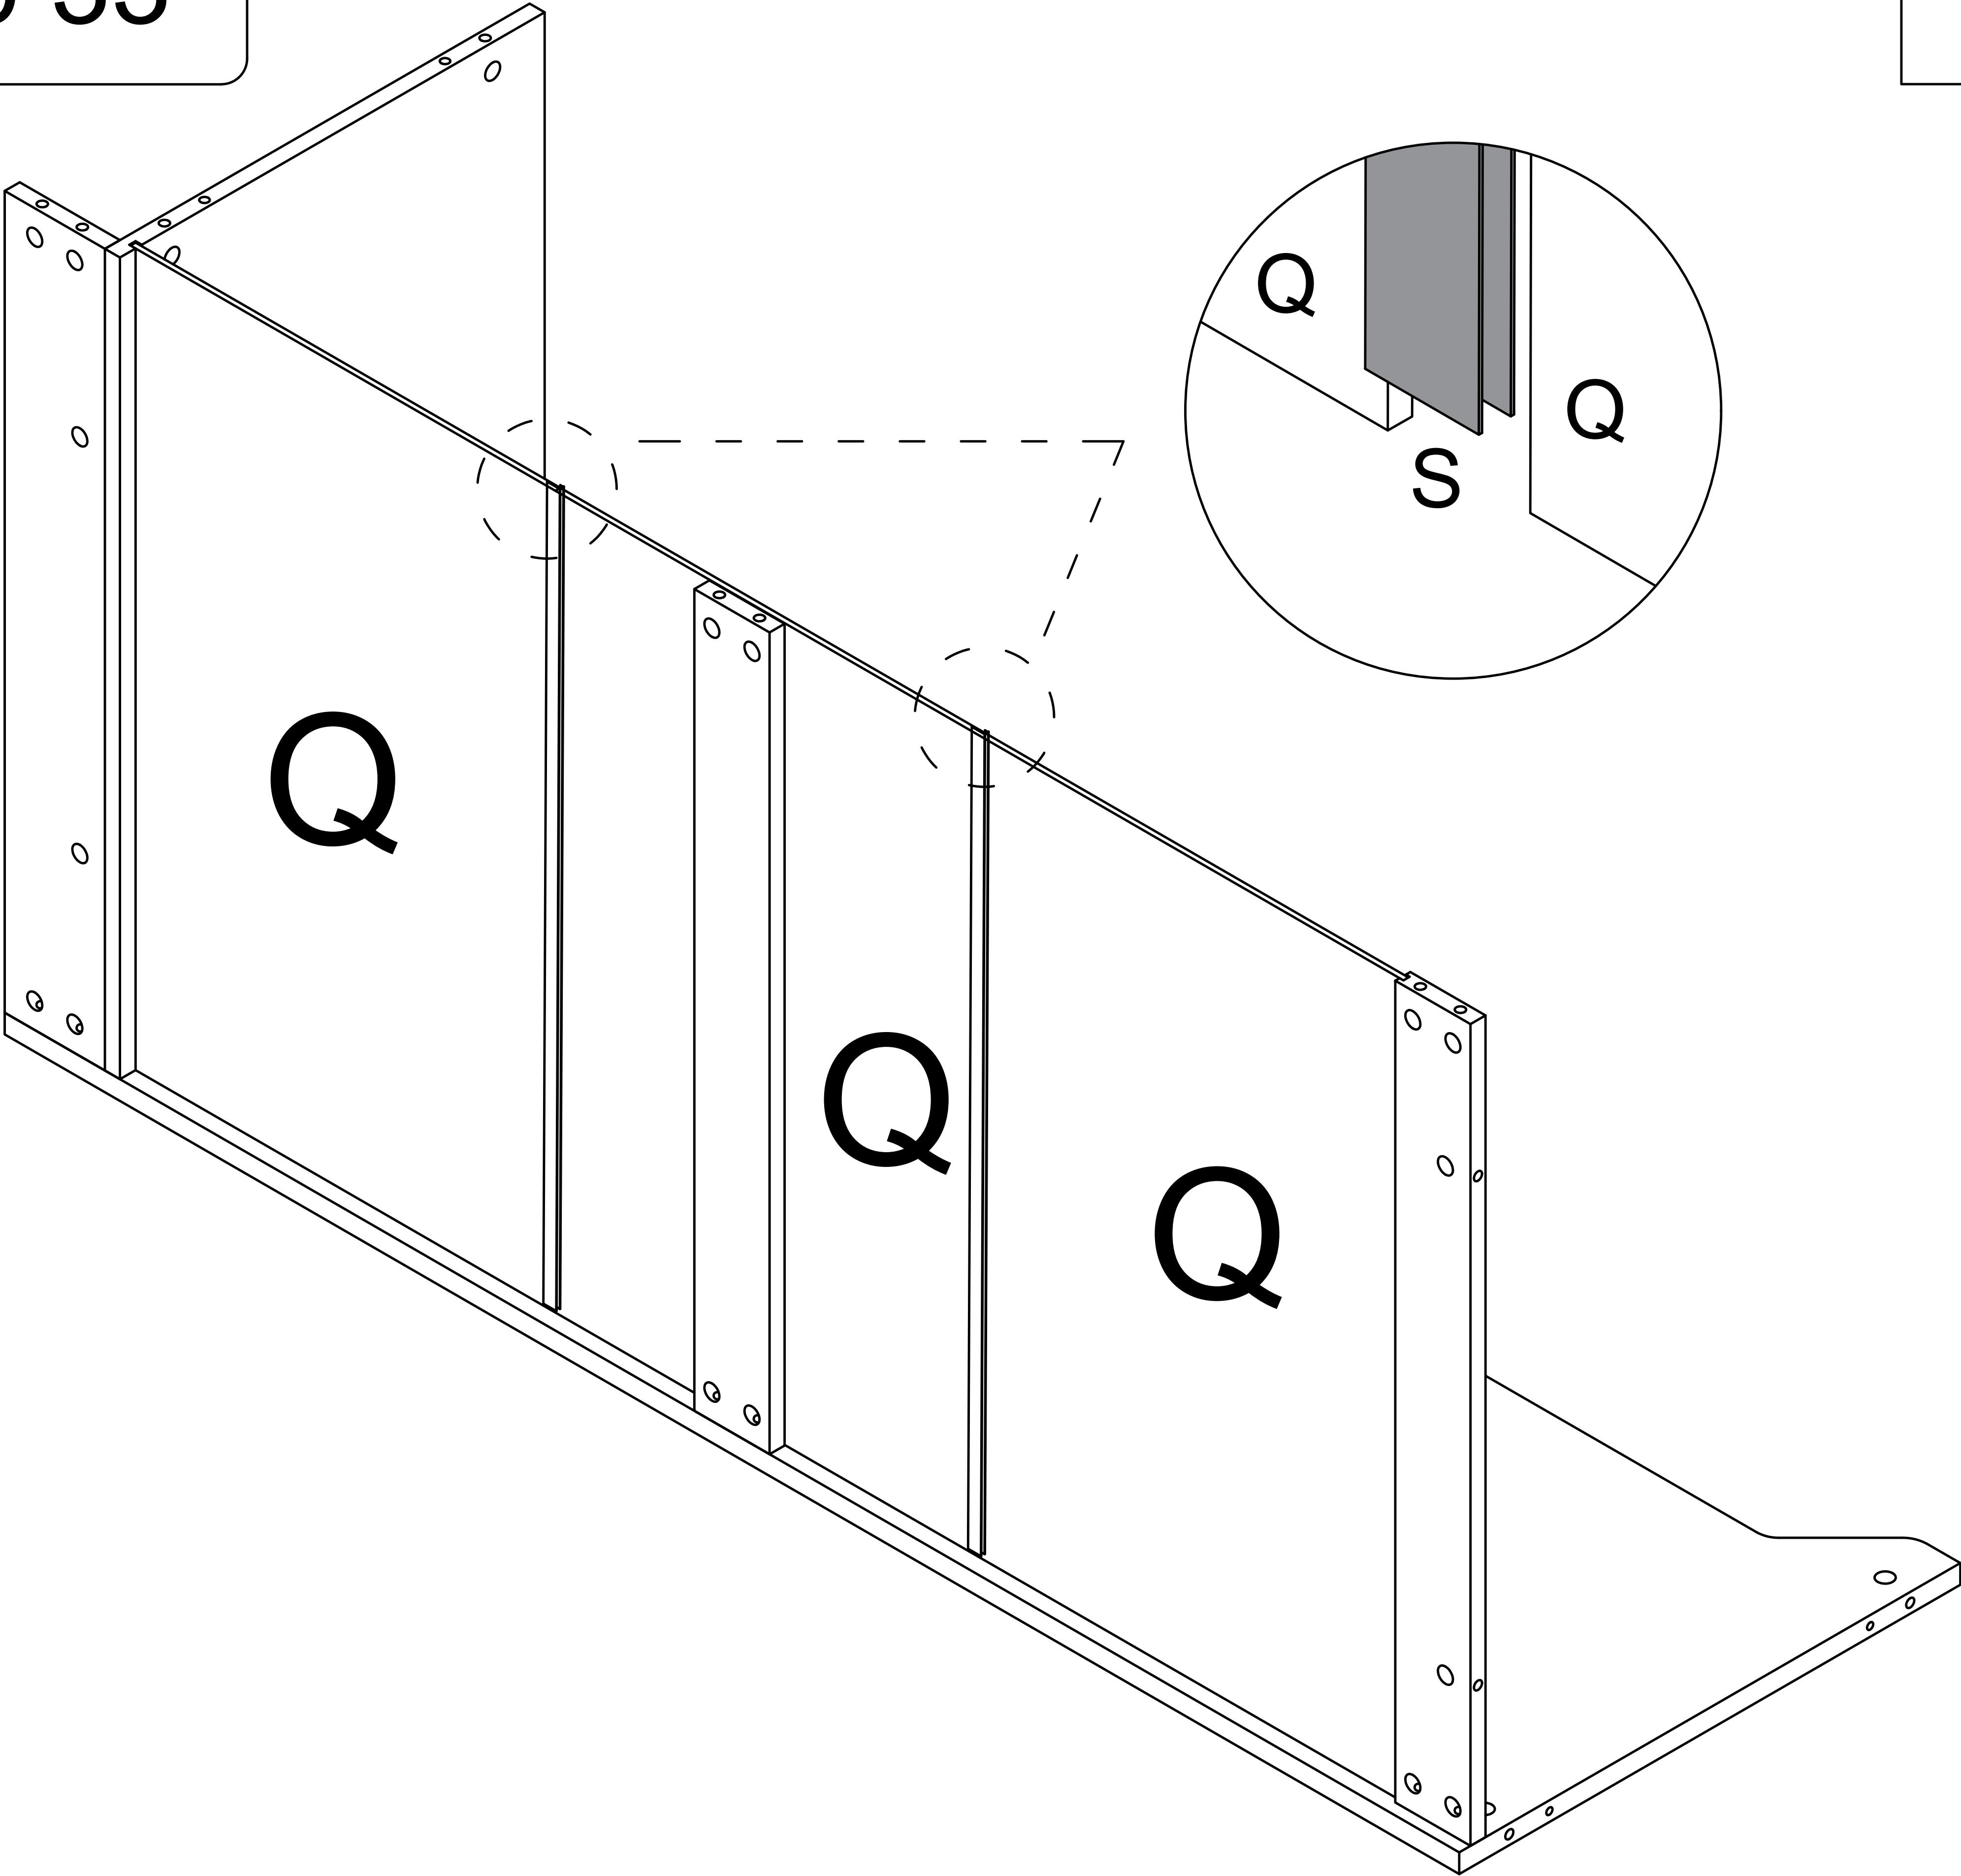

## Step 34

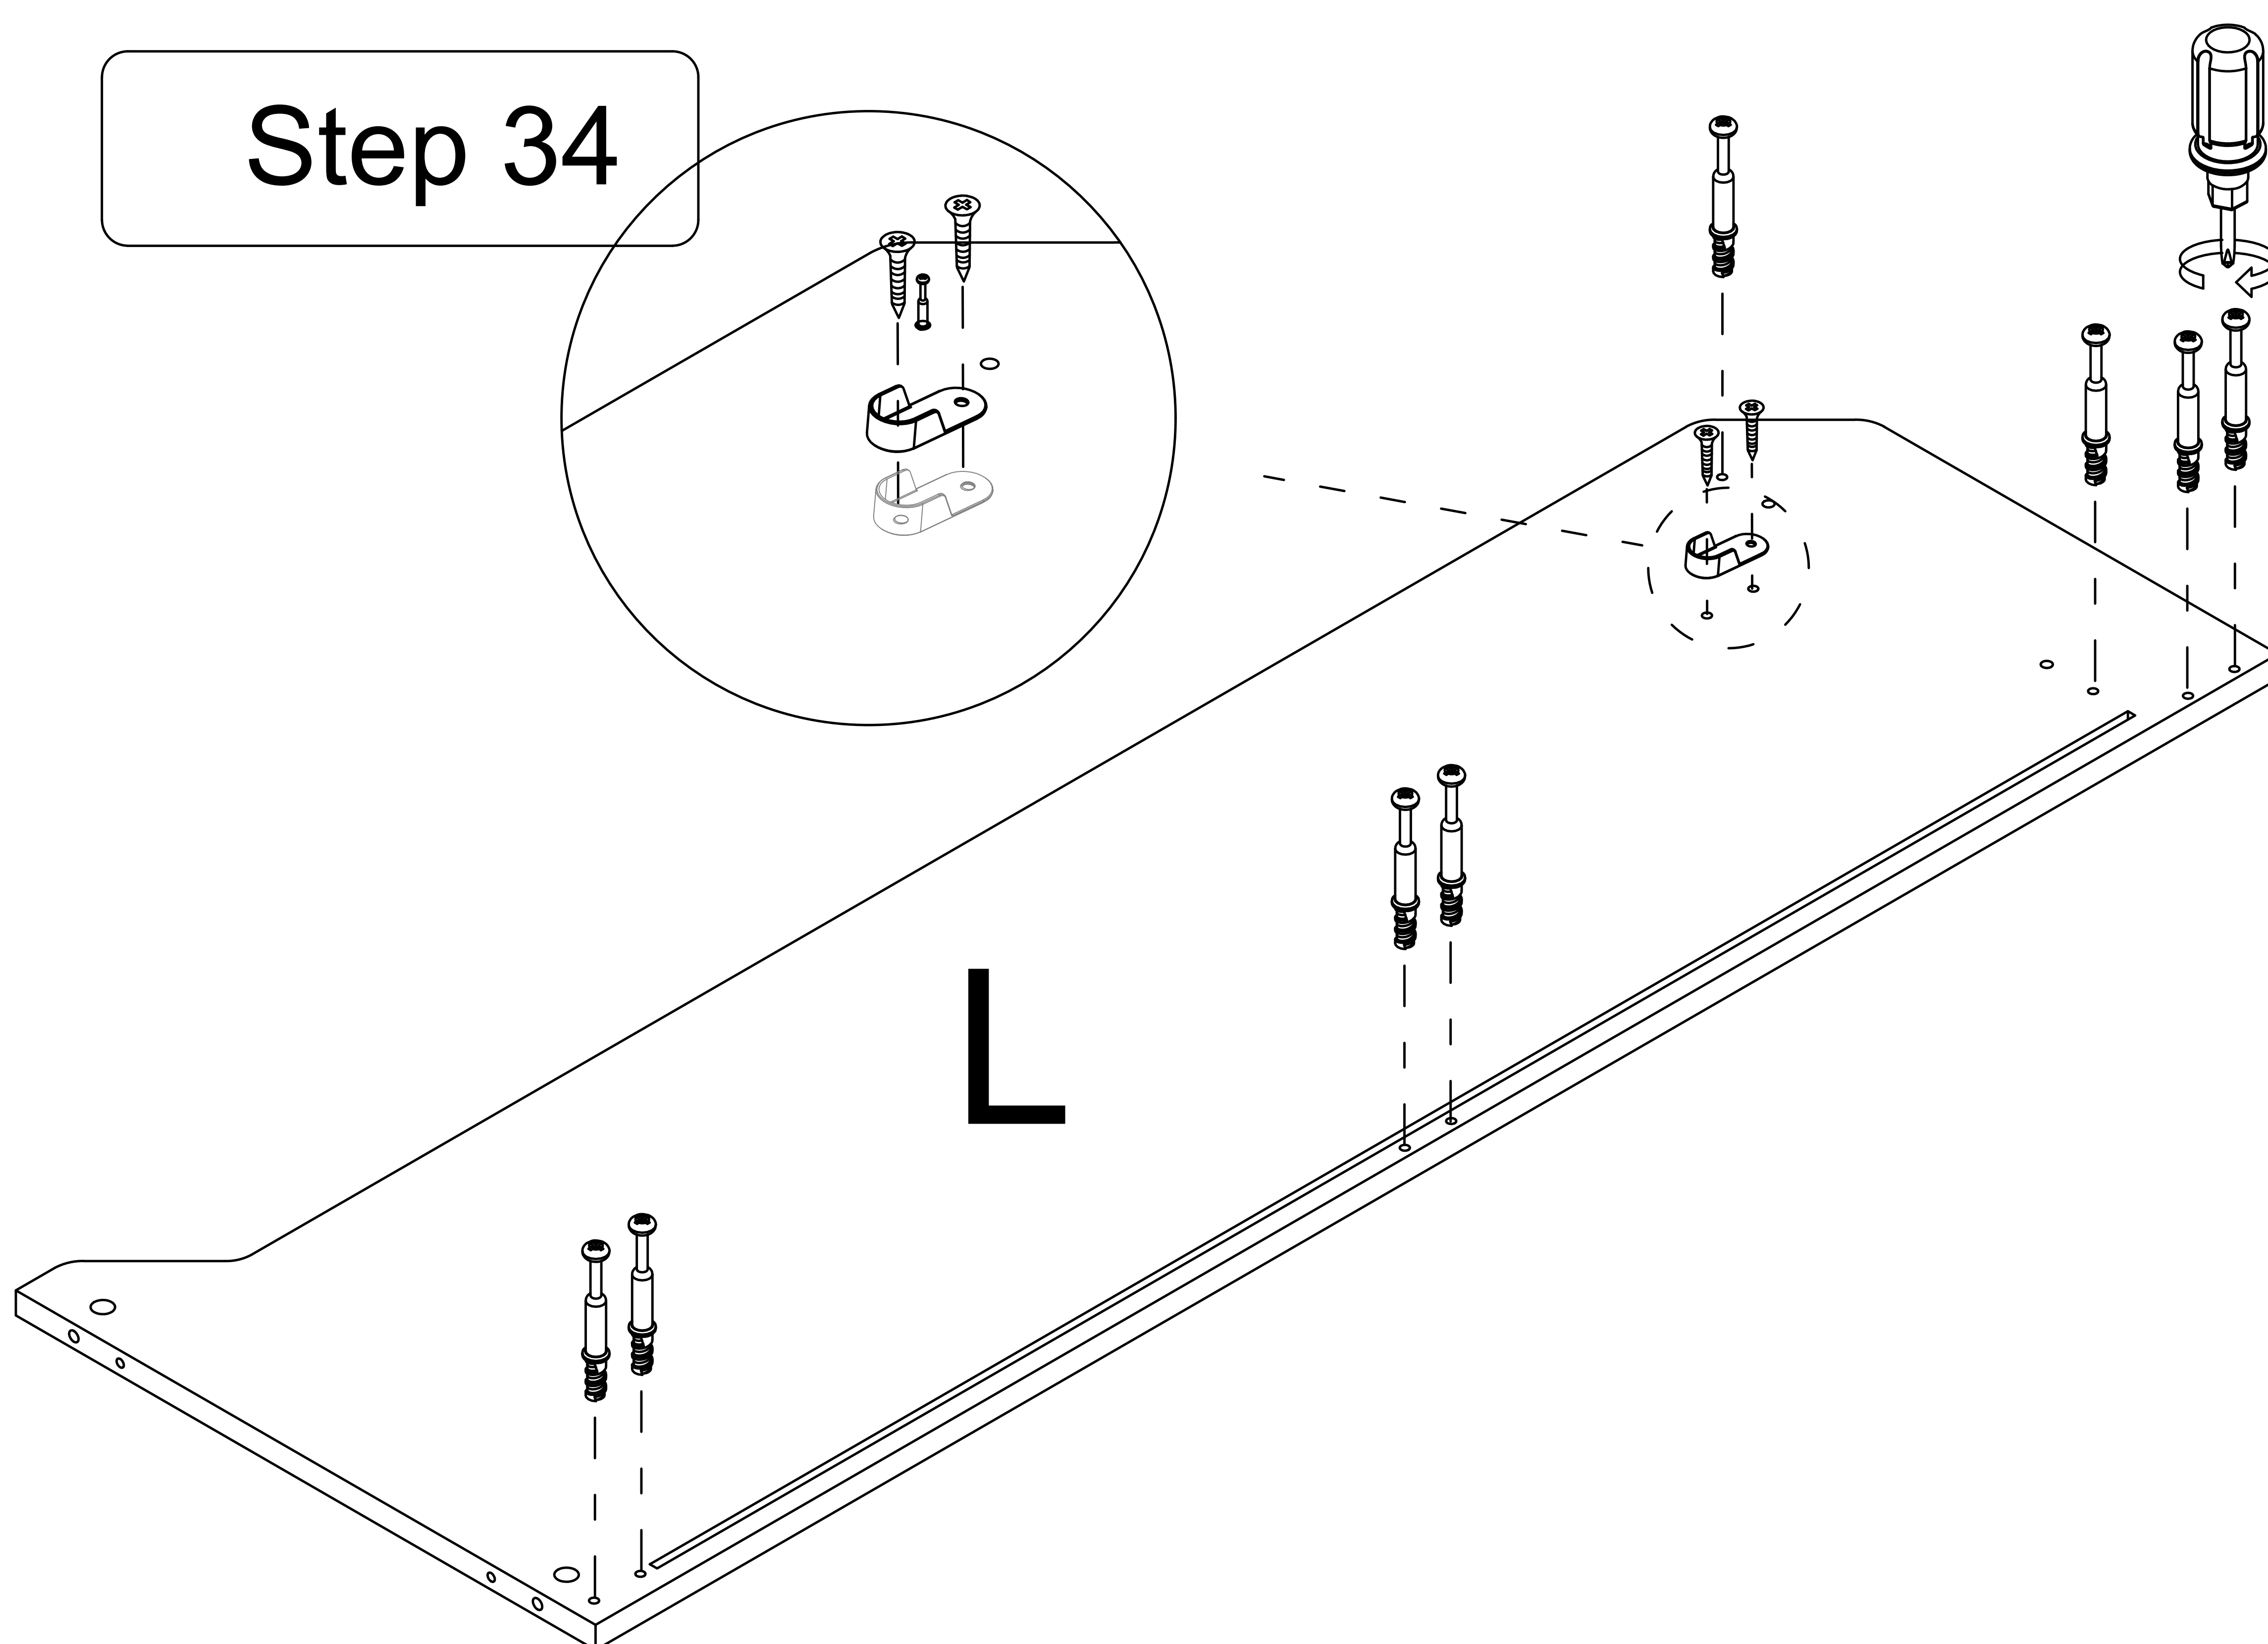


1

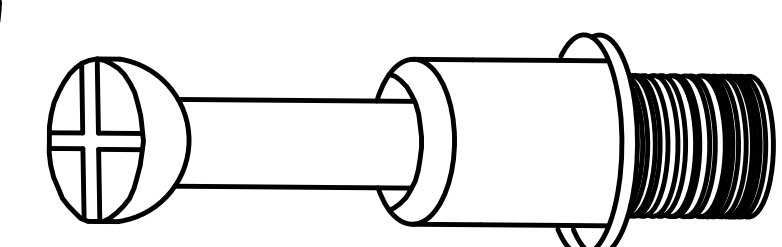


x8

7

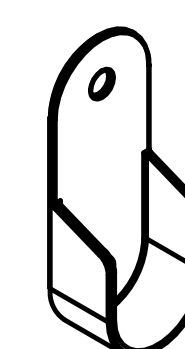


x1

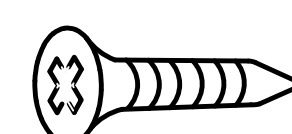


x2

## Step 35

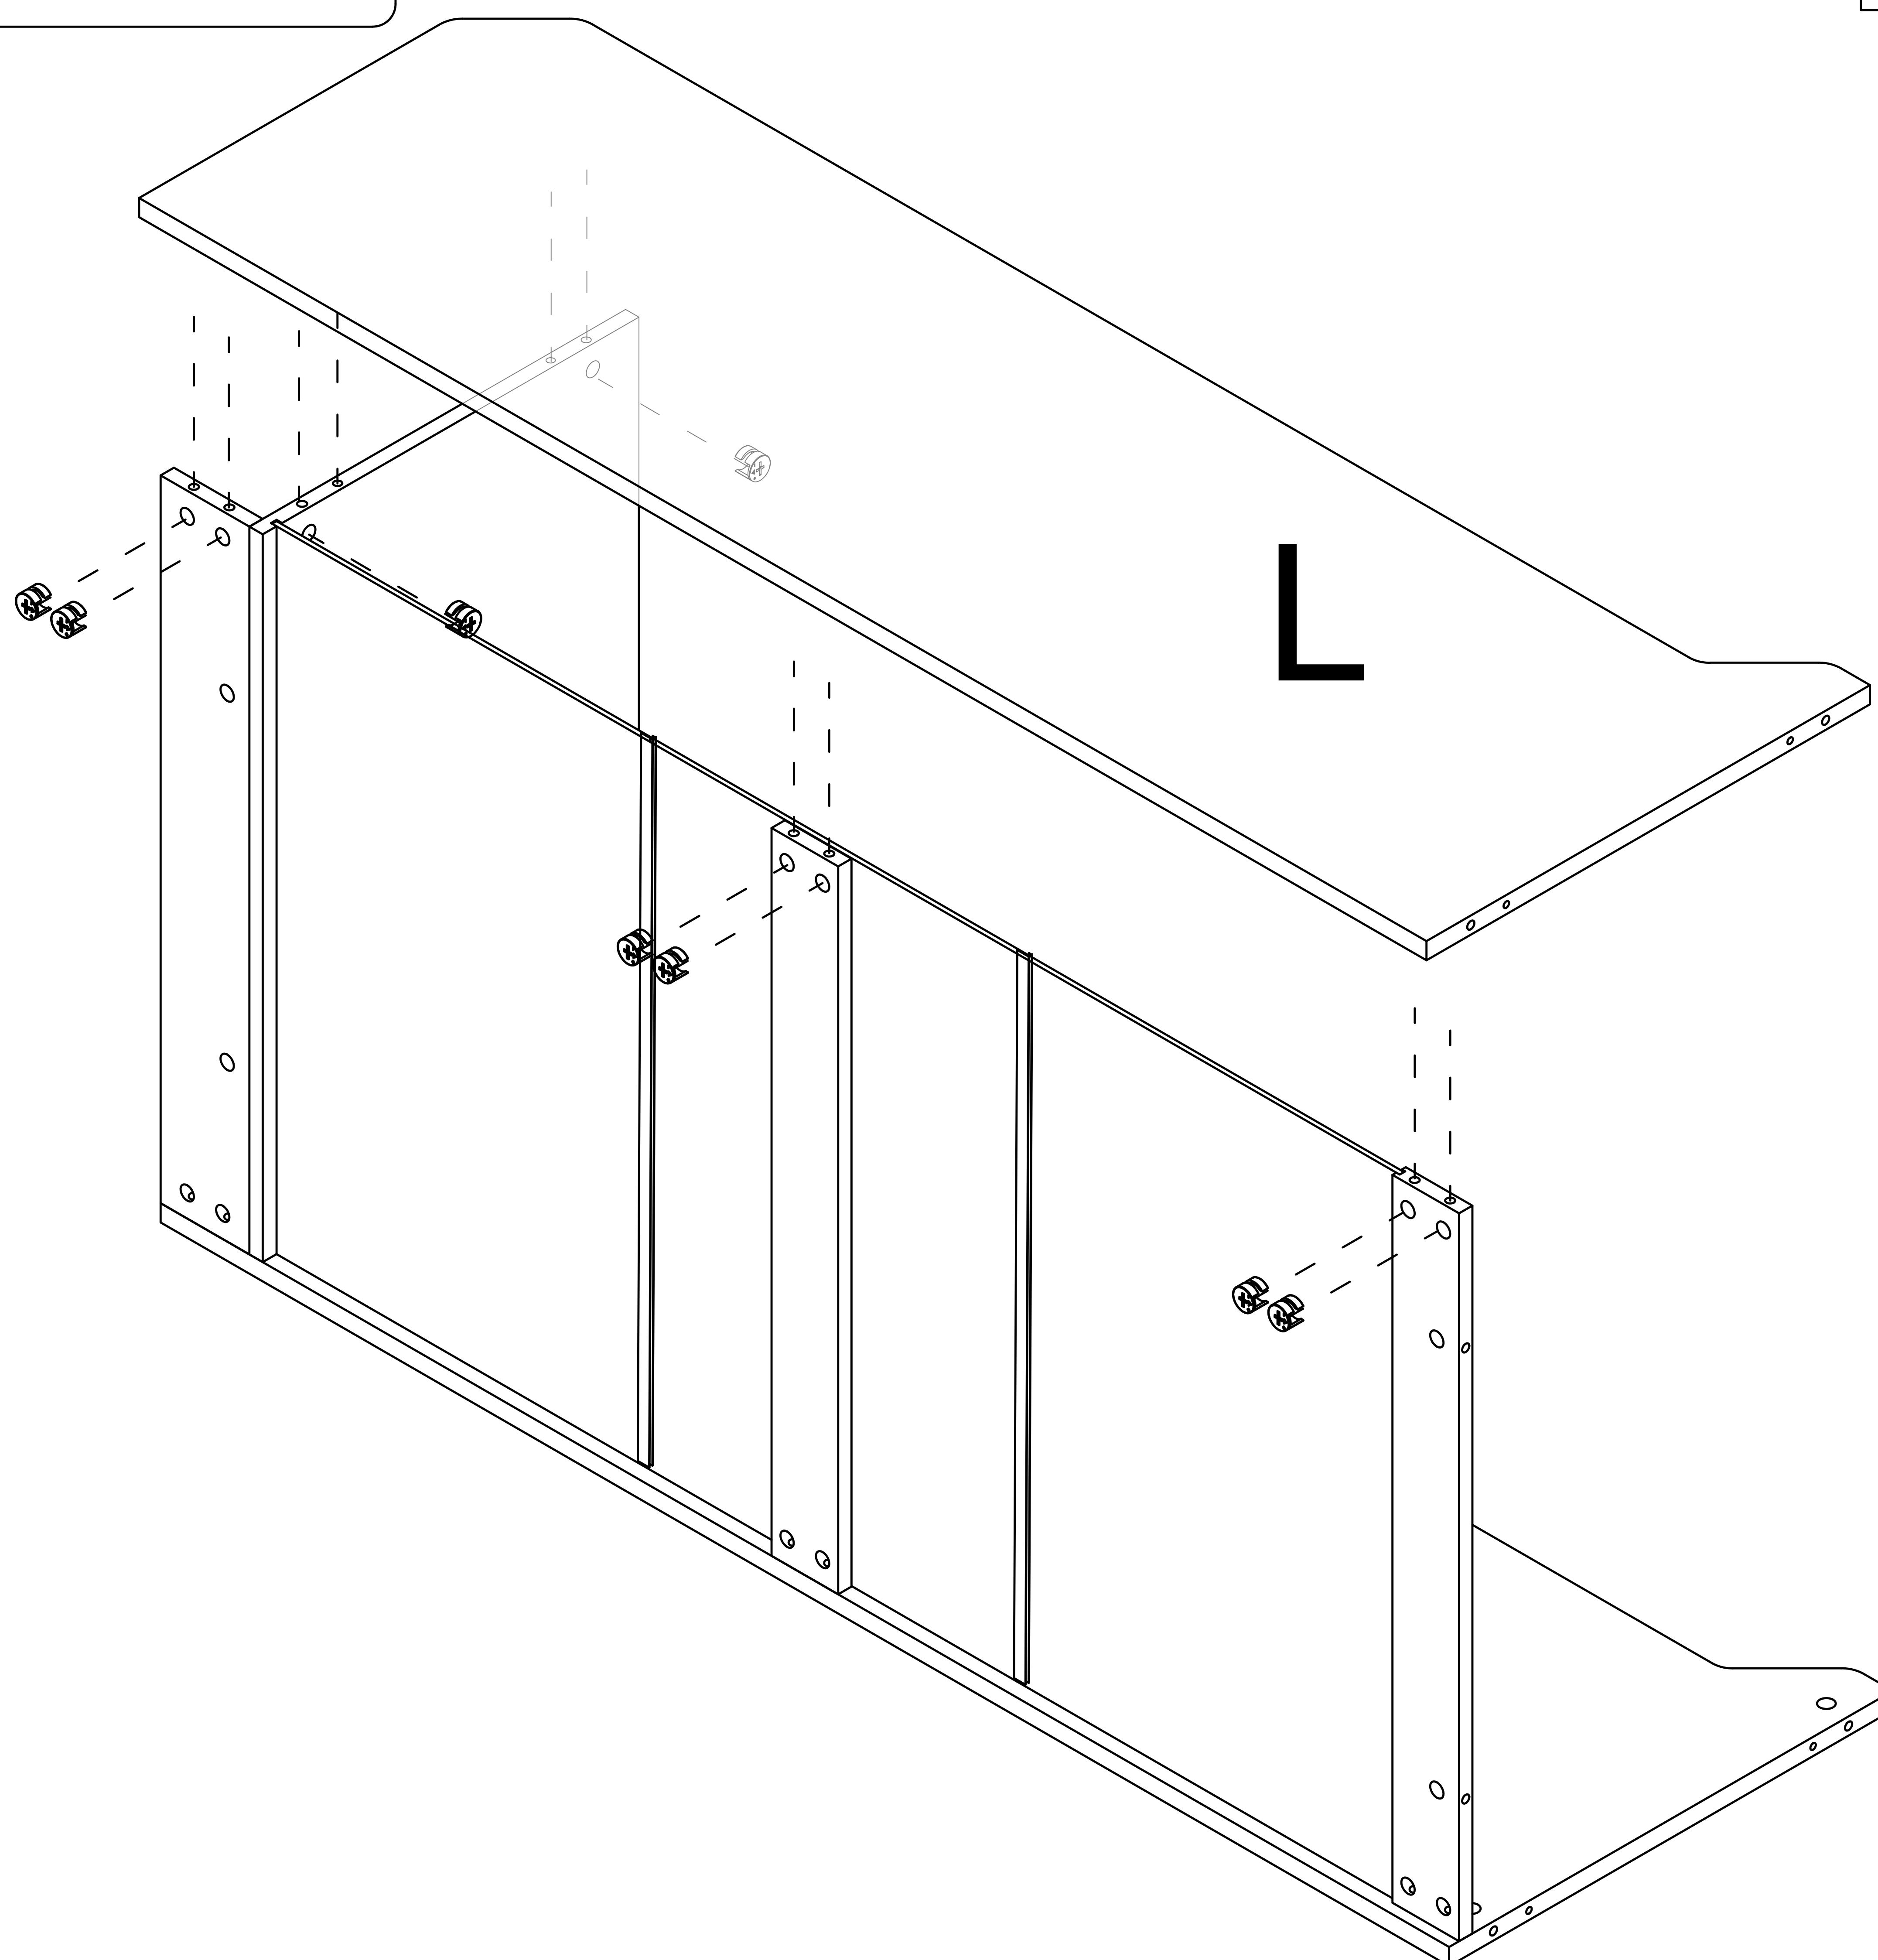


2

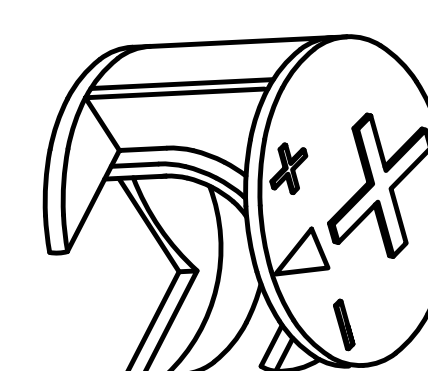


x8

Step 36

2

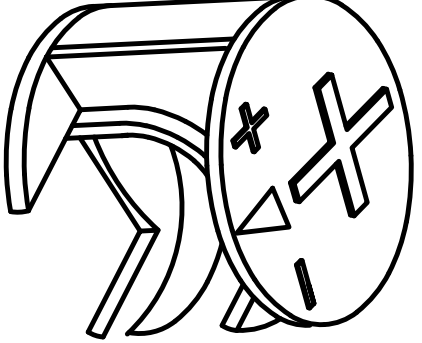


x4

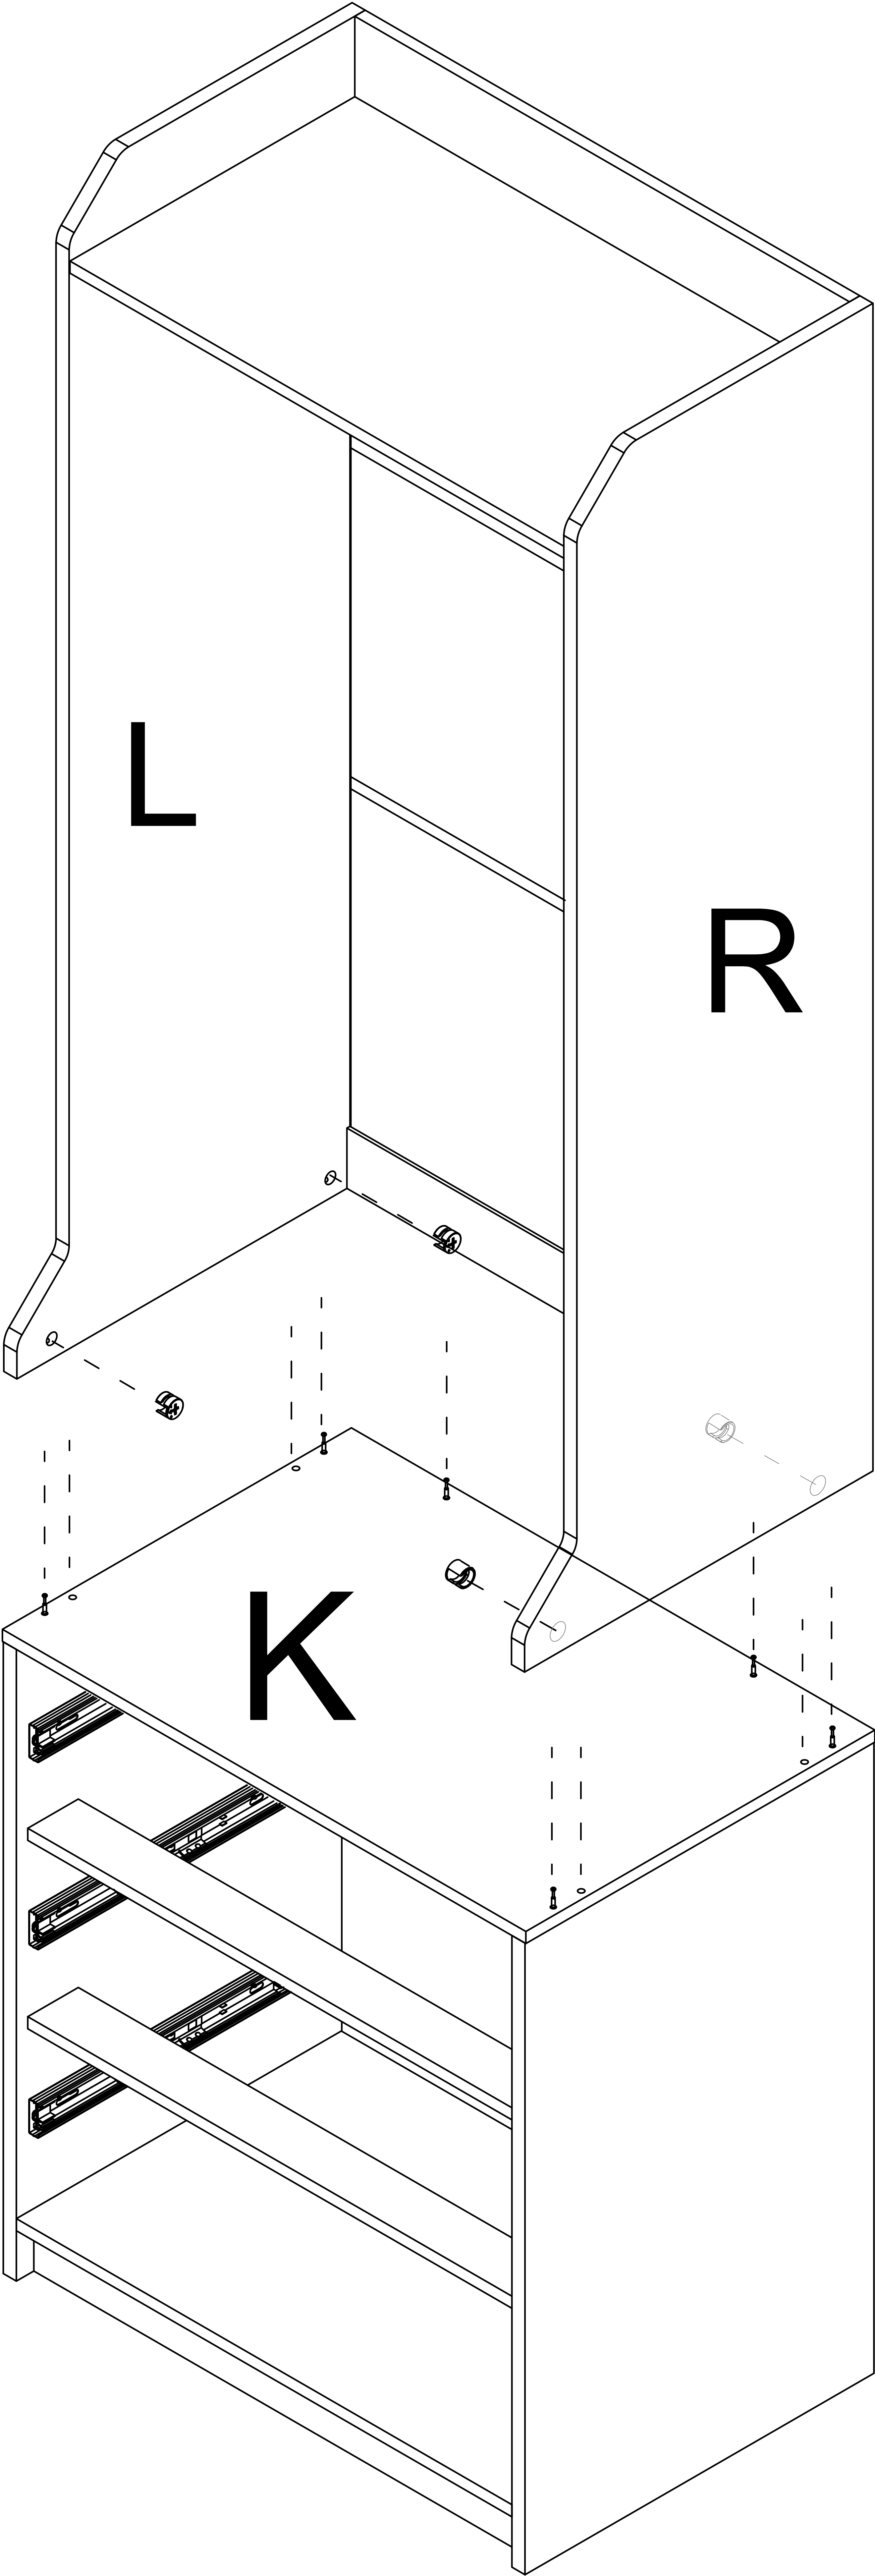


### Step 37

2

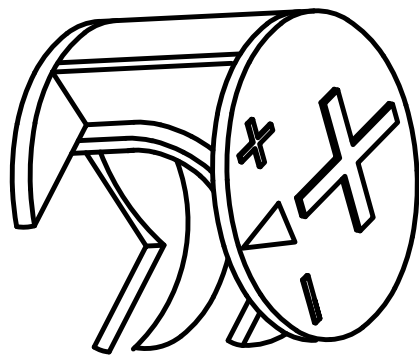


x2

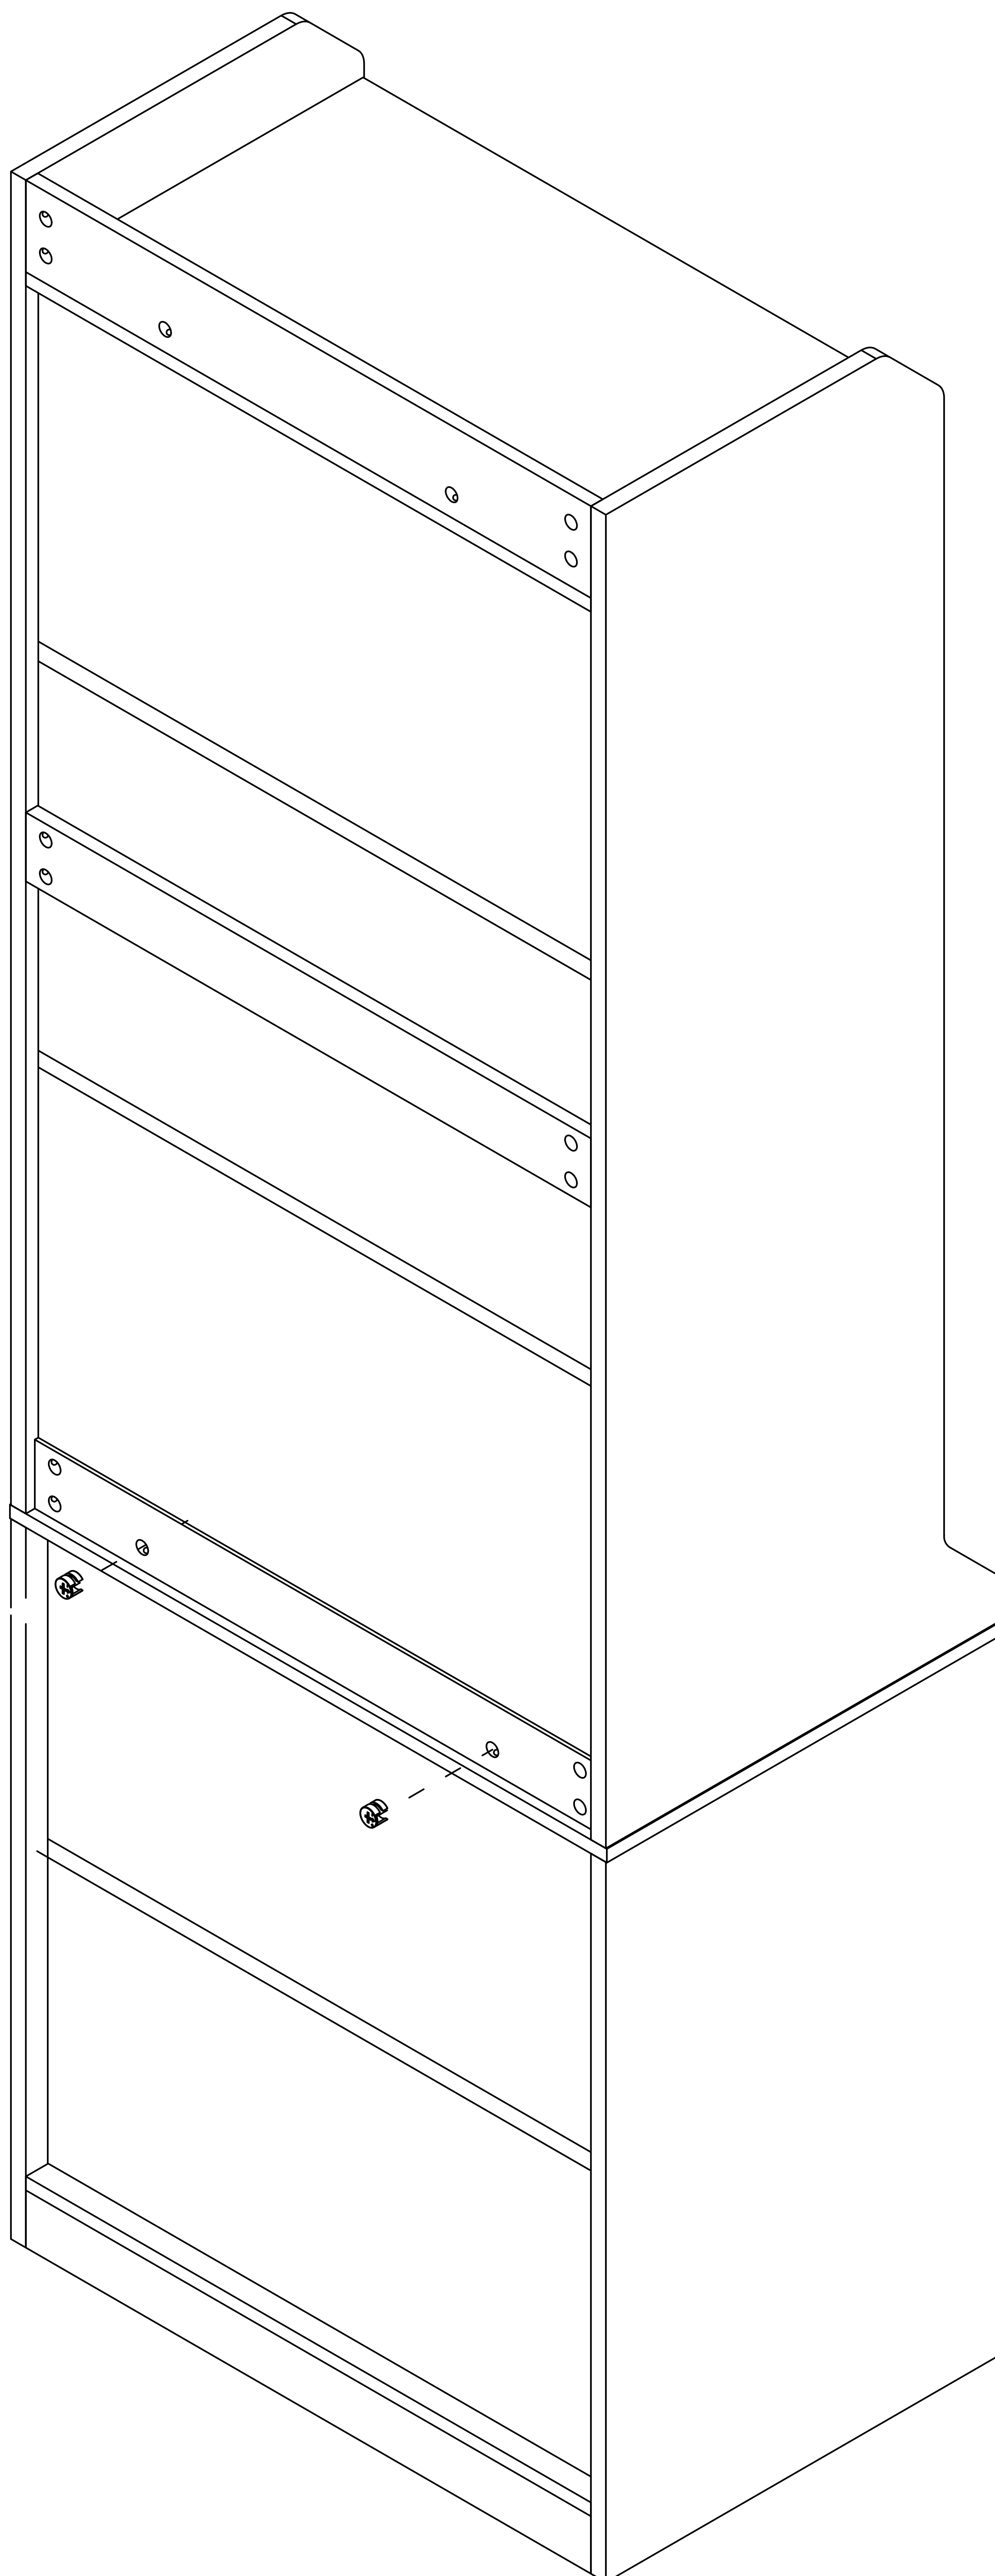


Step 38



8

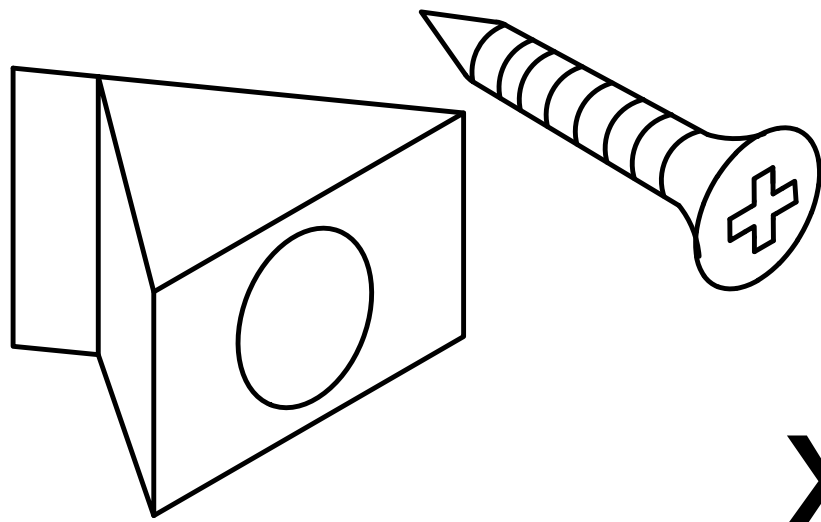

x15

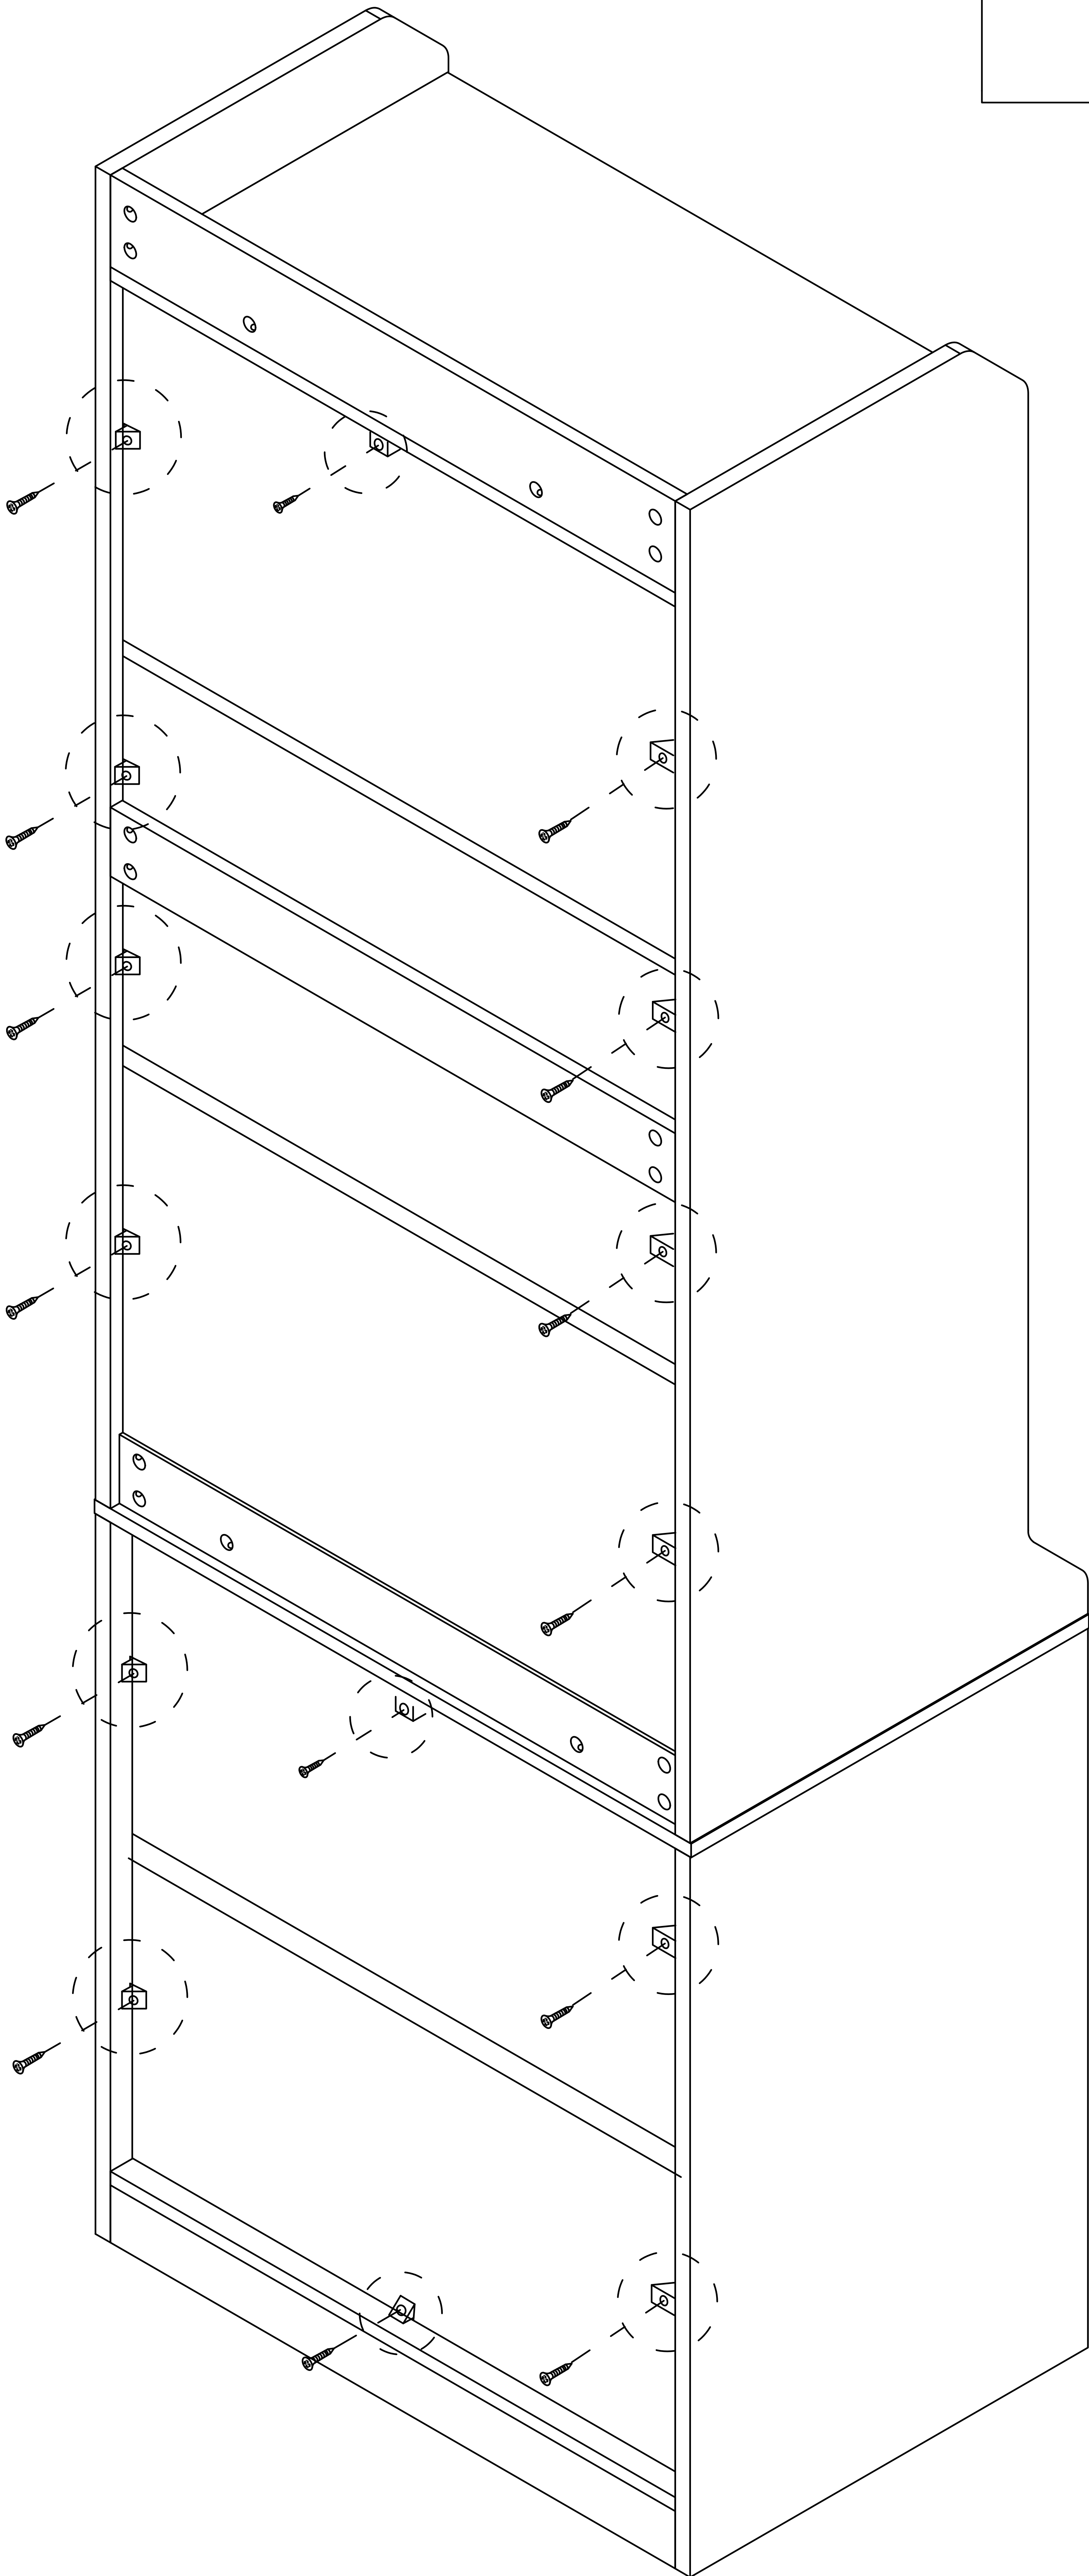


## Step 39


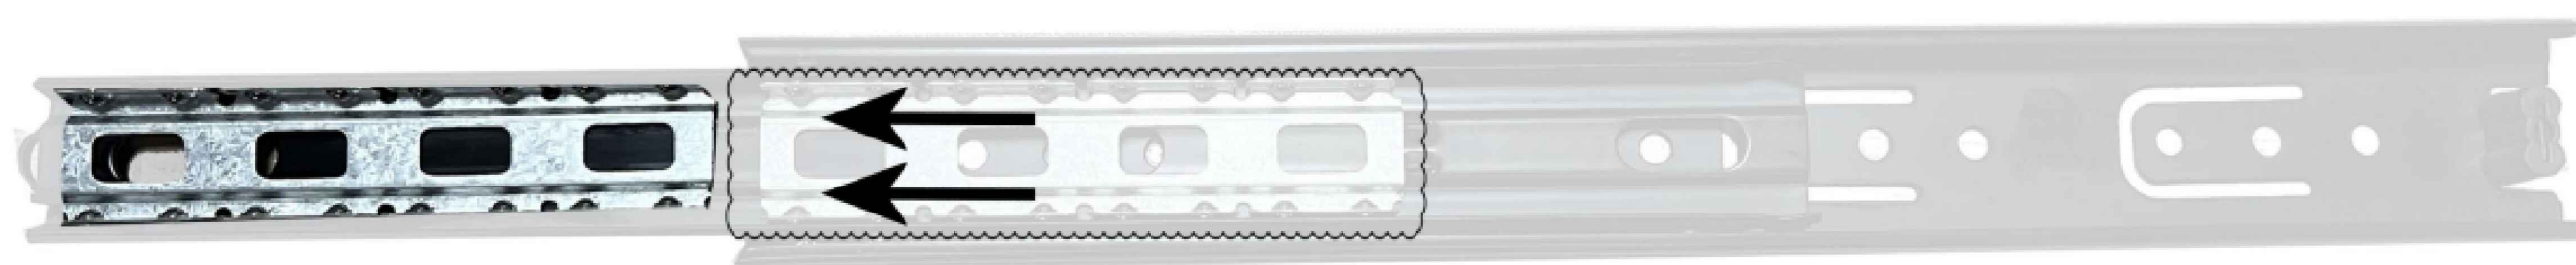
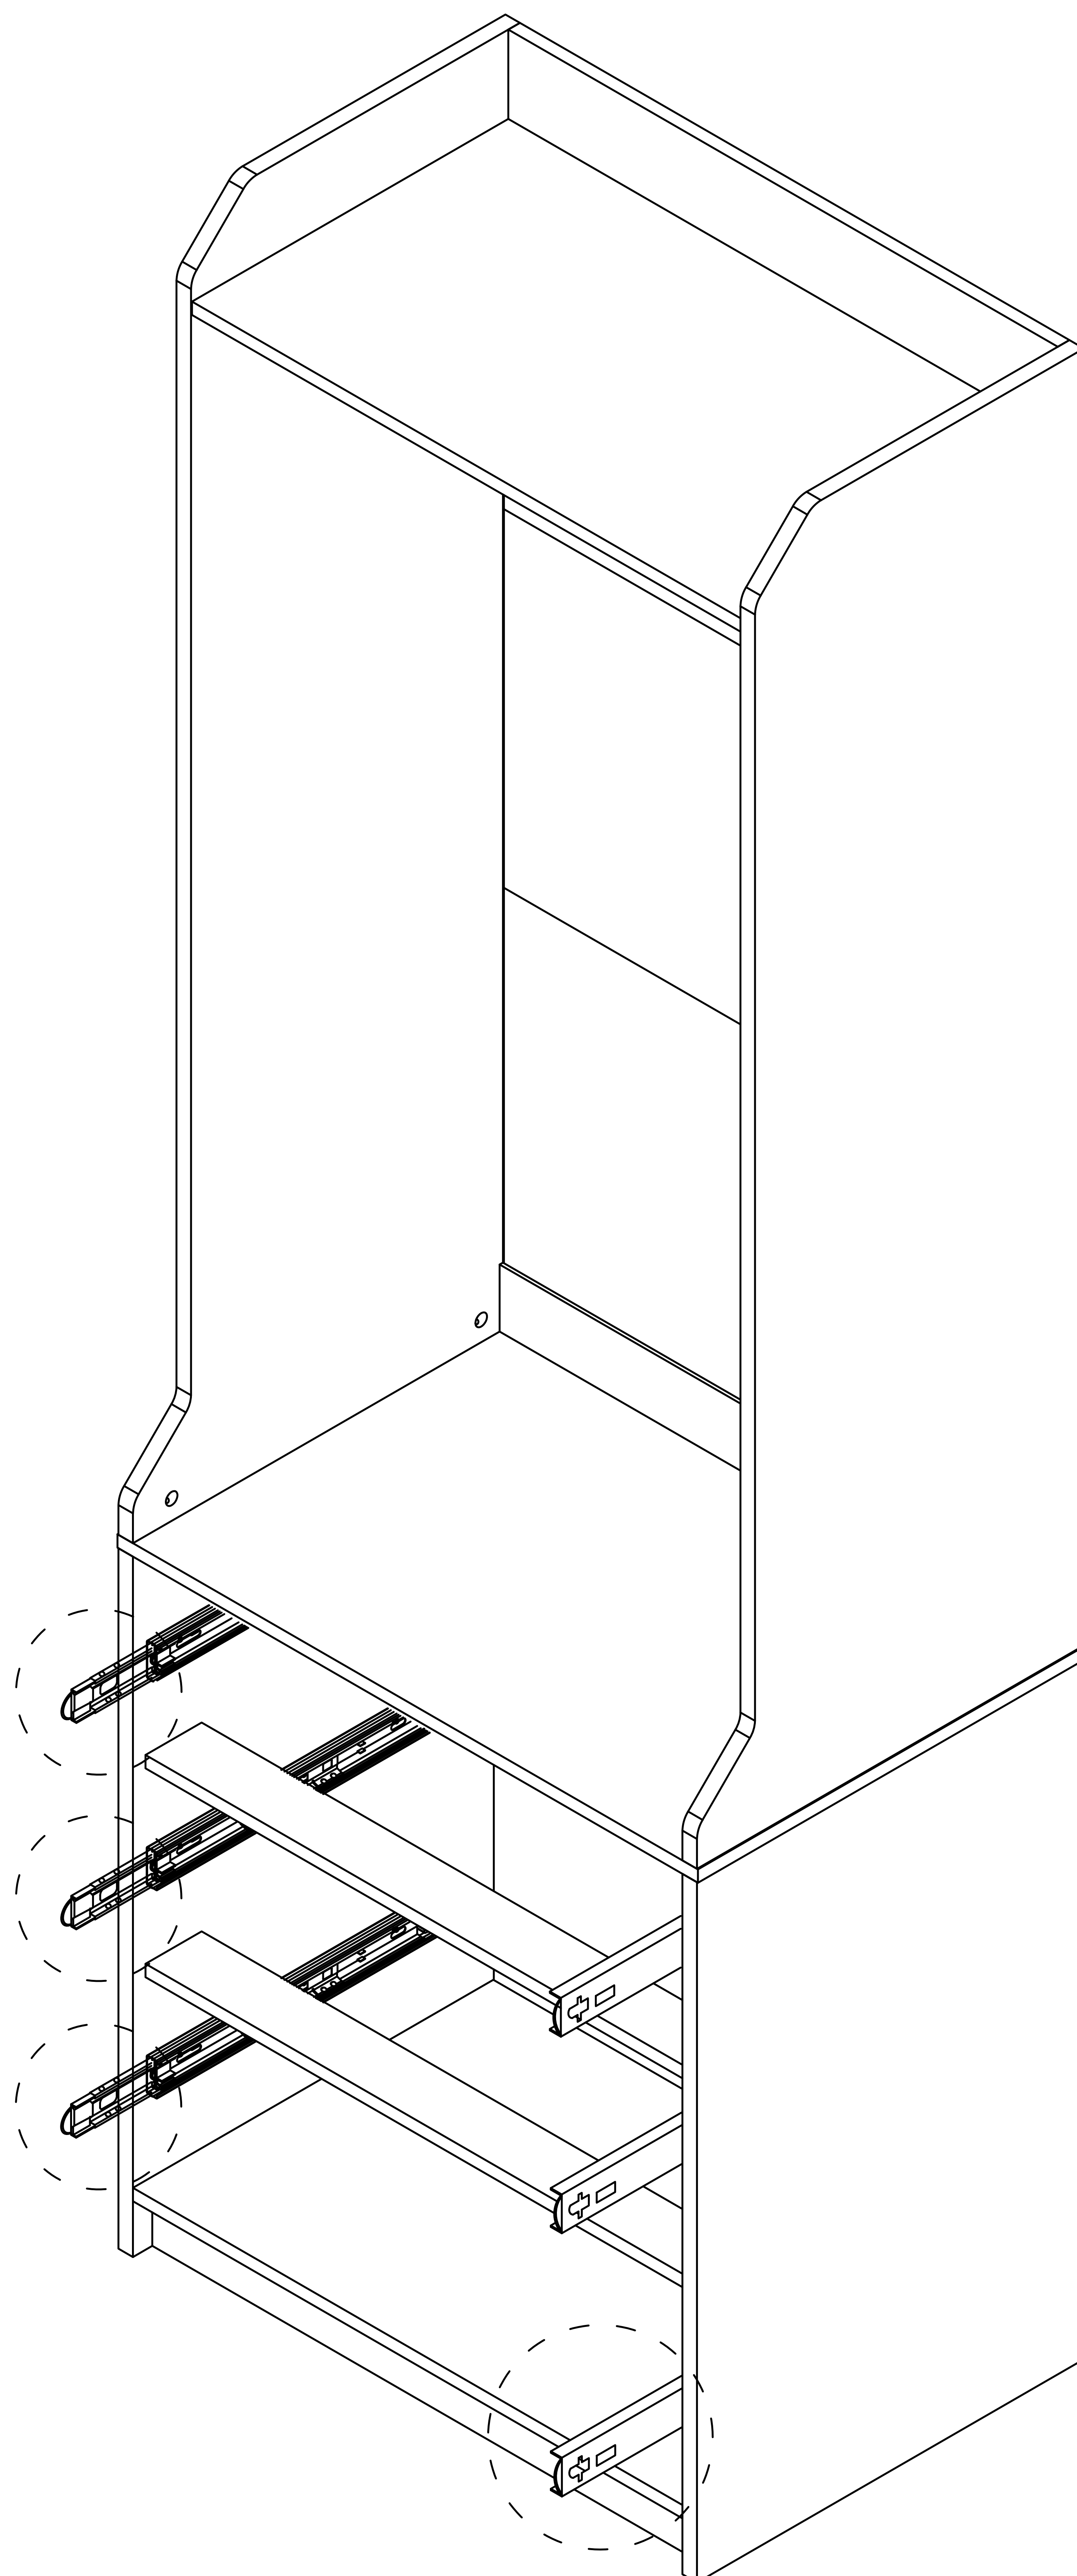


As shown, When installing the drawer,  
pull the guide rail out first, Slide beads are also pulled out.

## Step 40

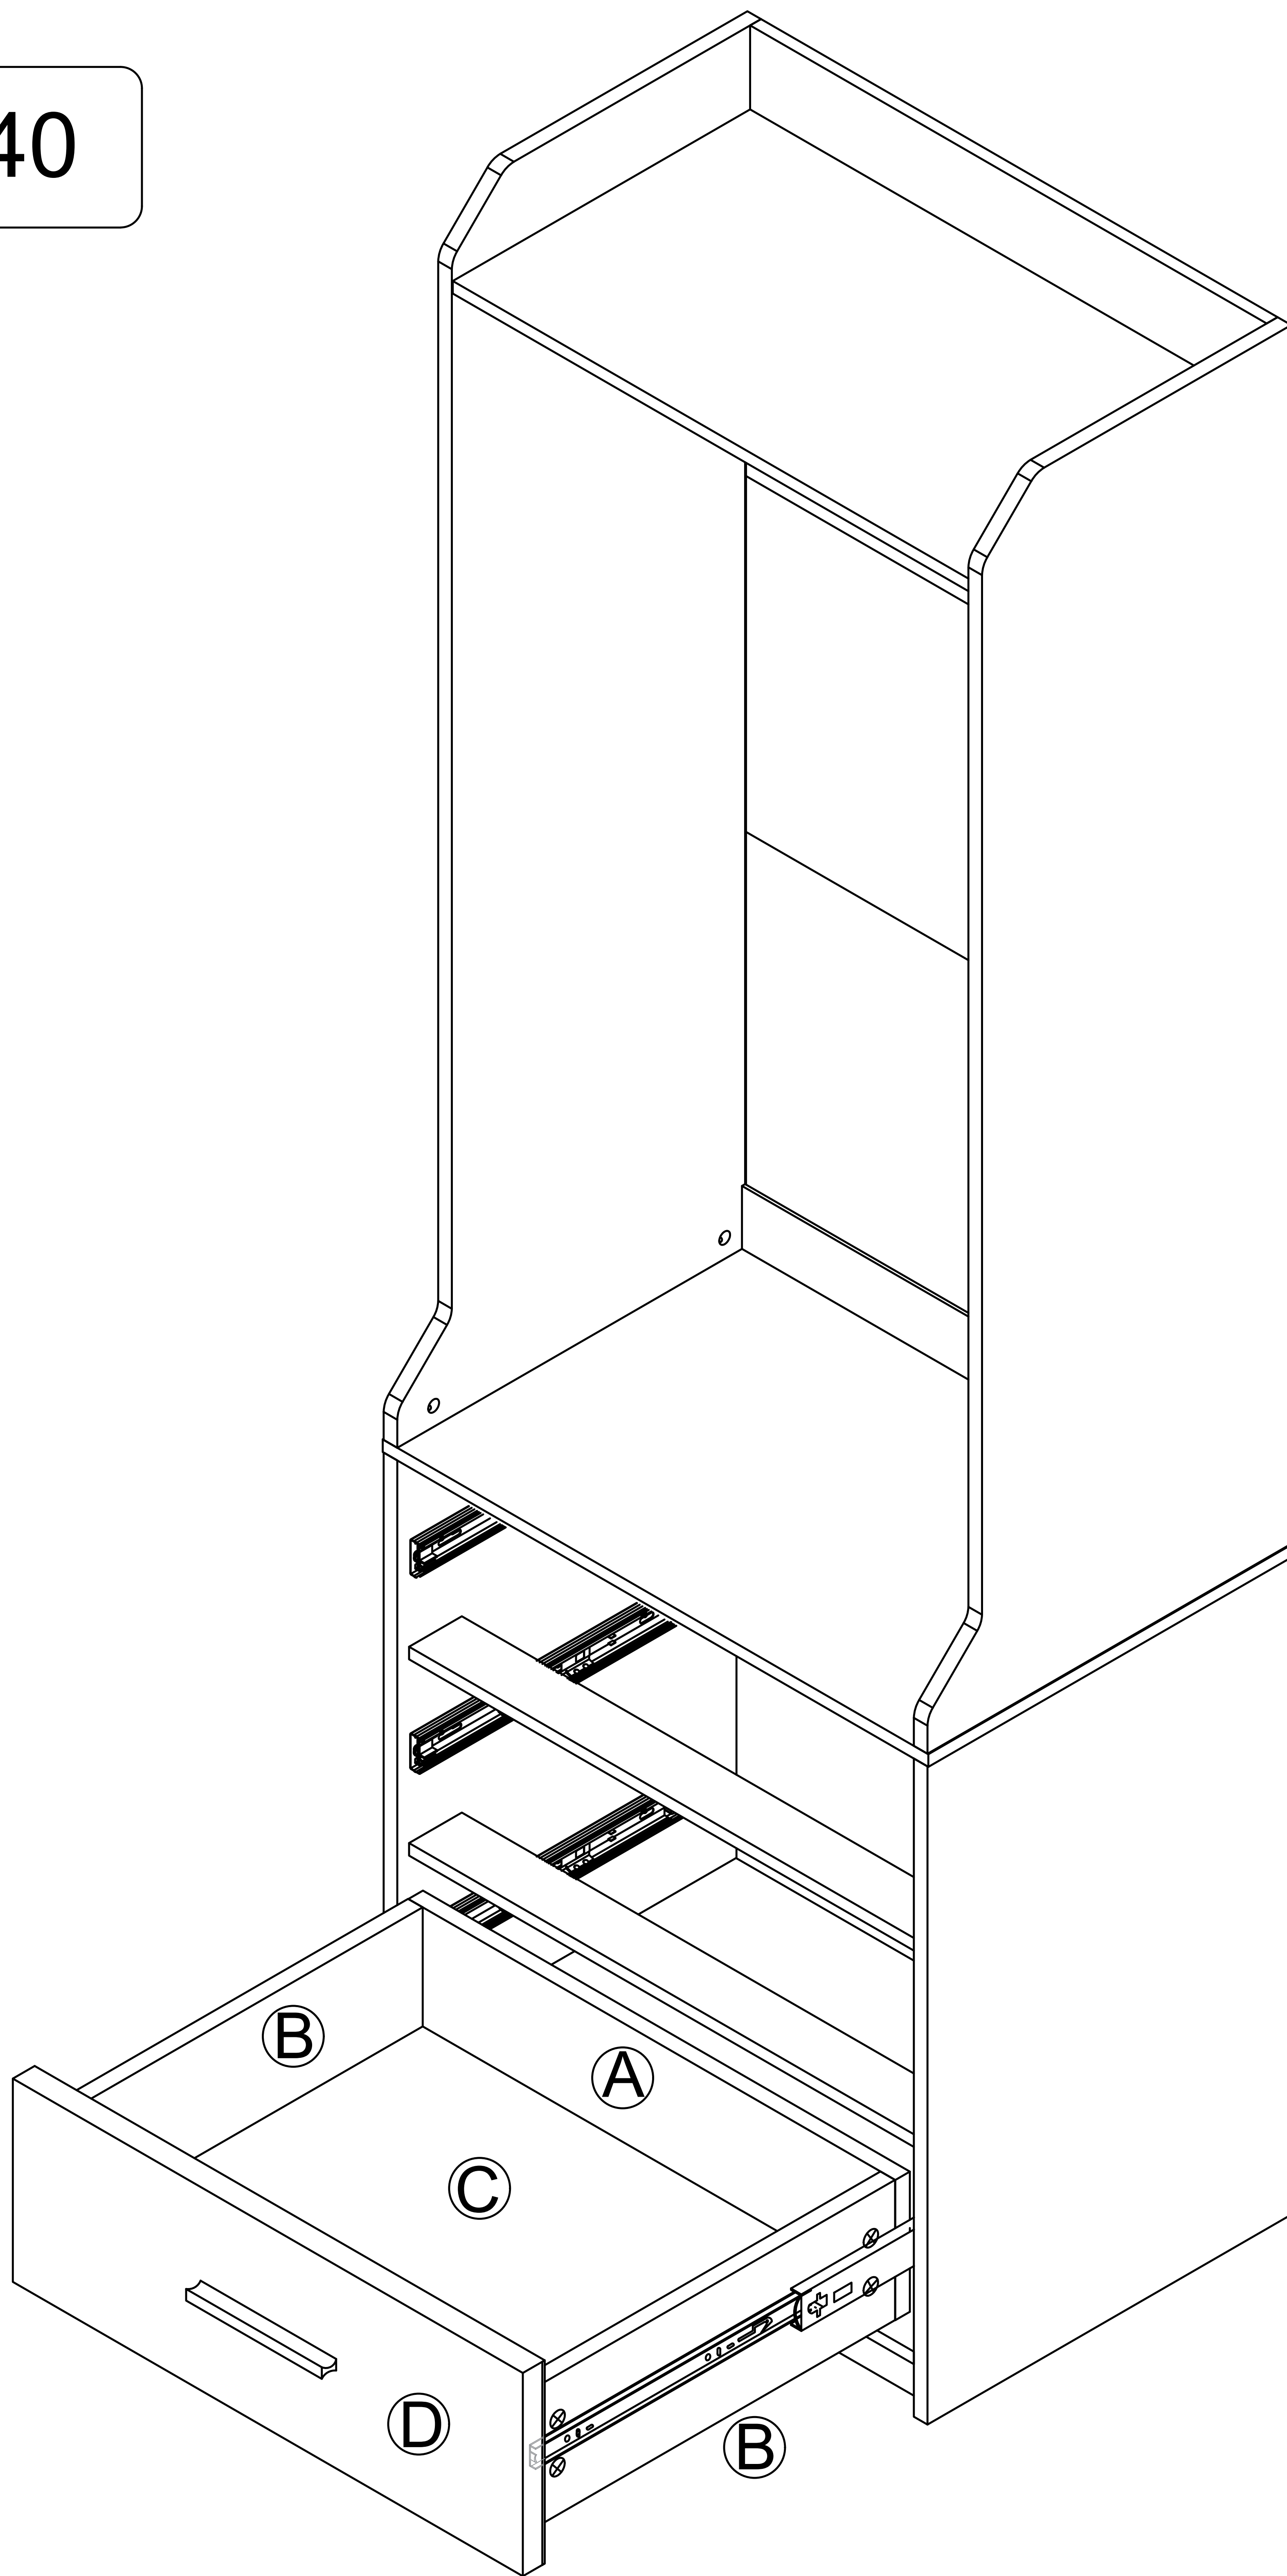


Install the three drawers into the cabinet.

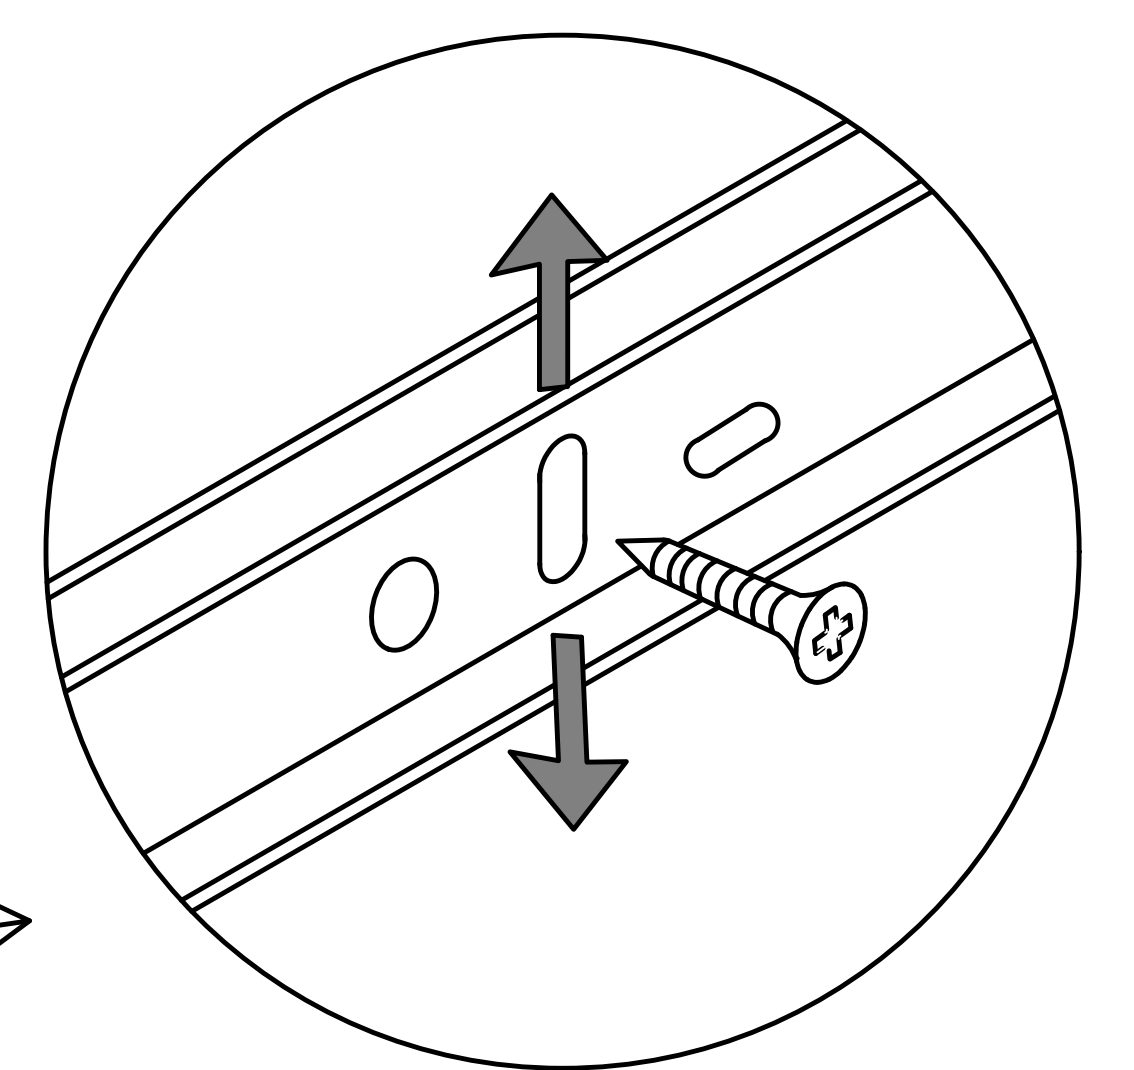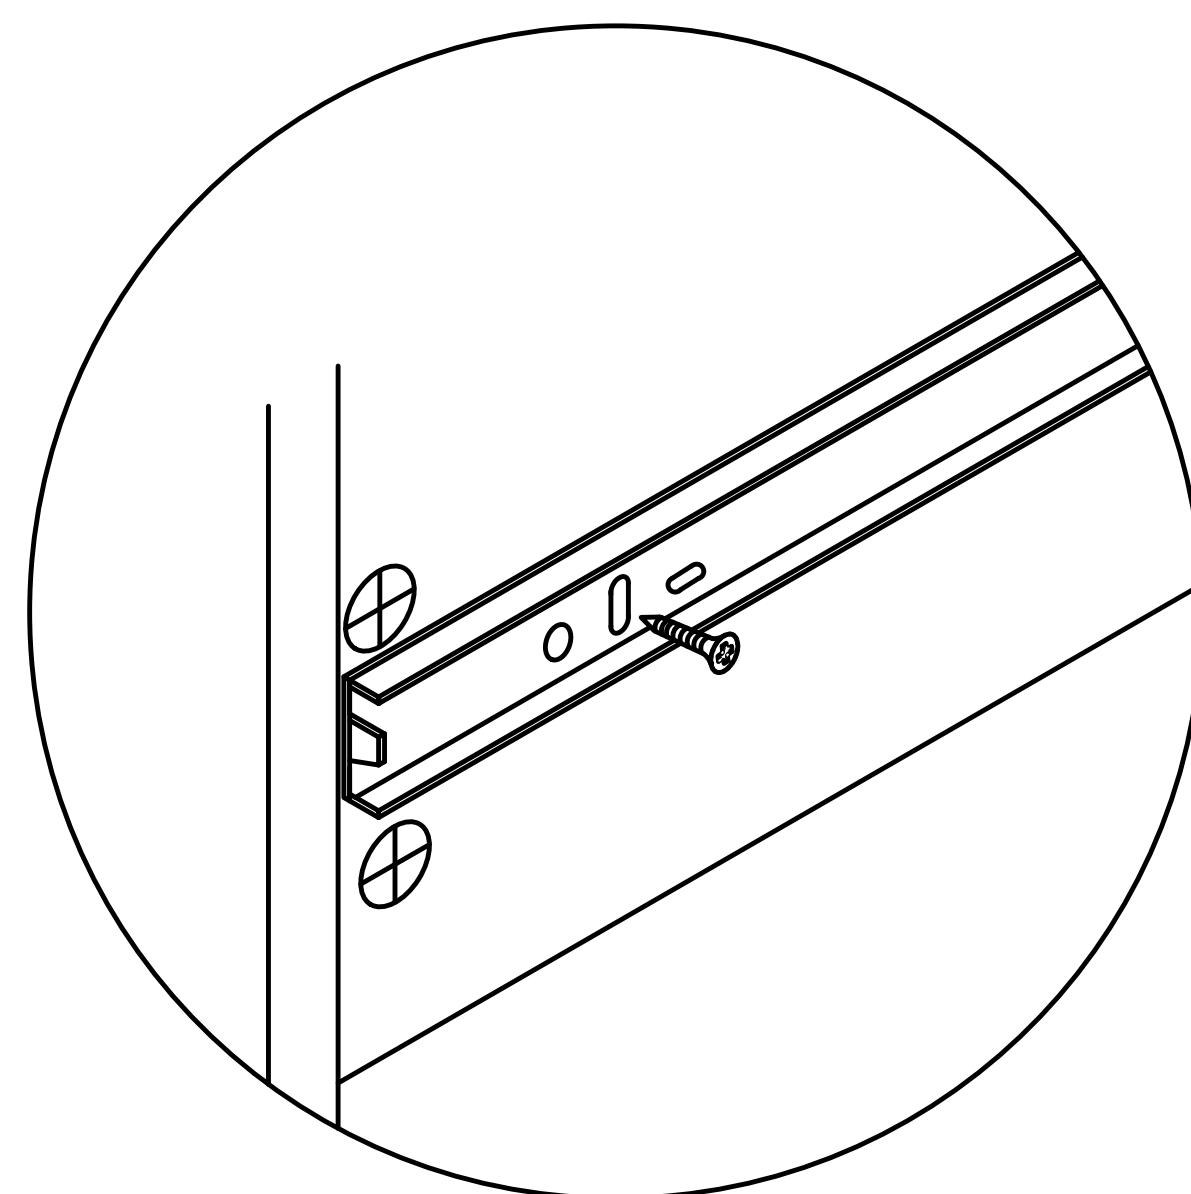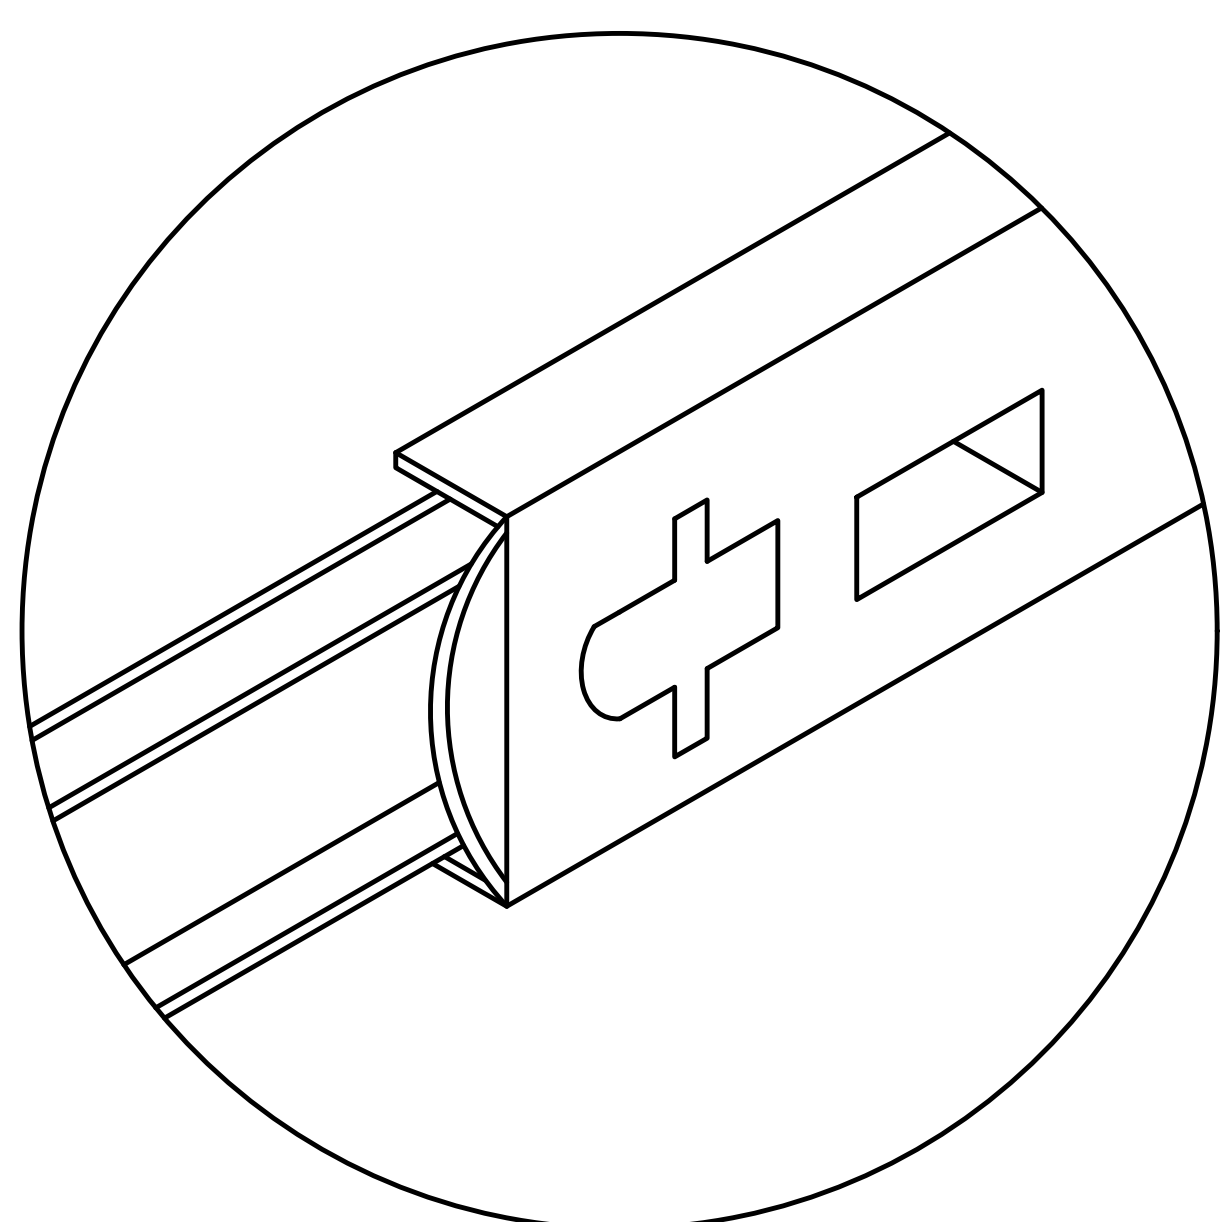


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 41

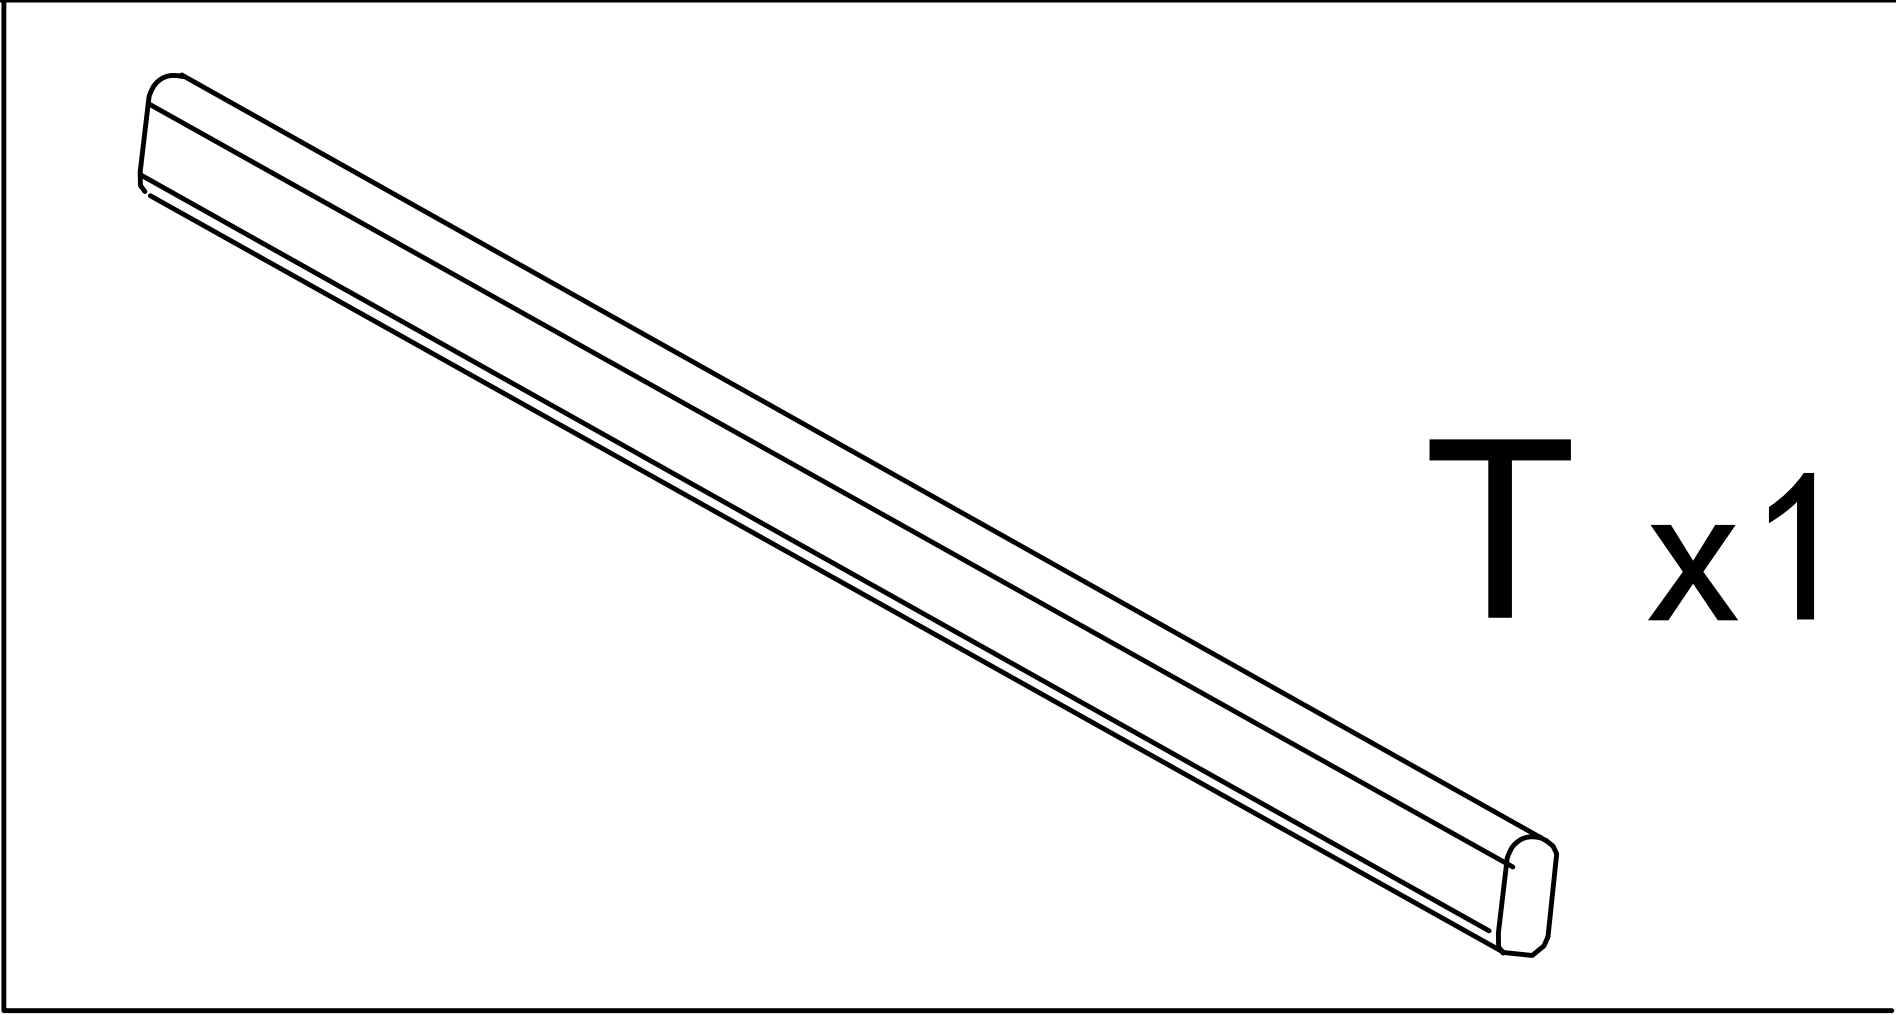

T

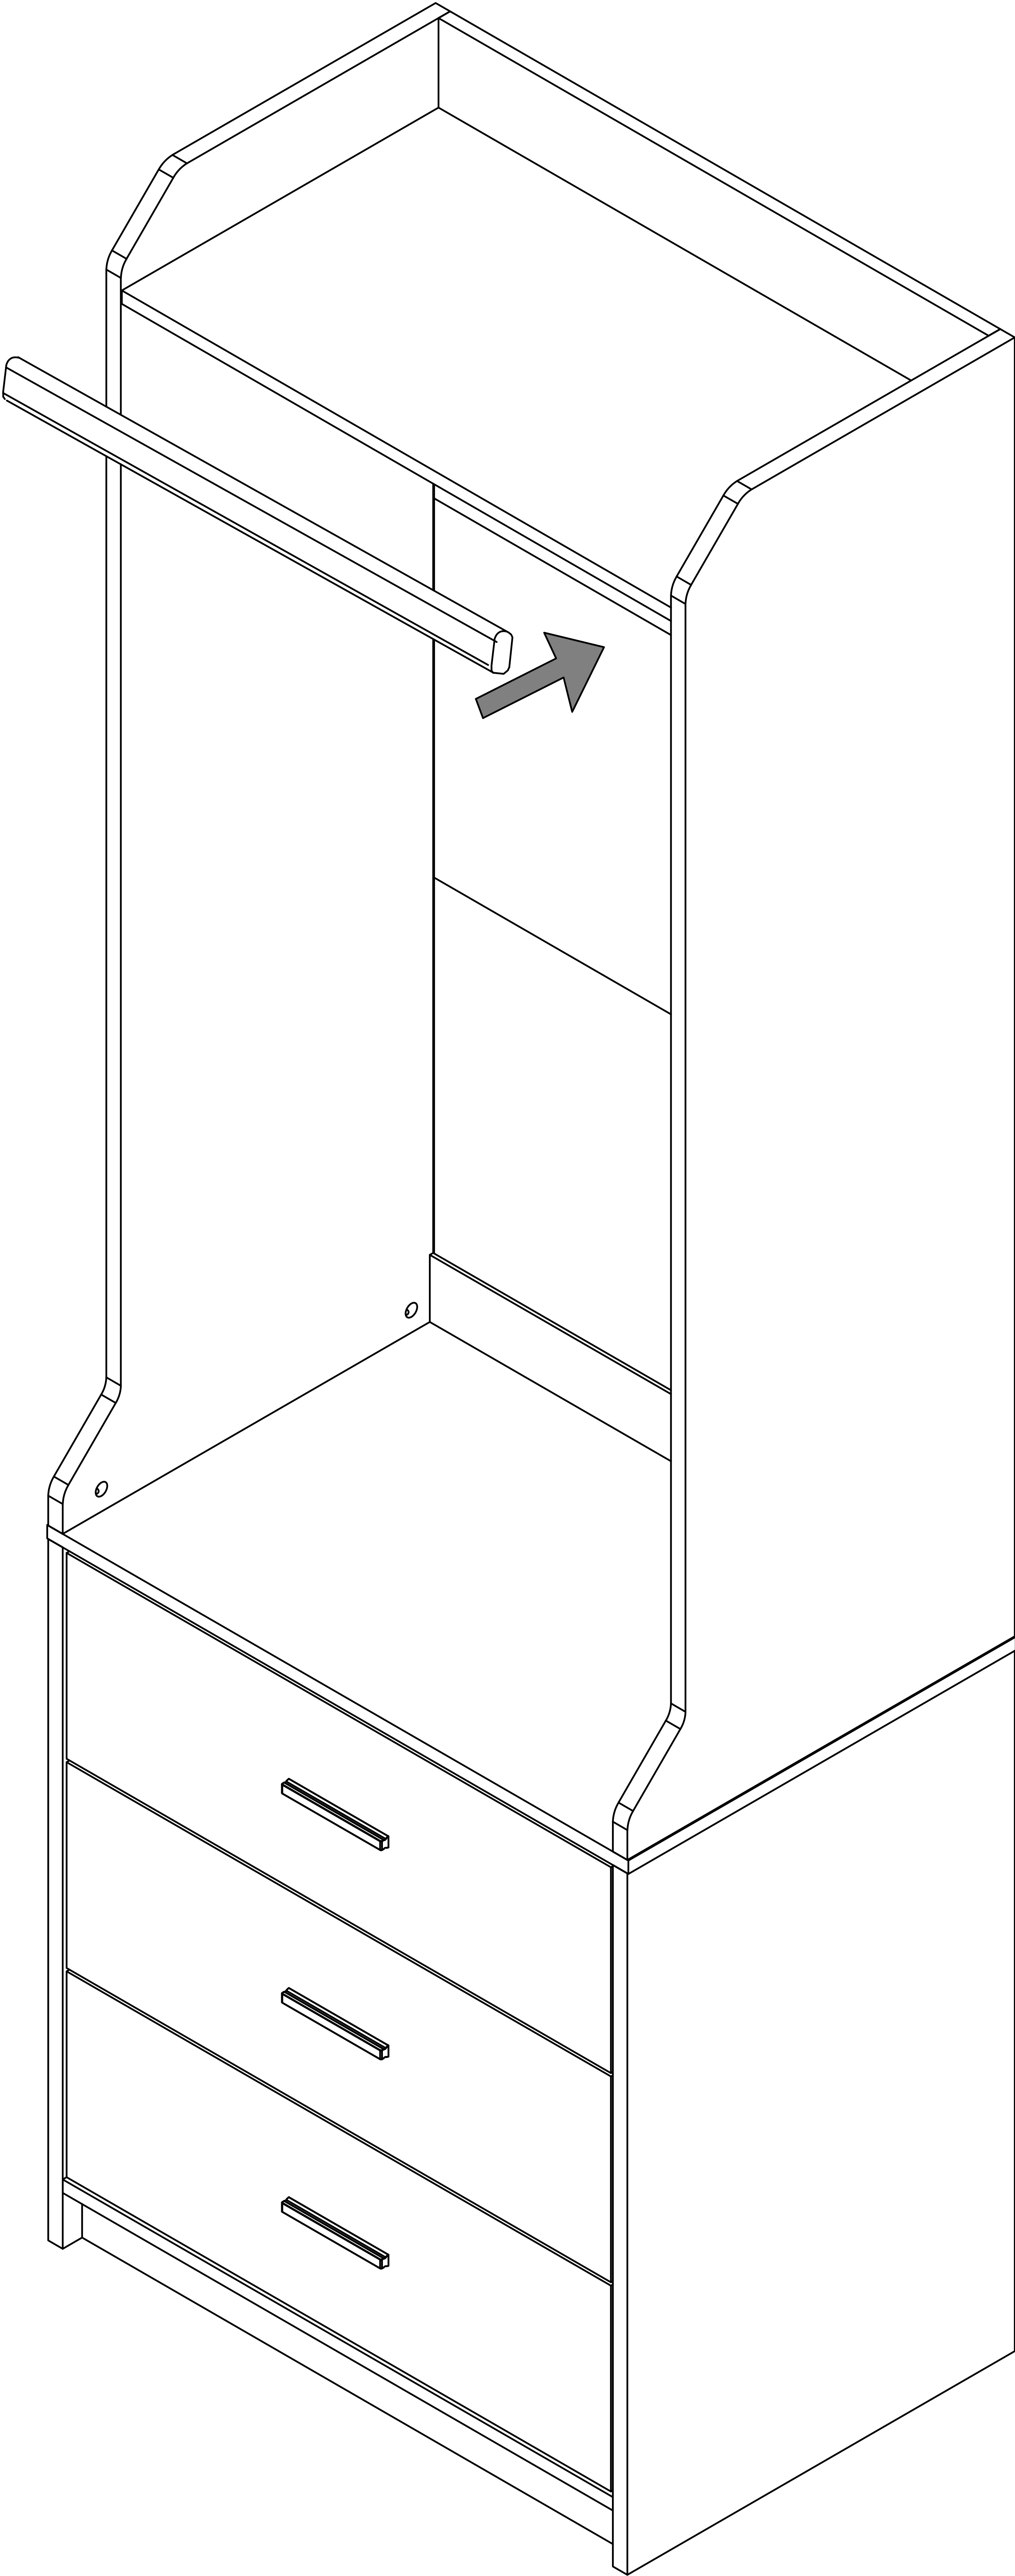



Step 42


Install as required


Install the anti fall hardware on the cabinet as shown in the picture first

9

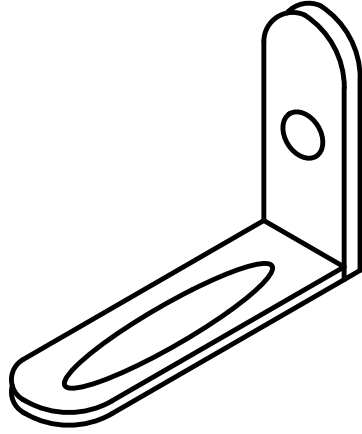 x2

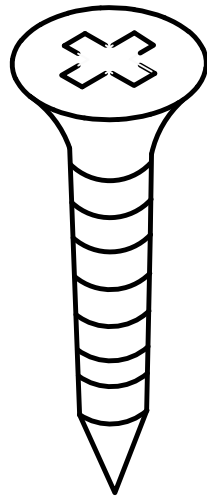
 x2

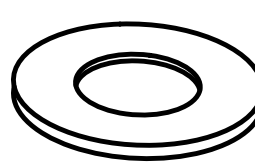
 x2

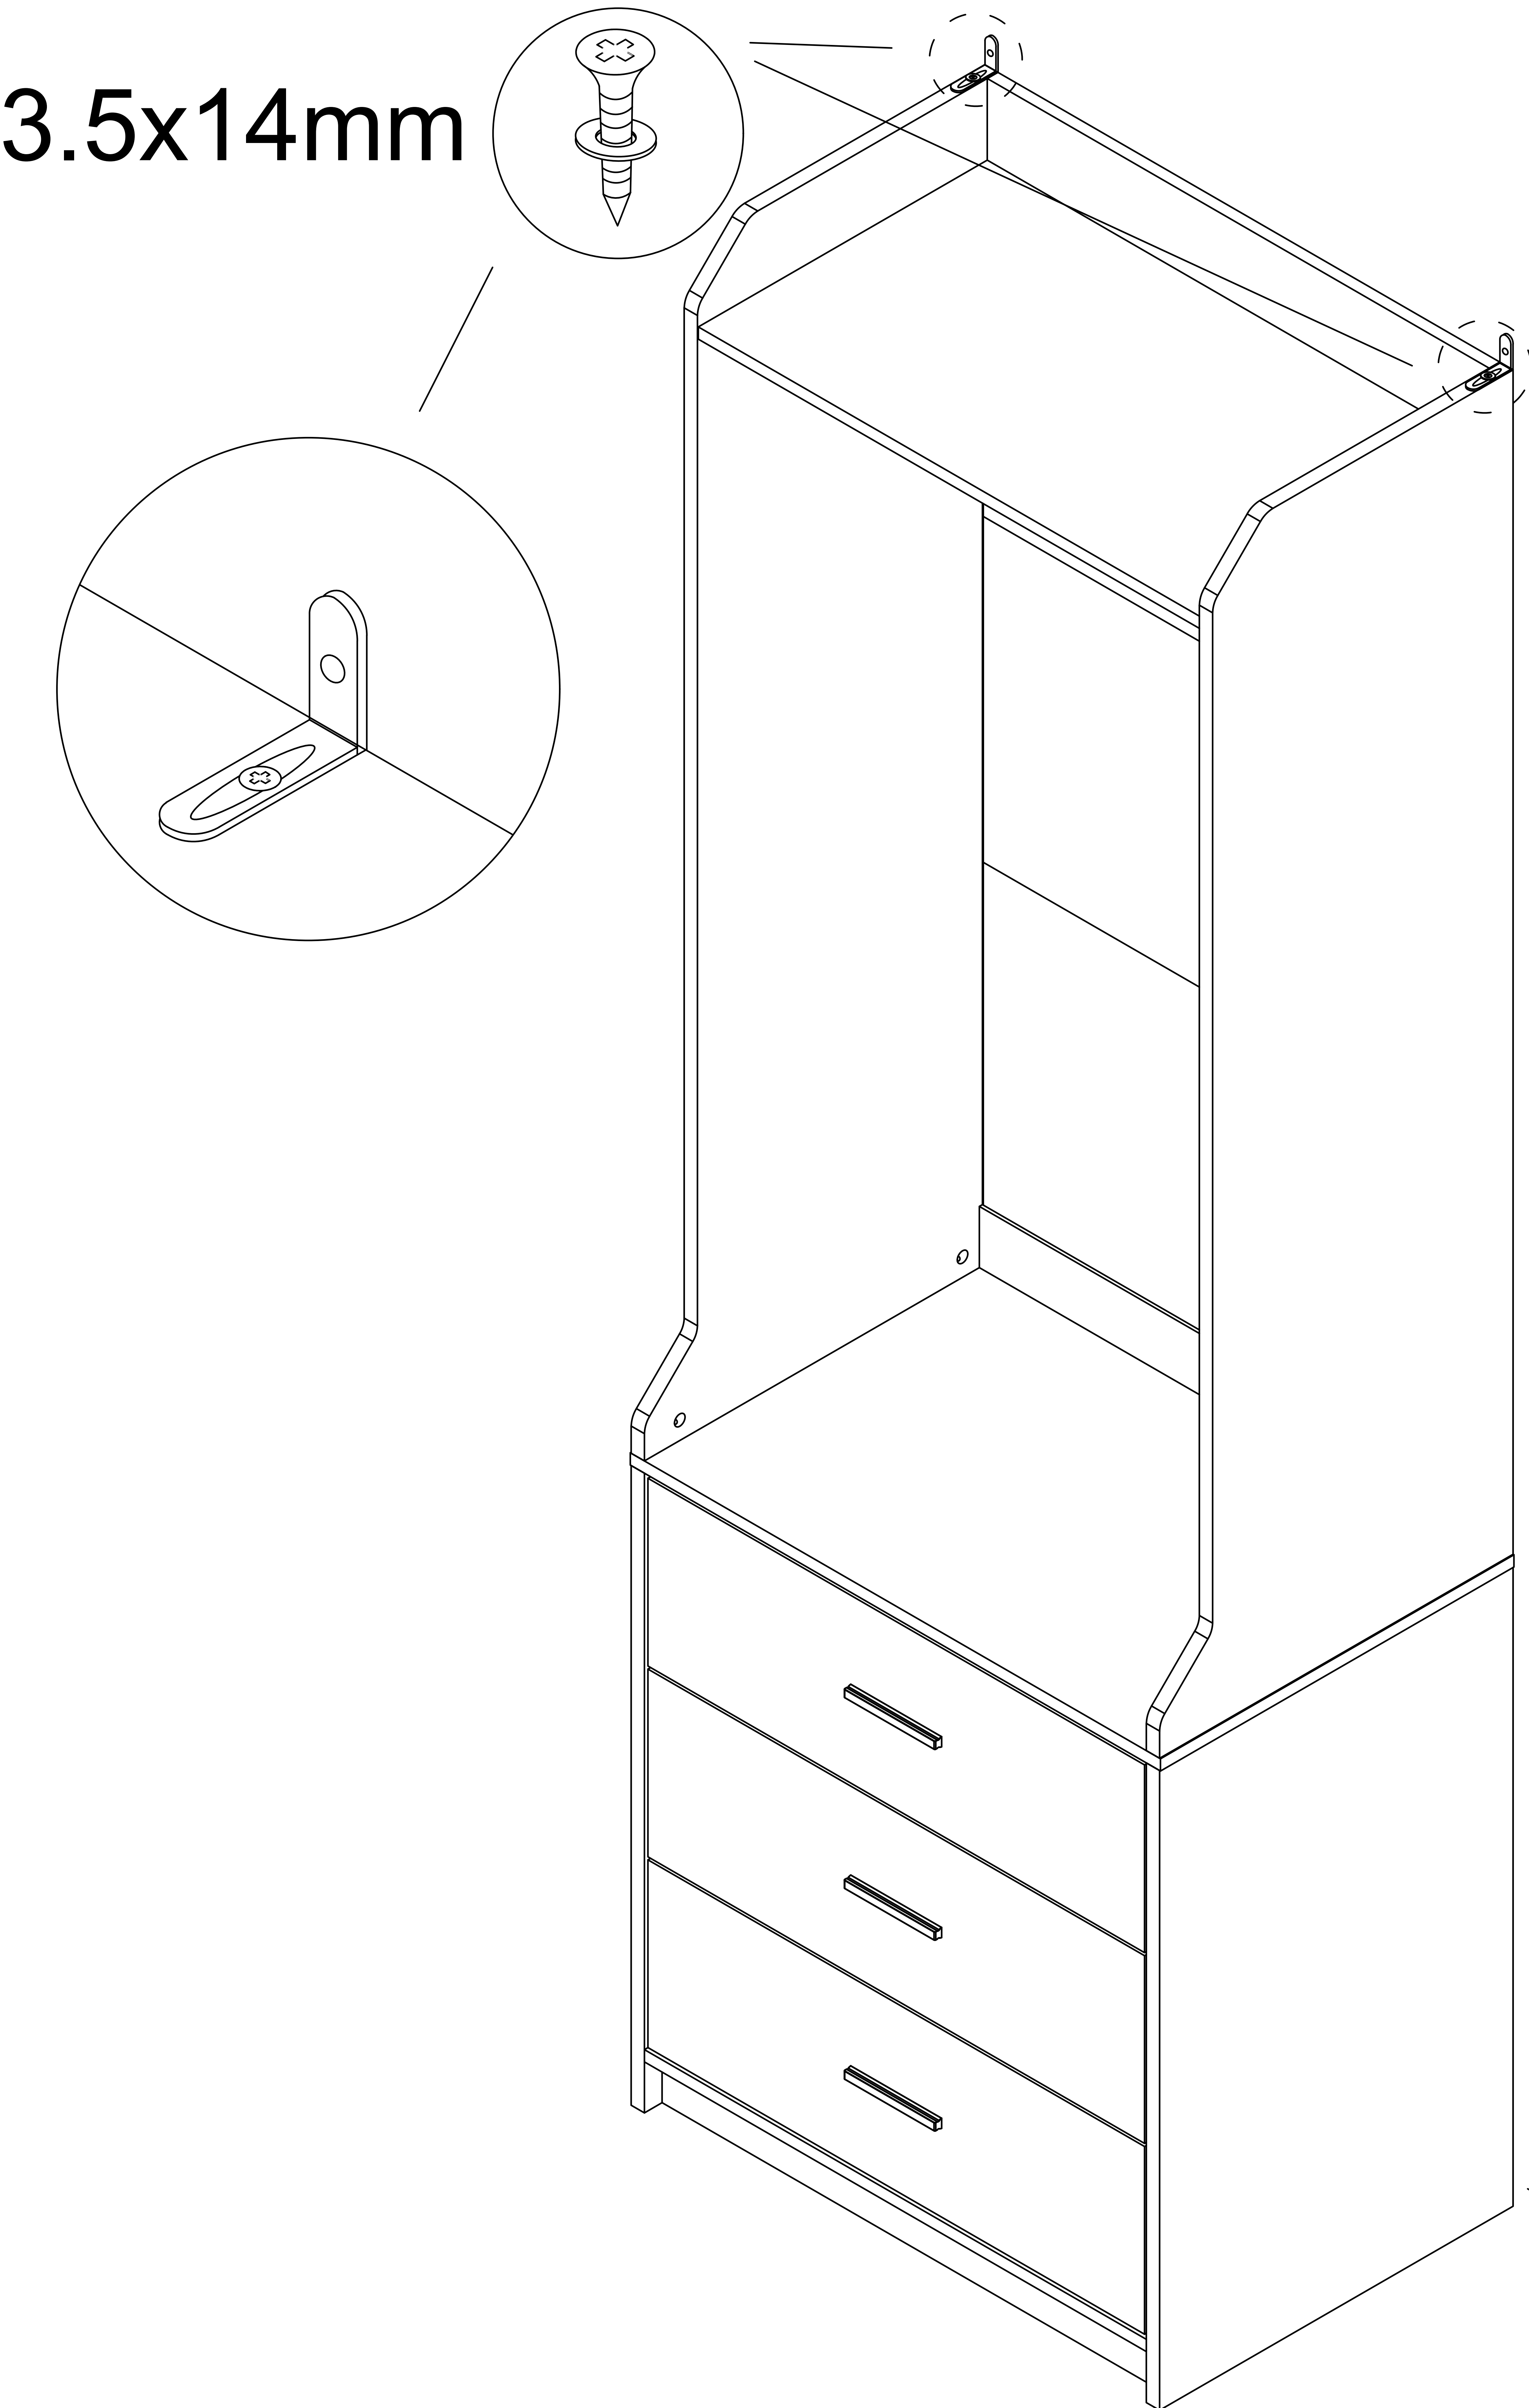


Step 43

9

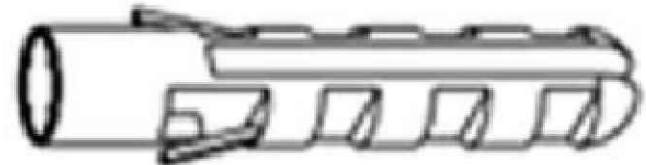
 x2

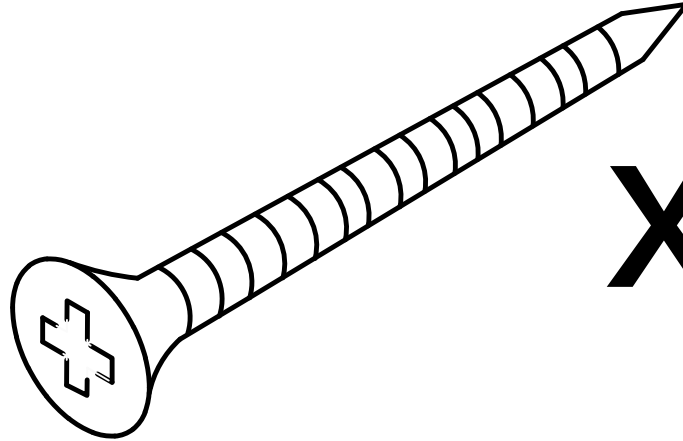 x2

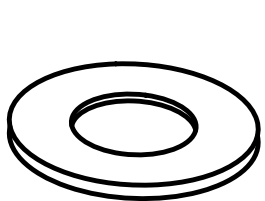
 x2

Drill the hole with an electric drill  
and punch in the colloidal particles

Wall Mount

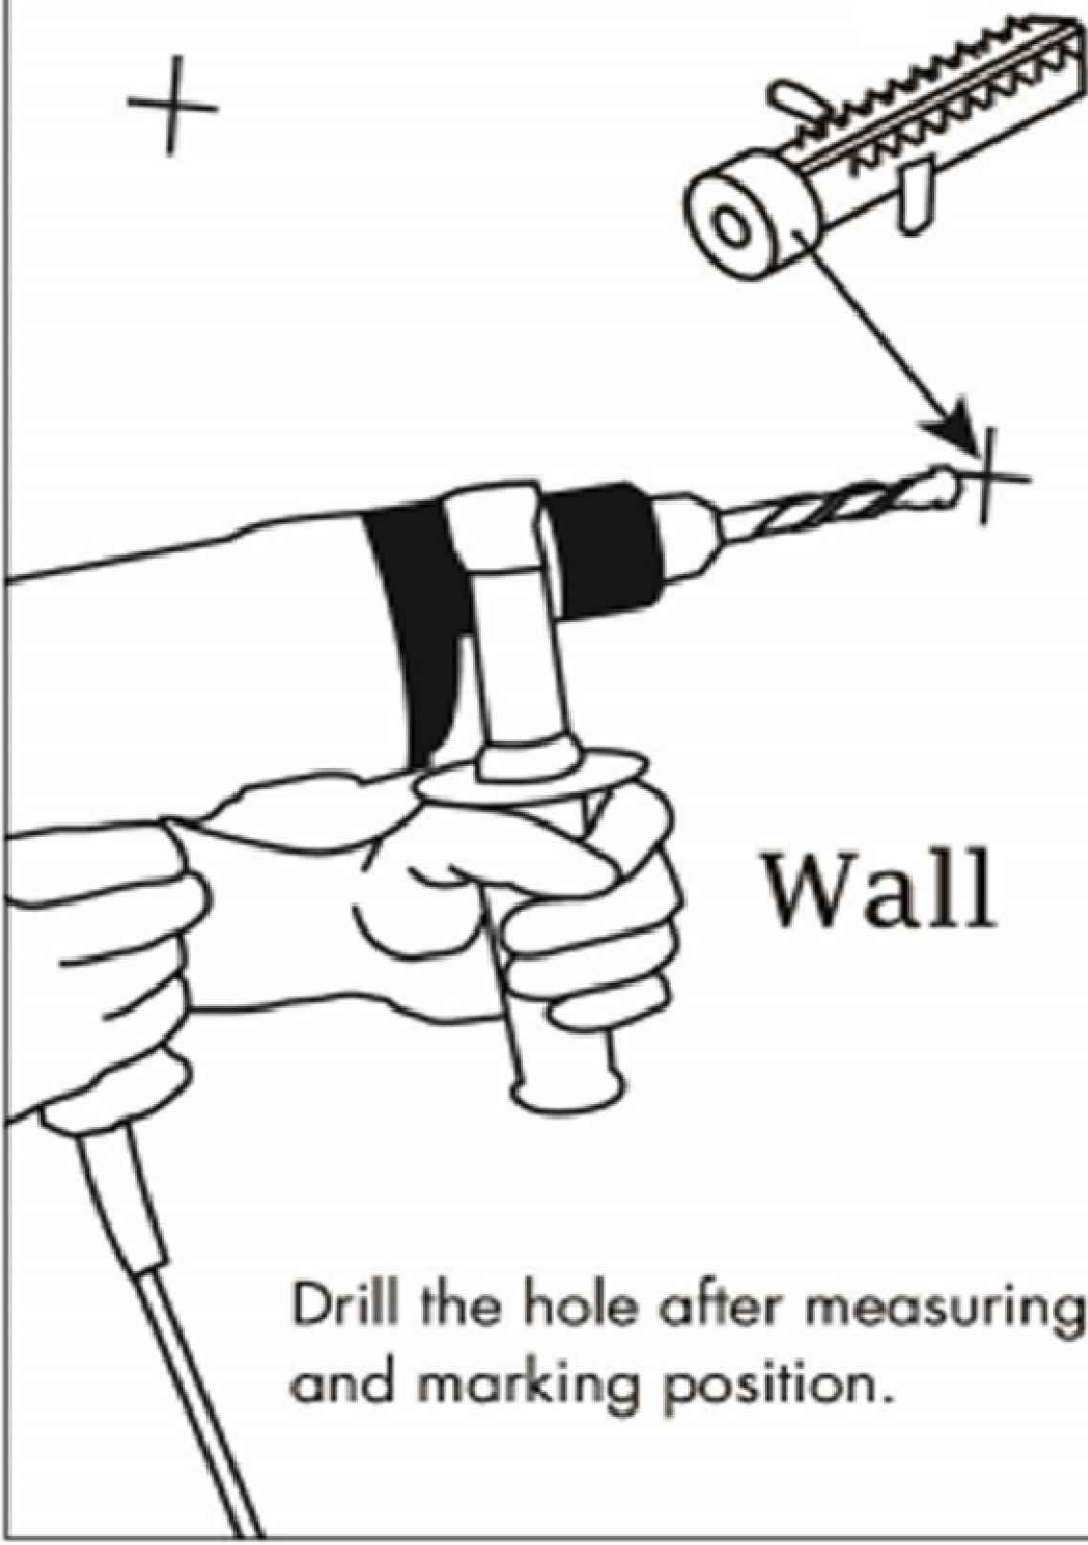



Drill the hole after measuring and marking position.

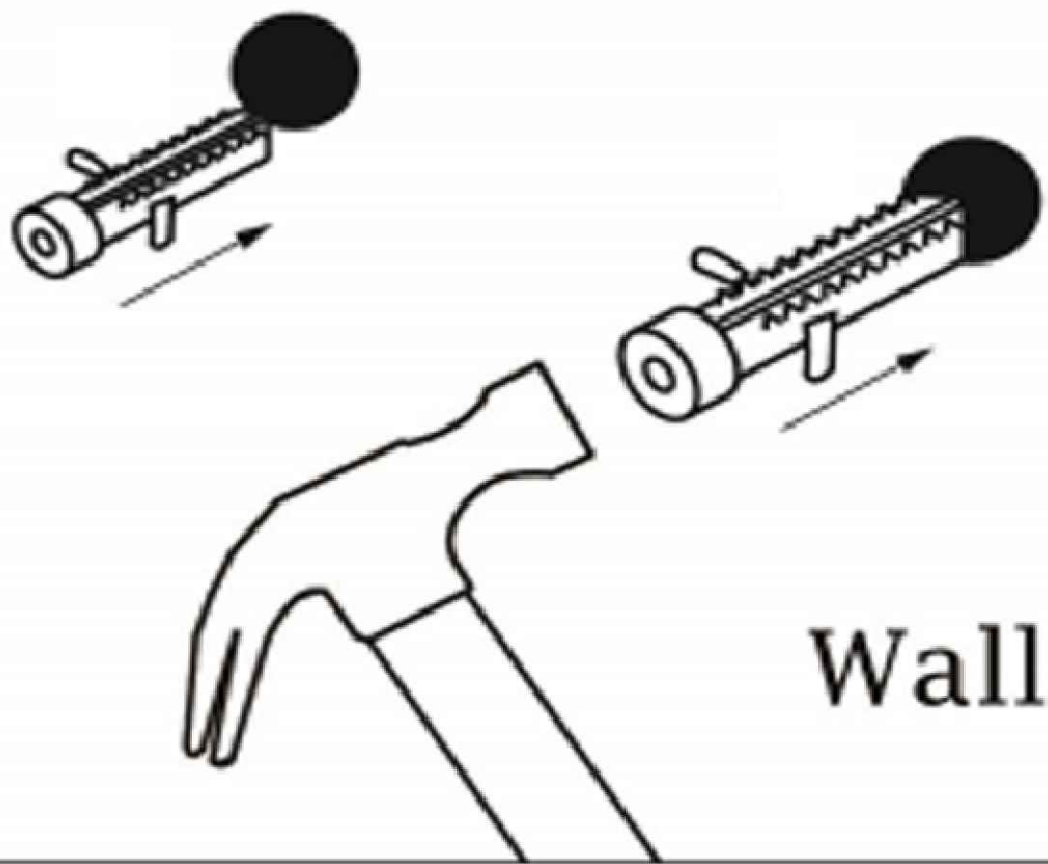

Wall



Wall

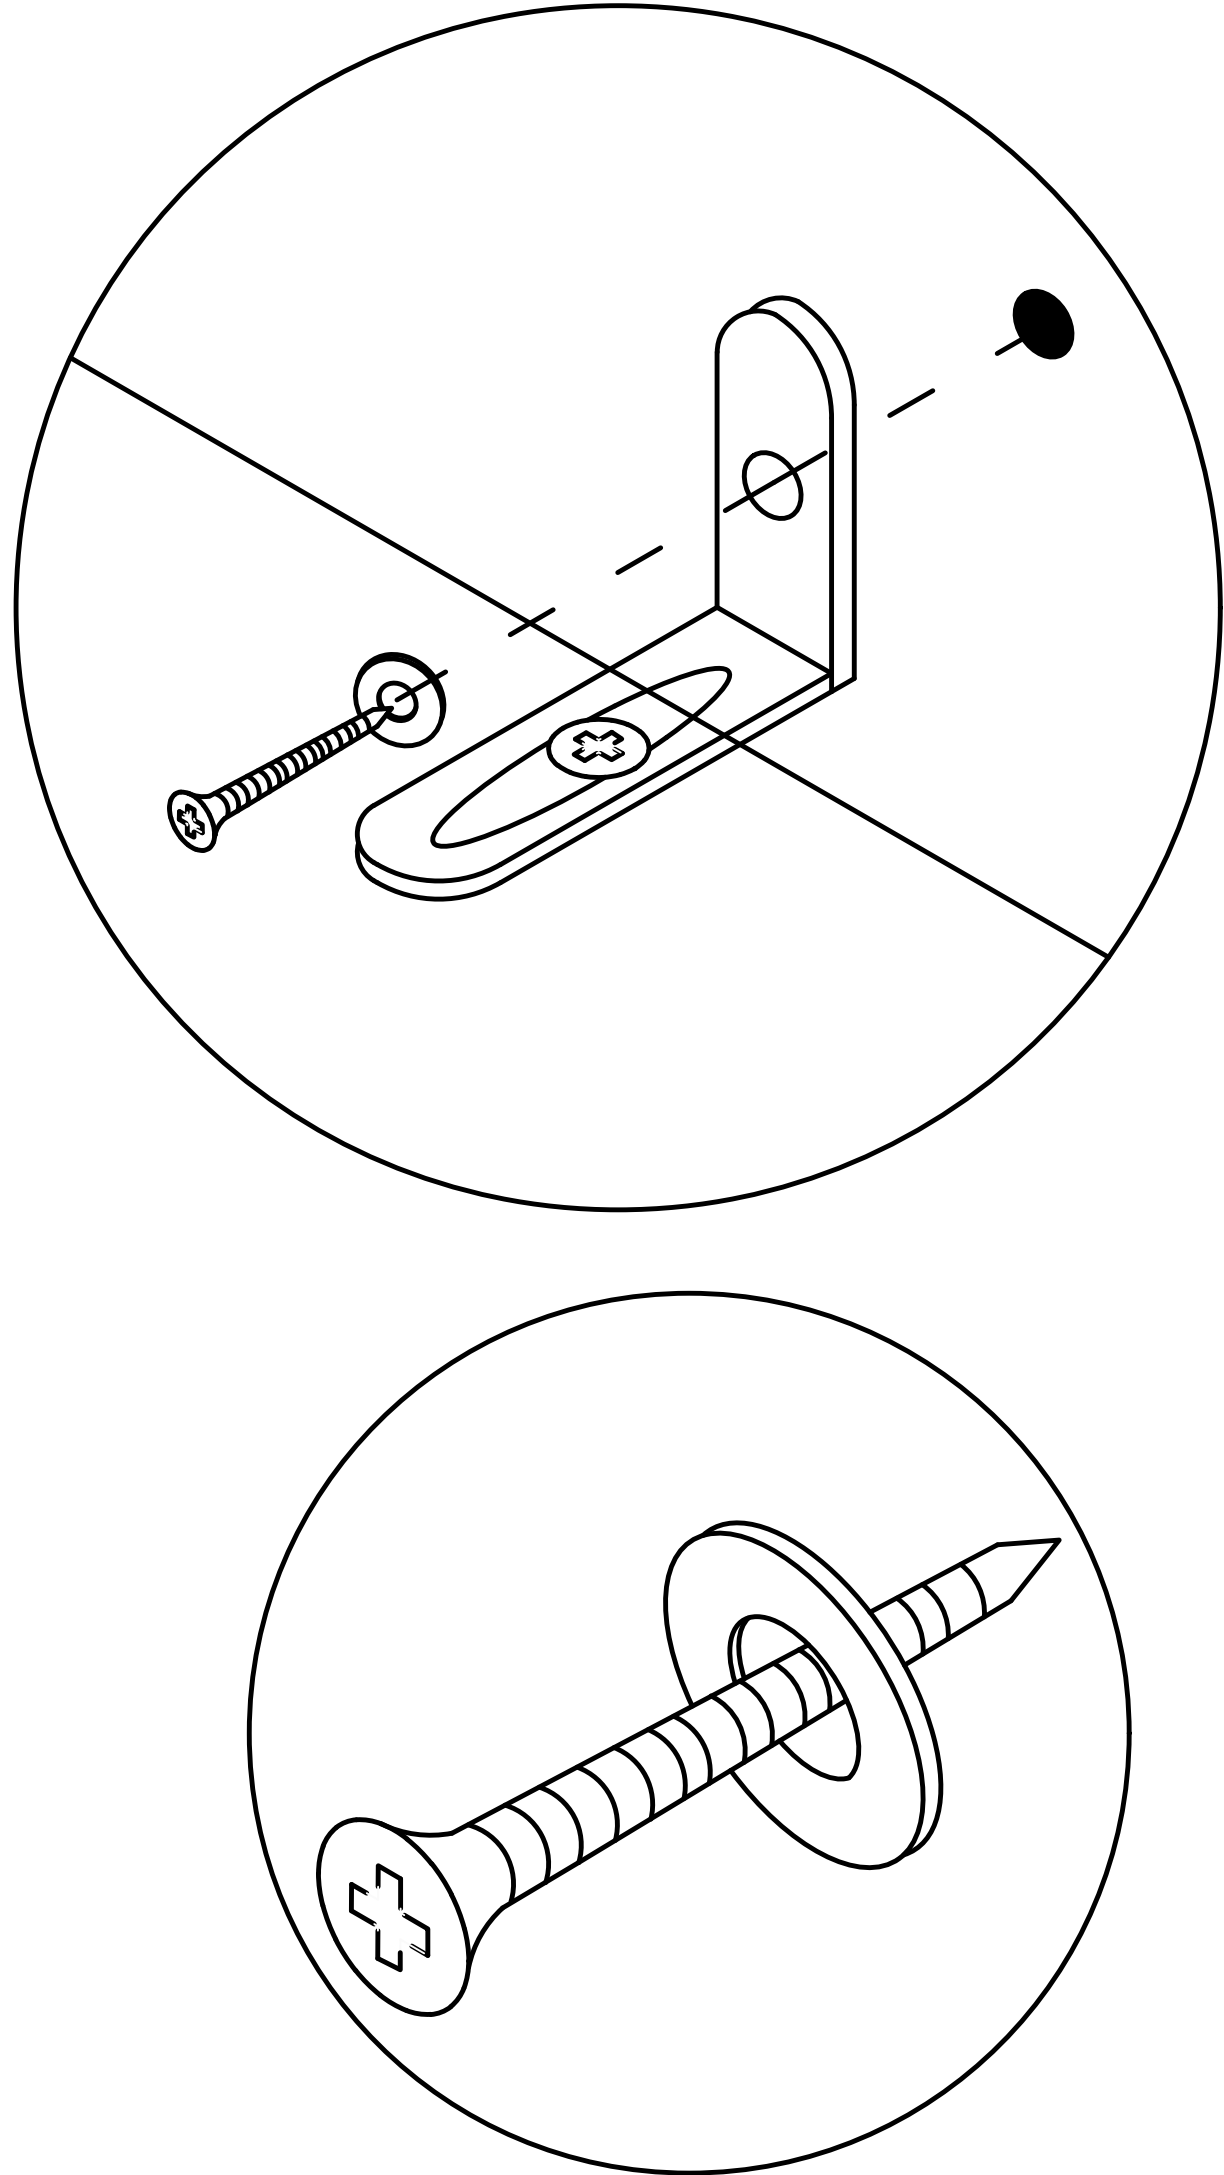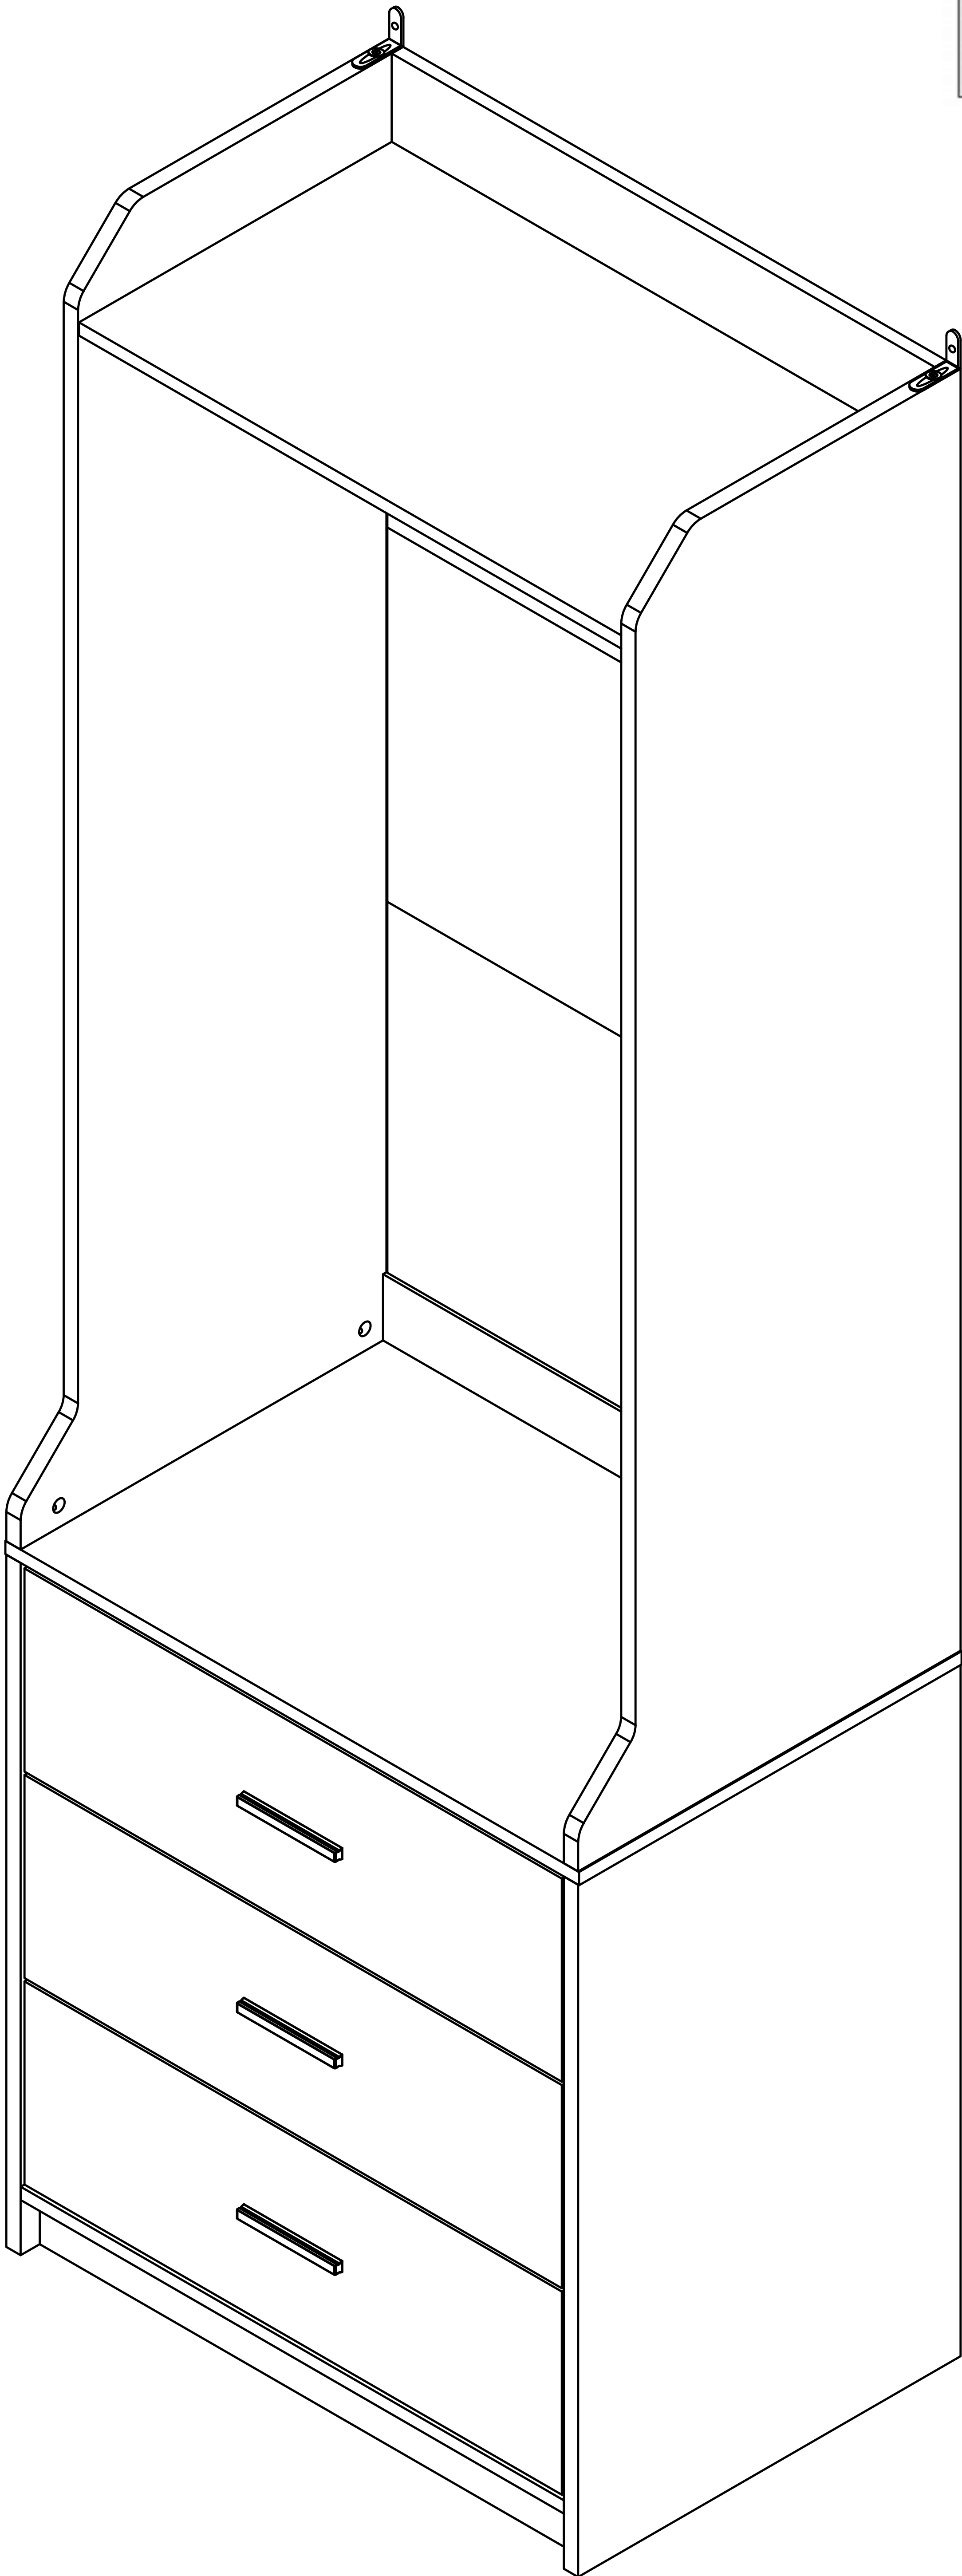

4x45mm

Fix the table to the wall