


TV Stand

Assembly Instruction-please keep for future reference

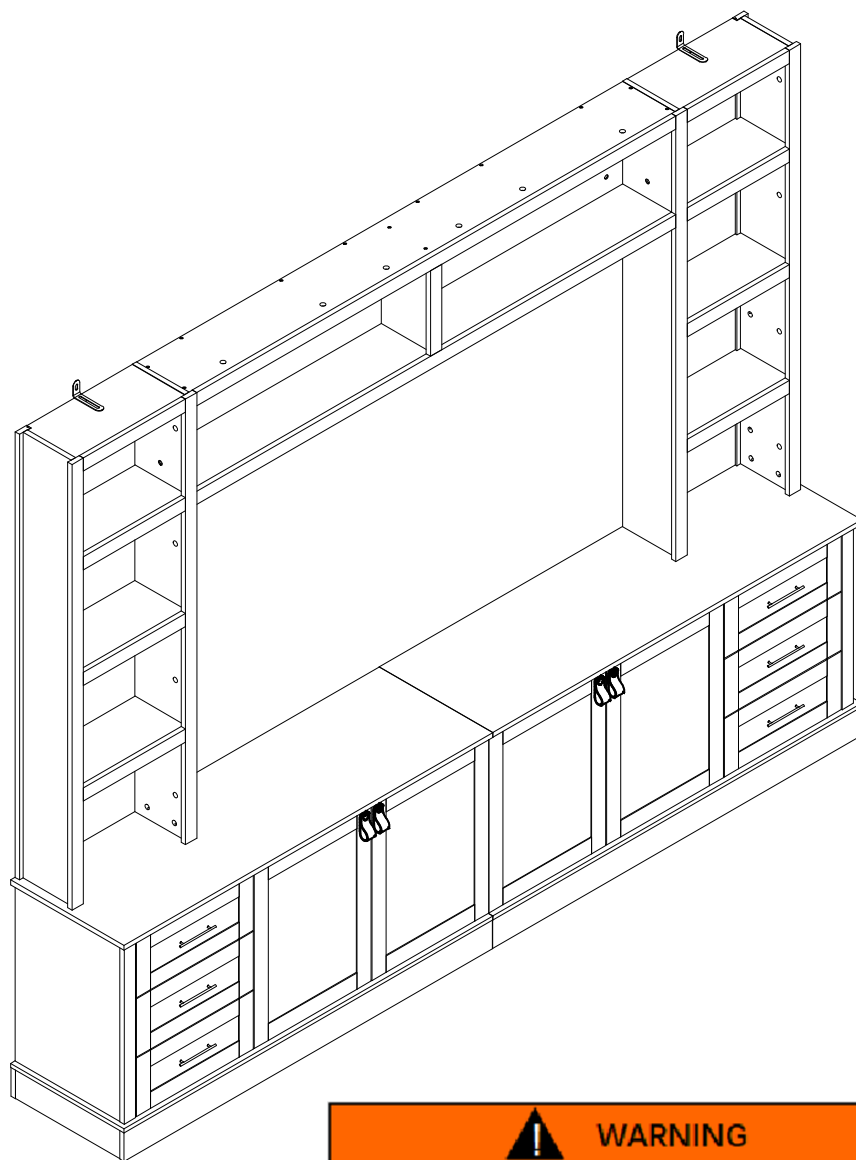

Dimensions

Width-55.12inch
Depth-15.55inch
Height-72.84inch

! WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Important-please read this instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING

In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

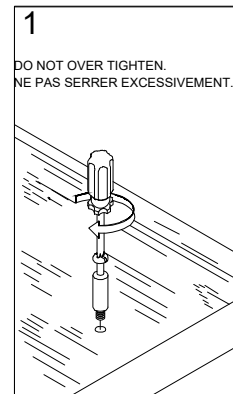

Step 2


Push the male camlock into the entry hole.

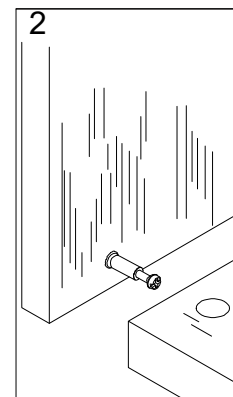

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

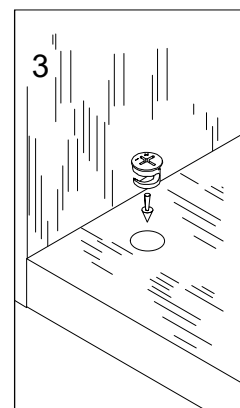


Step 4





Turn the female camlock clockwise with a screwdriver.








You should feel a click when the camlock is locked in place.

The joint is now secure.




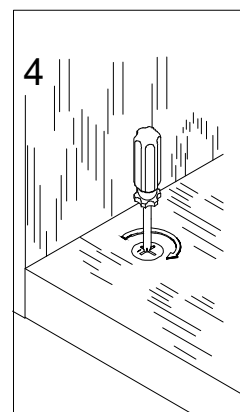




N721P447536

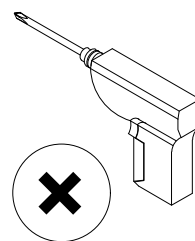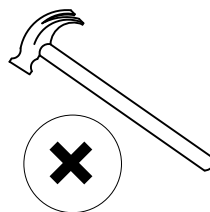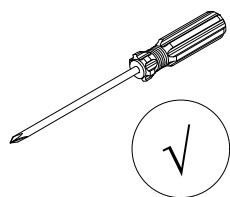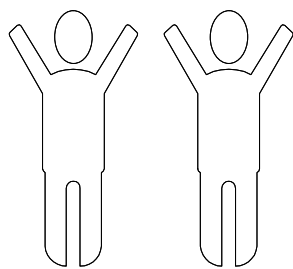










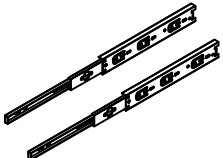





A1  Ø6*35 170PCS	A2  Ø9.5MM 170PCS	B  Ø6*30 142PCS	C  Ø3.5*12 186PCS
D  Ø3.5*40 42PCS	E  Ø3.5*35 36PCS	F  8PCS	G  300mm 6PCS
H  8PCS	I  6PCS	J  4PCS	K  M4*8 12PCS
L  M4*18 4PCS	M  M6*15 8PCS	N  M6*20 8PCS	O  2PCS
P  4PCS	Q  Ø20 170PCS	R  64PCS	S  2PCS

N721P447536




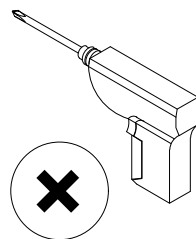
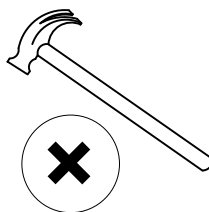
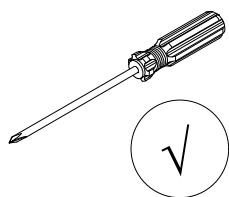
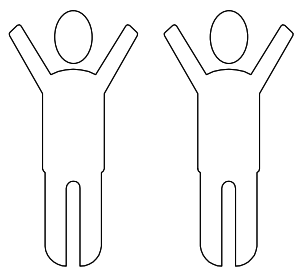


T  Ø8*60 6PCS	U  Ø3.5*55 6PCS	V  2PCS	W  2PCS
Y  20PCS			


















N721P447536

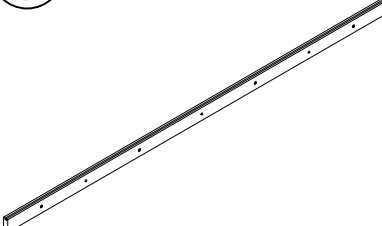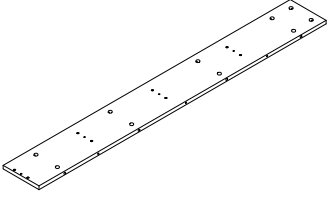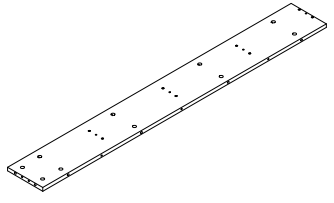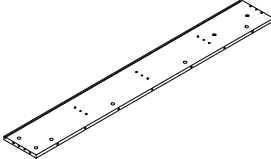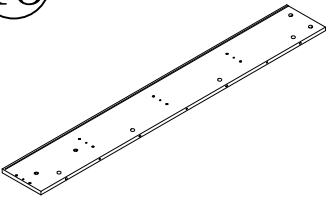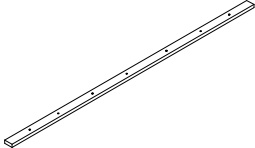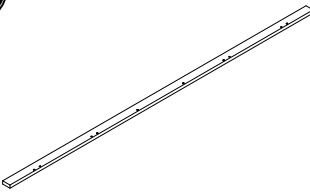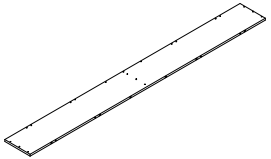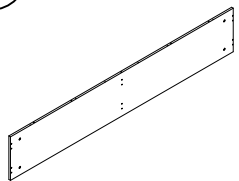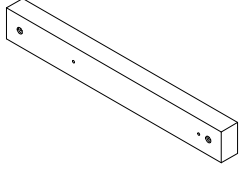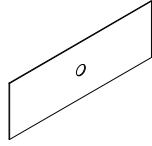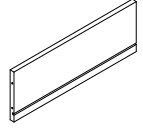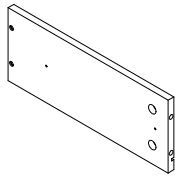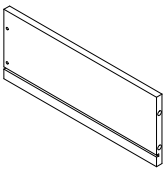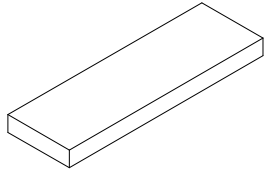⑧ 2PCS  1360x40x15	⑩ 1PC  1360x170x15	⑪ 1PC  1360x170x15
⑫ 1PC  1360x185x15	⑬ 1PC  1360x185x15	⑭ 4PCS  1360x40x15
⑳ 2PCS  1689x40x15	㉒ 2PCS  1714x185x12	㉓ 1PC  1714x289x12
㉓ 6PCS  330x41x25	㉔ 4PCS  807x276.5x3	㉕ 4PCS  368x130x12
㉖ 6PCS  330x130x12	㉗ 6PCS  330x130x12	Hardware Pack*1 






N721P447537

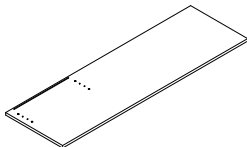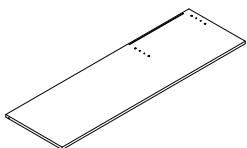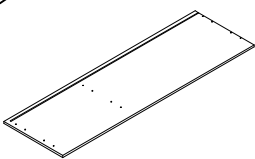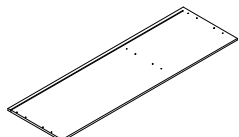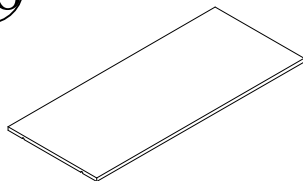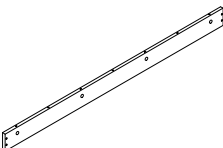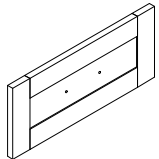
⑮  2PCS 651*381*3	⑯  2PCS 701*381*3	⑳  1PC 1300x400x15
㉓  1PC 1300x400x15	㉔  1PC 1300x400x12	㉕  1PC 1300x400x12
㉖  2PCS 795x341x15	㉙  4PCS 1299x88x15	㉛  6PCS 412x178x15

N721P447538

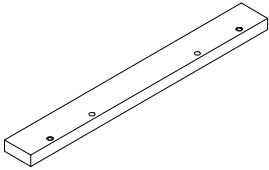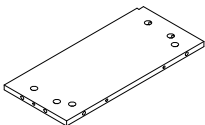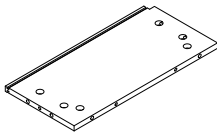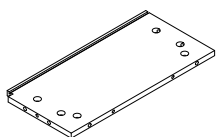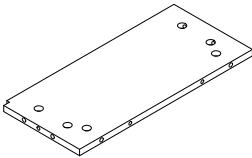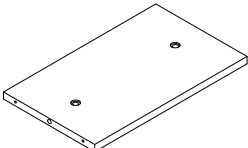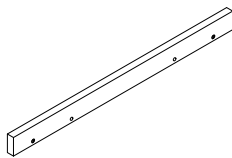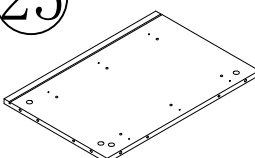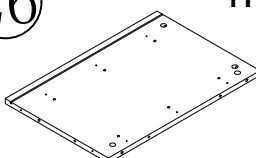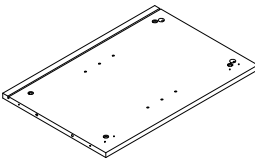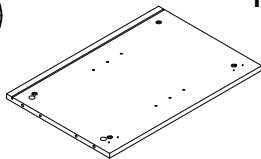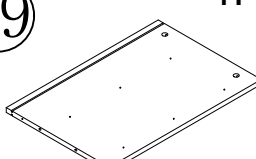
① 8PCS  360x40x15	② 1PC  385x185x12	③ 1PC  385x185x12
④ 2PCS  385x175x12	⑤ 1PC  385x185x12	⑥ 1PC  385x185x12
⑦ 2PCS  385x175x12	⑨ 2PCS  289x173x12	⑰ 2PCS  540x412x15
⑱ 2PCS  540x412x15	⑲ 1PC  289x173x12	⑳ 1PC  261x40x15
㉔ 2PCS  545x40x15	㉕ 1PC  545x370x15	㉖ 1PC  545x370x15
㉗ 1PC  545x370x15	㉘ 1PC  545x370x15	㉙ 1PC  545x370x15

N721P447538

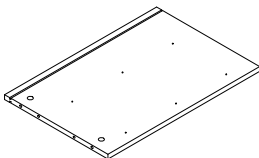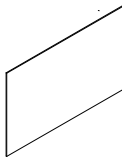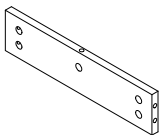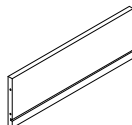③0  545x370x15 1PC	③7  276.5*450*3 4PCS	④0  368x88x15 4PCS
④2  368x130x12 2PCS	④5  376*325*3 6PCS	

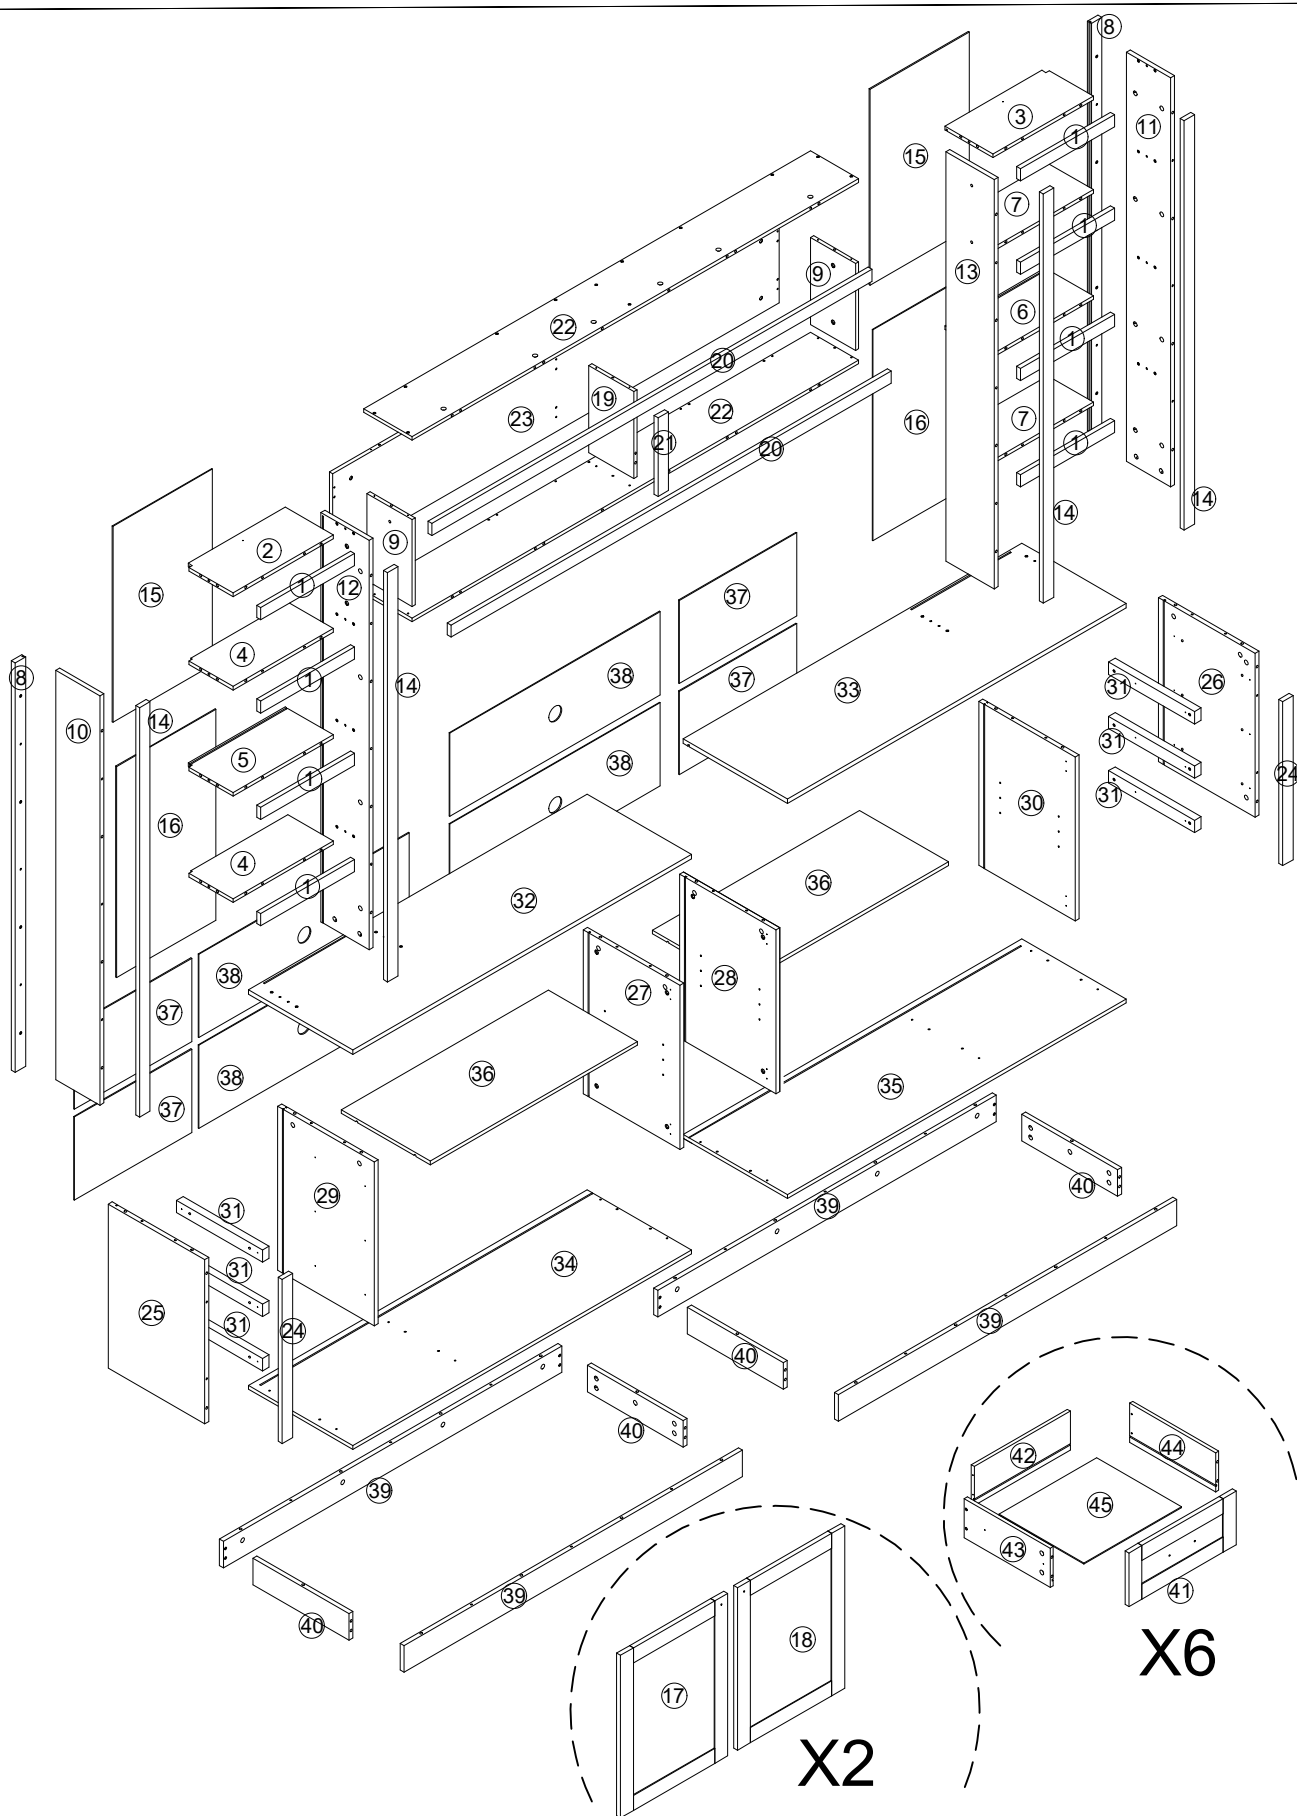


STEP1

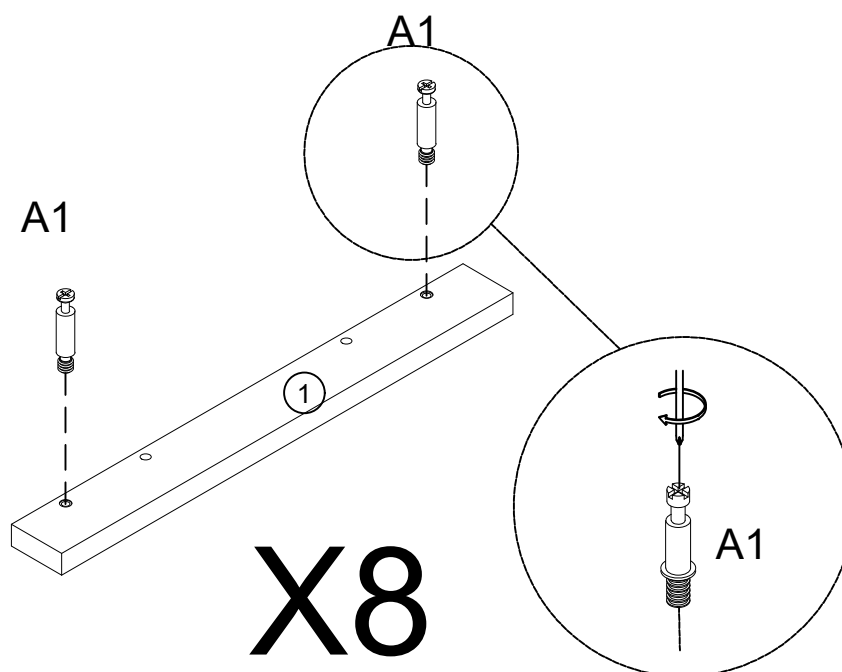

A1x16PCS


STEP2

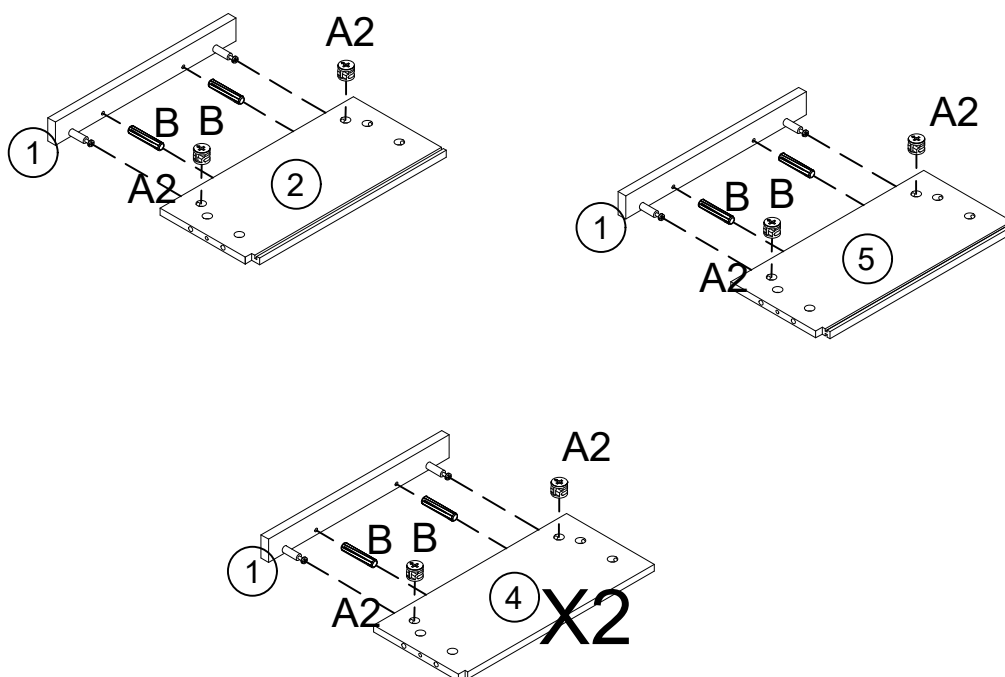


A2x8PCS




Bx8PCS

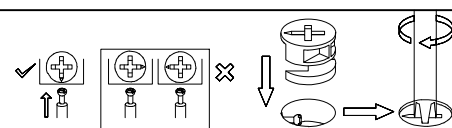


STEP3

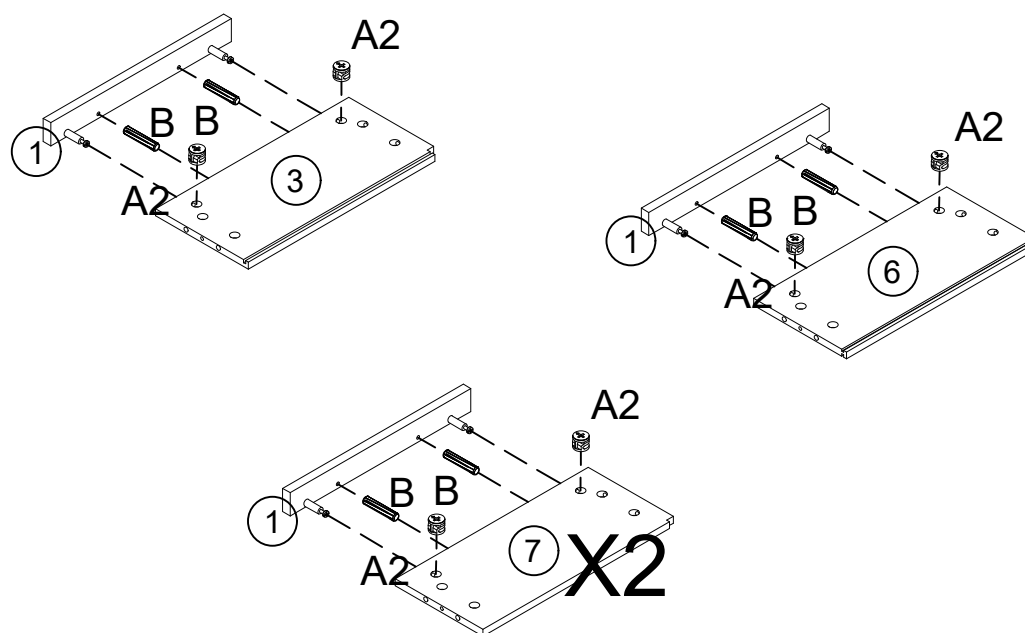

	A2x8PCS
	Bx8PCS

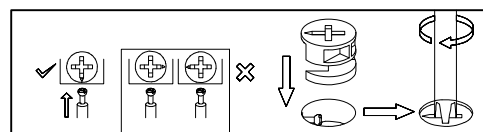


STEP4

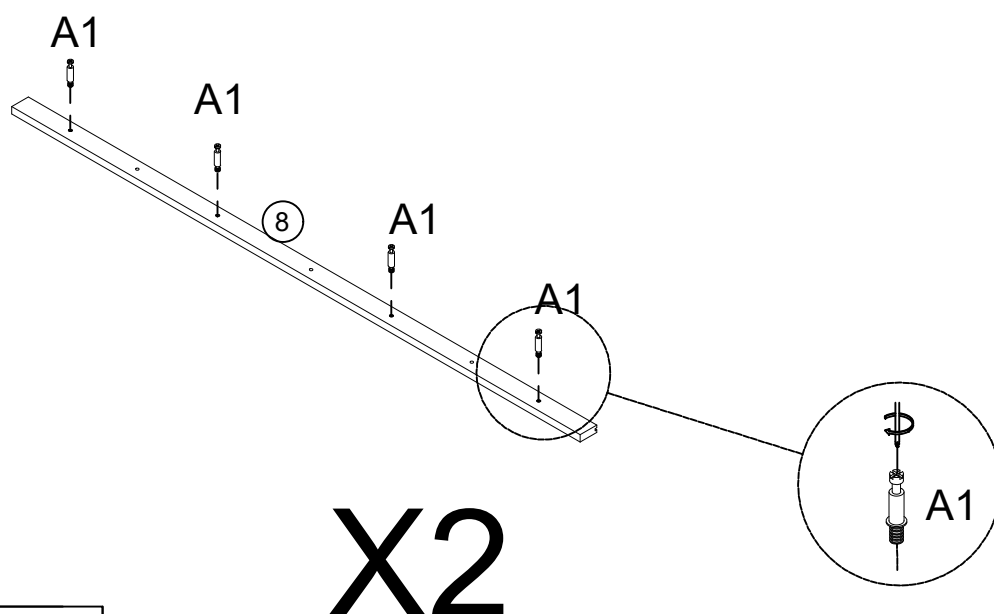


	A1x8PCS
--	---------

STEP5

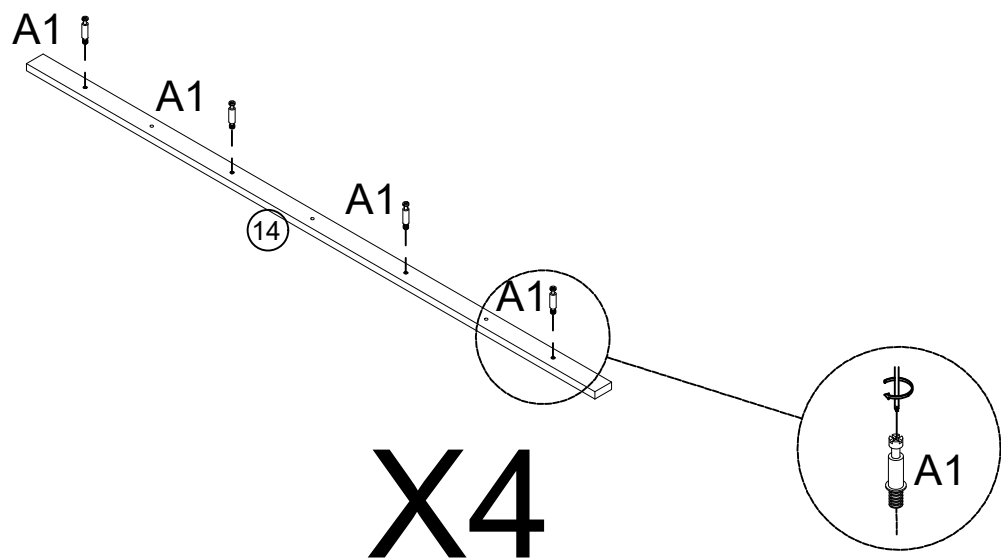


A1x16PCS

STEP6

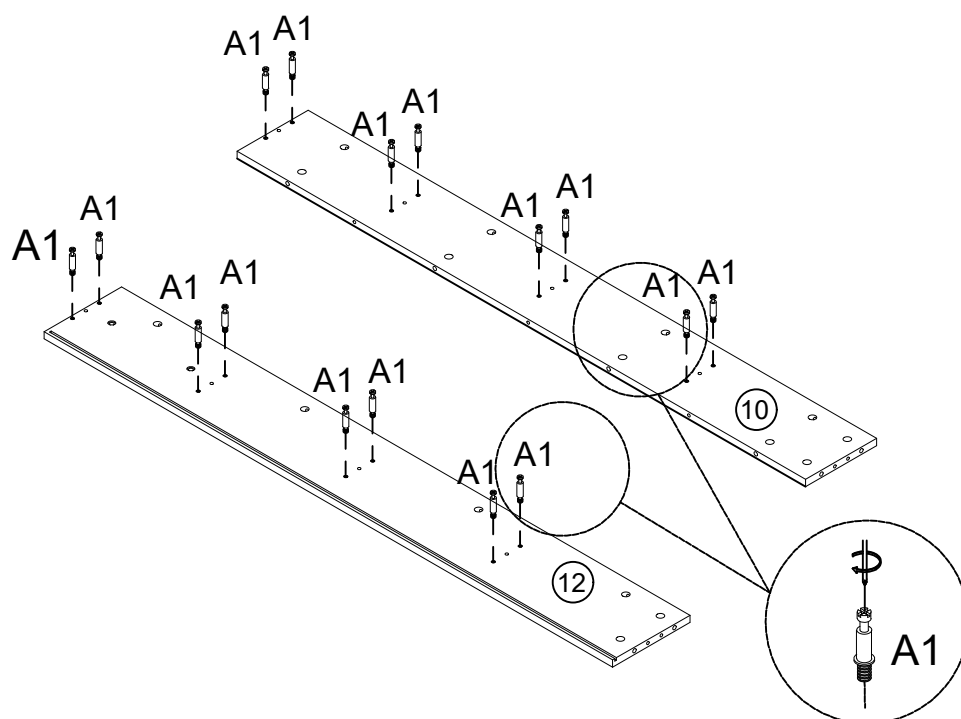


A1x16PCS

STEP7

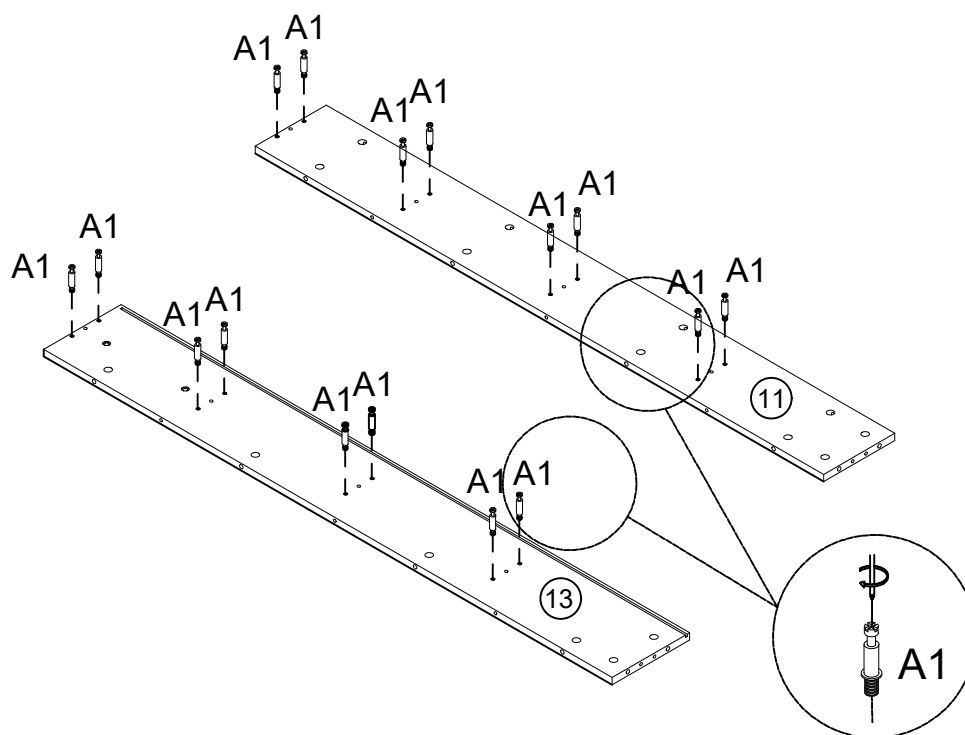

A1x16PCS


STEP8

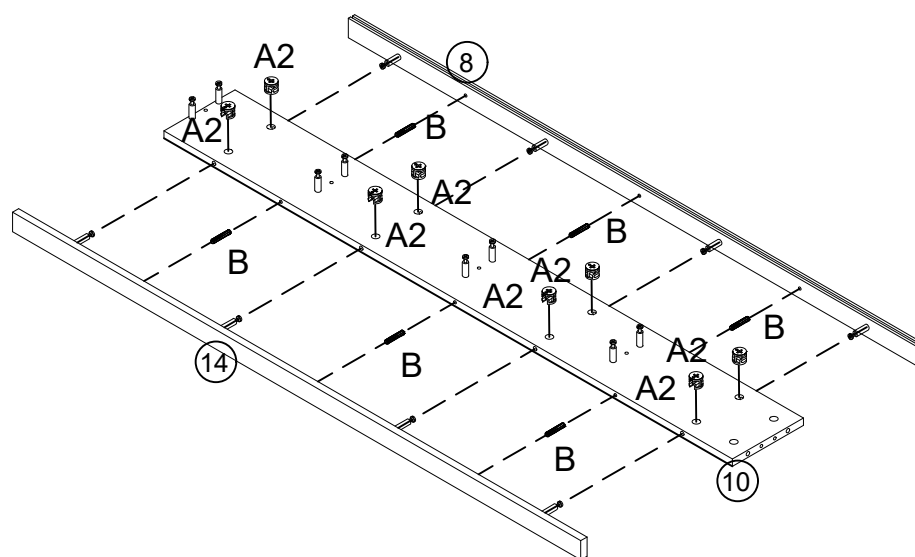


A2x8PCS




Bx6PCS

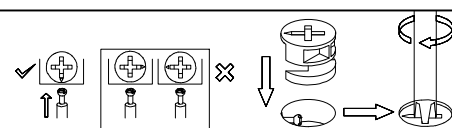


STEP9

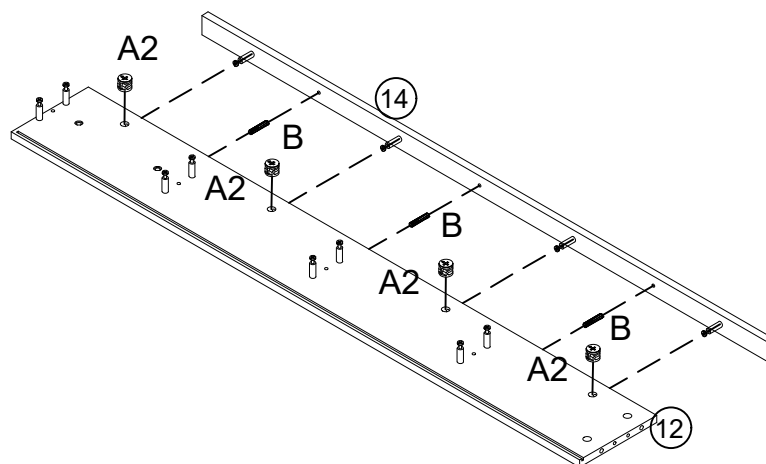

	A2x4PCS
	Bx3PCS

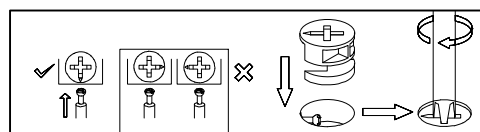


STEP10

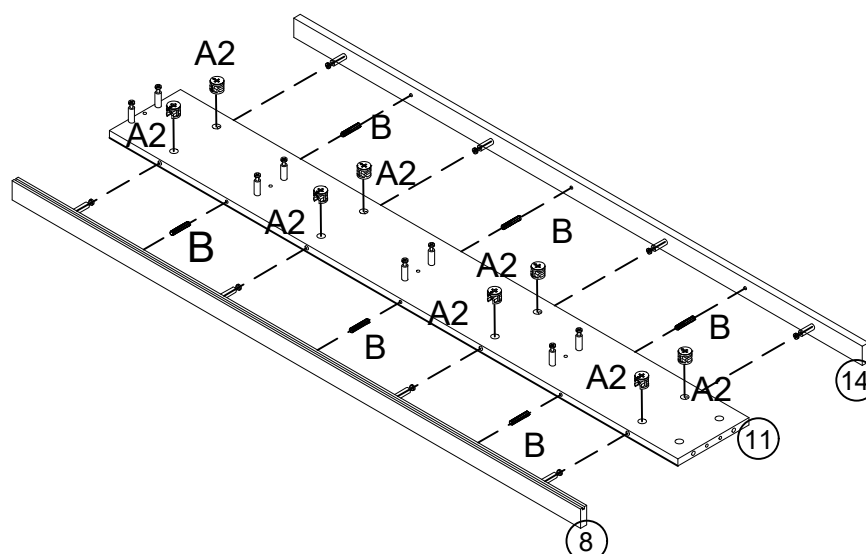


	A2x8PCS
	Bx6PCS


STEP11

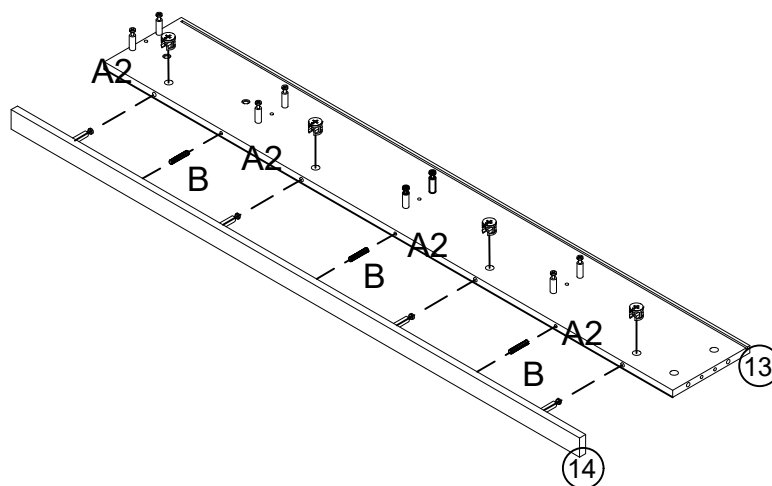


	A2x4PCS
	Bx3PCS

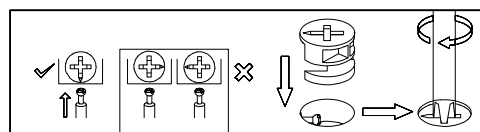


STEP12

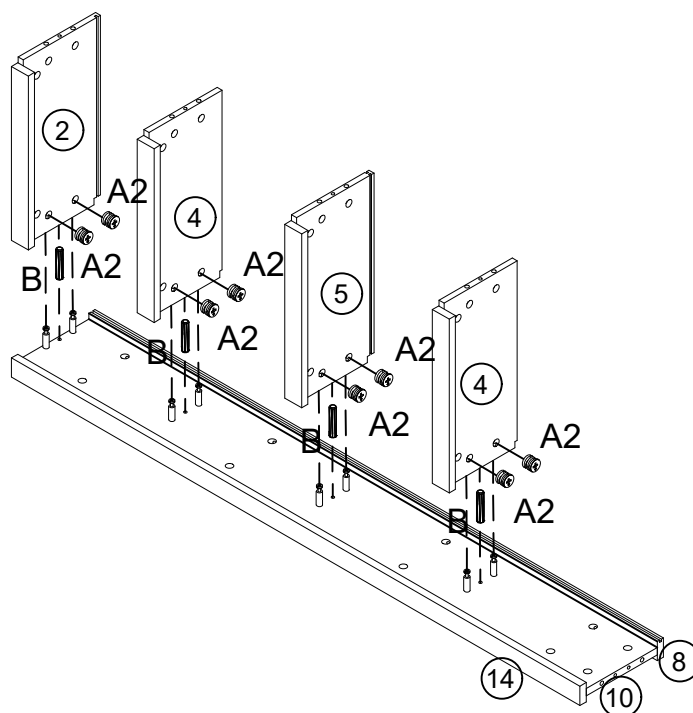


	A2x8PCS
	Bx4PCS

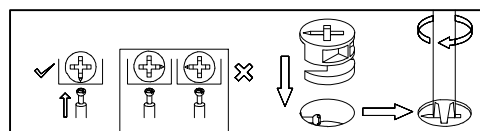


STEP13

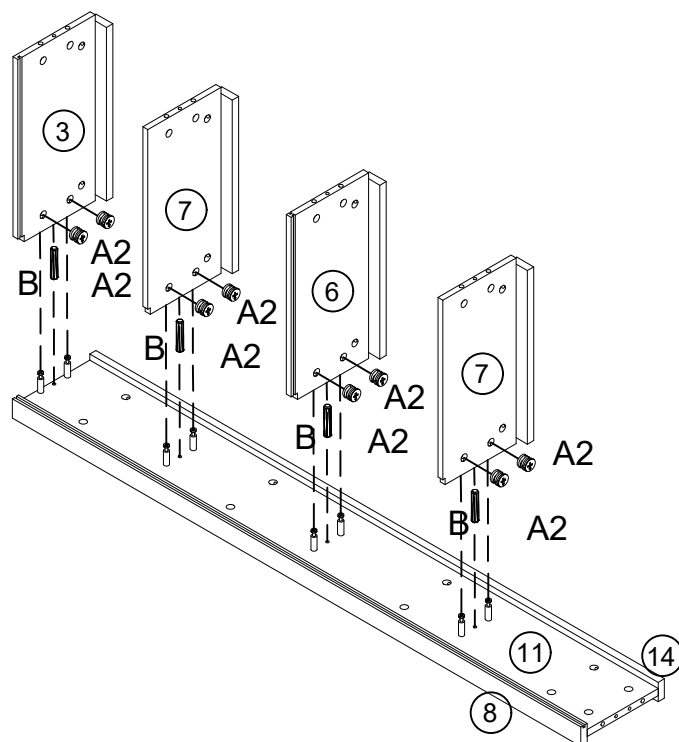


	A2x8PCS
	Bx4PCS

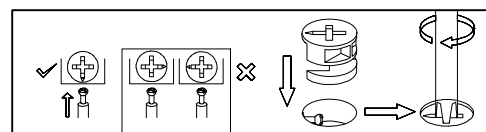


STEP14

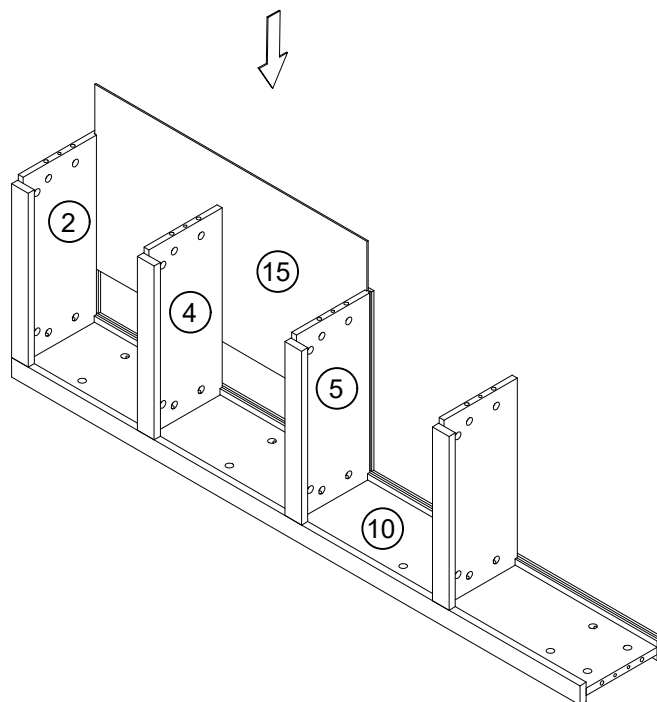


STEP15

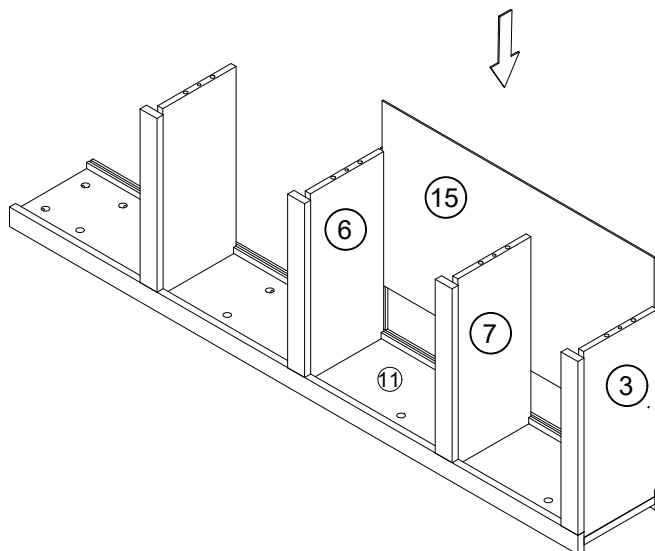


STEP16

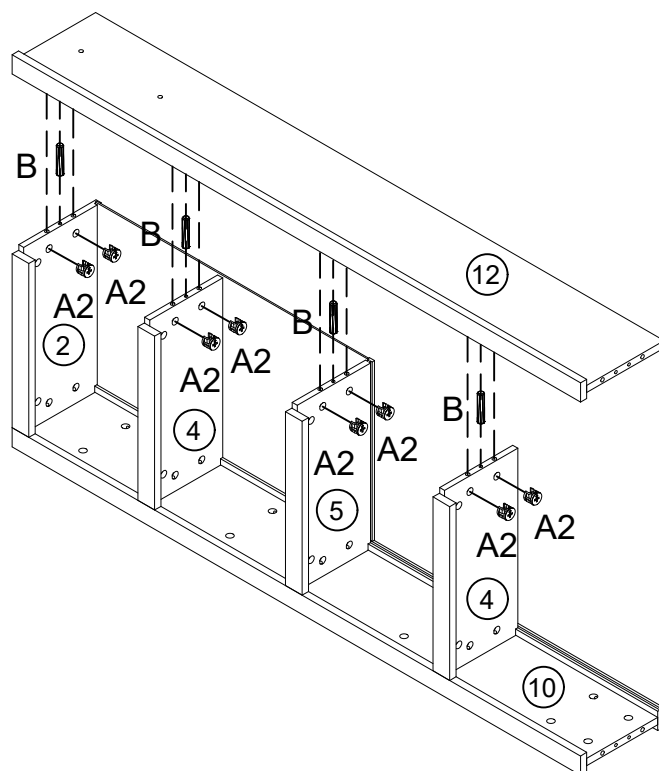


	A2x8PCS
	Bx4PCS

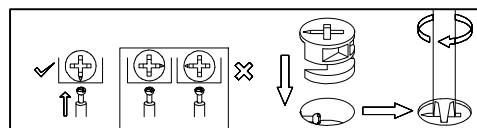


STEP17

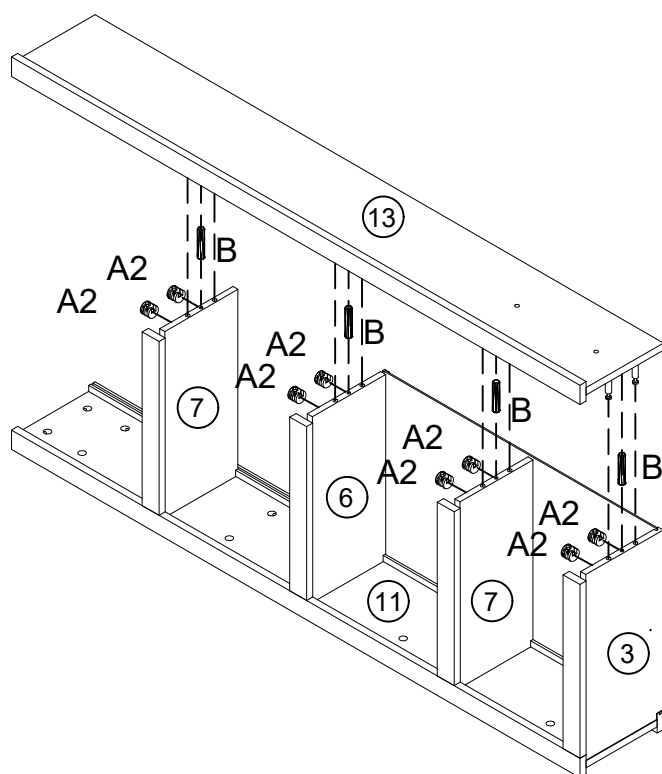


	A2x8PCS
	Bx4PCS

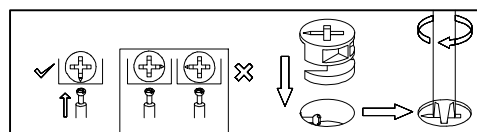


STEP18

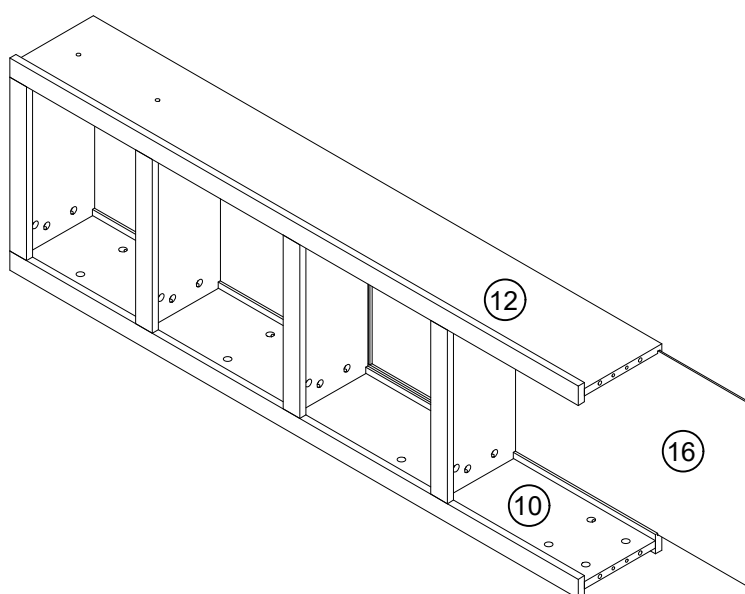

STEP19

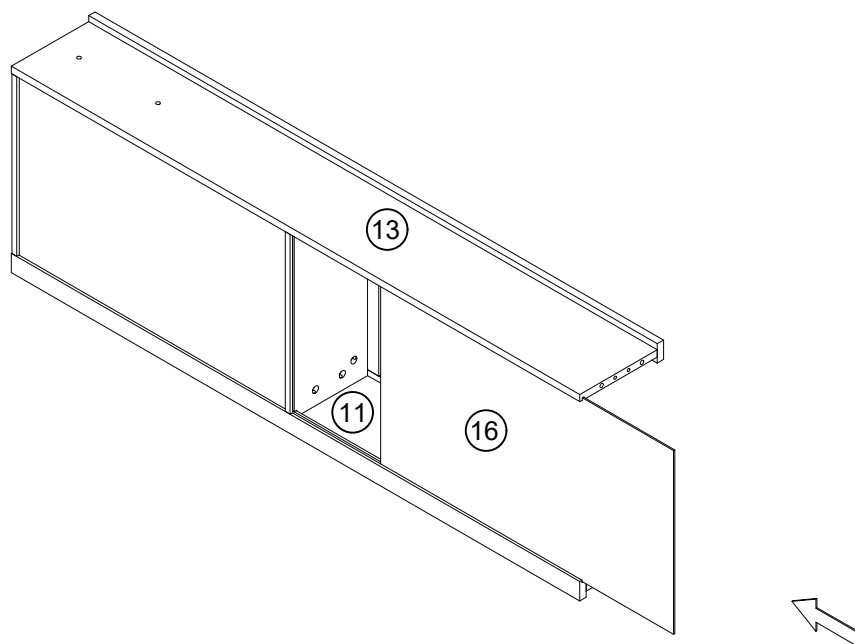


STEP20

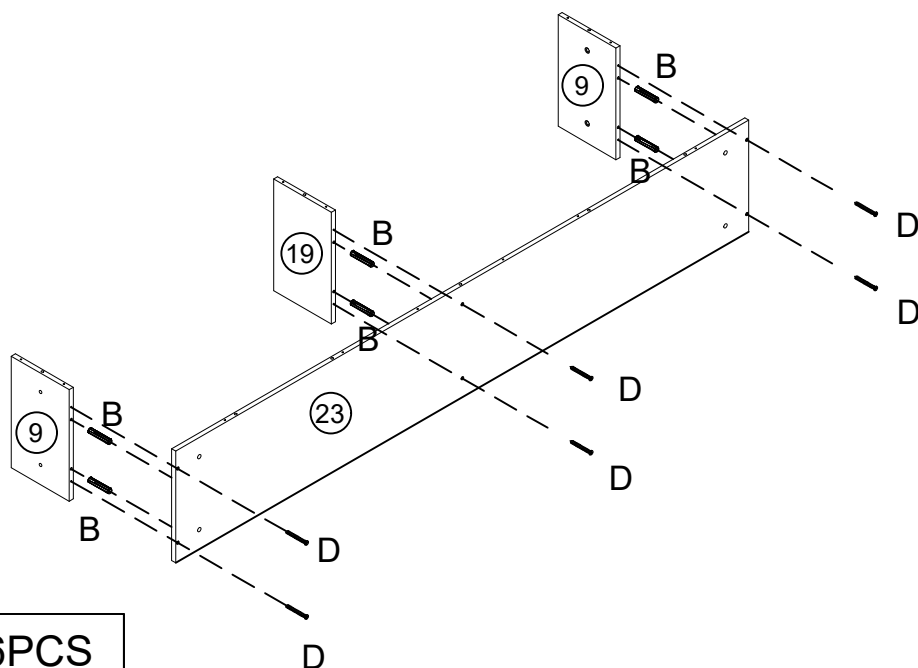


	Dx6PCS
	Bx6PCS

STEP21

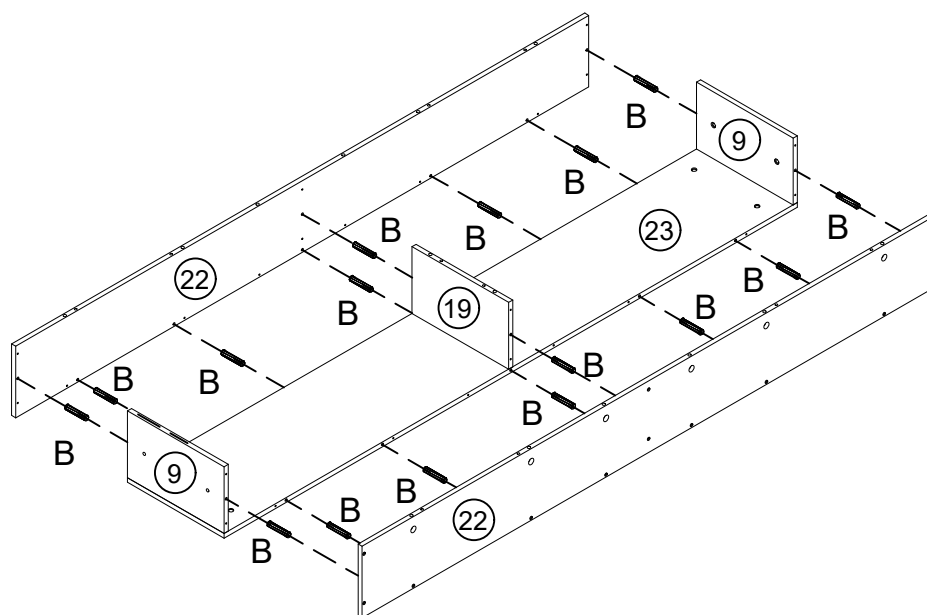


Bx16PCS

STEP22

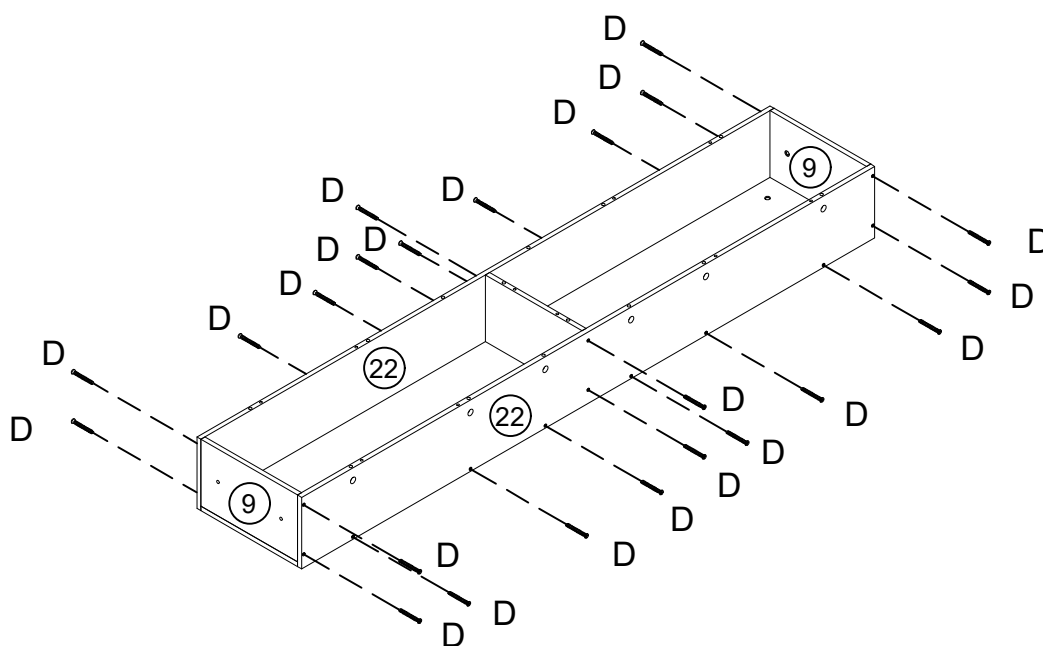


Dx24PCS

STEP23

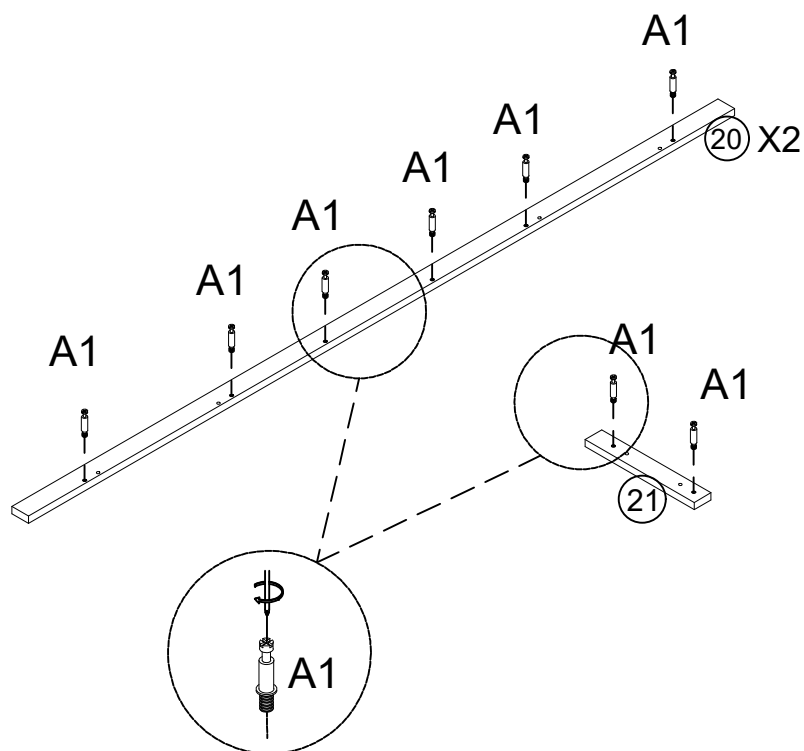

A1x14PCS


STEP24

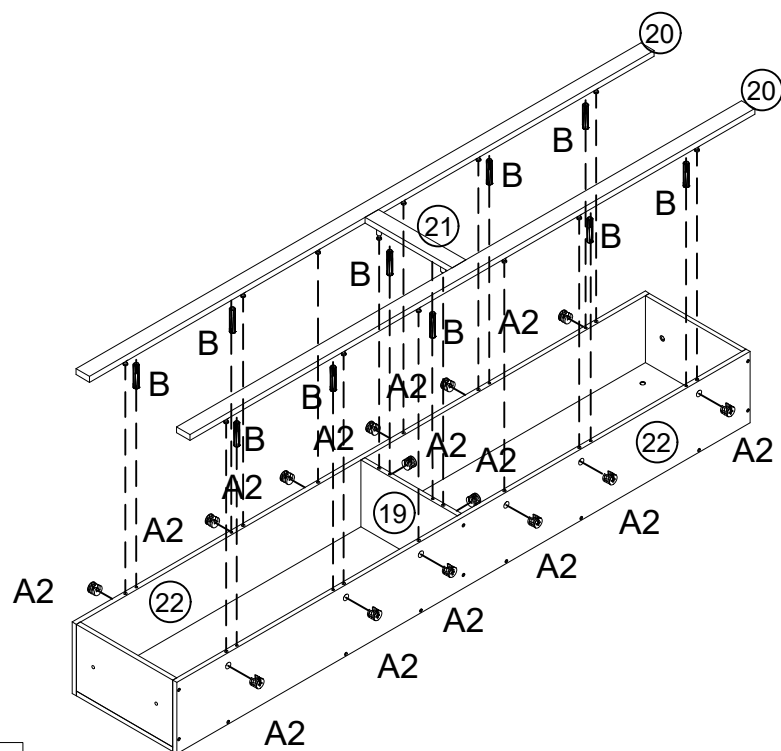


A2x14PCS



Bx10PCS

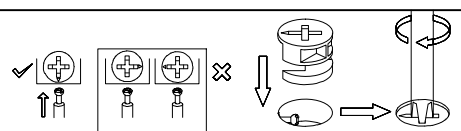

STEP25

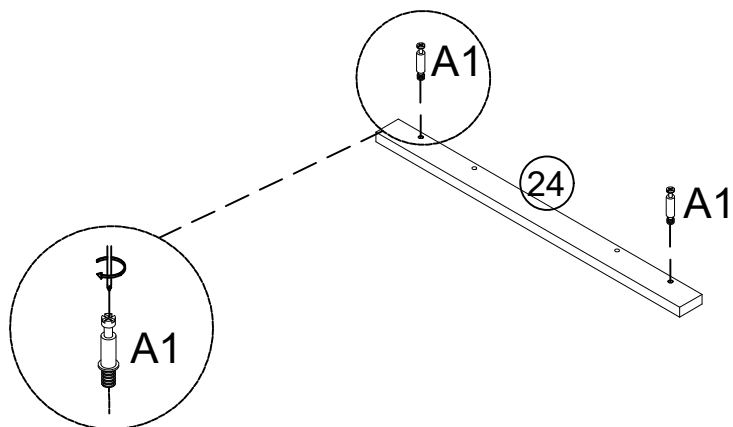


X2



A1x4PCS


STEP26

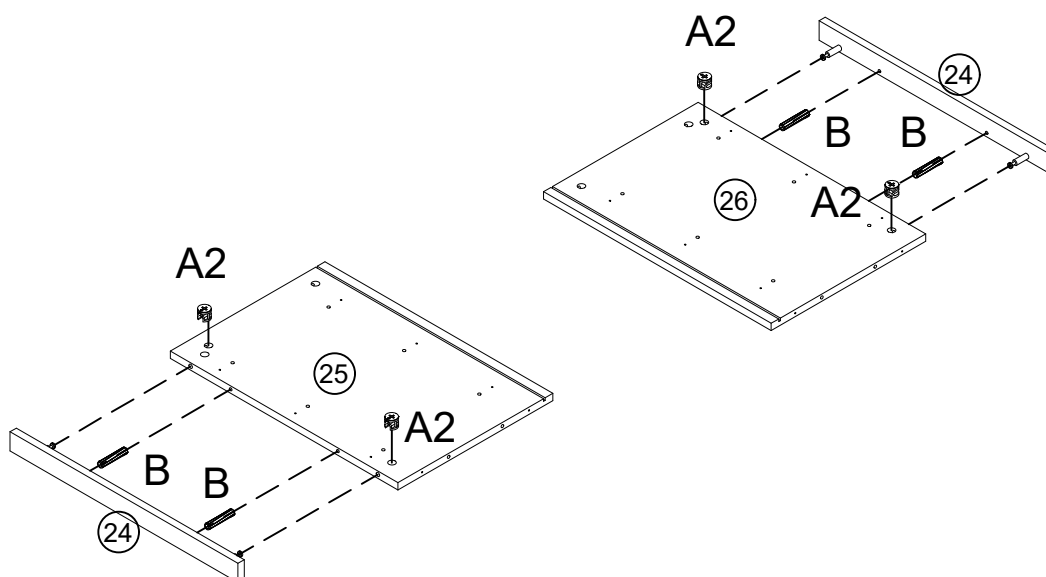


A2x4PCS



Bx4PCS

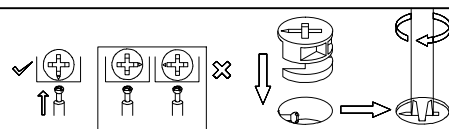


STEP27

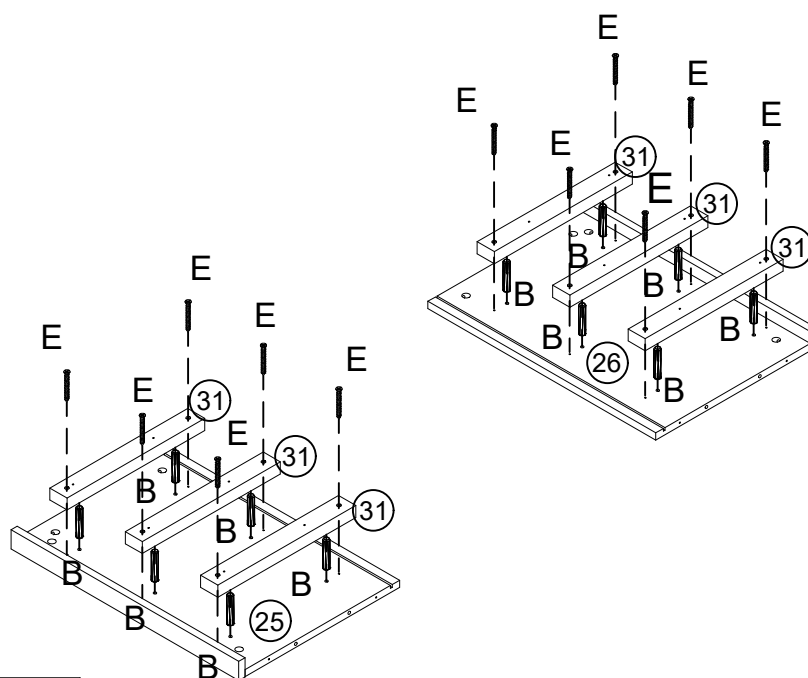


	Ex12PCS
	Bx12PCS

STEP28

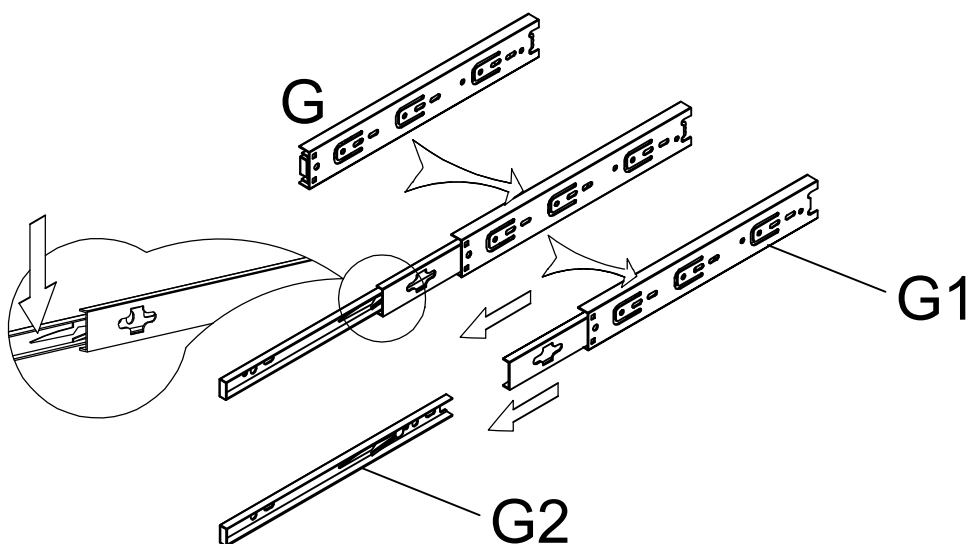


STEP29

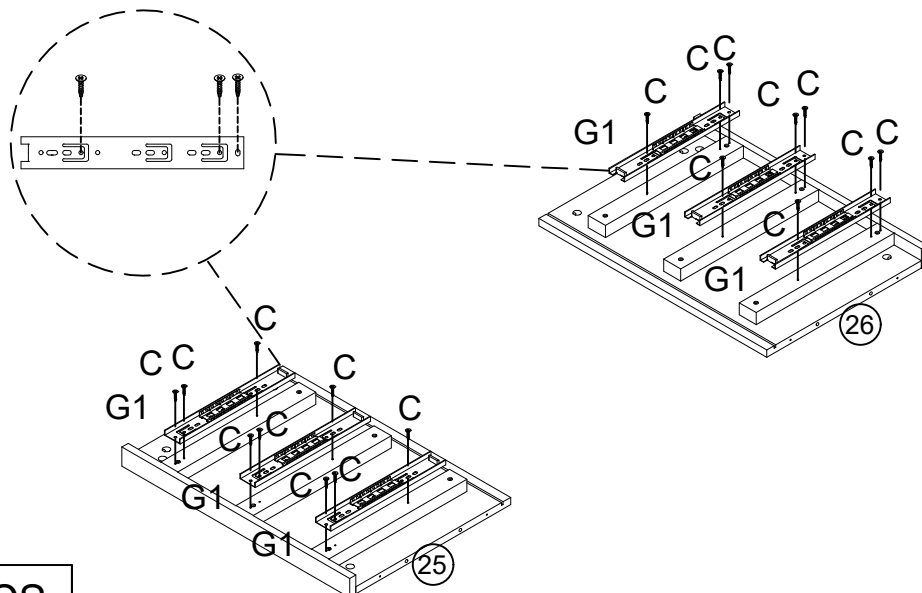


	G1x6PCS
	Cx18PCS

STEP30

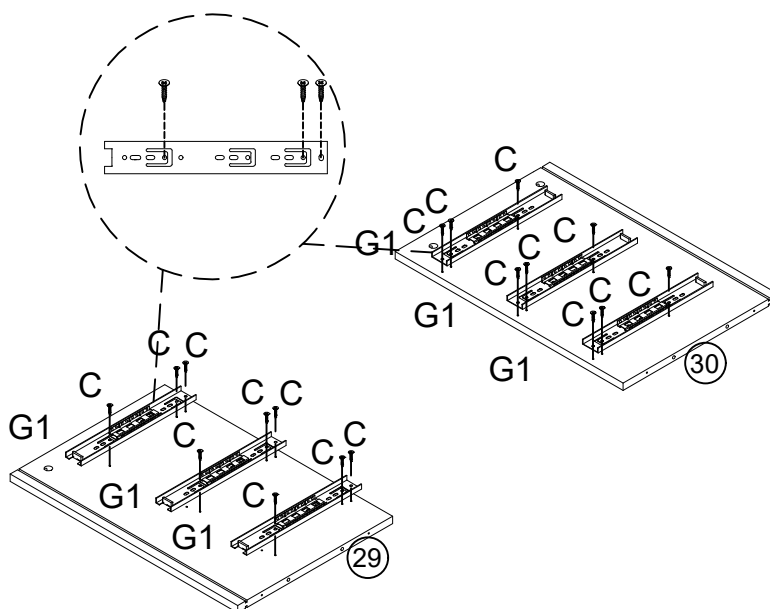


	G1x6PCS
	Cx18PCS

STEP31

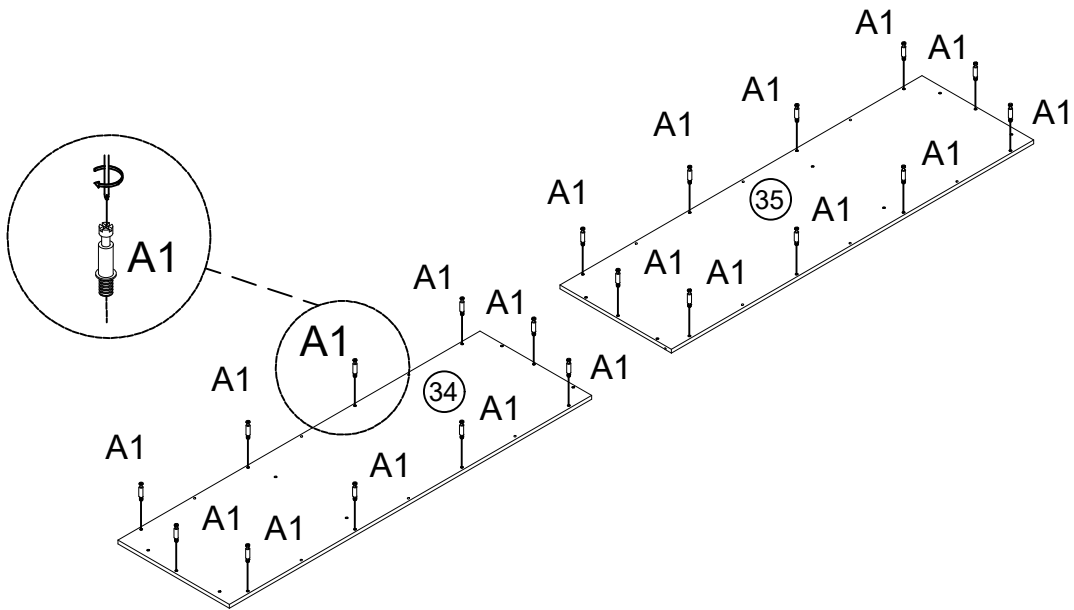

A1x20PCS

STEP32

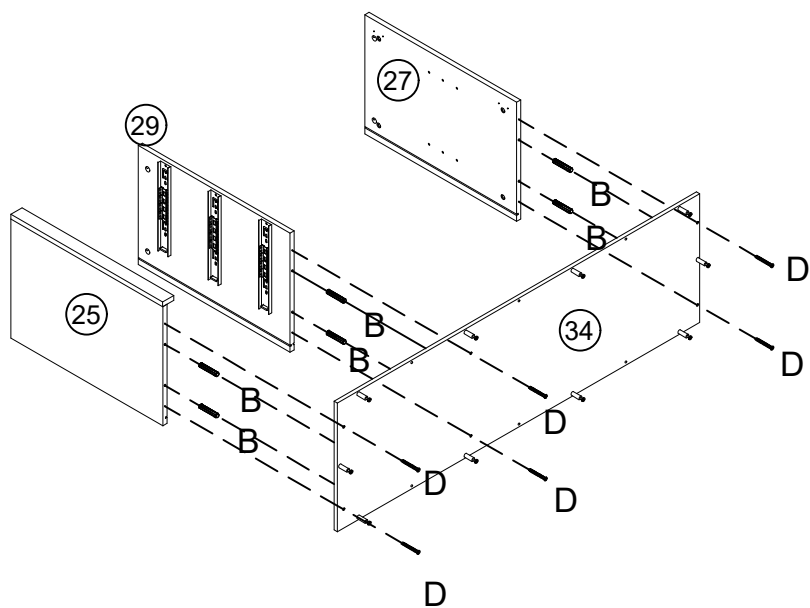


Dx6PCS




Bx6PCS

STEP33

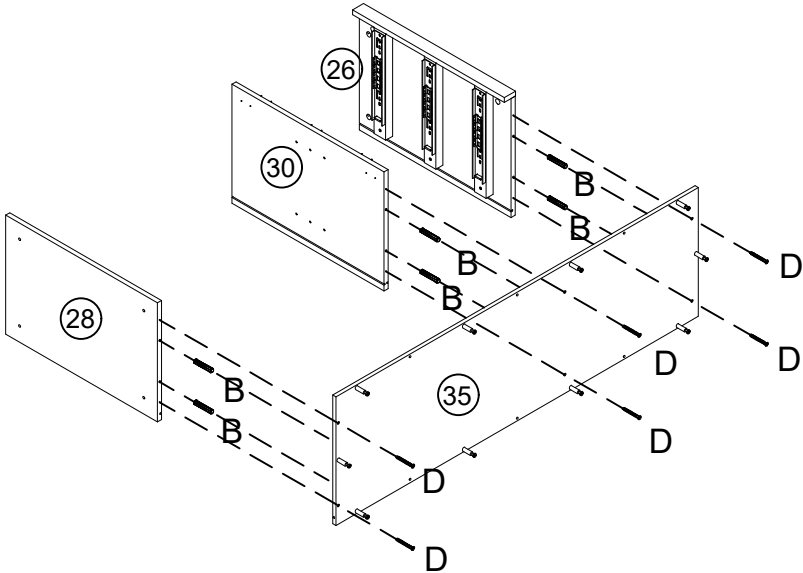

	Dx6PCS
	Bx6PCS


STEP34

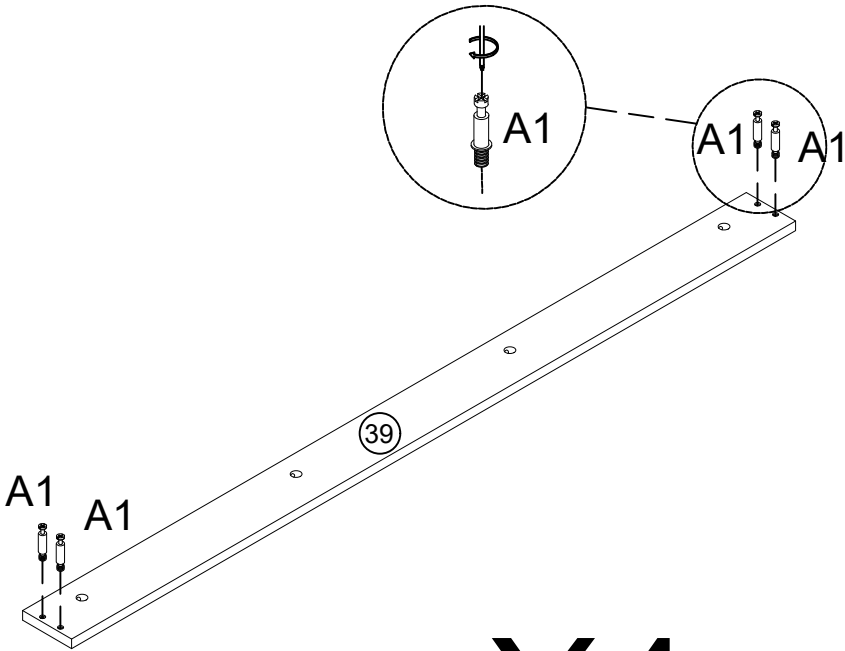

X4

	A1x16PCS
---	----------


STEP35

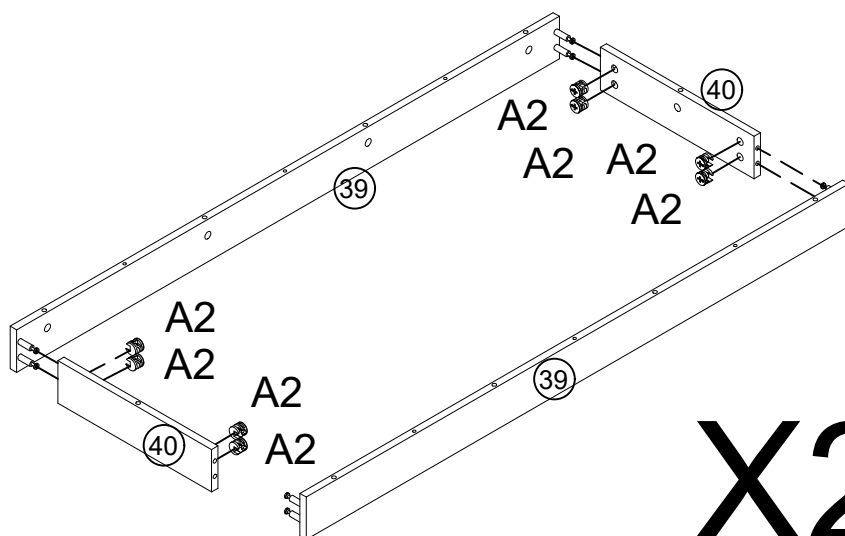


X2



A2x16PCS

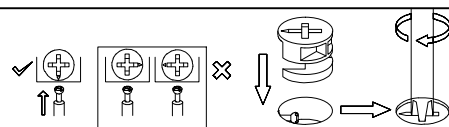


STEP36

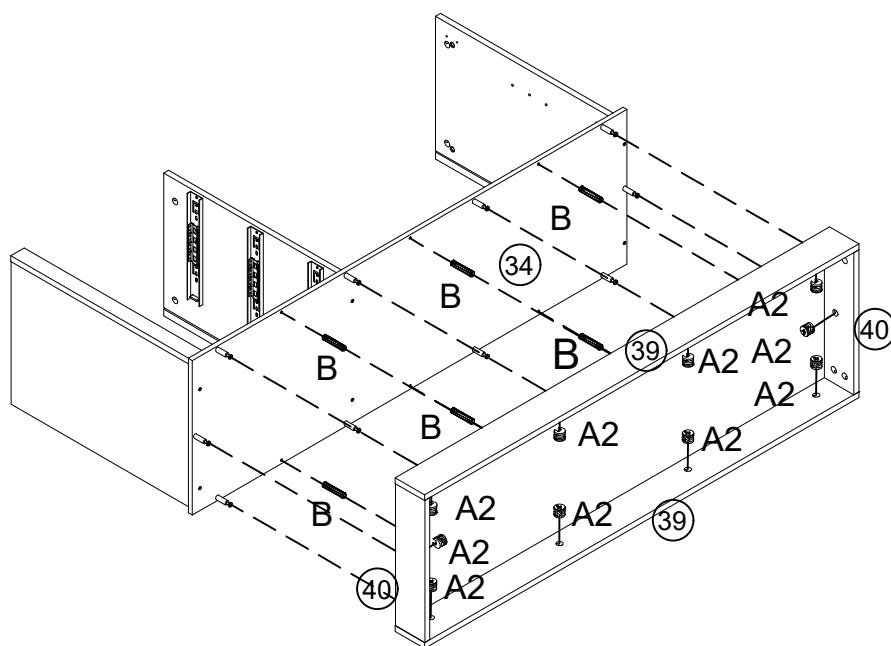


A2x10PCS



Bx6PCS

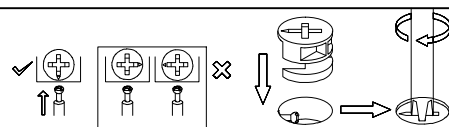




STEP37

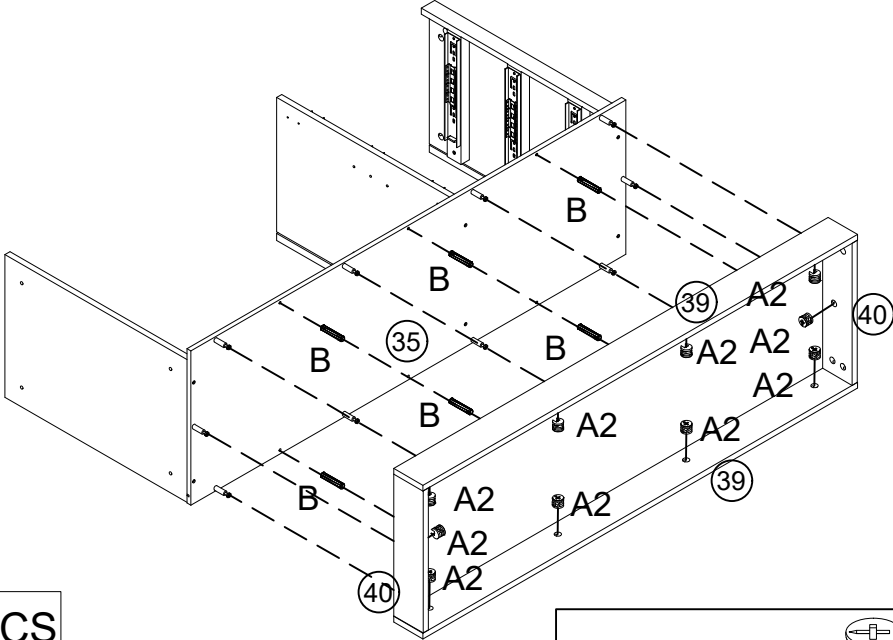


A2x10PCS



Bx6PCS




STEP38

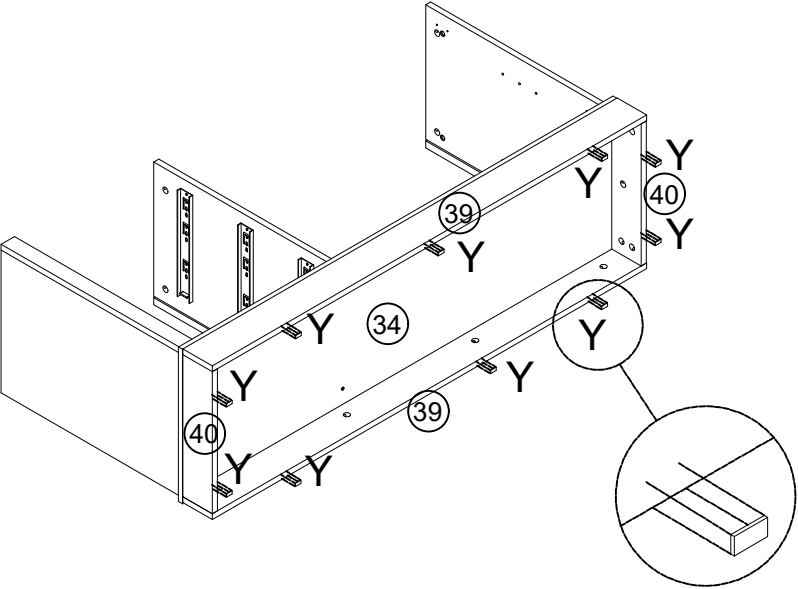


Yx10PCS

STEP39

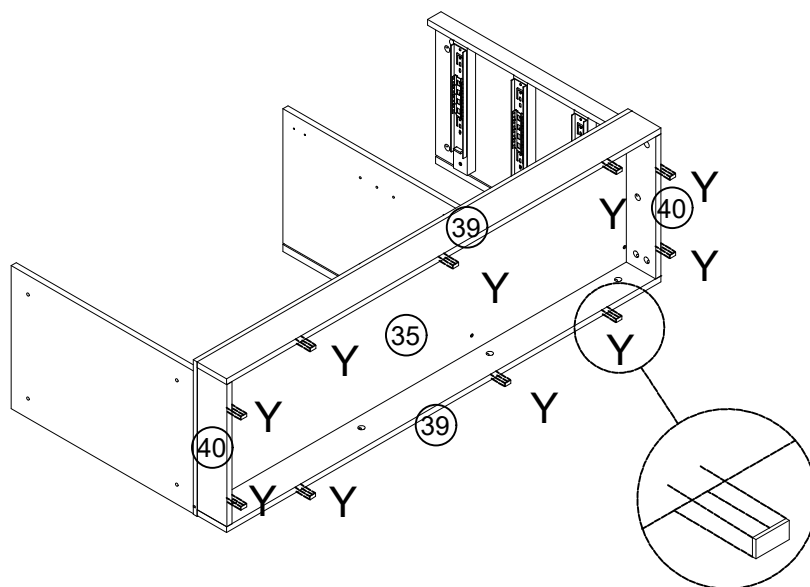


	Yx10PCS
---	---------

STEP40

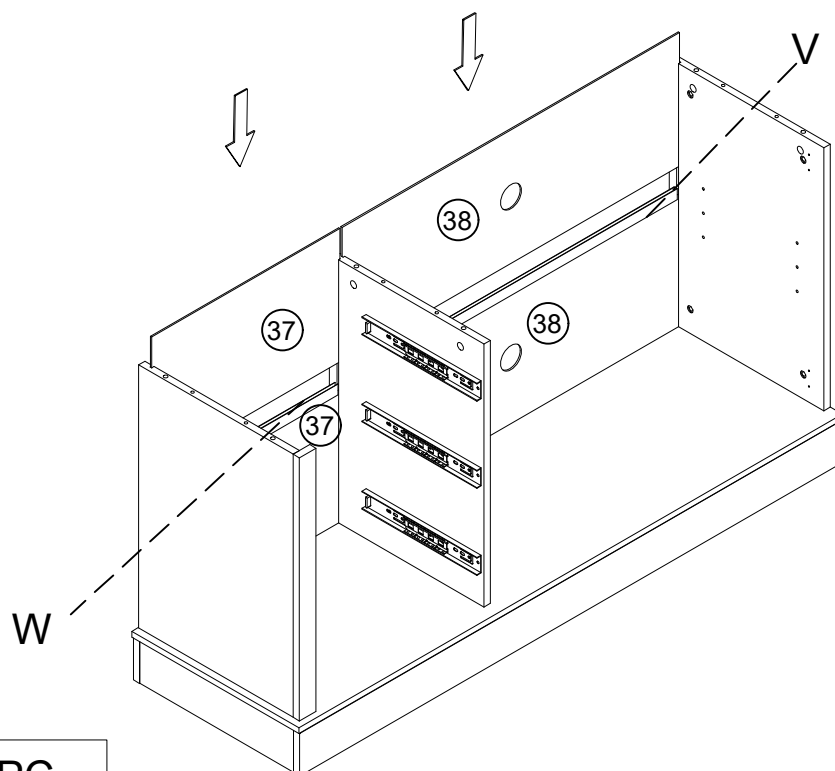


	Wx1PC
	Vx1PC

STEP41

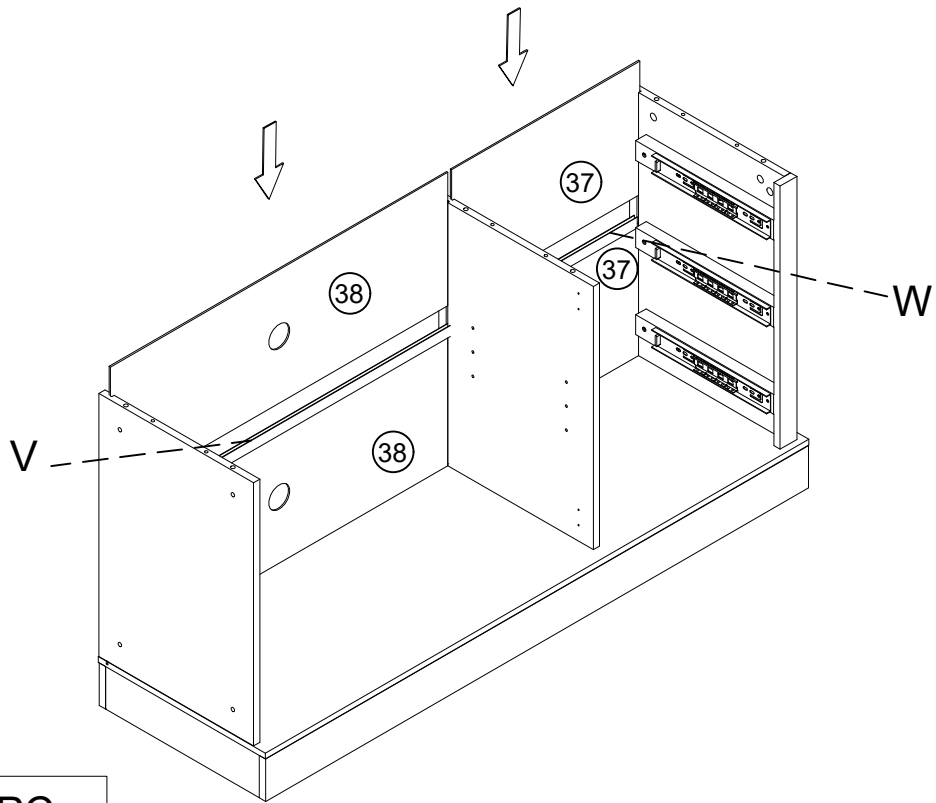


	Wx1PC
	Vx1PC

STEP42

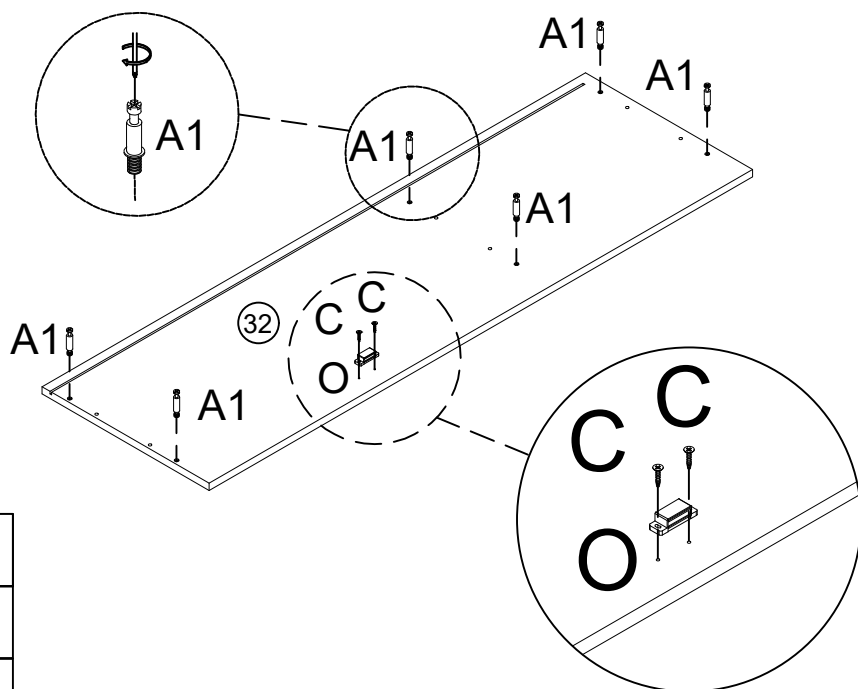


	Cx2PCS
	Ox1PC
	A1x6PCS

STEP43

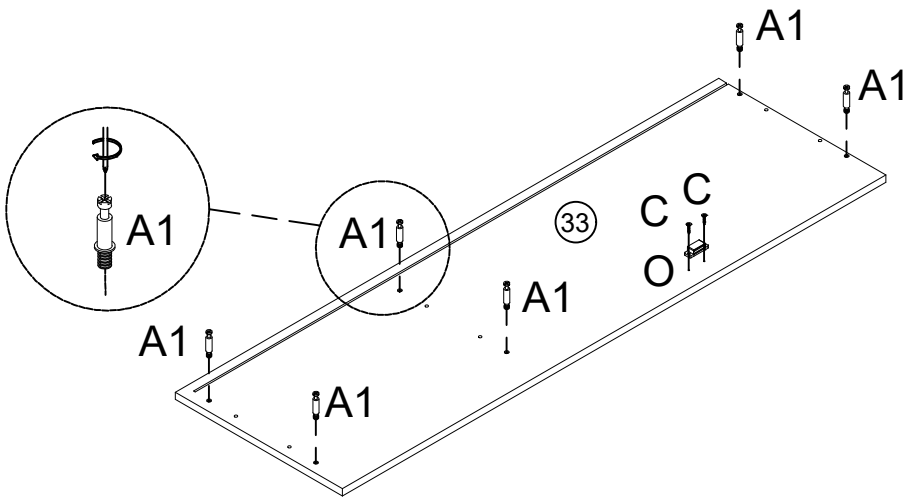


	Cx2PCS
	Ox1PC
	A1x6PCS


STEP44

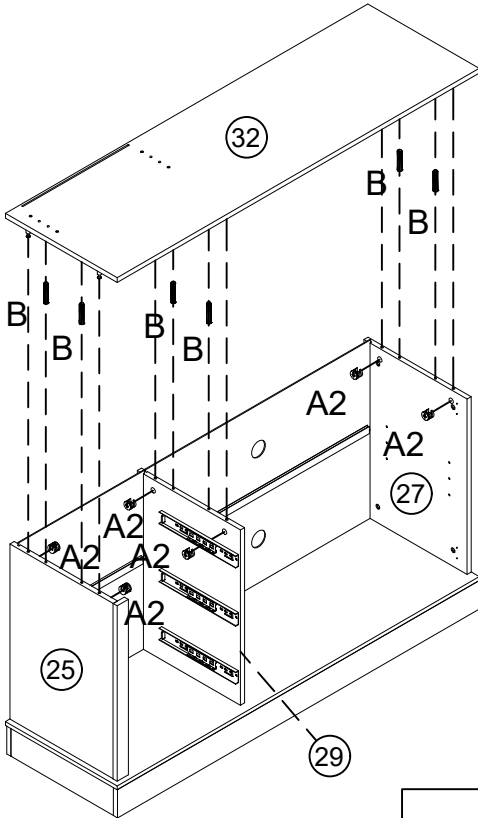


	A2x6PCS
	Bx6PCS

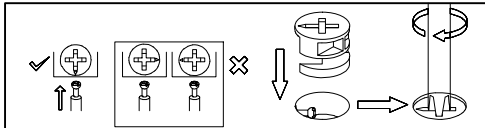


STEP45

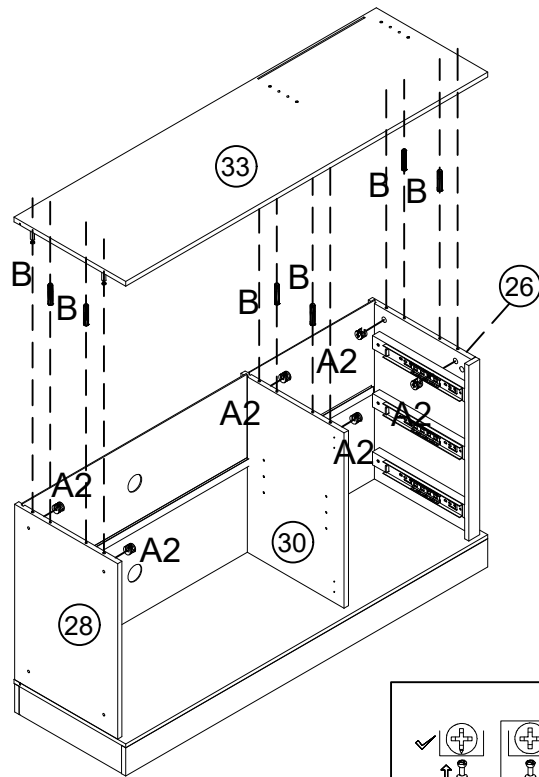

	A2x6PCS
	Bx6PCS

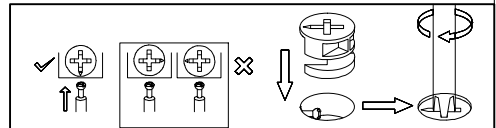


STEP46

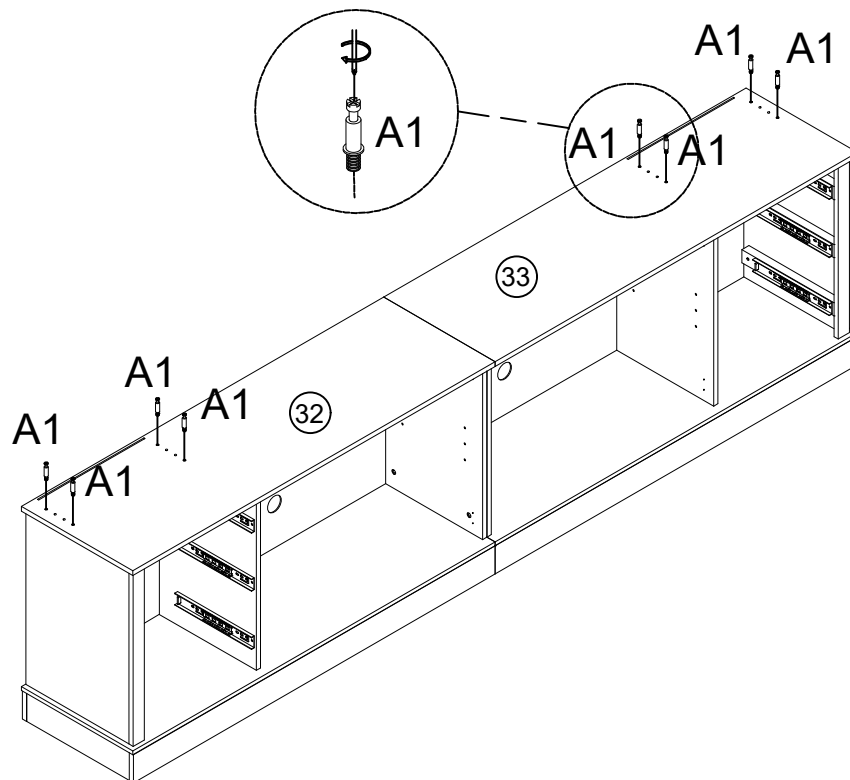

	A1x8PCS
---	---------


STEP47

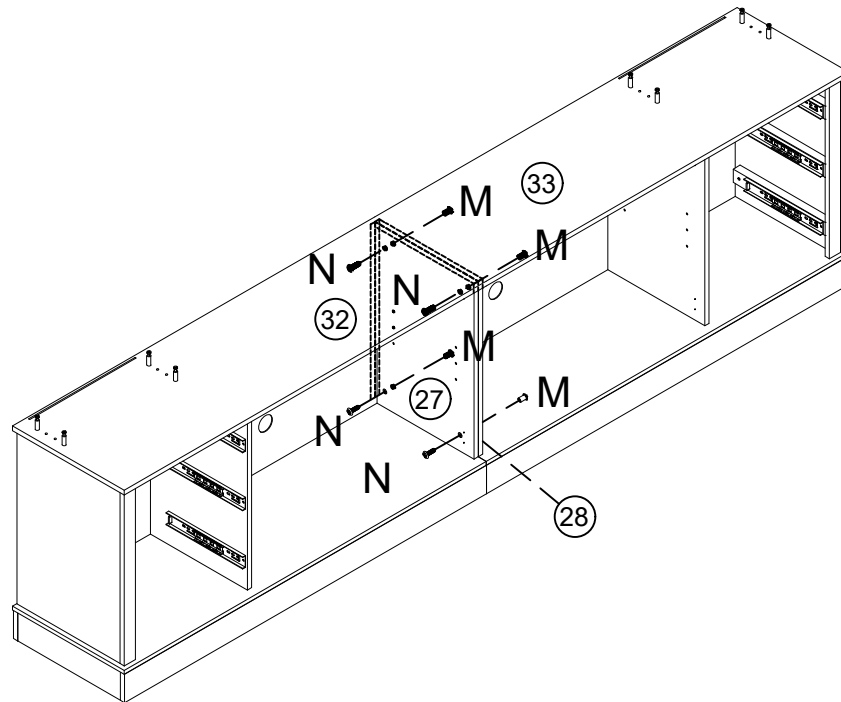


	Mx4PCS
	Nx4PCS

STEP48


Be careful!
At least two people are required.

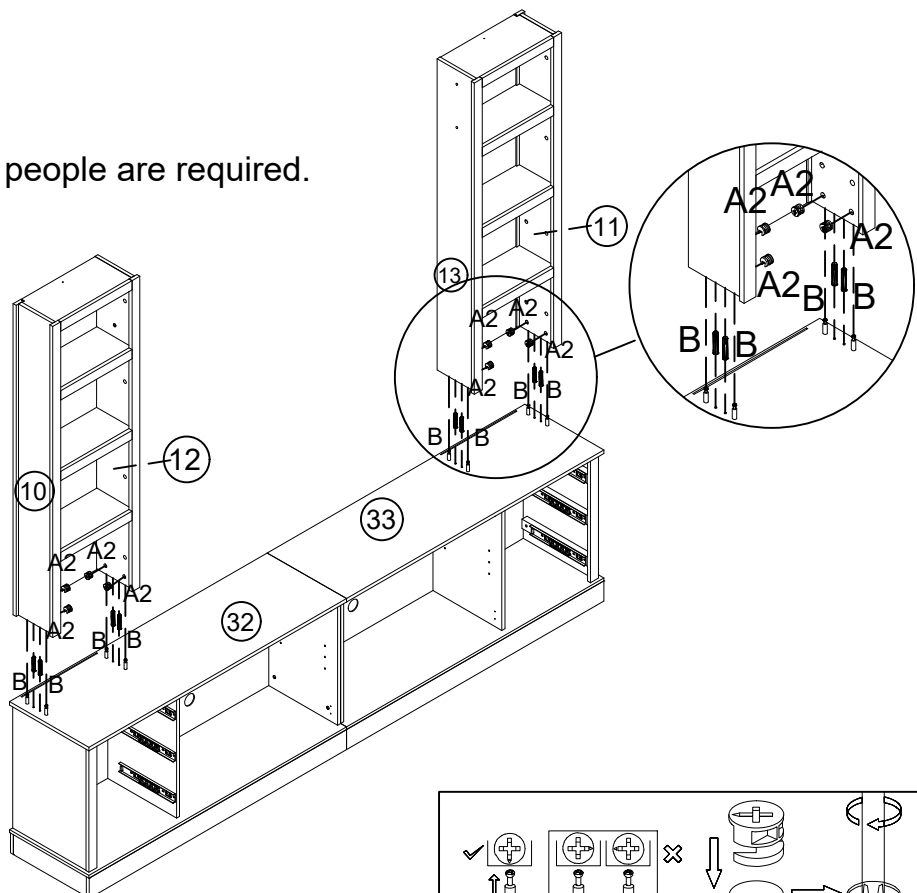

	A2x8PCS
	Bx8PCS

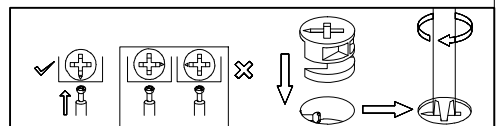


STEP49

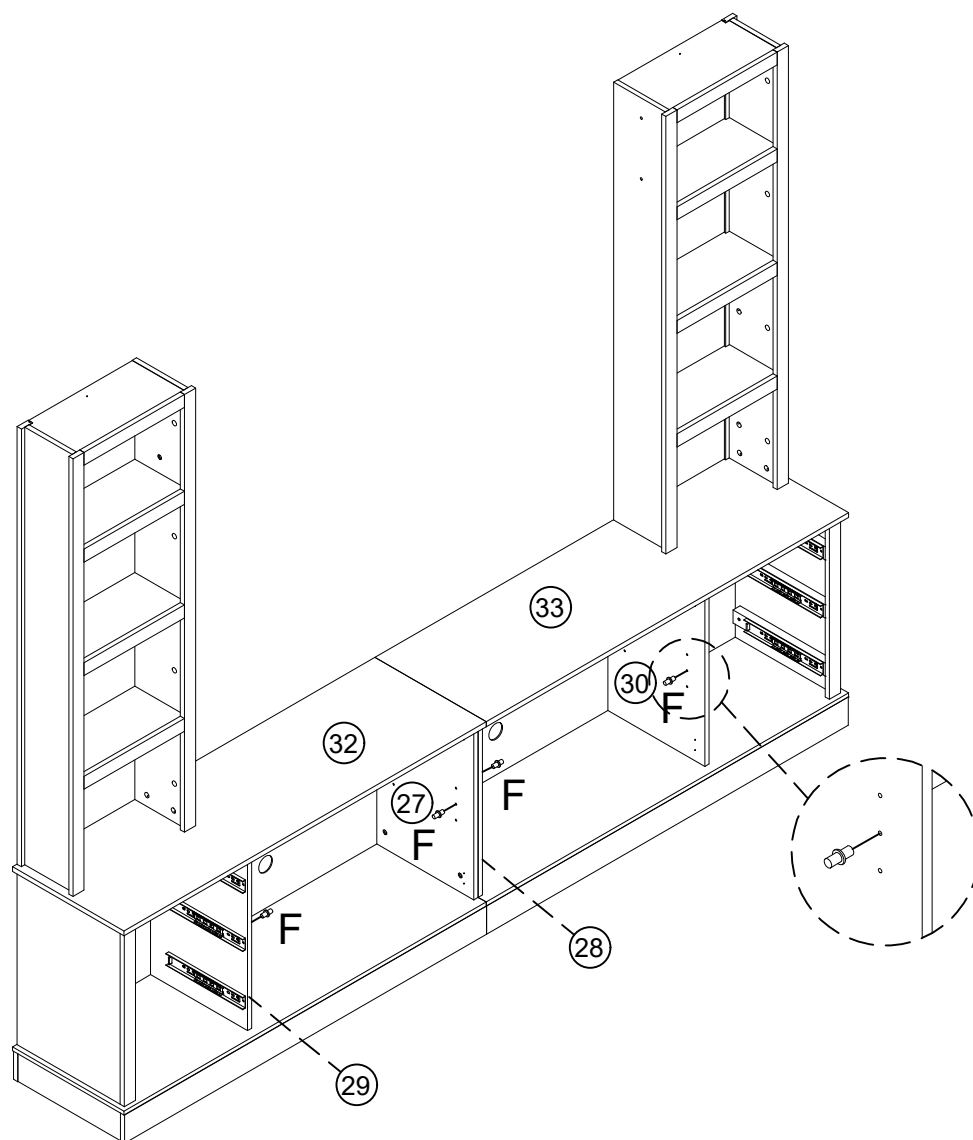


Fx8PCS

STEP50

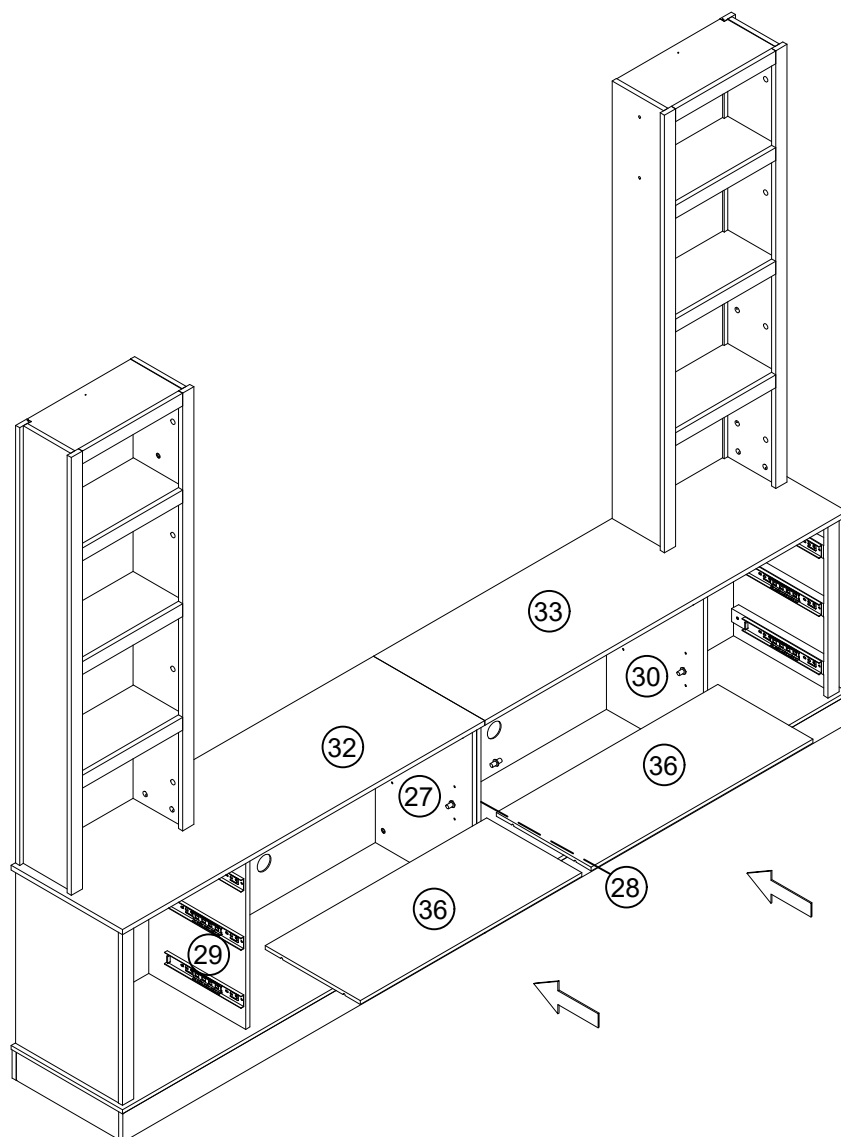


STEP51

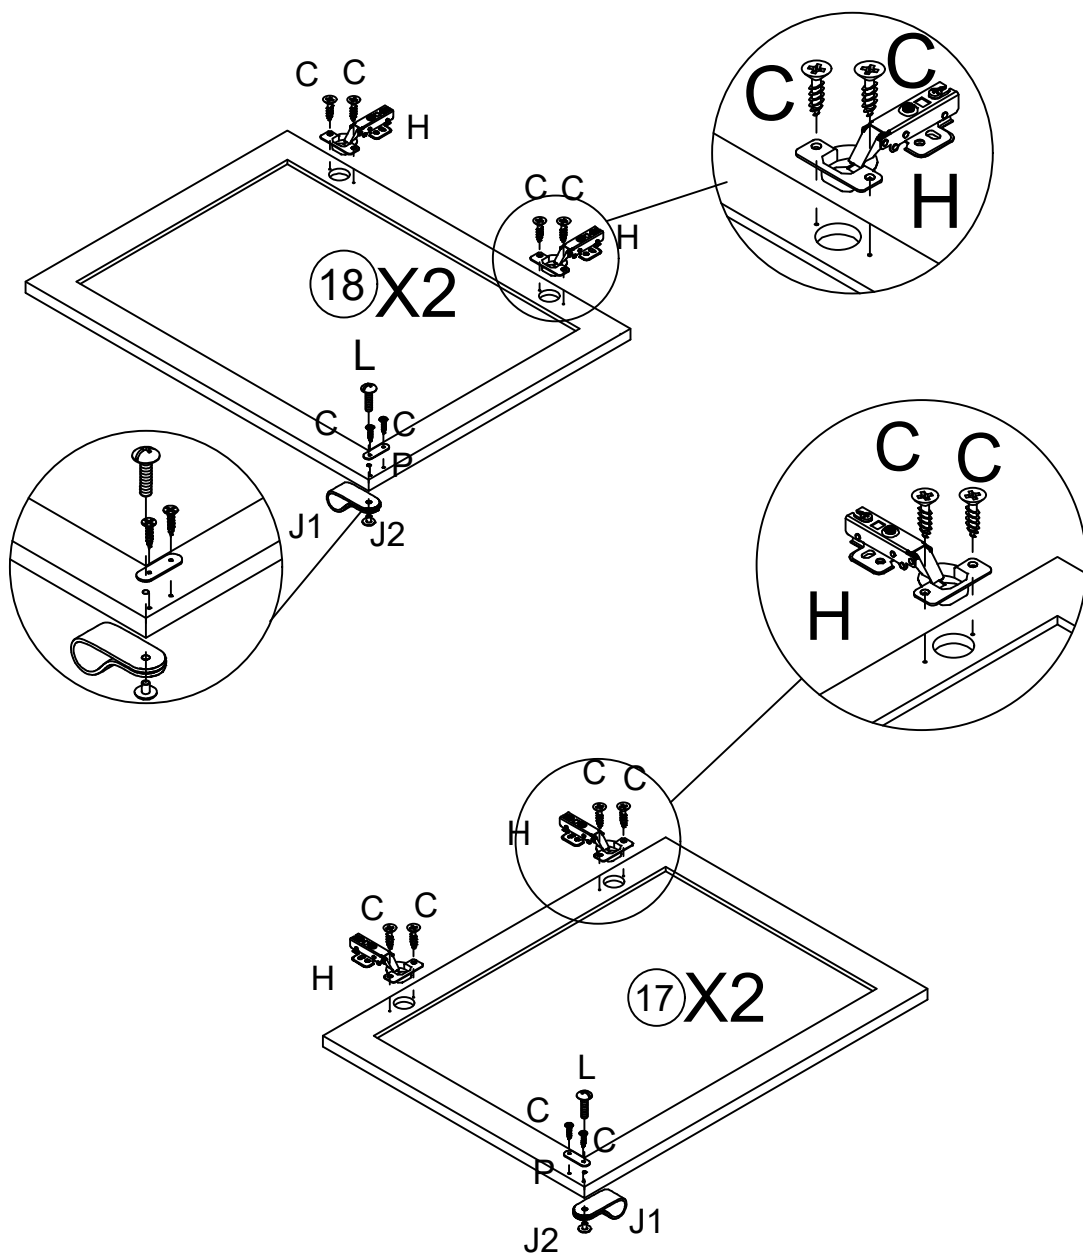


	Lx4PCS
	Px4PCS
	Hx8PCS
	J2x4PCS
	J1x4PCS
	Cx24PCS


STEP52

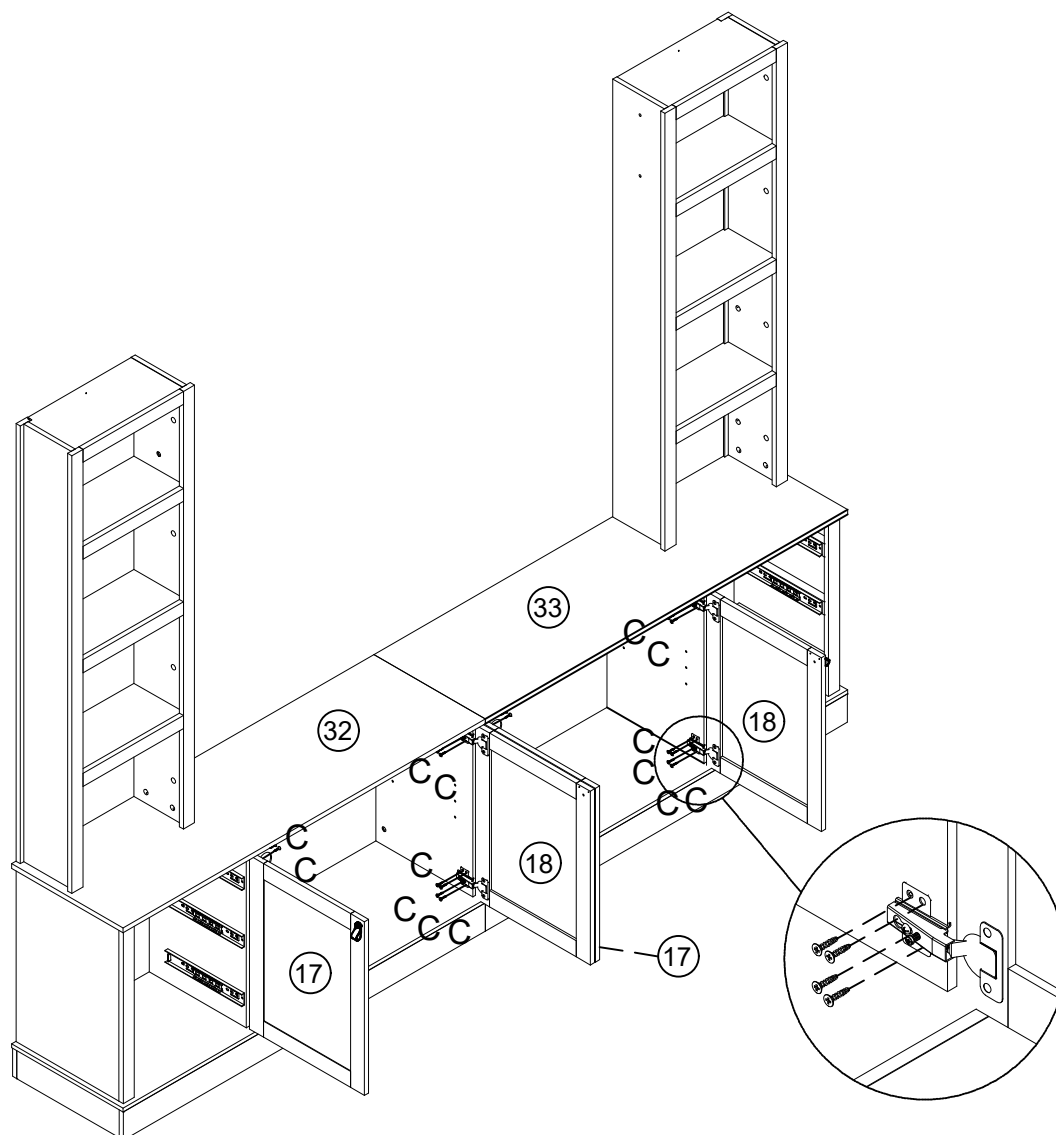


When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect

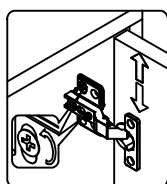


1. Adjust the screws shown in Figure 1 to adjust the door up and down.

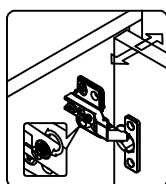




2. Adjust the screws shown in Figure 2 to adjust the door left and right to the right position.

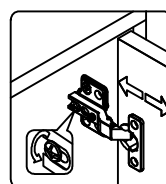

3. Adjust the screws shown in Figure 3 and pull the door back and forth so that it can be opened smoothly.

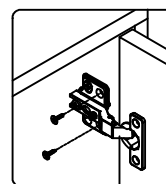

4. After the adjustment is complete, install the remaining two screws to secure the door in place.

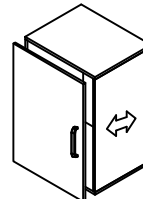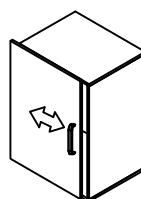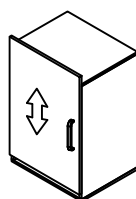


If there is an uneven gap between the door and the cabinet body, the problem can be solved by adjusting the hinge.




Cx32PCS

STEP53

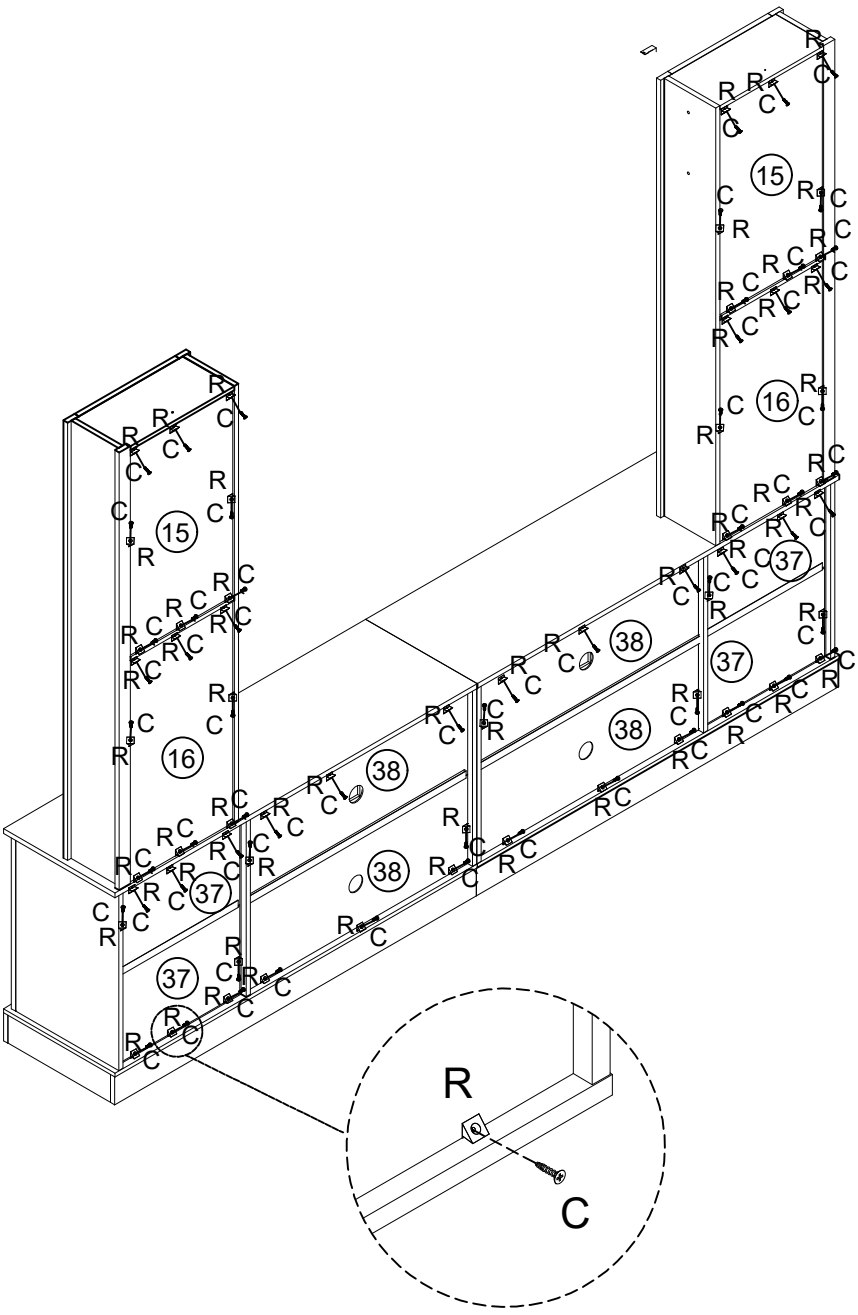

	Cx64PCS
	Rx64PCS


STEP54

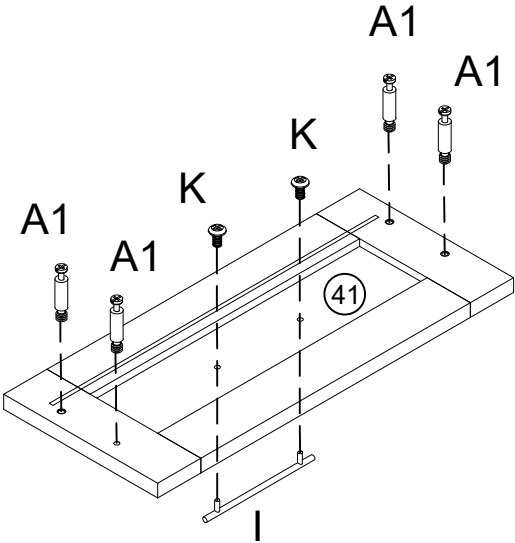

X6

	Kx12PCS
	Ix6PCS
	A1x24PCS


STEP55

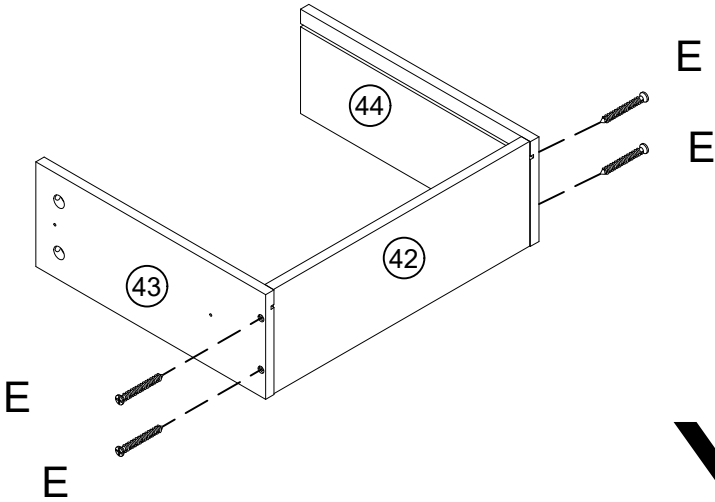

X6


	Ex24PCS
---	---------

STEP56

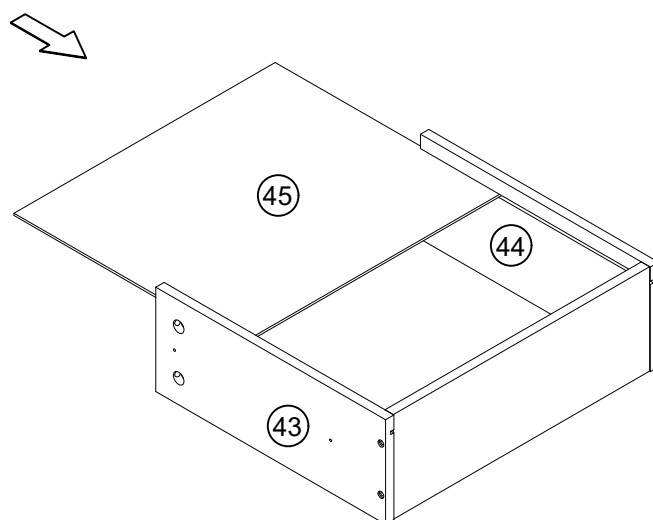

X6

STEP57

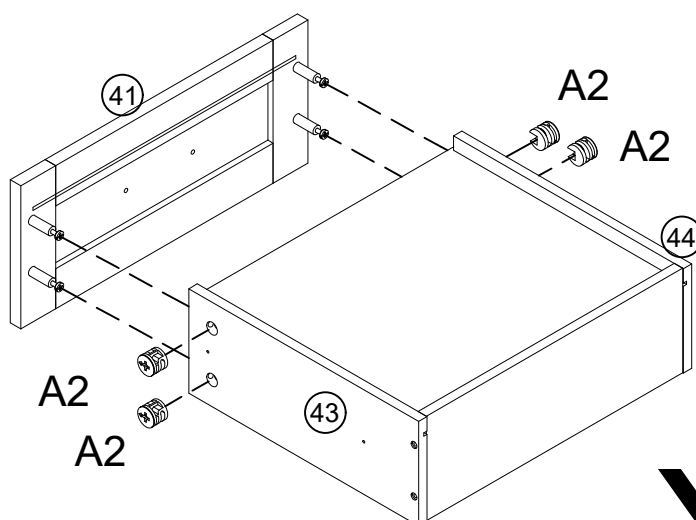


X6



A2x24PCS


STEP58

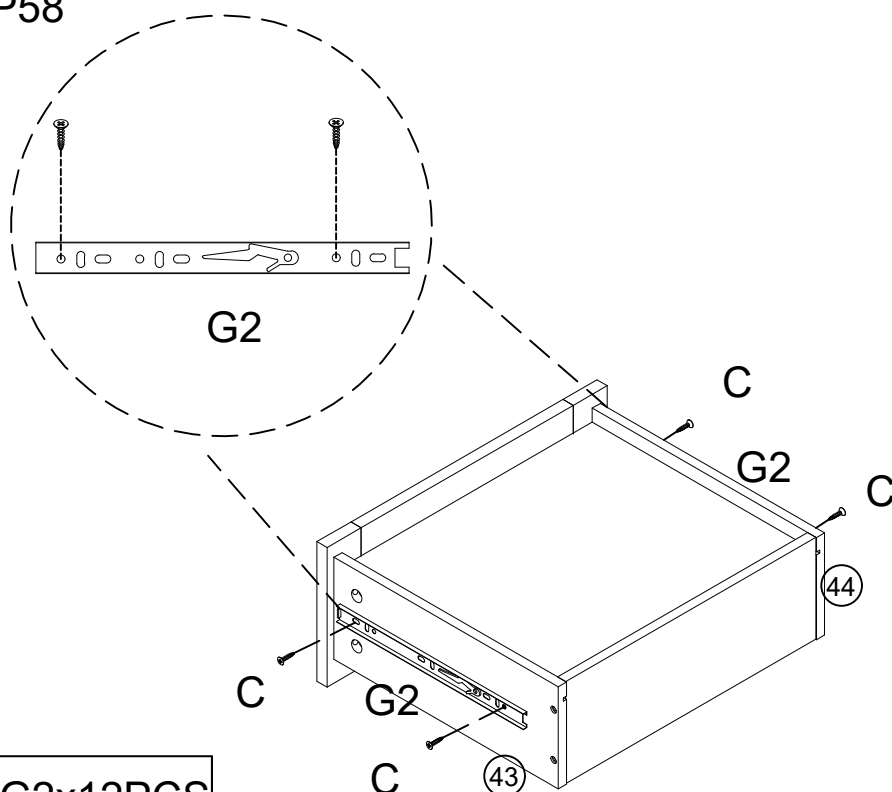




X6

	G2x12PCS
	Cx24PCS


STEP59

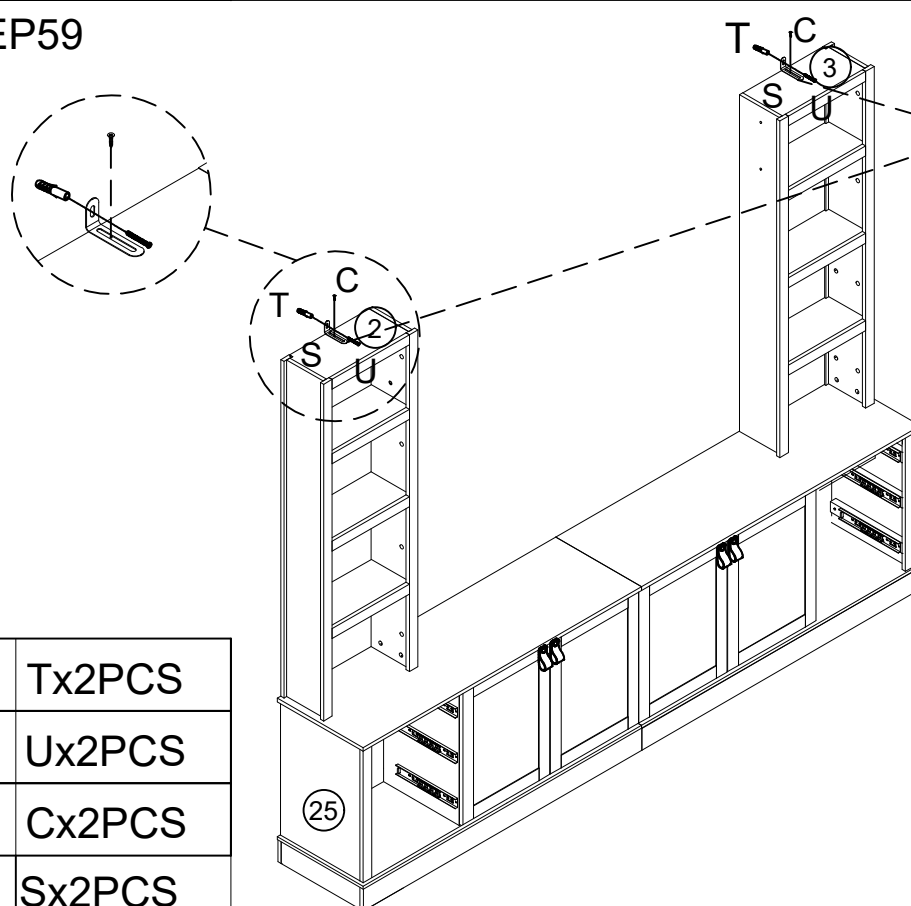

	Tx2PCS
	Ux2PCS
	Cx2PCS
	Sx2PCS

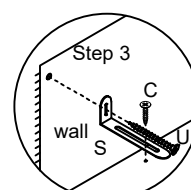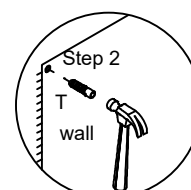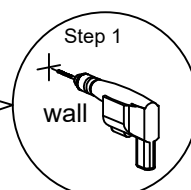


STEP60

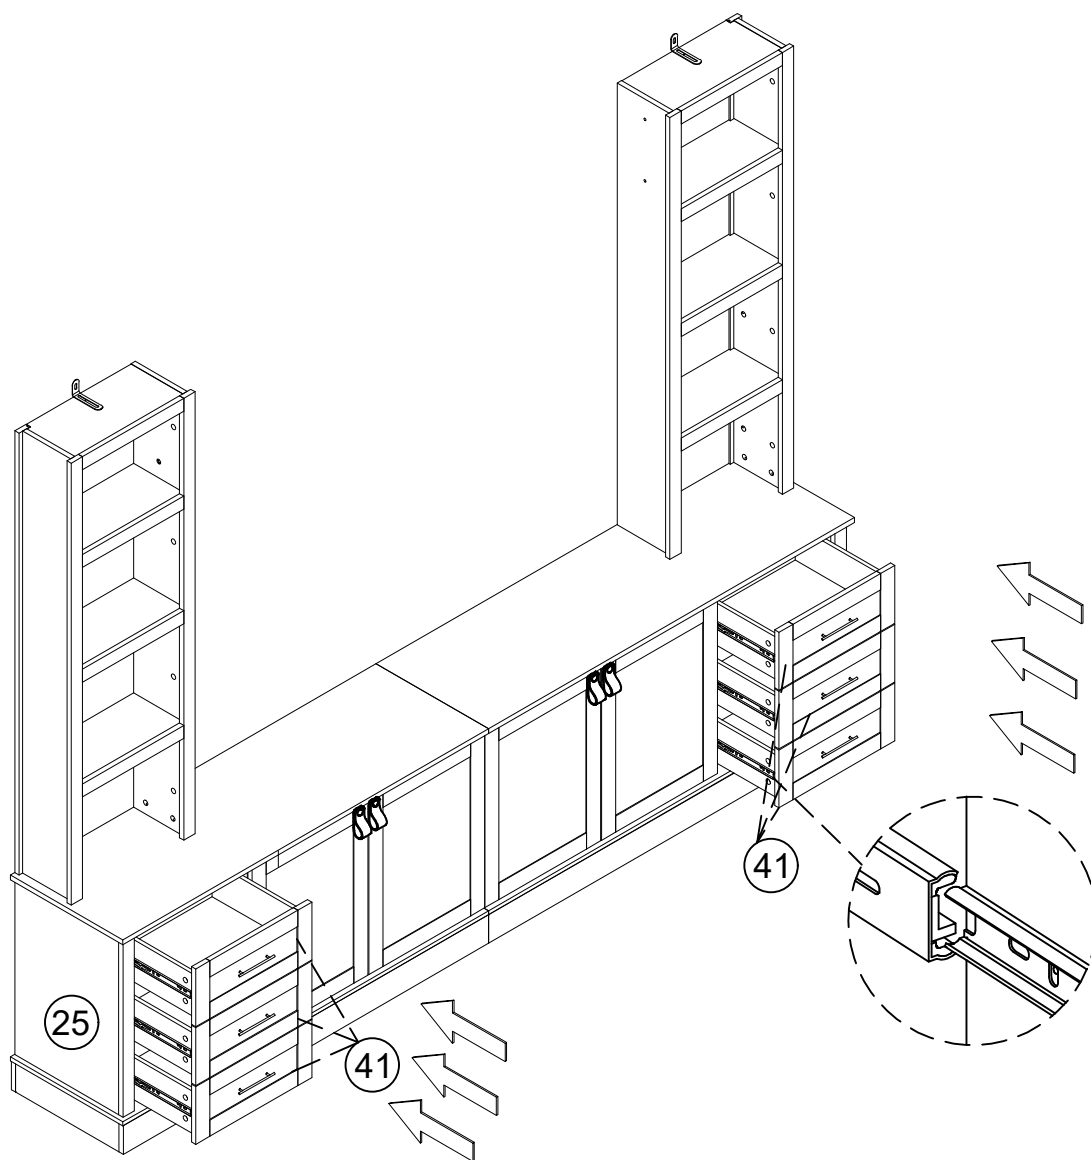

STEP61

OPTIONS 1

There is 2 ways of installation.

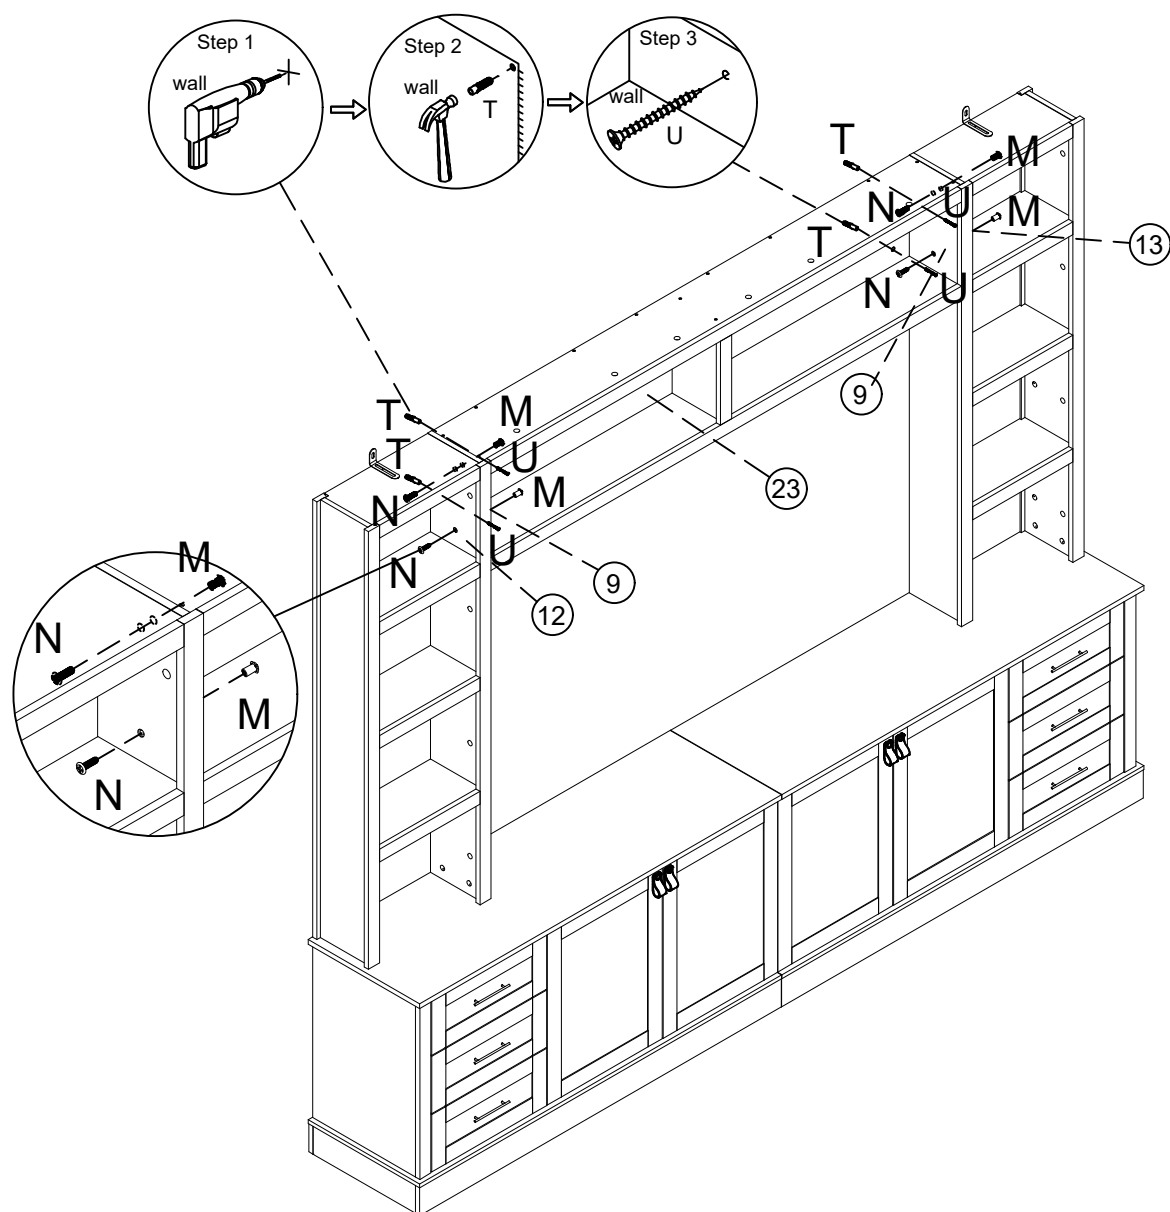


	Mx4PCS
	Nx4PCS
	Tx4PCS
	Ux4PCS

Be careful !
At least two people are required.

STEP62

OPTIONS 2

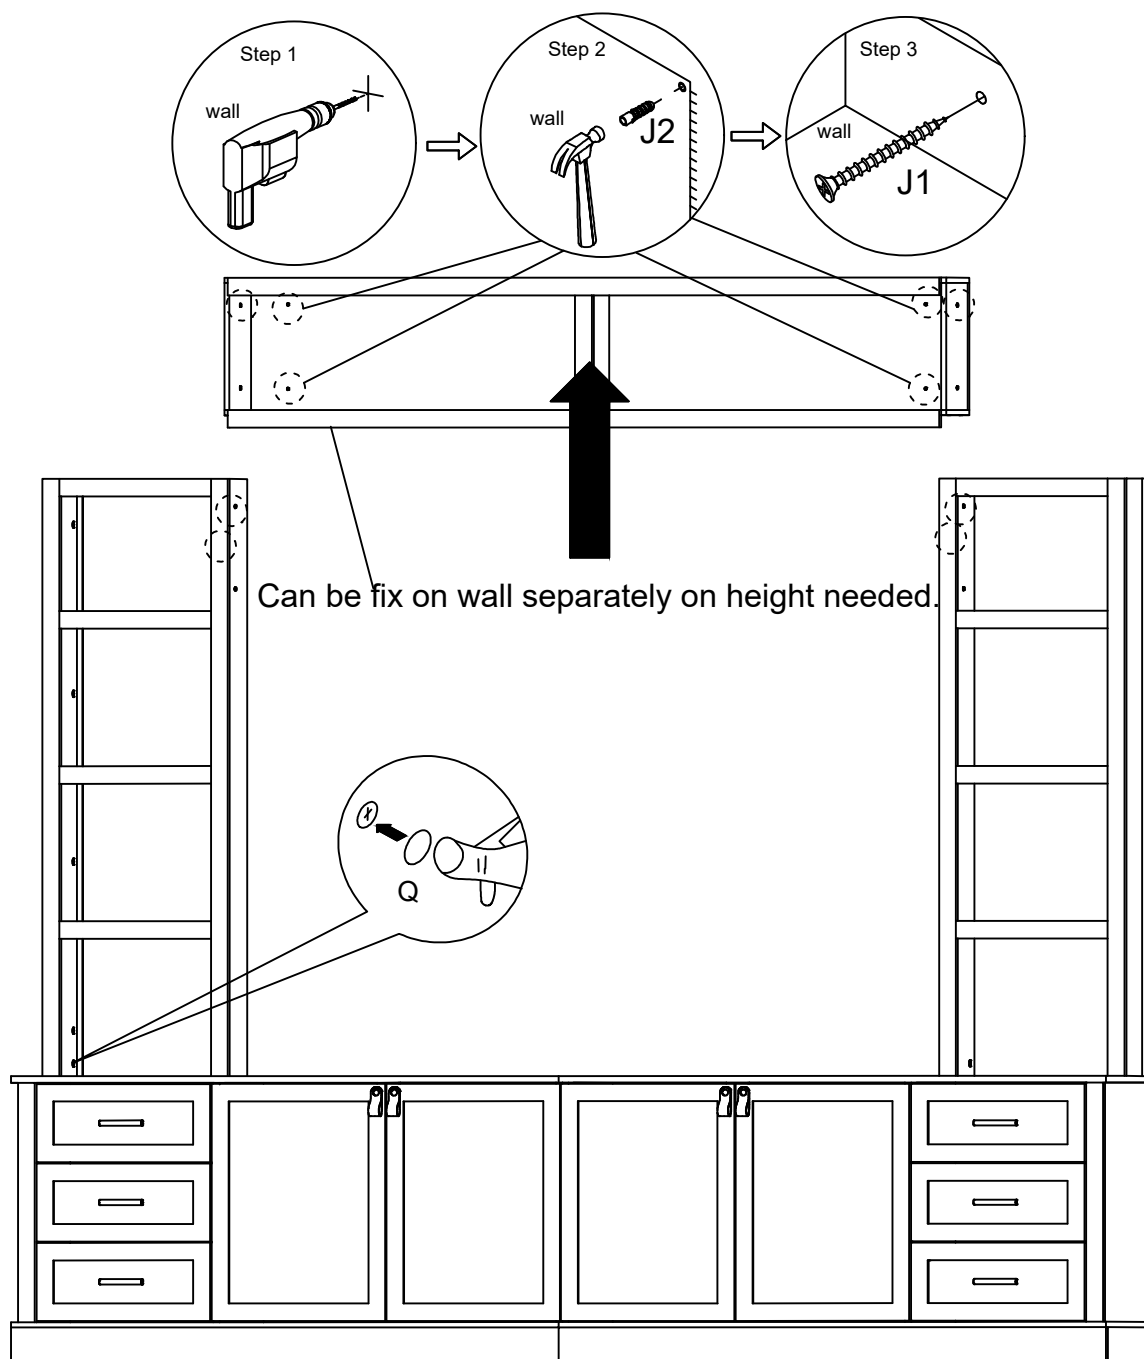

	Tx4PCS
	Ux4PCS
	Qx170PCS

Be careful !
At least two people are required.

STEP63

