

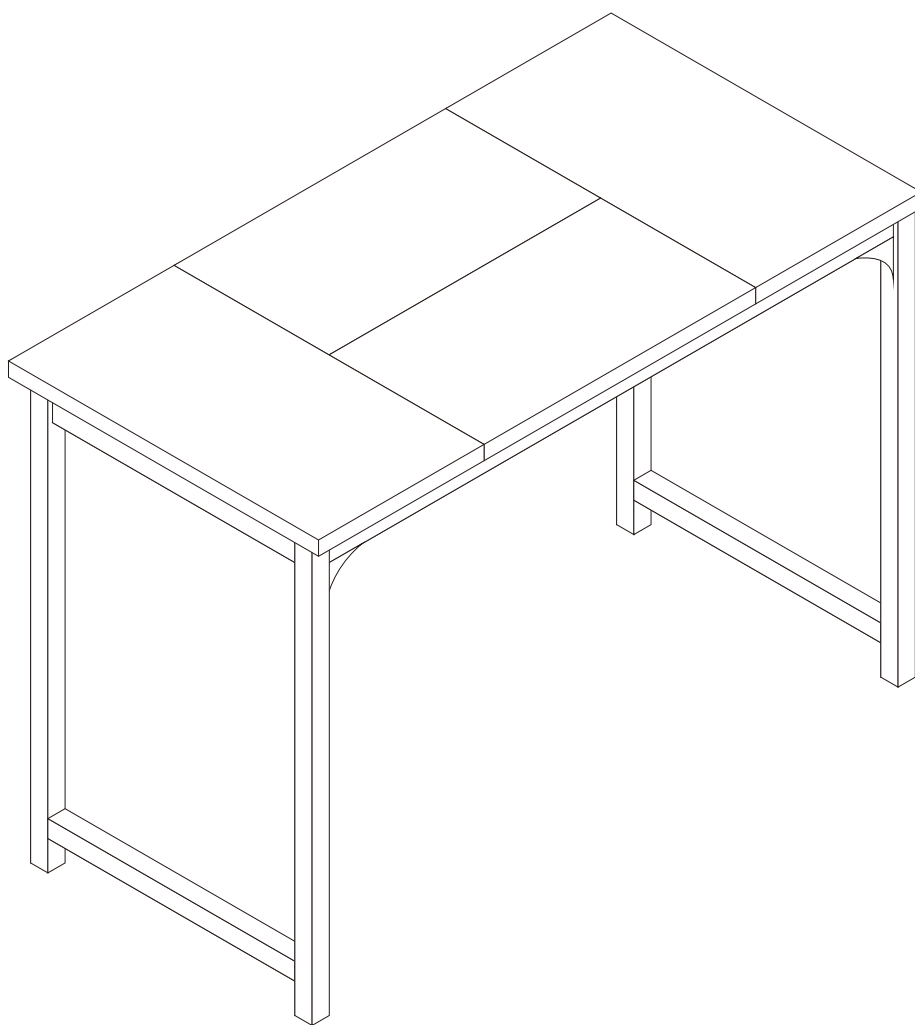
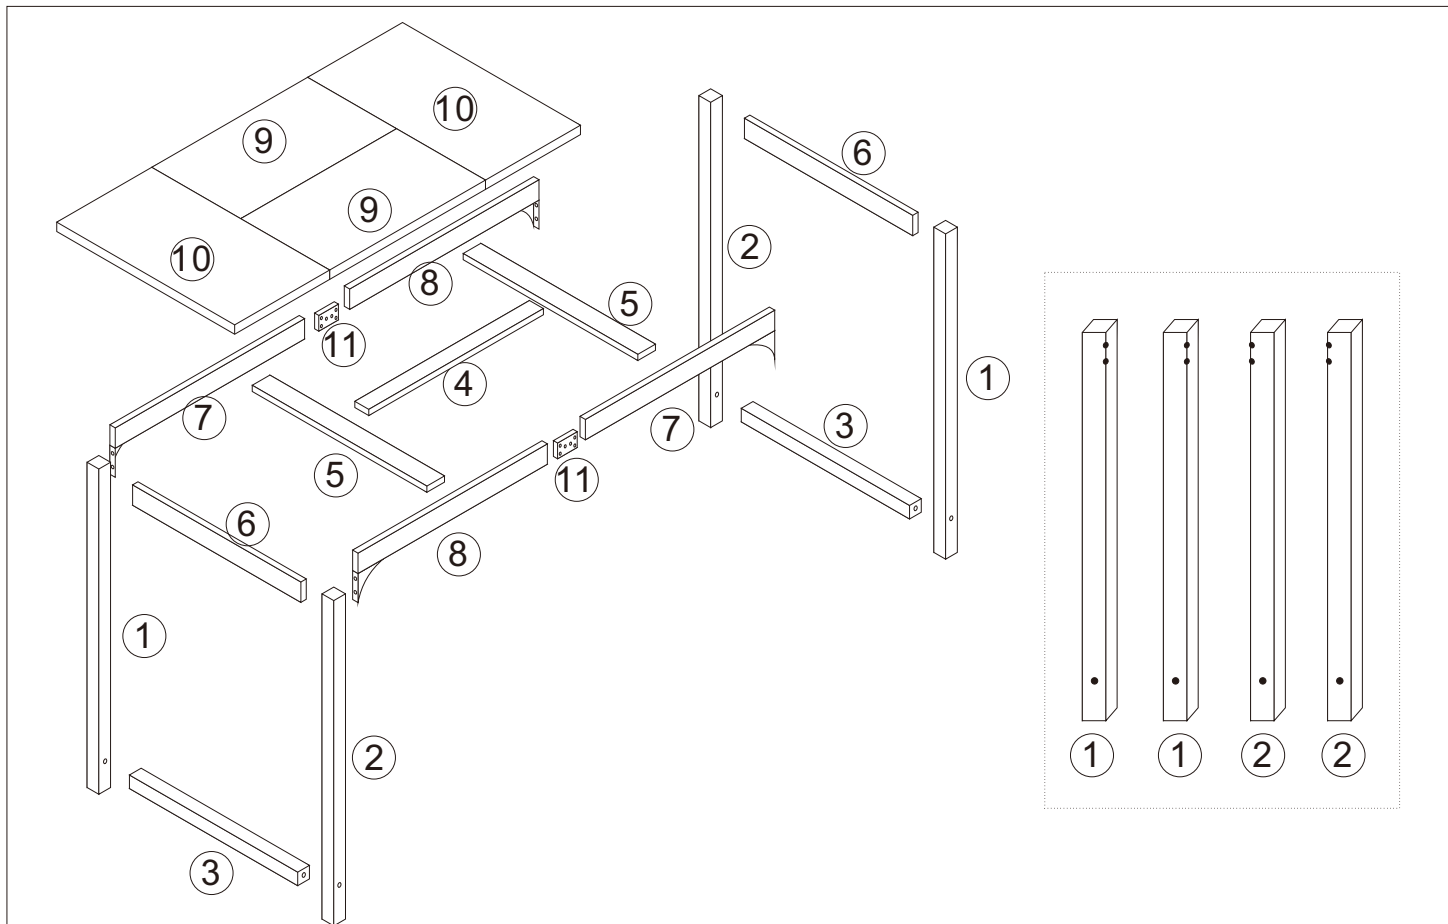



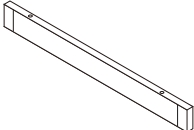
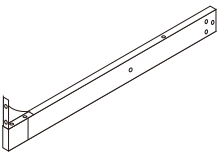
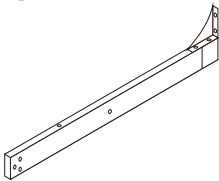
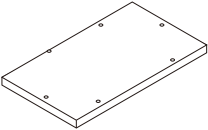
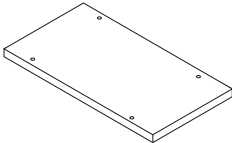



Installation instructions





 72x5x5cm x2	 72x5x5cm x2	 68x5x5cm x2	 85.5x5x2.5cm x1	 71.7x5x2.5cm x2	 68x5x2.5cm x2
 84.2x5x2.5cm x2	 84.2x5x2.5cm x2	 90x40cm x2	 80x45cm x2	 x2	
A  8x70mm x6	B  8x40mm x12	C  x4	D  x4	E  8x20mm x20	
F  6x35mm x12	G  6x60mm x8	H  x1	J  x1		

01

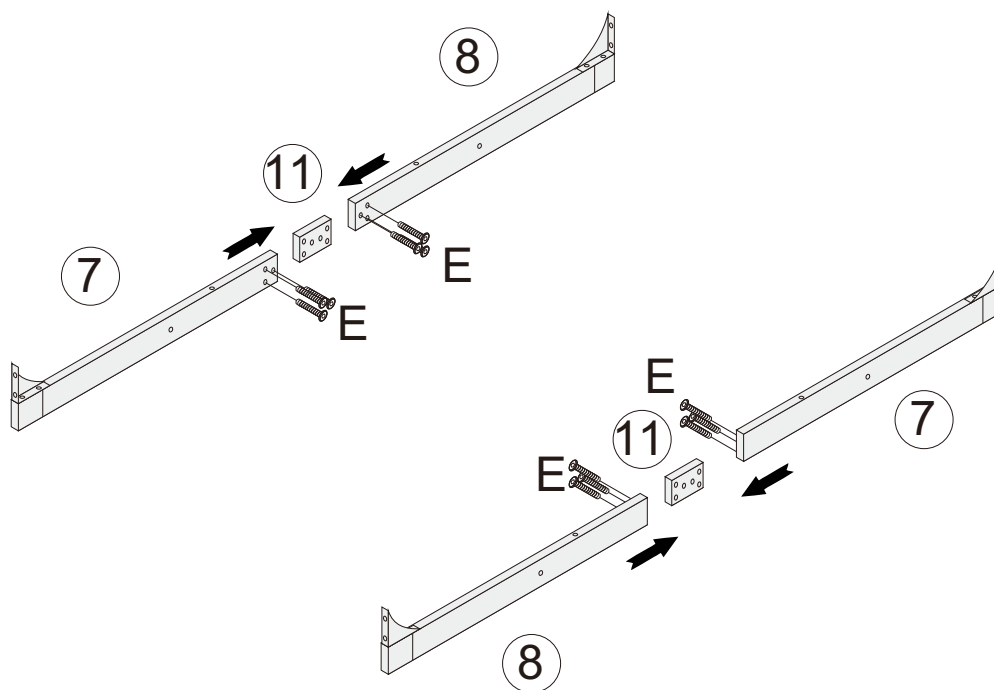


E



8x20mm

x12

02

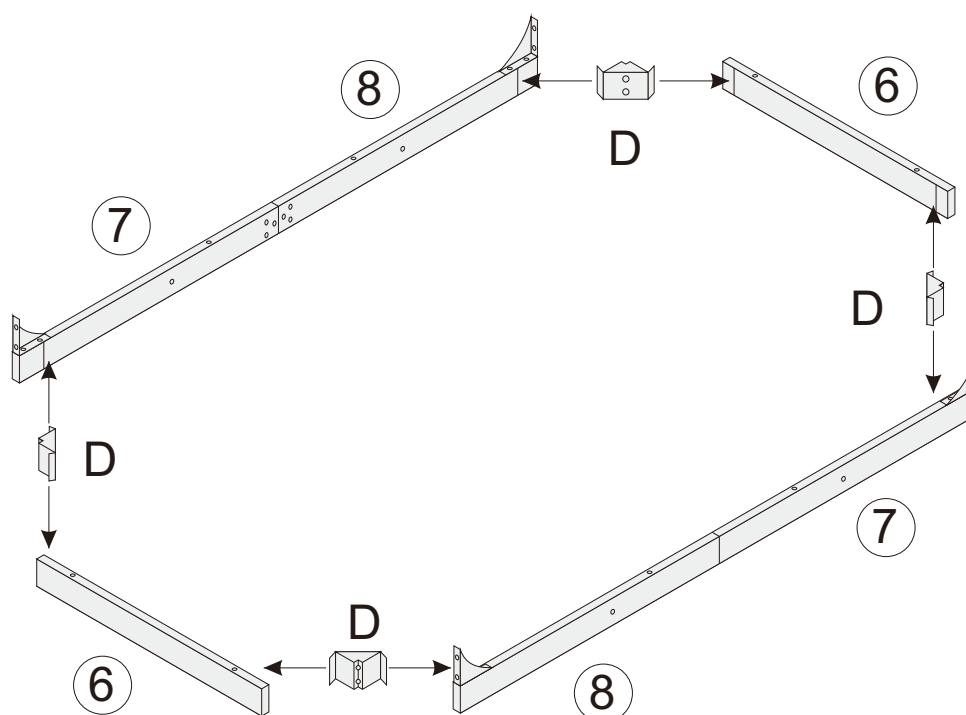


D




x4

03

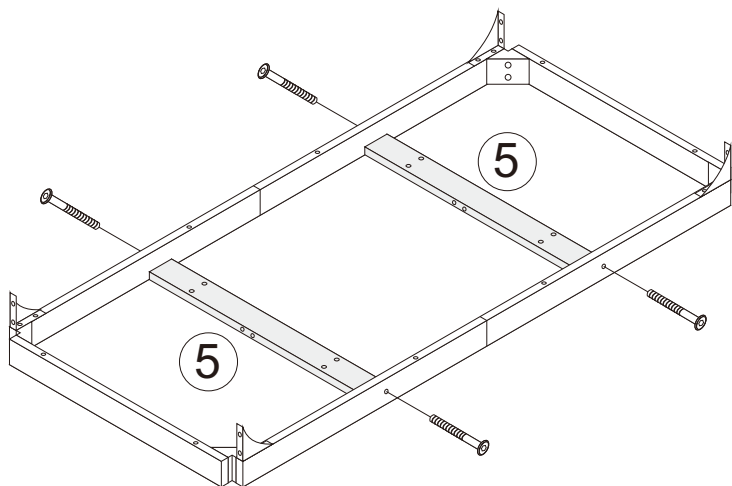

Friendly Tips: DO NOT fully tighten all screws until assembly is completed.


B




8x40mm

x4

04

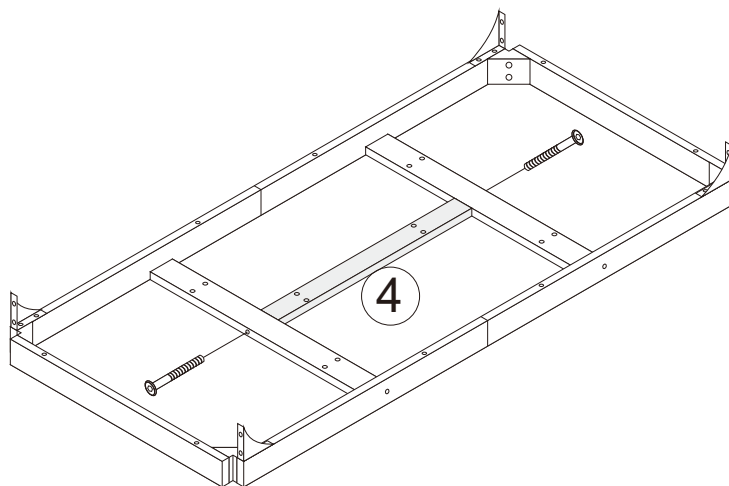



A



8x70mm

x2

05

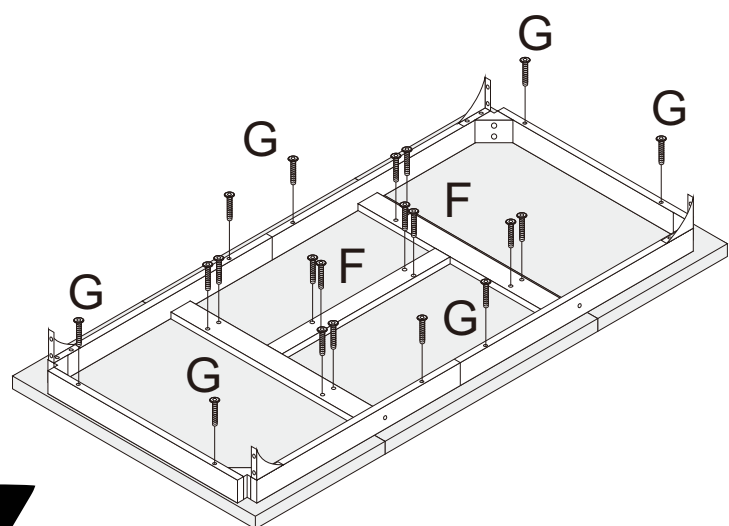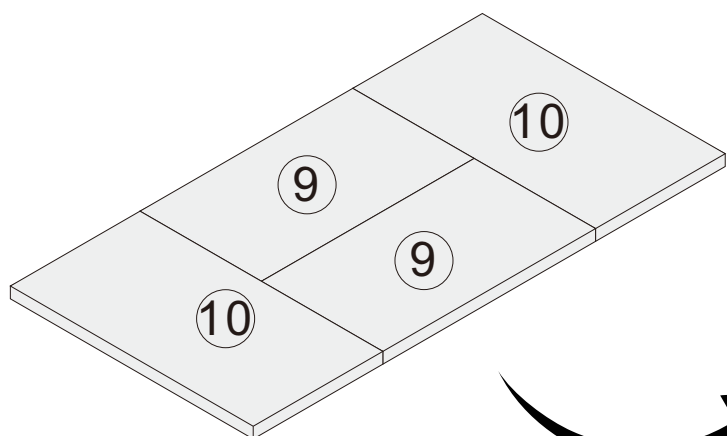

Friendly Tips: Don't tighten the F and G screws in step 5, wait until finish step 7 to fine-tune the desktop, and then align the screws and tighten them!

F



6x35mm

x12

G





6x60mm

x8

06

Pay attention to the direction of the hole

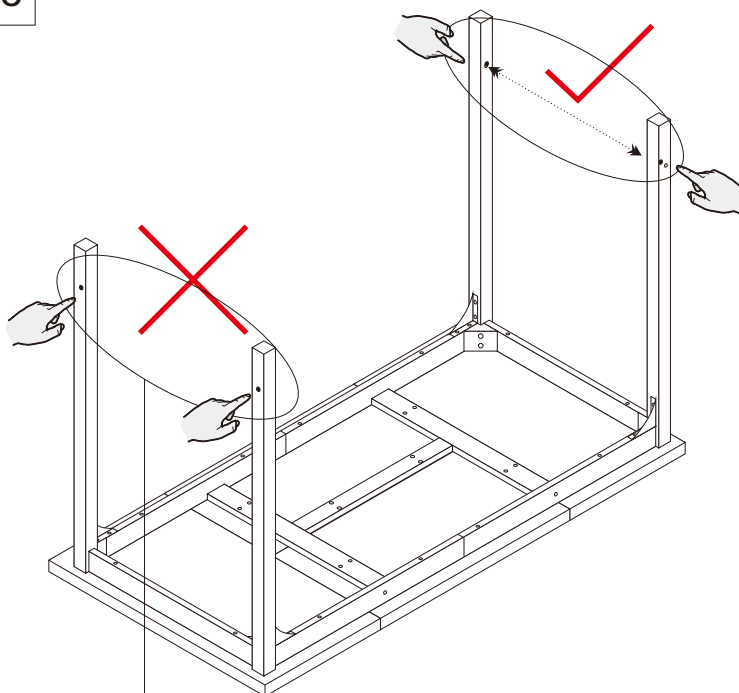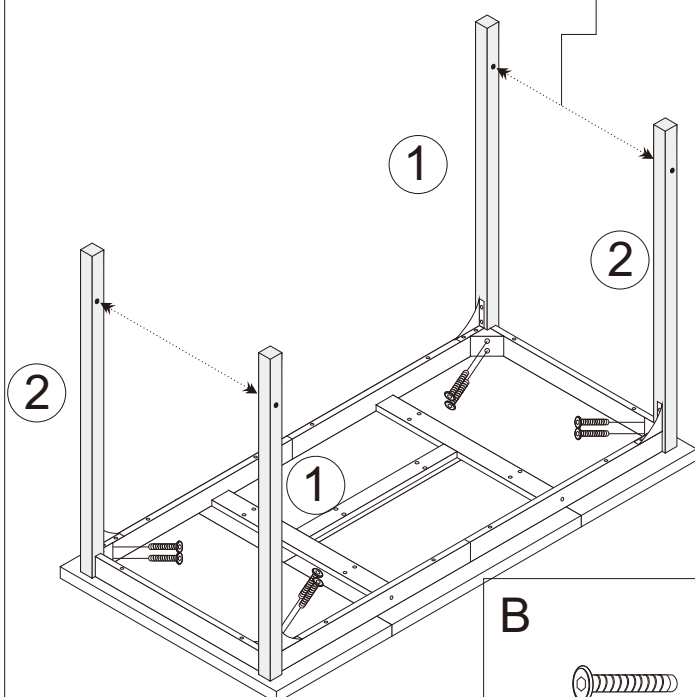

B




8x40mm

x8

If this happens, just switch the two steel legs left and right to install it.

07

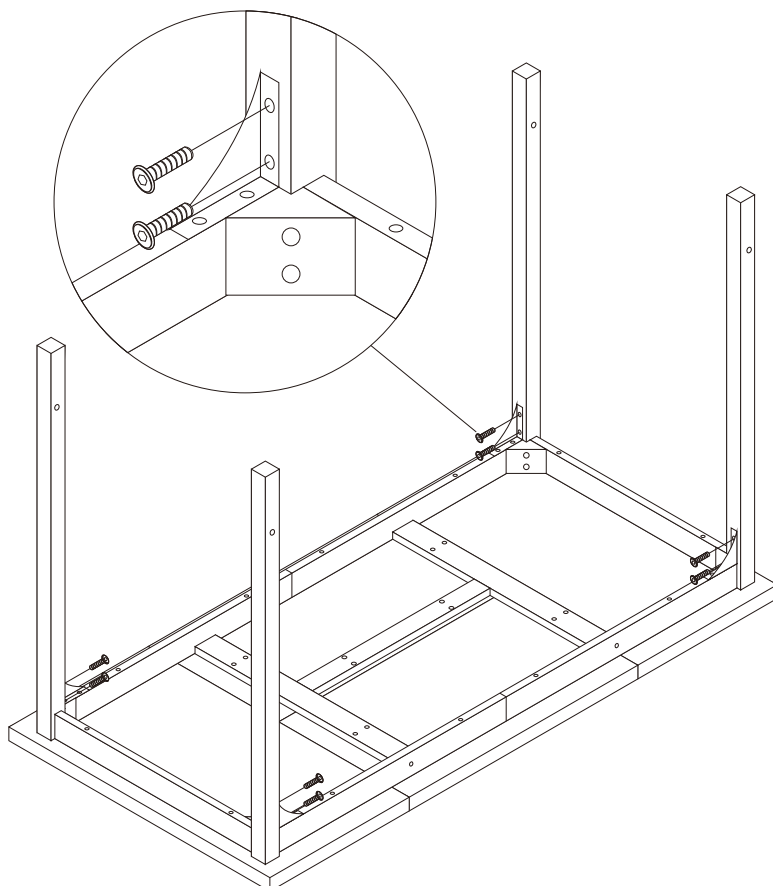


E




8x20mm

x8

08

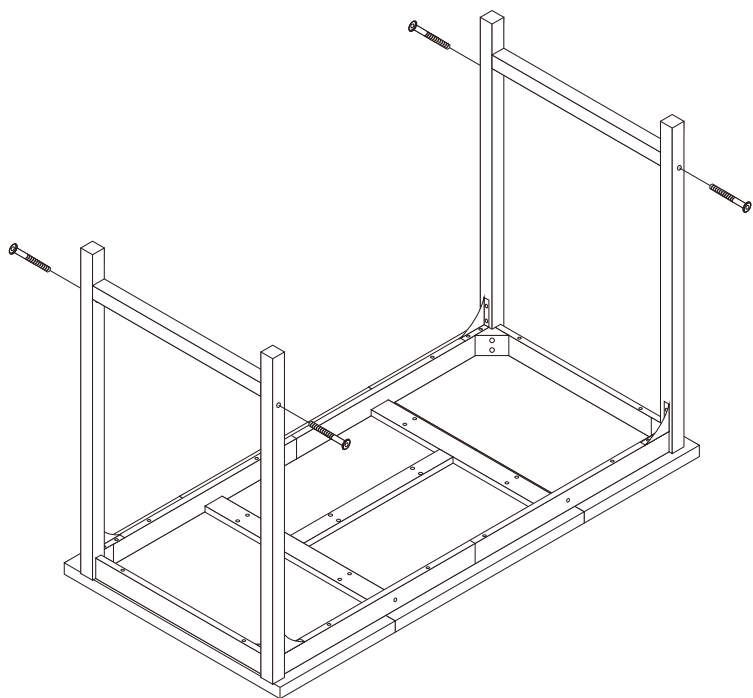



A



8x70mm

x4

09

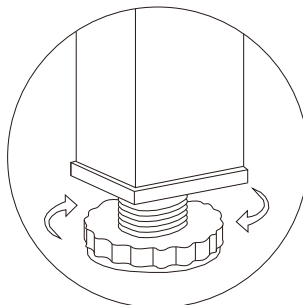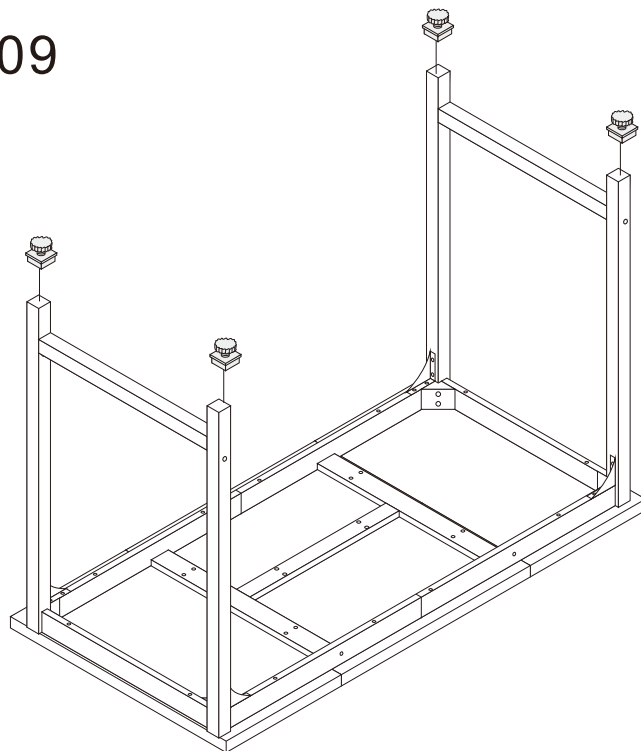

C



x4

10

