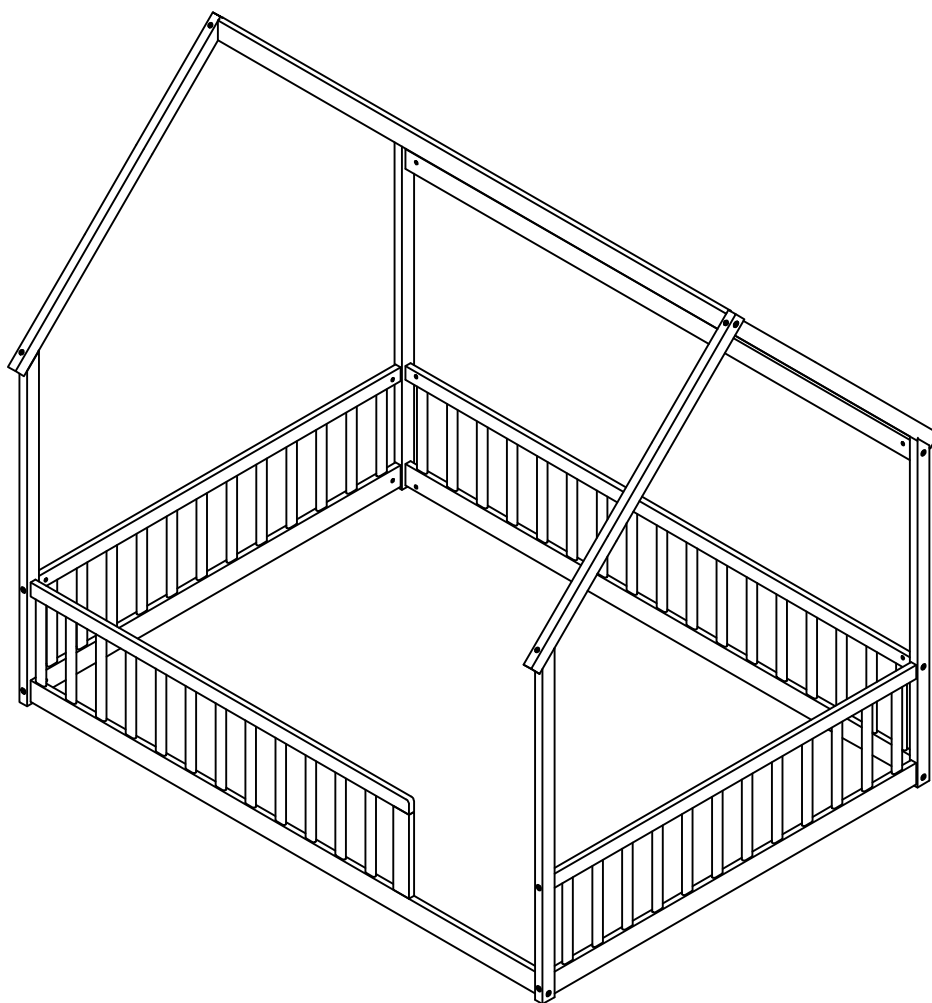
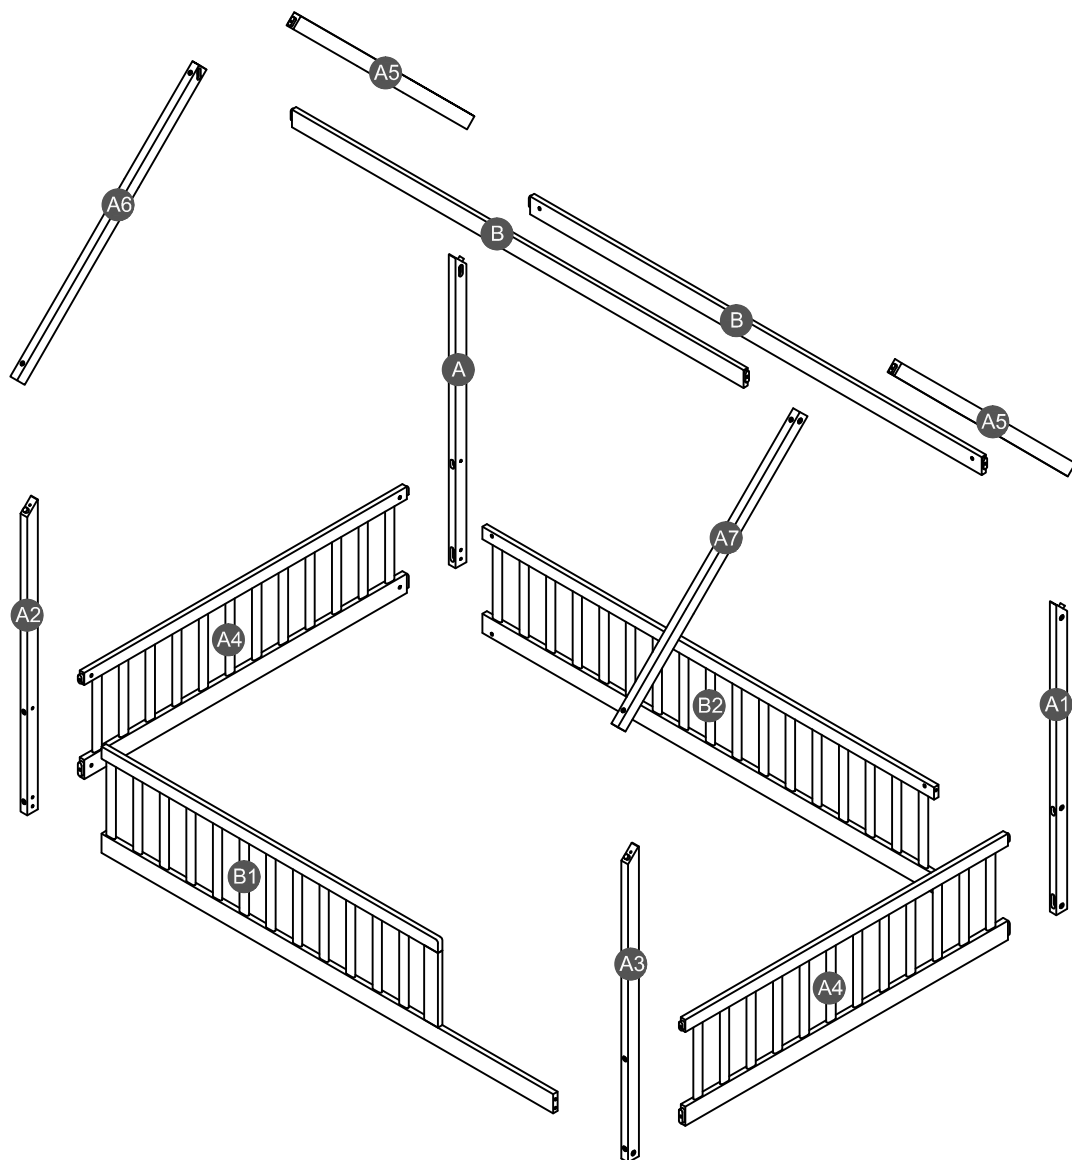


ASSEMBLY INSTRUCTIONS











FULL FLOOR HOUSE BED




Detail View





Part List

A  Leg (Left back) - 1pc	A1  Leg (Right back) - 1pc	A2  Leg (Left front) - 1pc
A3  Leg (Right front) - 1pc	A4  Guard rail HB/FB - 2pcs	A5  Upper bar (back) - 2pcs
A6  Upper bar (left front) - 1pc	A7  Upper bar (right front) - 1pc	B  Upper horizontal bar - 2pcs
B1  Guard rail (front) - 1pc	B2  Guard rail (back) - 1pc	

Hardware List

1  Ø8*30mm Wood dowel (4pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (19pcs)	3  1/4"*15 (9.5mm) Horizontal-Hole bolts(19pcs)
4  (Ø12)1/4"*65mm Hex-Head Screws (6pcs)	5  21*21*17*1.7mm Metal bracket (1pc)	6  Ø3.5*15mm Wood screws (2pcs)
7  (1/4")4.5*58mm Allen key		

OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)





Electric
Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:


2		3		4	
	4PCS		4PCS		3PCS

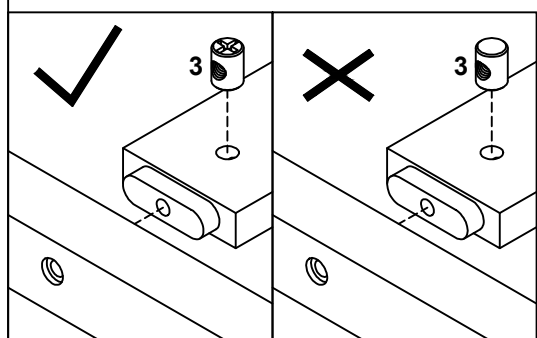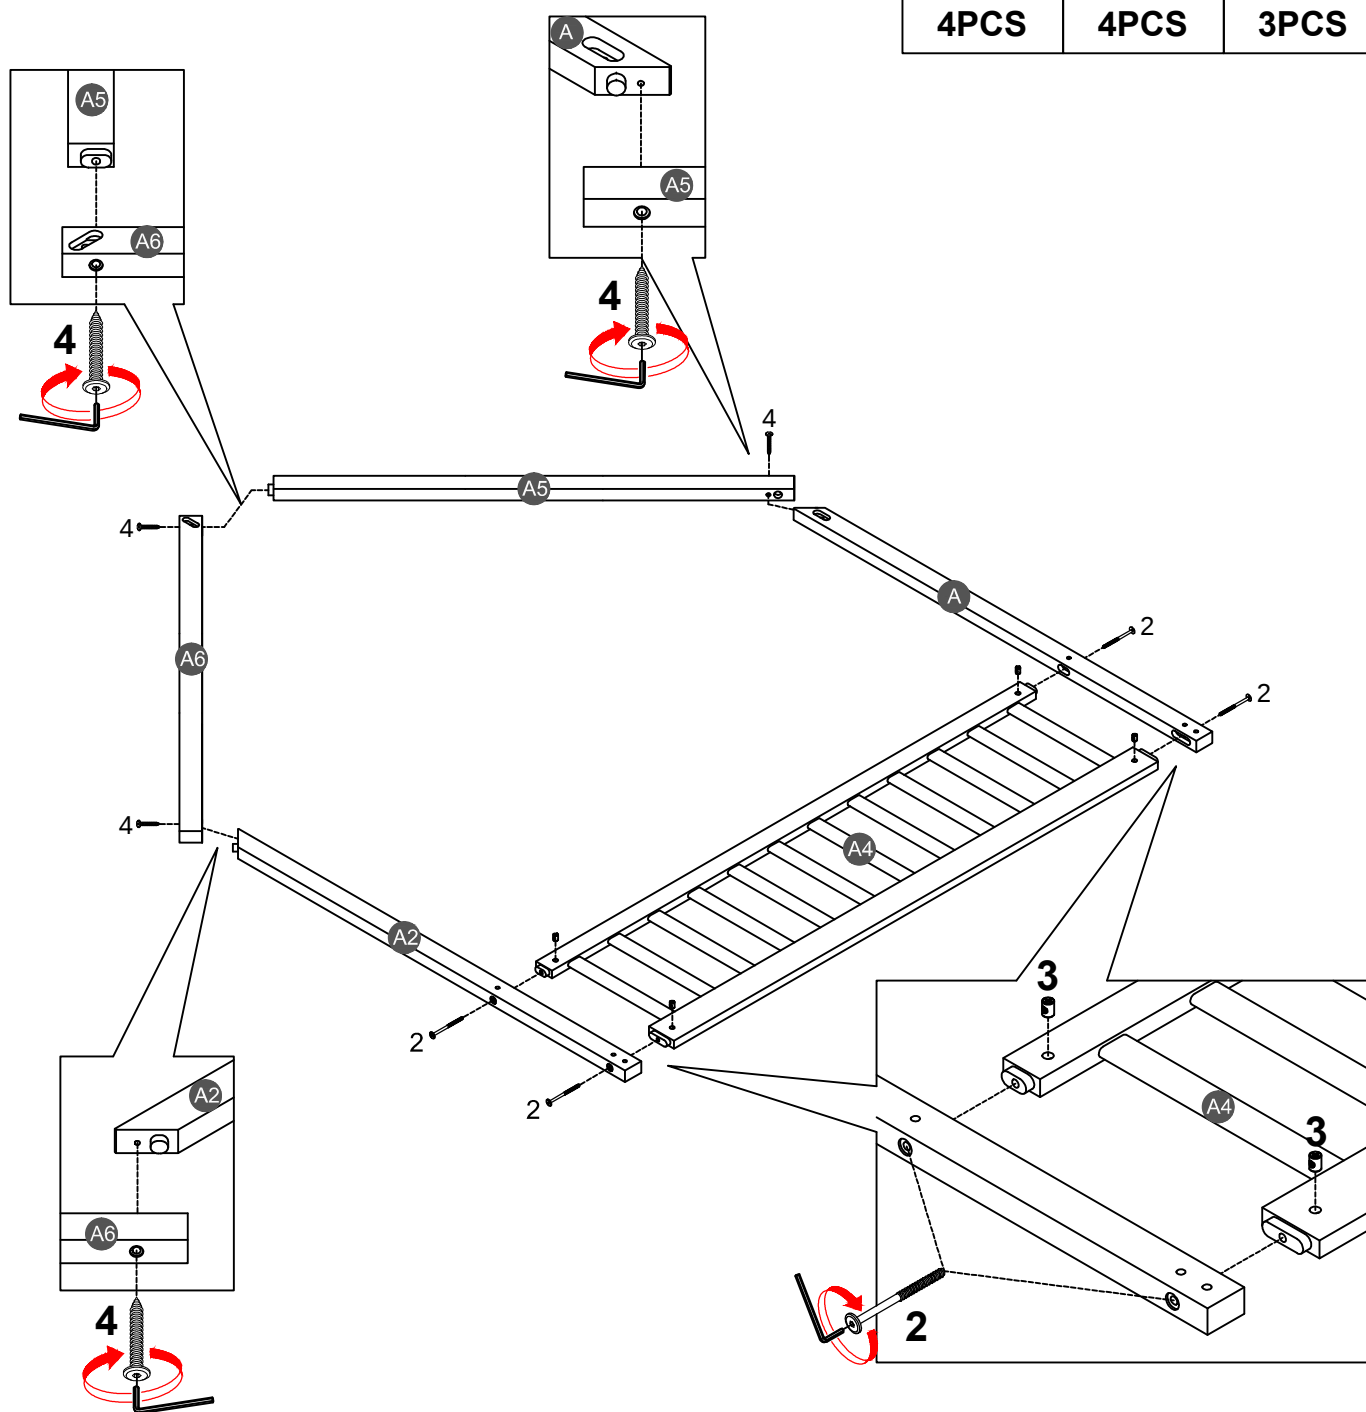

EN: Note: The side of part #3 with the "x" mark needs to be facing up, otherwise it cannot be tightened.

STEP 2:


2		3		4	
4PCS		4PCS		3PCS	

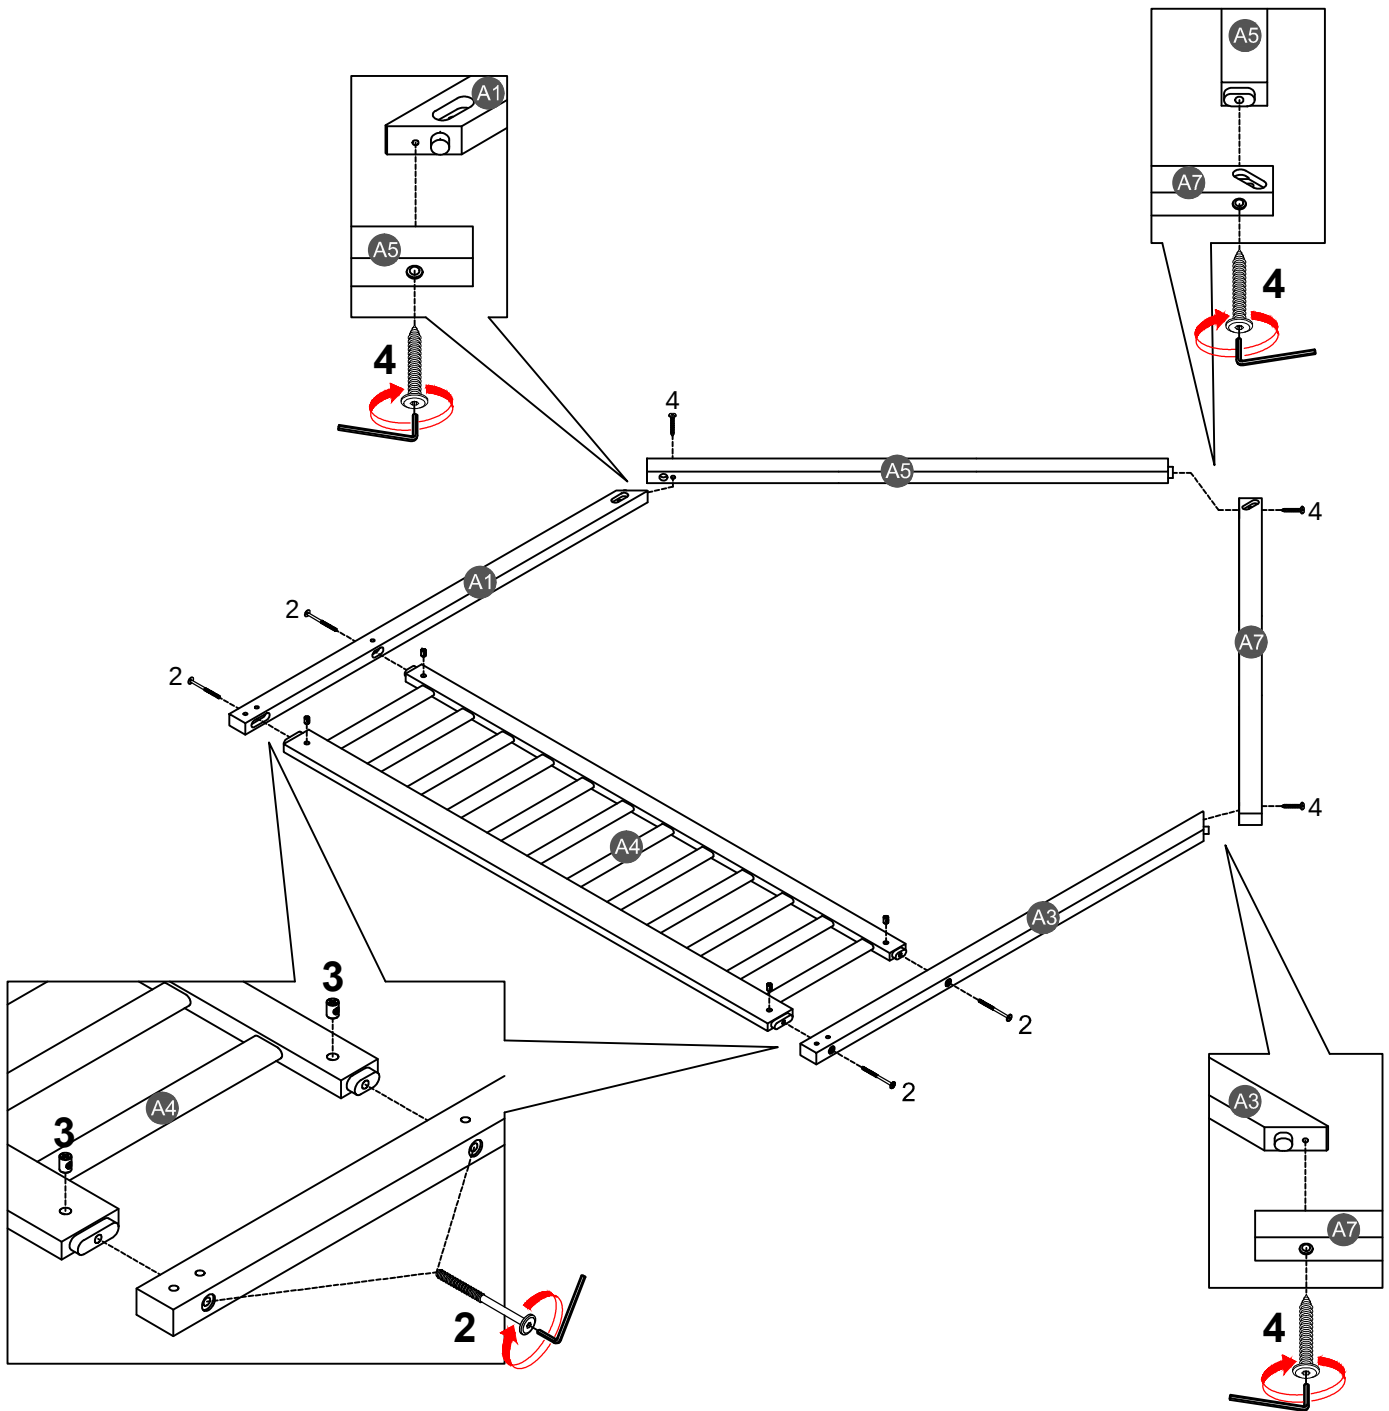

STEP 3:

1	2	3
		
x4	11PCS	11PCS

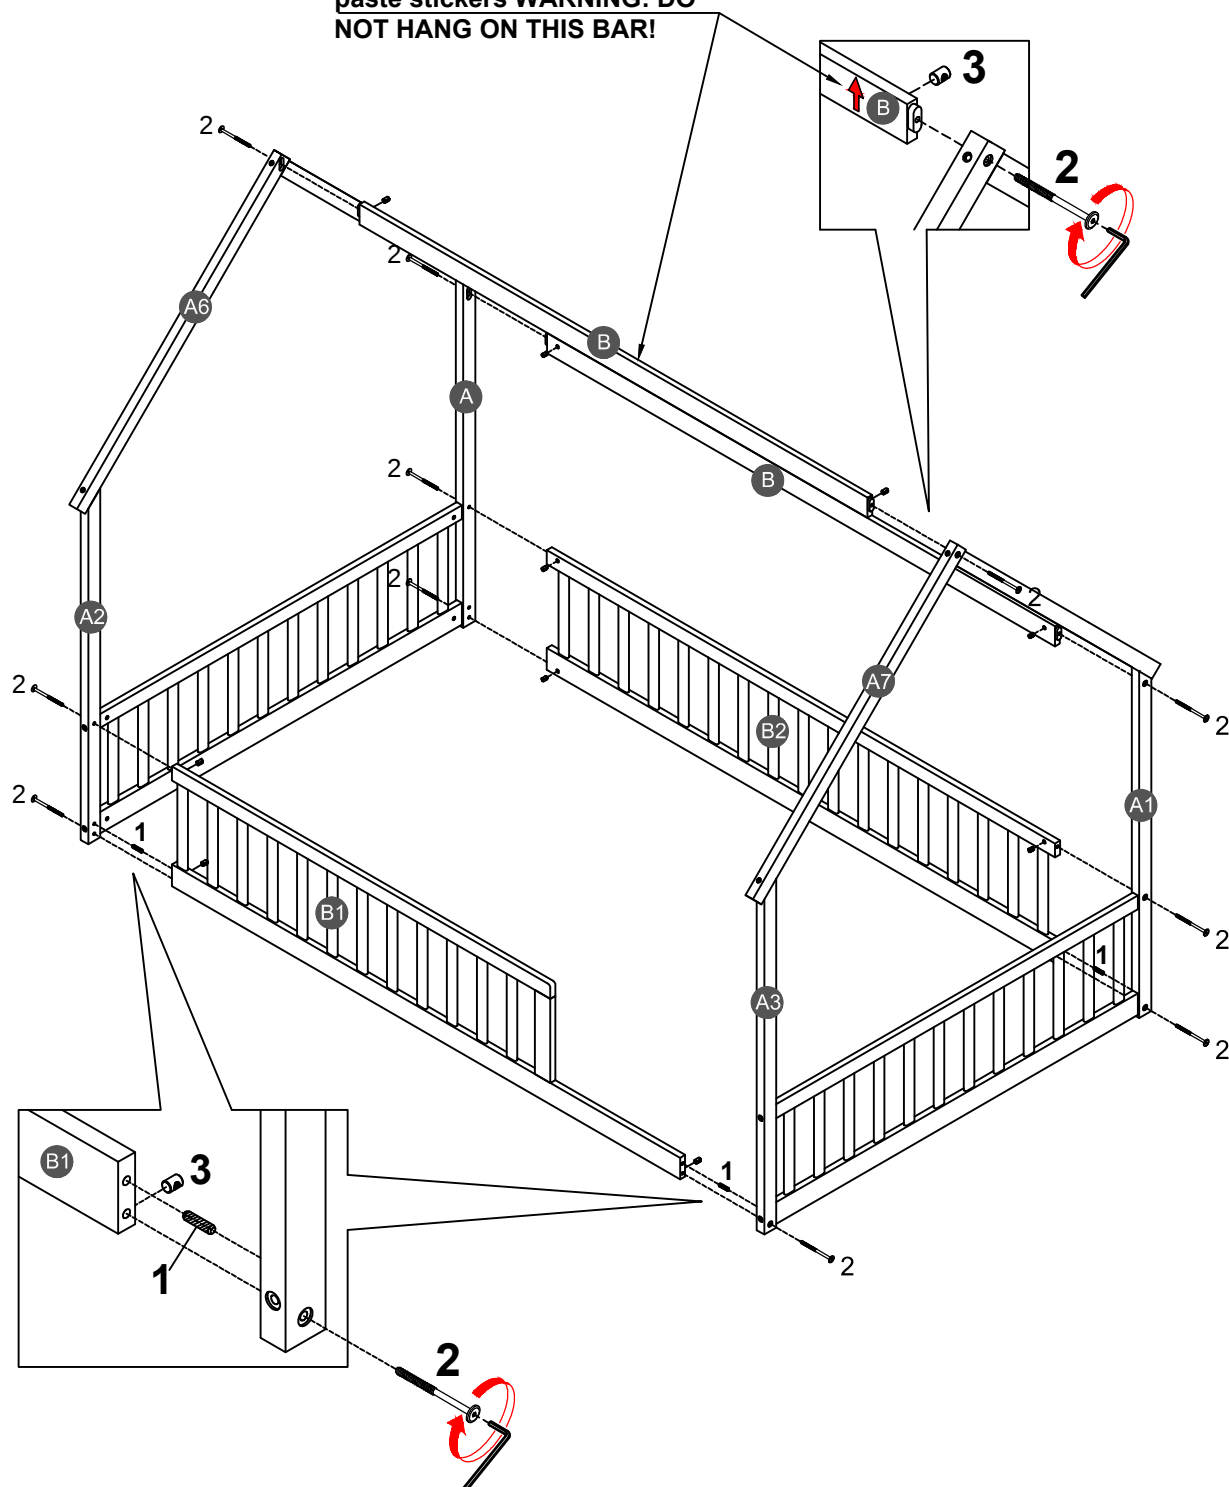Remark: Upper horizontal
paste stickers **WARNING: DO
NOT HANG ON THIS BAR!**



STEP 4:

5	6
	
1PC	2PCS

