




ASSEMBLY INSTRUCTION

LSJ029

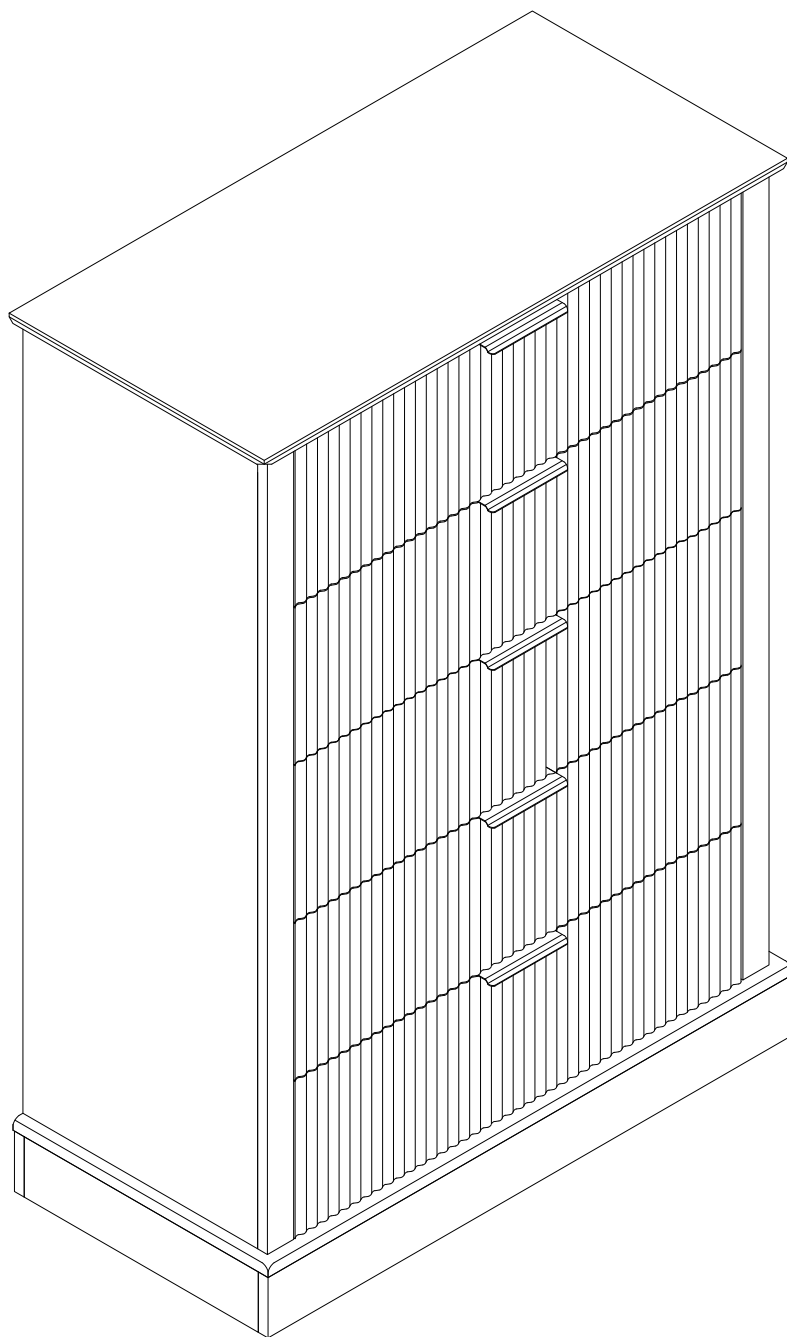


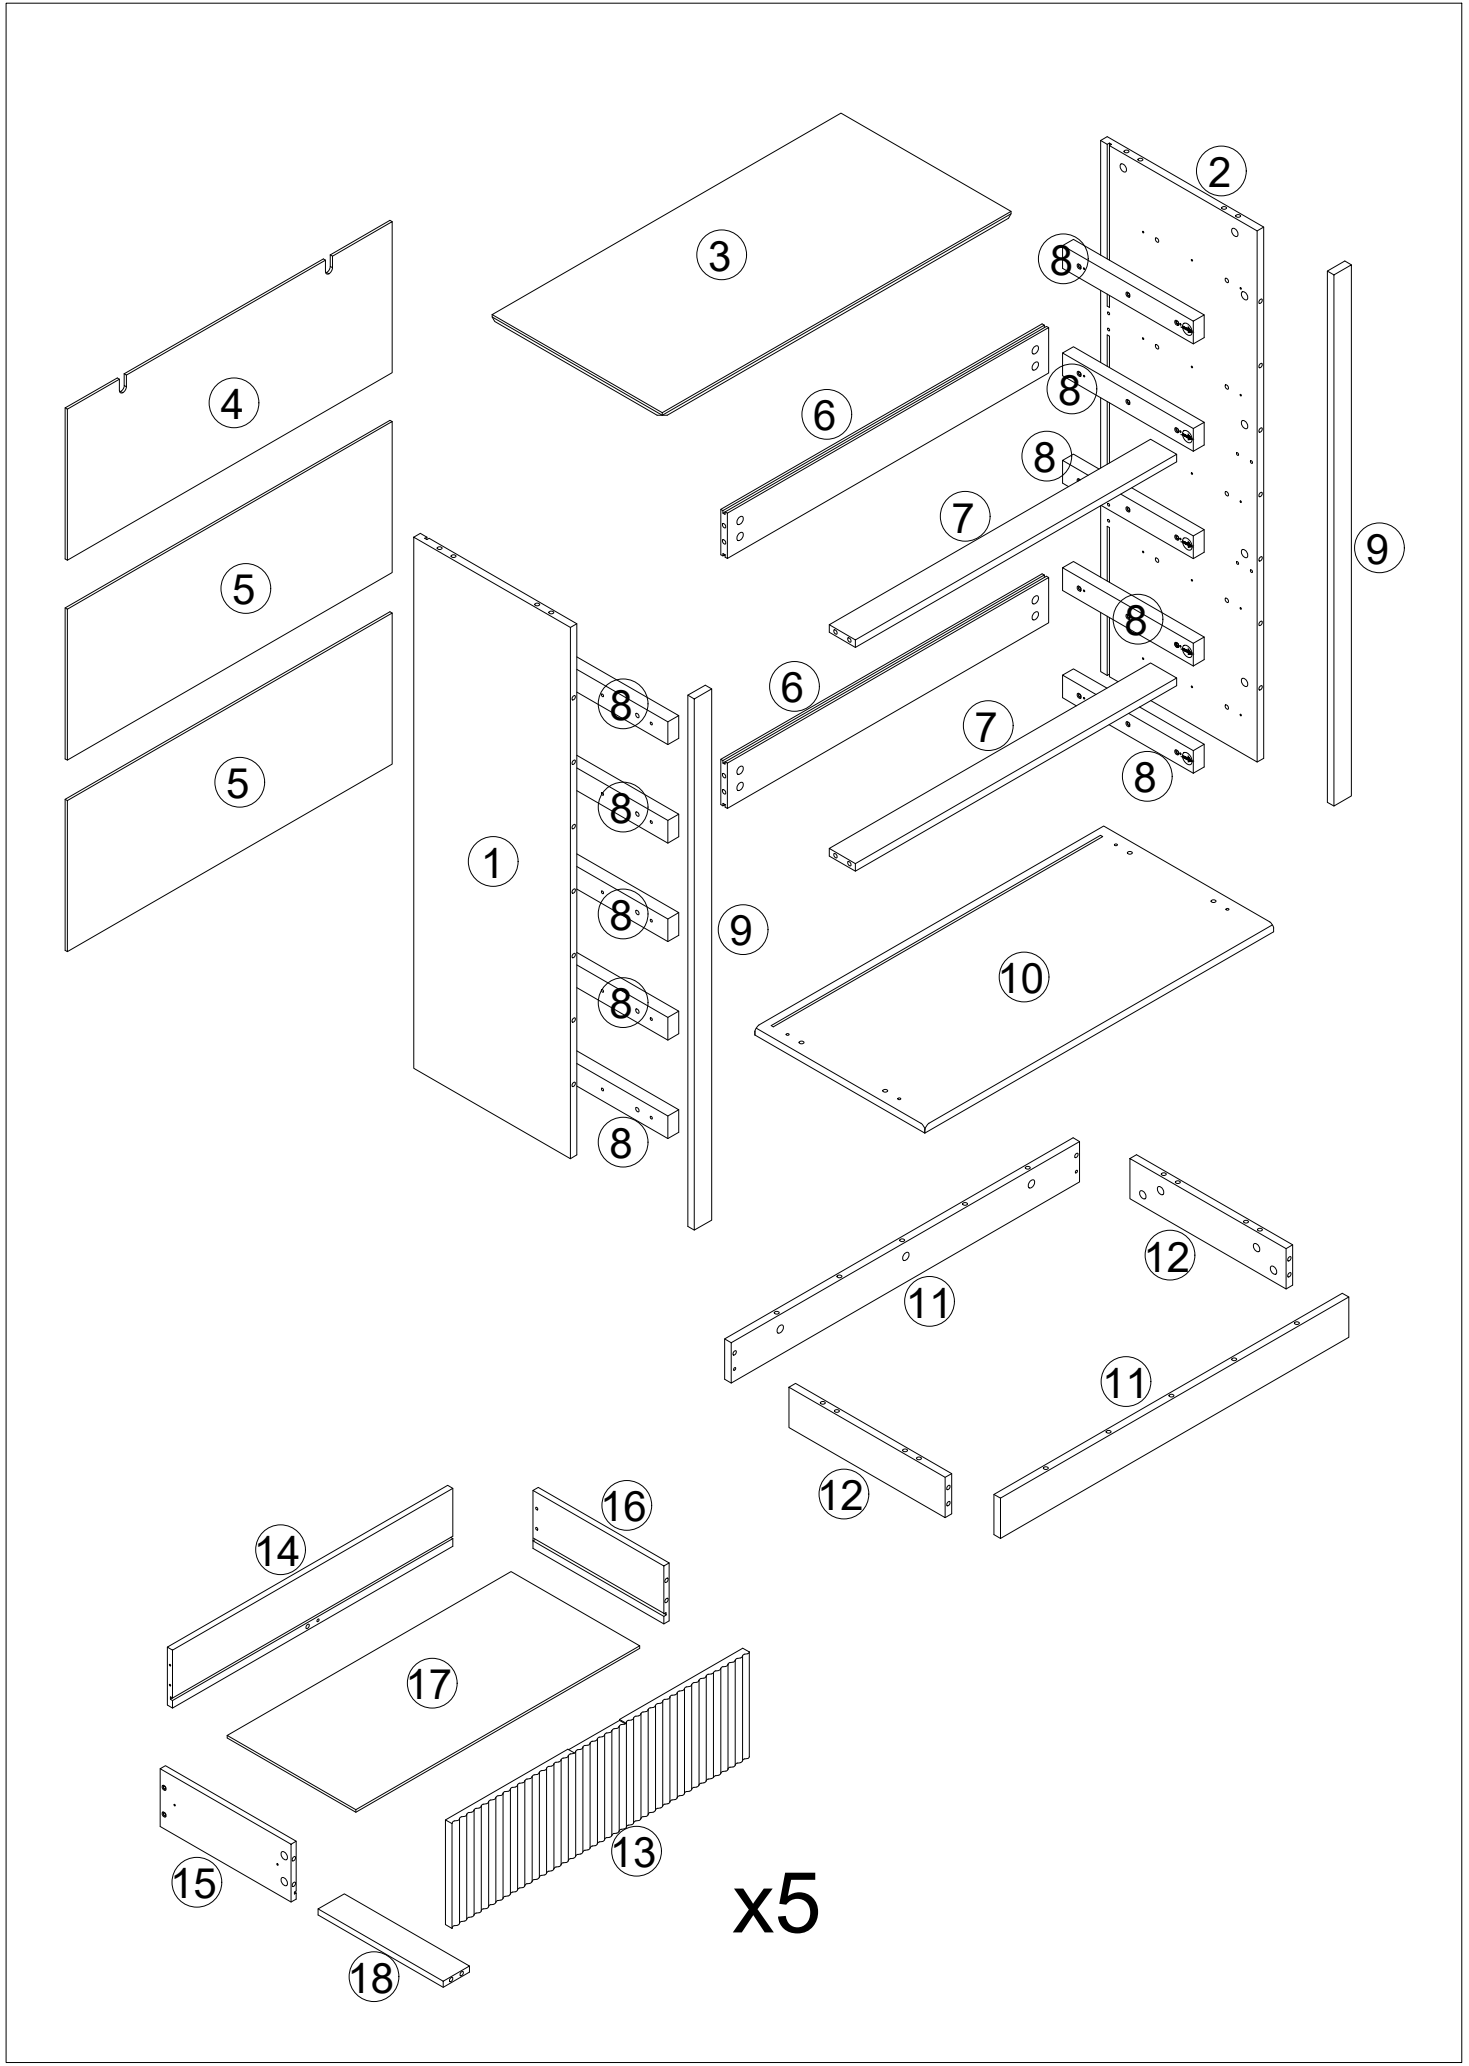


x5

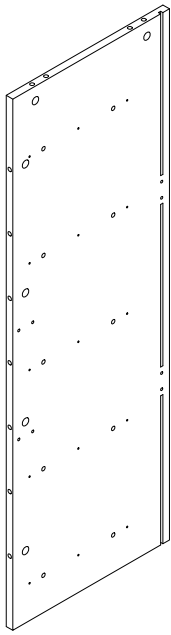


① x 1

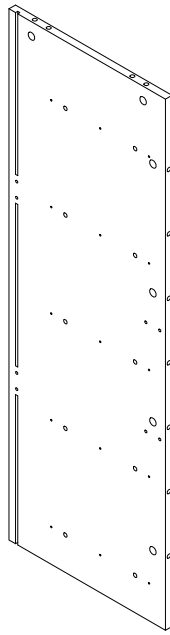


② x 1

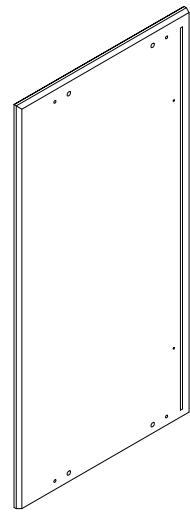


③ x 1

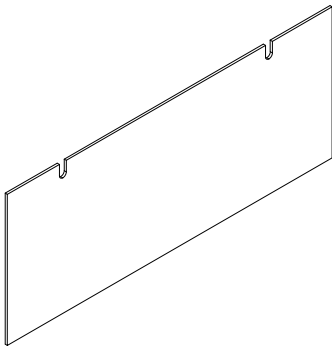


④ x 1

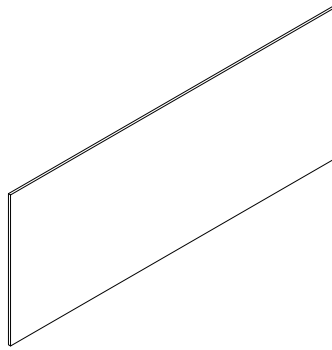


⑤ x 2

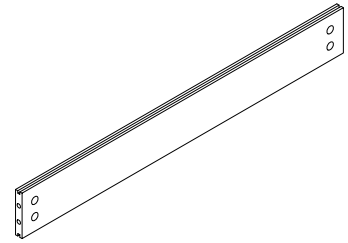

⑥ x 2

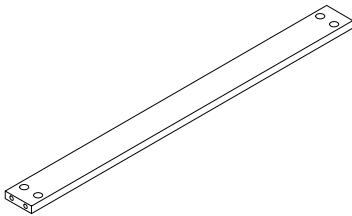


⑦ x 2

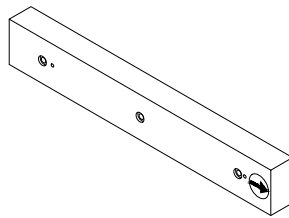


⑧ x 10




⑨ x 2

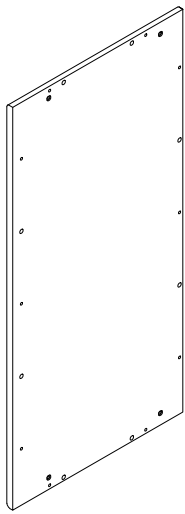


⑩ x 1

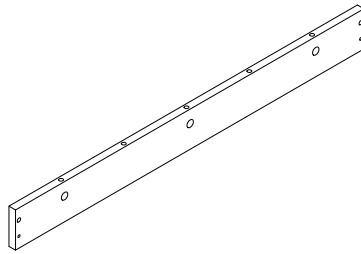


⑪ x 2

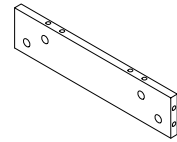


⑫ x 2

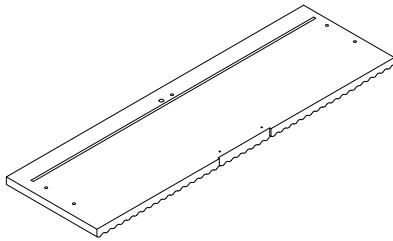


⑬ x 5

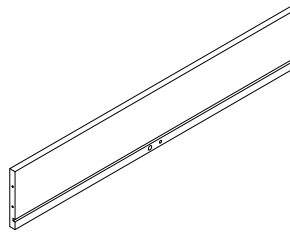


⑭ x 5

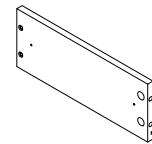


⑮ x 5

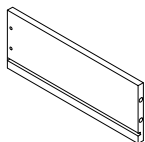







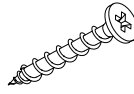

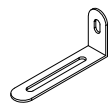



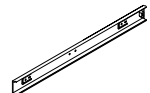
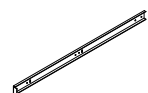
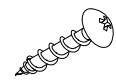
⑯ x 5

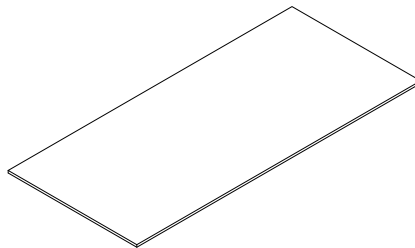







⑰ x 5






⑱ x 5

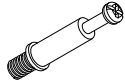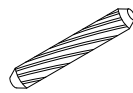 Φ6x35mm A x 67+2	 Φ15x9.5mm B x 67+2	 Φ6x30mm C x 56+2	 M3.5x12mm D x 50+2	 M4x14mm E x 2	 M3x14mm F x 10+1
 M4x35mm G x 31+2	 Φ6x30mm H x 2	 I x 2	 J x 5	 K x 6	 L x 10+1
 M x 10	 N x 10	 M4x30mm O x 30+2			




Step 1

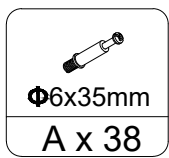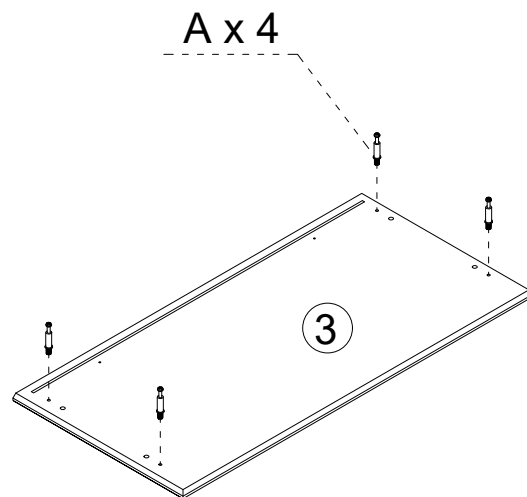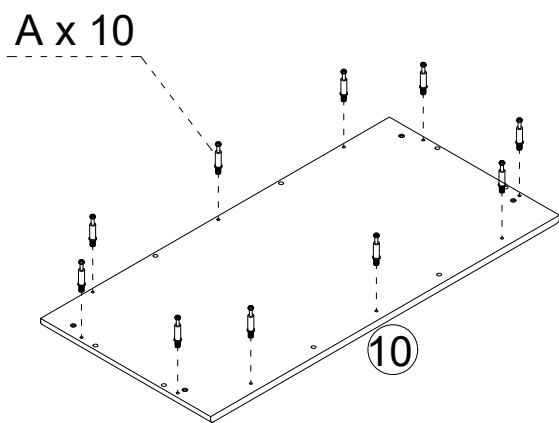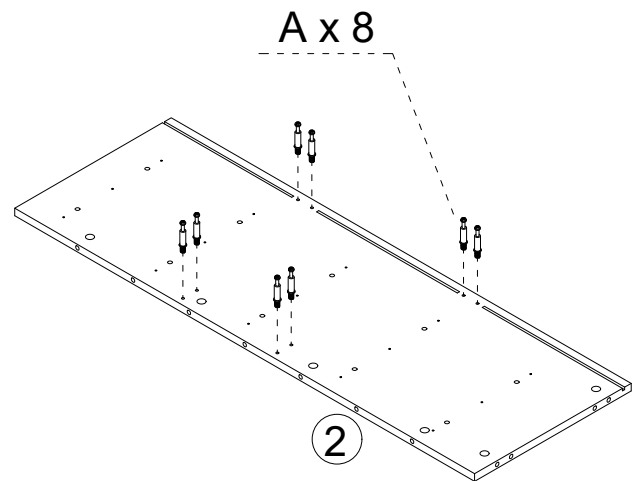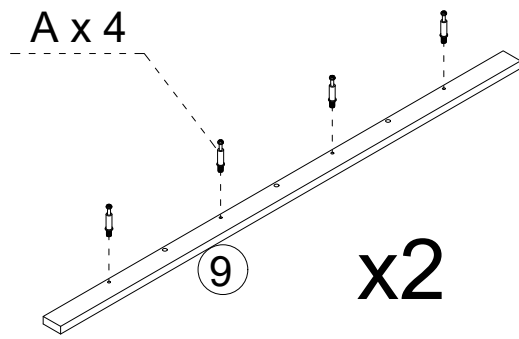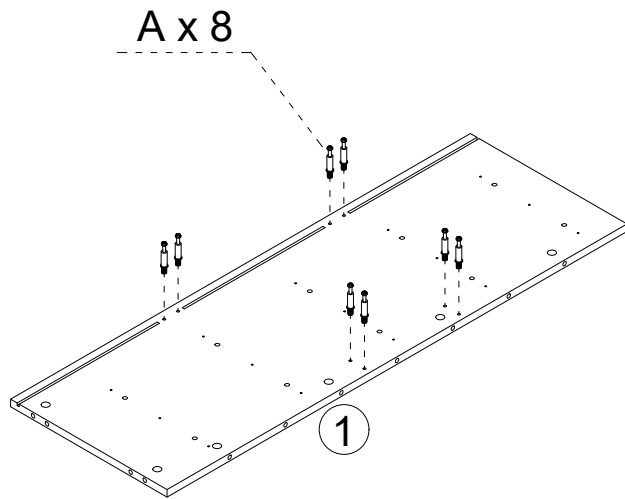

Step 2

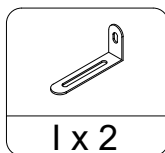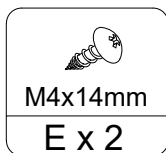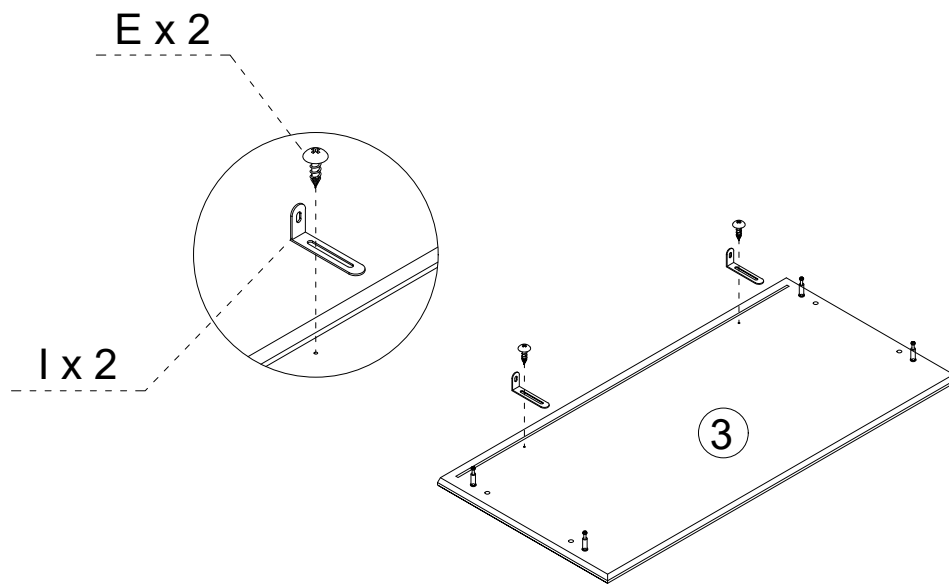

Step 3

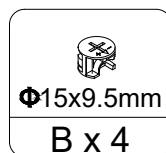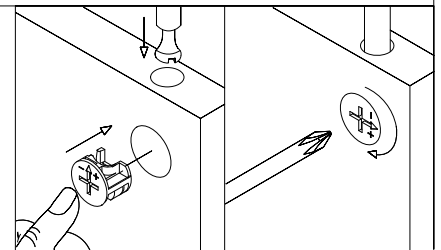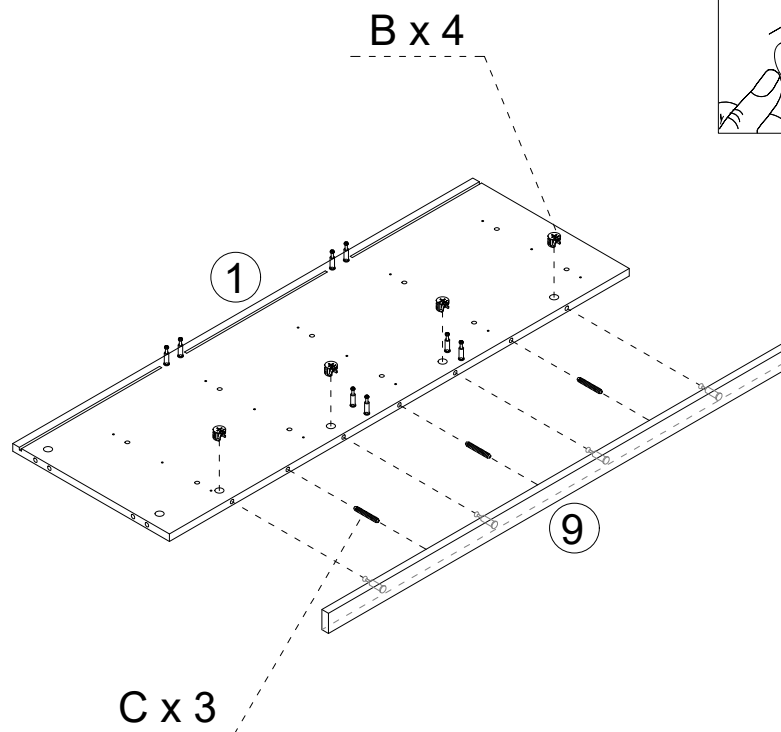

Step 4



**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.


Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

**Pay attention when connecting !
The sliding module must be at the front end.**


STEP 1 : Extend Slide
Extender la diapositiva

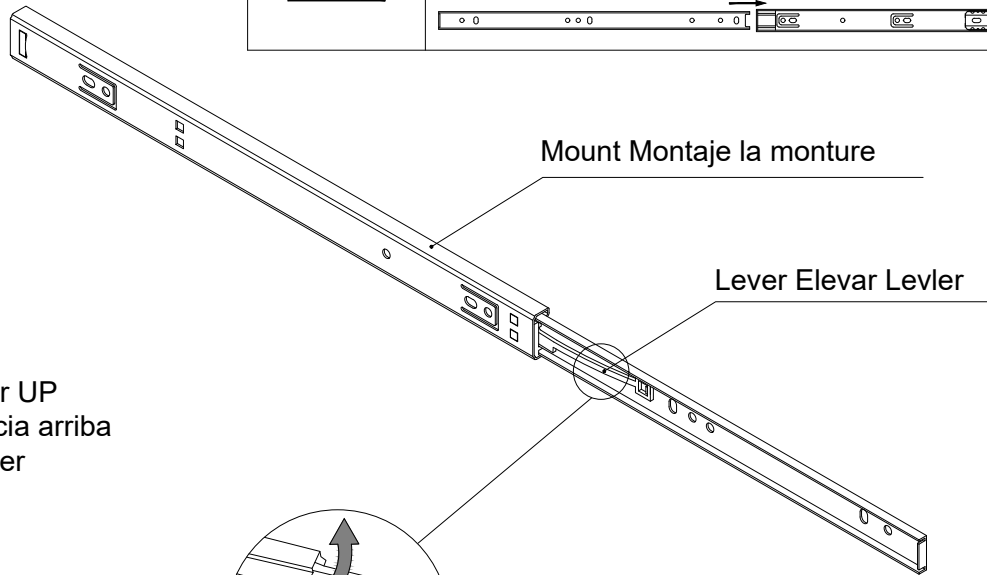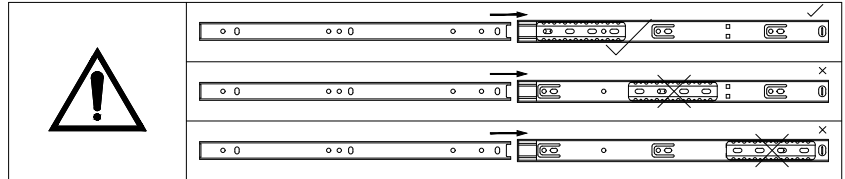

STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier


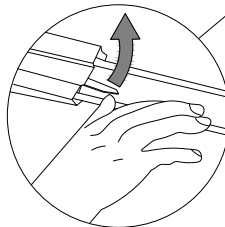


**Push lever for the left of drawer ,
press the lever for the right of drawer.**


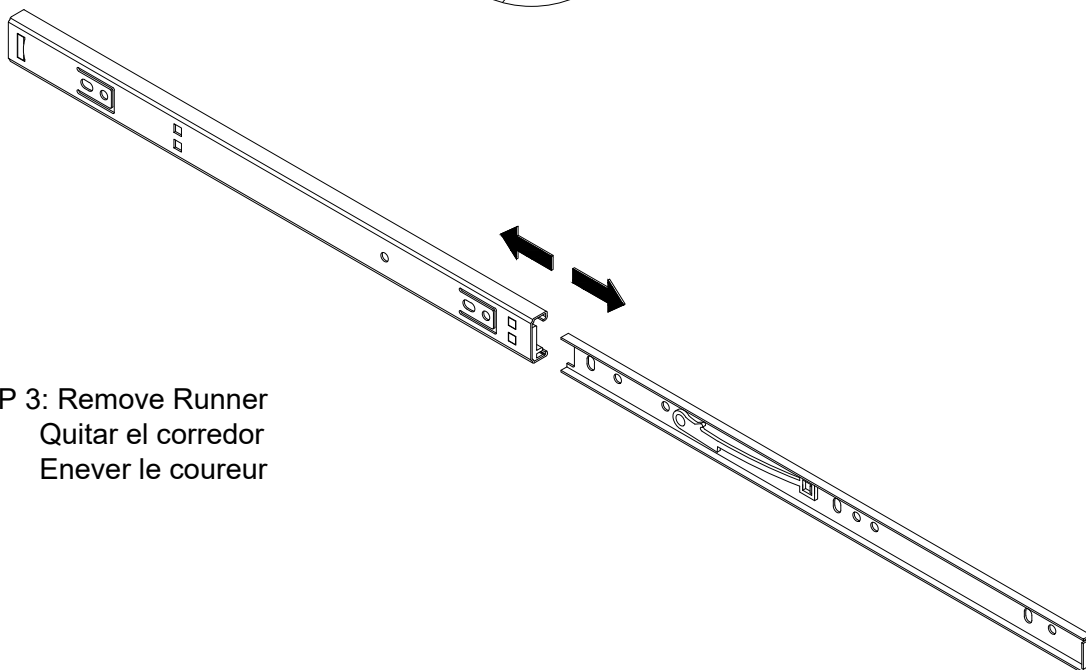


STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur


Step 5

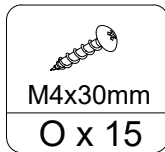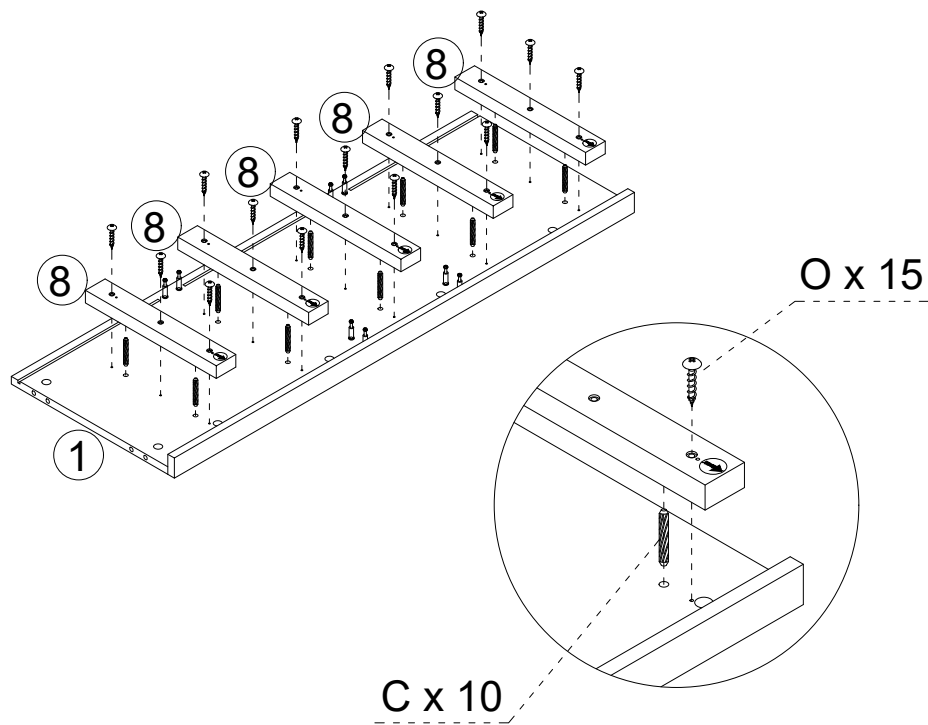


Step 6

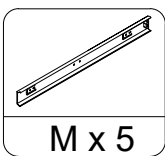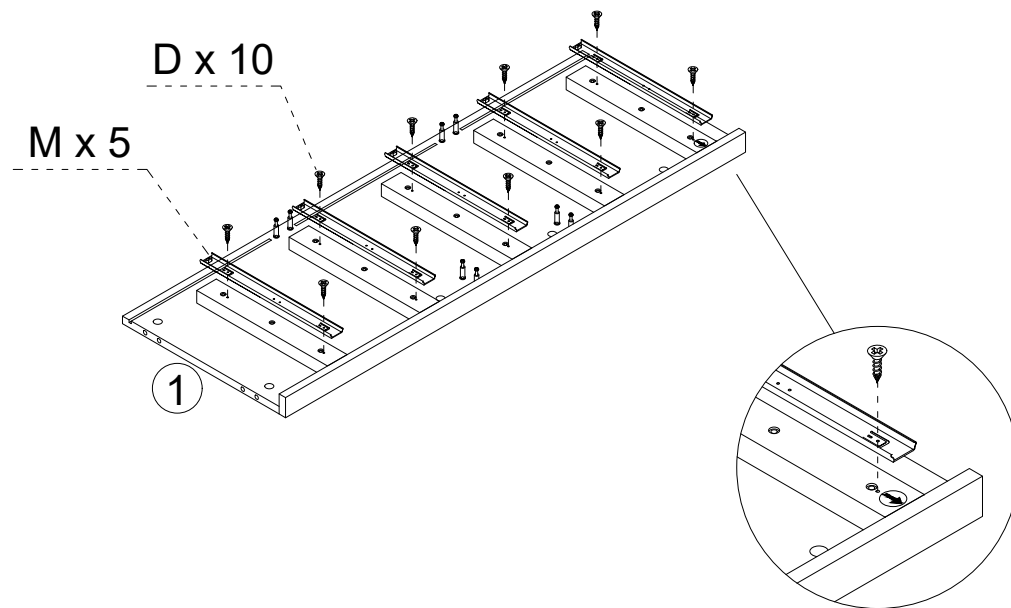


Step 7

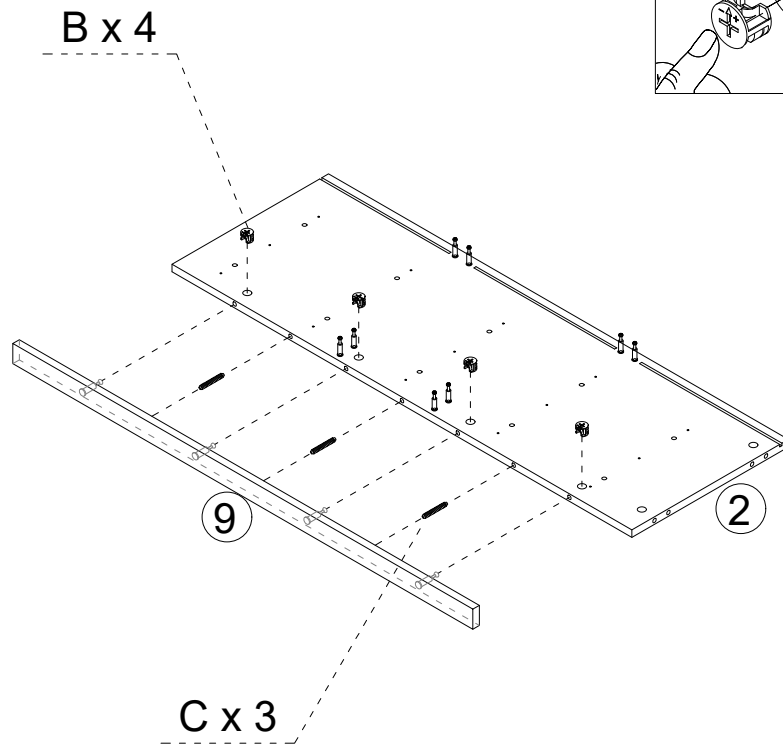



 $\Phi 15 \times 9.5 \text{mm}$
B x 4


 $\Phi 6 \times 30 \text{mm}$
C x 3




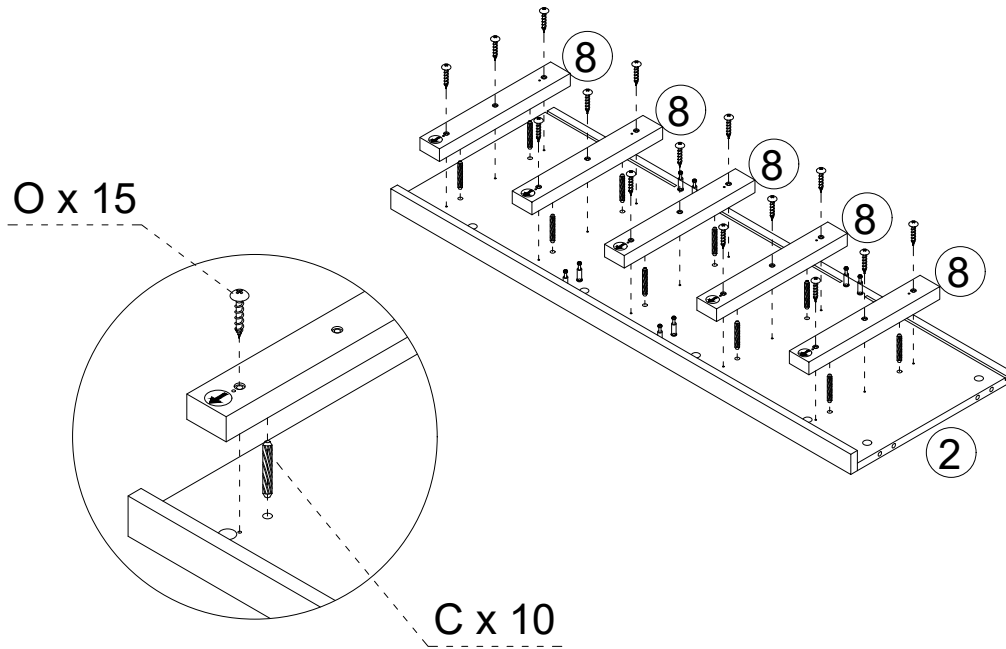
Step 8






 $\Phi 6 \times 30 \text{mm}$
C x 10


M4 x 30mm
O x 15




Step 9

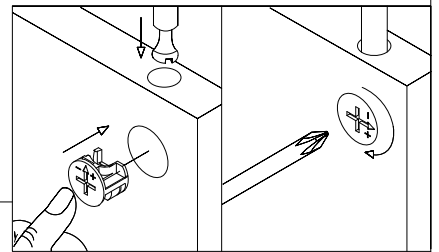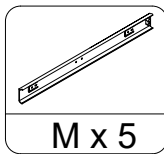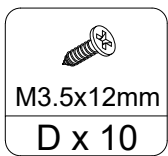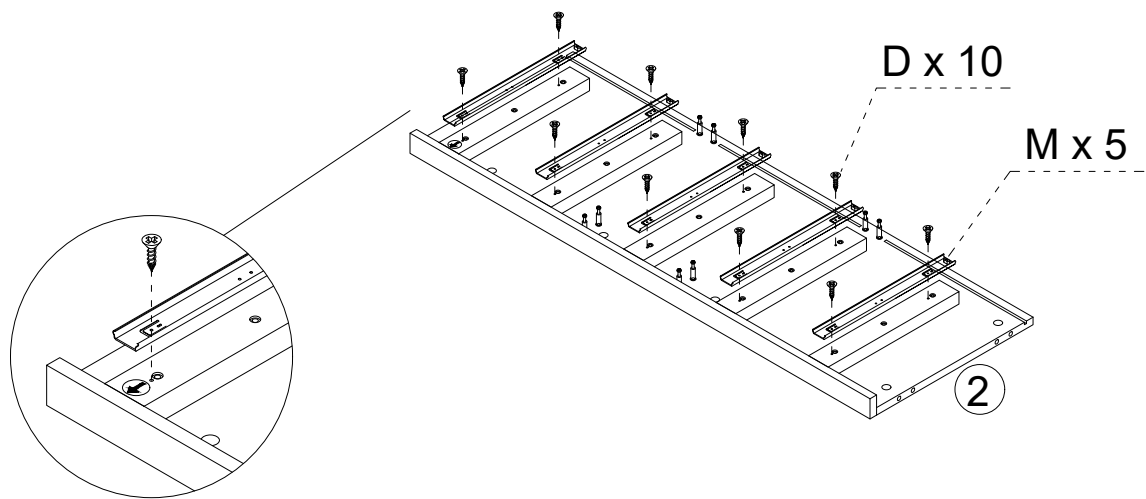


Step 10

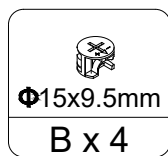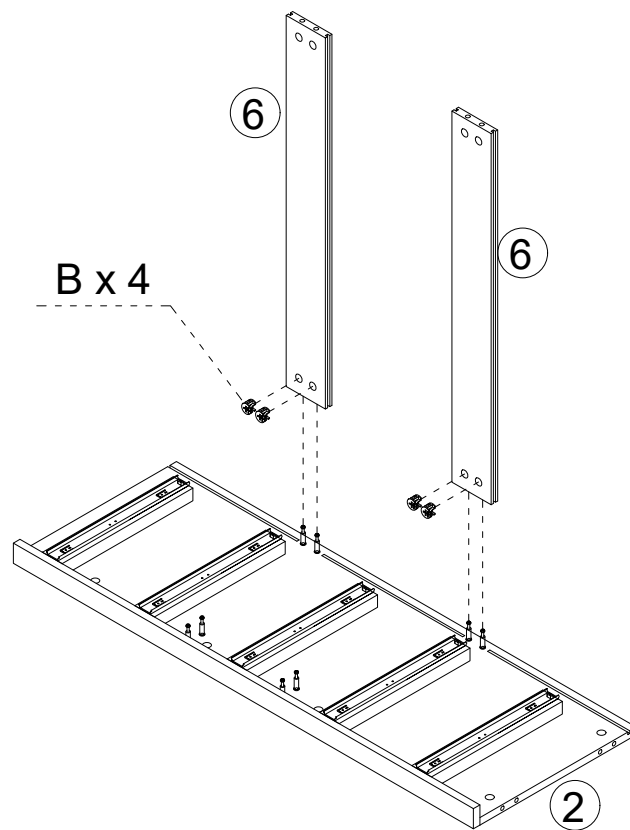




Step 11

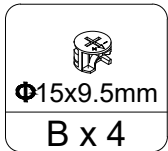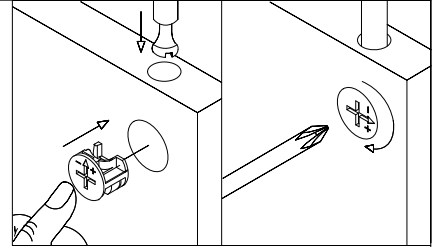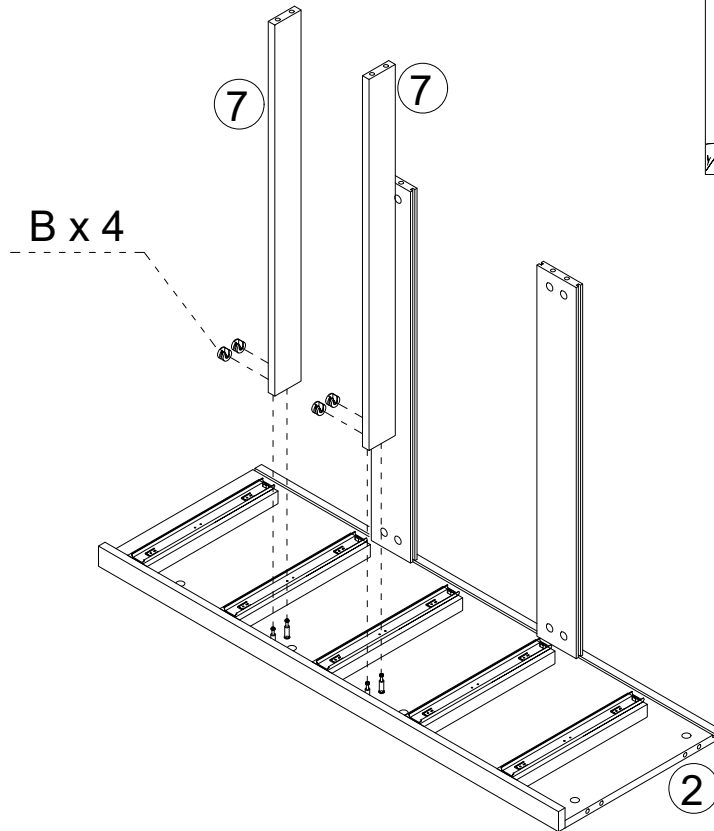


Step 12

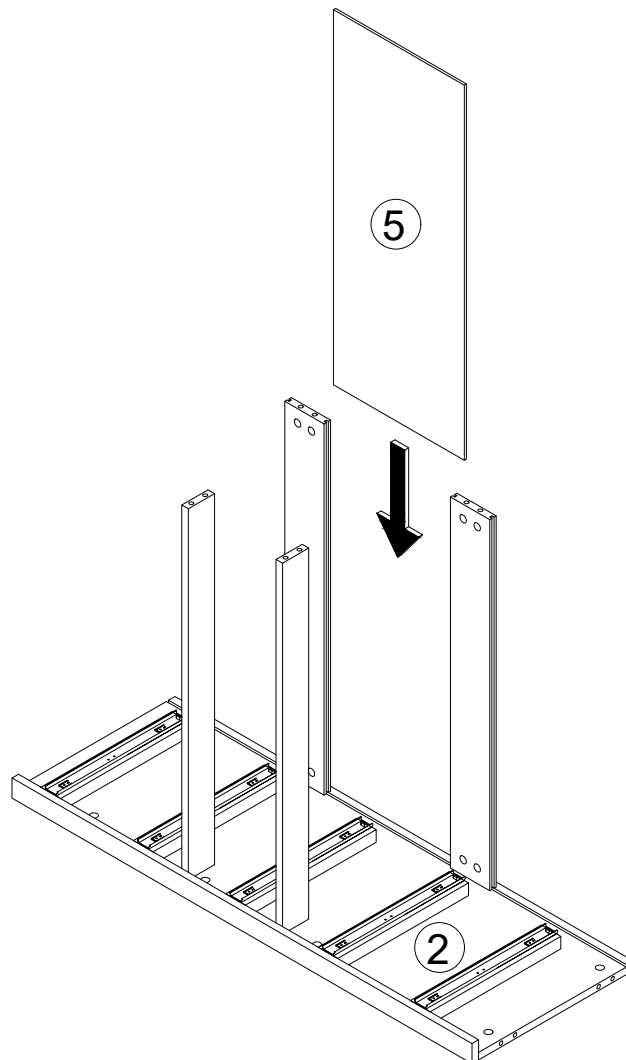




Step 13

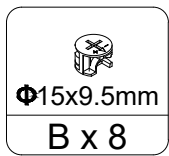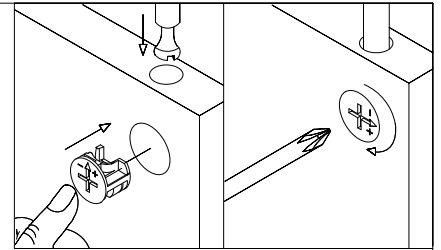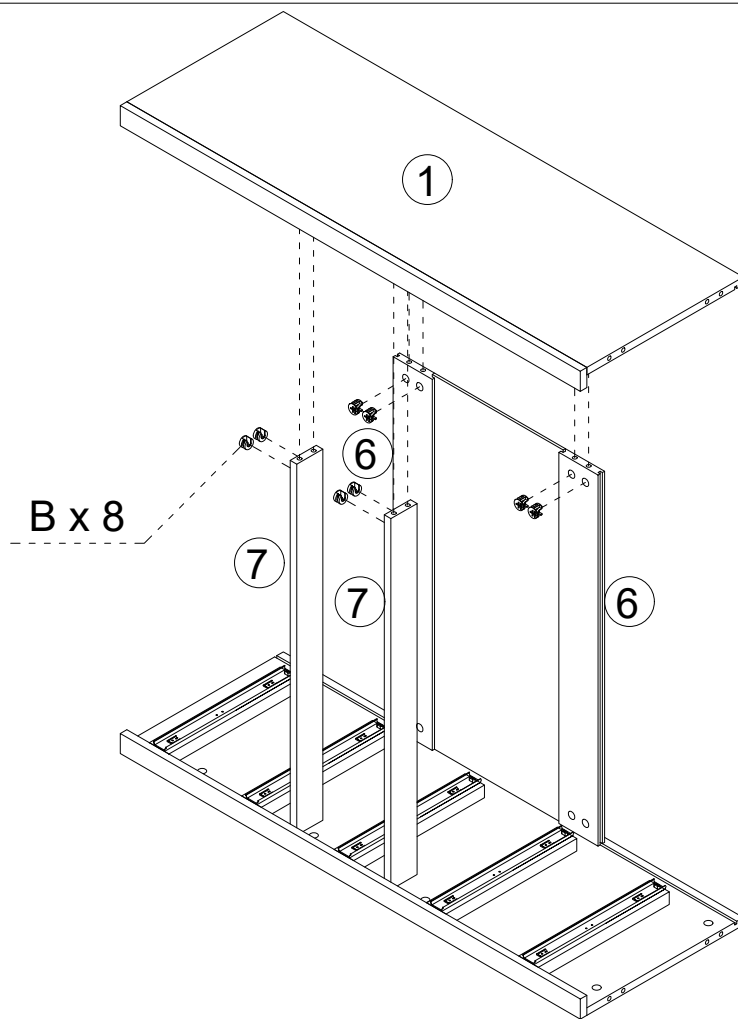


Step 14

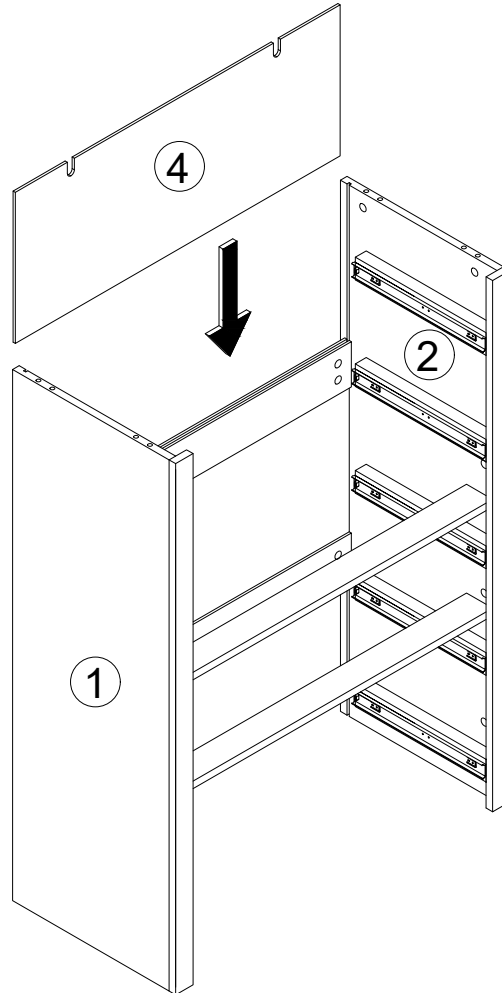



Step 15

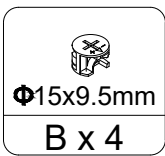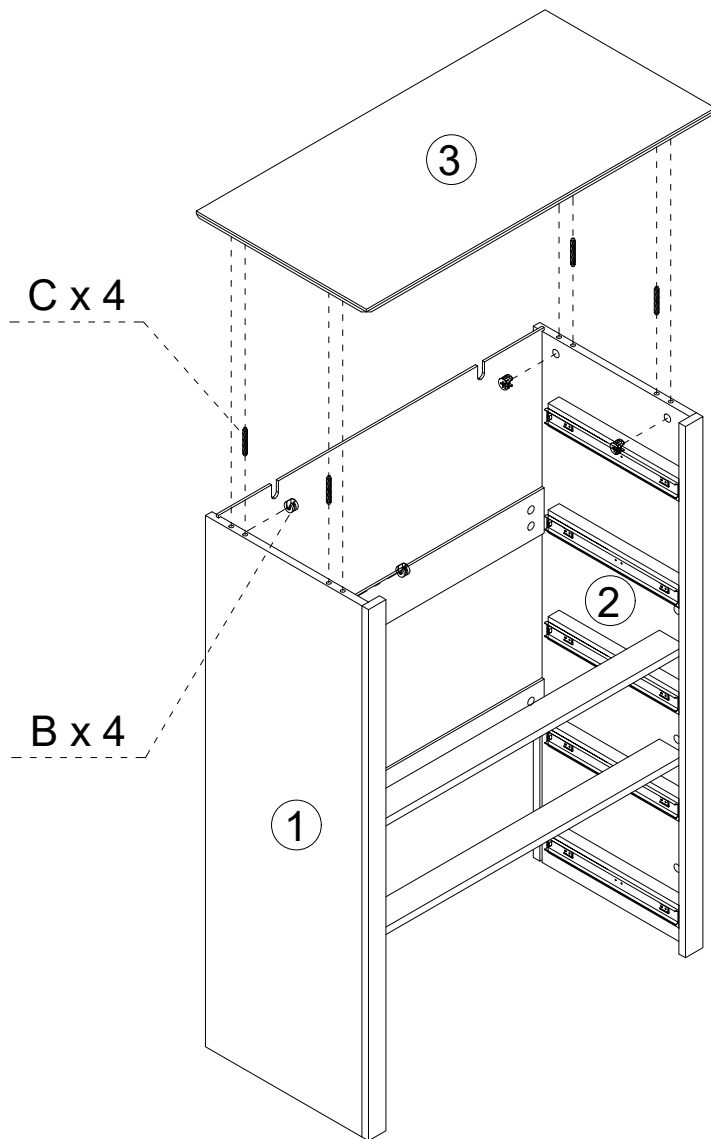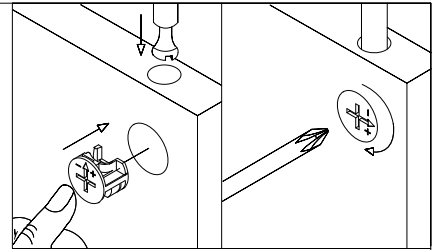



Step 16

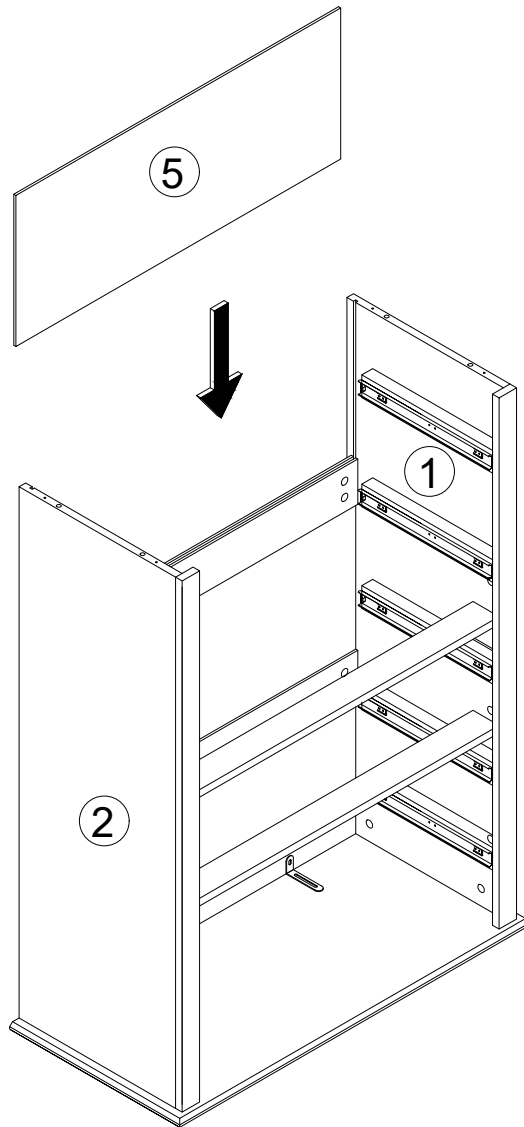



Step 17

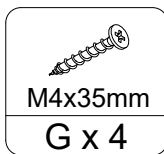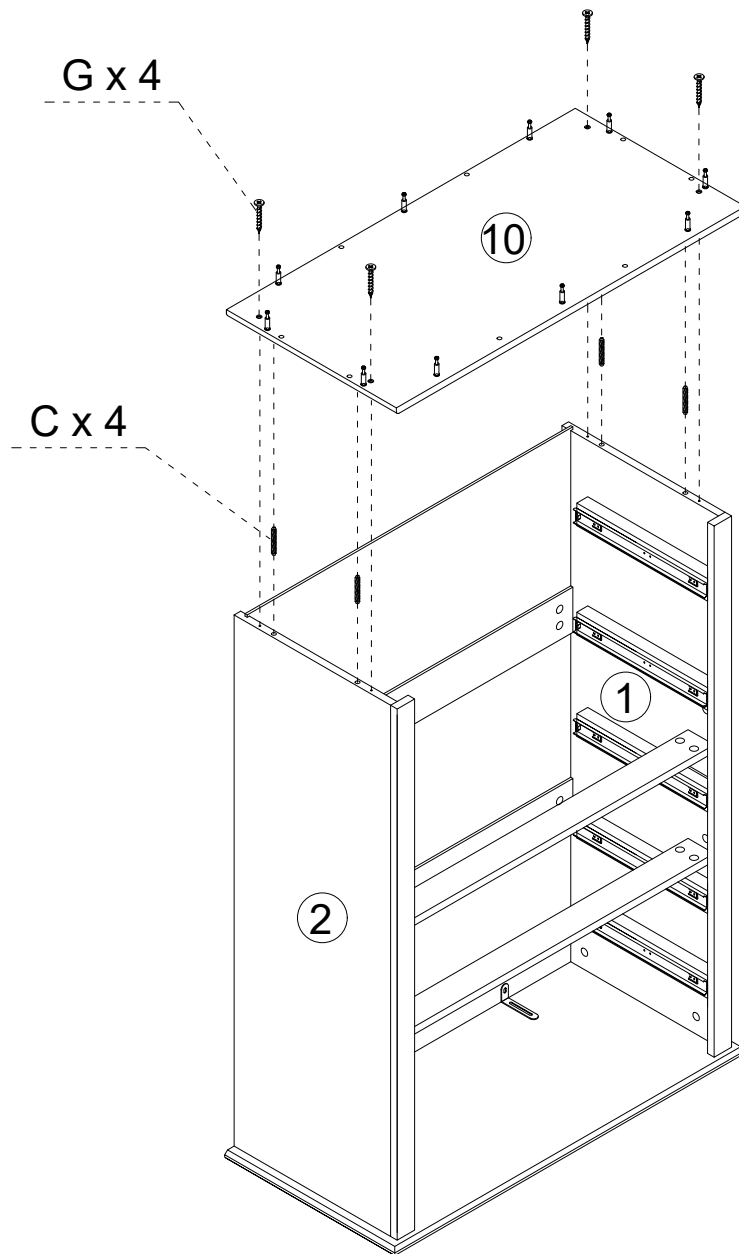



Step 18

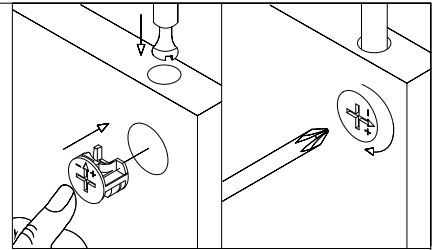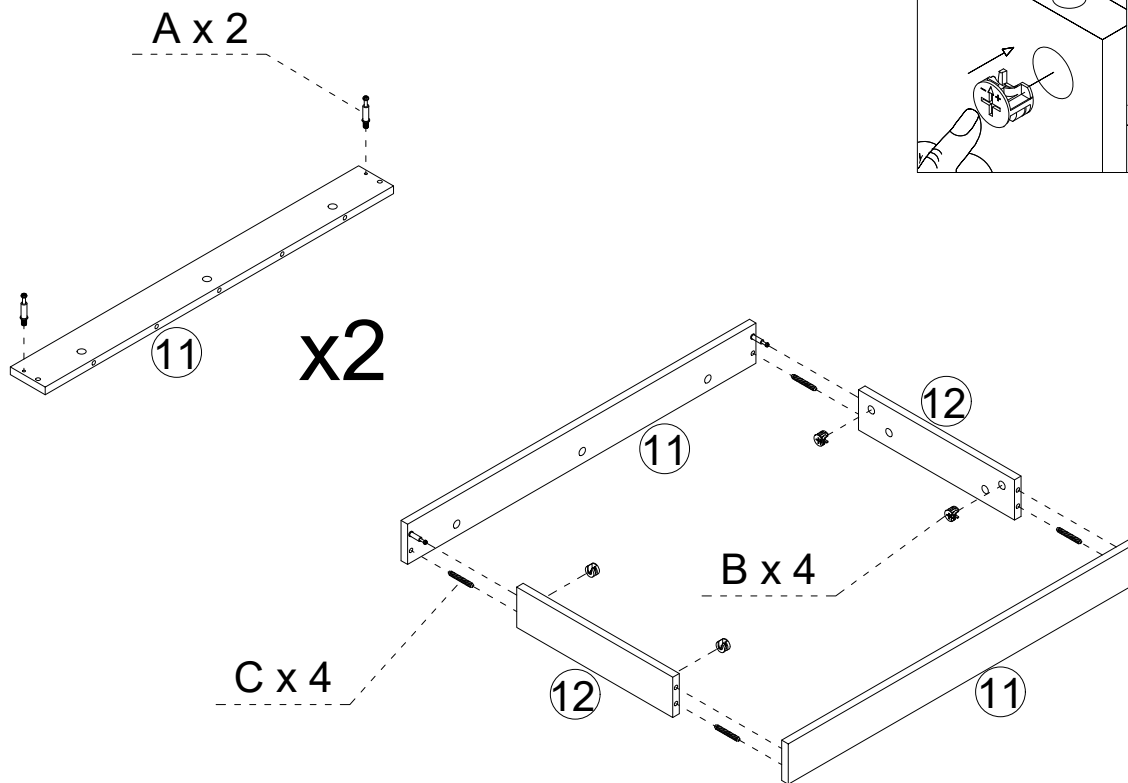




Step 19

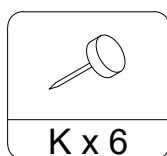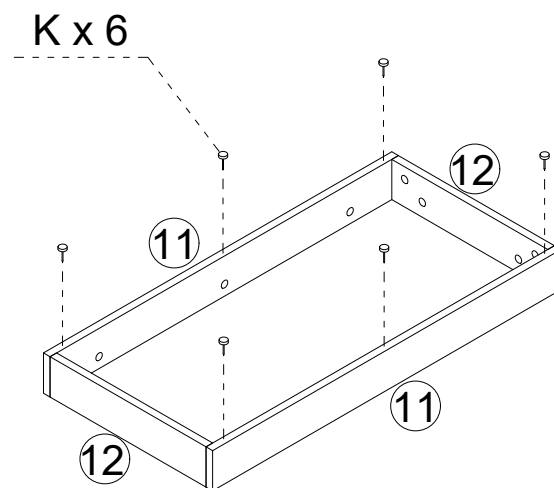



Step 20

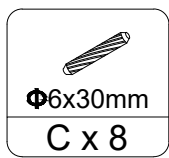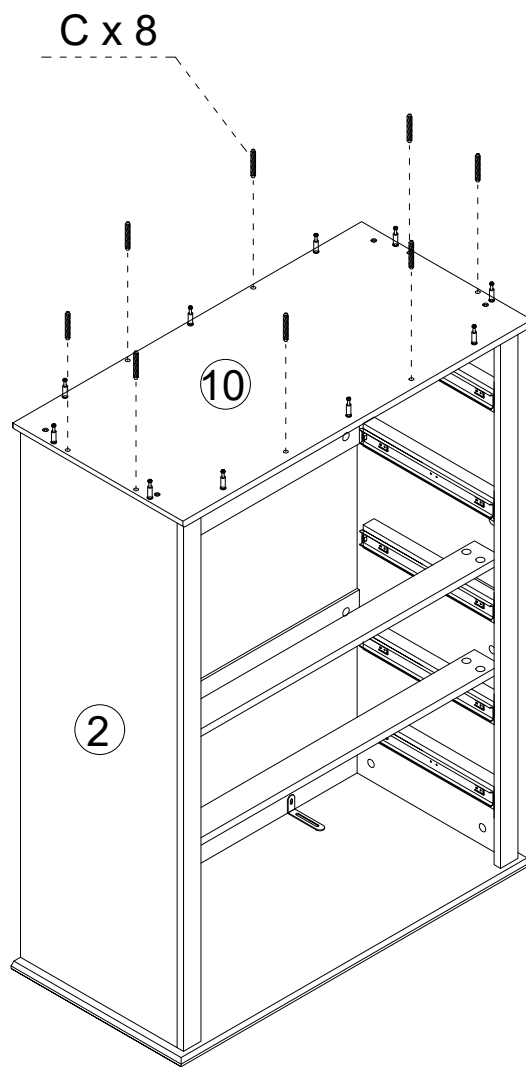




Step 21

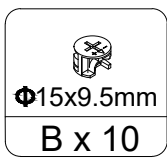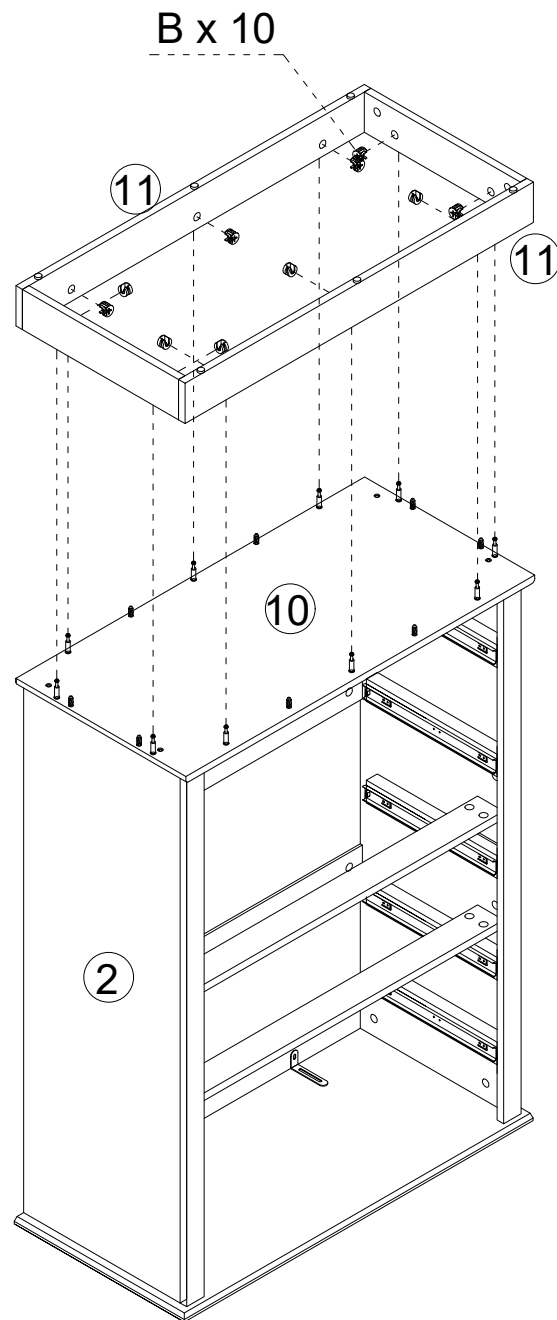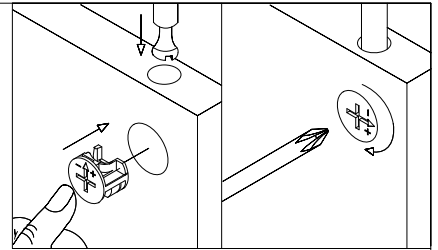



Step 22

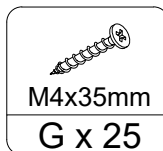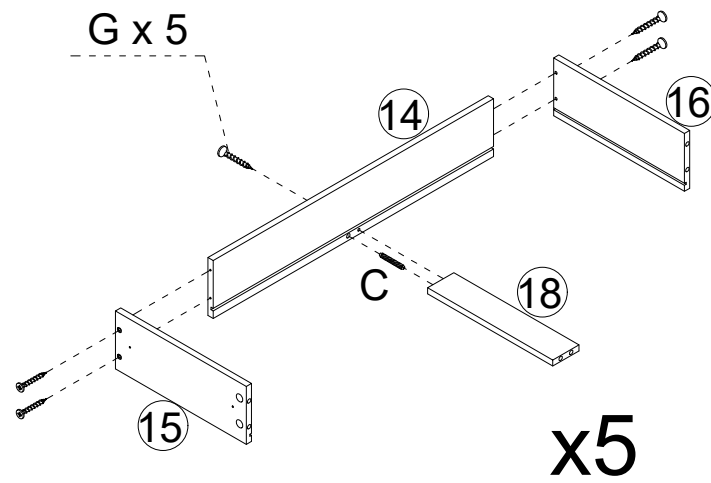



Step 23

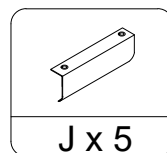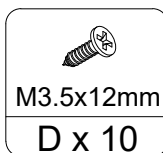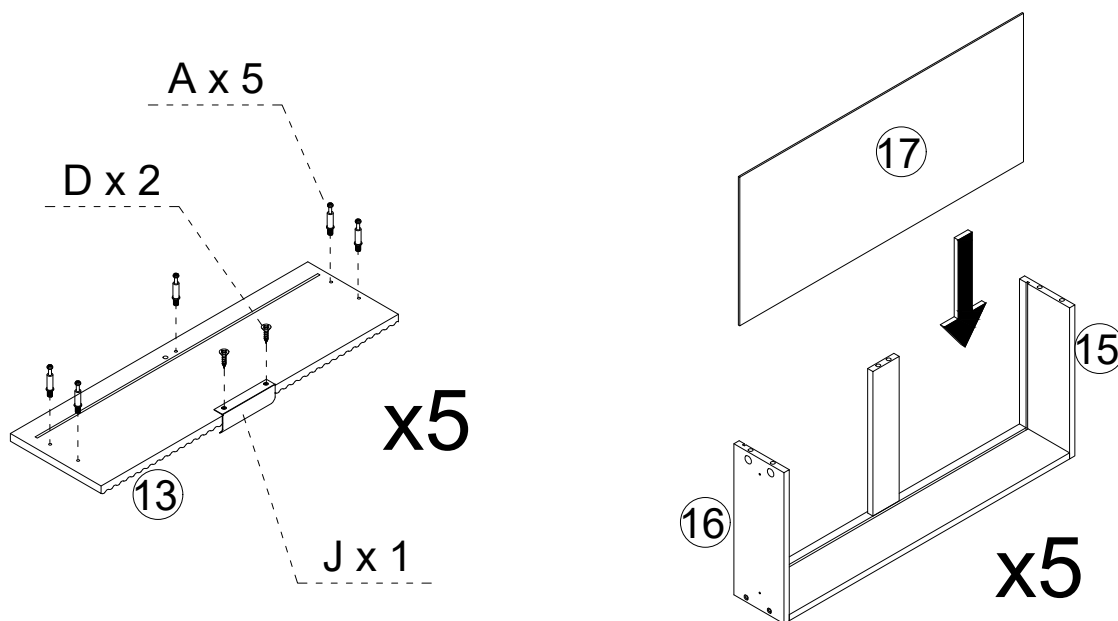

Step 24

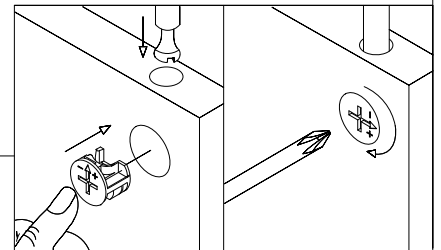
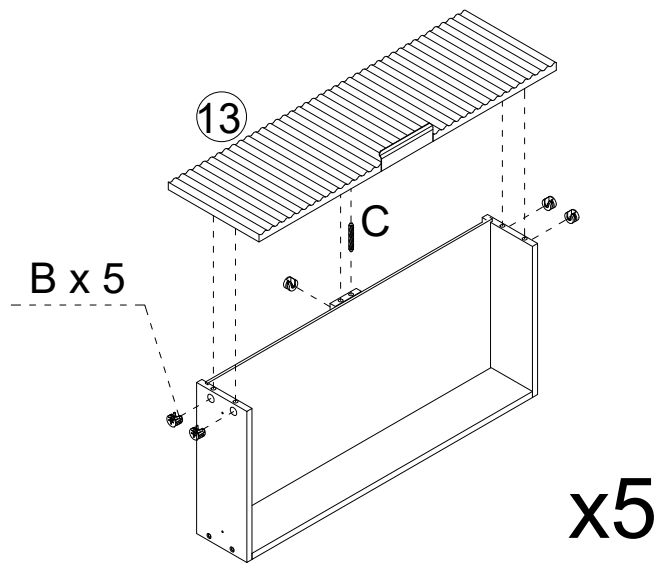


Step 25

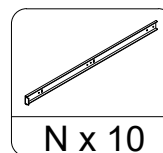
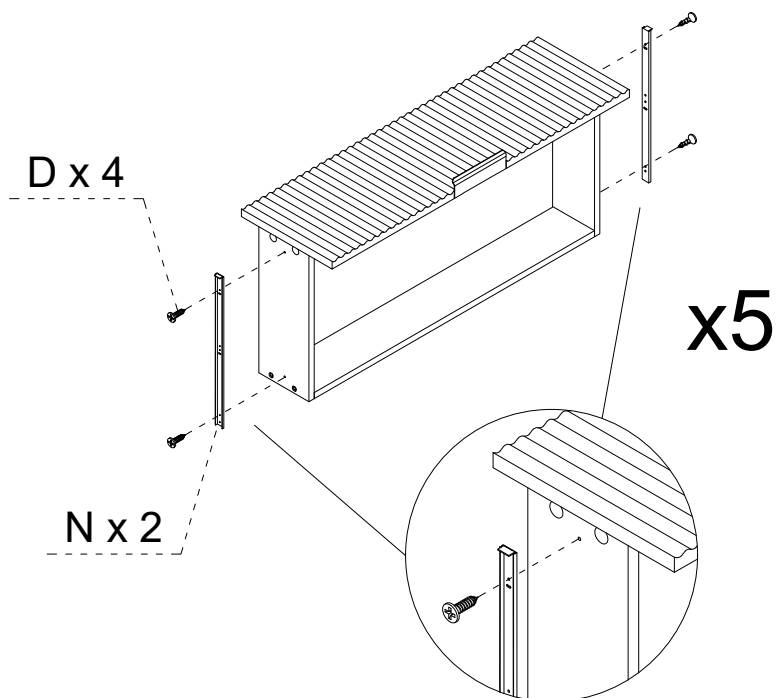


Step 26


Before proceeding to step 27, use a spirit level to evenly adjust the gaps around the drawer !

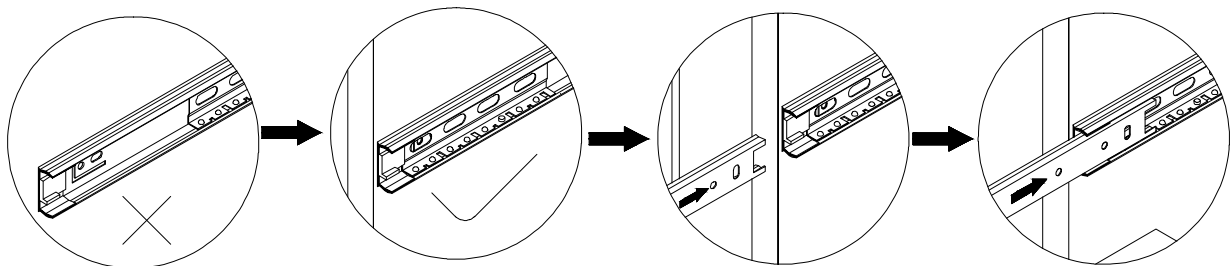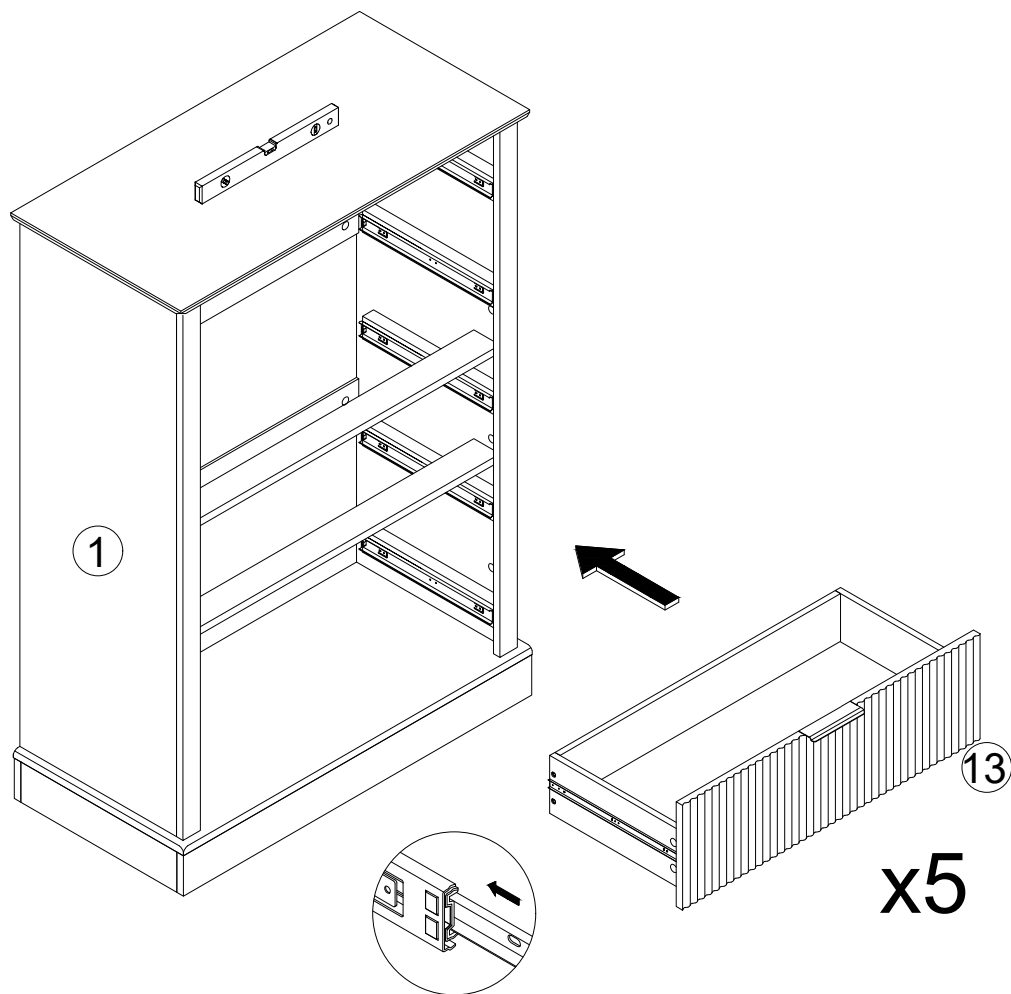




Step 27

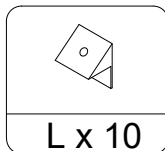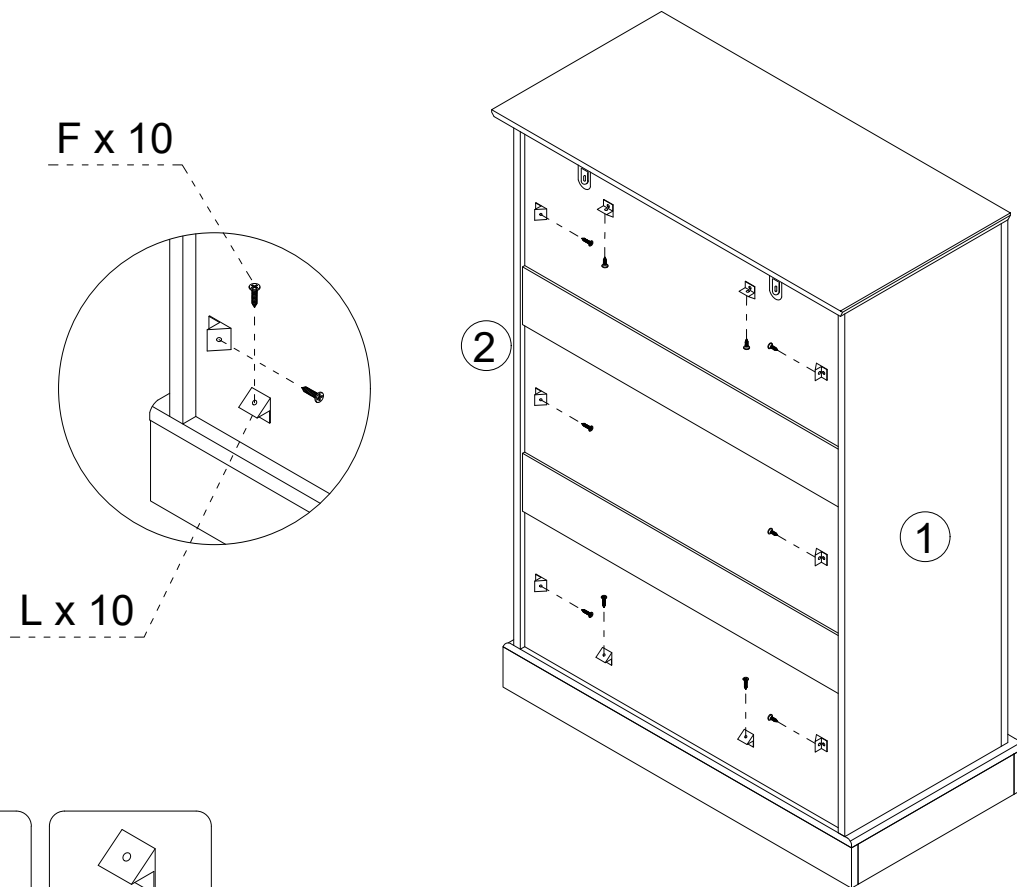

Step 28

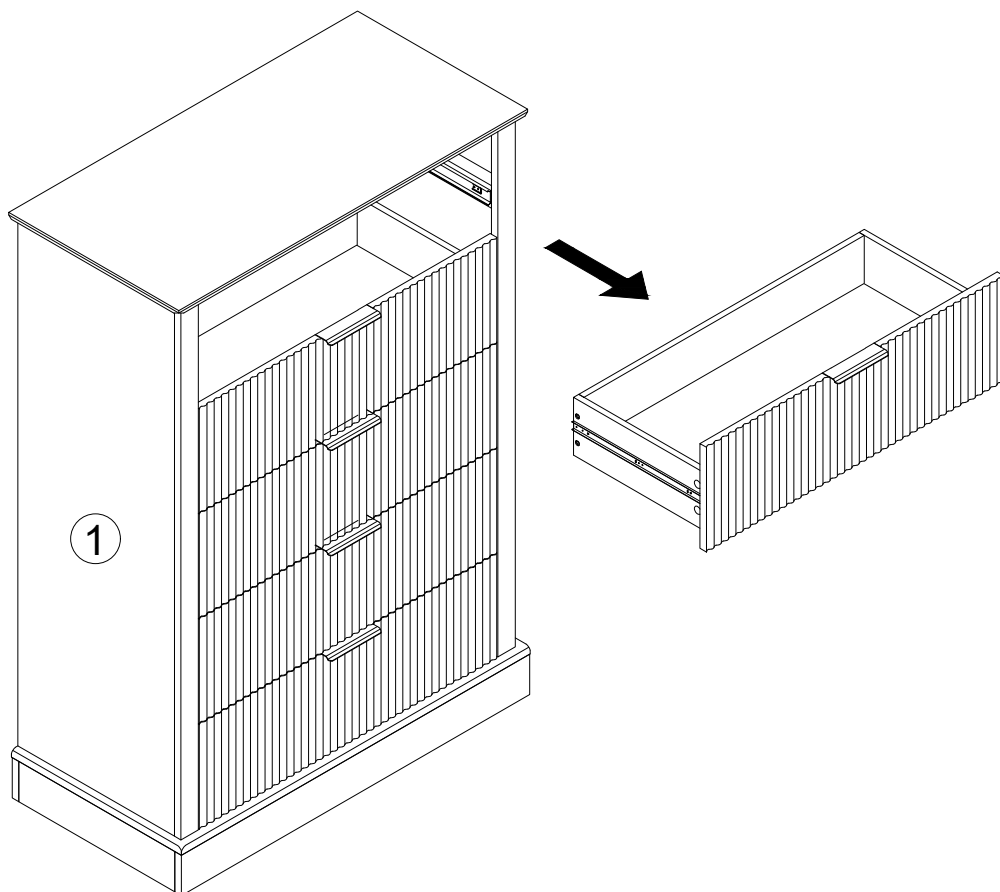

Step 29

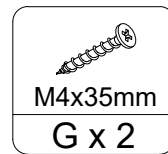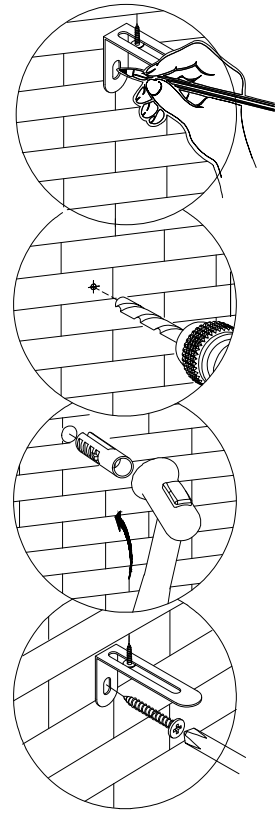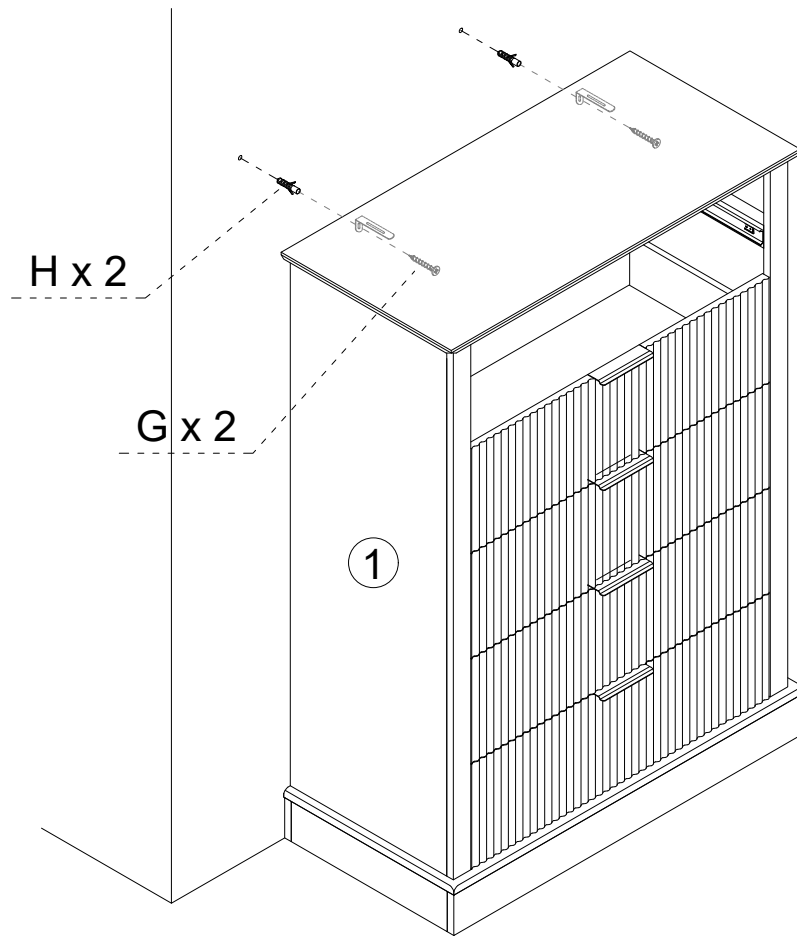

Step 30

