

PLASTIC GARDEN SHED PP6x4. 4

Instructions for Assembly




WARNING

Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instruction.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.

SITE PREPARATION | PRÉPARATION DU SITE | PREPARACIÓN DEL LUGAR | VORBEREITUNG DES AUFSTELLUNGORTES | VOORBEREIDING VAN HET TERREIN | PREPARAZIONE DEL LUOGO DI ASSEMBLAGGIO | PREPARAÇÃO DO LOCAL


Level the ground surface | Nivelez la surface du sol | Nivela la superficie del suelo | Ebnen Sie die Bodenoberfläche | Maak de bodem vlak | Livellare la superficie del terreno | Nivela a superfície do solo

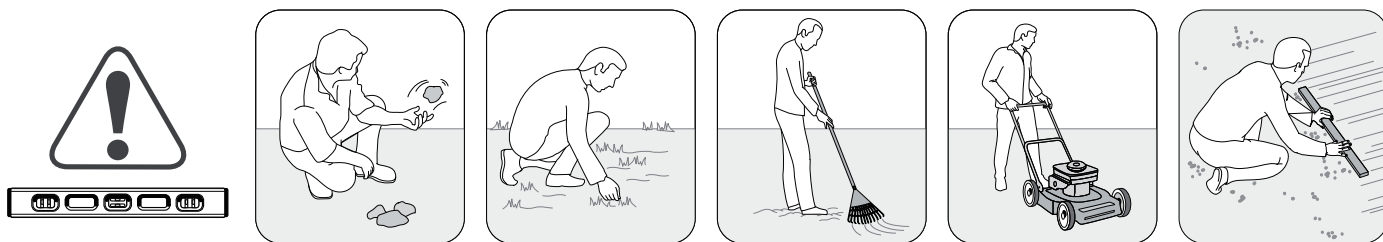

Recommendation: Construct a wooden or concrete base as a foundation | Recommandation: fabriquez une base en bois ou en béton en guise de fondation | Recomendación: construya una base de madera o de cemento a modo de cimiento | Empfehlung: Bauen Sie als Fundament eine Grundfläche aus Holz oder Beton | Aanbeveling: maak een houten of betonnen ondergrond als fundering | Raccomandazione: Costruire una base di legno o di cemento come fondamenta | Recomendação: Construa uma base de madeira ou de cimento como fundação


Option | Opción | optie | opzione | opção

A

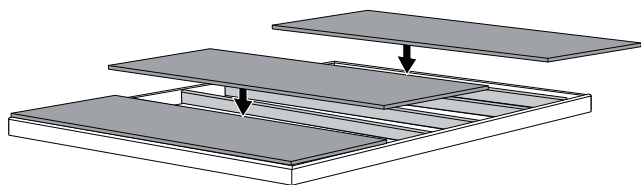

Option | Opción | optie | opzione | opção

B

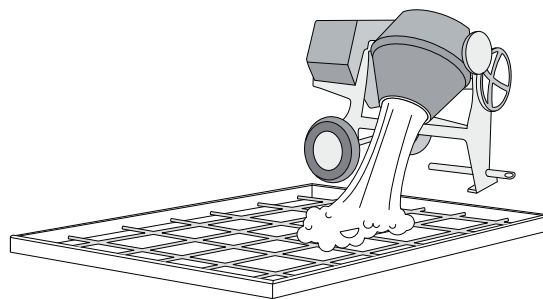

External floor measurements are: | Les mesures externes de la étage sont: | Las medidas del suelo externo son: | Die Außen-Bodenmaße betragen: | De afmetingen van de externe vloer zijn: | Le dimensioni esterne del pavimento sono: | As medidas externas do chão são:



BEFORE STARTING ASSEMBLY | AVANT DE COMMENCER LE MONTAGE | **ANTES DE EMPEZAR EL ARMADO** | VOR MONTAGEBEGINN | **VOORDAT U BEGINT TE MONTEREN** | PRIMA DI INIZIARE L'ASSEMBLAGGIO | **ANTES DE INICIAR A MONTAGEM**

Read the care and safety guidelines at the end of this manual | Check to ensure that there are no missing or damaged parts BEFORE starting or arranging assembly | Remove all parts from the package(s) and spread them out on a clean work surface | Review all assembly instructions | Assemble all the parts according to the directions in this manual. Do not skip any steps.

Lisez les instructions de précaution et de sécurité à la fin de ce manuel | Assurez-vous qu'il n'y a pas de pièces manquantes ou endommagées AVANT de commencer ou d'organiser l'assemblage | Retirez toutes les pièces du/des paquet(s) et étalez-les sur une surface de travail propre | Lisez toutes les instructions de montage | Assemblez toutes les pièces selon les instructions de ce manuel. Ne sautez aucune étape.

Lea las instrucciones de precauciones y seguridad que están al final de este manual | Asegúrese de que no faltan piezas ni están dañadas ANTES de comenzar o disponer el montaje | Saque todas las piezas del paquete o paquetes y póngalas sobre una superficie de trabajo limpia | Revise todas las instrucciones de montaje | Monte todas las piezas según las instrucciones de este manual. No se saltee ningún paso.

Lesen Sie die Sicherheitsrichtlinien am Ende des Benutzerhandbuchs durch | Prüfen Sie bitte VOR dem Zusammenbau, dass keine Teile beschädigt sind oder fehlen | Nehmen Sie alle Teile aus der Verpackung und breiten Sie sie auf einer sauberen Arbeitsfläche aus | Gehen Sie noch einmal die komplette Aufbauanleitung durch | Bauen Sie alle Teile entsprechend der Anleitung in diesem Handbuch zusammen. Lassen Sie dabei keinen Arbeitsschritt aus.

Lees de richtlijnen voor zorg en veiligheid achterin deze handleiding | Controleer dat er geen onderdelen mankeren, of beschadigd zijn, VOORDAT u met de montage begint | Haal alle onderdelen uit het pakket (of uit de pakketten) en leg ze op een schoon werkoppervlak | Bekijk alle montagehandleidingen | Monteer alle onderdelen volgens de aanwijzingen van deze handleiding. Sla geen stappen over.

Leggere le linee guida di assistenza e sicurezza alla fine di questo manuale | Assicurarsi che non ci siano parti mancanti o danneggiate PRIMA di iniziare l'assemblaggio | Estrarre tutti i componenti dall'imballo e posizionarli su una superficie di lavoro pulita | Consultare tutte le istruzioni di montaggio | Assemblare tutti i componenti secondo le istruzioni contenute nel manuale. Non saltare nessuna fase.


Leia as diretrizes de cuidados e segurança que constam da parte final deste manual | Verifique para se assegurar de que não há peças em falta ou danificadas ANTES de começar a preparar a montagem | Retire todas as peças da embalagem e espalhe-as numa superfície de trabalho limpa | Reveja todas as instruções de montagem | Monte todas as peças de acordo com as instruções do manual. Não salte quaisquer passos.

REQUIRED TOOLS | OUTILS EXIGÉS | **HERRAMIENTAS NECESARIAS** | BENÖTIGTE WERKZEUGE | **BENODIGD GEREEDSCHAP** | ATTREZZATURA OCCORRENTE | **FERRAMENTAS NECESSÁRIAS**



SPATULA | SPATULE | **ESPÁTULA** | SPACHTEL | **SPATEL** | SPATOLA | **ESPÁTULA**

- Use spatula (part “SG8”) for easier insertion of panel into profile.
- Utilisez la spatule (partie “SG8”) pour une meilleure insertion du panneau dans le profil.
- Utilice una espátula (pieza “SG8”) para una mejor inserción del panel en el perfil.
- Benutzen Sie den Spachtel (Bezeichnung “SG8”), um die Platten leichter in die Nut einführen zu können.
- Gebruik spatel (onderdeel SG8) voor het gemakkelijk invoeren van het paneel in het profiel.
- Utilizzare la spatola (parte SG8) per inserire il pannello più facilmente nel profilo.
- Utilize uma espátula (peça “SG8”) para facilitar a inserção do painel no perfil.



SG8 x2



ASSEMBLY REQUIRES TWO PEOPLE | LE MONTAGE DOIT ÊTRE EFFECTUÉ PAR DEUX PERSONNES | **SE NECESITAN DOS PERSONAS PARA ARMARLO** | ZWEI PERSONEN ZUR MONTAGE NOTWENDIG | **MONTAGE VEREIST TWEE PERSONEN** | L'ASSEMBLAGGIO RICHIEDE DUE PERSONE | **A MONTAGEM EXIGE DUAS PESSOAS**

PARTS LIST

NO.	PART.	Qty.
CW4-3		1
CW4-1		1
CW3L		1
CR1-2		1
CW2-2		2
CF1-2		1
CA4		2
CS1		2
CP1		1
CP2		2
CP3		2
CP5		4
CP4		1
CP6		2
CA1R		1
CA1L		1
CA3		1
CA2		1
CA2R		1
CA2L		1
CPA1		1
CPA2		1
CP7		4

NO.	PART.	Qty.
CA1		1
SG10		1
SG101		1
SG102		1
CW3R		1
CR1-1		2
CR1-3		1
CW1-2		1
CF1-1		2
CW1-1		3
CW2-1		4
CW3-1		4
CW1-3		1
CW1-4		1
CD1-4		1
CD1-1		1
CD1-6		1
CD1-5		1
CD1-2		1
CD1-3		1
M01		4
M03-6L		1
M03-7		1

NO.	PART.	Qty.
SG6		4
SG2		4
SG7-2		1
SG7-1		1
SG8		2
SG9		5
SG1		2
BY		2
SG12		2
Drill		1
DC		2
SG13		2
SG14		4
M04		1
Z410		84
Z420		105
Z425		4
ZW413		22

- Use spatula  (part "SG8") for easier insertion of panel into profile
- Please ensure the panels are all installed on position before screwing
- Please be mindful of the screw size used during installation; using screws that are too long may damage the shed.




FLOOR ASSEMBLY




● Use spatula (part "SG8") for easier insertion of panel into profile

Note: The crease line of the floor must be underneath

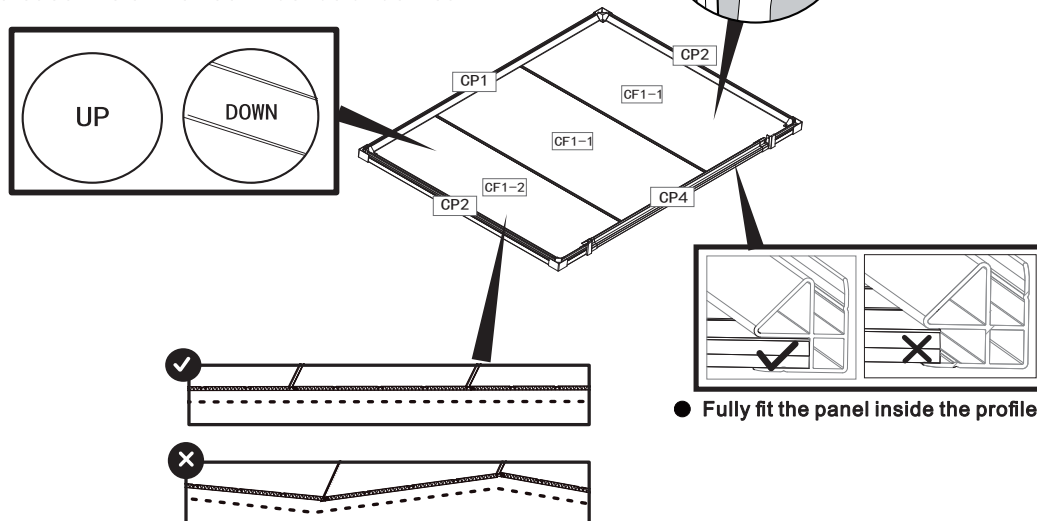

● Fully fit the panel inside the profile

Step 1

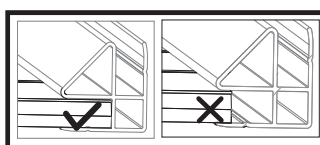

● Fully fit the panel inside the profile

SG8



CF1-1






2 PC



CF1-2



1 PC

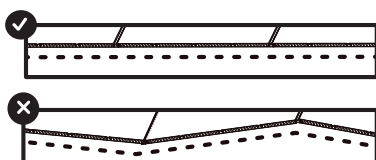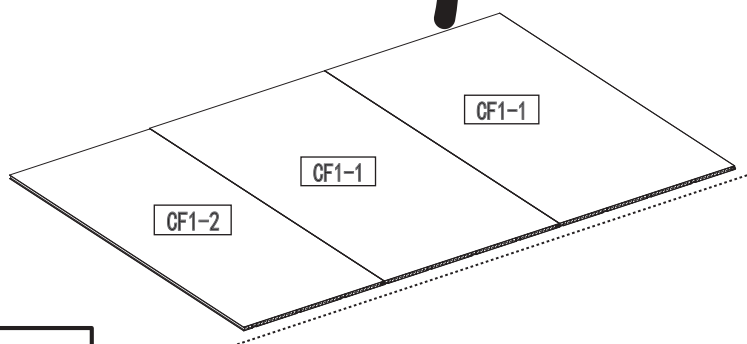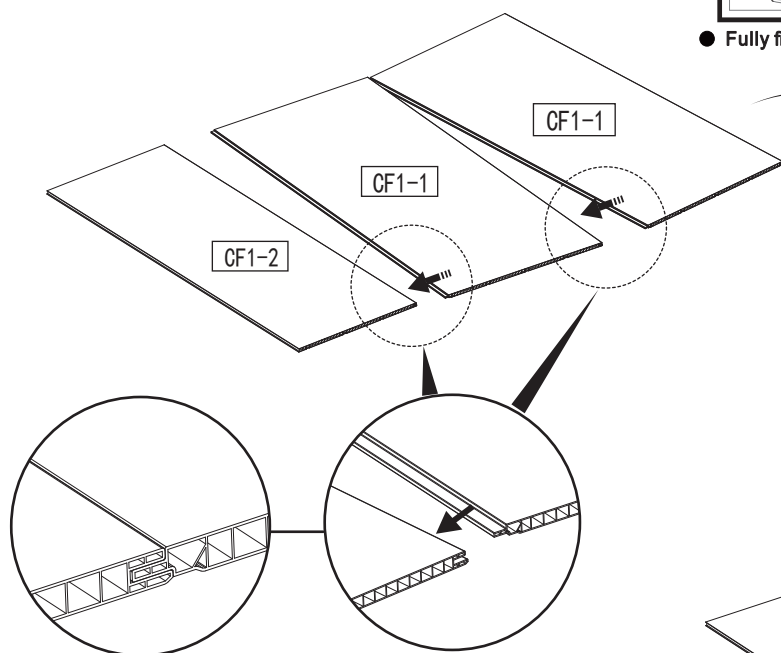

Step 2

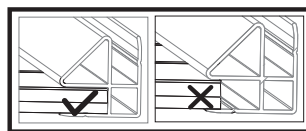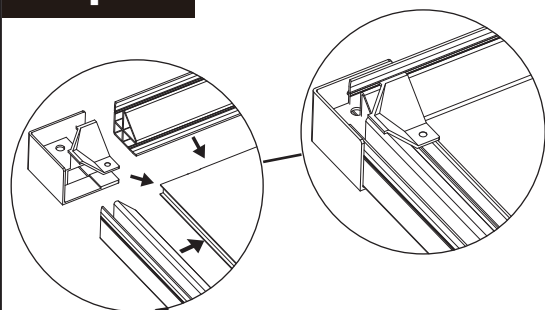

● Fully fit the panel inside the profile

SG8



CP1




1 PC

CP2





1 PC



SG6



1 PC

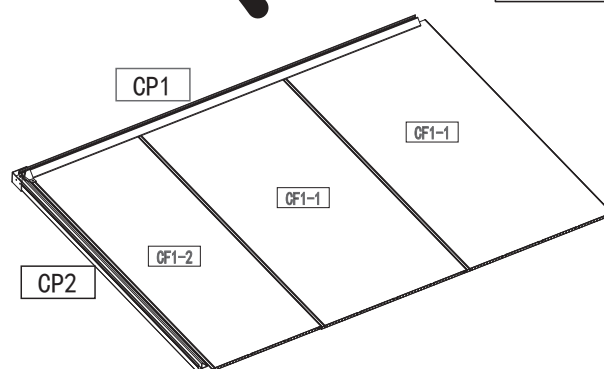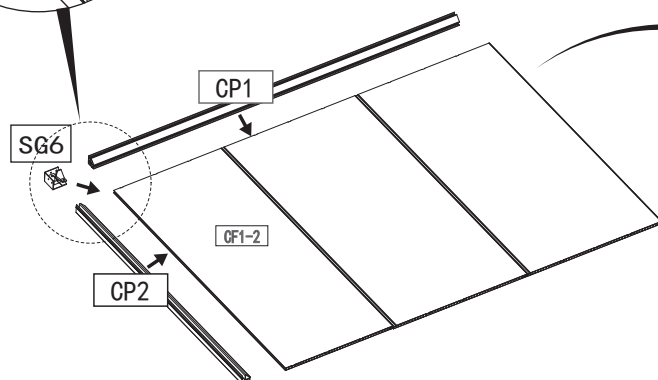

Step 3

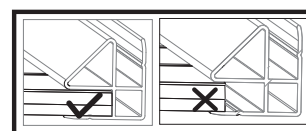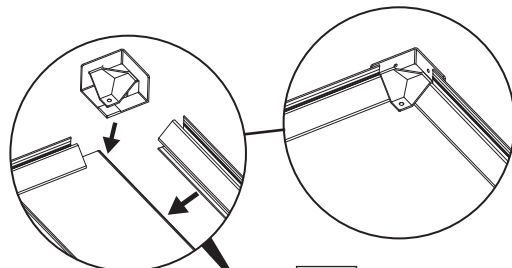

● Fully fit the panel inside the profile

CP2





1 PC

SG6







1 PC

SG8

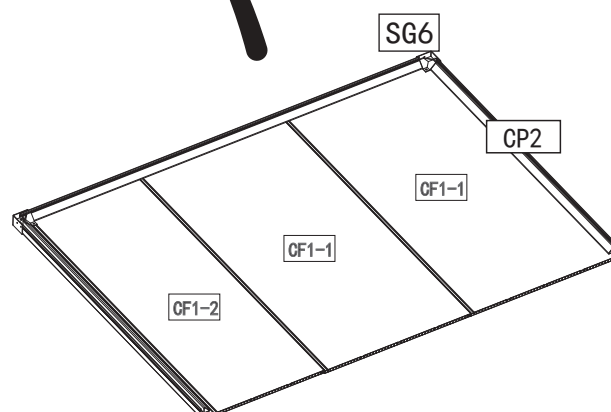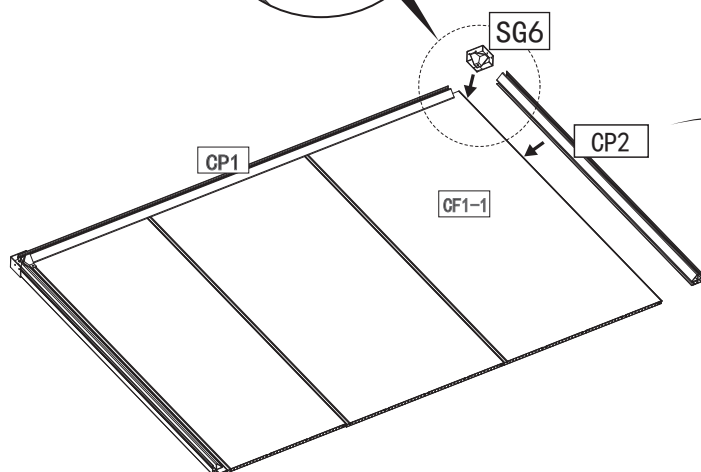

Step 4

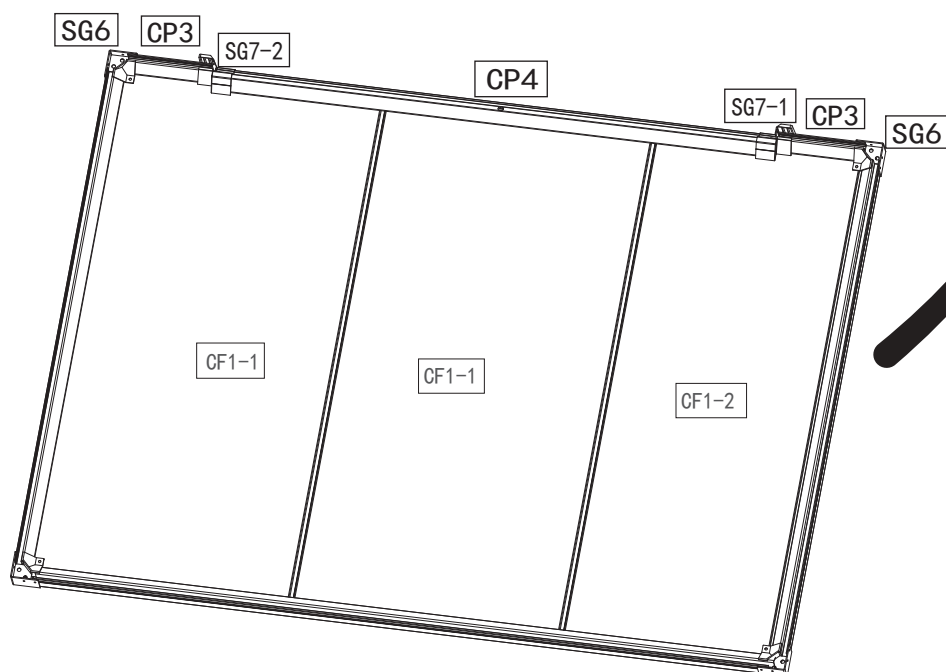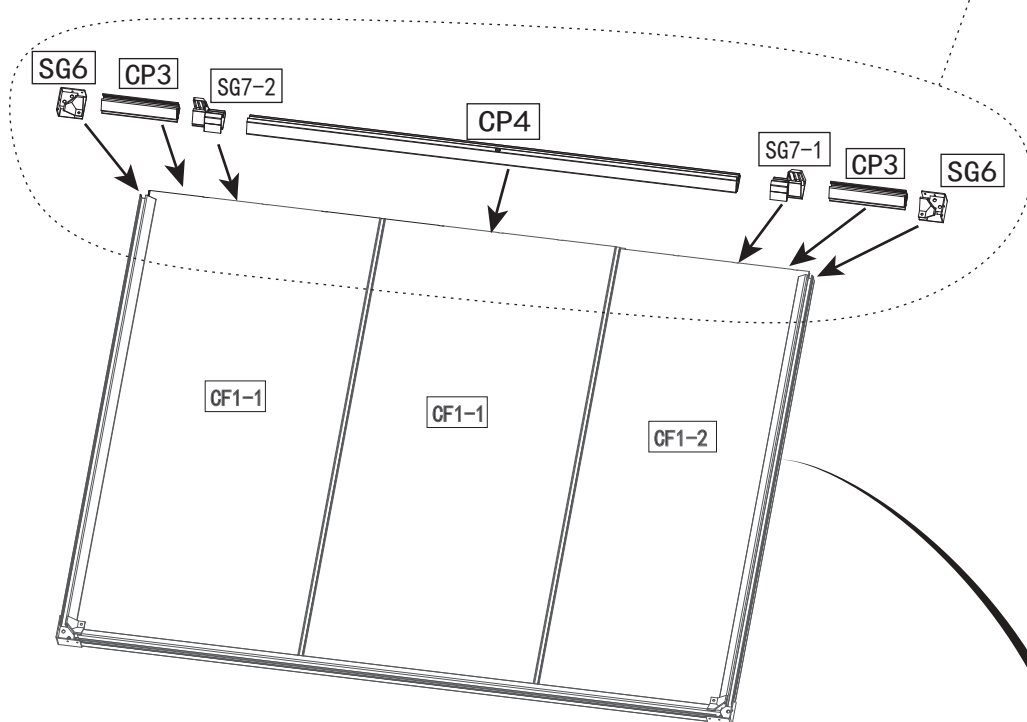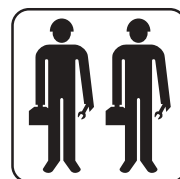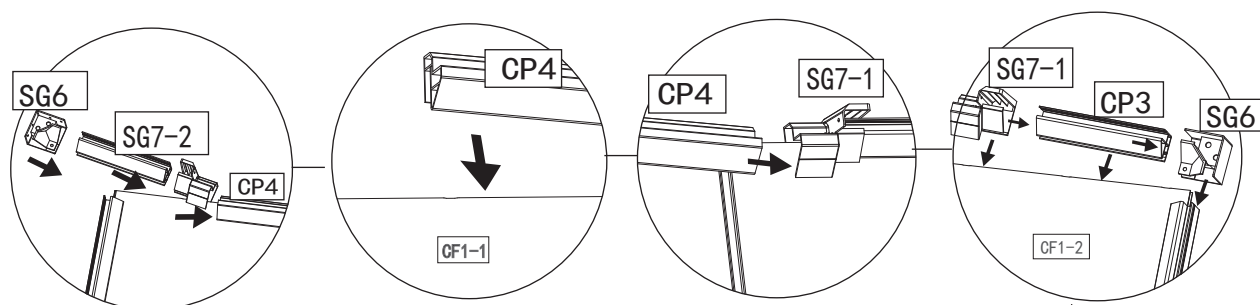

SG6



2 PC

CP3



2 PC

SG7-1



1 PC

CP4



1 PC

SG7-2




1 PC

SG8




Step 5

1

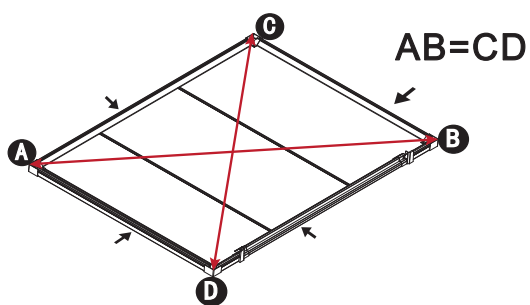

2

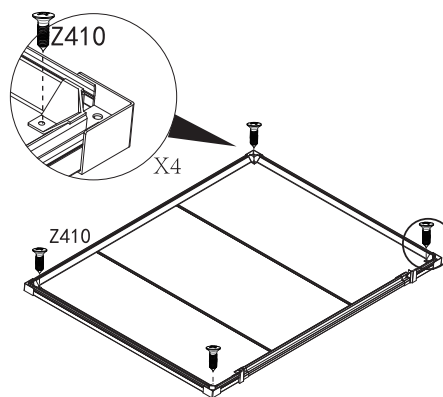

Z410



4 PC


Z420




21 PC

3

Flip the panel.


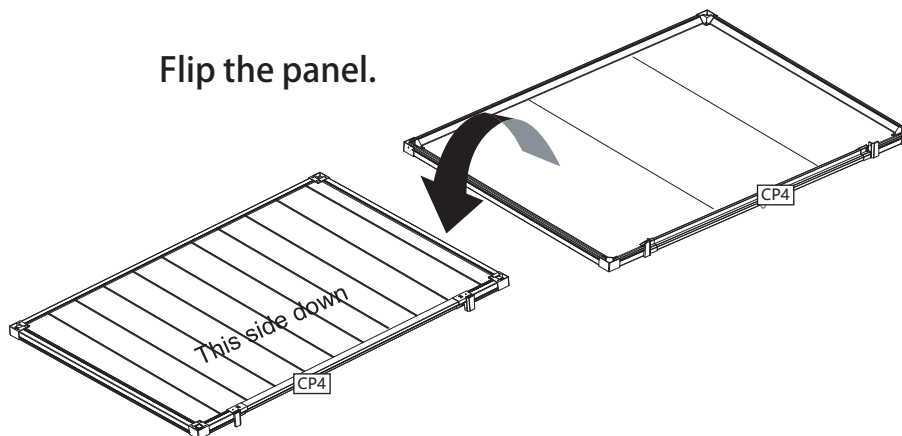


4

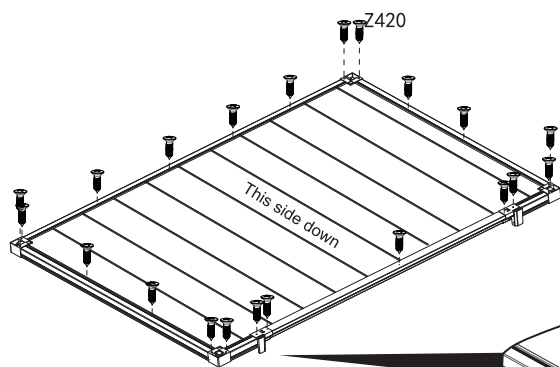

Caution:


Please use Drill to predrill a hole at depth 1mm before screw.

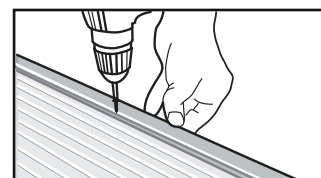





Screw along the marked lines in profile

5





Flip the panel.

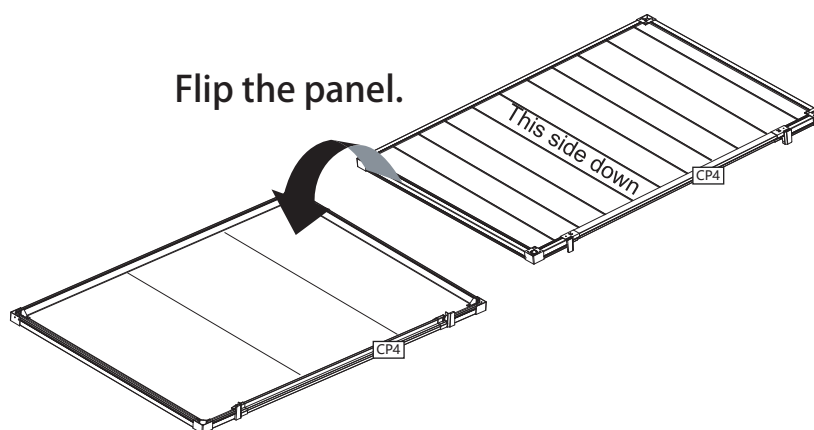

WALL ASSEMBLY

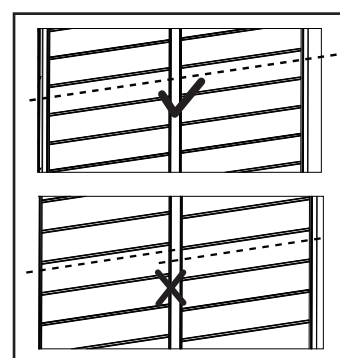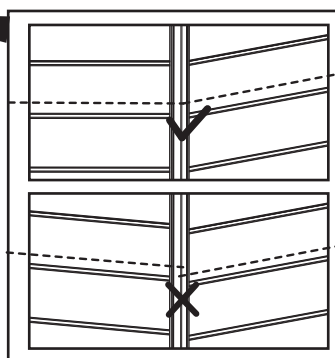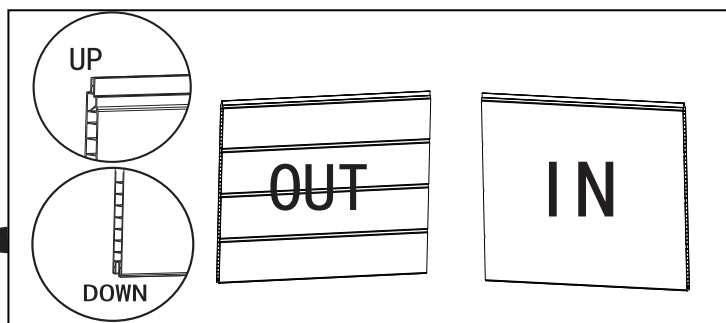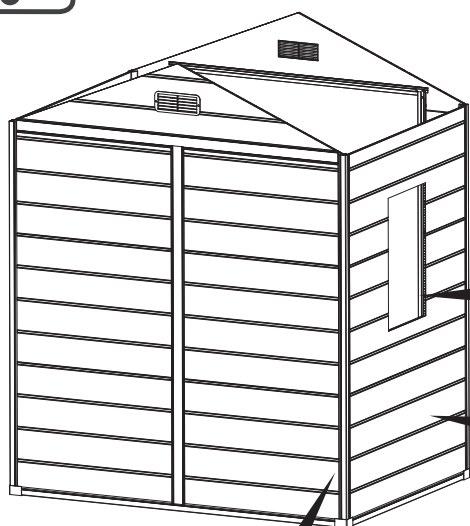


Step 6







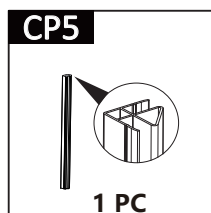
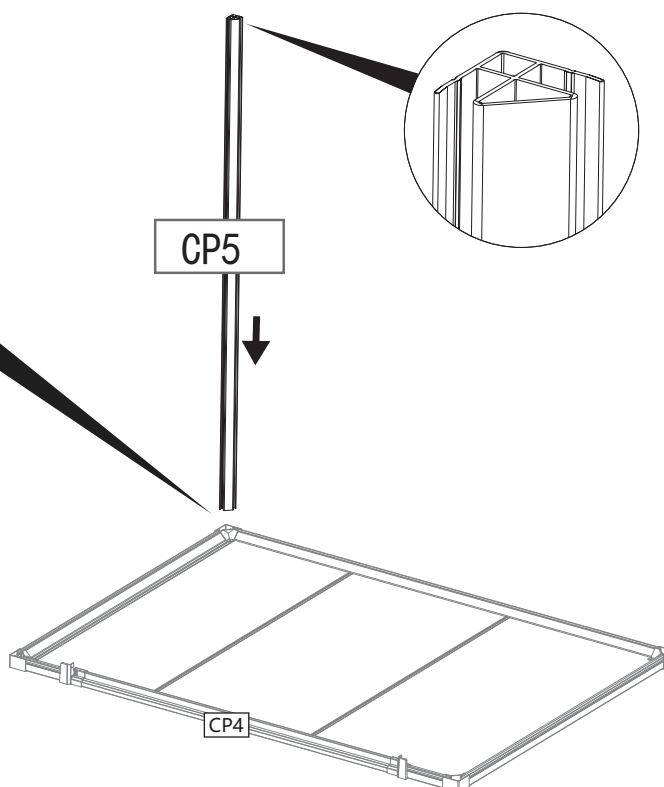
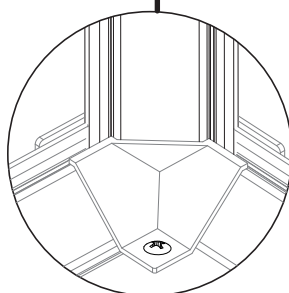
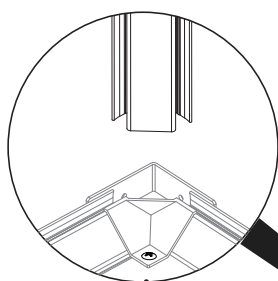


Step 7




1

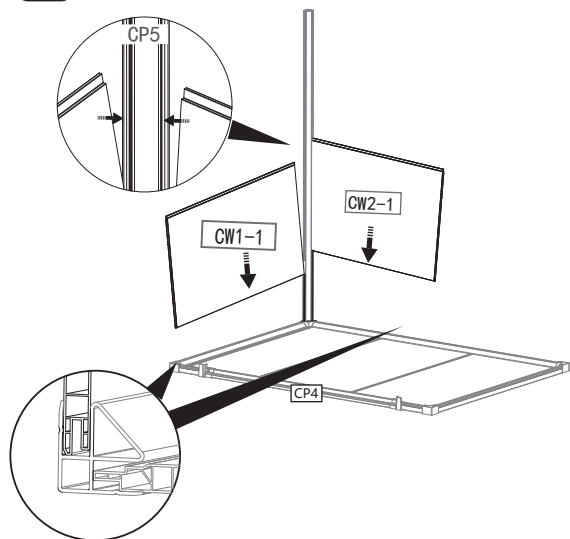

2

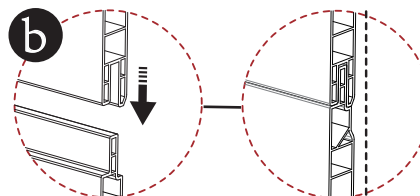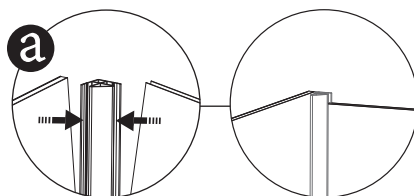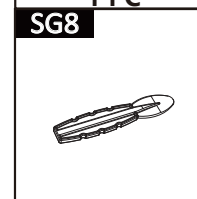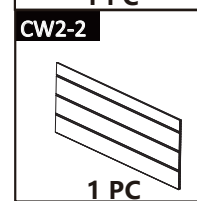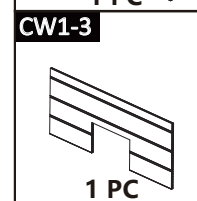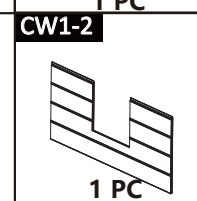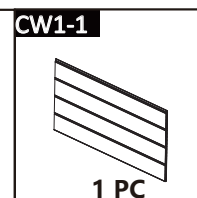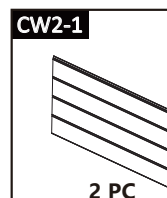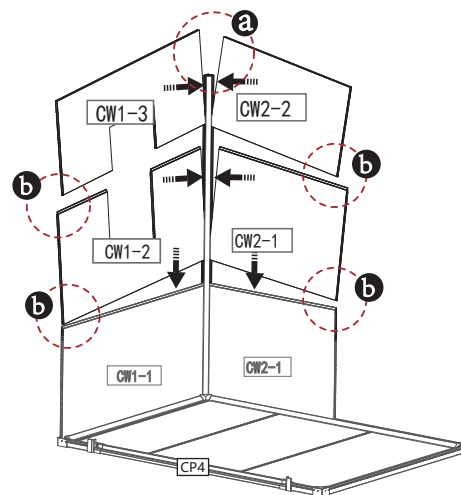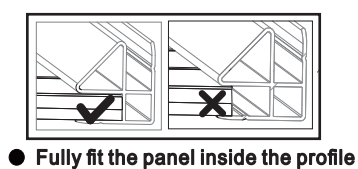


Step 8

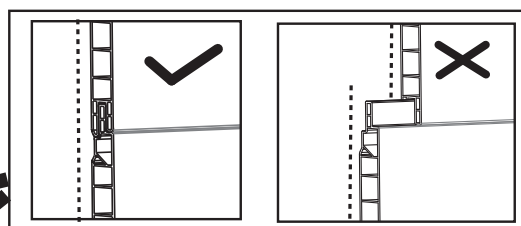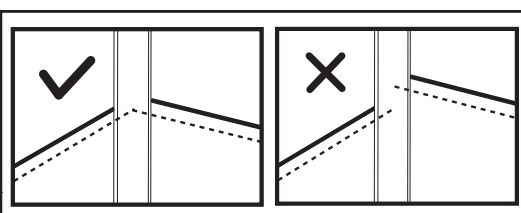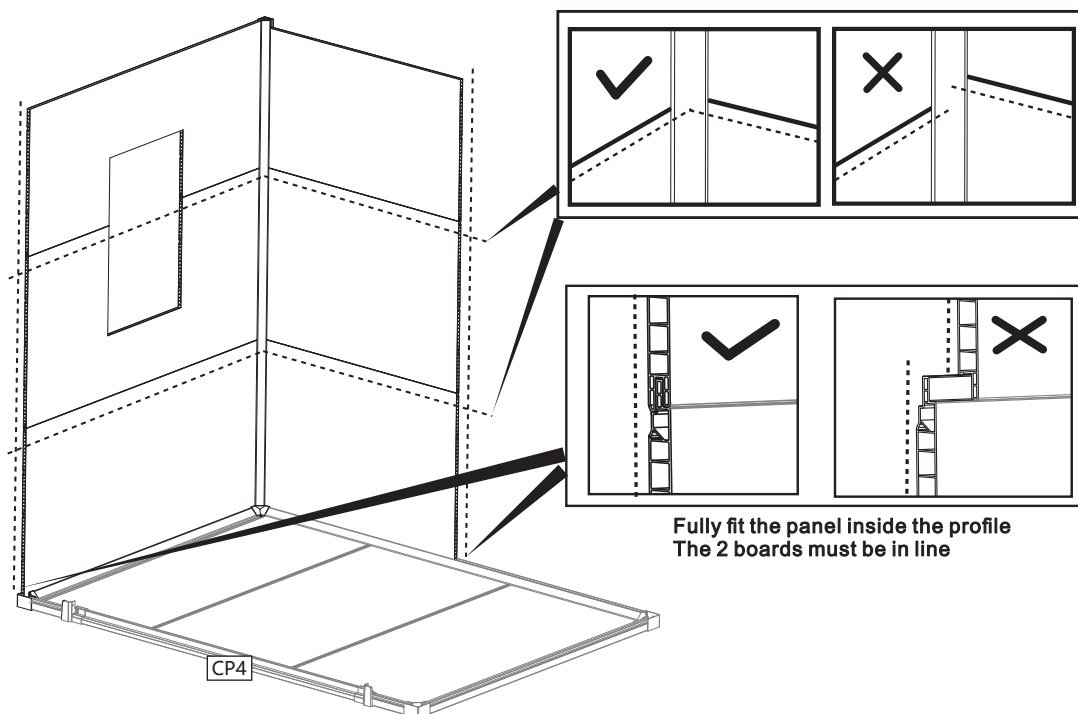


Fully fit the panel inside the profile
The 2 boards must be in line

Step 9

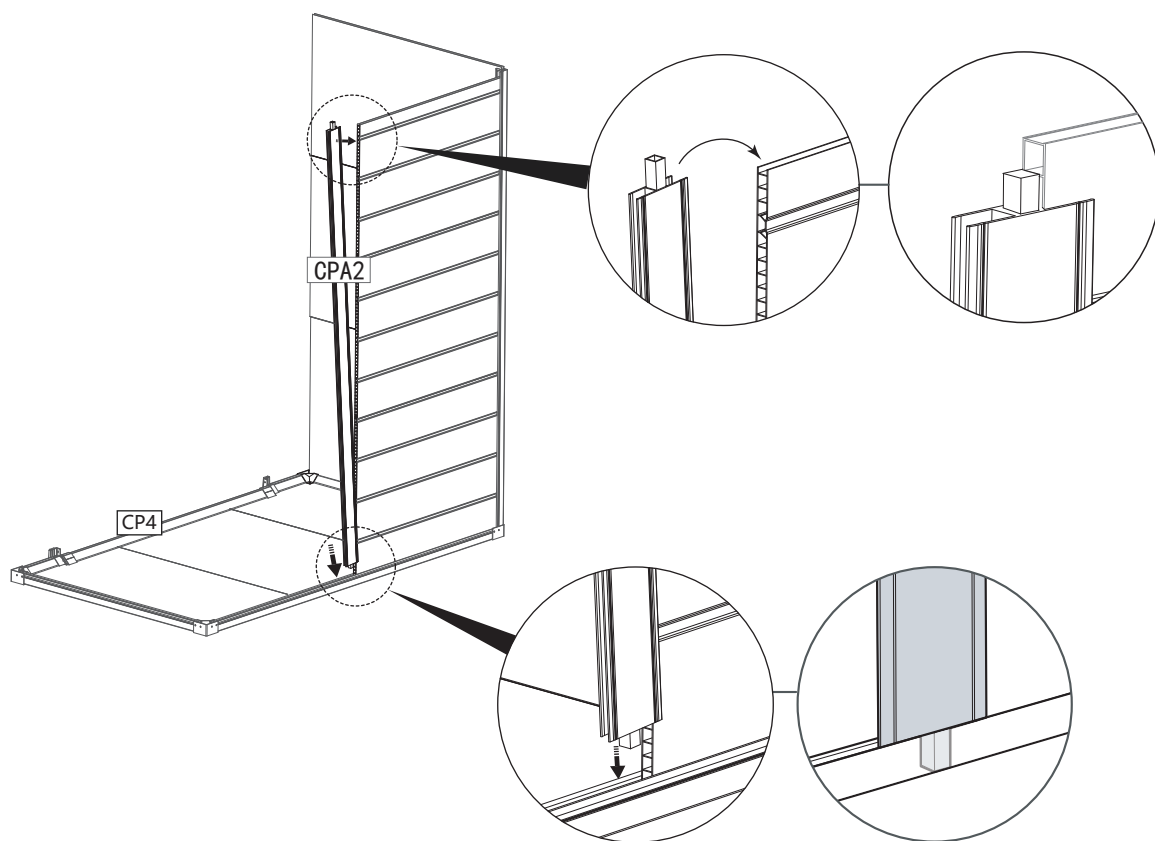

CPA2




1 PC

SG8



Step 10

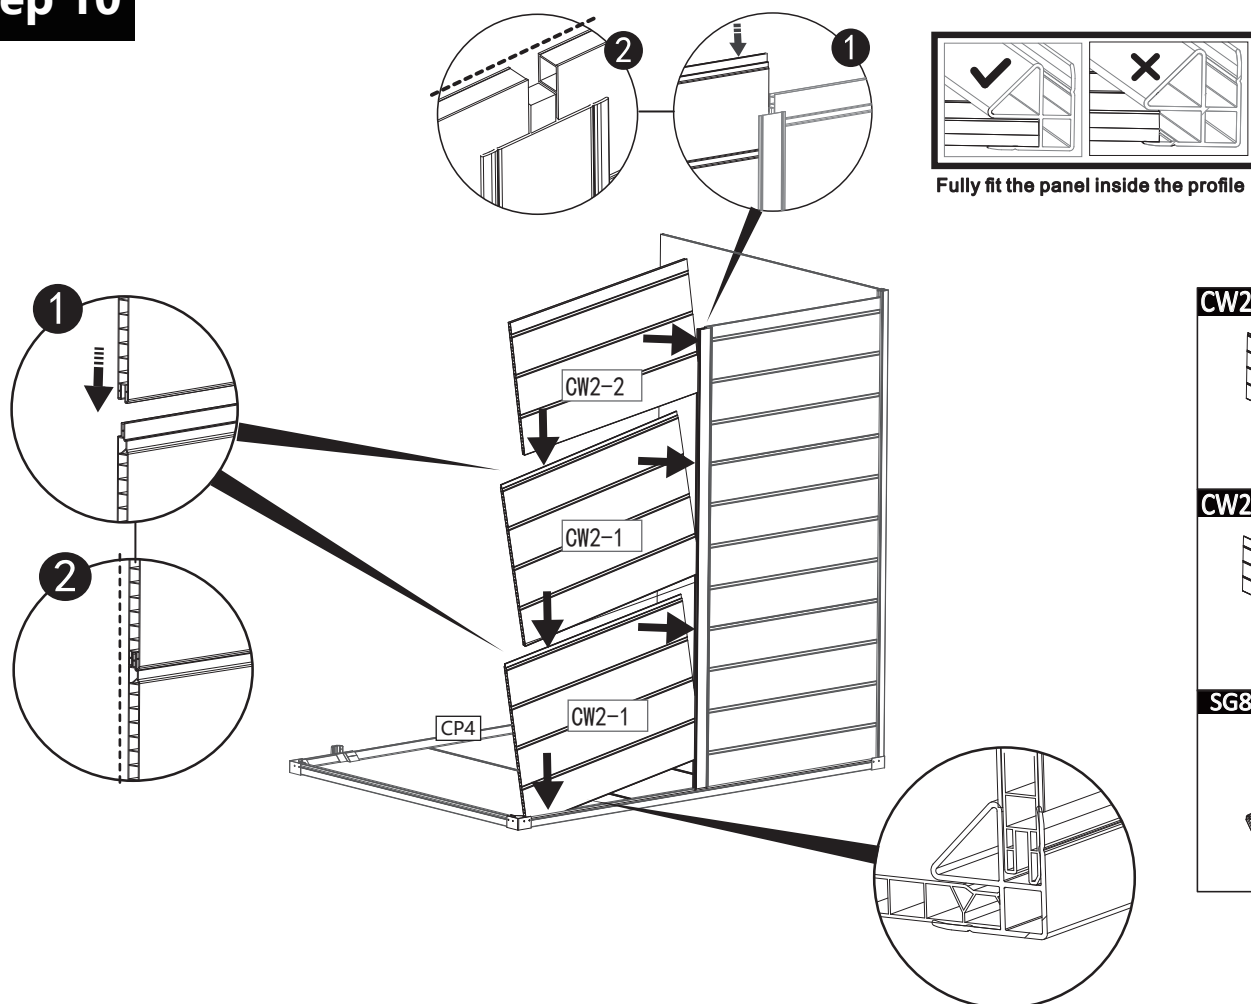

CW2-1



2 PC

CW2-2




1 PC



SG8




Step 11

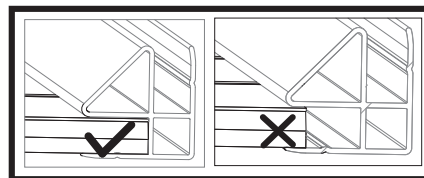



- Fully fit the panel inside the profile

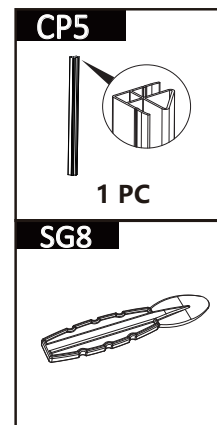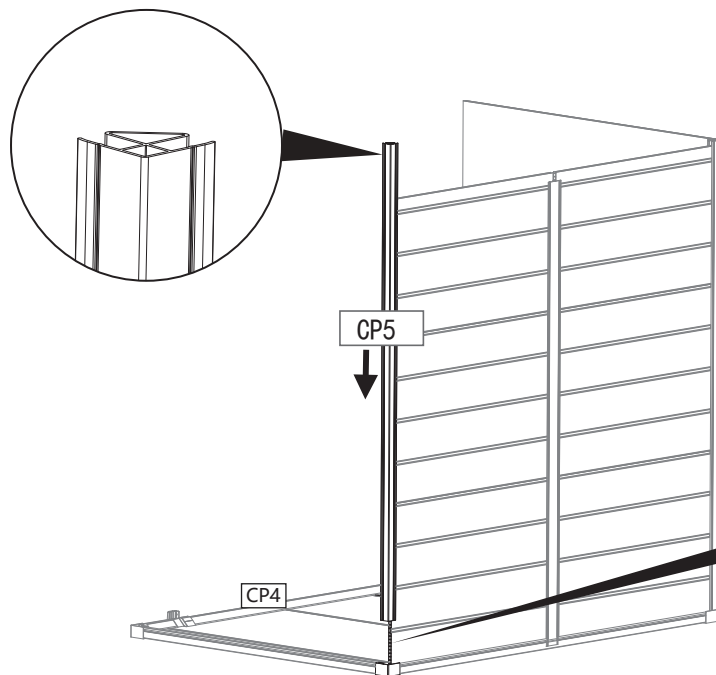

Step 12

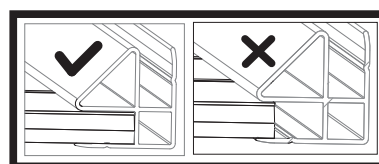


- Fully fit the panel inside the profile

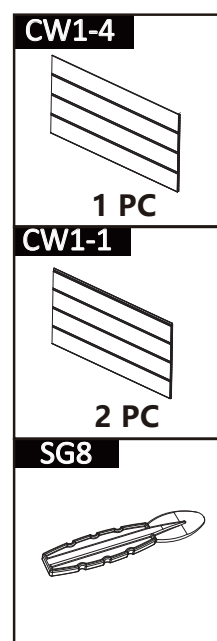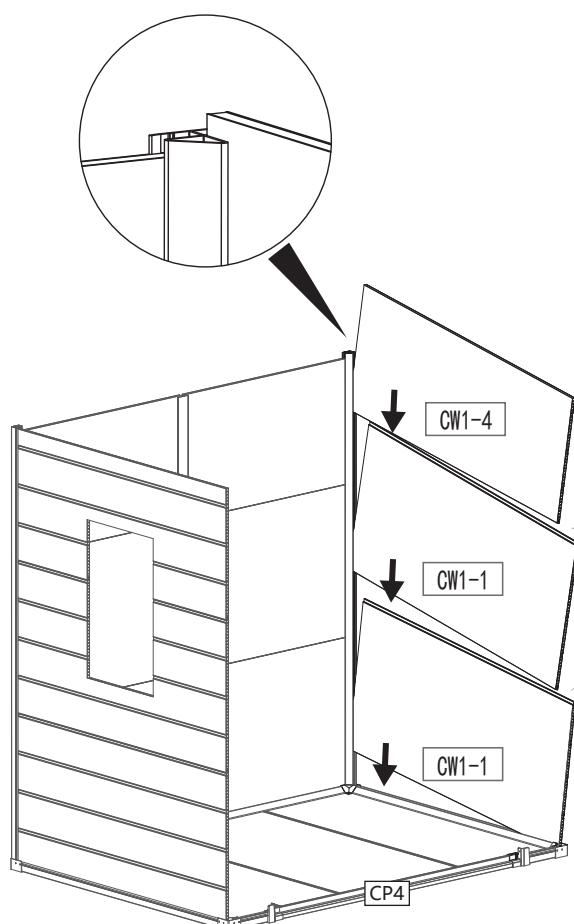


Step 13


CPA1

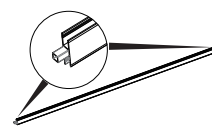

1 PC

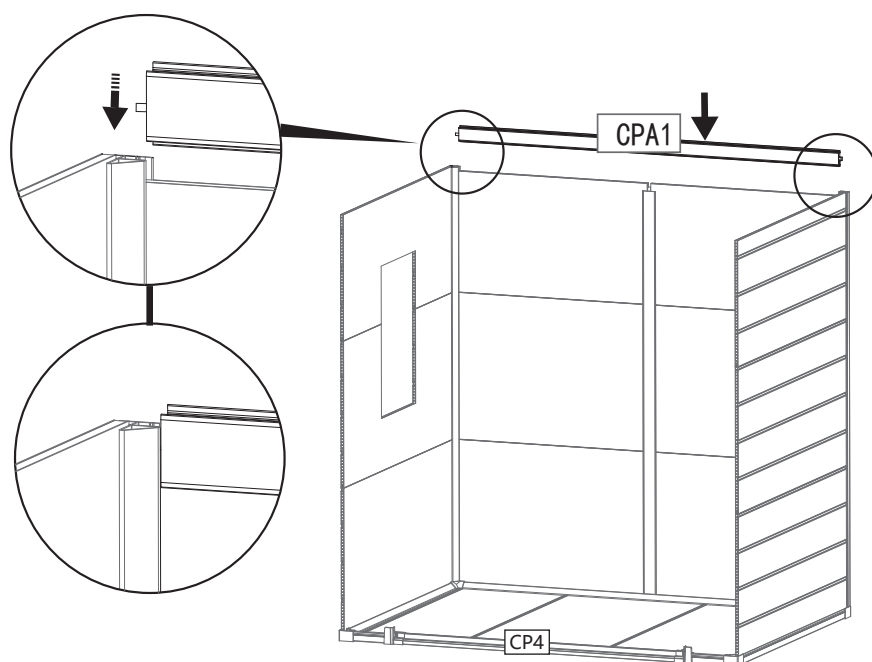


Step 14

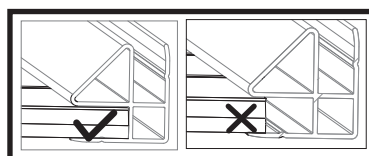


● Fully fit the panel inside the profile



CP5





2 PC

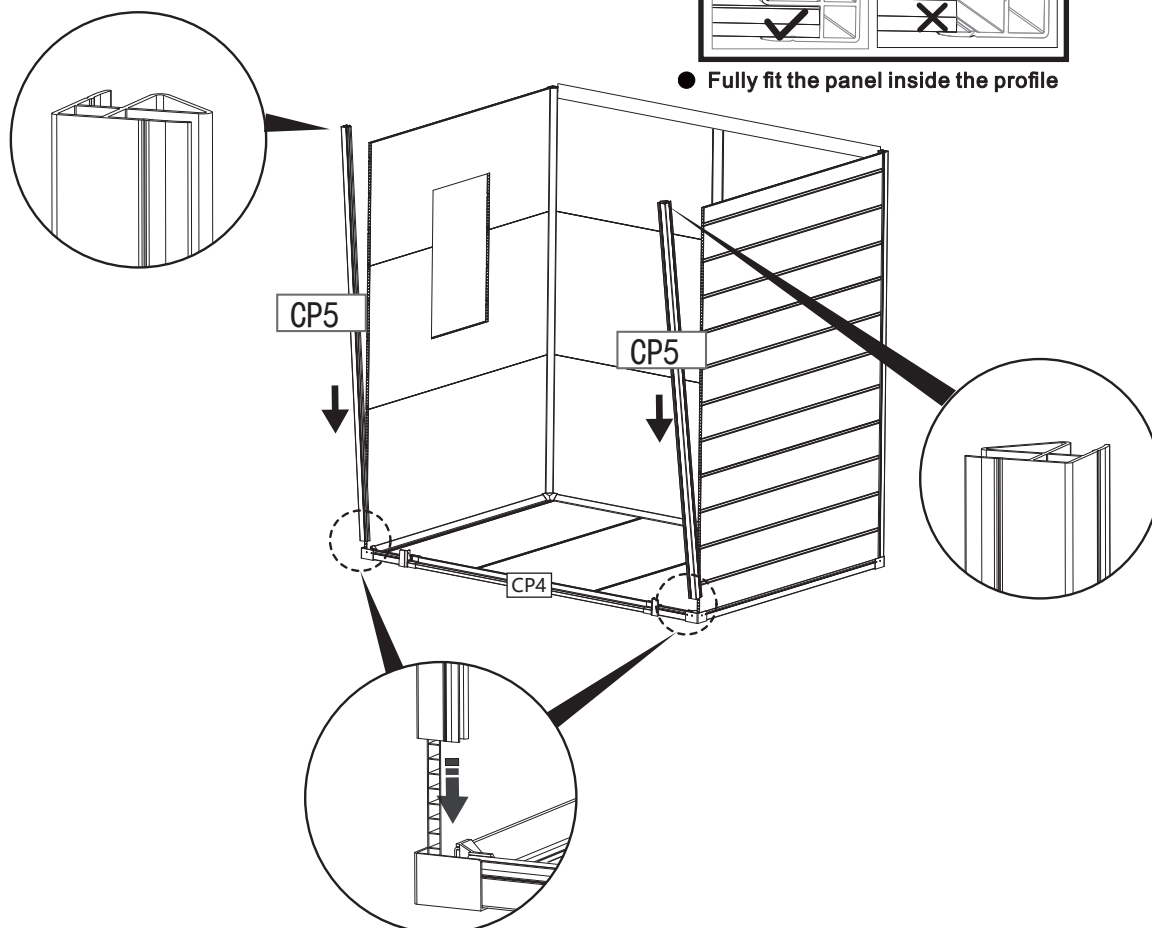


Step 15

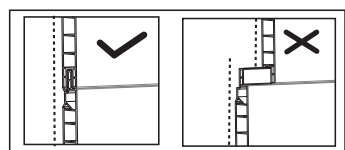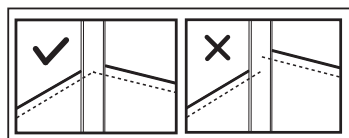

Fully fit the panel inside the profile
The 2 boards must be in line

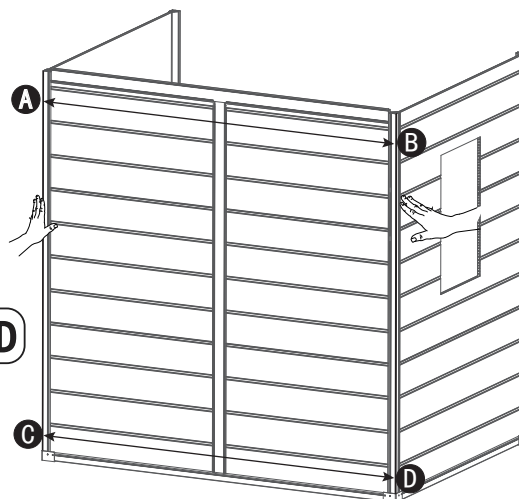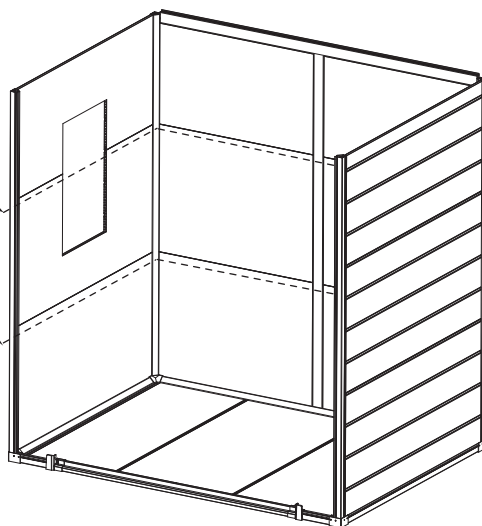


Step 16

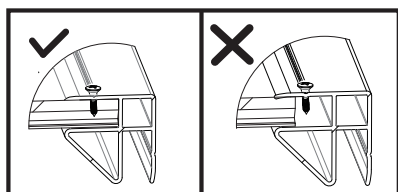

Screw along the marked lines in profile

Caution:




Please use Drill to predrill
a hole at depth 1mm before screw.



Z420




12 PC

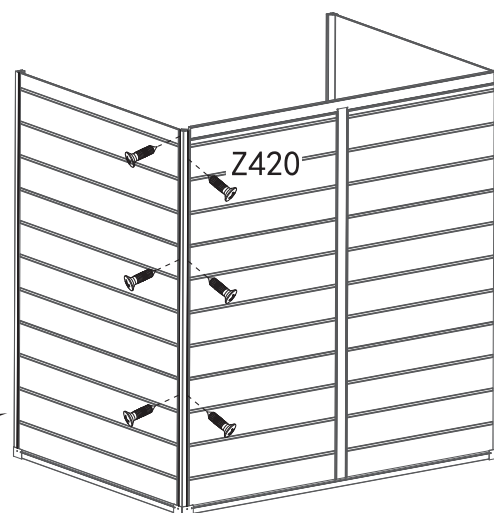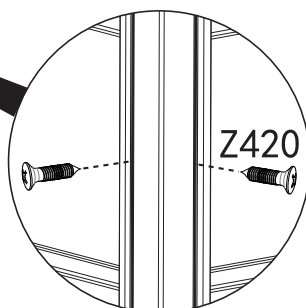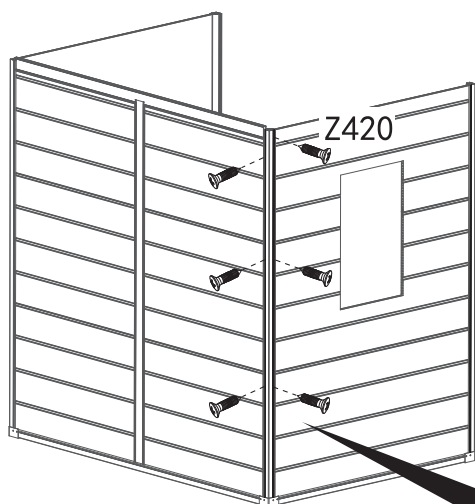

Step 17

Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.



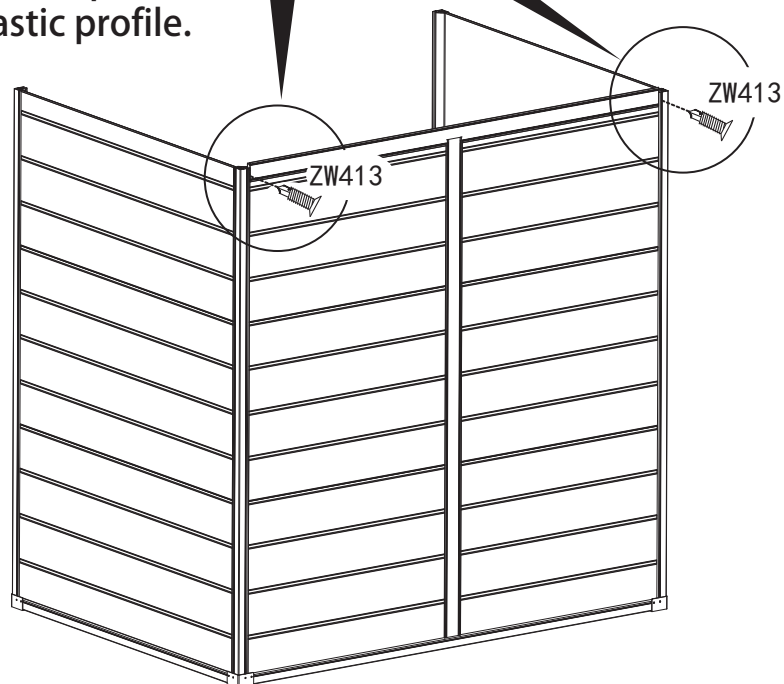


ZW413




2 PC

Step 18

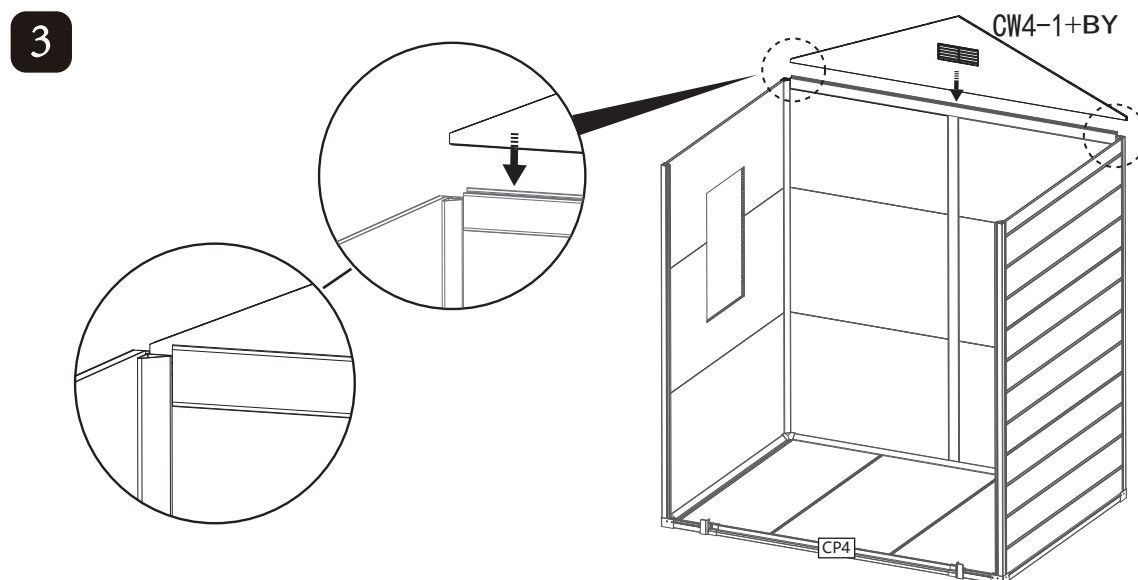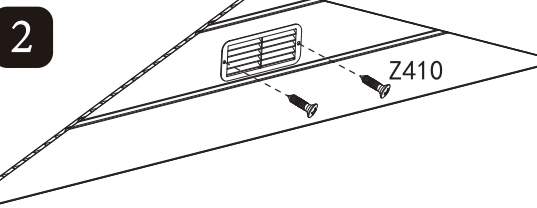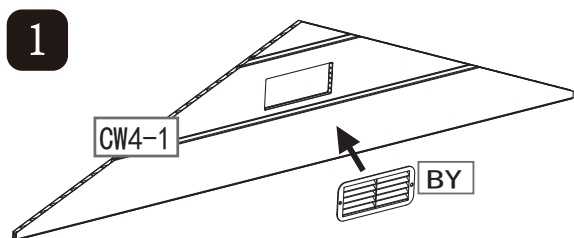


BY



1 PC

CW4-1



1 PC

Z410



2 PC

Step 19

Screw along the marked lines in profiles



Caution:
Please use Drill  to predrill
a hole at depth 1mm before screw.




Z410



10 PC

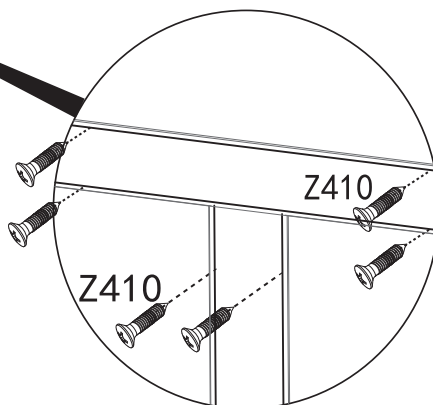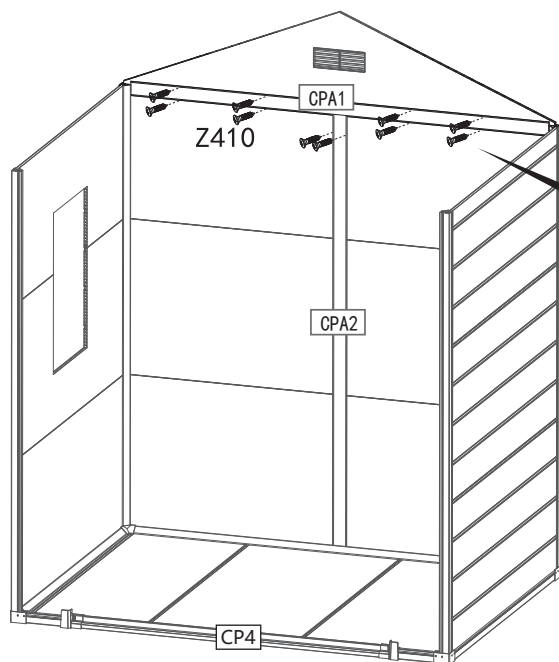

Step 20


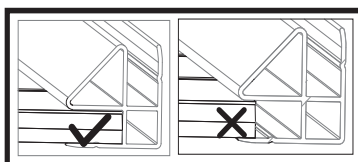


● Fully fit the panel inside the profile


CW3-1




4 PC

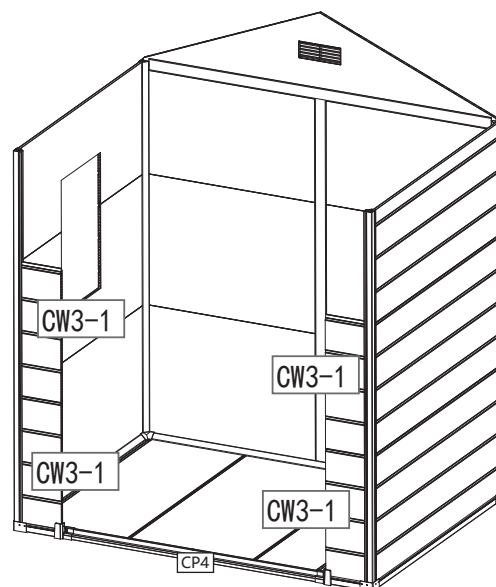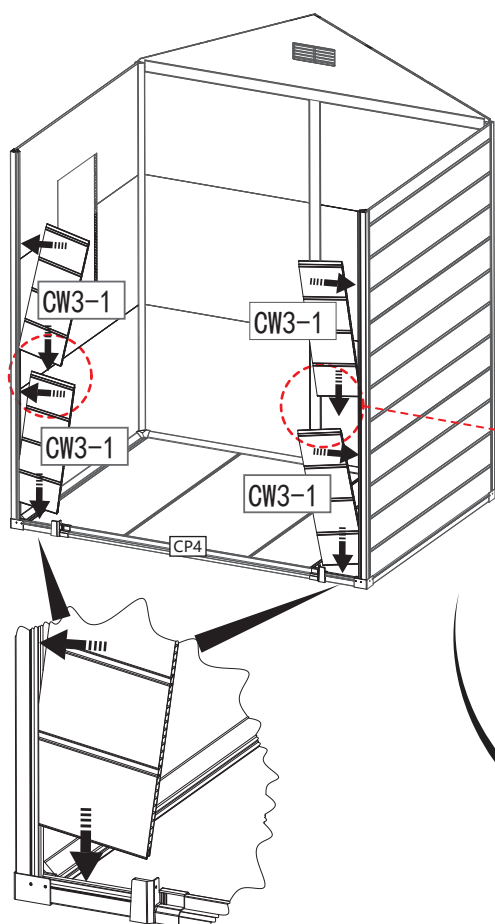

Step 21

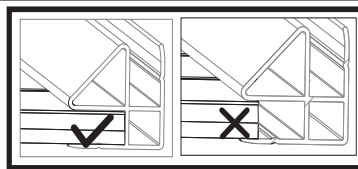

● Fully fit the panel inside the profile

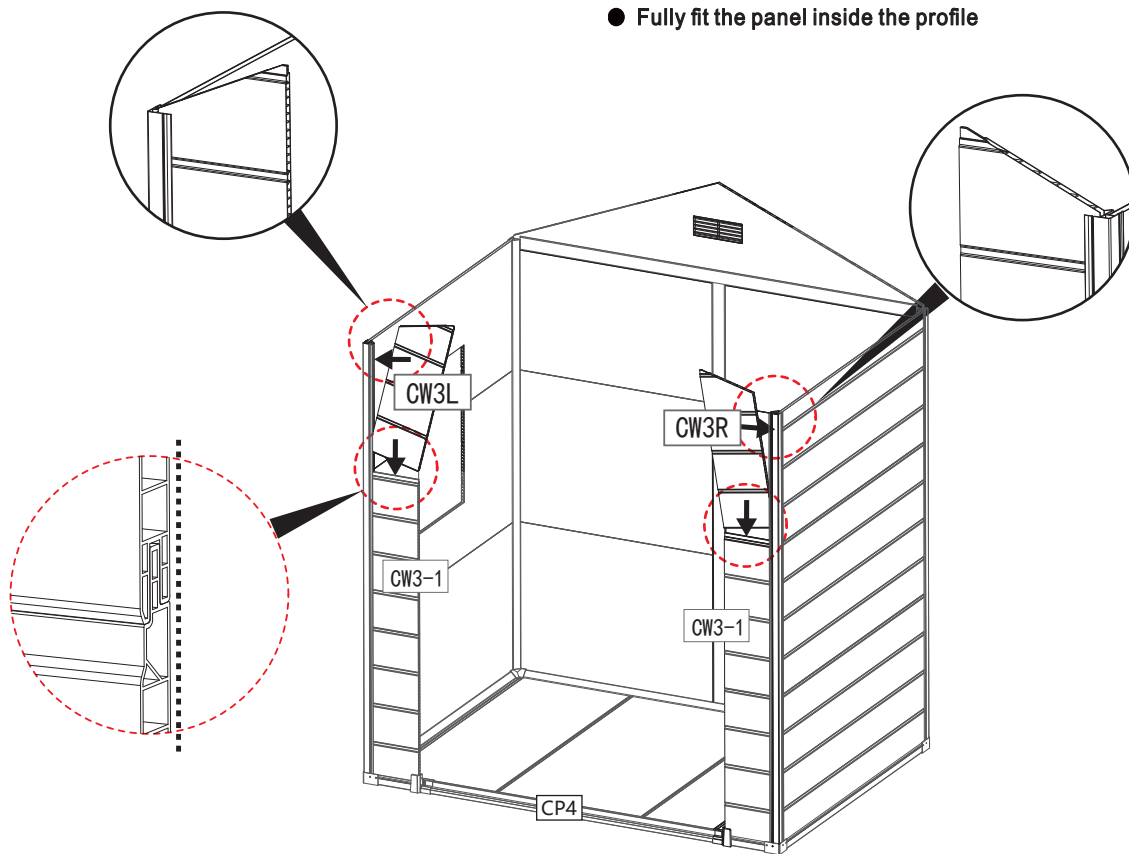

CW3L



1 PC


CW3R



1 PC



Step 22

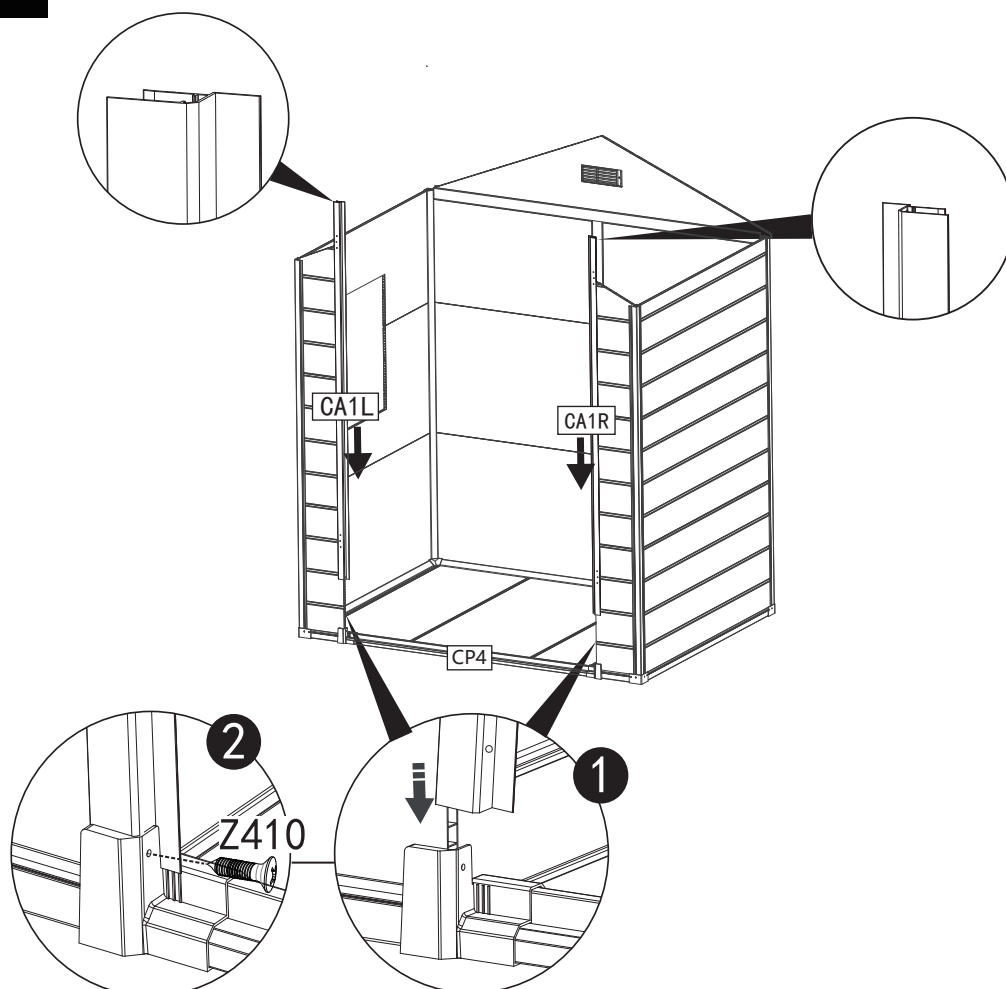

CA1L



1 PC

CA1R






1 PC

Z410



2 PC

Step 23

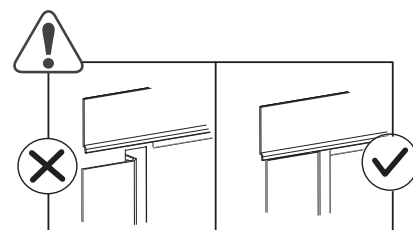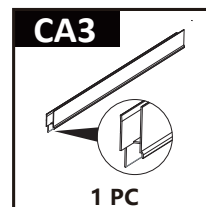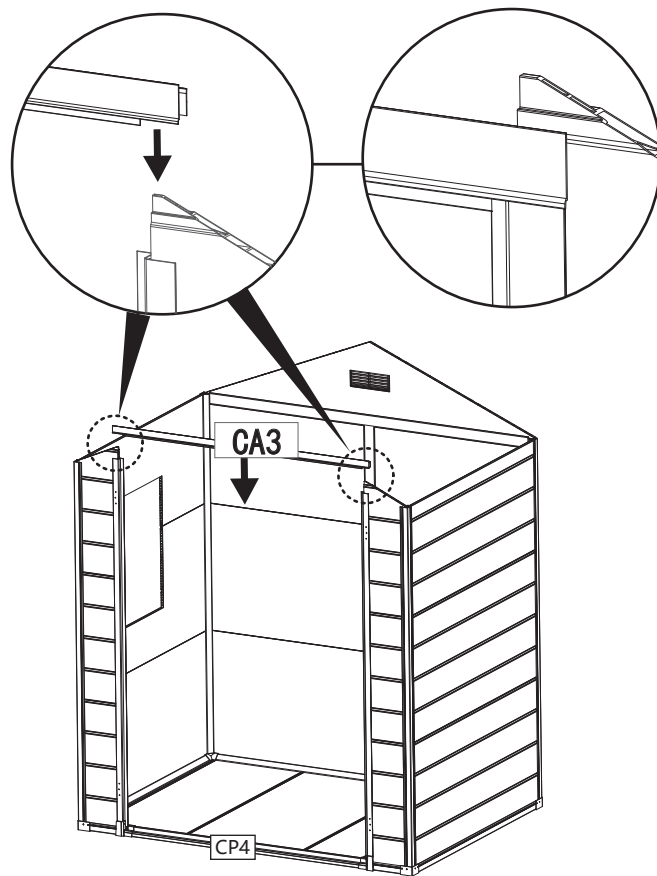


Step 24

Z410



2 PC

BY




1 PC

CW4-3




1 PC

1

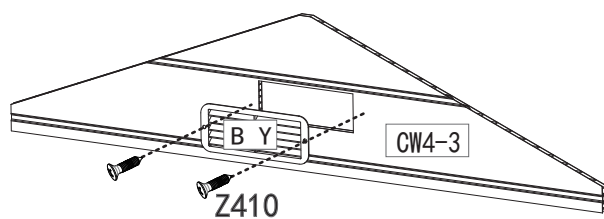


2

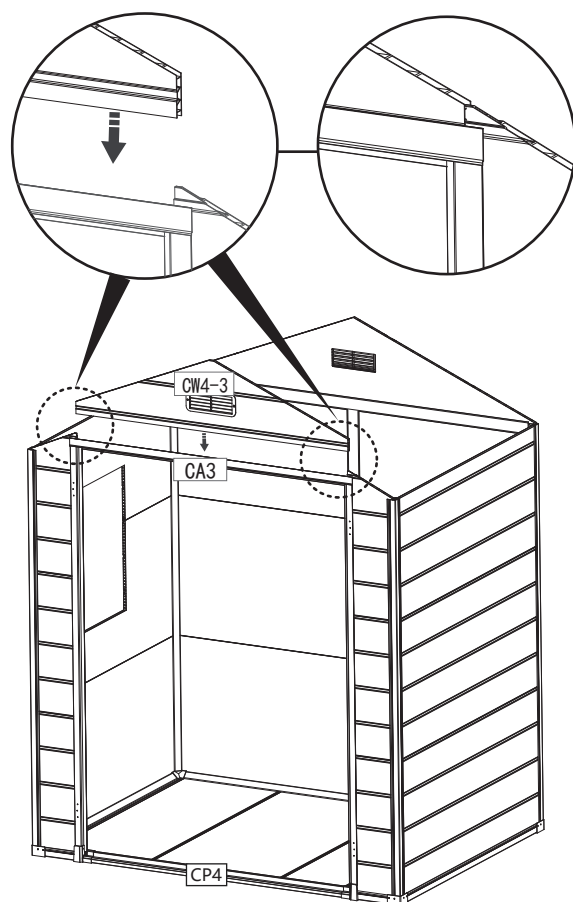


Step 25

AB=CD

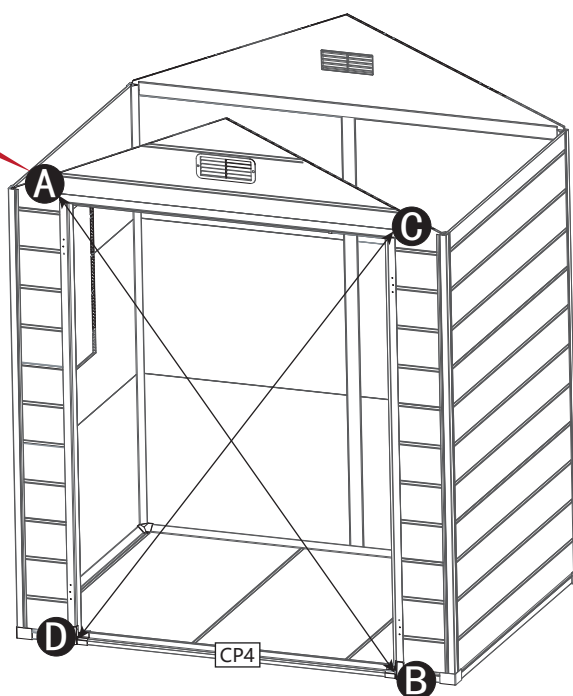

Step 26

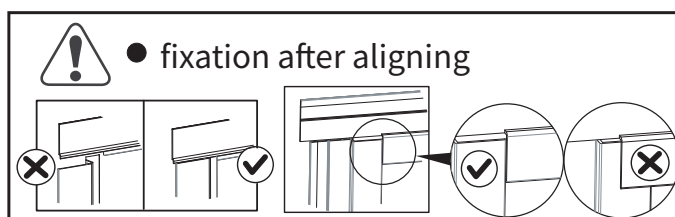

ZW413




6 PC

SG12



2 PC

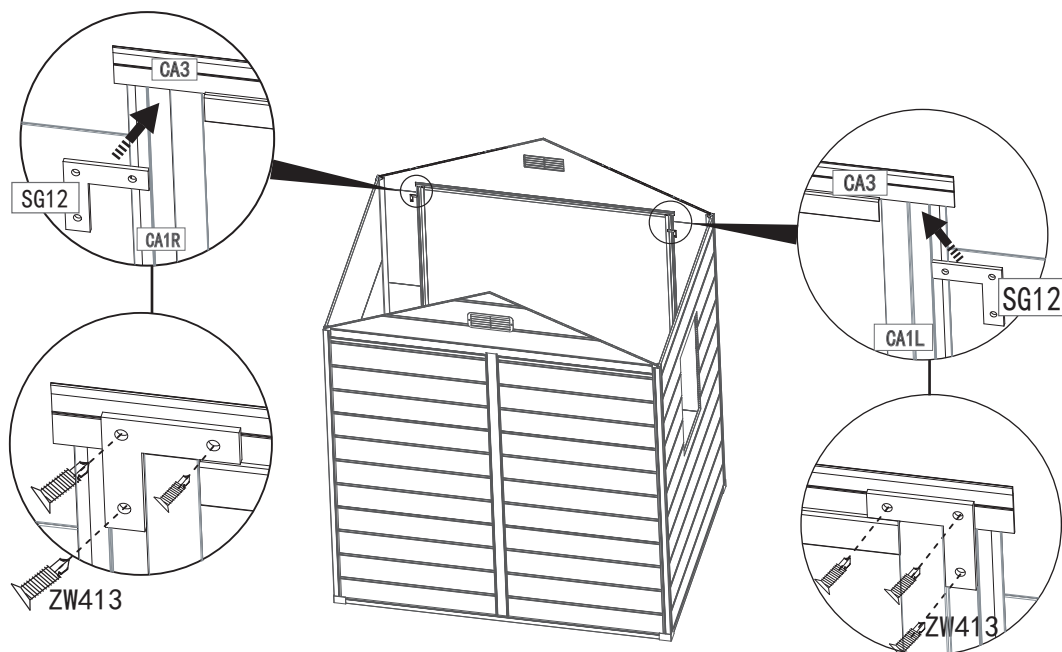

Step 27

Caution:

Please use Drill  to predrill a hole at depth 1mm before screw.







Z420






24 PC


Screw when the boards are in position

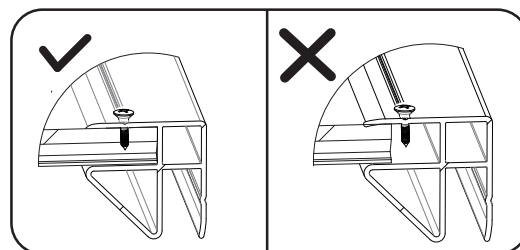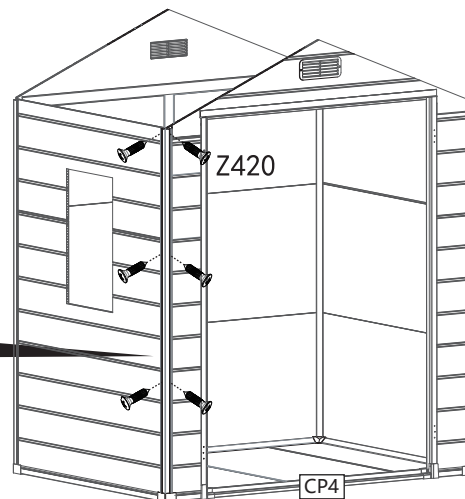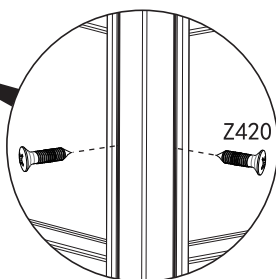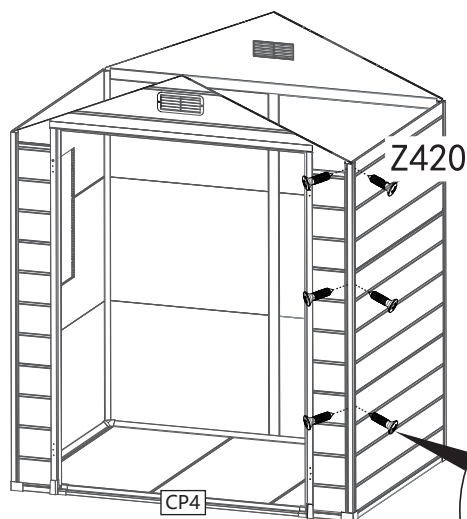



Fully fit the panel inside the profile
Screw along the marked lines in profiles

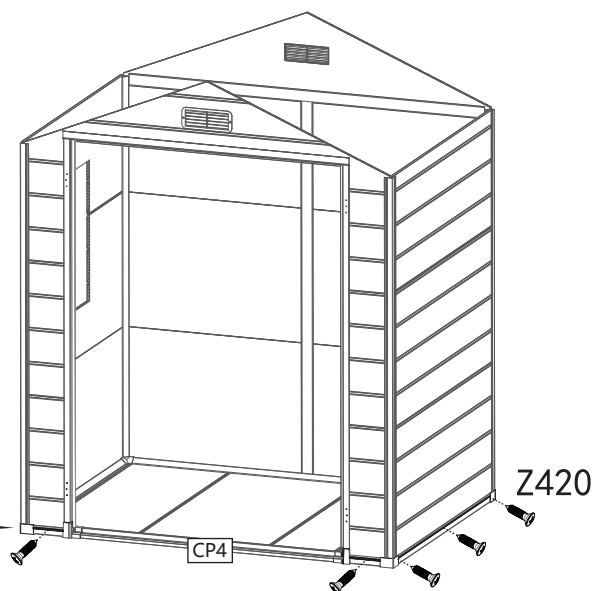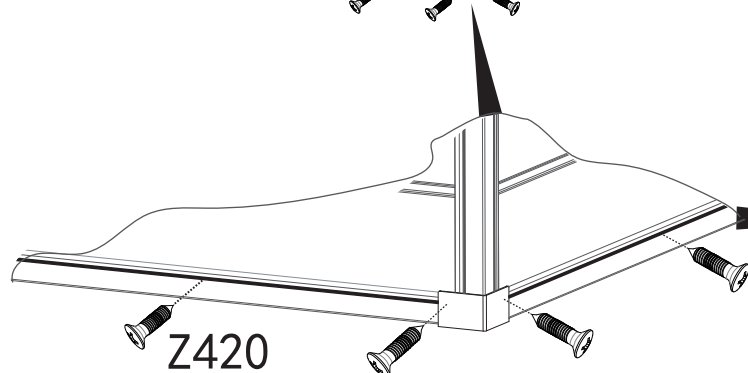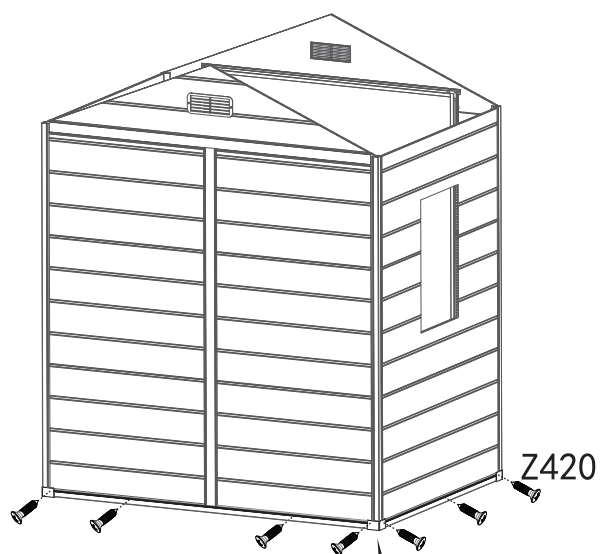



ROOF PARTS

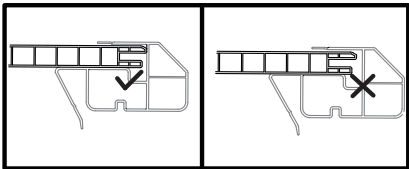


Fully fit the panel inside the profile

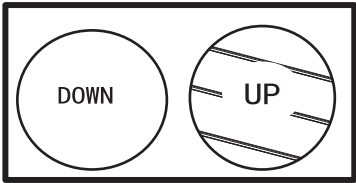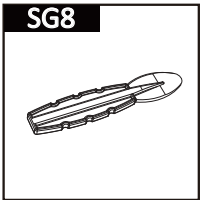





The stripes should be upwards

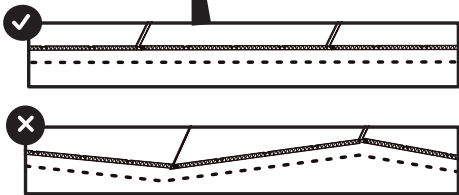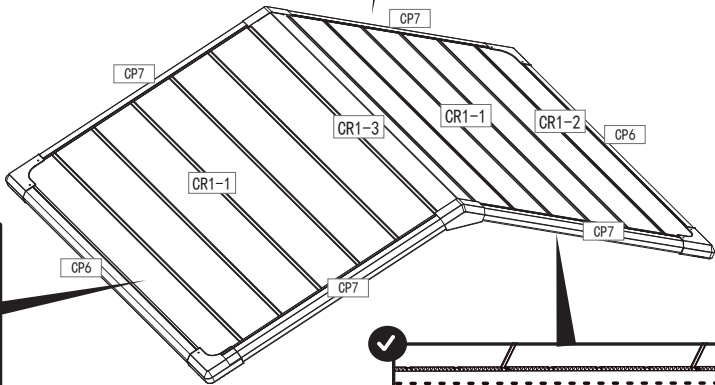


Step 28

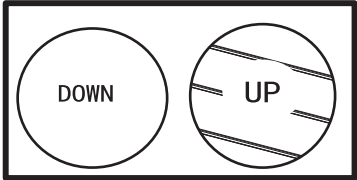


The stripes should be upwards

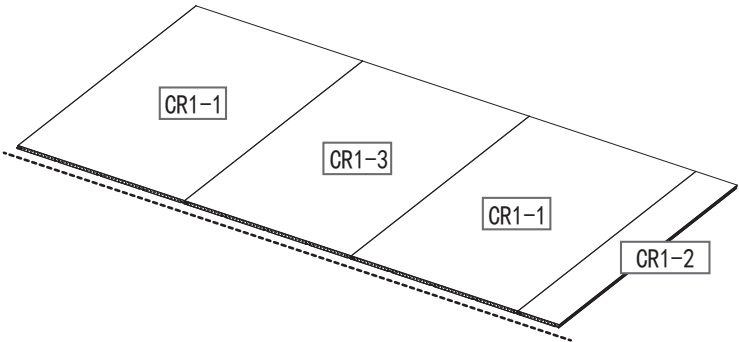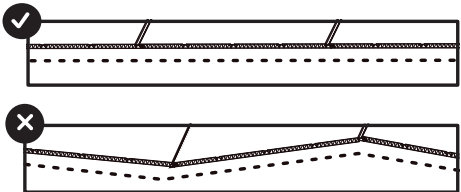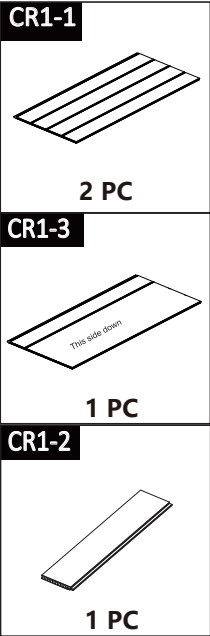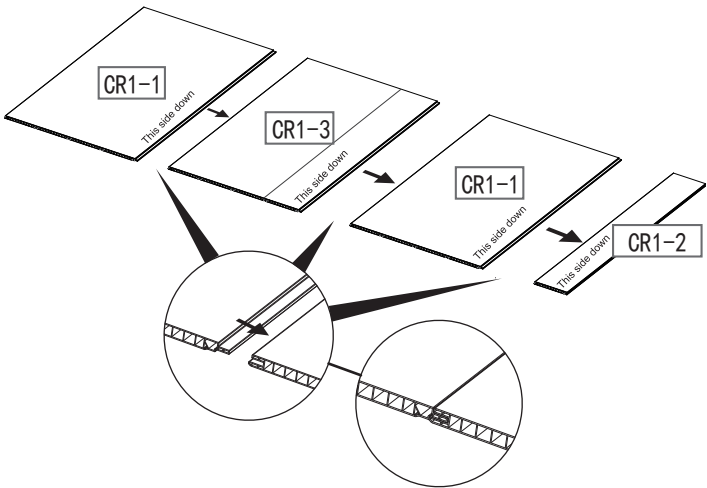


Step 29

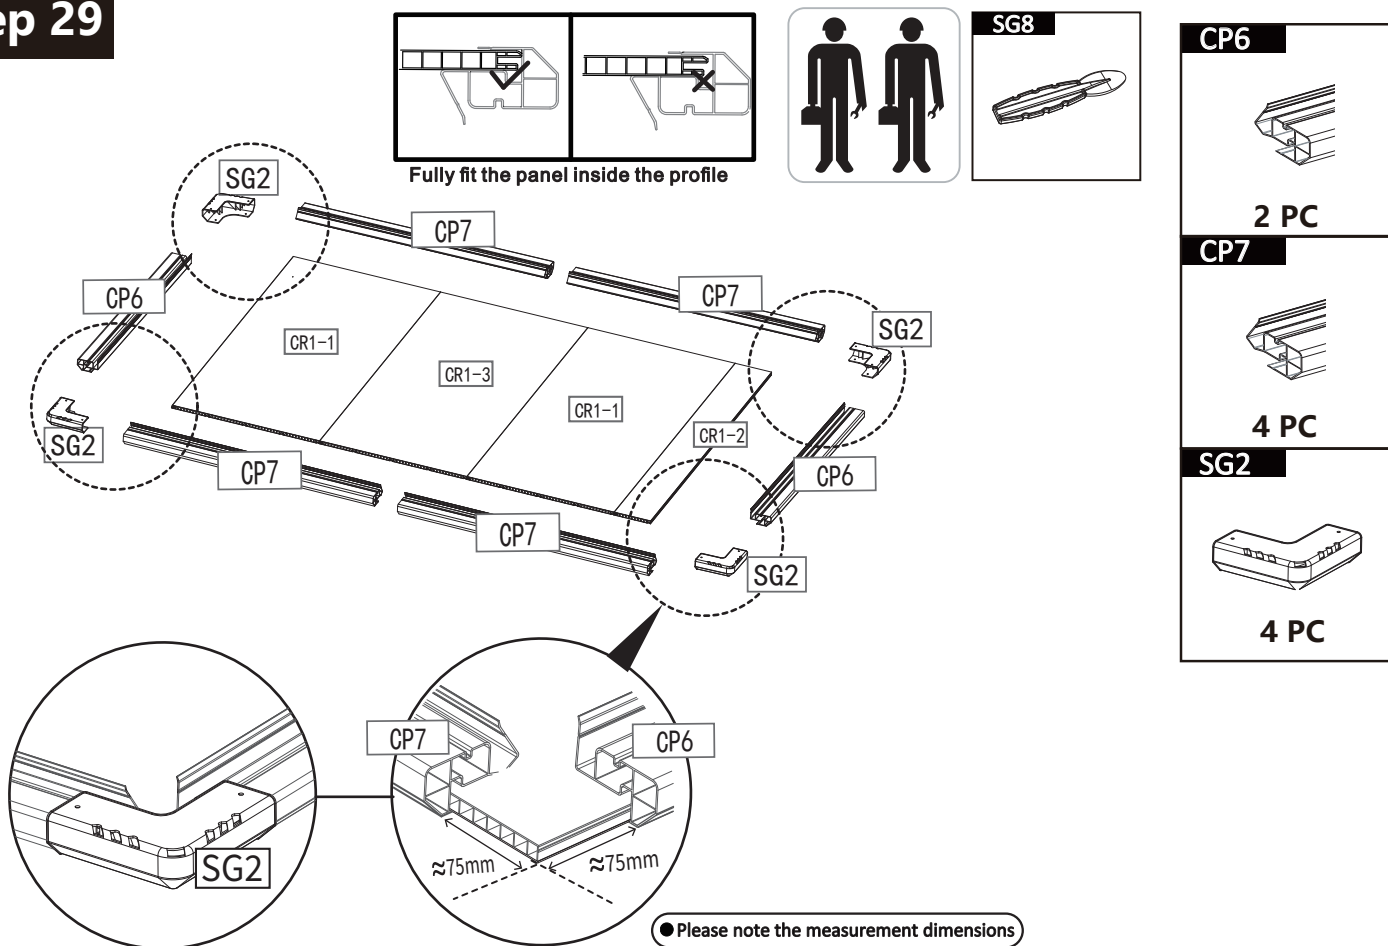


Step 30

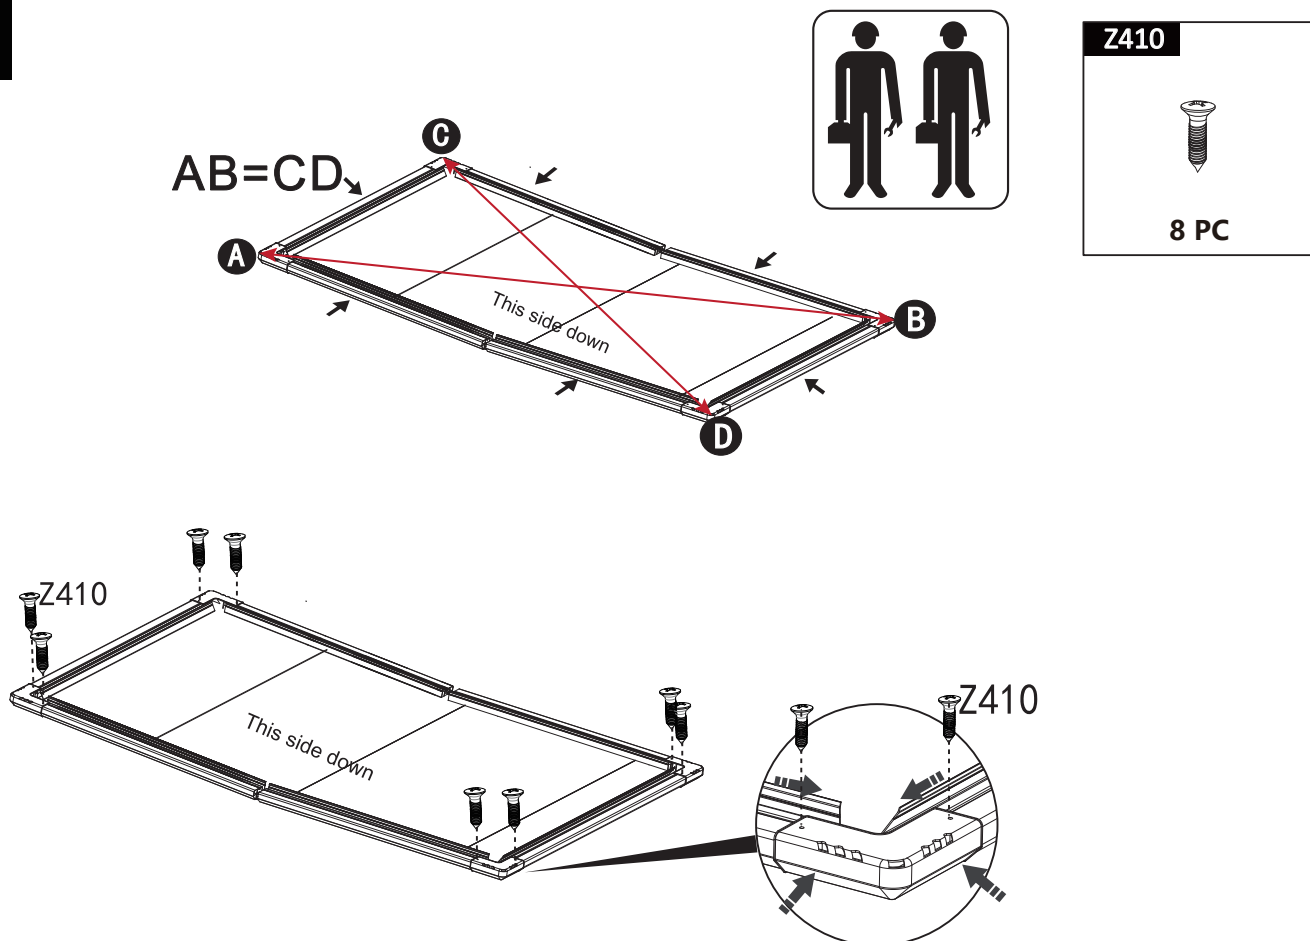

Step 31

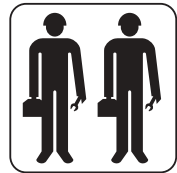

Turn the roof boards over

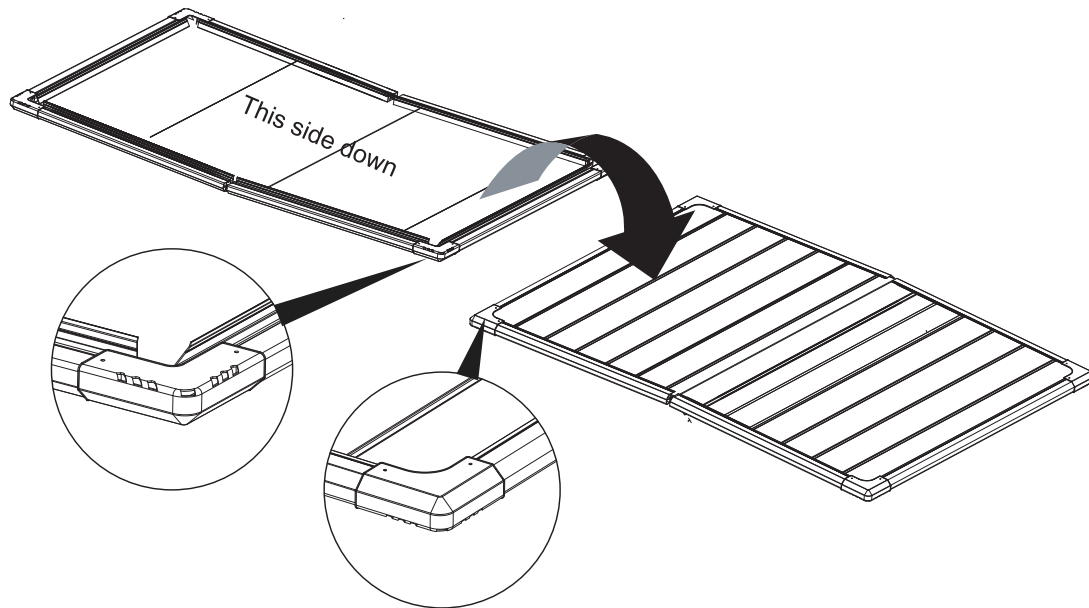

~40mm

Step 32

Caution:


Please use Drill  to predrill a hole at depth 1mm before screw.



Z420




20 PC

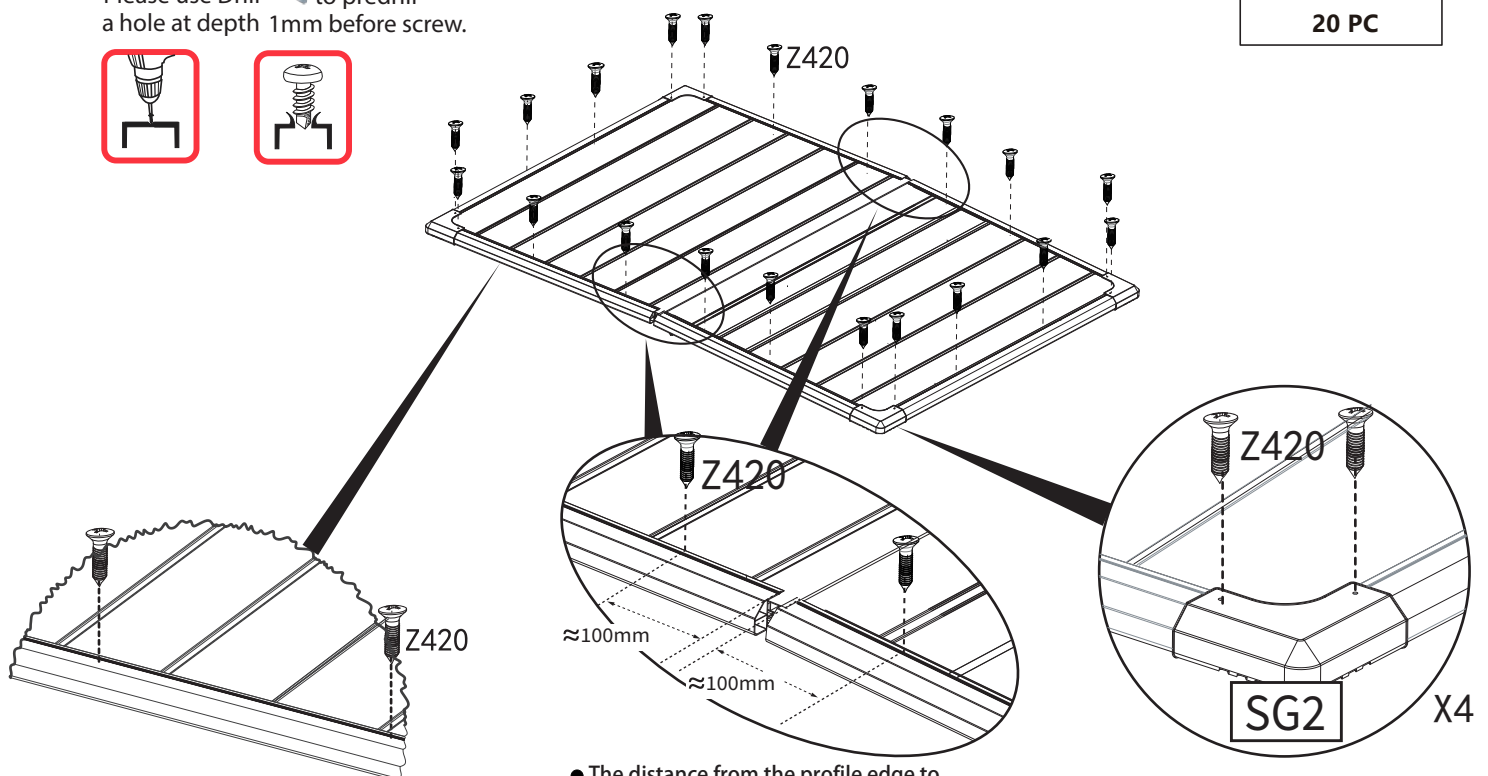



- The distance from the profile edge to the first screw is about 100mm.

Step 33

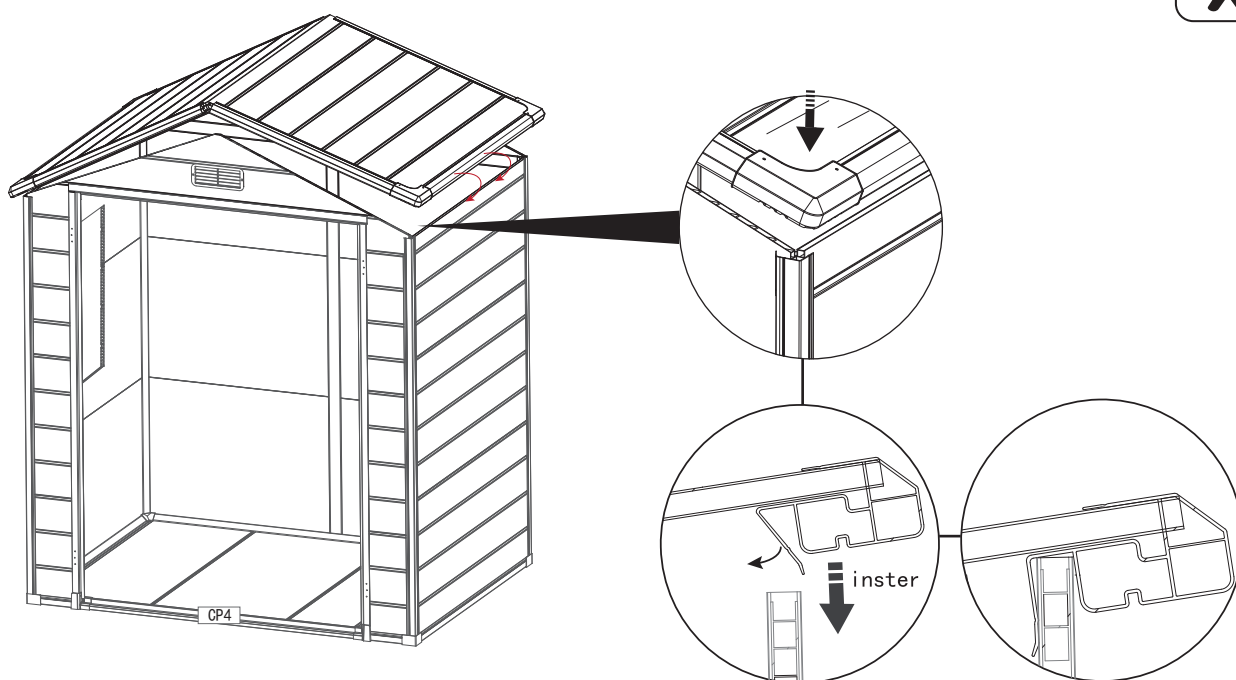


Fully fit the panel inside the profile

Step 34

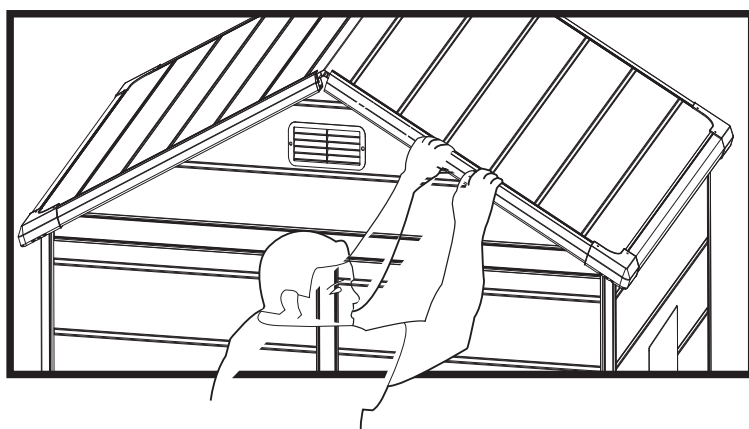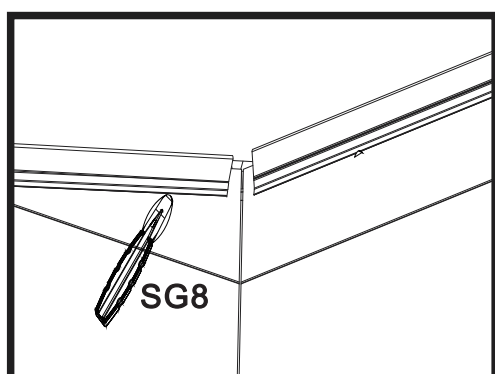

Fully fit the panels inside the profiles of roof

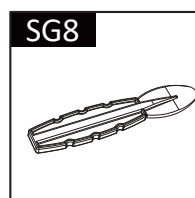

Step 35

Z420





16 PC



Caution:

Please use Drill  to predrill a hole at depth 1mm before screw.

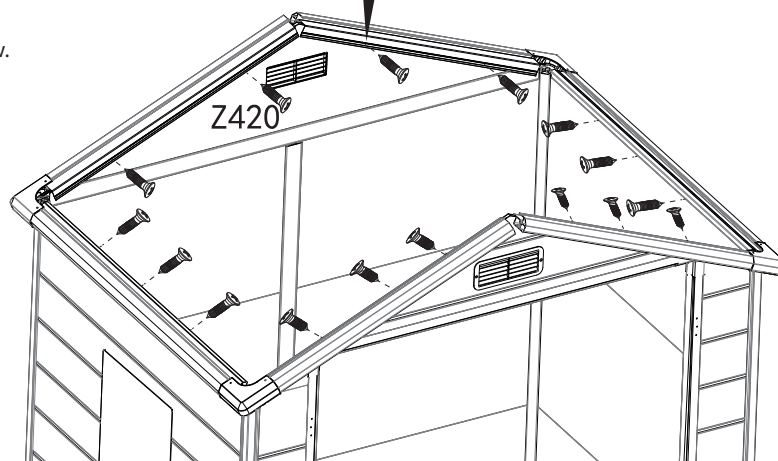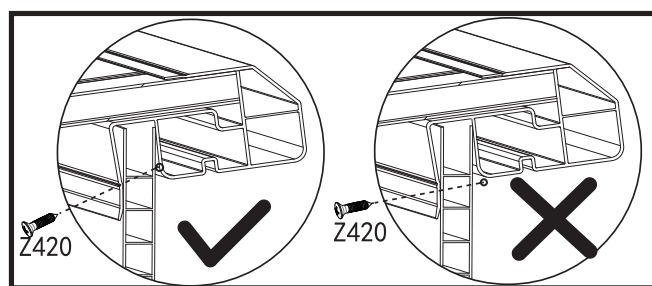

Step 36

Z425




4 PC

SG1




2 PC

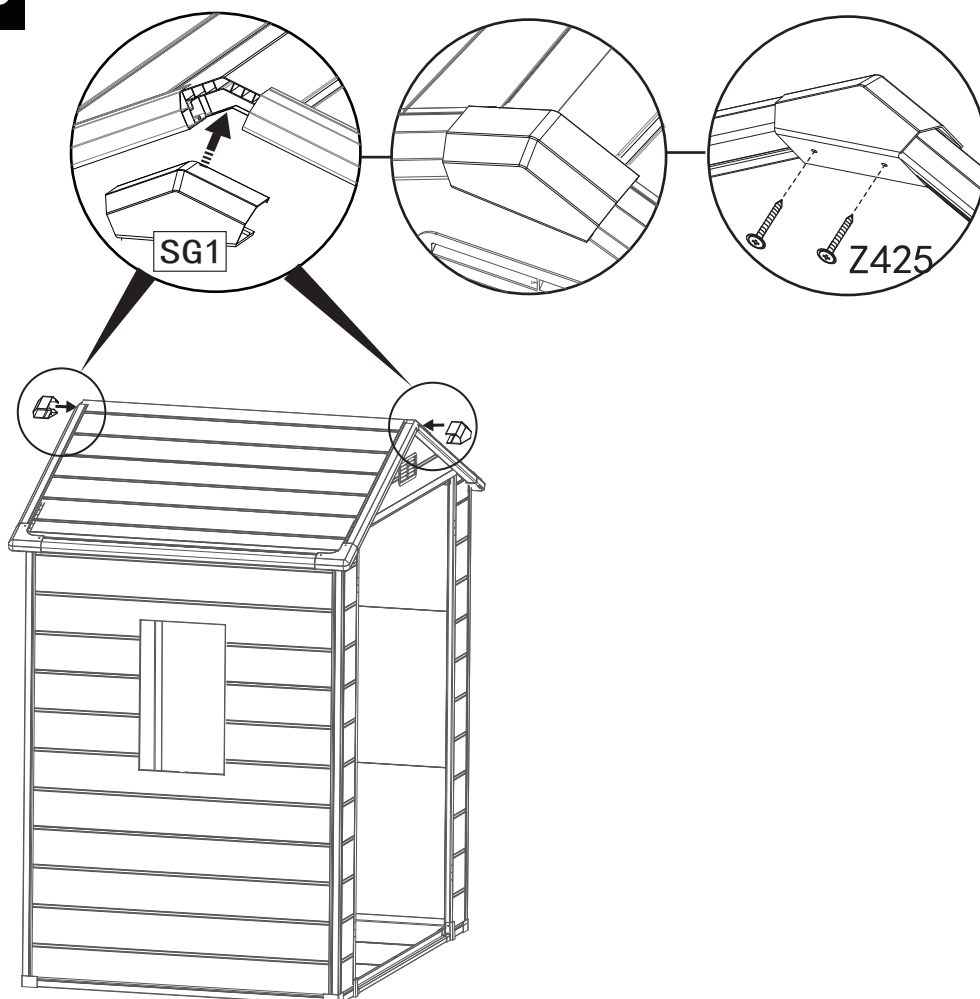


Step 37

Window section

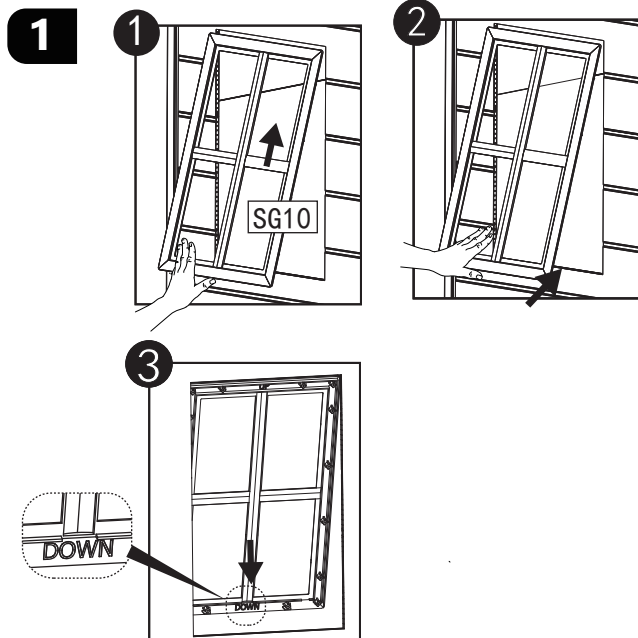


How the Windows look when they are installed

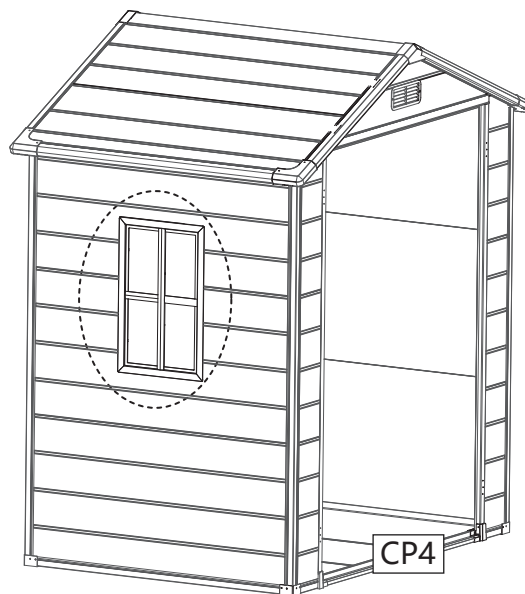


SG10		1 PC
SG101		1 PC
SG102		1 PC
Z410		16 PC

2




- Remove the film before fixing SG101

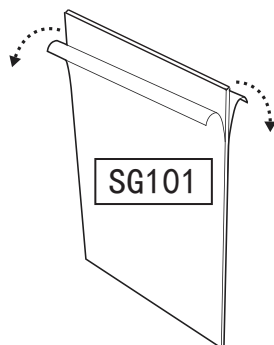

- Two persons are needed for this step, SG10 to press SG101 from outside and inside.

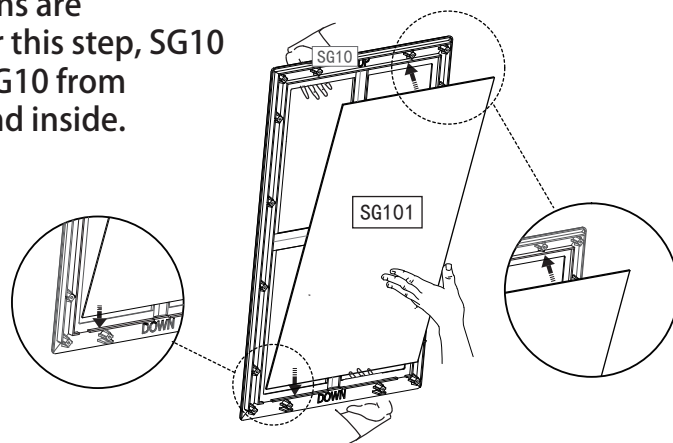

3

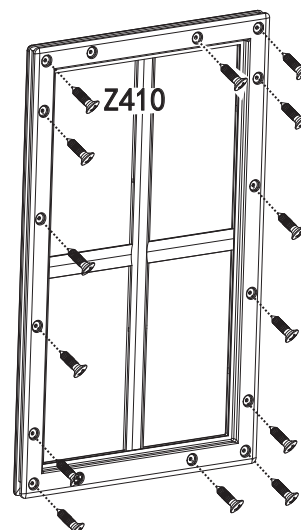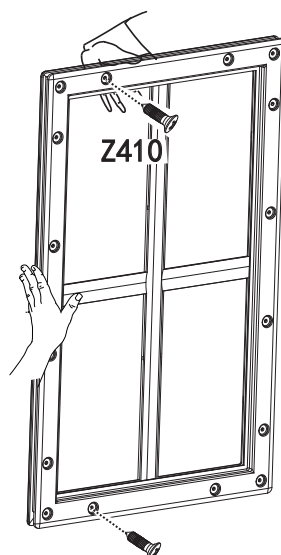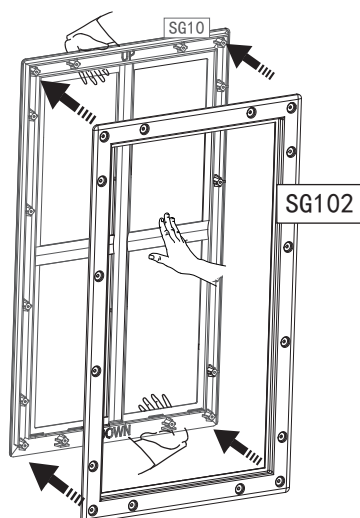

DOOR SECTION




Door mount this is above

UP


RIGHT DOOR

UP


LEFT DOOR






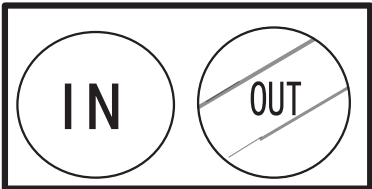


The stripes should be outside

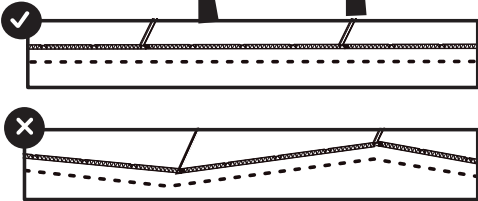


Step 38

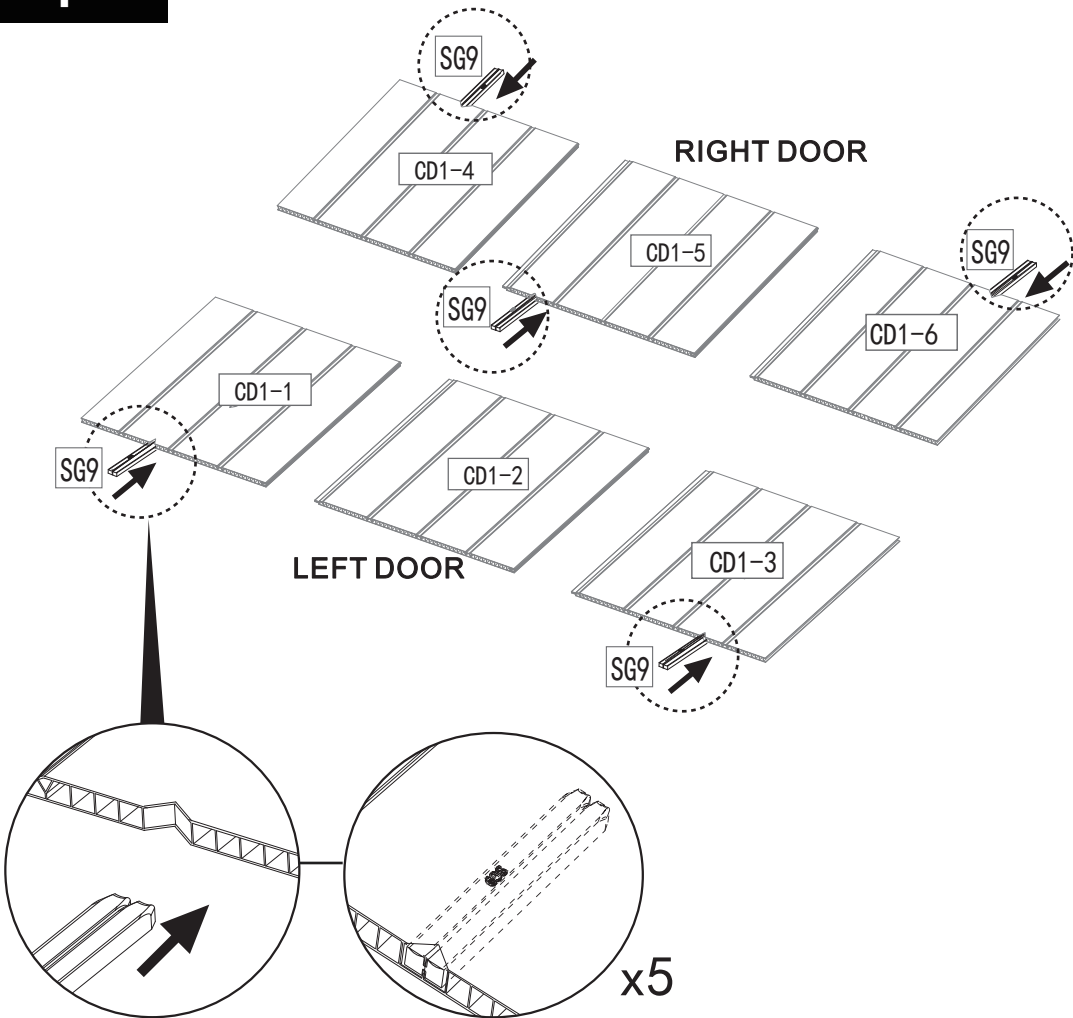


CD1-1  1 PC	CD1-2  1 PC
CD1-4  1 PC	CD1-5  1 PC
	CD1-3  1 PC
	CD1-6  1 PC
	SG9  5 PC

Step 39

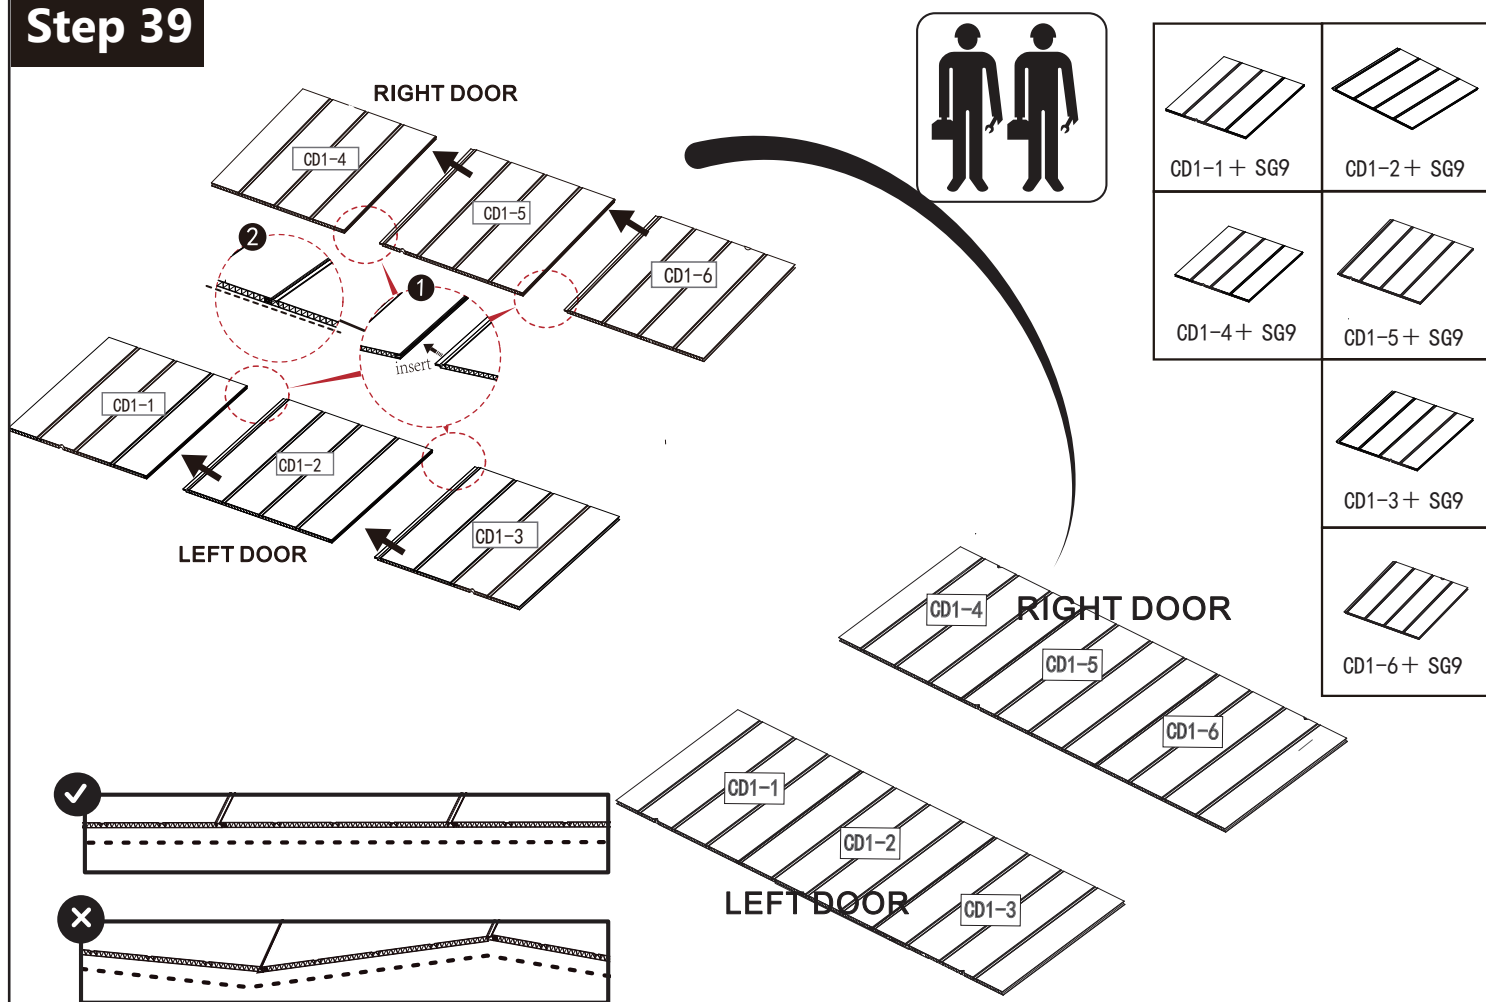


Step 40

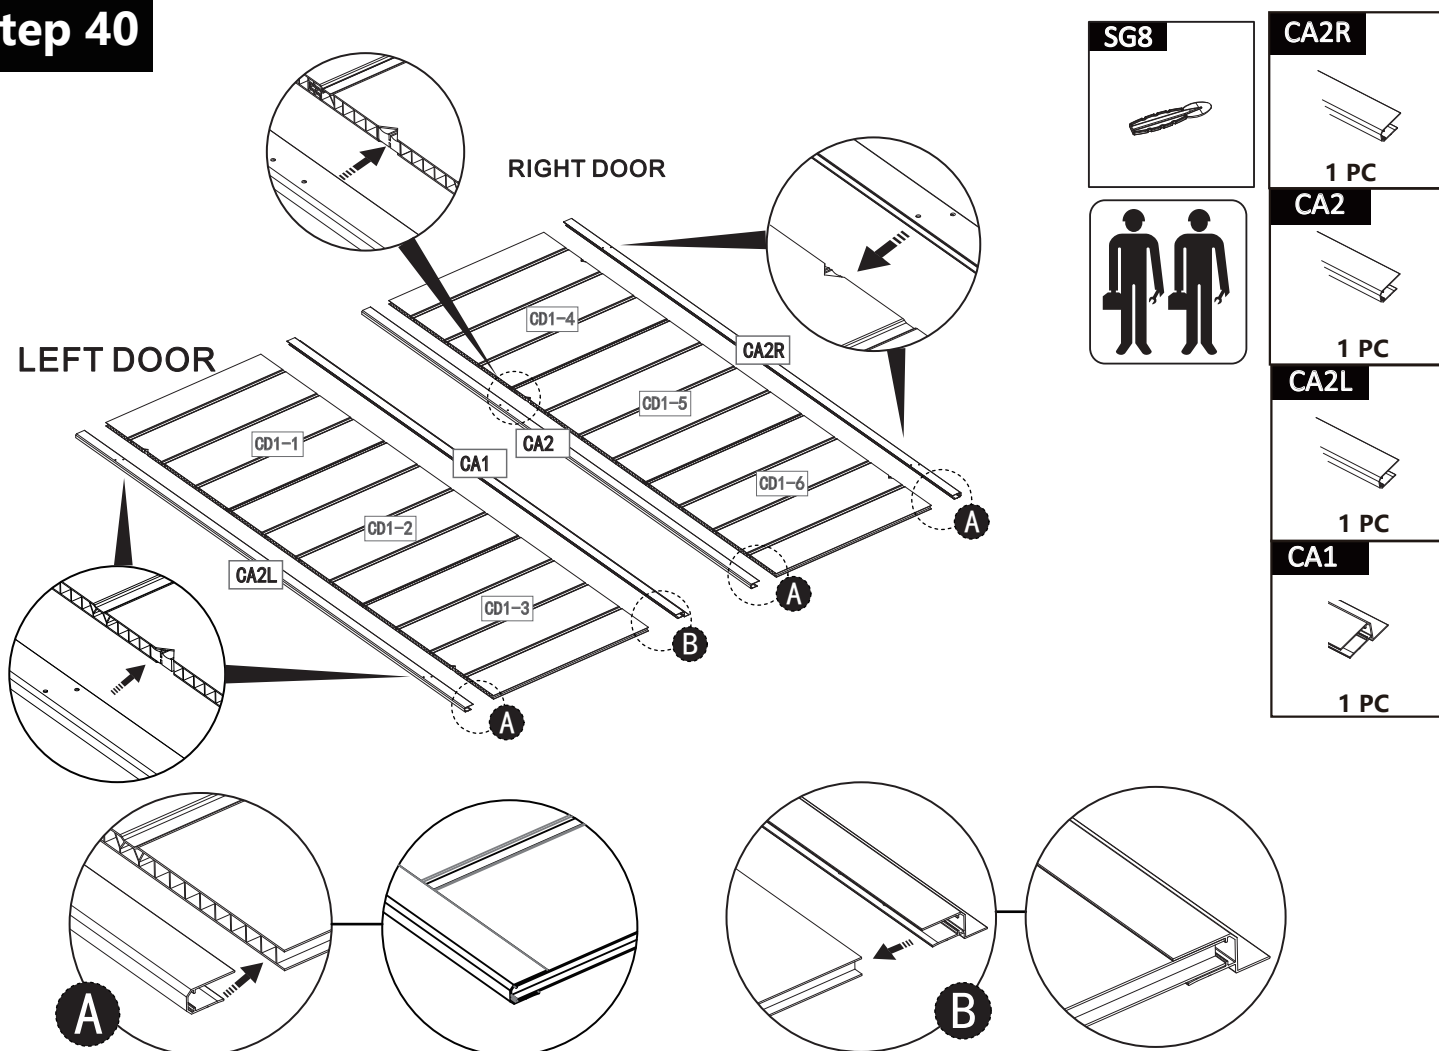

Step 41

LEFT DOOR

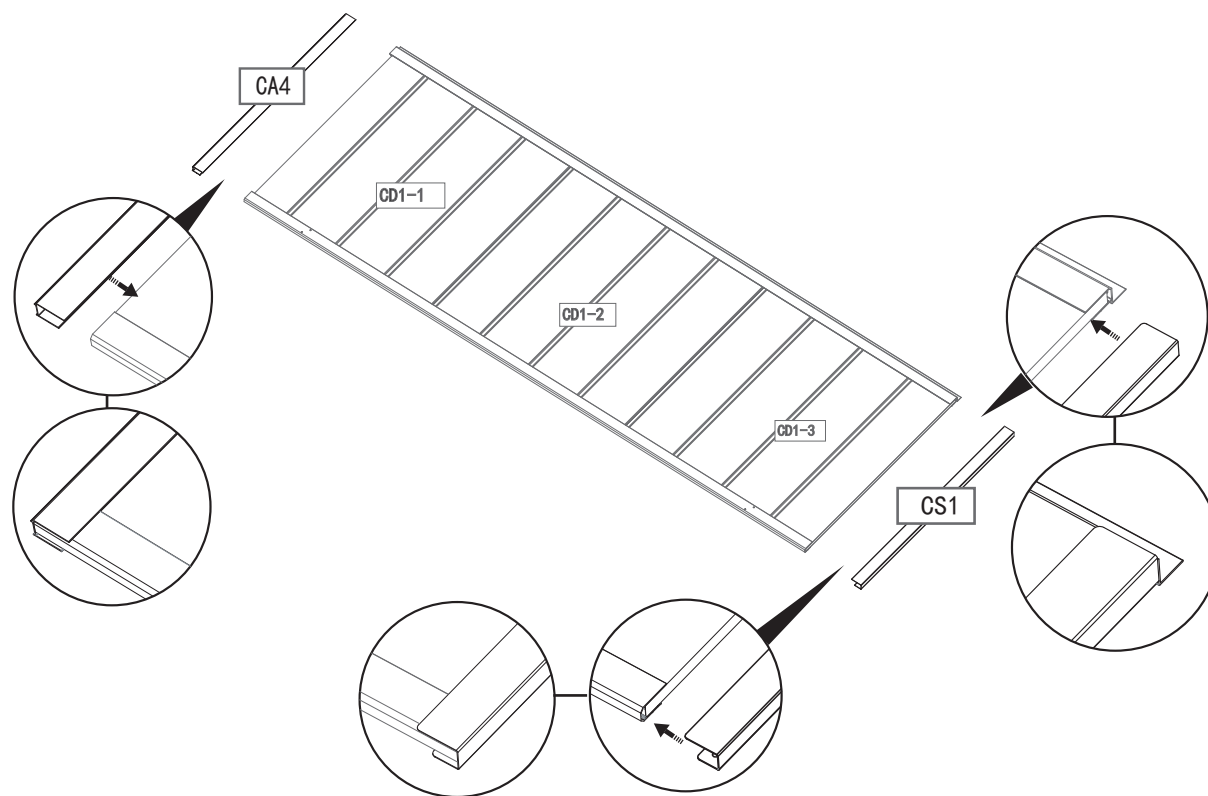

CA4



1 PC


CS1



1 PC

Step 42

RIGHT DOOR

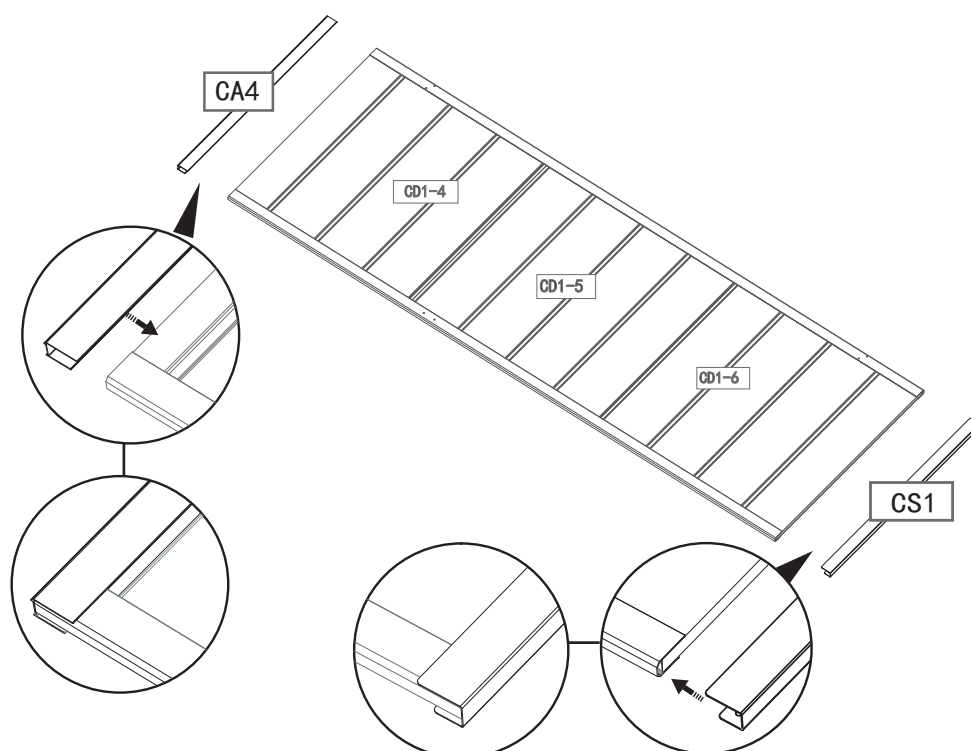

CA4



1 PC


CS1




1 PC

Step 43

Turn the doors over

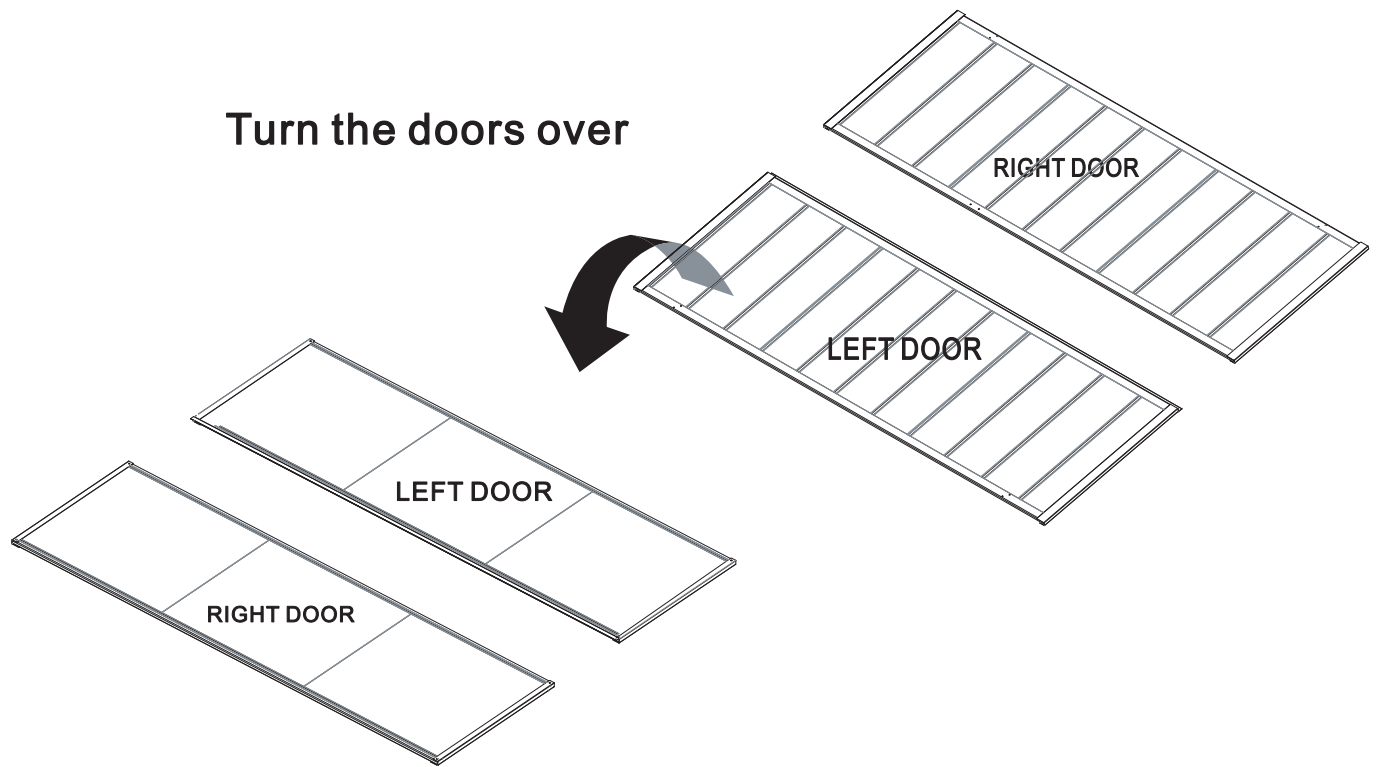

Step 44

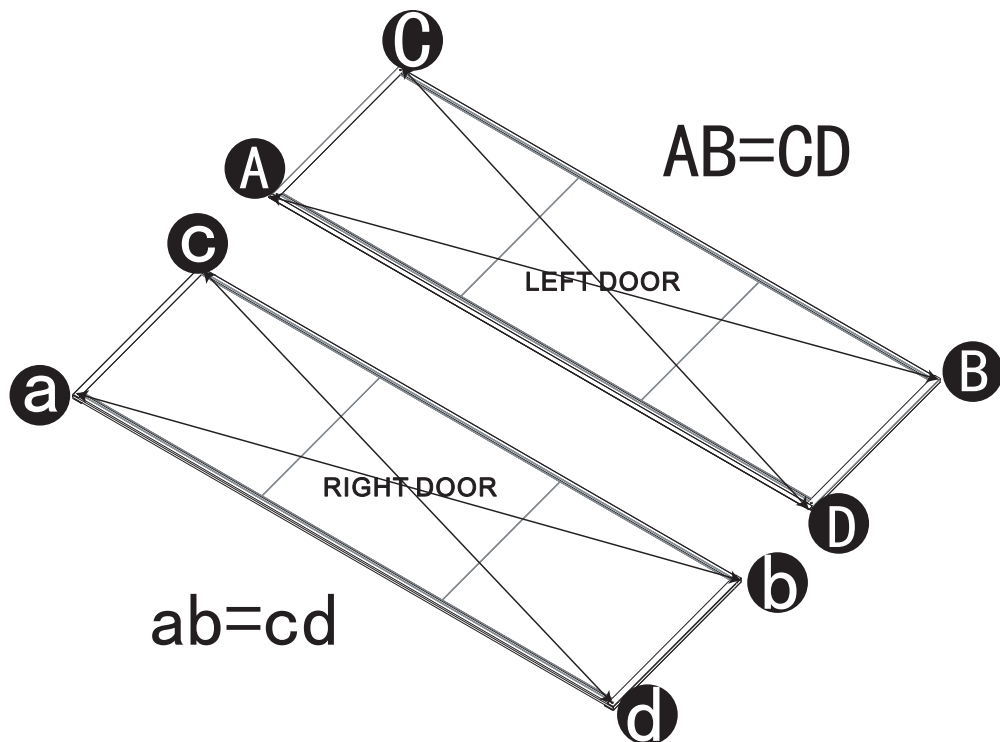


Step 45

ZW413




12 PC

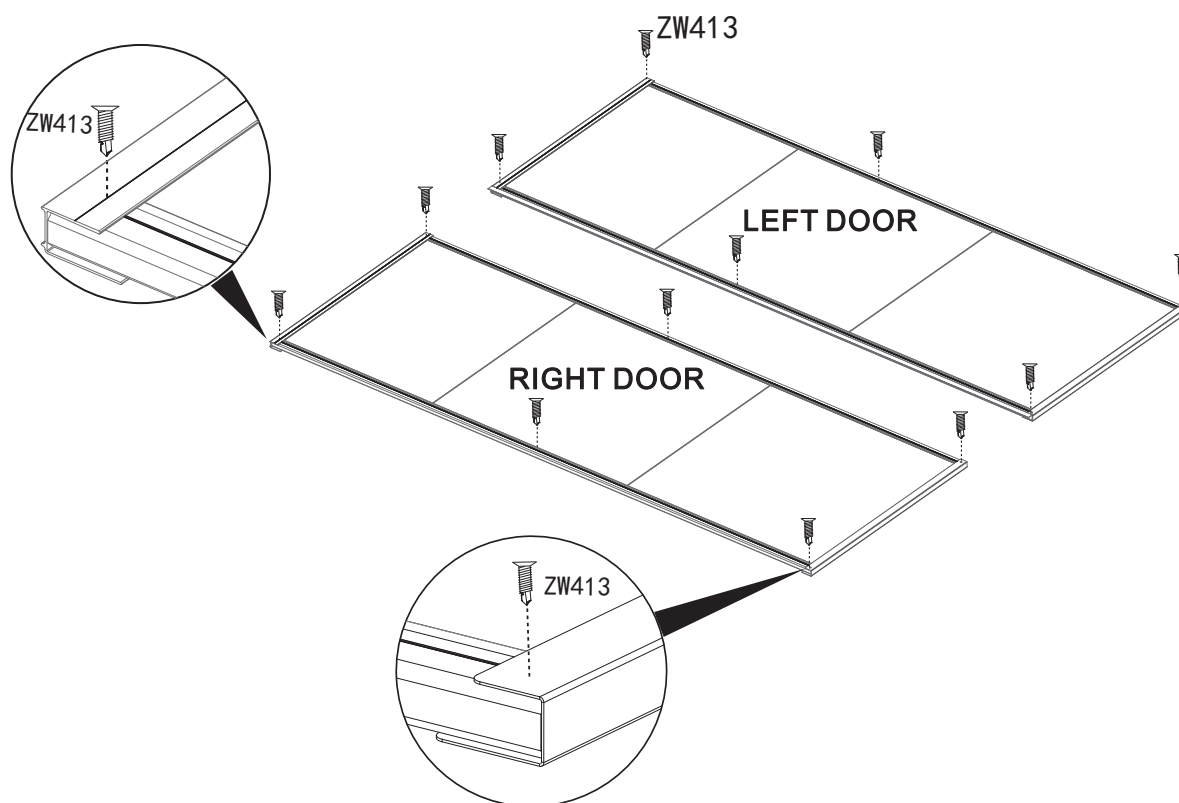

Step 46

DC




2 PC

Z410




8 PC




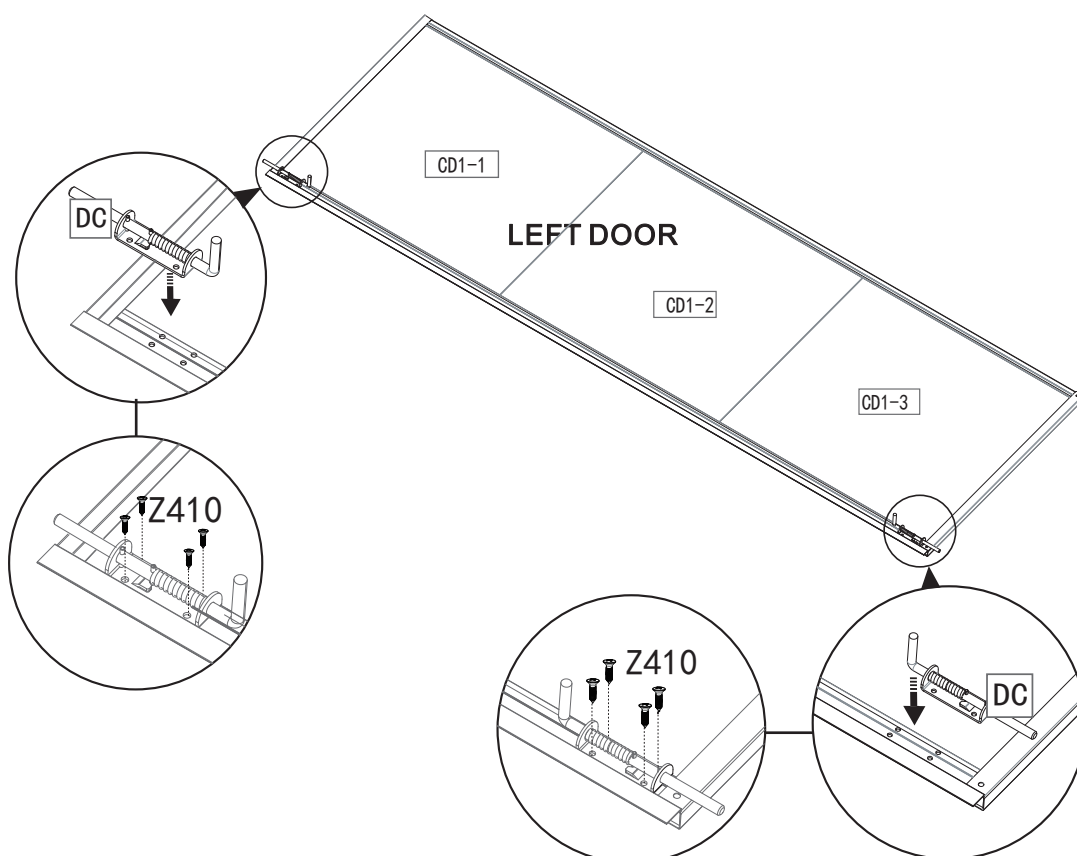


Step 47

Turn the doors over

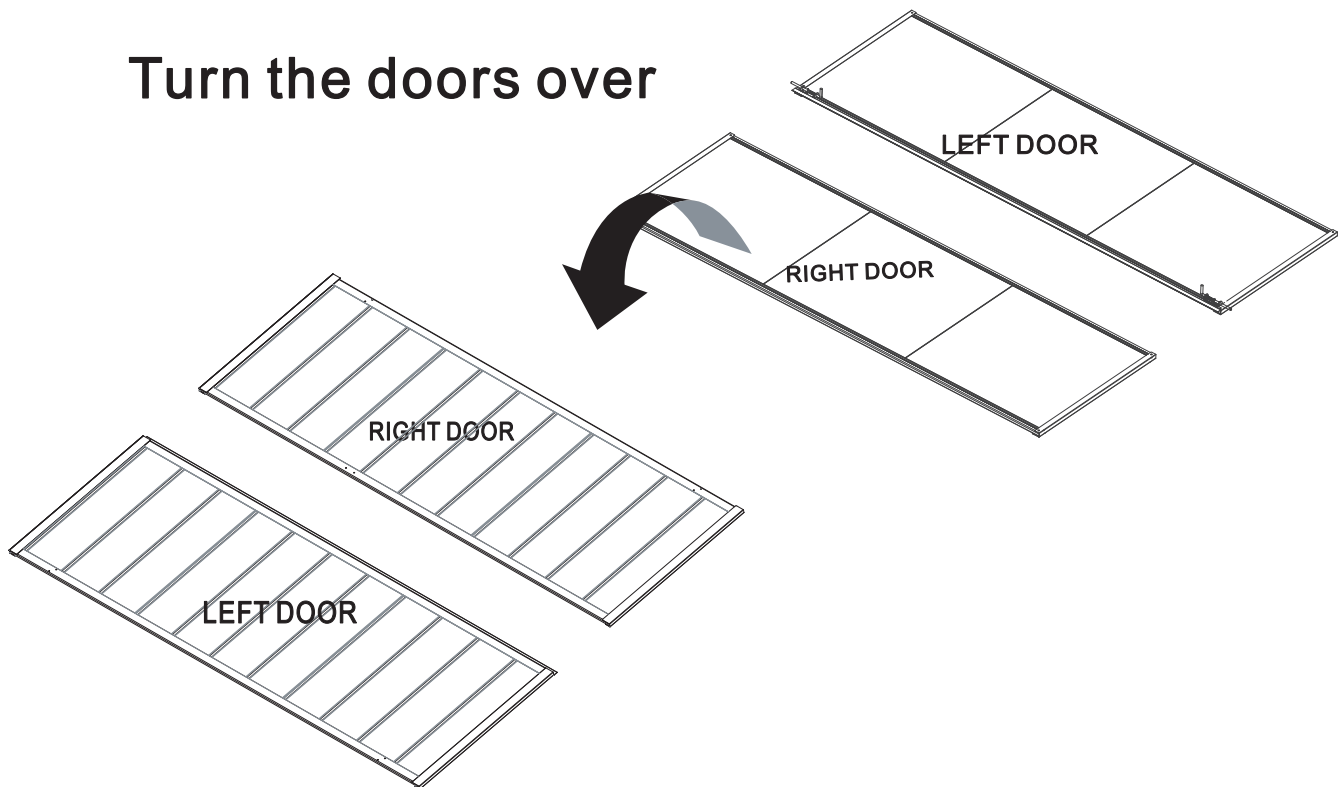

Step 48

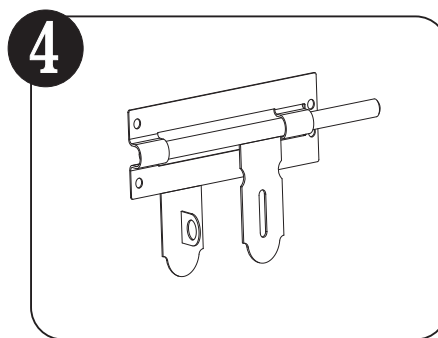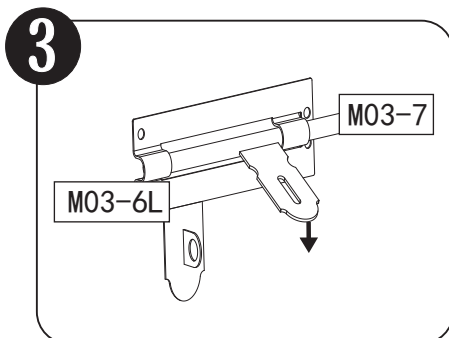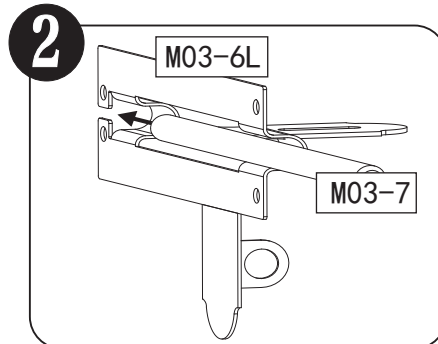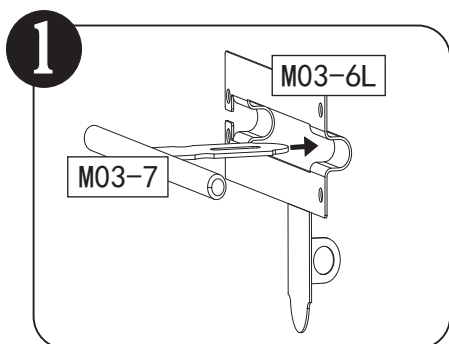


M03-6L






1 PC

M03-7



1 PC

Step 49

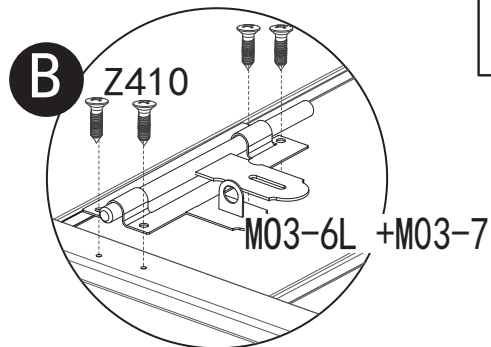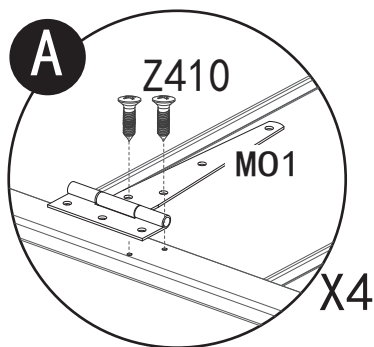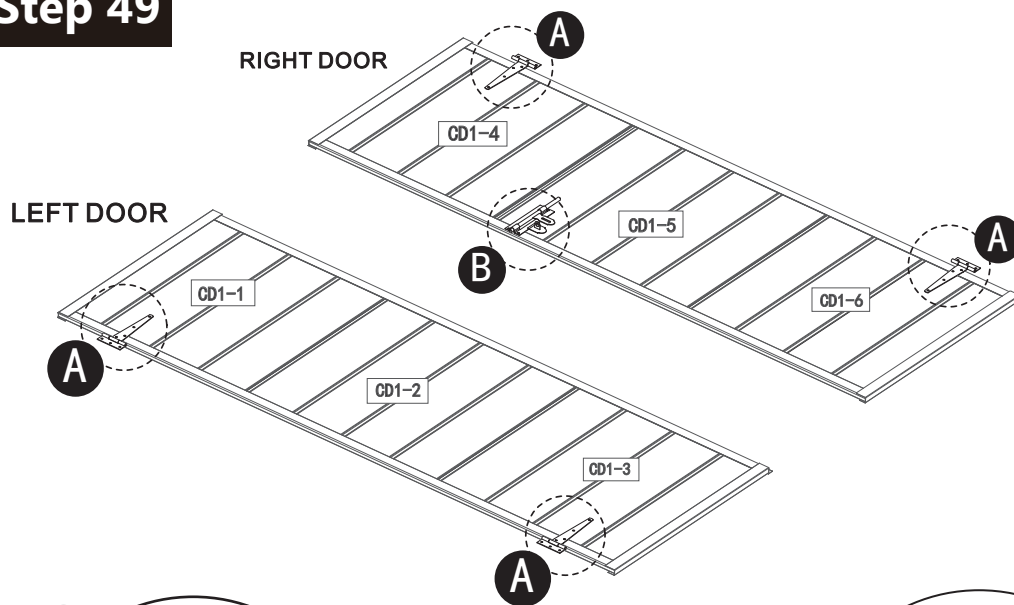


Z410




12 PC

MO1





4 PC



M03-6L + M03-7

Don't fasten the screws in this step, to adjust the positions of doors

Step 50

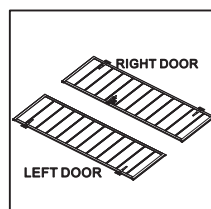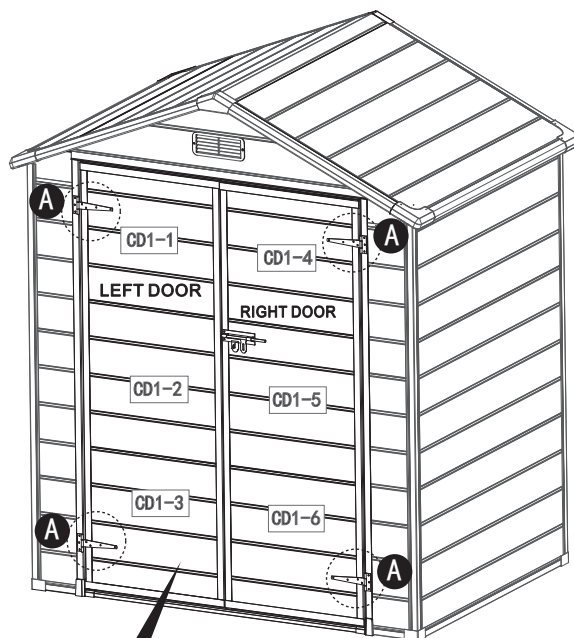


Z410



20 PC





The joints of both left and right door should be in line

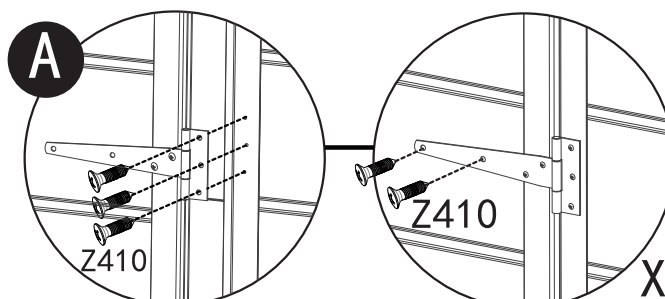

Nail the door after place adjustment and fasten all the screws.

Step 51

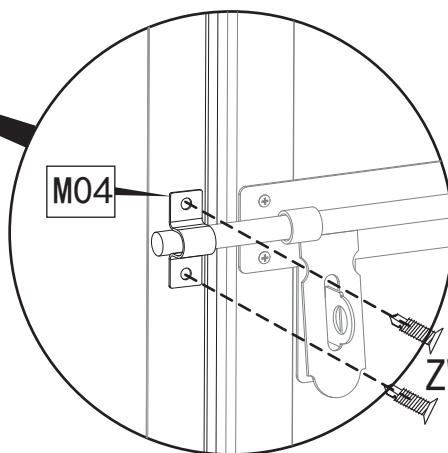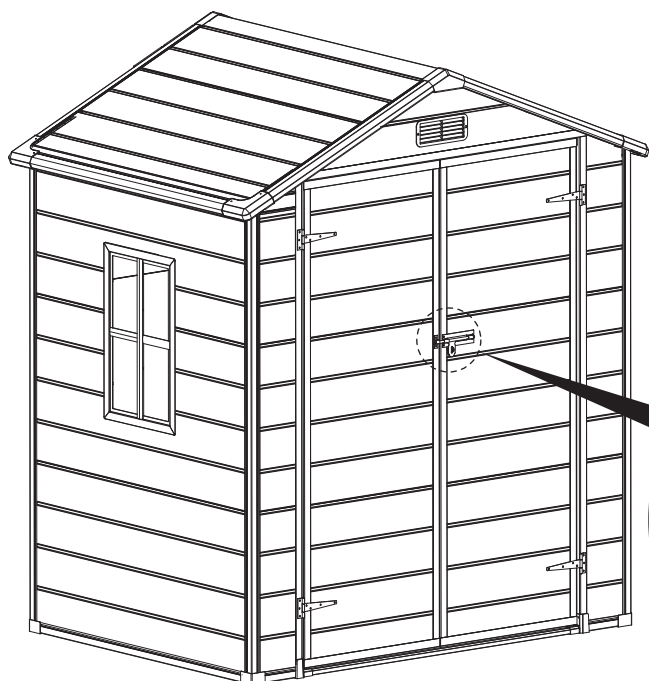

ZW413



2 PC


M04



1 PC

ZW413

Step 52

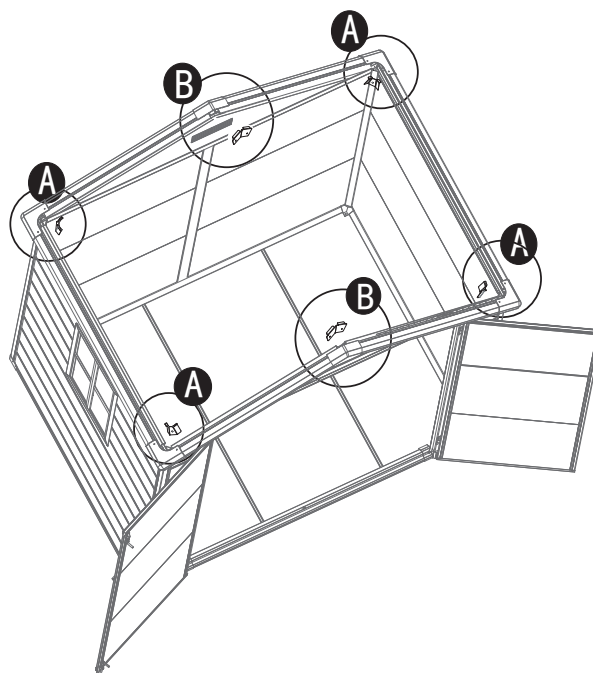

SG14



4 PC

SG13





2 PC

Z420



8 PC

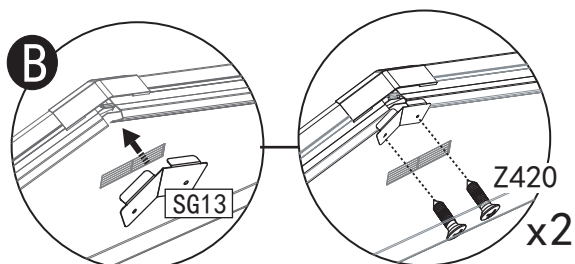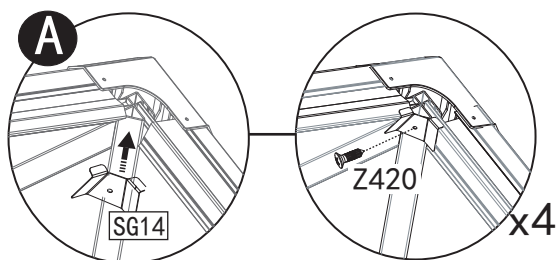

PARTS SCHEMATIC

ROOF PARTS

Rear side

Right

Front

Left

DOOR PARTS

FLOOR PARTS

