


ASSEMBLY INSTRUCTION

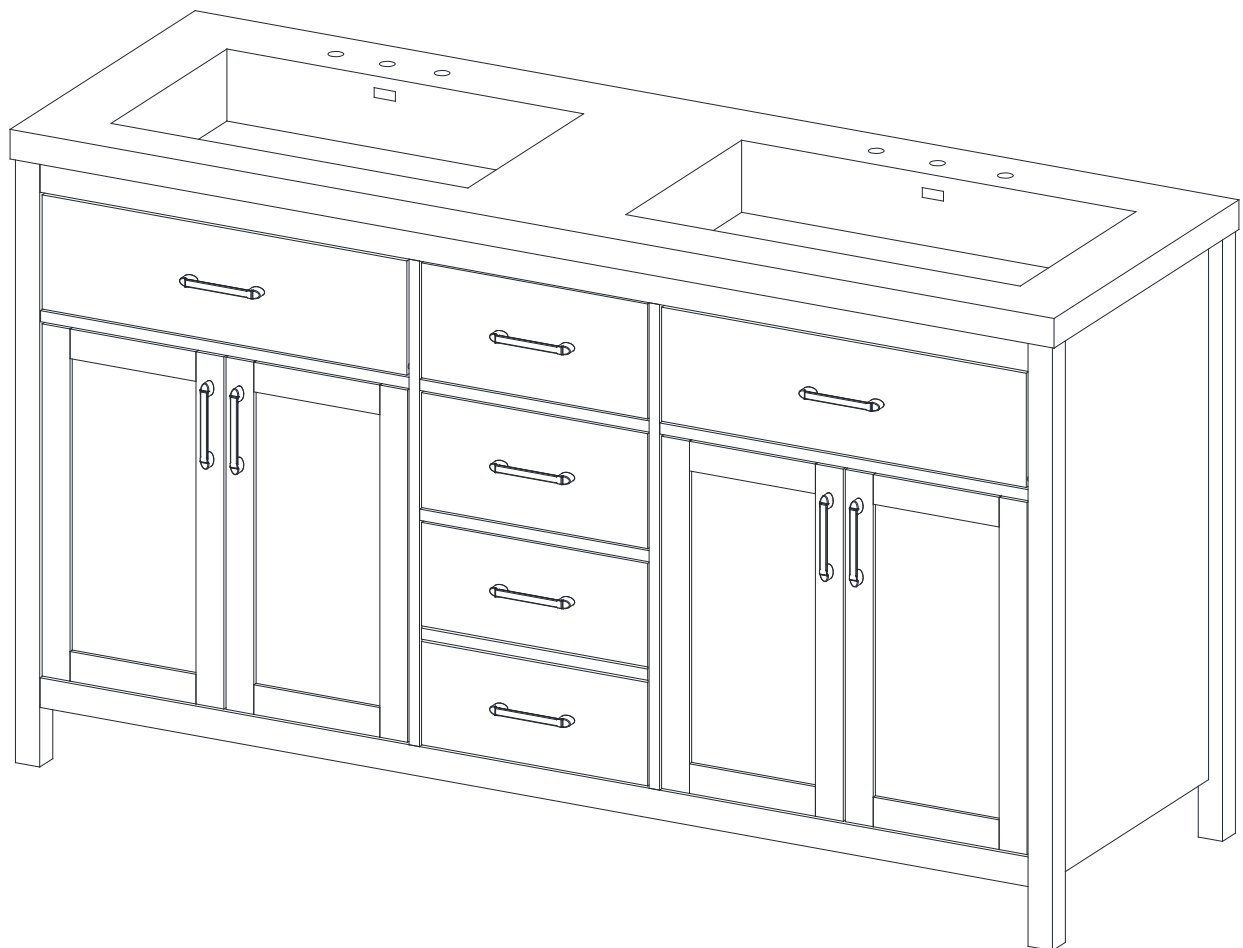

For assembly video instructions, please contact the seller.

Before Installation


Important-Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.










- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions













	Diagram A	Insert Cam Bolt into hole as shown in diagram A.
	Diagram B	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
		Connect the panels together.
	ARROW SIGN	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
		To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. *Do not use an automatic screwdriver as it may bend or break if too much power is imposed.

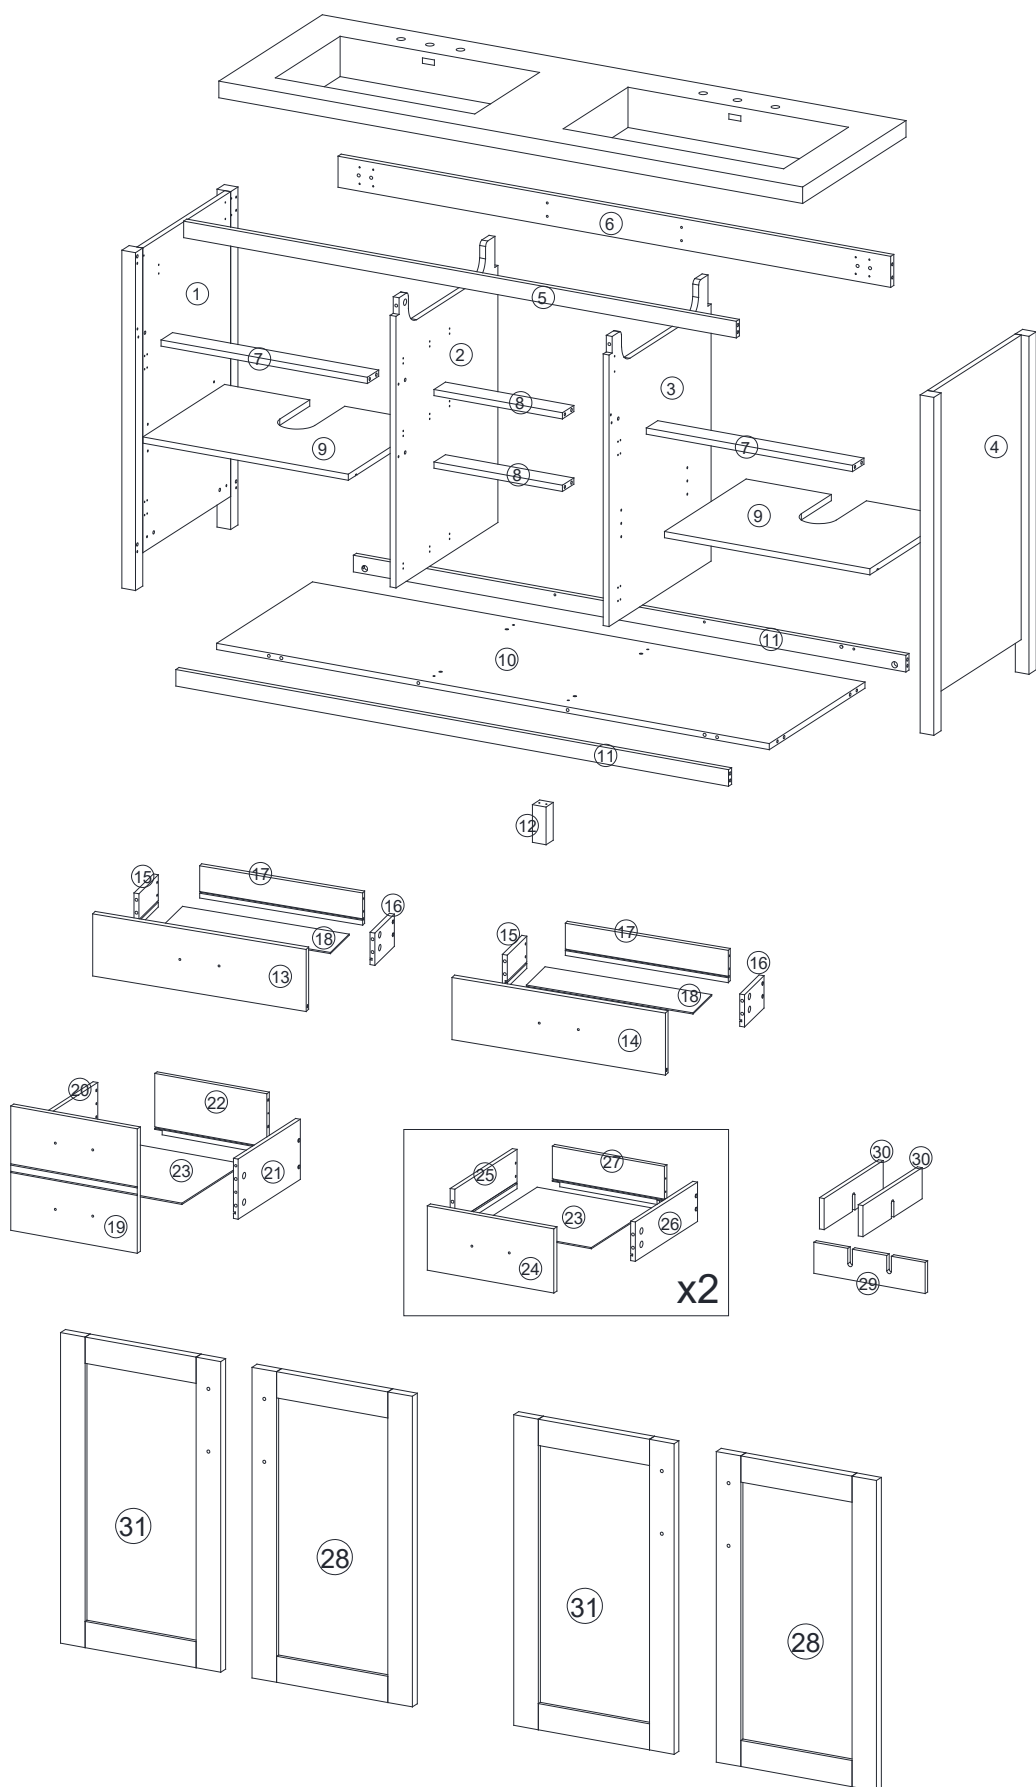








Box 1 :

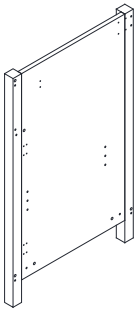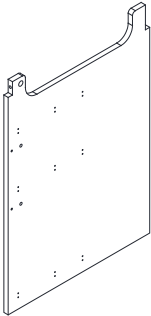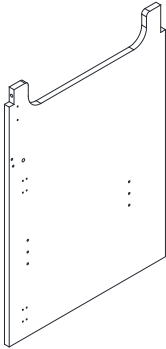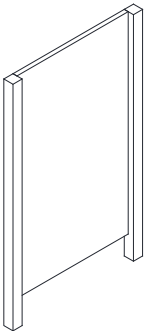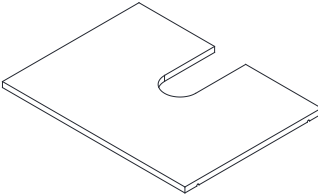		
① x 1	② x 1	③ x 1
		
④ x 1	⑤ x 1	⑥ x 1
		
⑦ x 2	⑧ x 2	⑨ x 2
		
⑩ x 1	⑪ x 2	⑫ x 1


Box 1 :














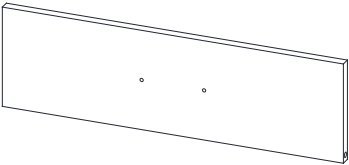
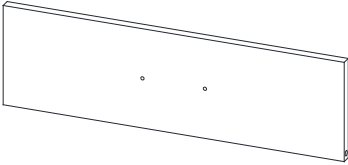
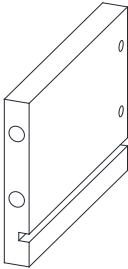
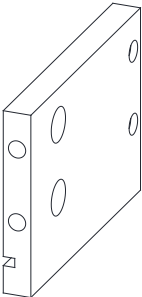
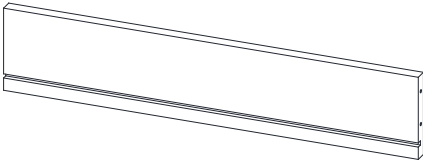

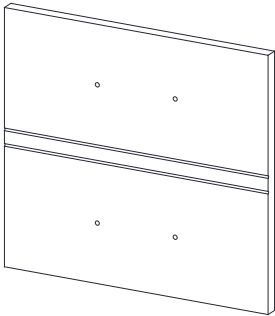
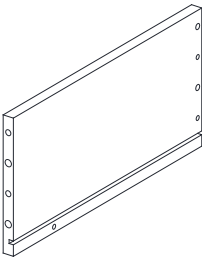
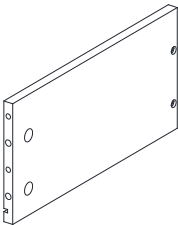
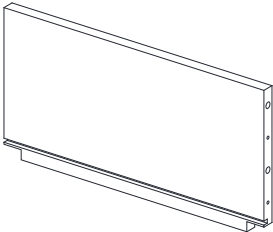
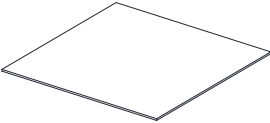
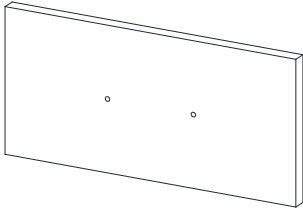
		
⑬ x 1	⑭ x 1	⑮ x 2
		
⑯ x 2	⑰ x 2	⑱ x 2
		
⑲ x 1	⑳ x 1	㉑ x 1
		
㉒ x 1	㉓ x 3	㉔ x 2

Box 1 :

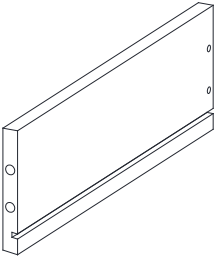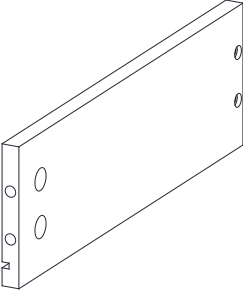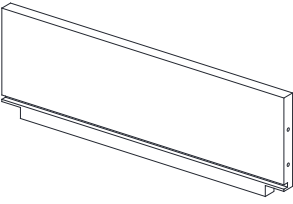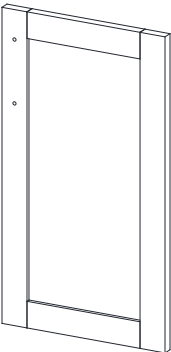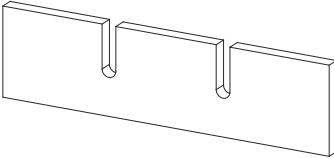
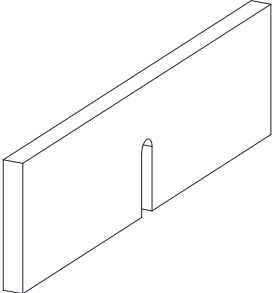
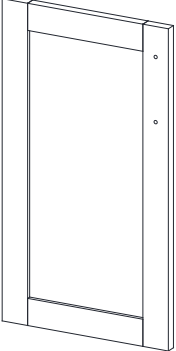
		
②⑤ x2	②⑥ x2	②⑦ x2
		
②⑧ x2	②⑨ x1	③⑦ x2
		
③① x2		

Box 2 :


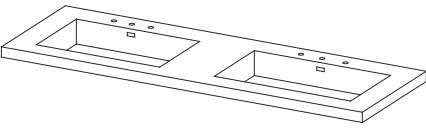
			
Φ6X35mm A x 52+3	Φ15X10mm B x 52+3	Φ 8x30MM C x 22+2	M4x35MM D x 30+2
			
M3x12MM E x 16+1	F x 2	G x 3	H x 3
			
I x 2	M3x16MM J x 4	M4x14MM K x 60+3	Φ 8x50MM L x 2
			
M x 1	N x 1	O x 2	P x 2
			
Q x 8	R x 10	M4x18MM S x 20+2	T x 4
			
Φ 6x30MM U x 8	V x 4	W x 2	X x 1
			
M6x60MM Y x 4	Z x 4	M3.5x14MM a x 54+3	b x 8
			
c x 1			

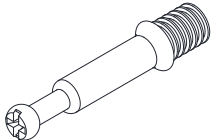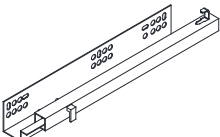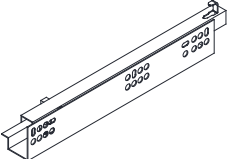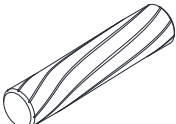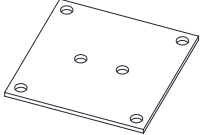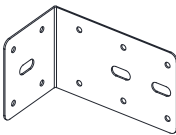Step 1

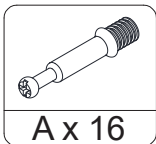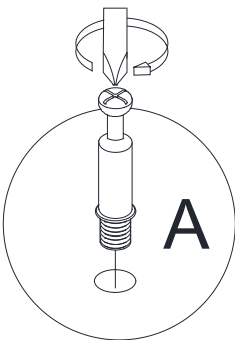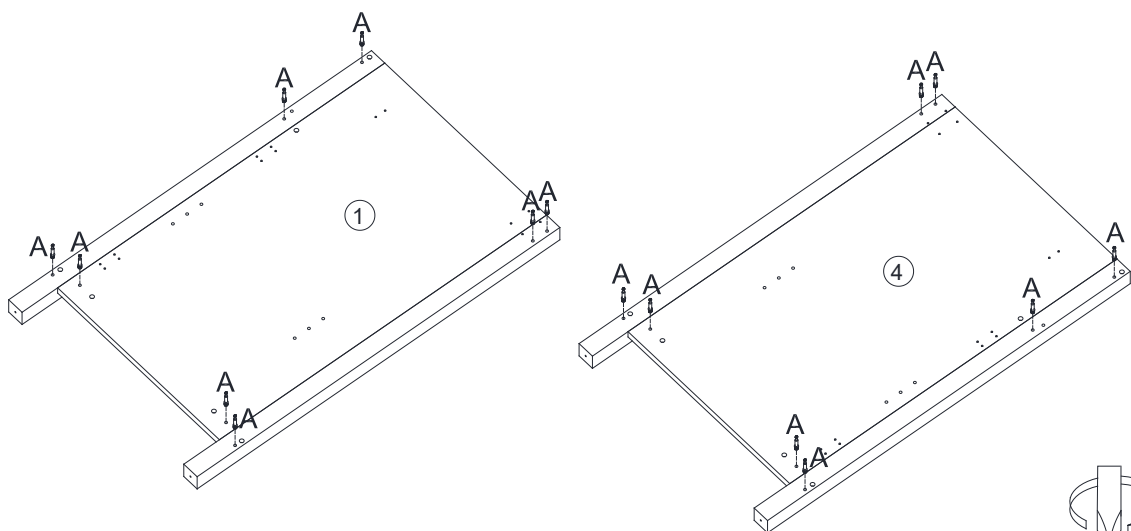


A x 16


Step 2

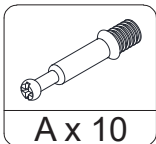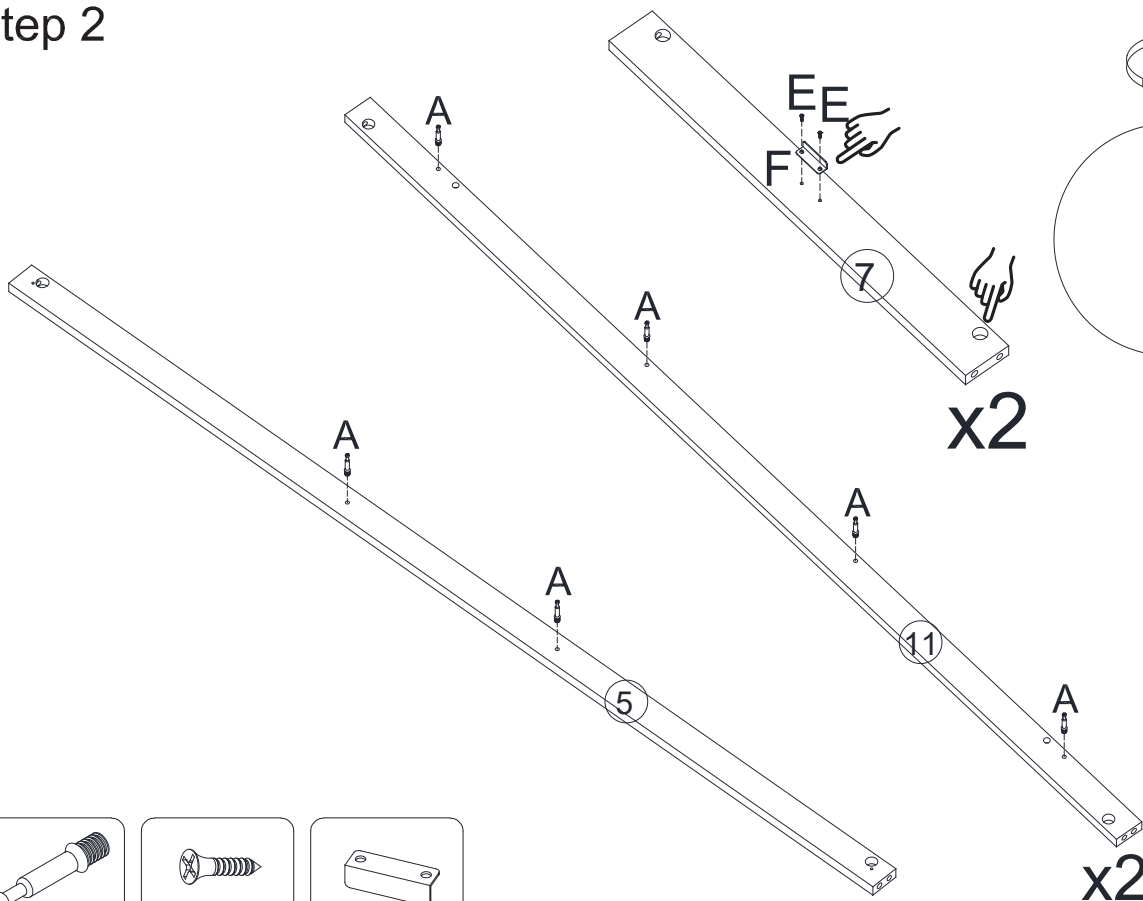

A x 10






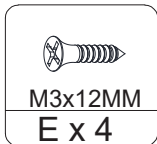


M3x12MM
E x 4






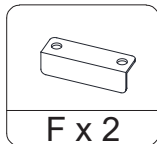


F x 2



Step 3

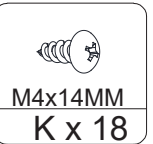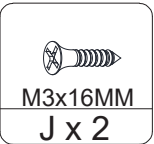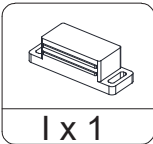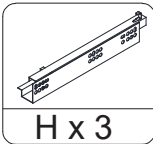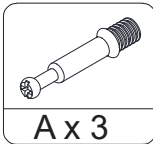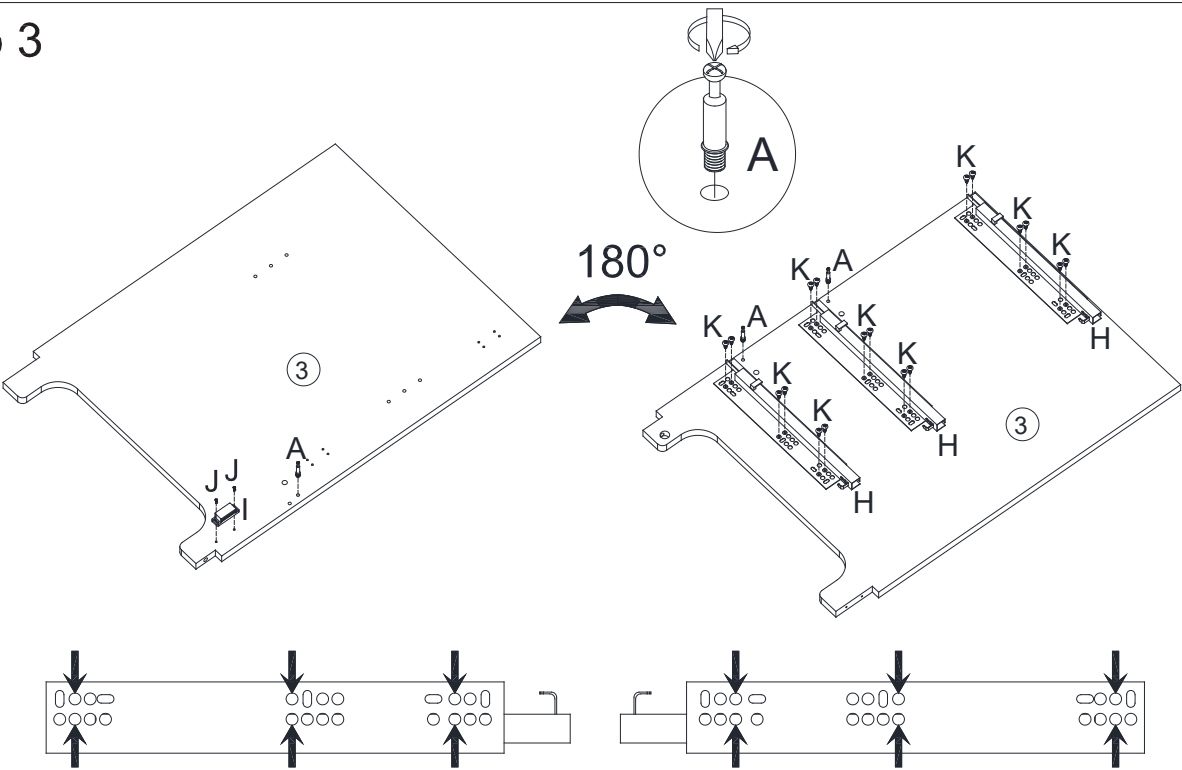

Step 4

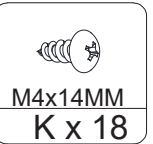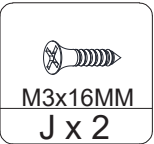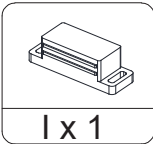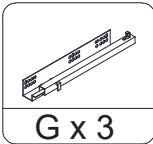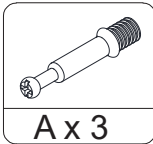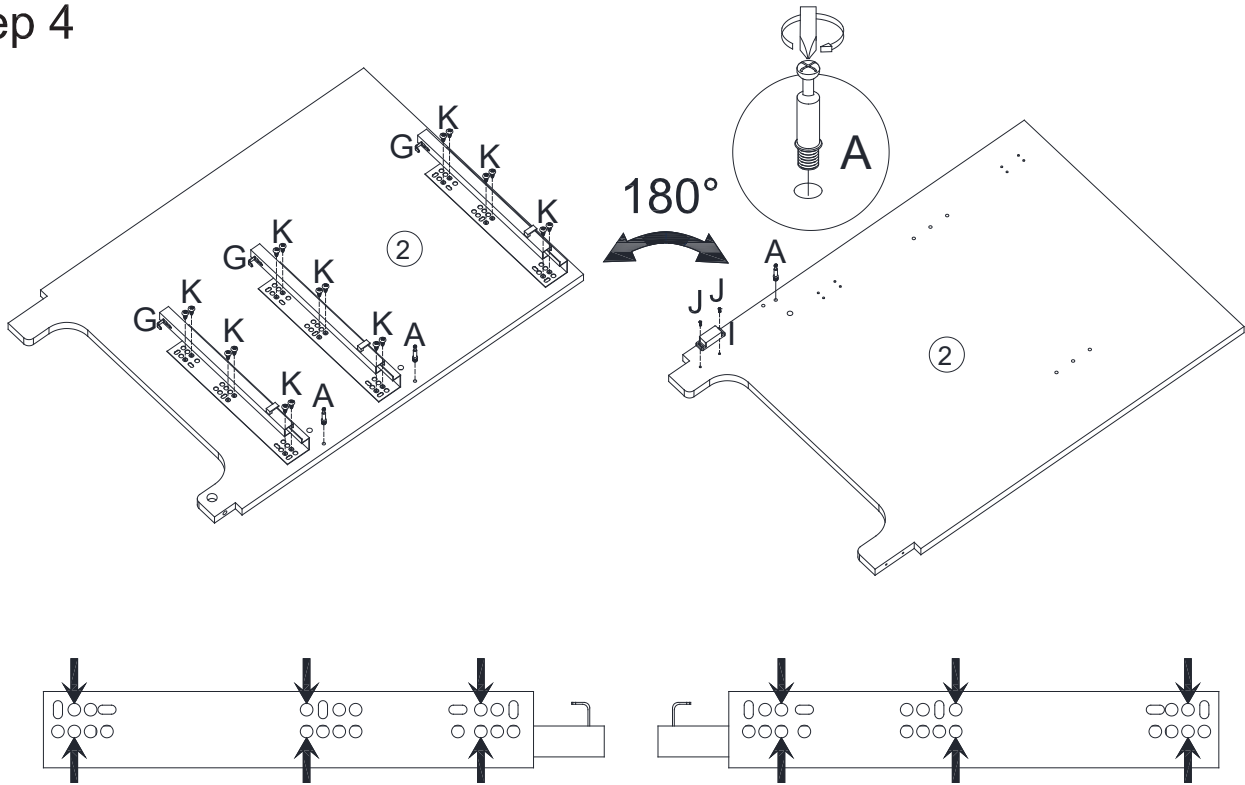

Step 5

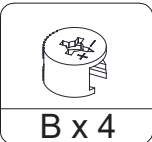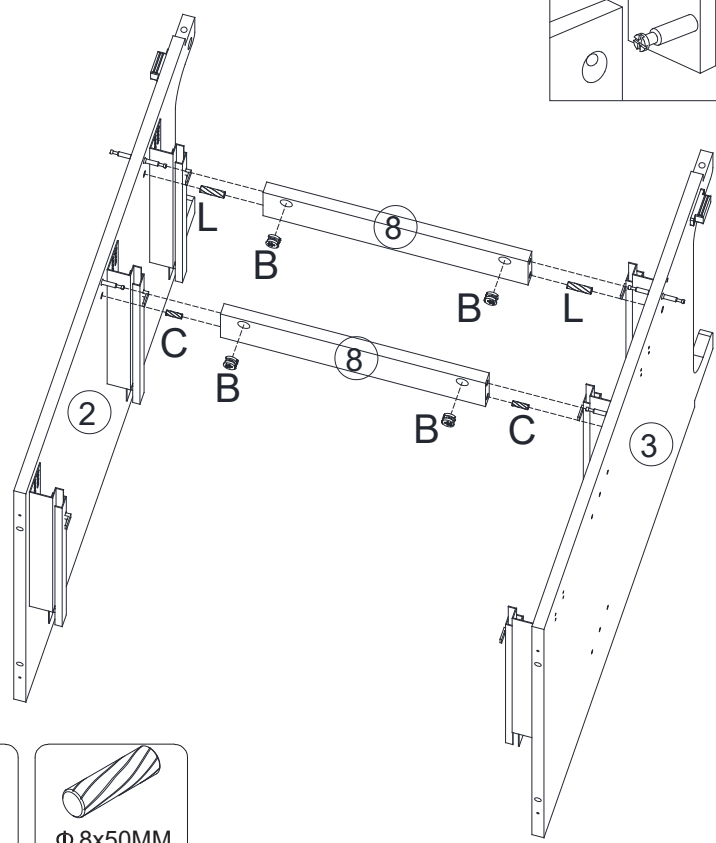

B x 4





Φ 8x30MM
C x 2



Φ 8x50MM
L x 2


Step 6

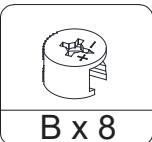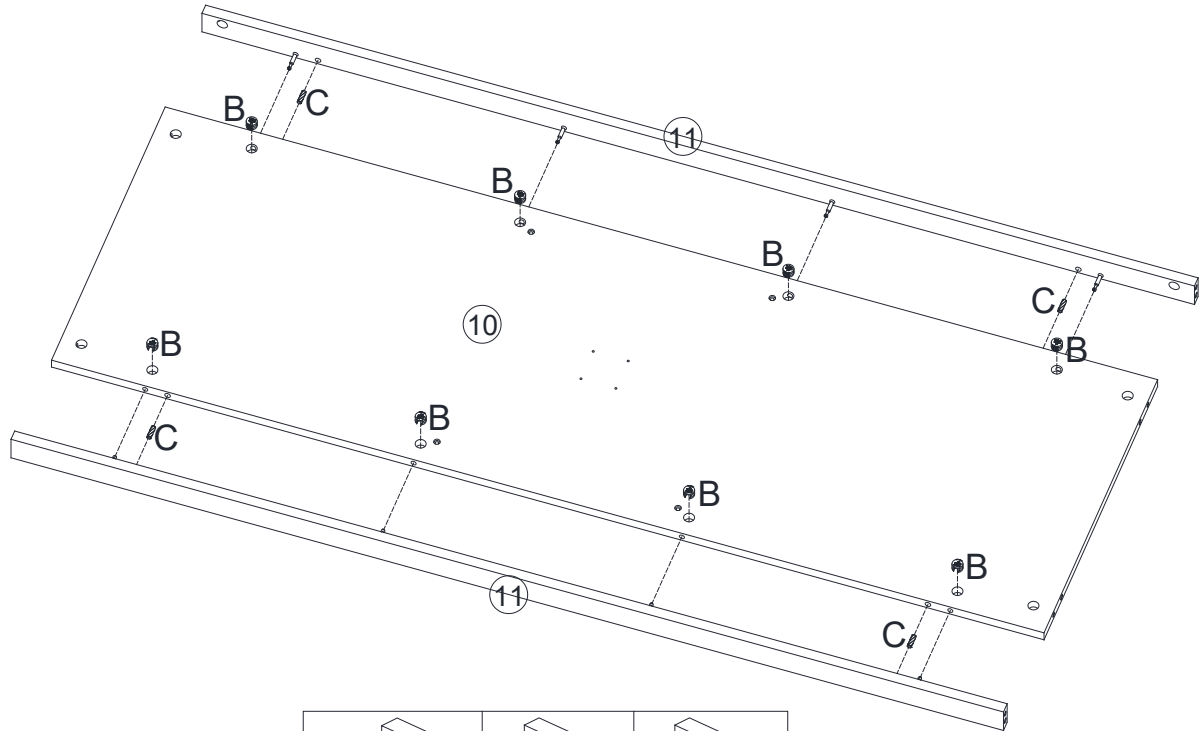


B x 8



Φ 8x30MM
C x 4

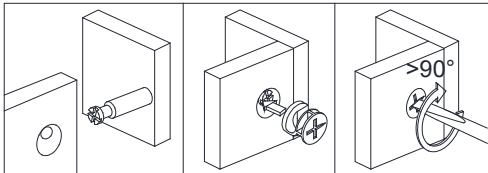

Step 7

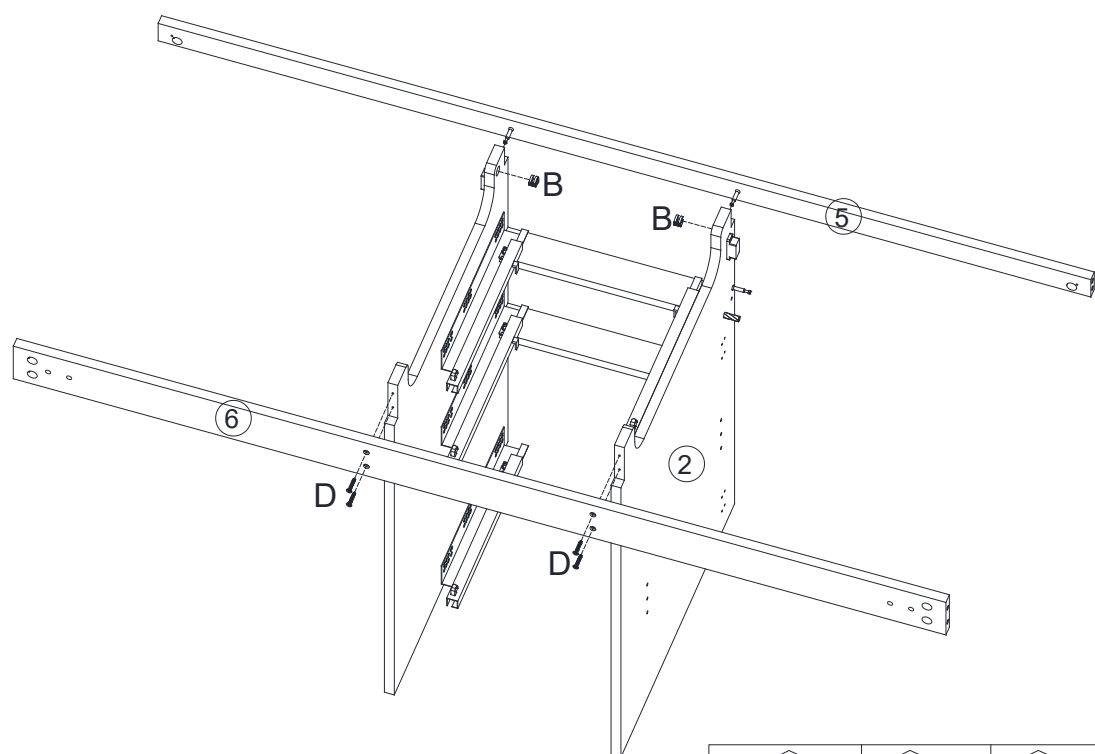





B x 2



M4x35MM
D x 4

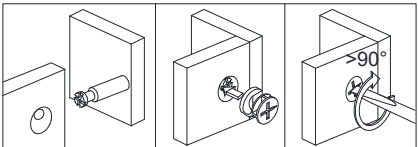

Step 8

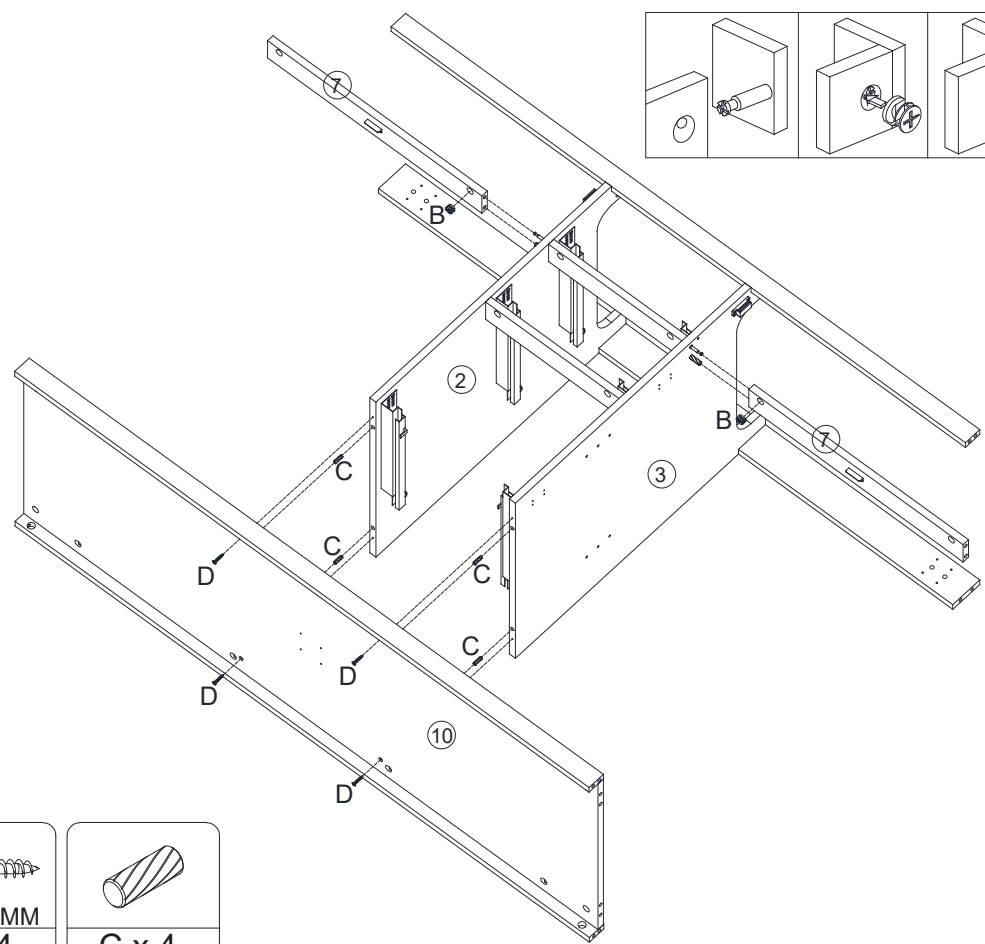




B x 2






M4x35MM
D x 4












C x 4

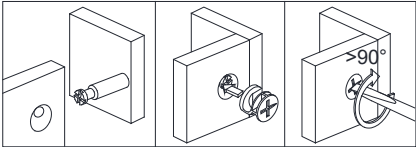





Step 9

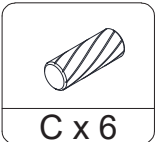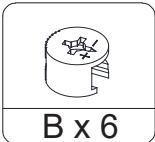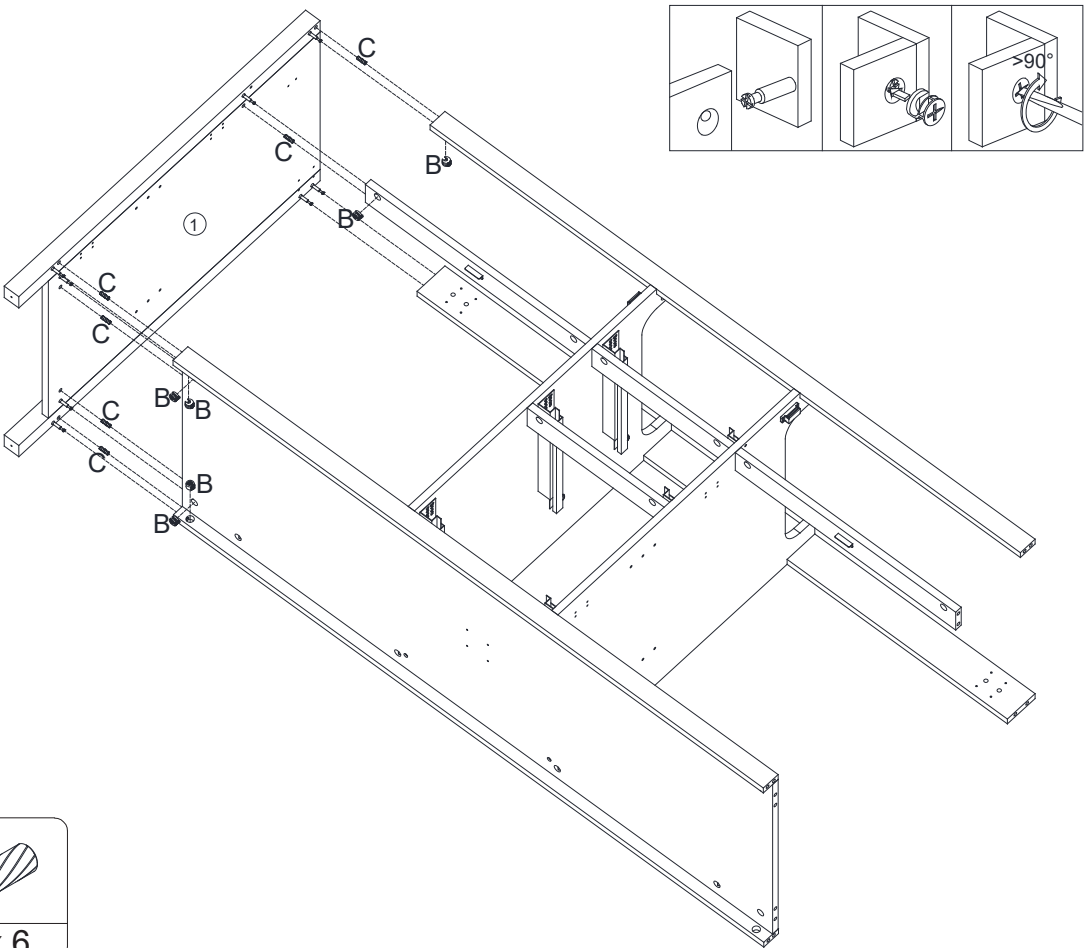




Step 10

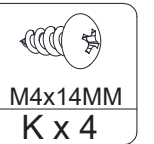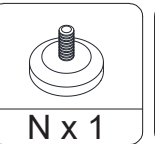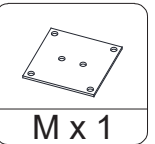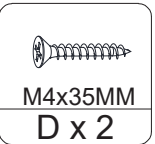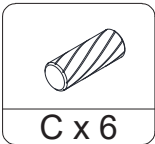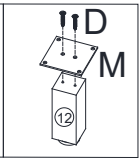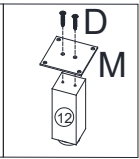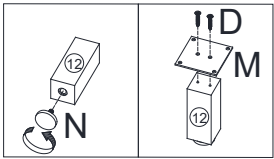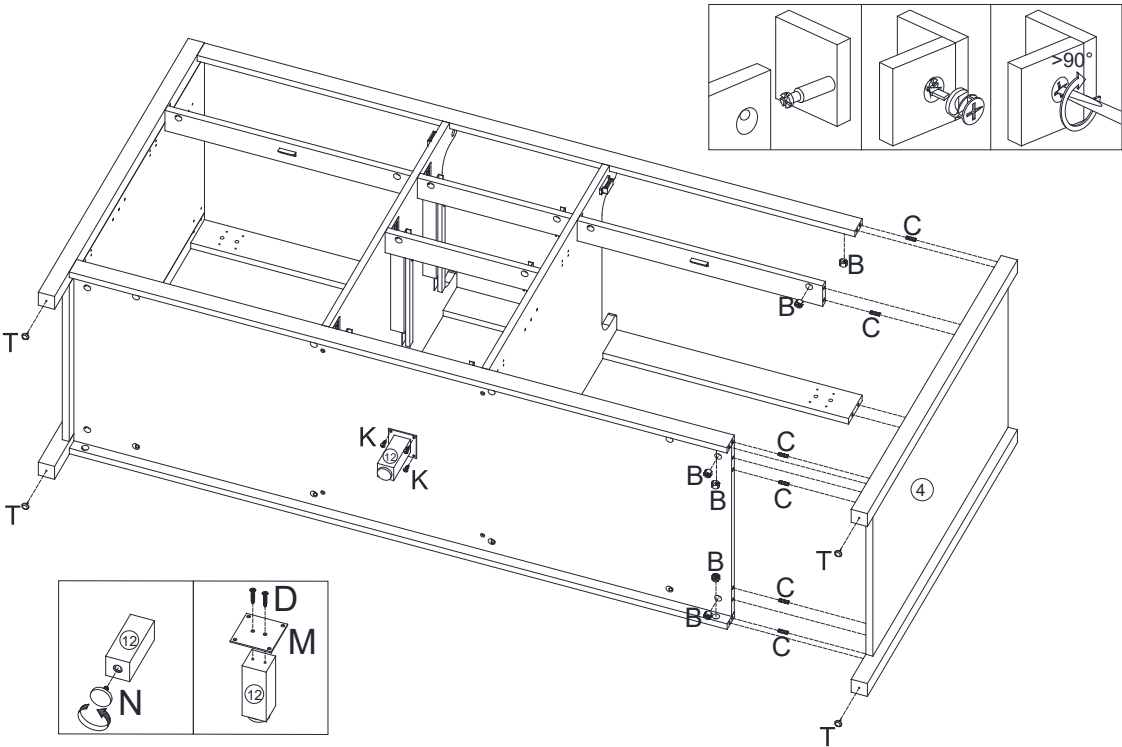



Step 11

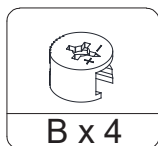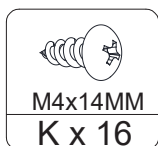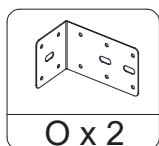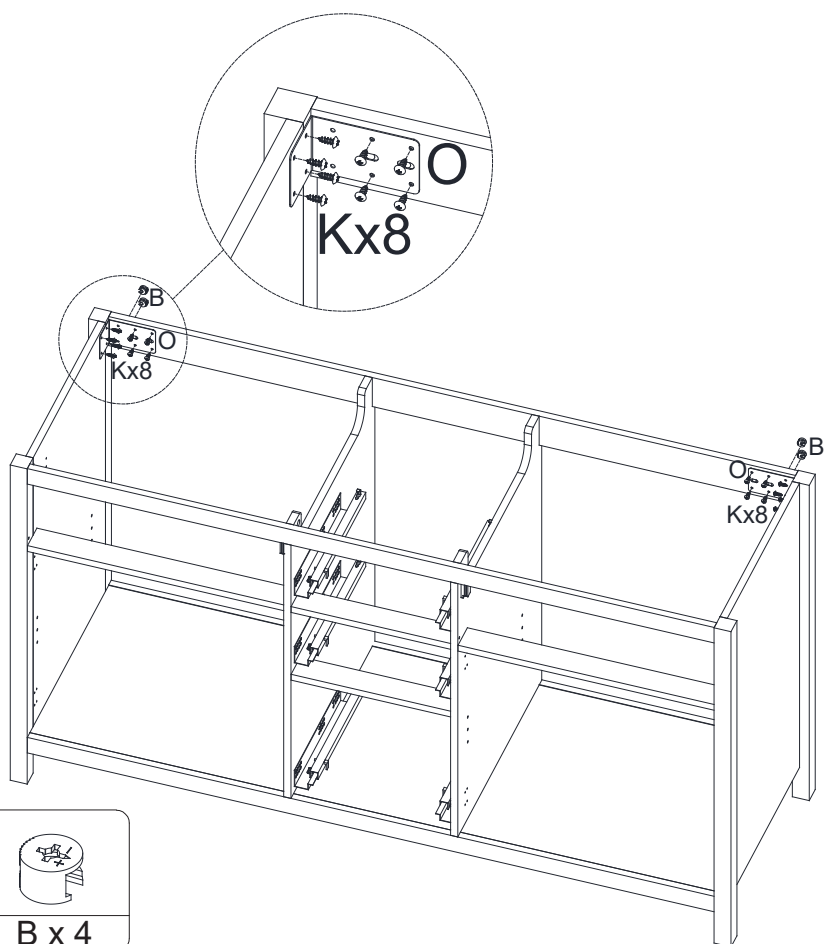


Step 12

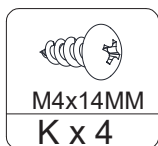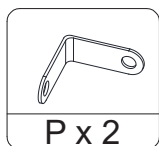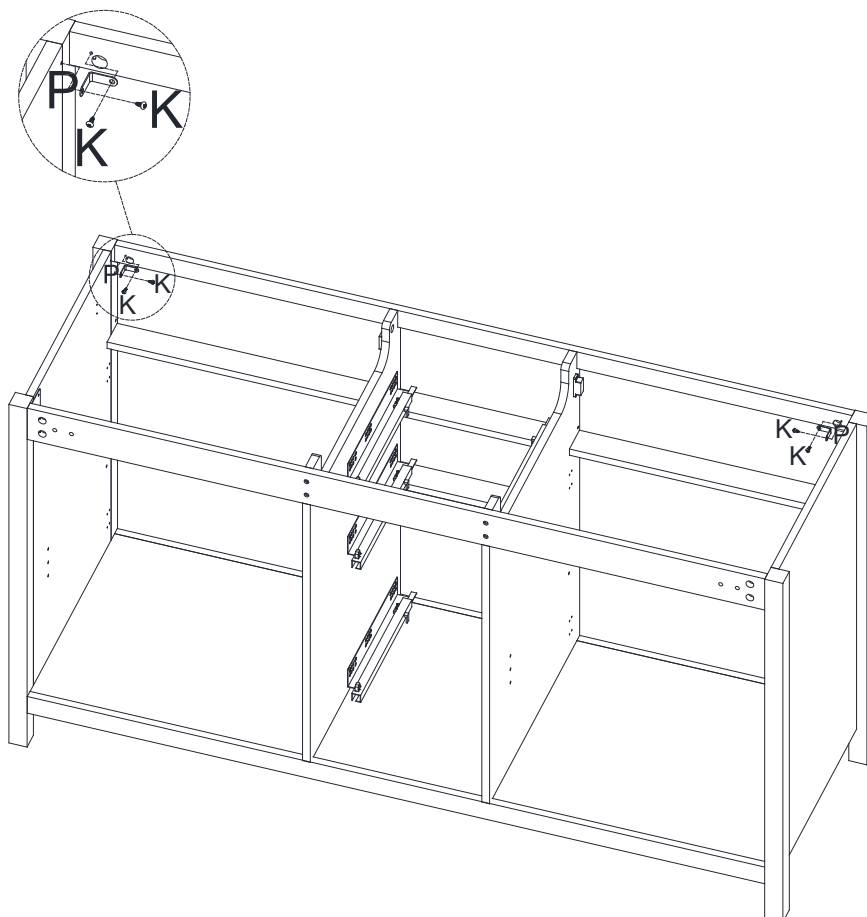


Step 13

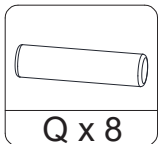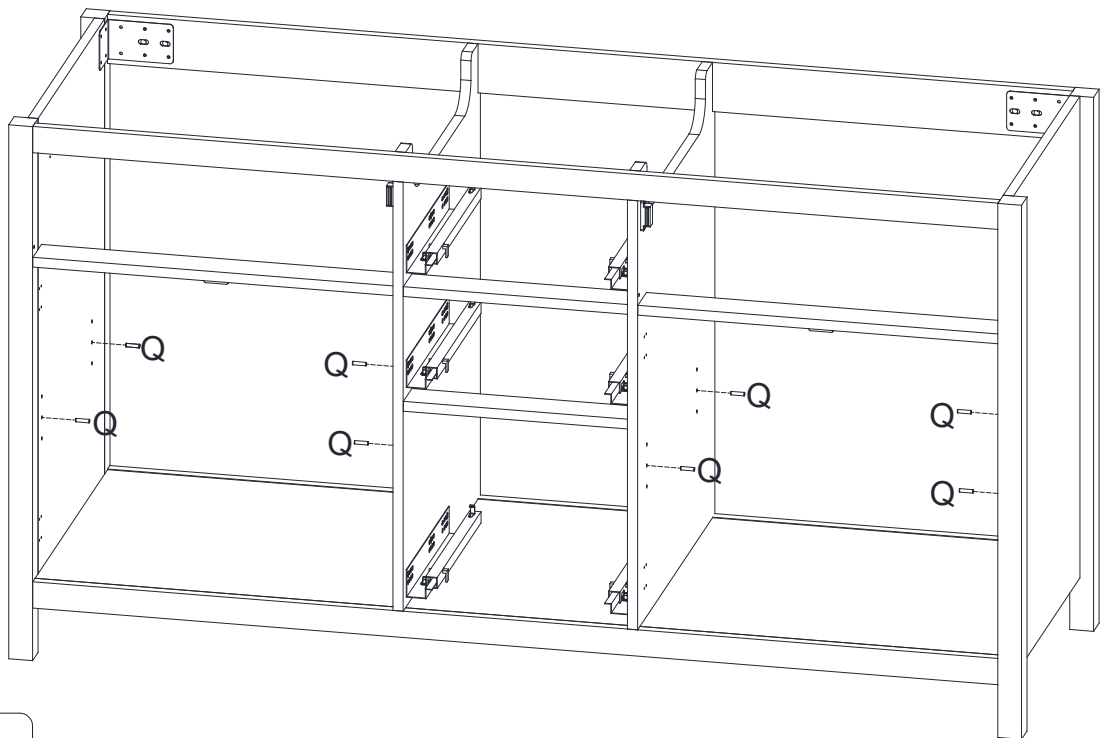


Step 14

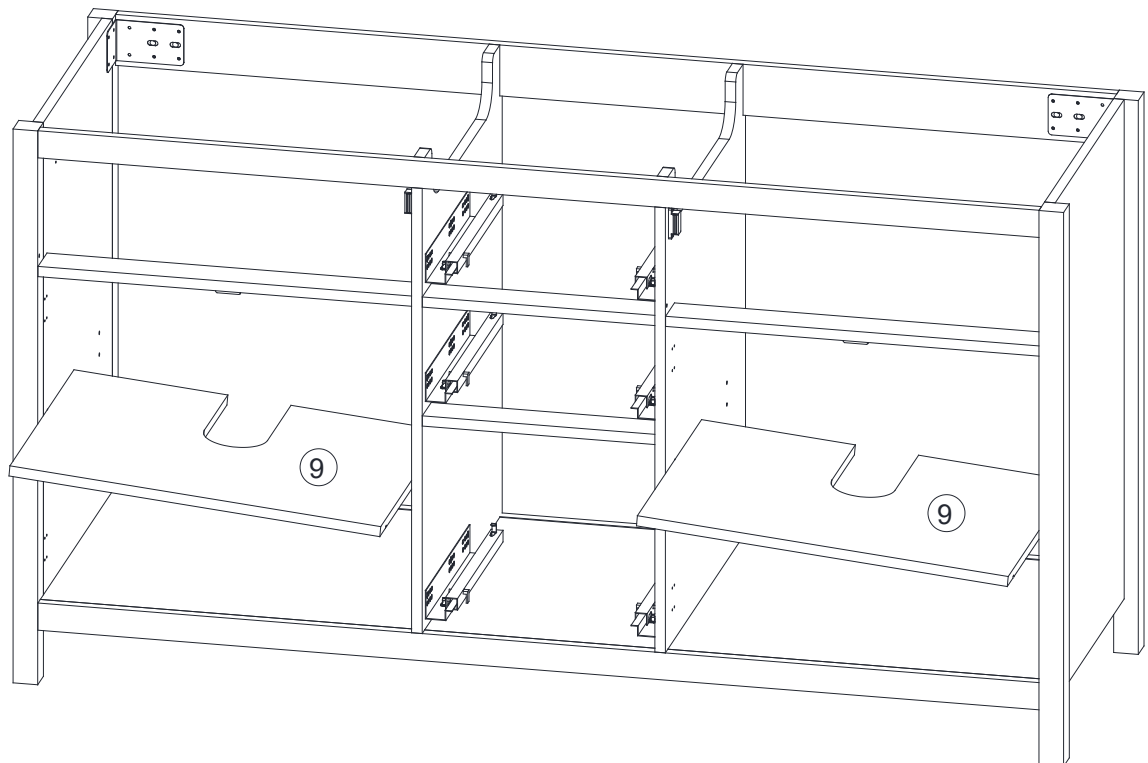



Step 15




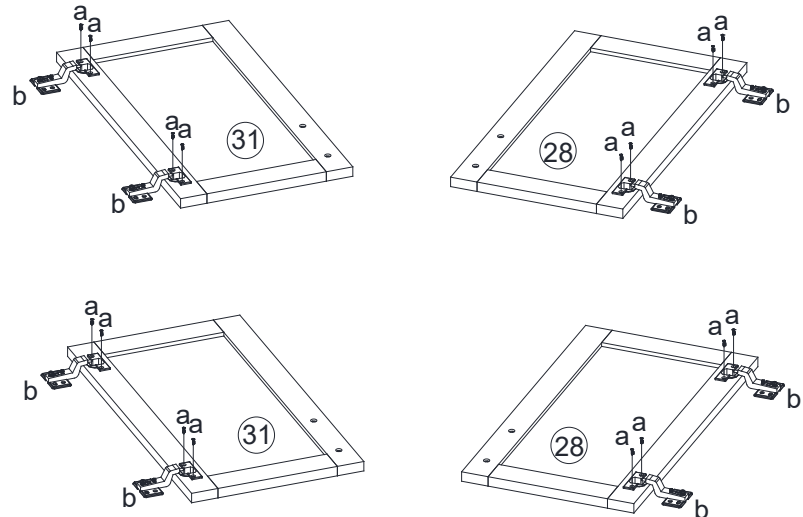


 M3.5x14MM a x 16	 b x 8
---	---

Step 16


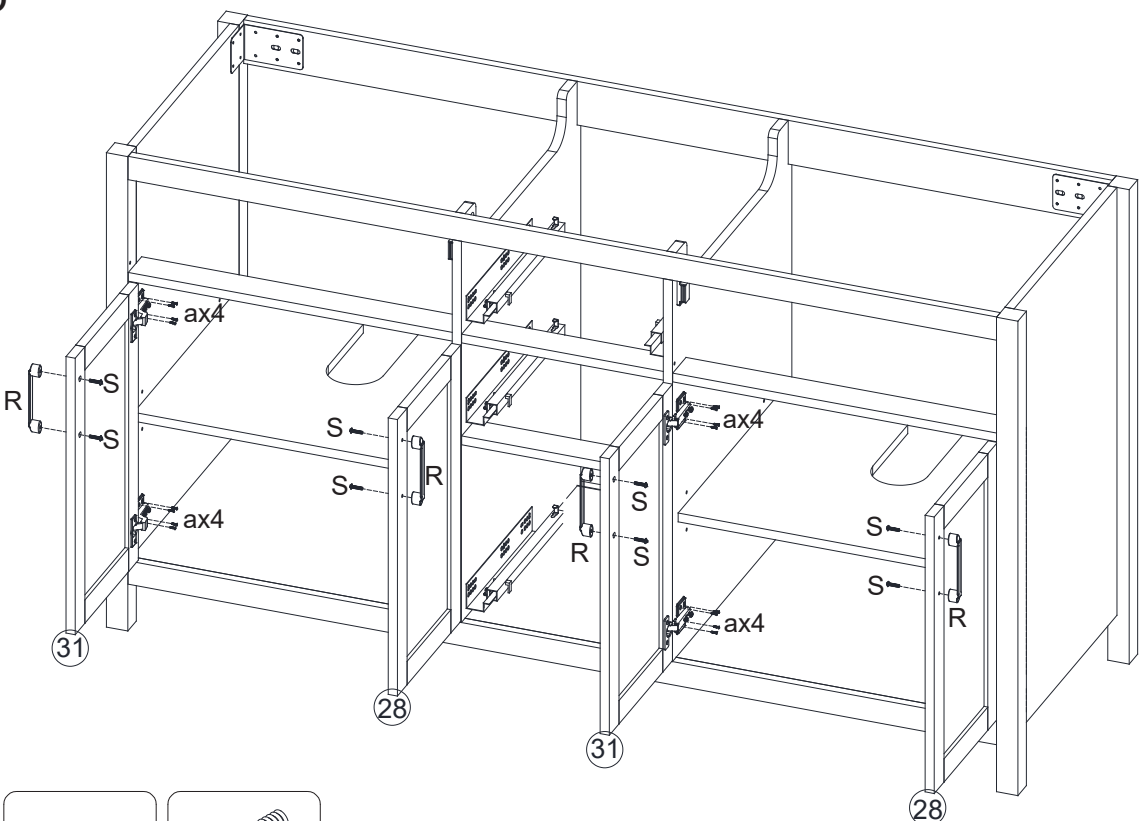


 M3.5x14MM a x 32	 R x 4	 S x 8
--	--	--

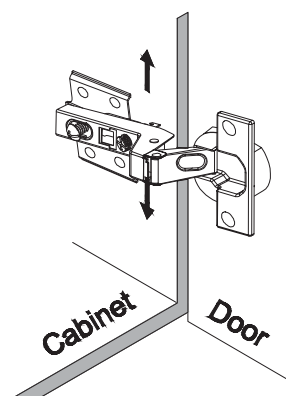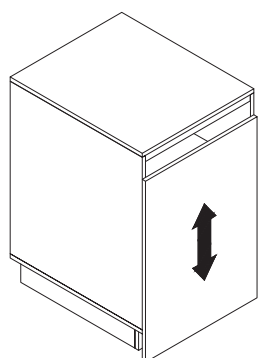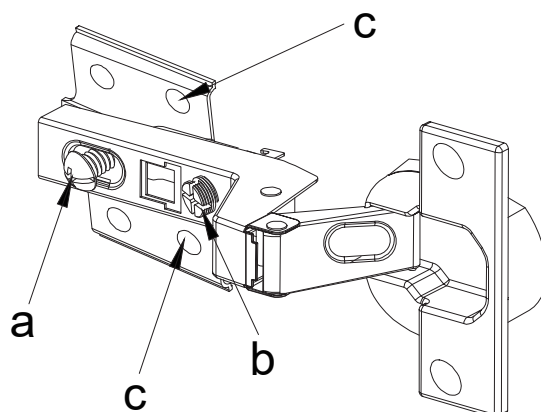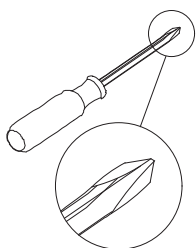



To adjust the vertical height.

Loosen the four screws "c" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

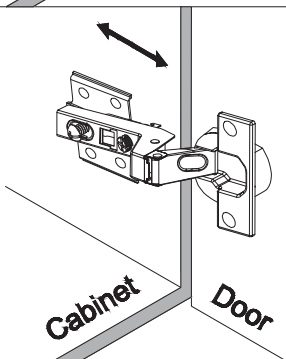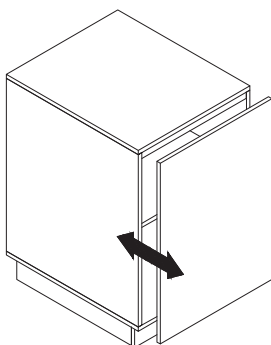

To adjust depth.



Loosen screw "a" and adjust door, if the door can not be adjusted, please loosen screw "b", then try again. Tighten screw "a" and "b".

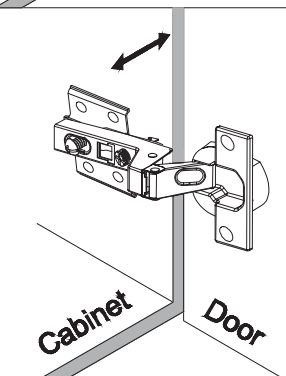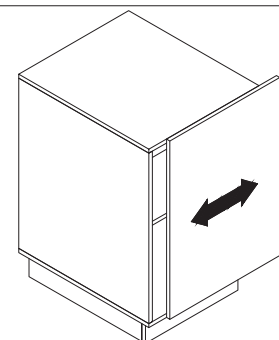



To adjust side ways.

Turning the screw "b" on BOTH hinges on each door.



Step 17

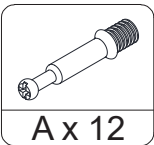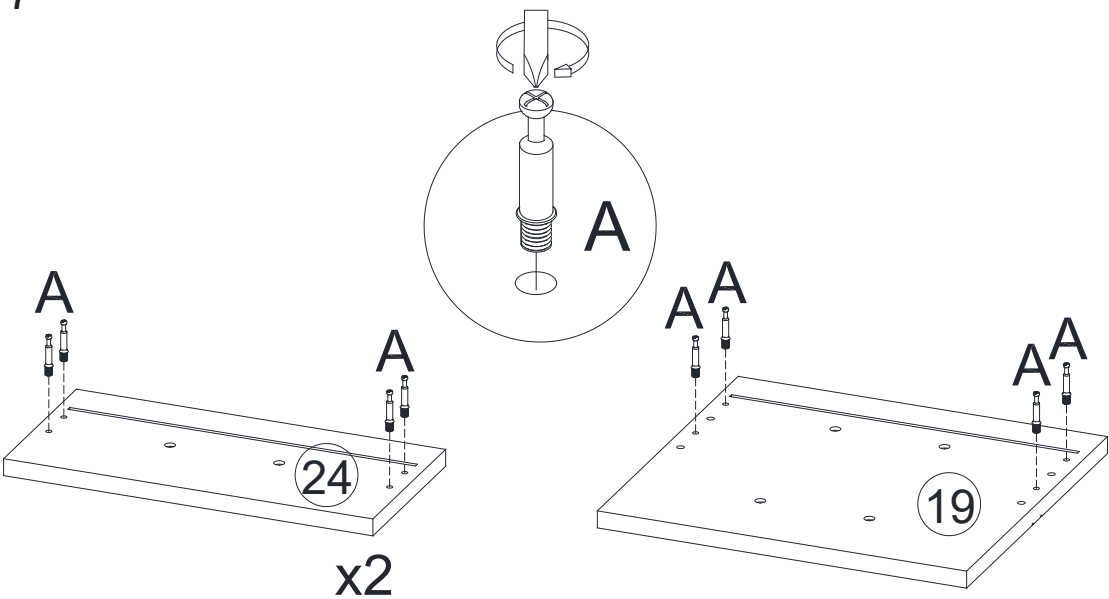




Step 18

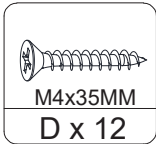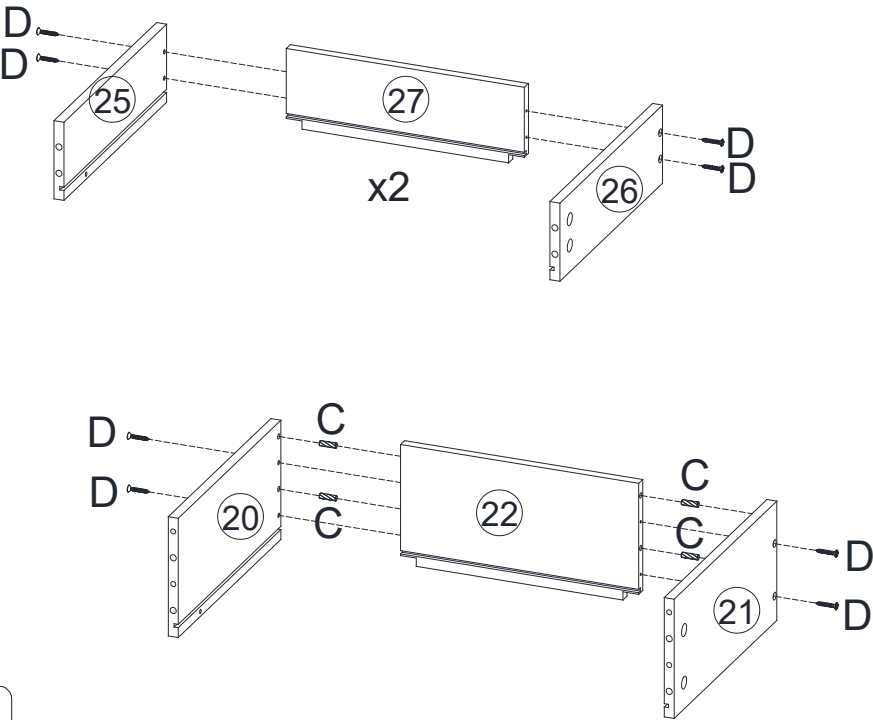


Step 19

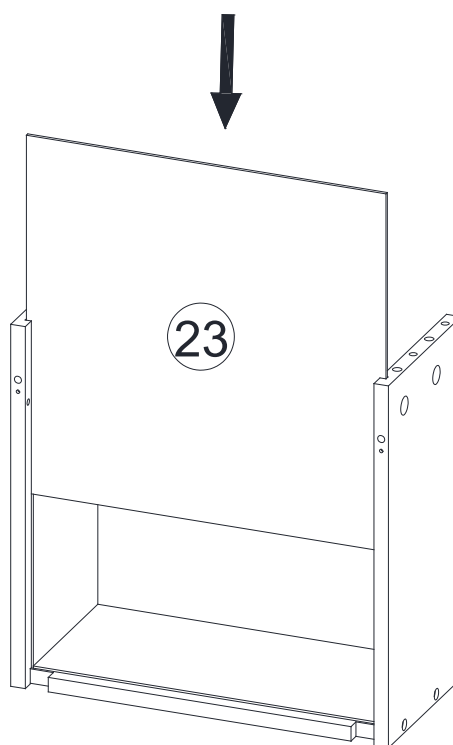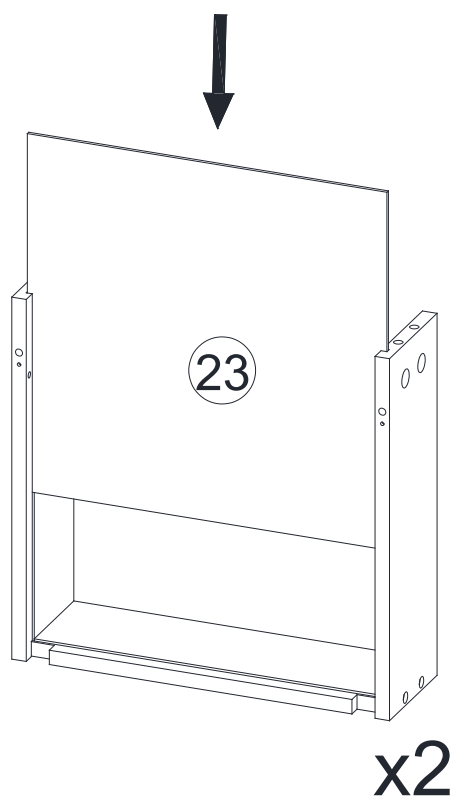



Step 20

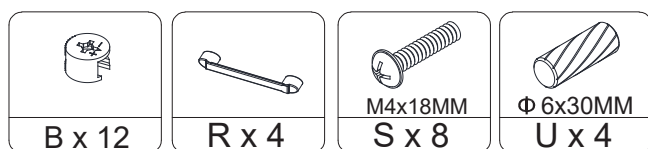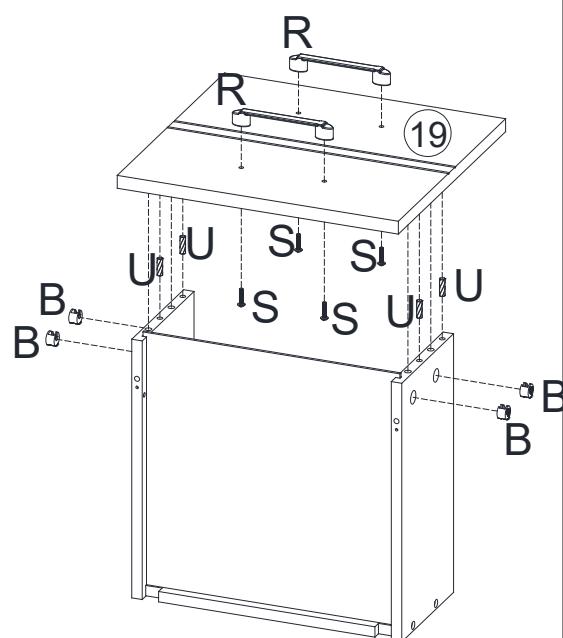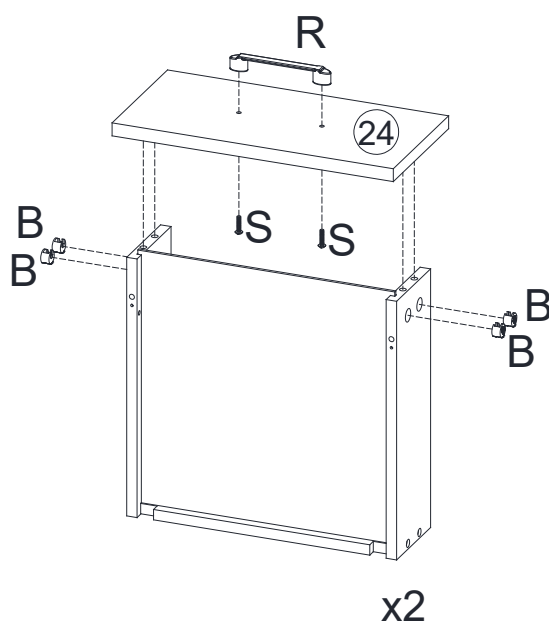

Step 21







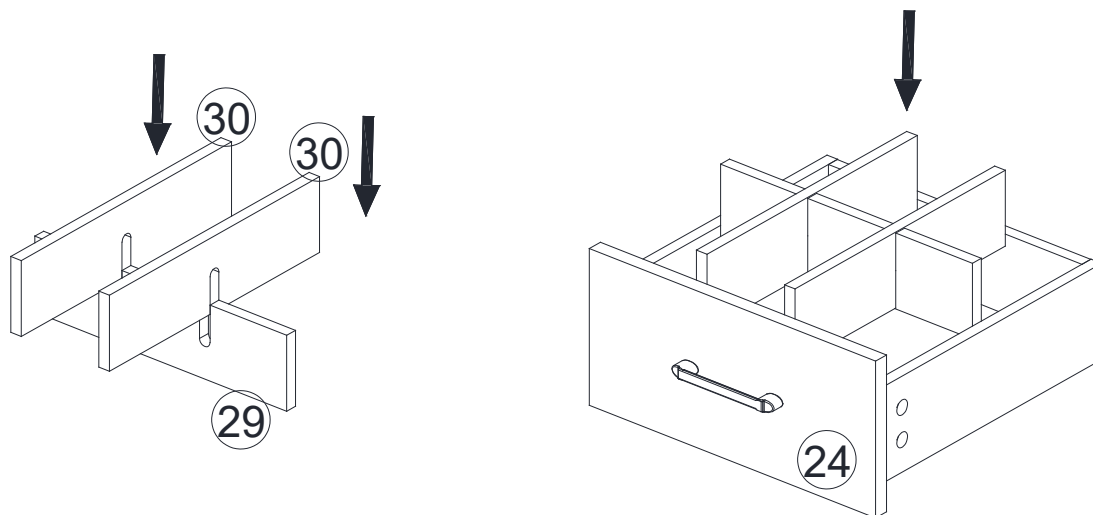


Step 22

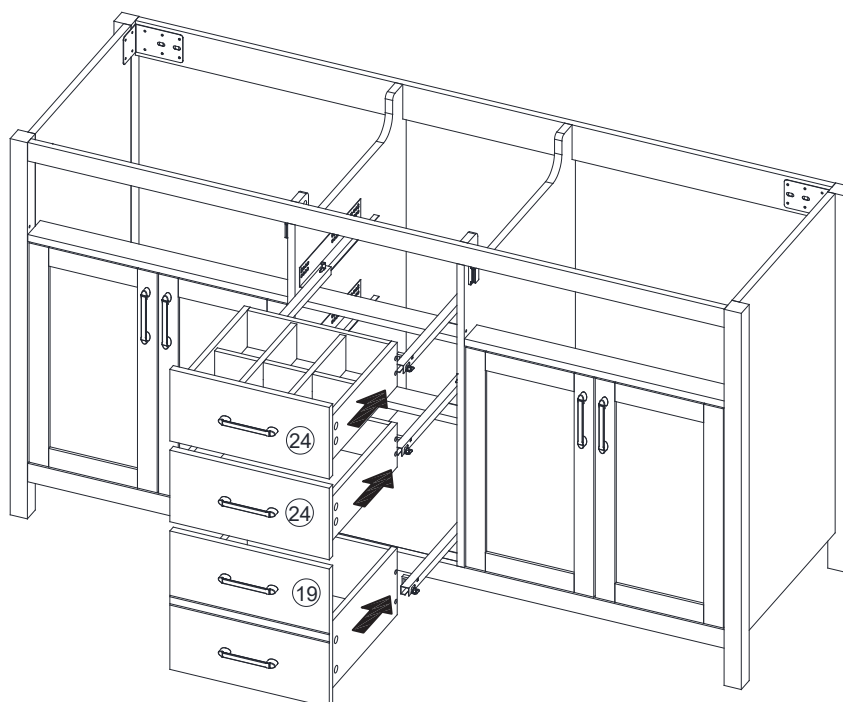
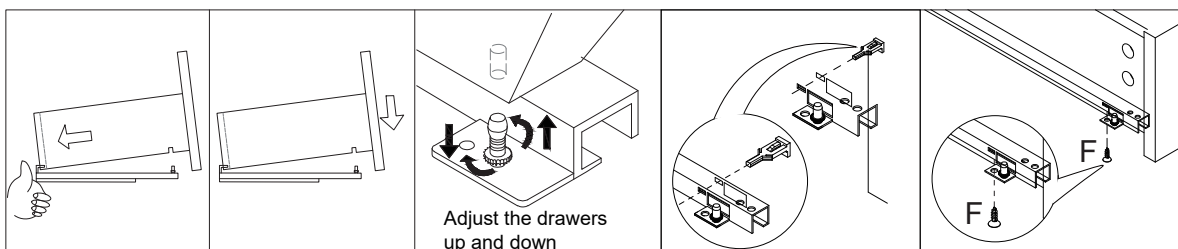


M3.5x14MM
a x 6


Step 22

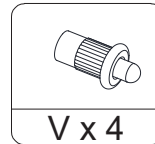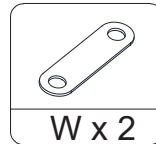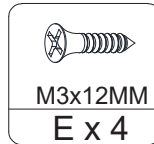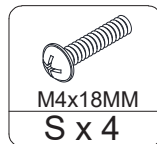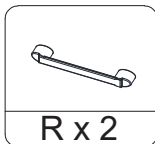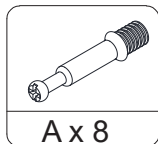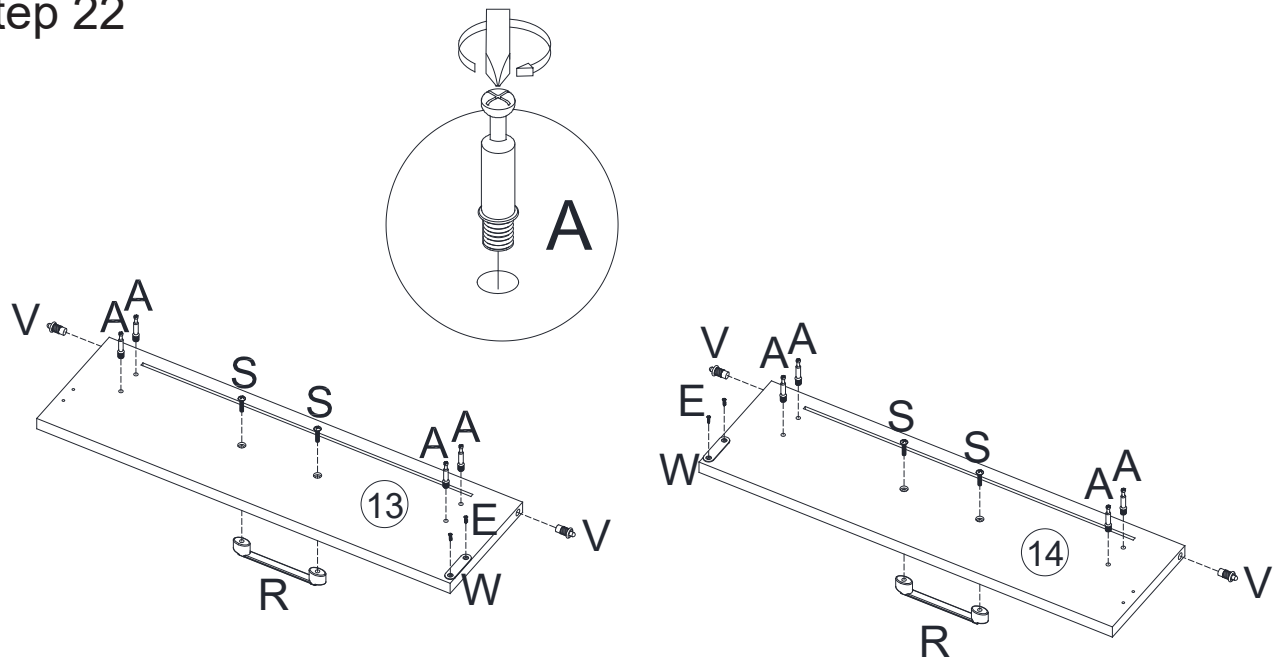





Step 23

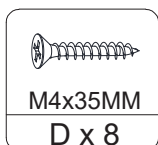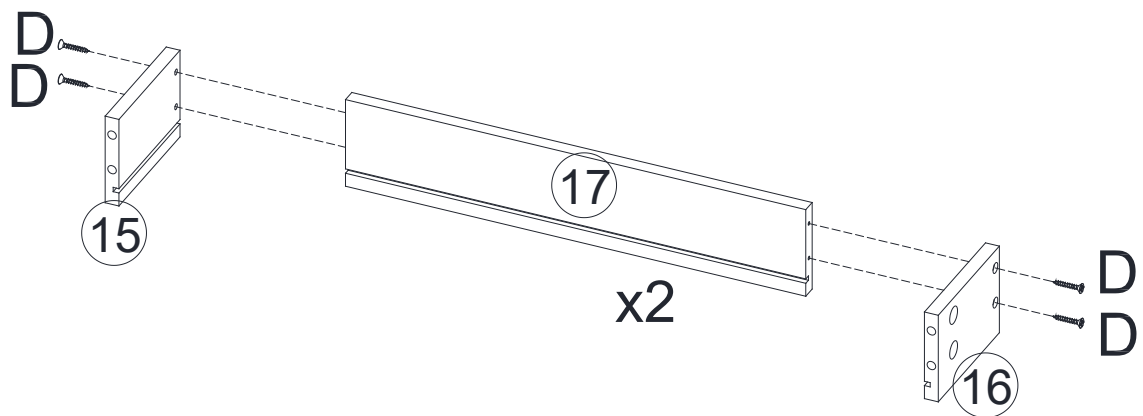

Step 24

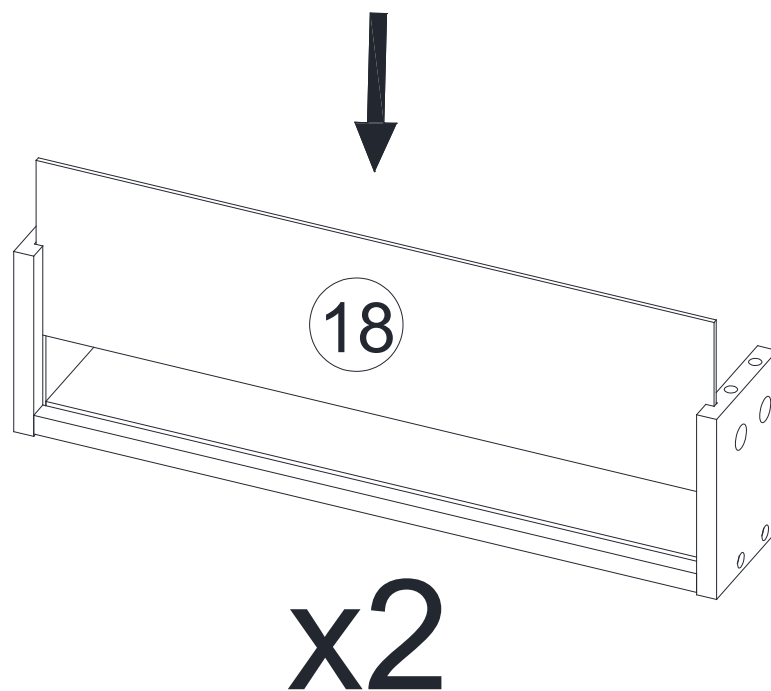


Step 26

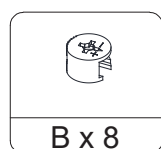
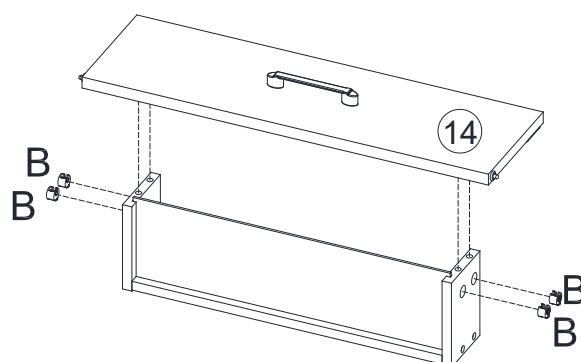
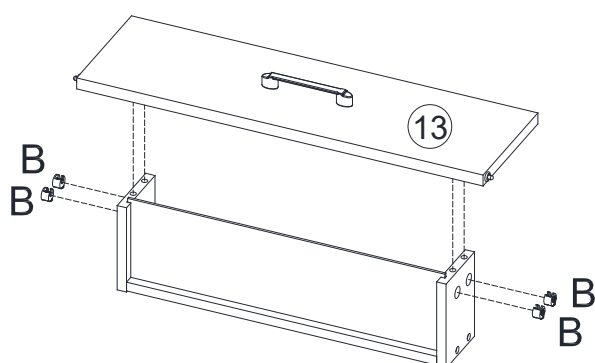
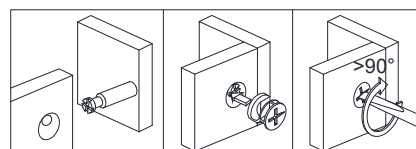


B x 8






Step 27

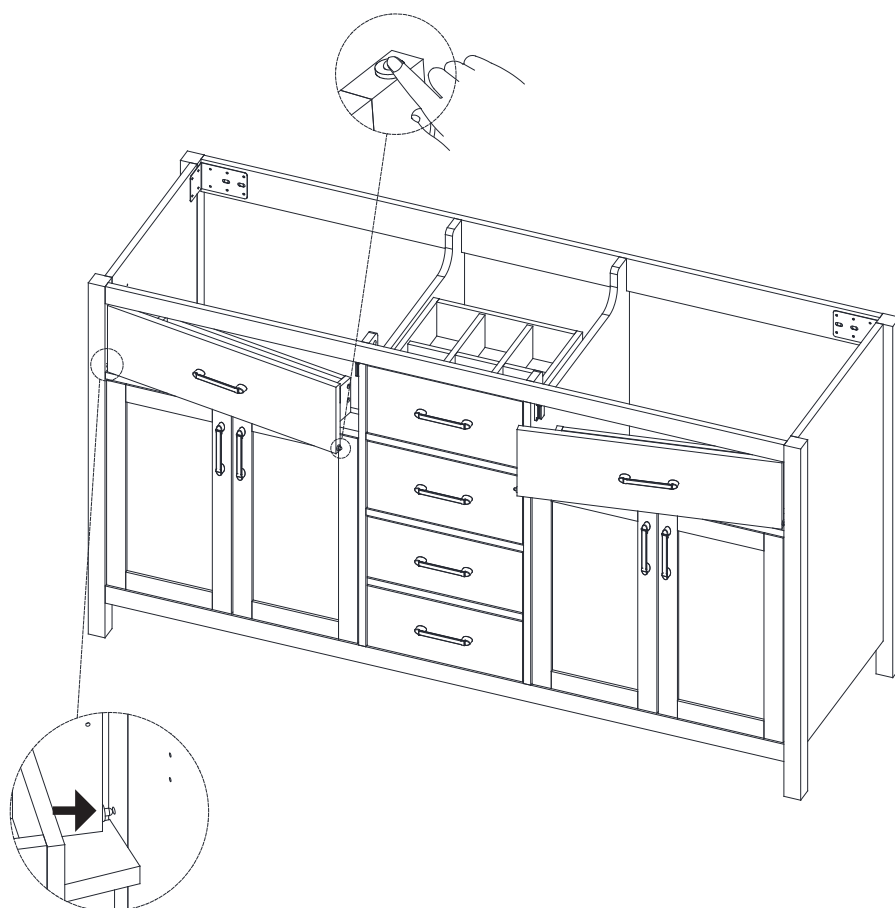

Step 28

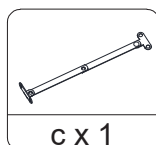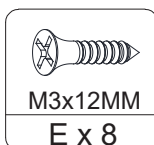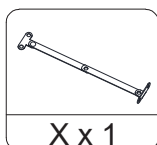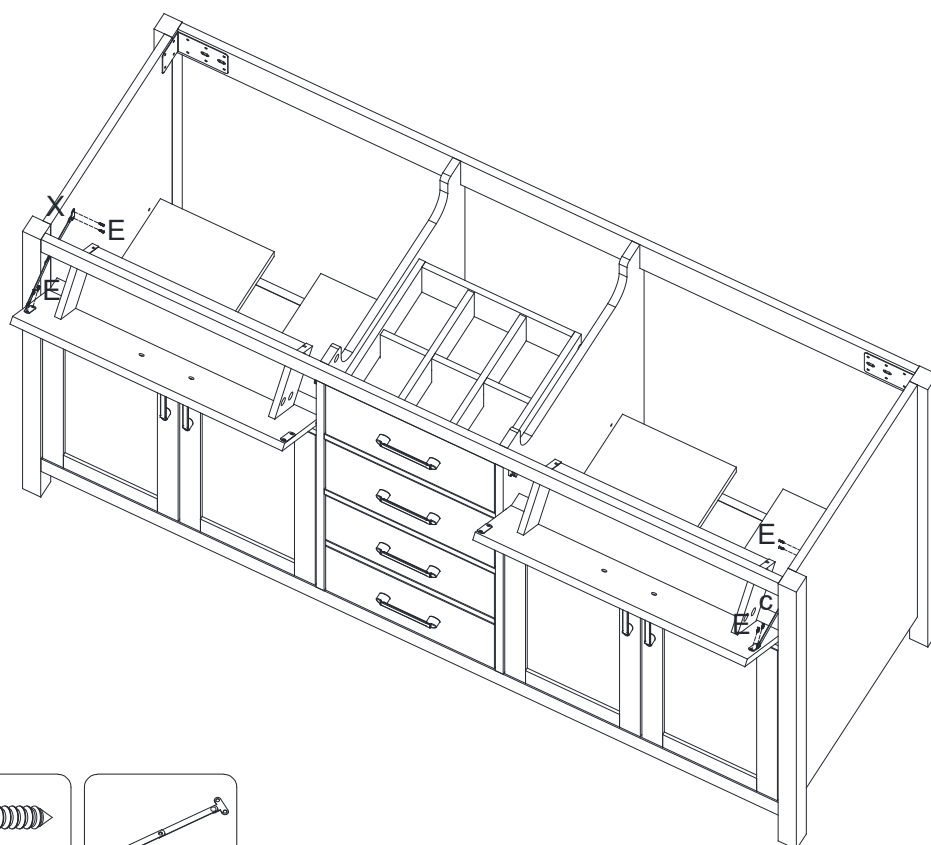

Step 29

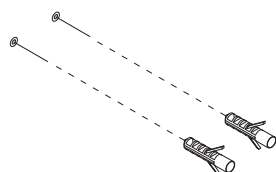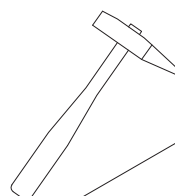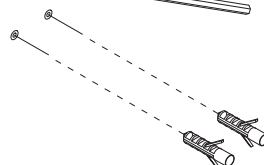

Z x 4

Step 30

WALL

