

## **ASSEMBLY INSTRUCTIONS**

### **135CM CROXLEY RATTAN BED**

**IMPORTANT : READ THESE INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE OR USE YOUR 135CM CROXLEY RATTAN BED.**

**PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

#### **ASSEMBLY:**


Assembly should be carried out with this item laying flat, not standing upright.  
Assemble on a soft, clean surface to prevent damages.


#### **HEALTH & SAFETY:**





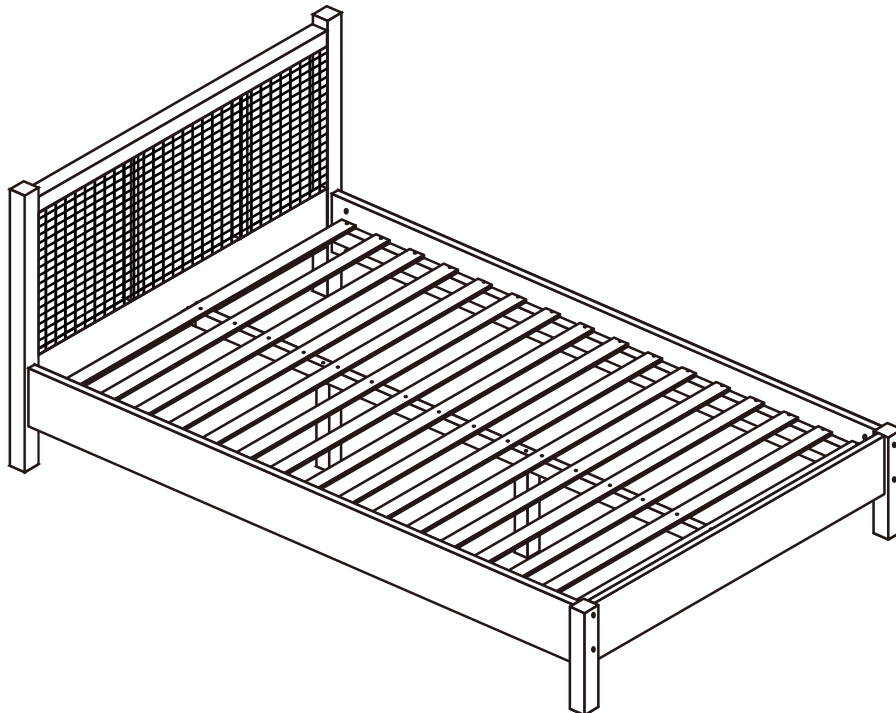

DO NOT use this product if any parts are missing, damaged or worn.  
DO NOT use this product unless all fixings are secured.  
Always use on a level, even surface.
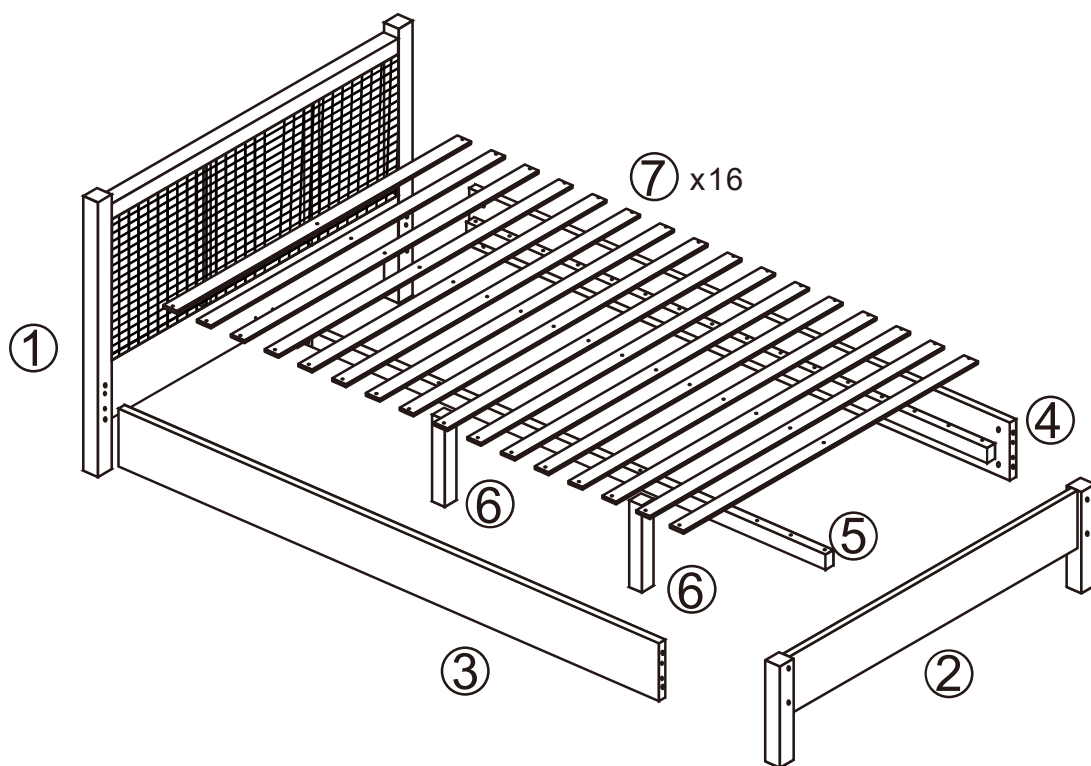
#### **CARE & MAINTENANCE:**

Periodically check all screws & fixings to ensure they are secure.  
DO NOT push this product as this will cause damage.  
Always lift this product with two people to repositions.  
Keep any sharp objects away from this product.







Parts List				Hardware List		
Part	Description	Box	Qty	Part	Description	Qty
1	Headboard	2	1	A	80mm Bolt 	8
2	Footboard	2	1	B	Bracket 	2
3	Left siderail	1	1	C	14mm Screw 	16
4	Right siderail	1	1	D	70mm Screw 	2
5	Centre Rail	1	1	E	25mm Screw 	48
6	Support Leg	1	1	F	30mm Dowl 	8
7	Slats	2	1 sets	G	Allen Key 	1

**\*\*You will need a screwdriver for assembly.**


- STEP 1** Assembly the headboard(1),footboard(2),left siderail(3) and right siderail(4) by hardware A,F.  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

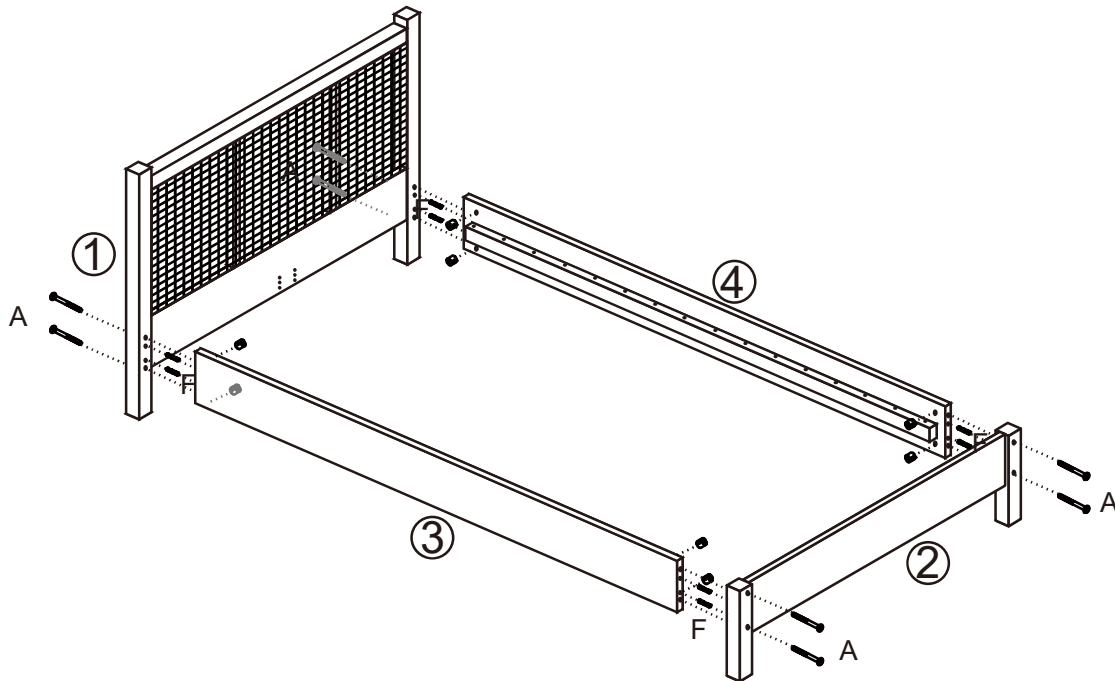


- STEP 2** Attach hardware B by hardware C on headboard(1) and footboard(2).  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

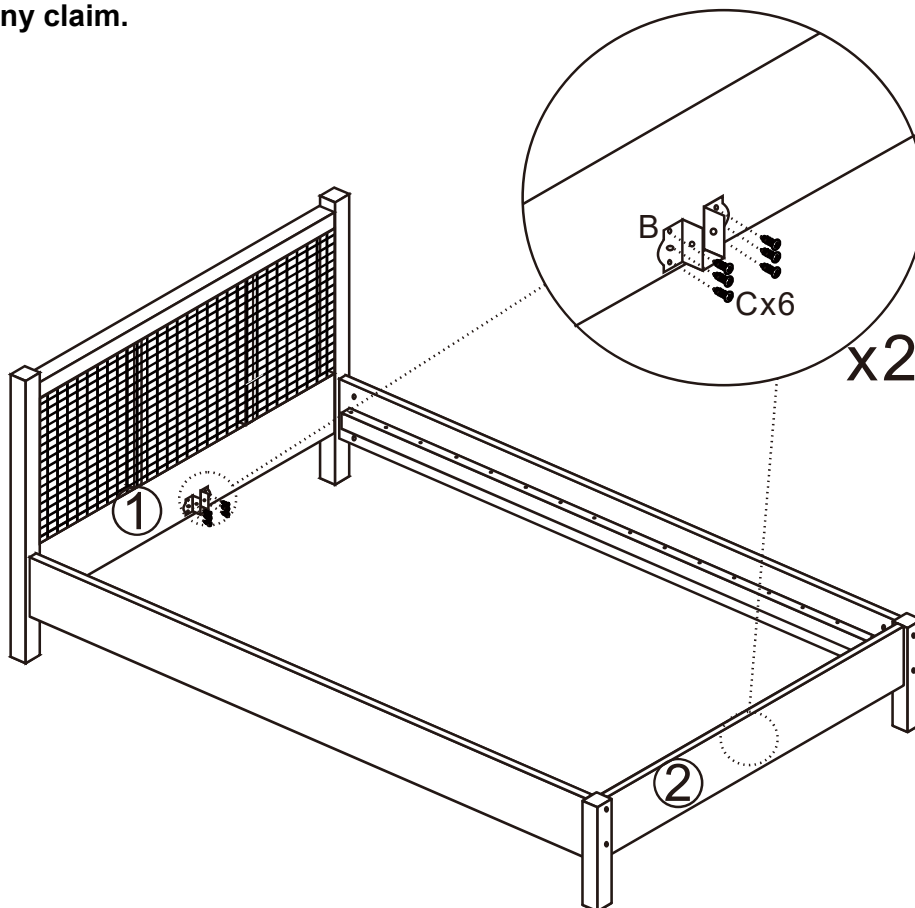

- STEP 3** Assembly the centre rail(5) with support leg(6) by hardware D  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

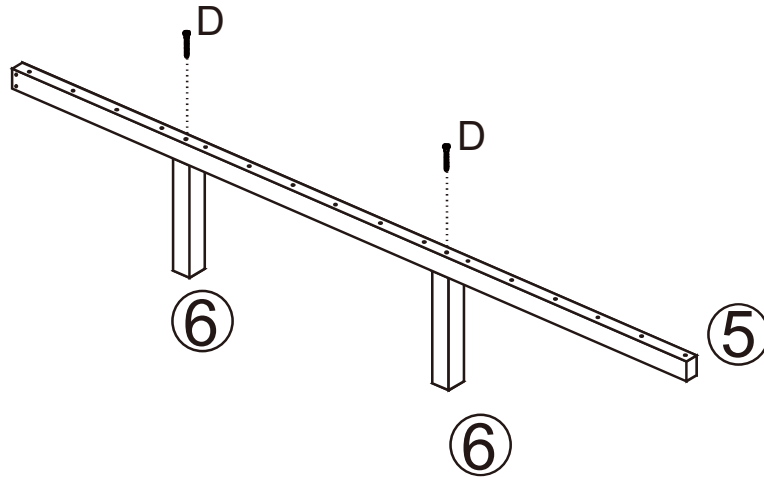

- STEP 4** Attach centre rail(5) in to bracket B, and screw with hardware C.  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

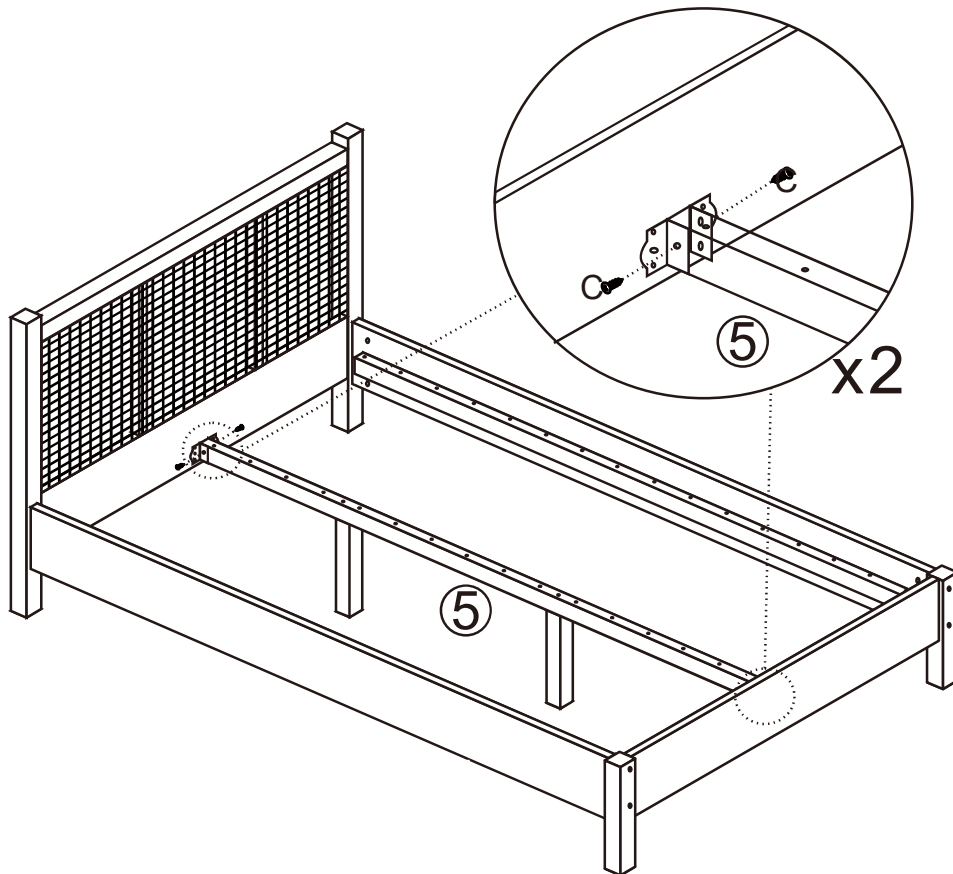

**STEP 3** Attach the bed slats(7) with bed frame by hardware E(the connect hole were pre-drilled)  
**DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

