
TV Stand

Assembly Instructions - Please keep for future reference

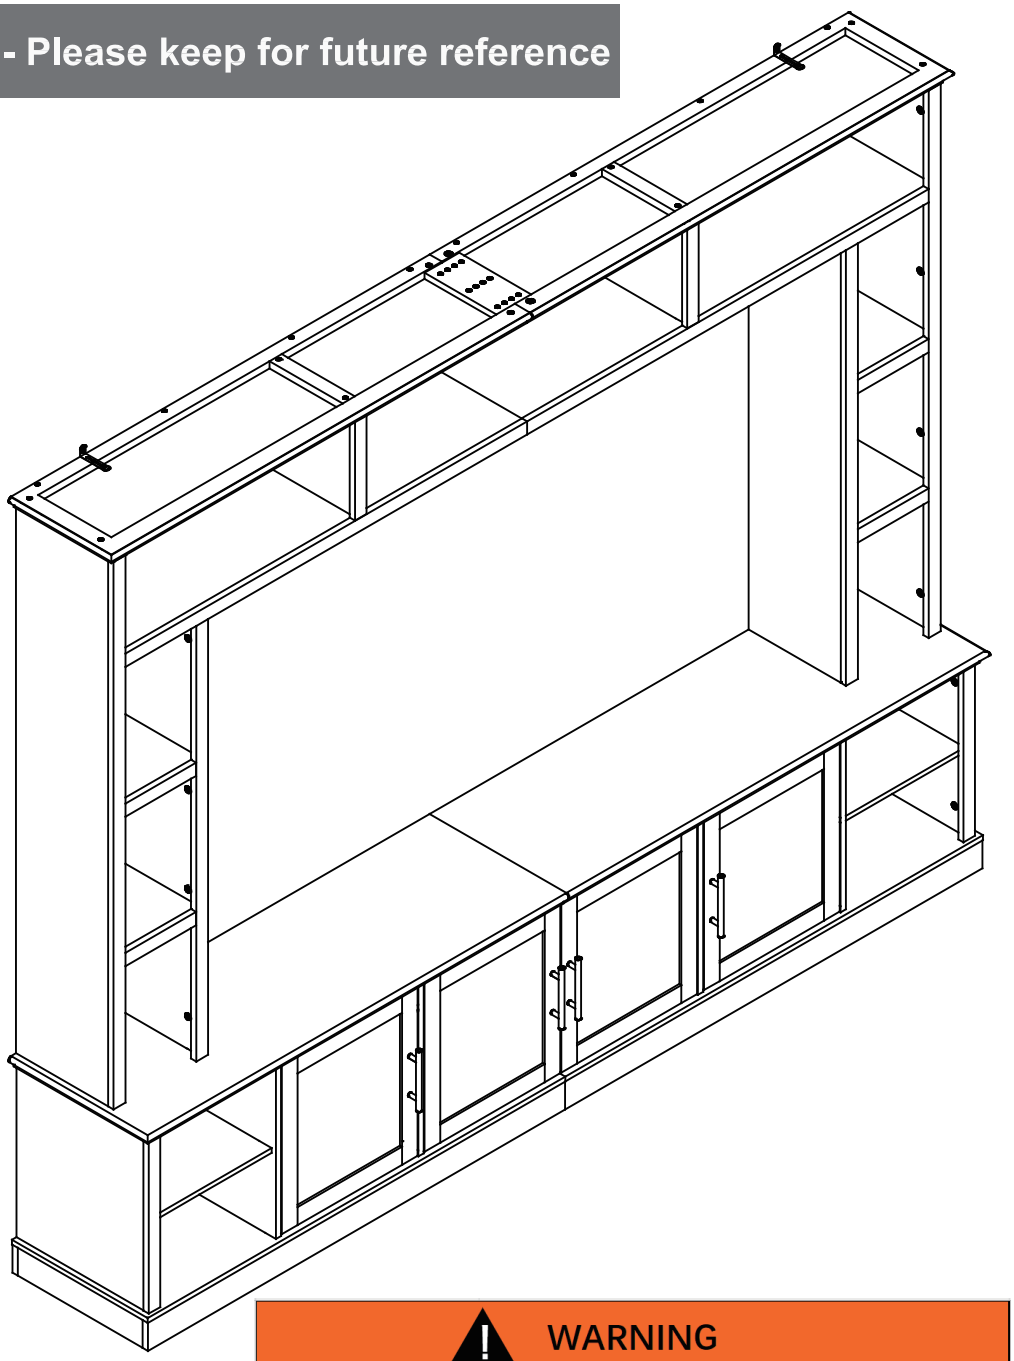

Dimensions

Width- 95.25inch

Depth- 15.75inch

Height- 76inch

WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions


















To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings


Please check you have all the panels listed below


Note:The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required

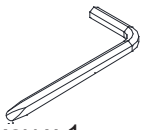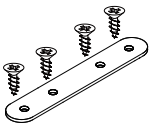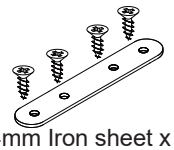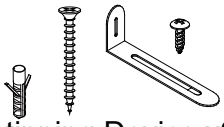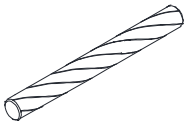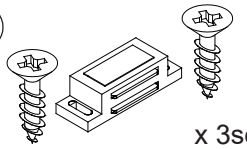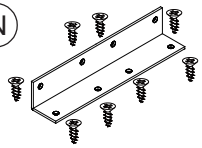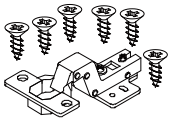A  Cam Bolt x 108+2	B  6*30mm Dowel x 96+2	C  Cam lock x 112+2	D  Allen key x 1
E  3.5*12mm Iron sheet x 2set	F  x 4set	G  4*30mm Screw x 16+1	H  3.5*14mm Iron sheet x 2set
I  4*20mm Screw x 24+2	J  Anti-tipping Device x2	K  4*40mm Screw x 35+2	L  6*40mm Dowel x 12+1
M  x 3set	N  x 2set	O  Shelf support pin x 12+1	P  4*20mm Handle x 4set
Q  x 4set	R  x 20set	S  Foot pad x12	T  3.5*14mm Hinge x 8set
U  Perfect fit x 60			

Tools required Not Included





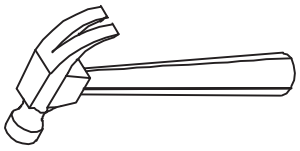


Phillips screwdriver
(medium & large)

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

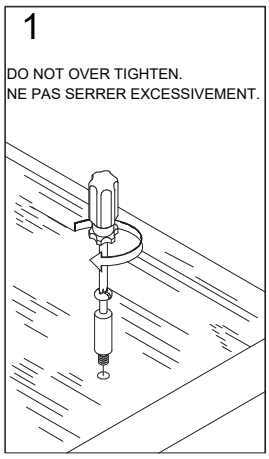

Step 2


Push the male camlock into the entry hole.

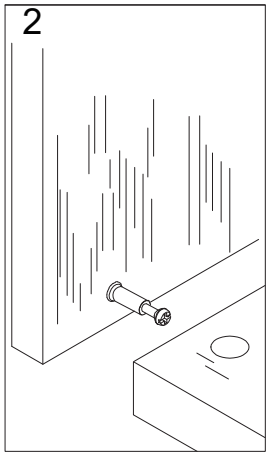

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

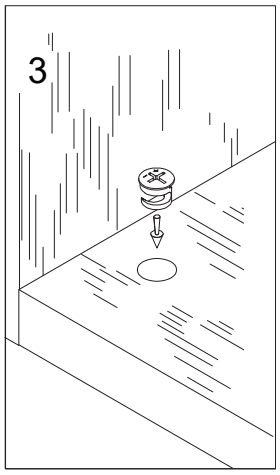


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

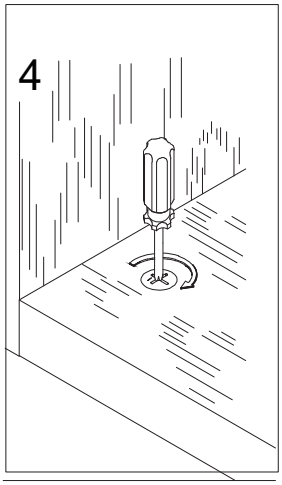


Assembly Instructions

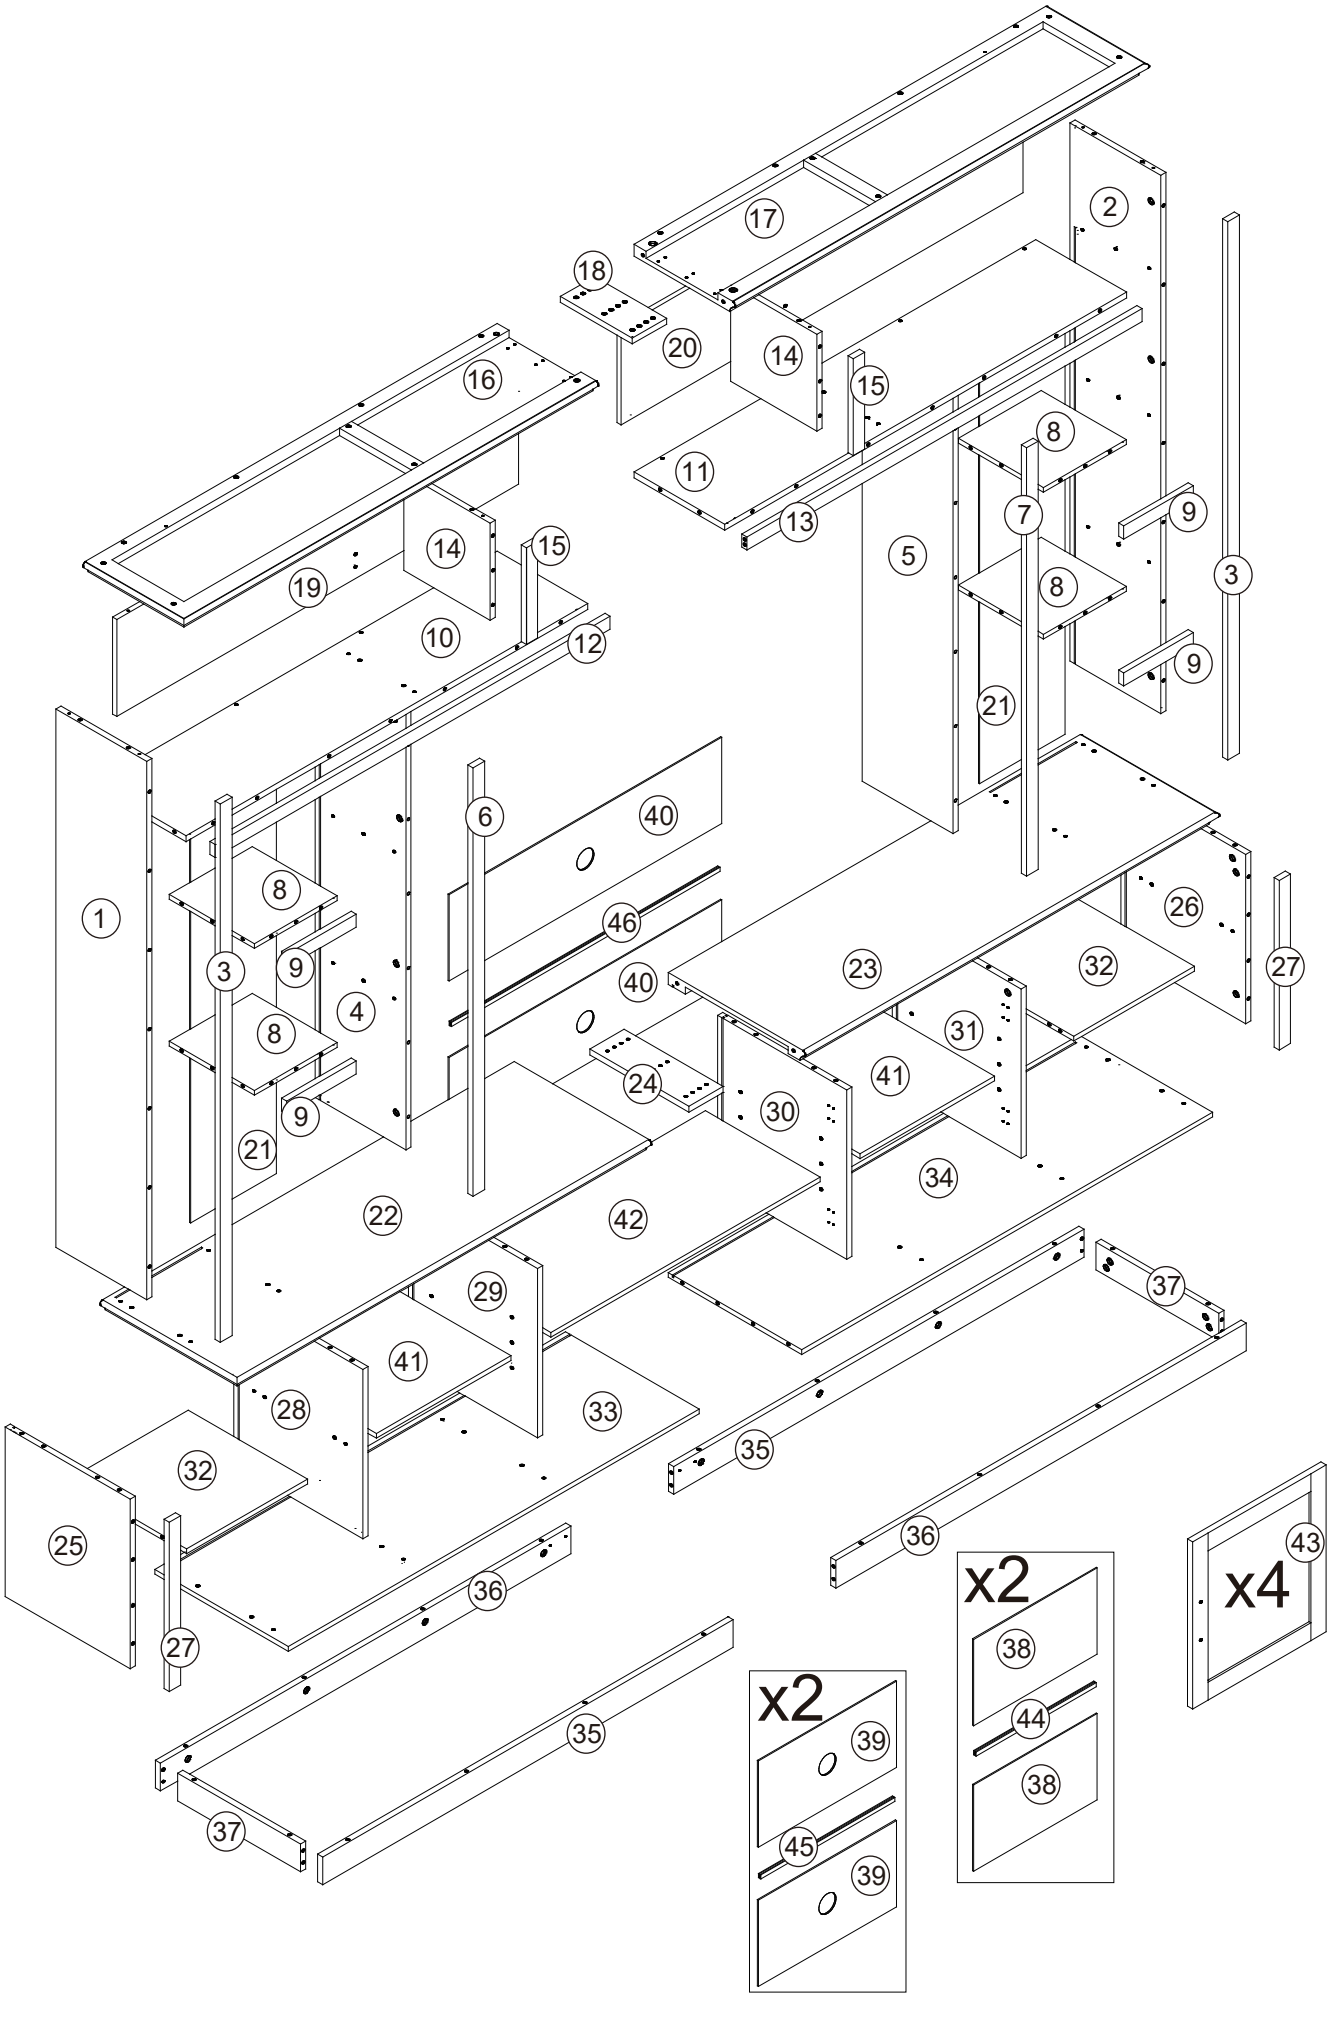


PART LIST

This product comes in 2 box.

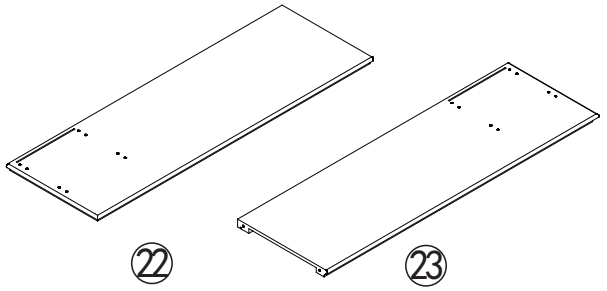


㉒ x1
1210x400x30mm


㉓ x1
1210x400x30mm

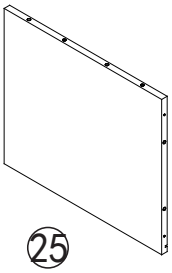


㉕ x1
428x365x15mm

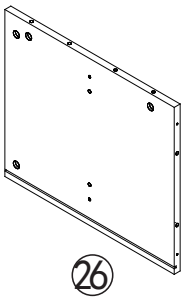


㉖ x1
428x365x15mm

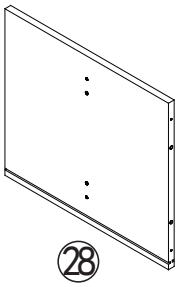


㉘ x1
428x377x15mm

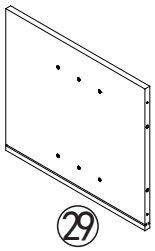


㉙ x1
428x377x15mm

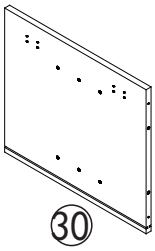


㉚ x1
428x377x15mm

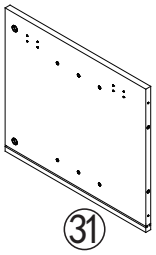


㉛ x1
428x377x15mm

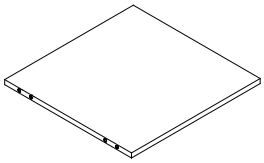


㉜ x2
353x348x12mm

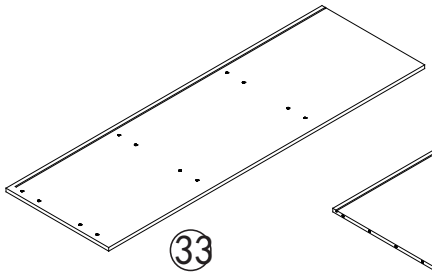


㉝ x1
1200x390x12mm

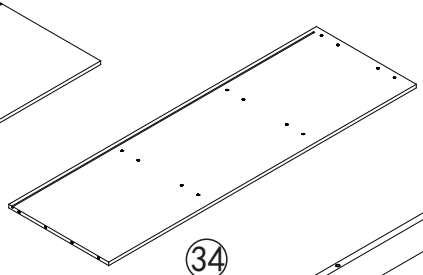


㉞ x1
1200x390x12mm

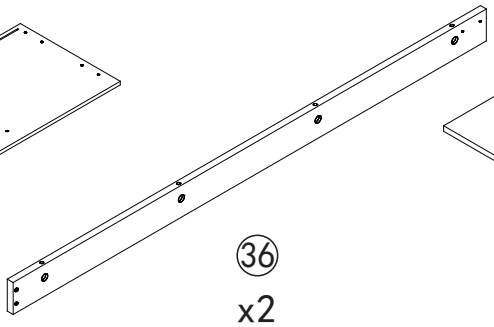


㊱ x2
1199x70x15mm

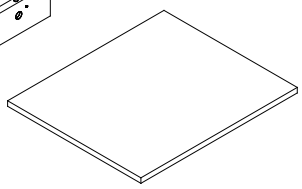

㊶ x2
393x355x12mm

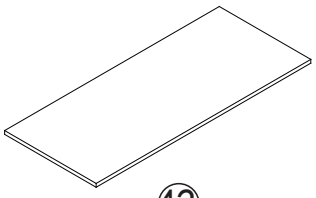


㊷ x1
786x335x12mm

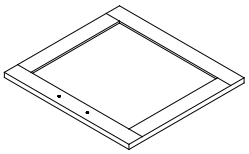

㊸ x4
422x390x15mm


PART LIST

This product comes in 2 box.

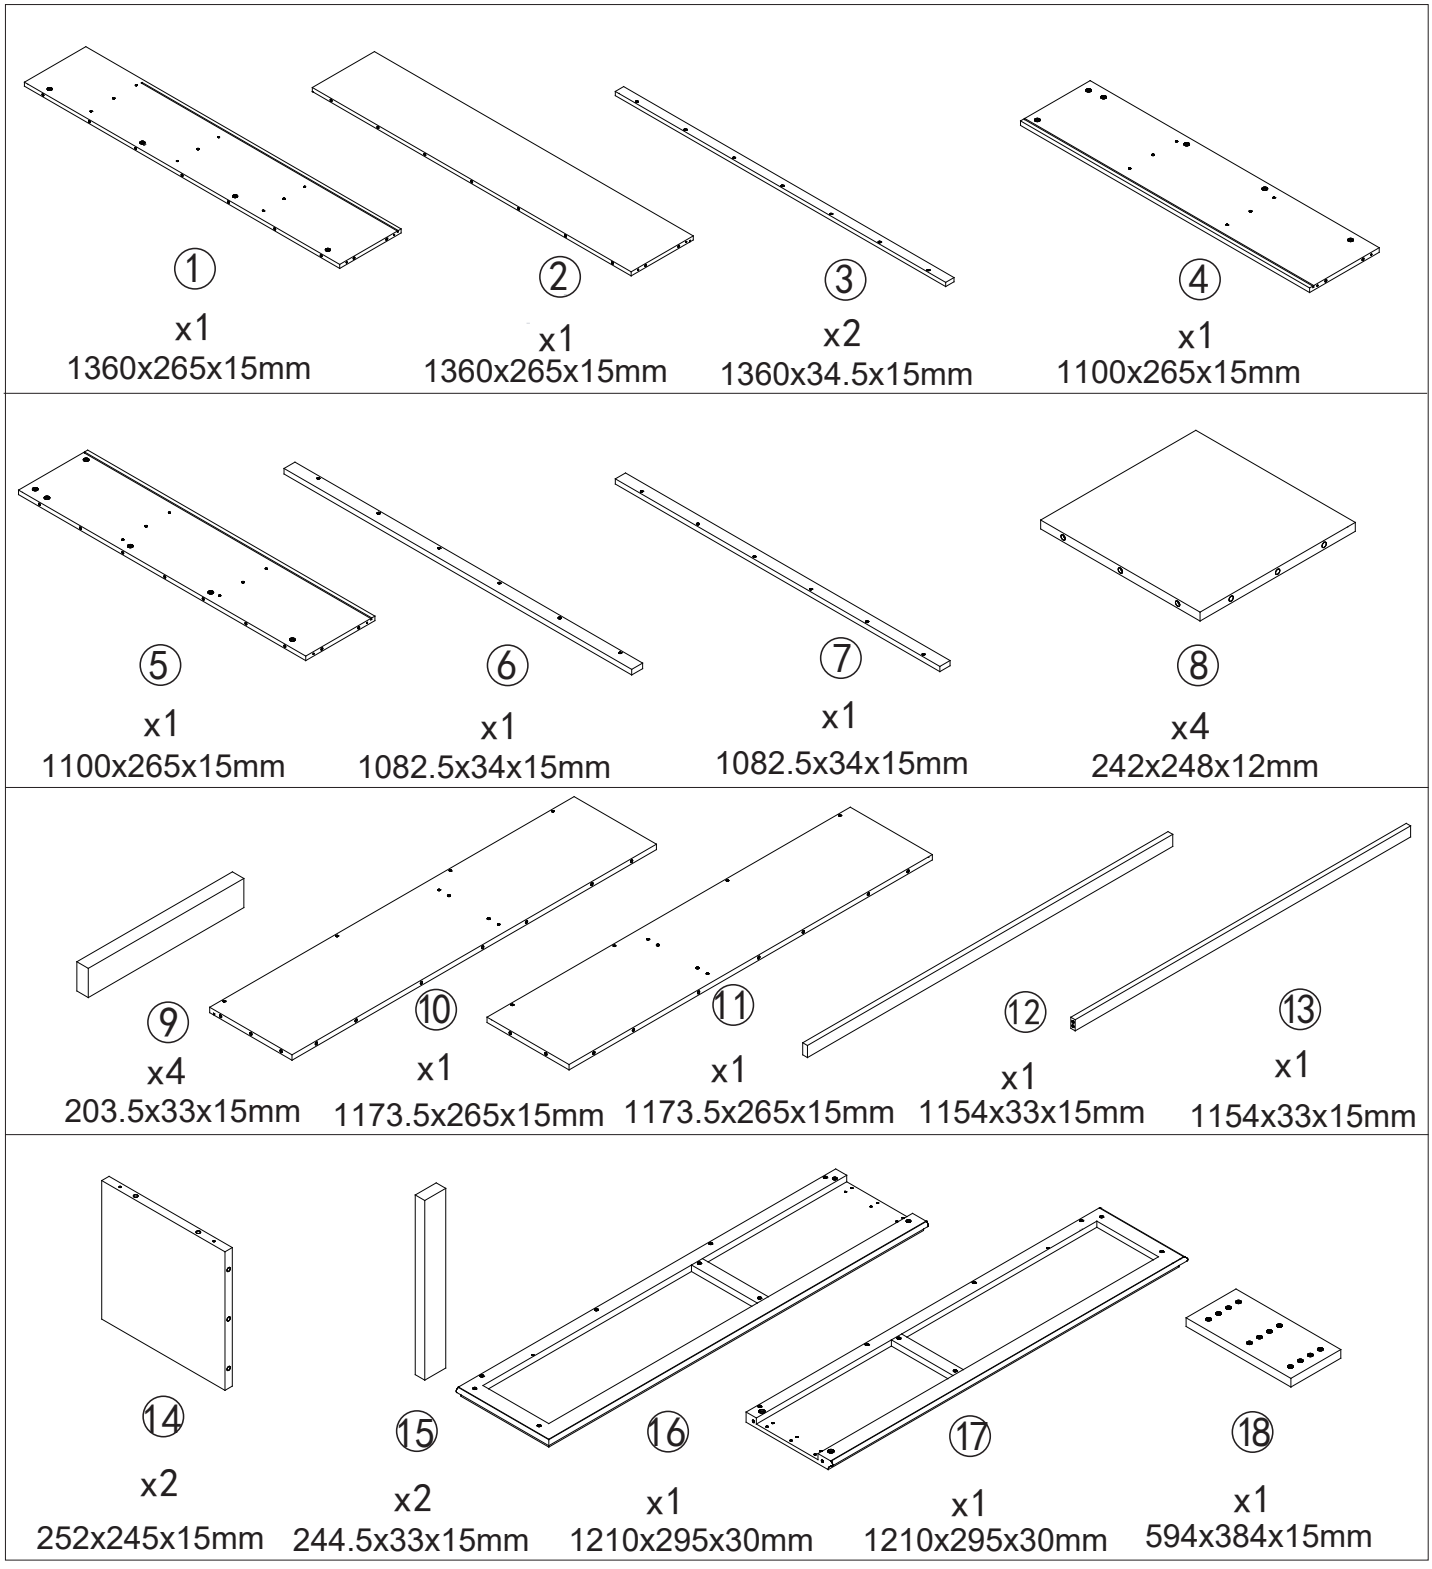


PART LIST


This product comes in 2 box.

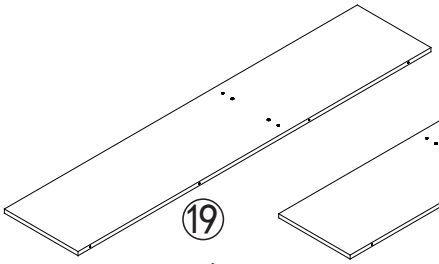


⑲ x1
1173.5x245x12mm

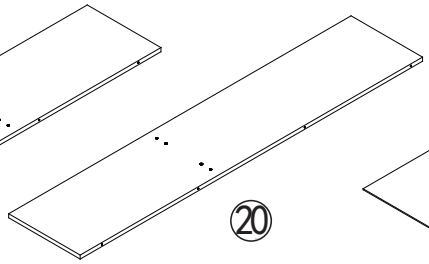


⑳ x1
1173.5x245x12mm

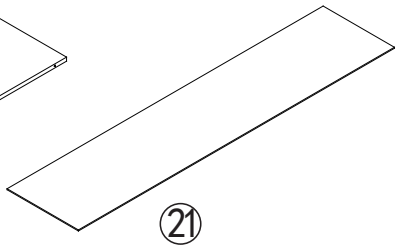


㉑ x2
1108x250x3mm

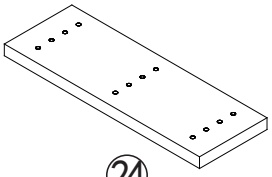


㉔ x1
1600x200x15mm

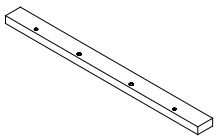


㉗ x2
428x33x15mm

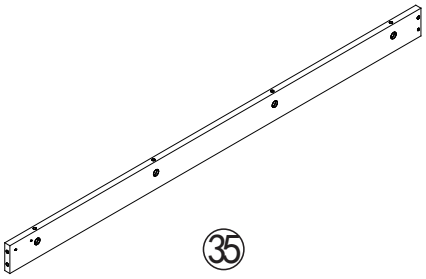


㉟ x2
1199x70x15mm

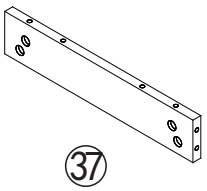


㊲ x2
359x70x15mm

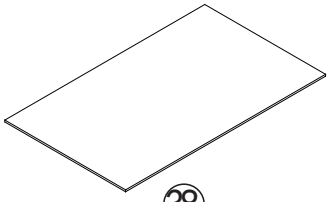


㊳ x4
361x218x3mm

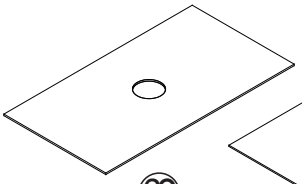


㊴ x4
403x218x3mm

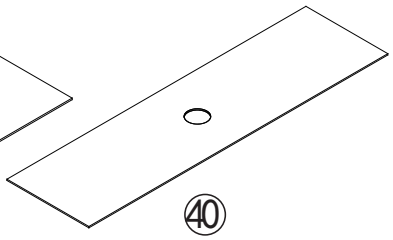


㊵ x2
796x218x3mm

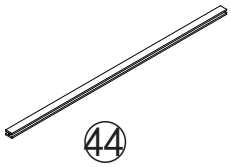

㊹ x2
351mm

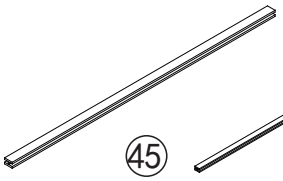

㊺ x2
391mm

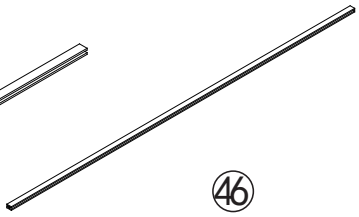


㊻ x1
784mm



Hardware kit x1

Assembly Instructions

Step 1

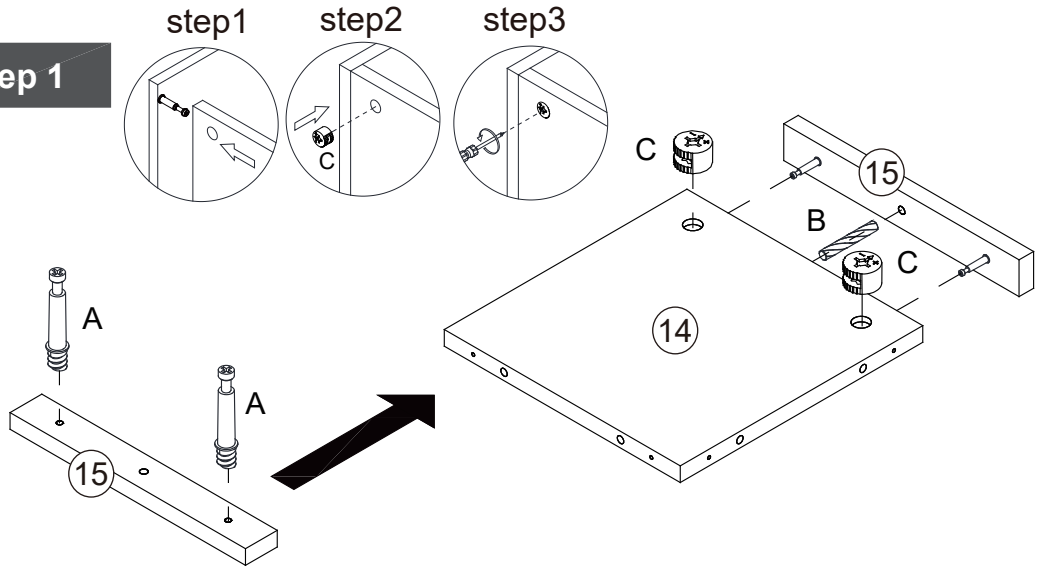


x2

C
Cam lock x 4

B
6*30mm Dowel x 2


A
Cam Bolt x 4

Step 2

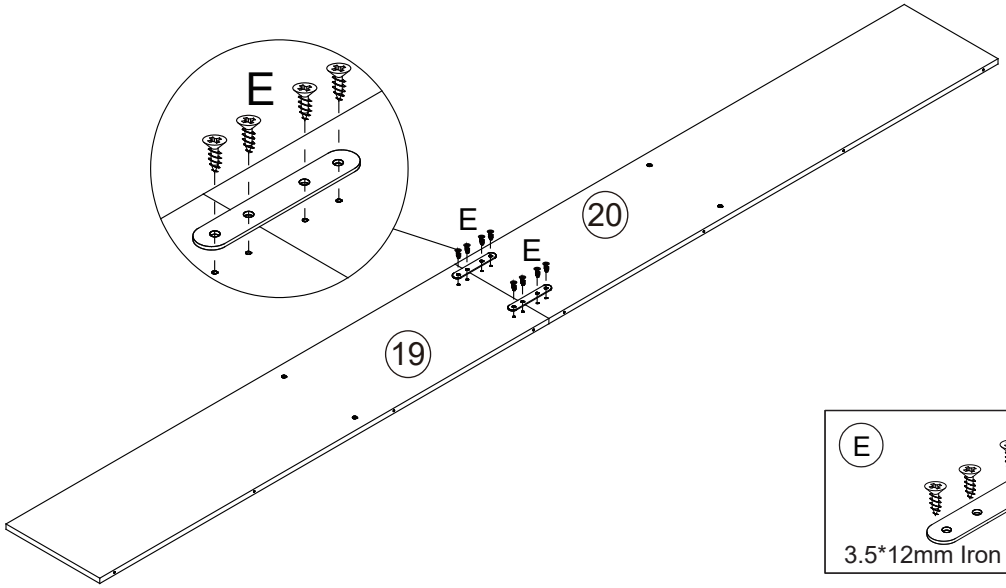

E
3.5*12mm Iron sheet x 2set

Step 3

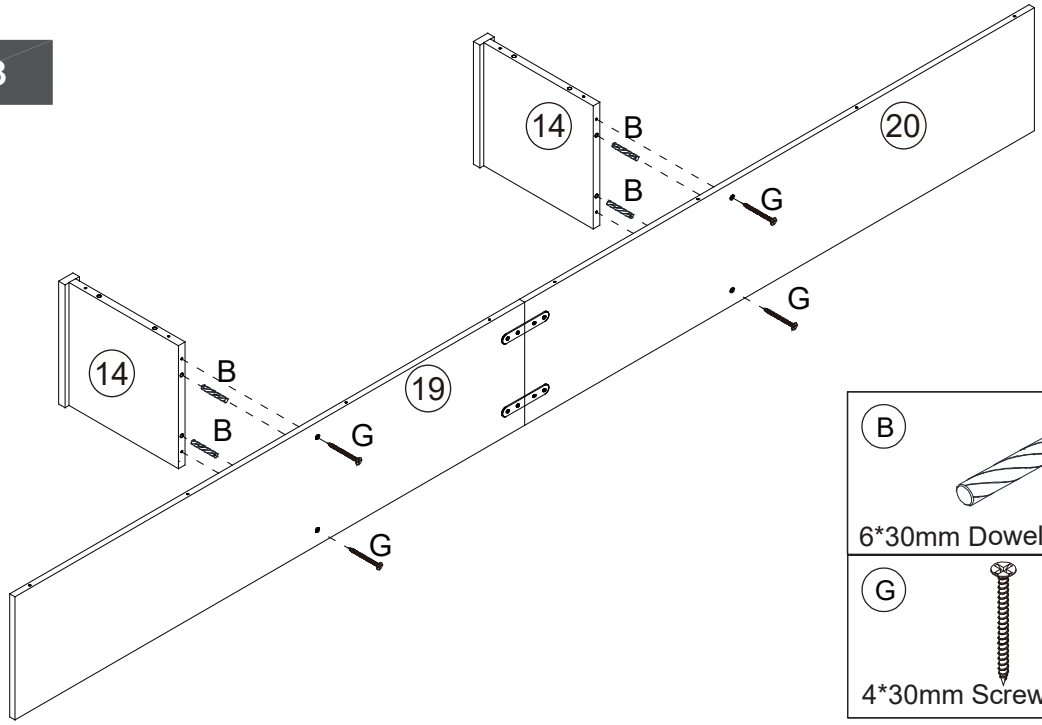


B
6*30mm Dowel x 4


G
4*30mm Screw x 4

Assembly Instructions

Step 4

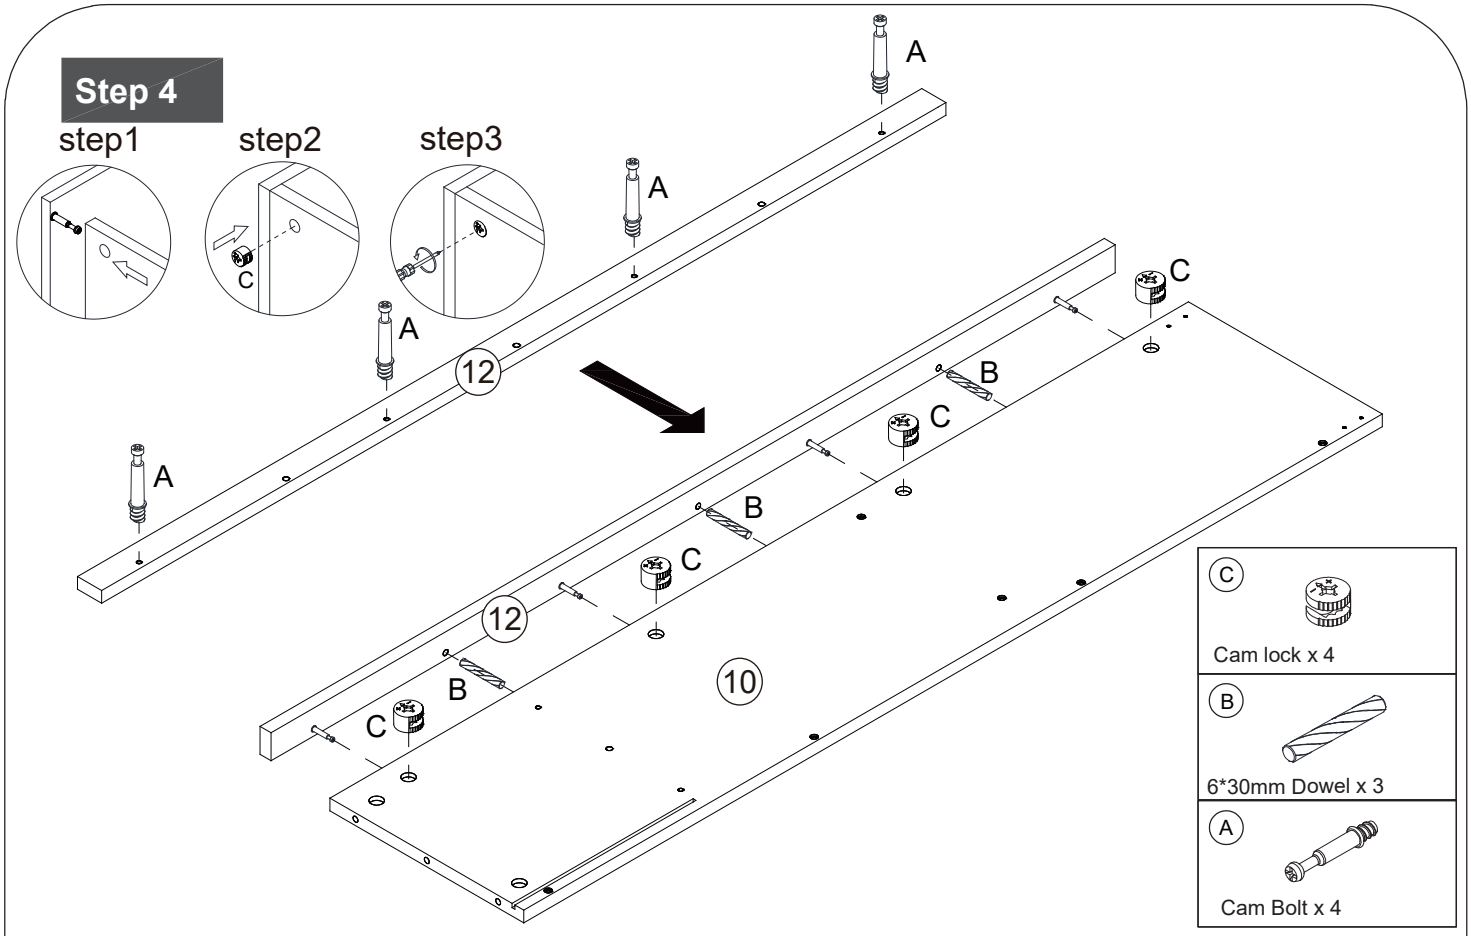


Step 5

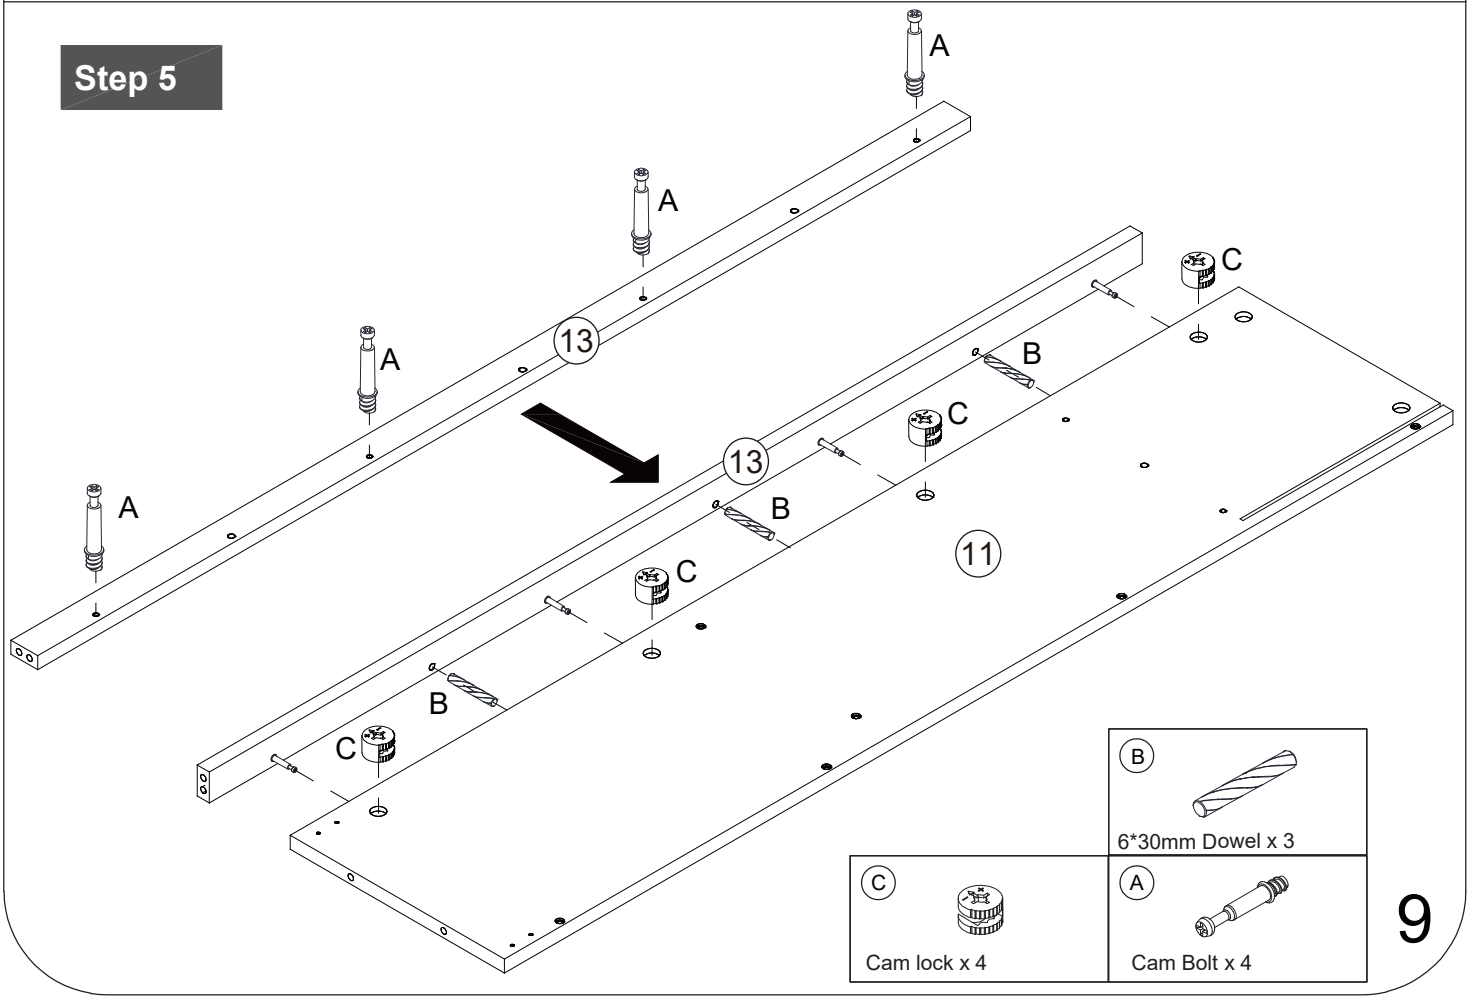


Assembly Instructions

Step 6

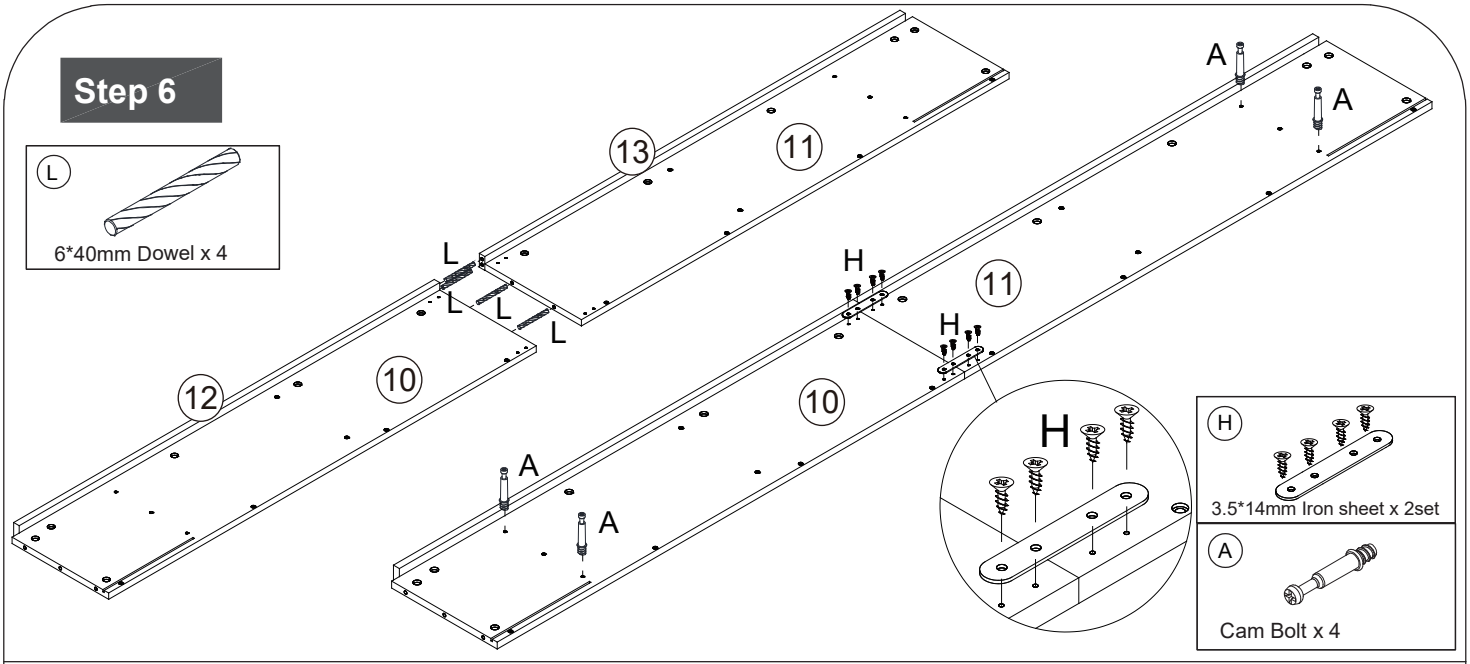


Step 7

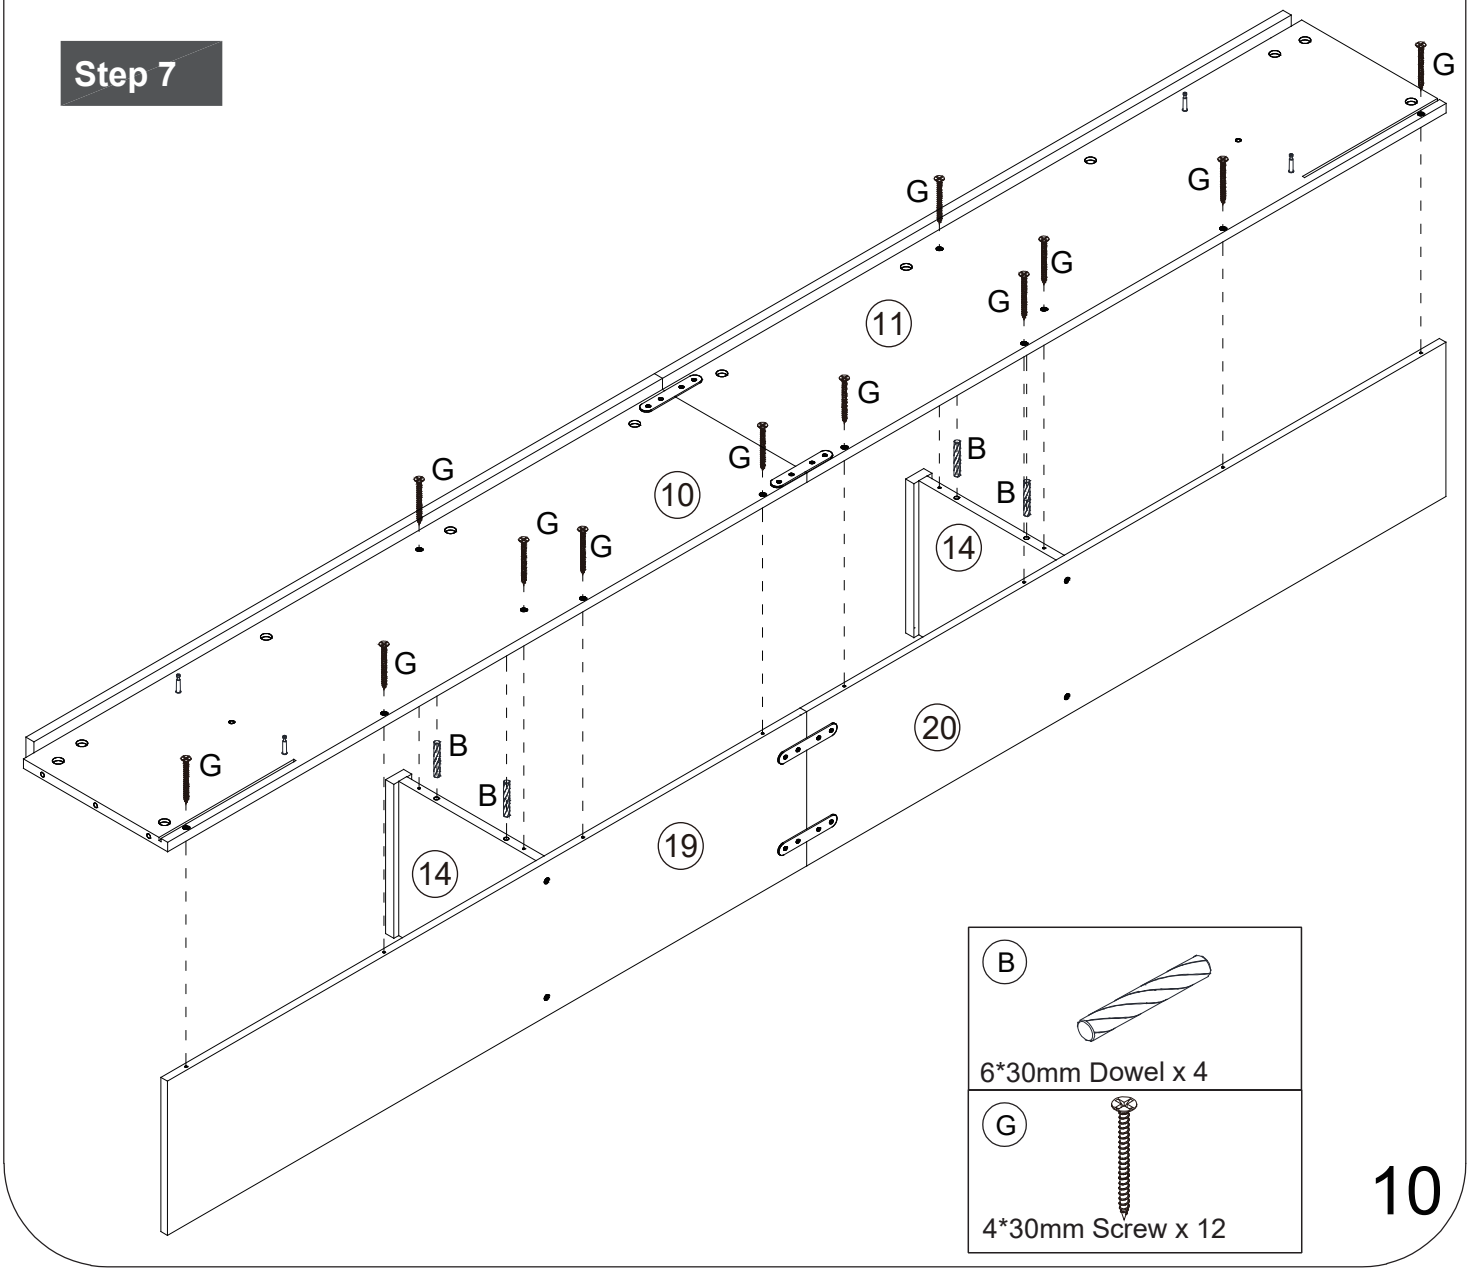

Assembly Instructions

Step 8

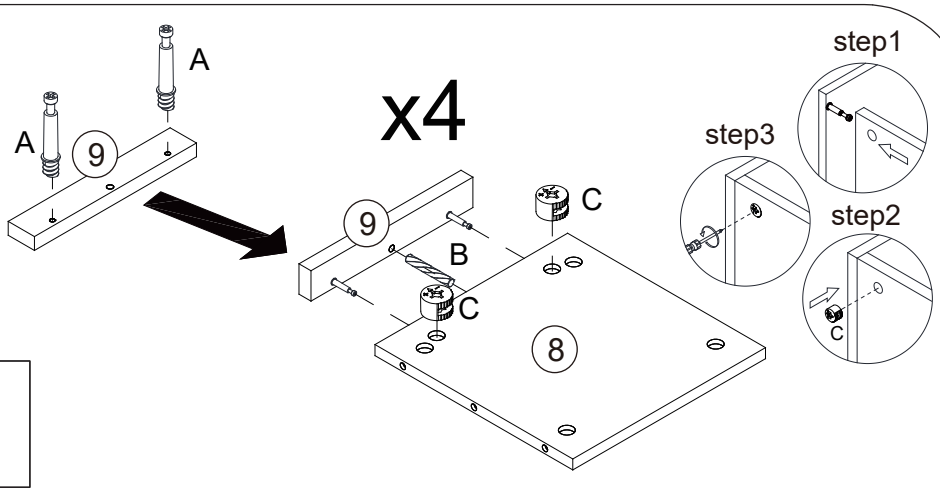


B
6*30mm Dowel x 4

A
Cam Bolt x 8


C
Cam lock x 8

Step 9

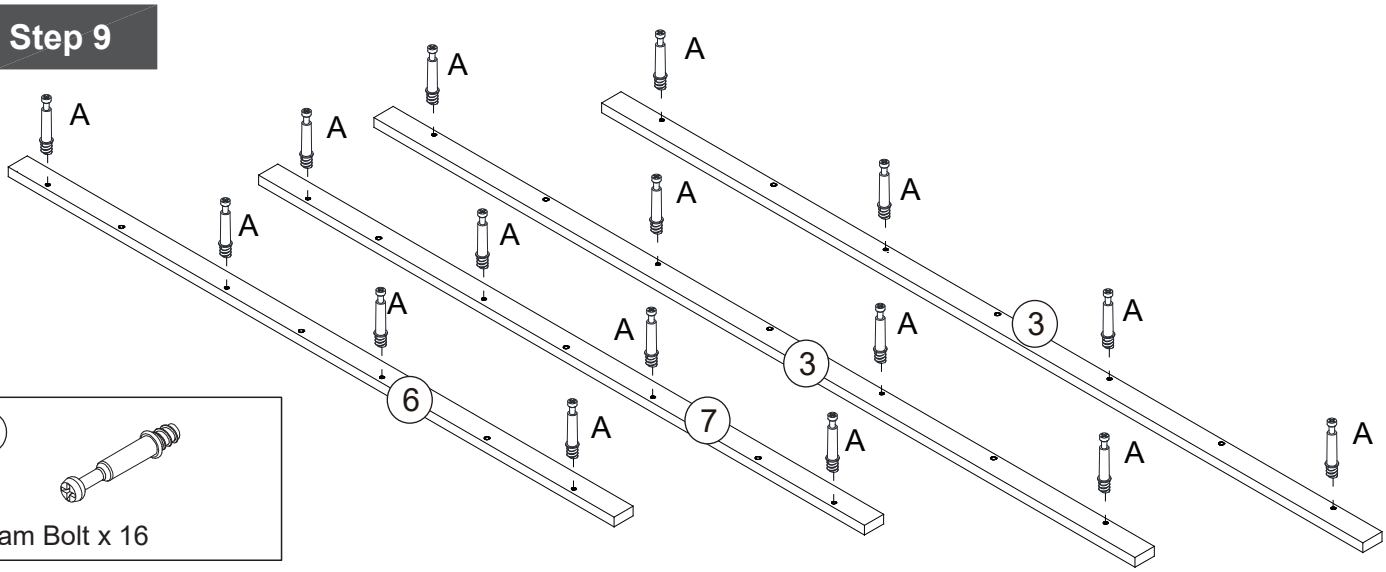

A
Cam Bolt x 16

Step 10

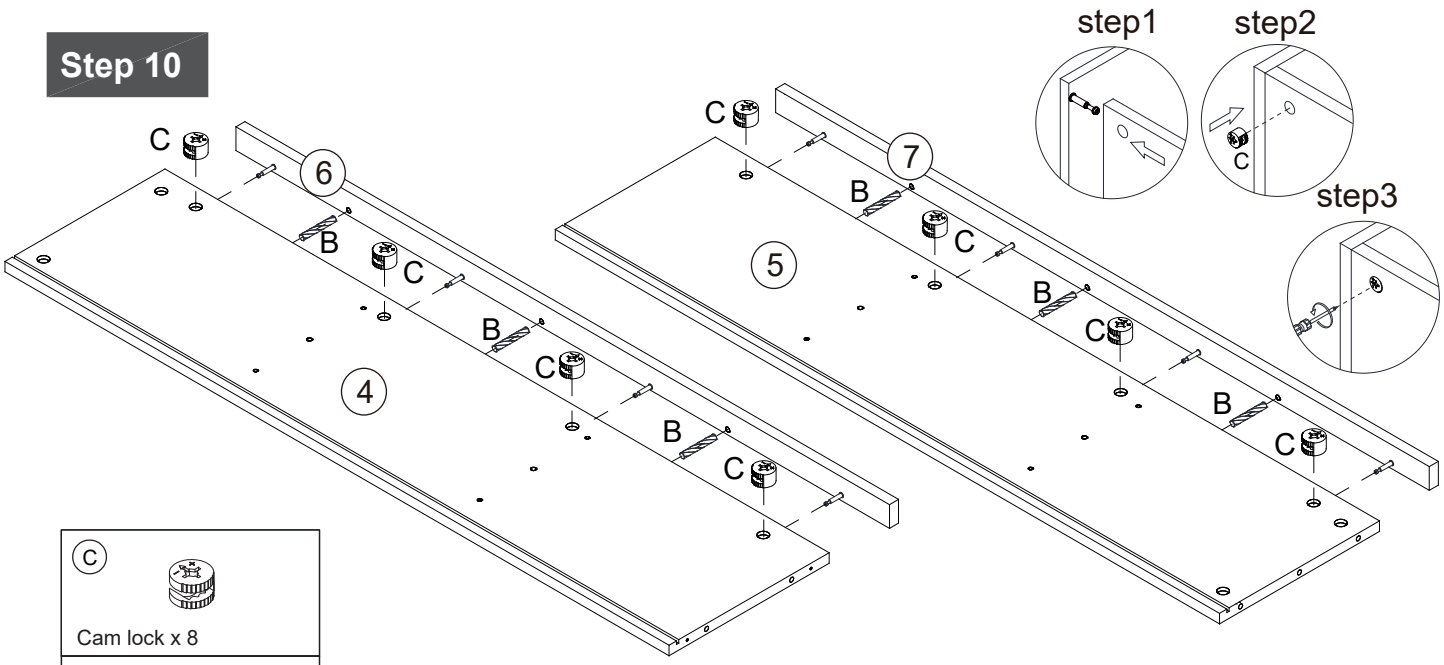


C
Cam lock x 8


B
6*30mm Dowel x 6

Assembly Instructions


Step 11

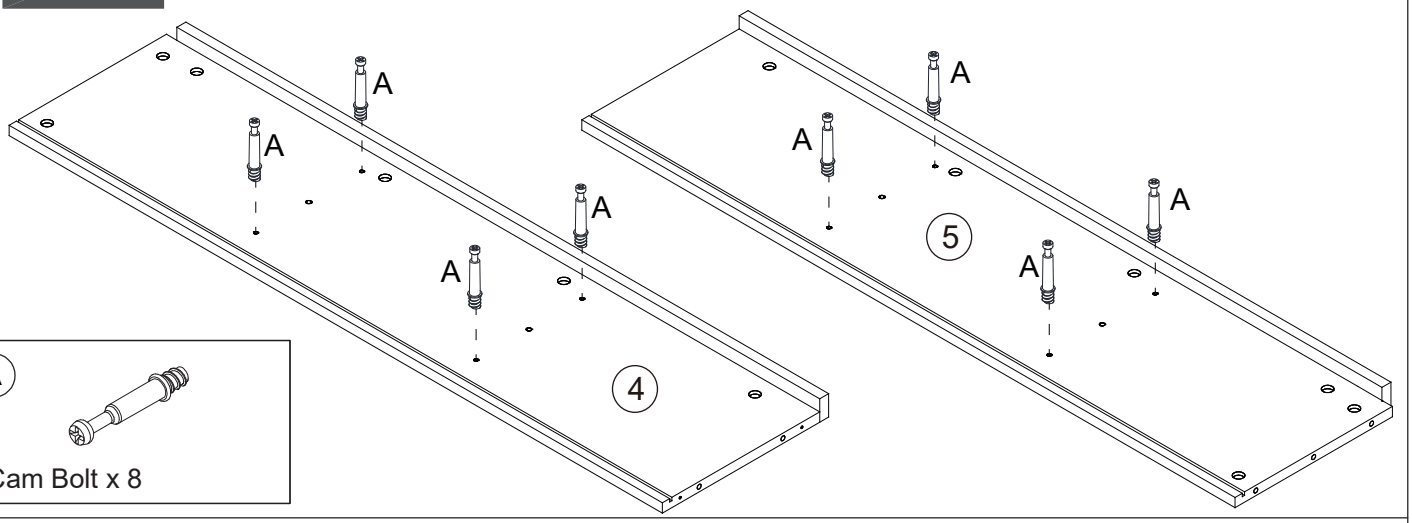

Step 12

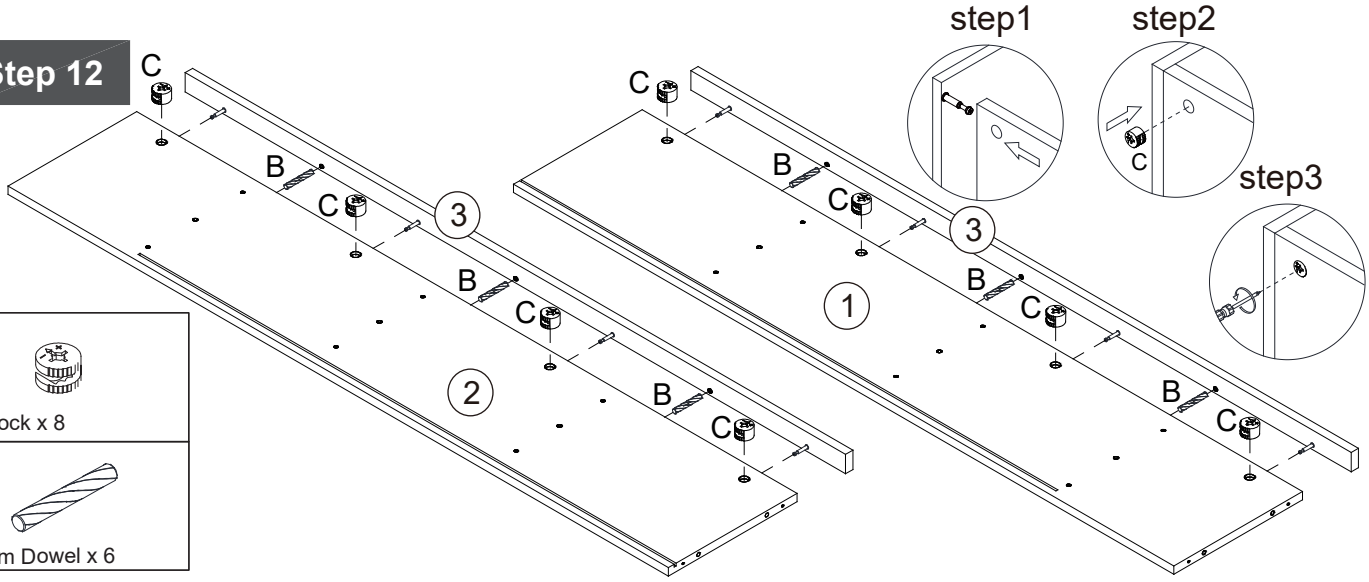


Step 13

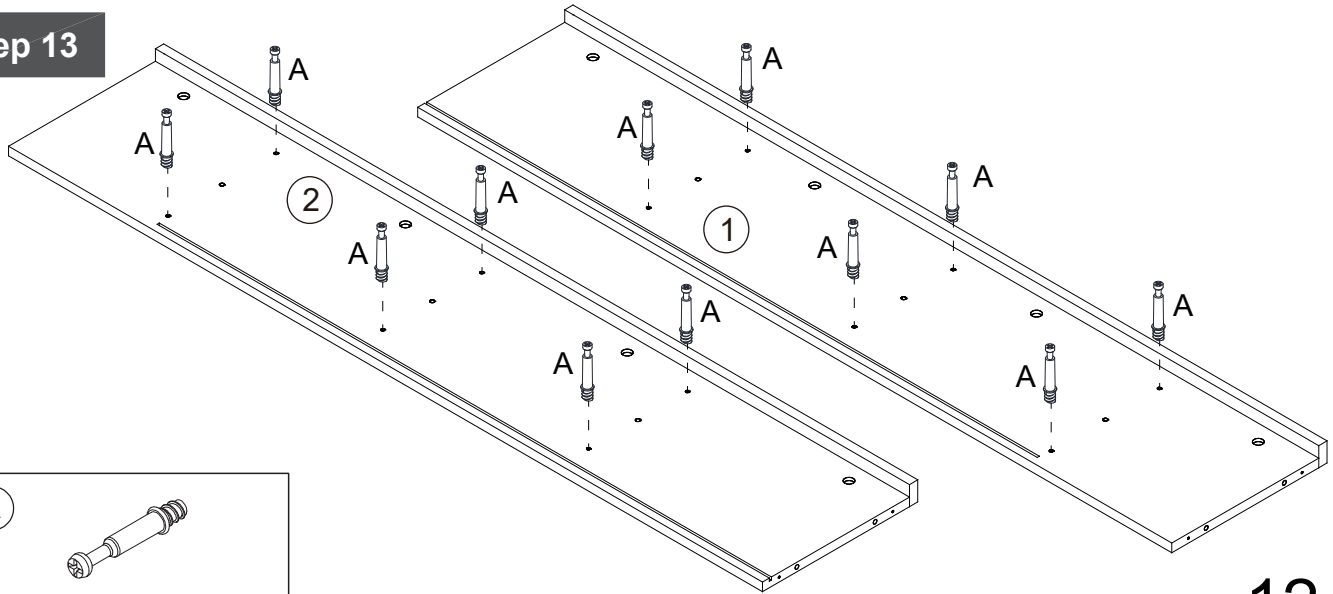


Assembly Instructions

Step 14

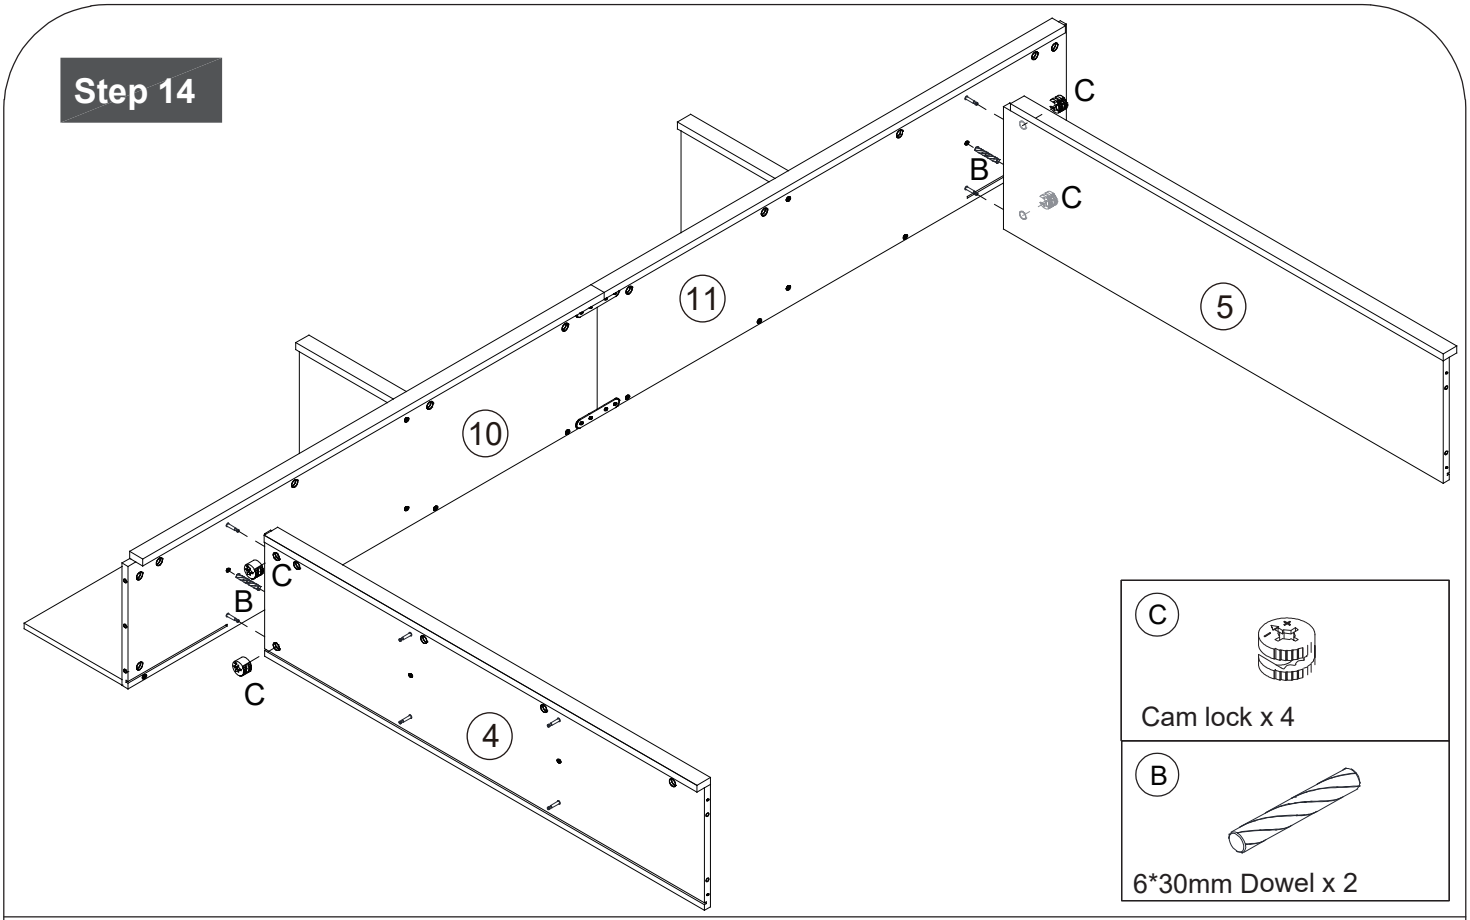

C	Cam lock x 4
B	6*30mm Dowel x 2


Step 15

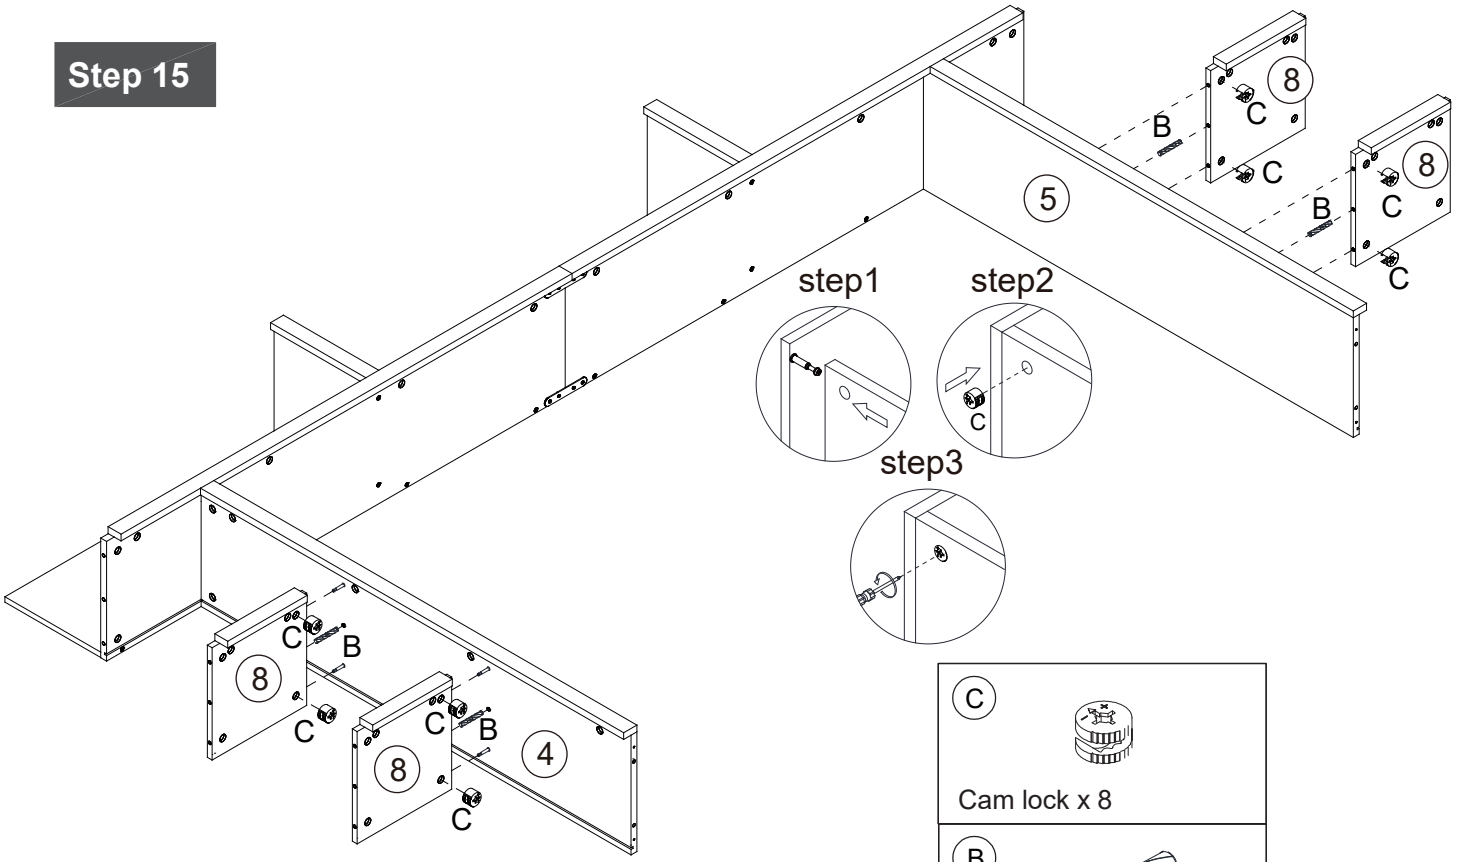


C	Cam lock x 8
B	6*30mm Dowel x 4

Assembly Instructions

Step 16

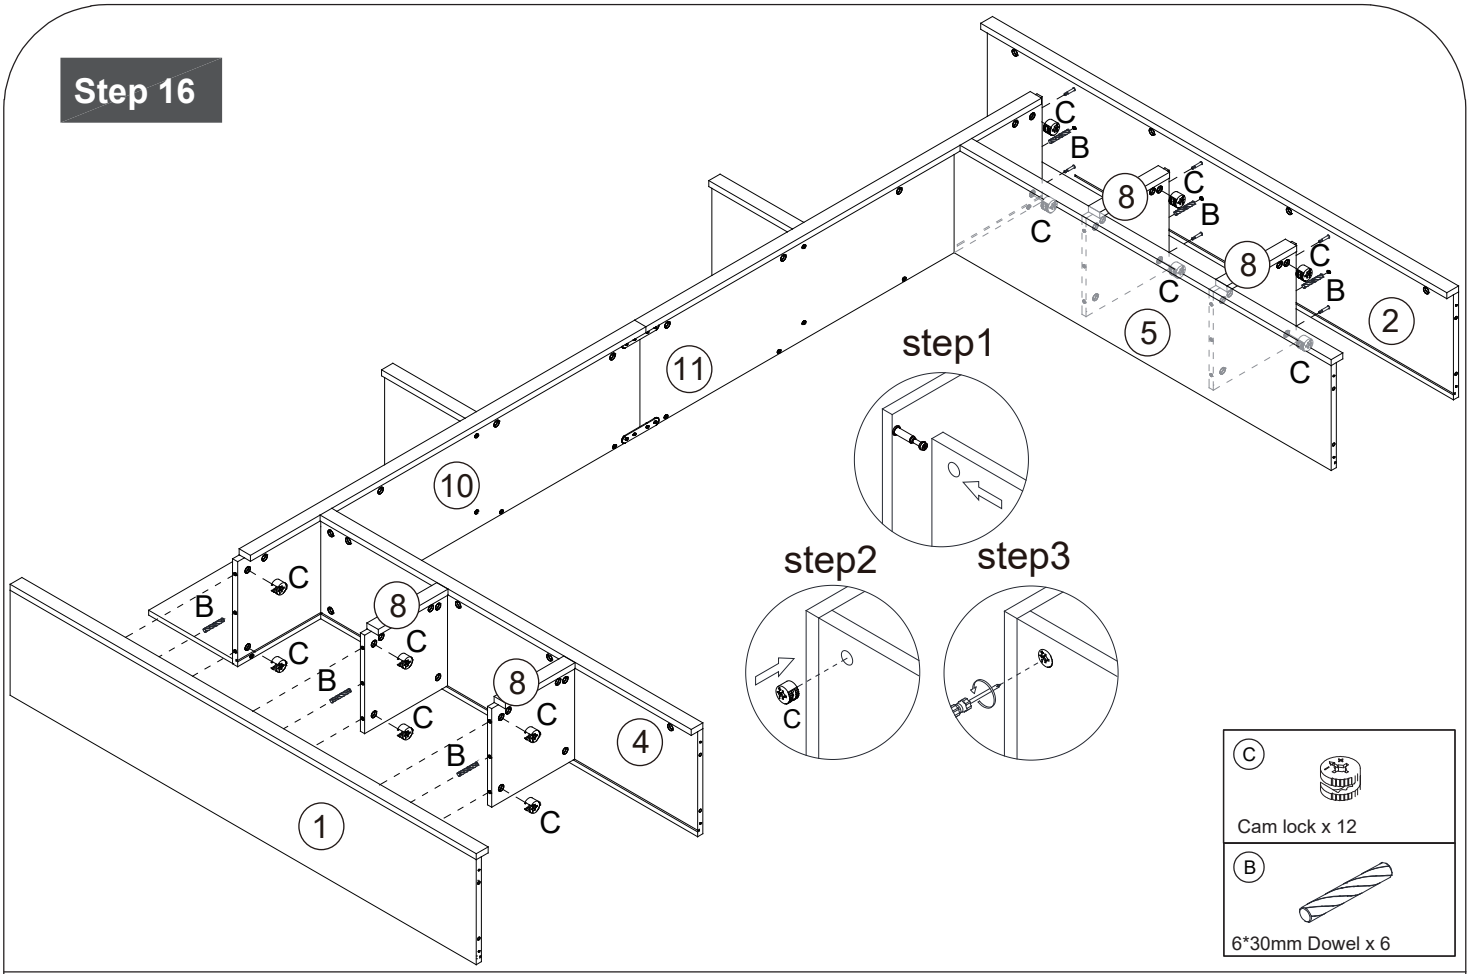


Step 17

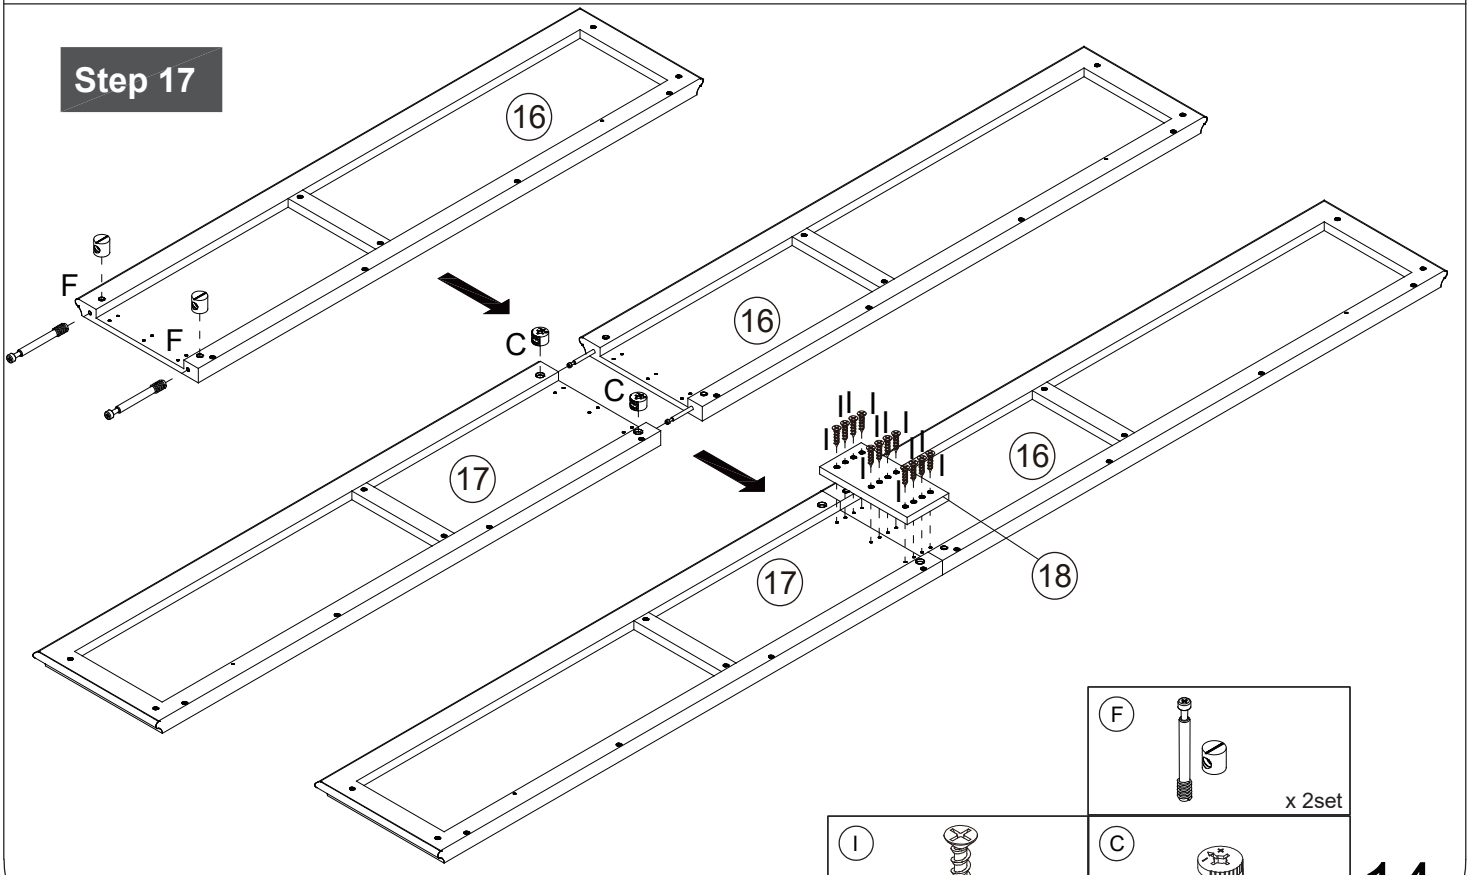

Assembly Instructions


Step 18

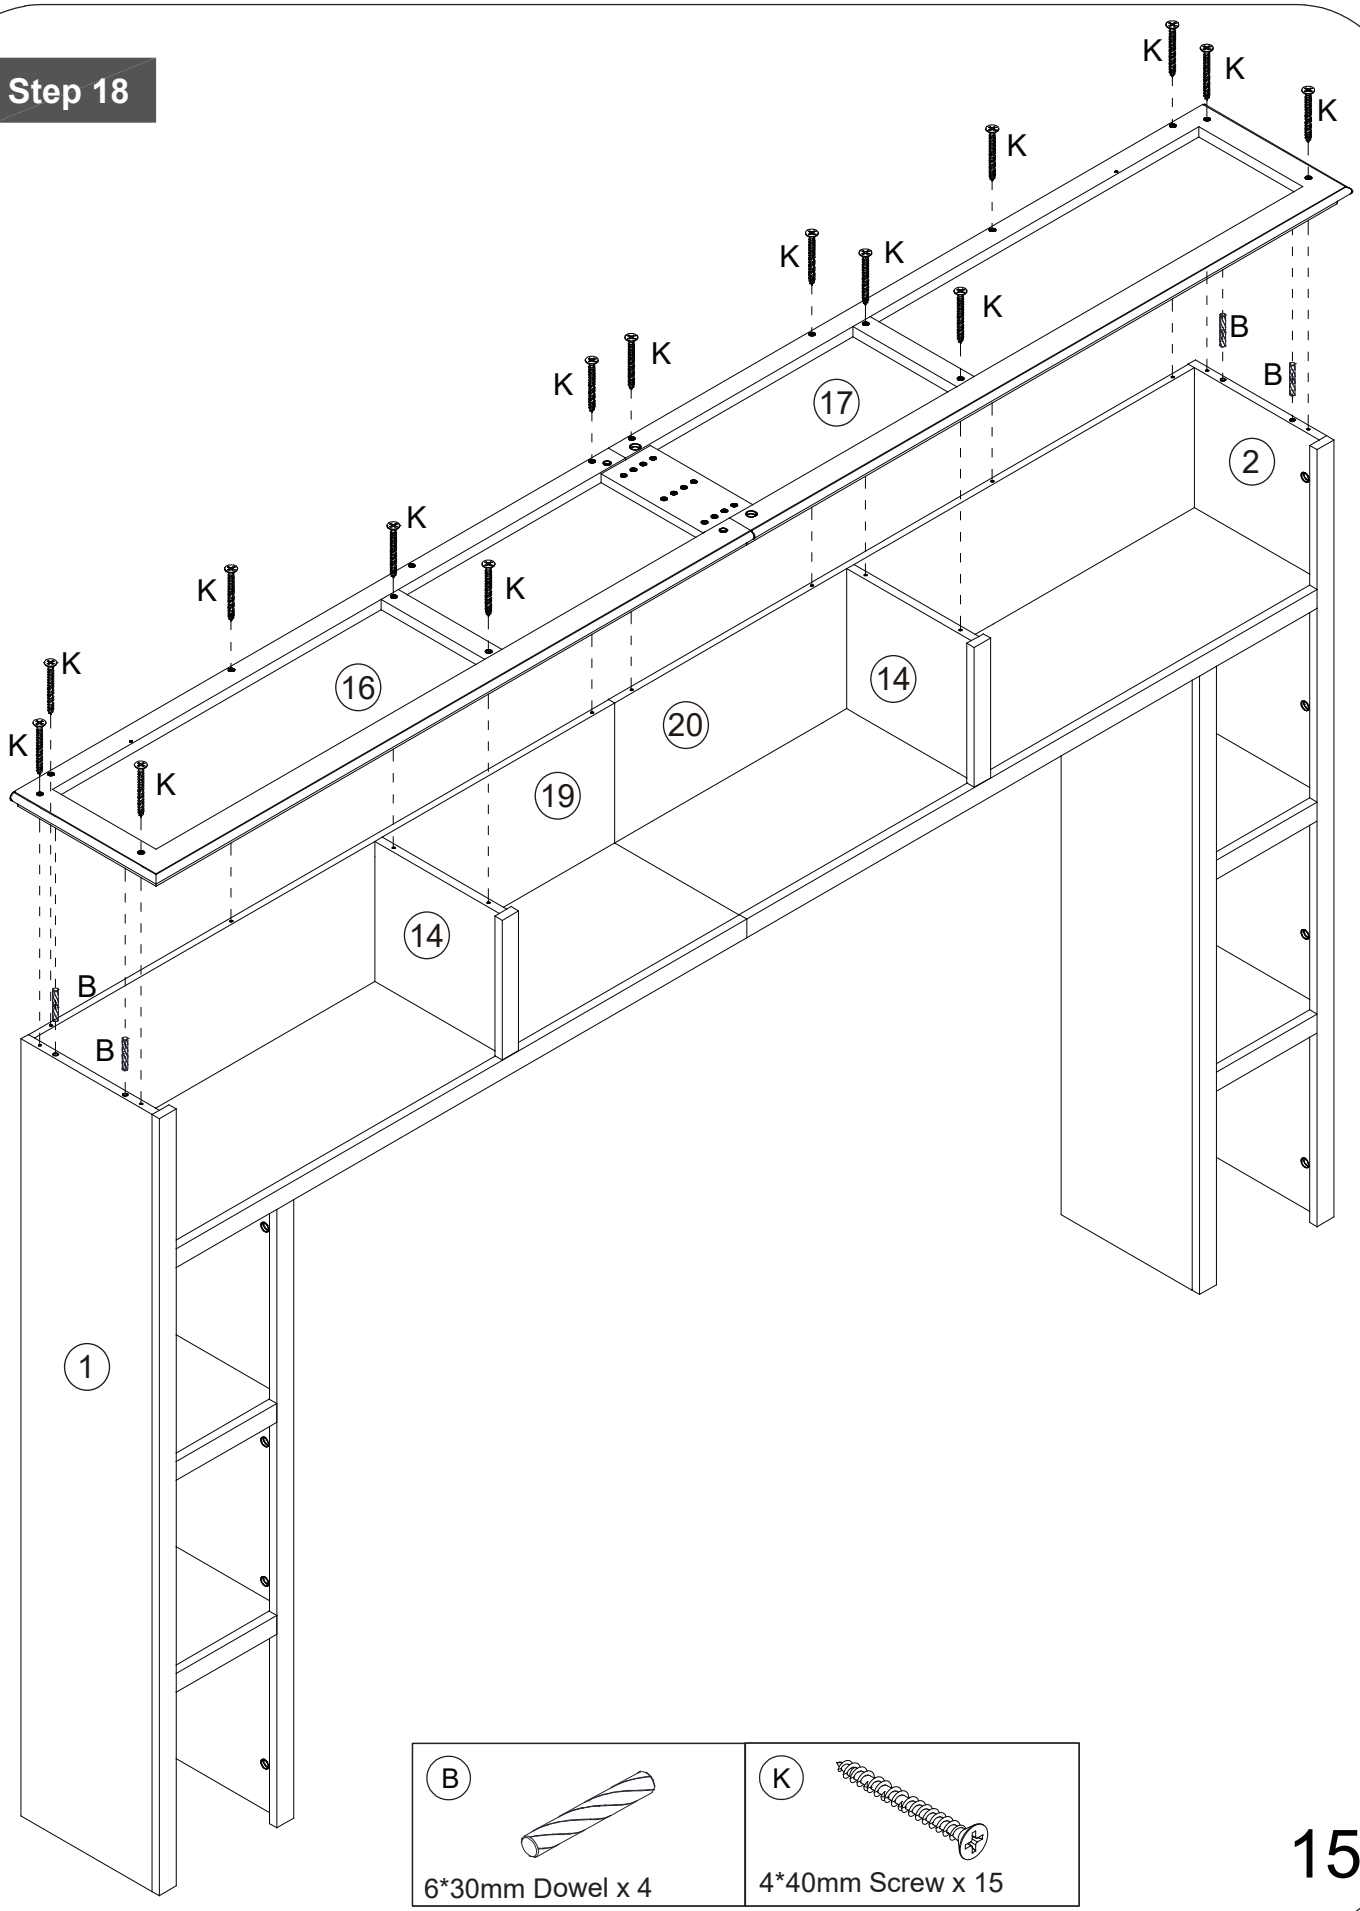


B	K
6*30mm Dowel x 4	4*40mm Screw x 15

Assembly Instructions

Step 19

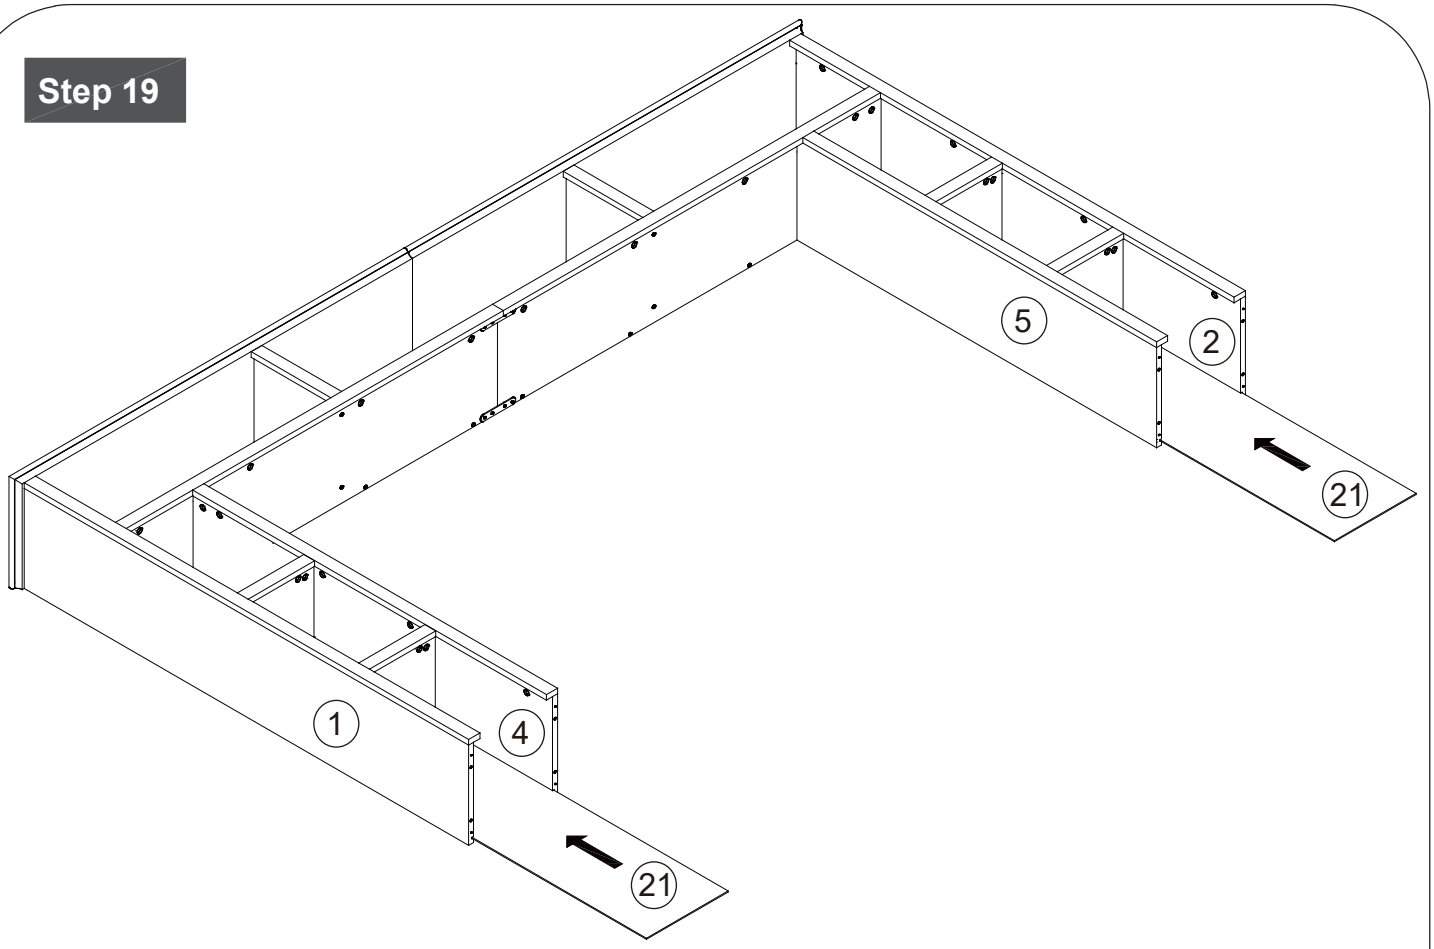


Step 20

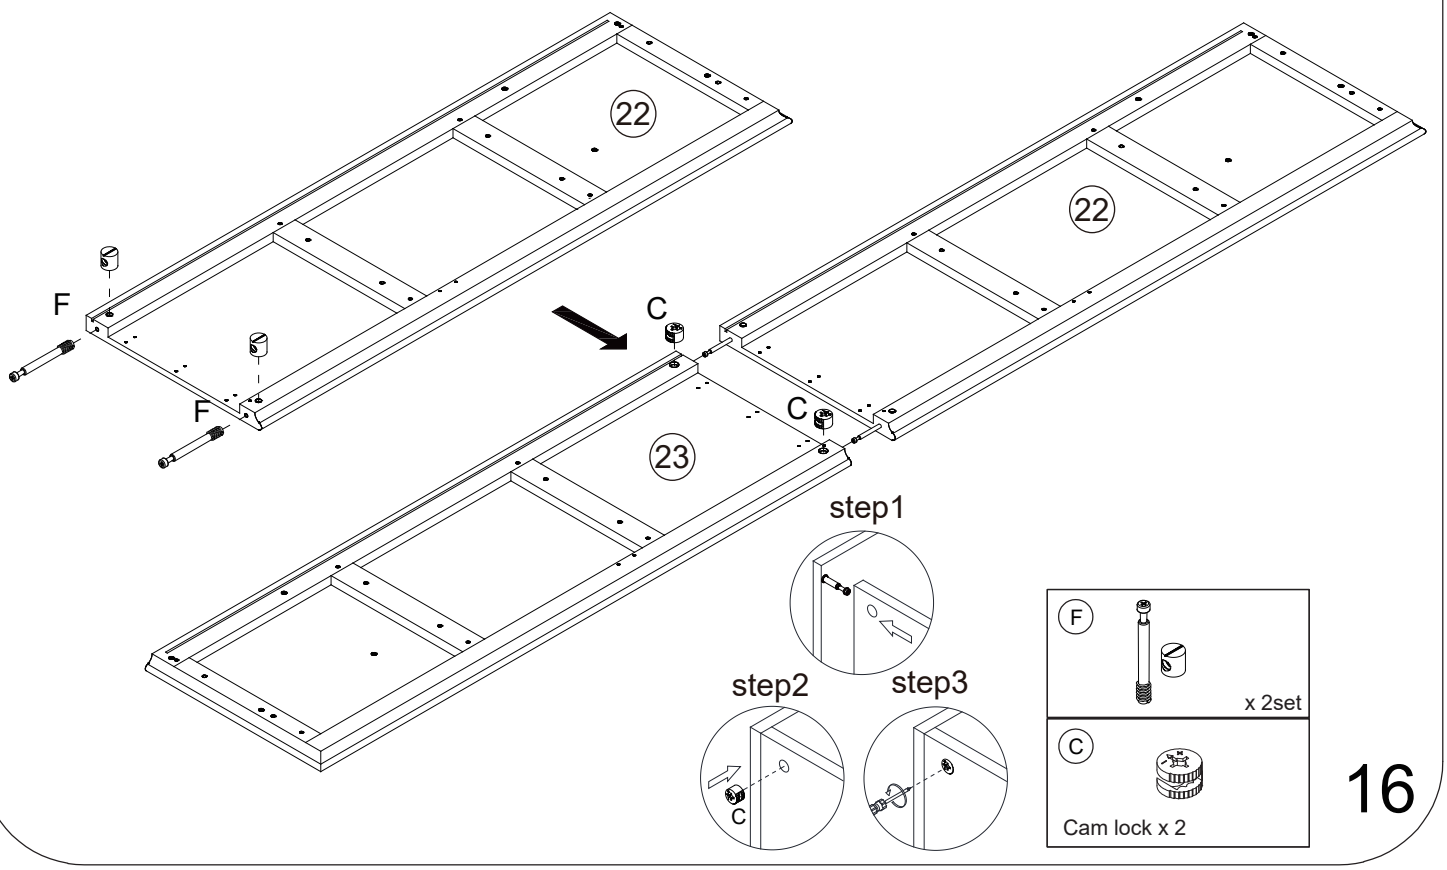


Assembly Instructions

Step 21

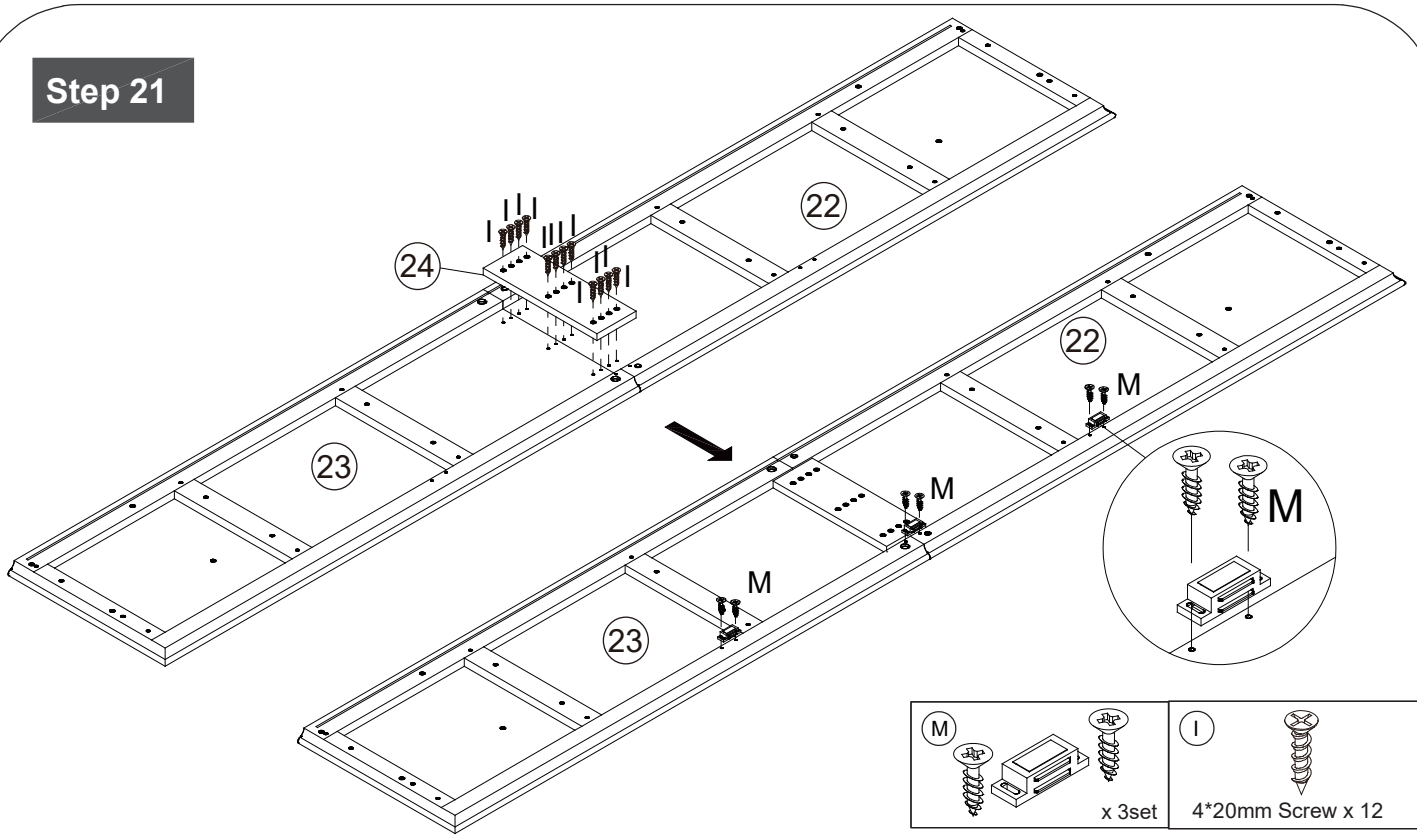


Step 22

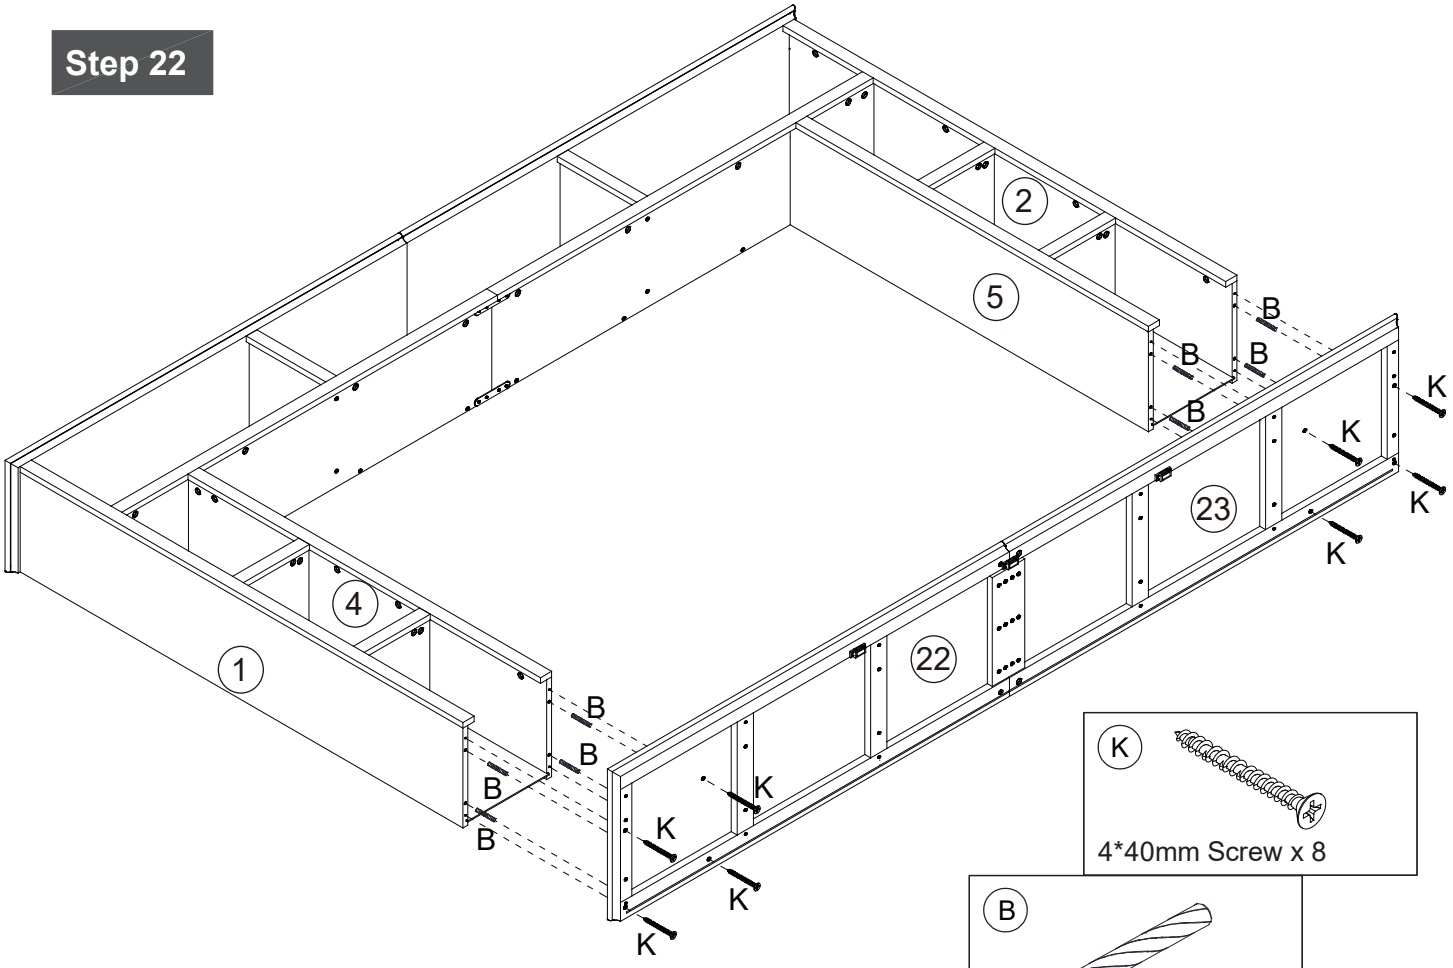

Assembly Instructions

Step 23

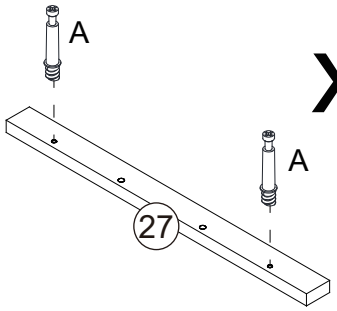



x2

A

Cam Bolt x 4

Step 24

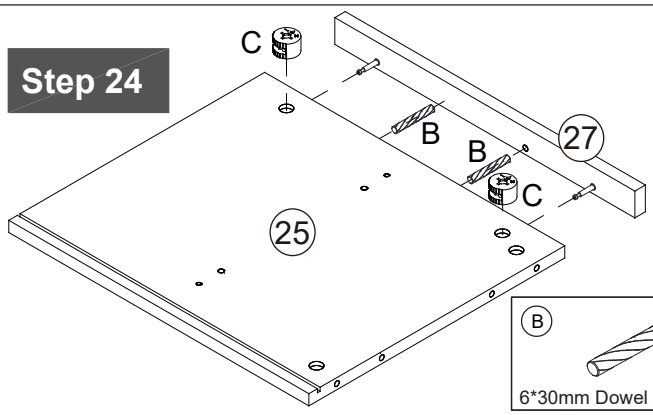

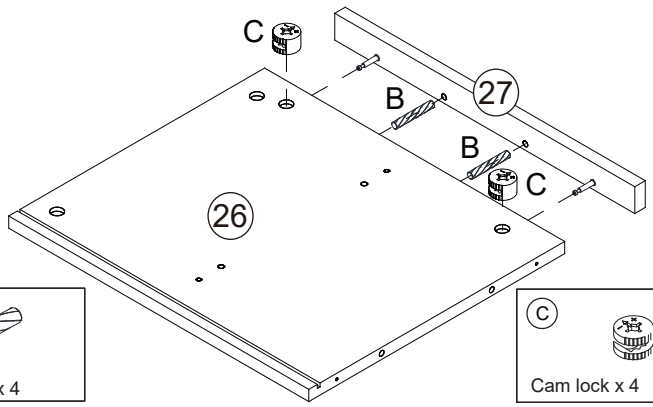


B


6*30mm Dowel x 4

C

Cam lock x 4

Step 25

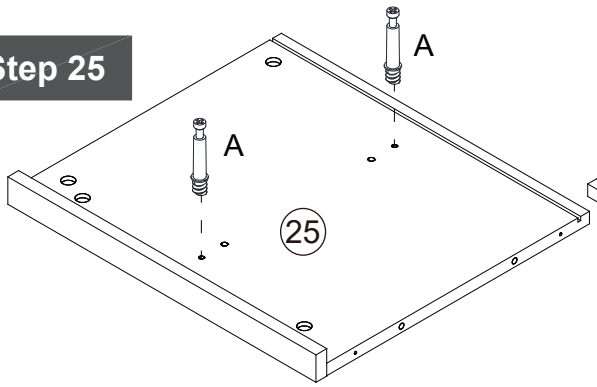

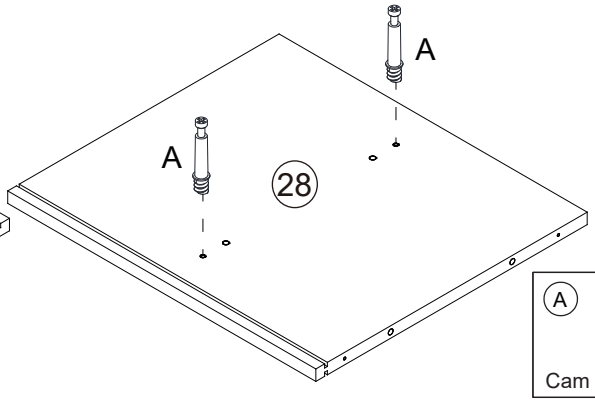


A


Cam Bolt x 4

Step 26


step1

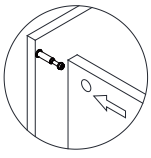


step2

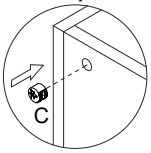

step3

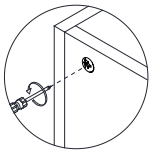

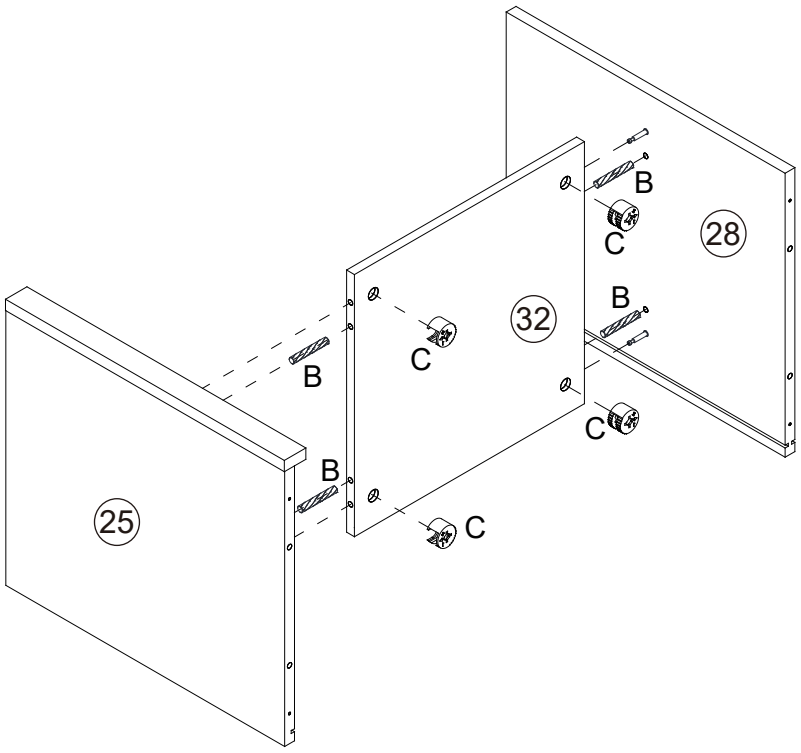

C


Cam lock x 4

B


6*30mm Dowel x 4

Assembly Instructions

Step 27

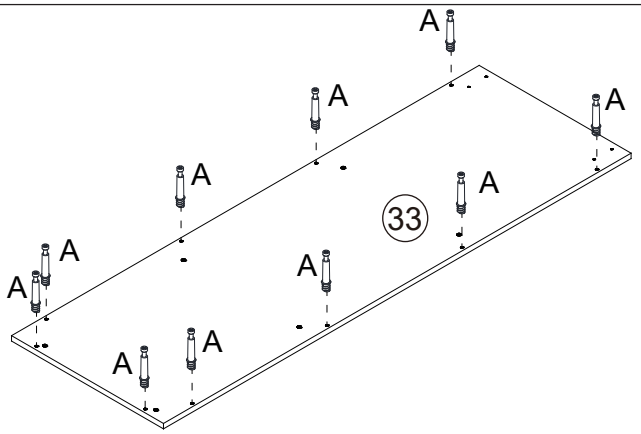


A



Cam Bolt x 10

Step 28

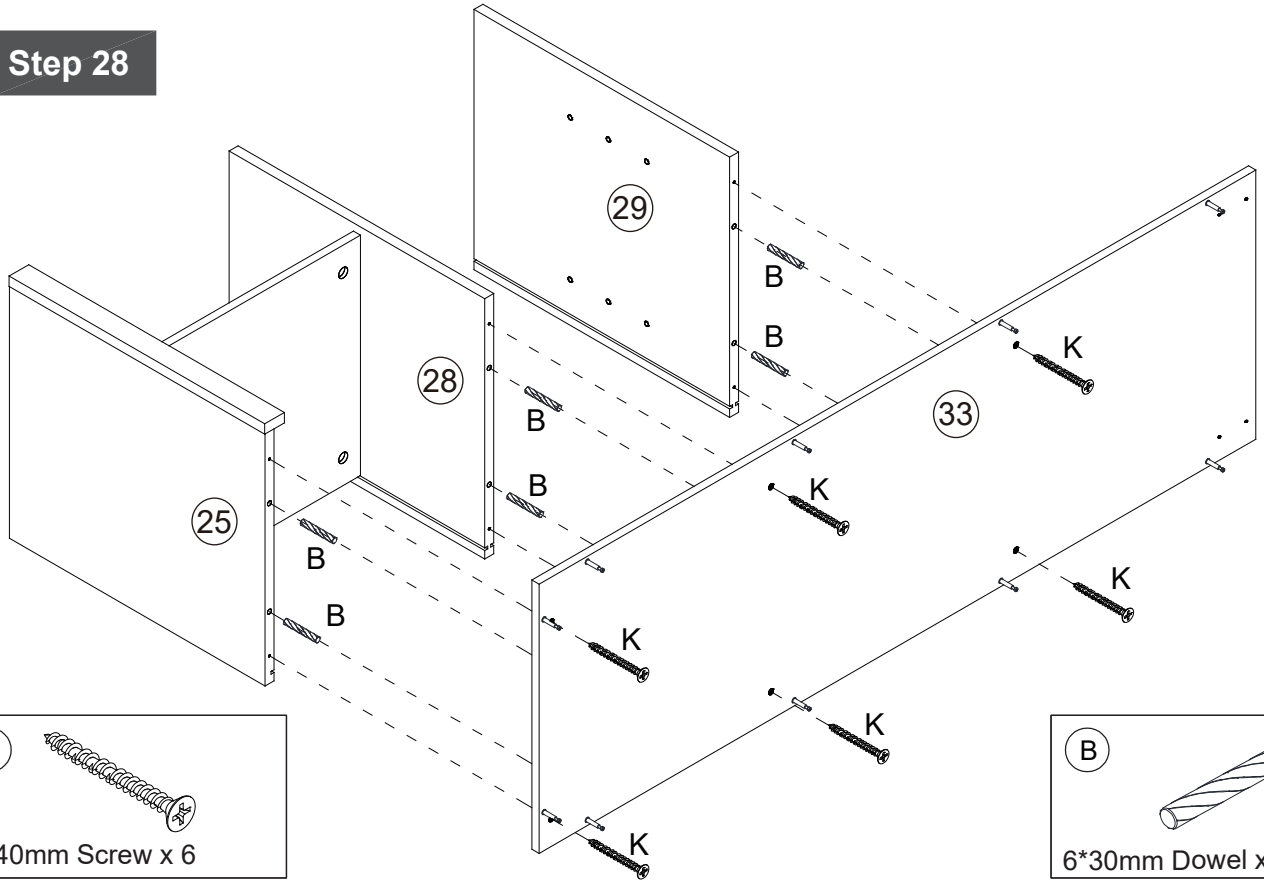

K


4*40mm Screw x 6

B


6*30mm Dowel x 6

Step 29

x2

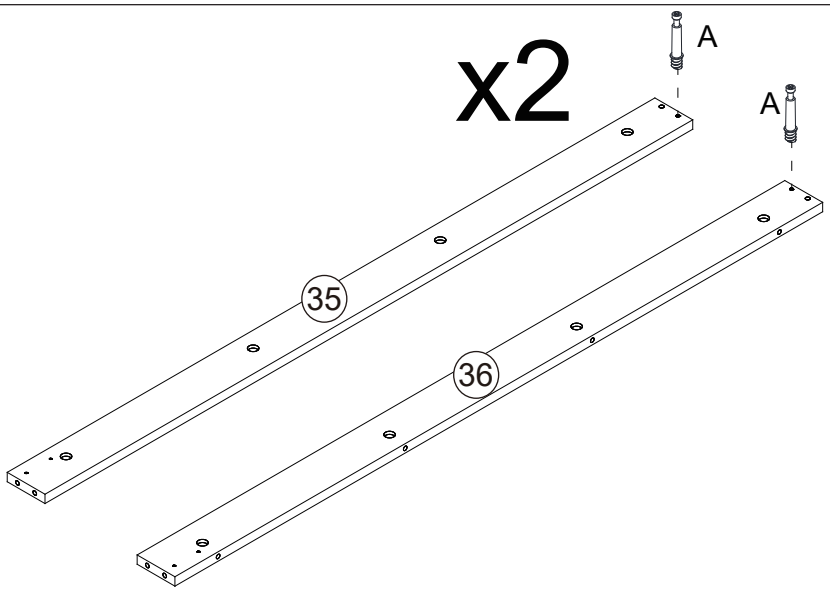

A




Cam Bolt x 4

Assembly Instructions

Step 30

x2

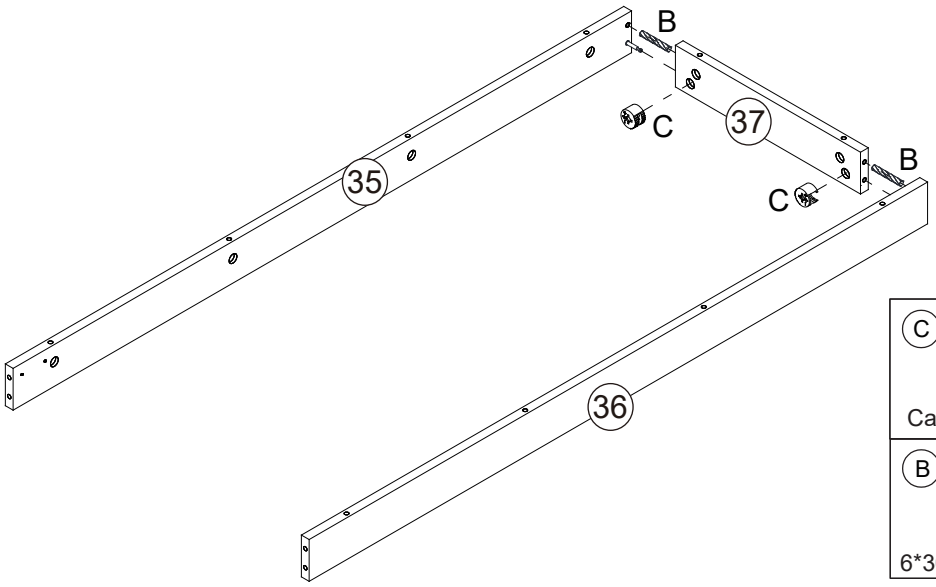

C




Cam lock x 4

B



6*30mm Dowel x 4

Step 31

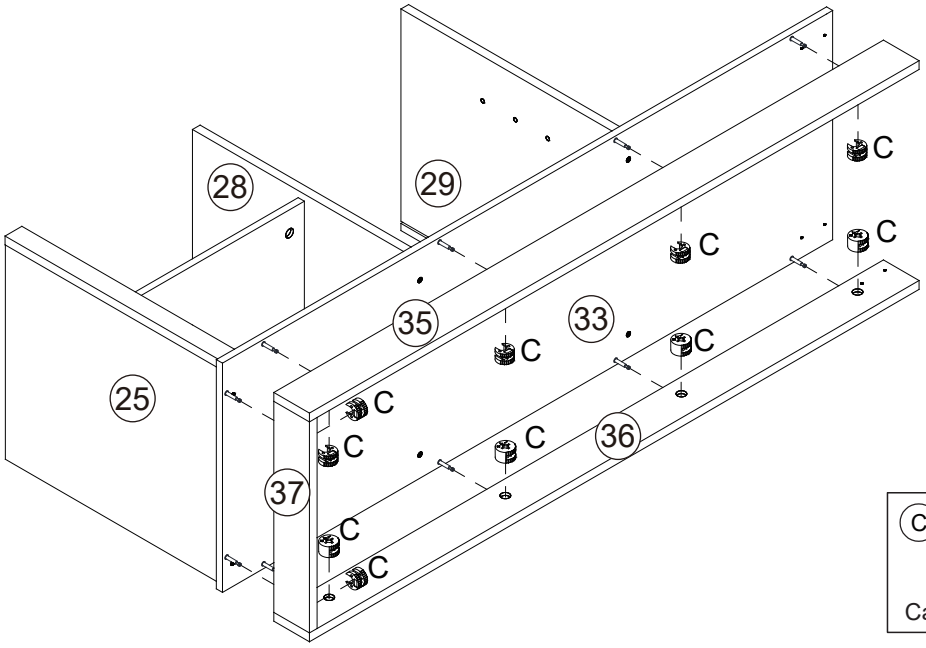


C



Cam lock x 10

Step 32

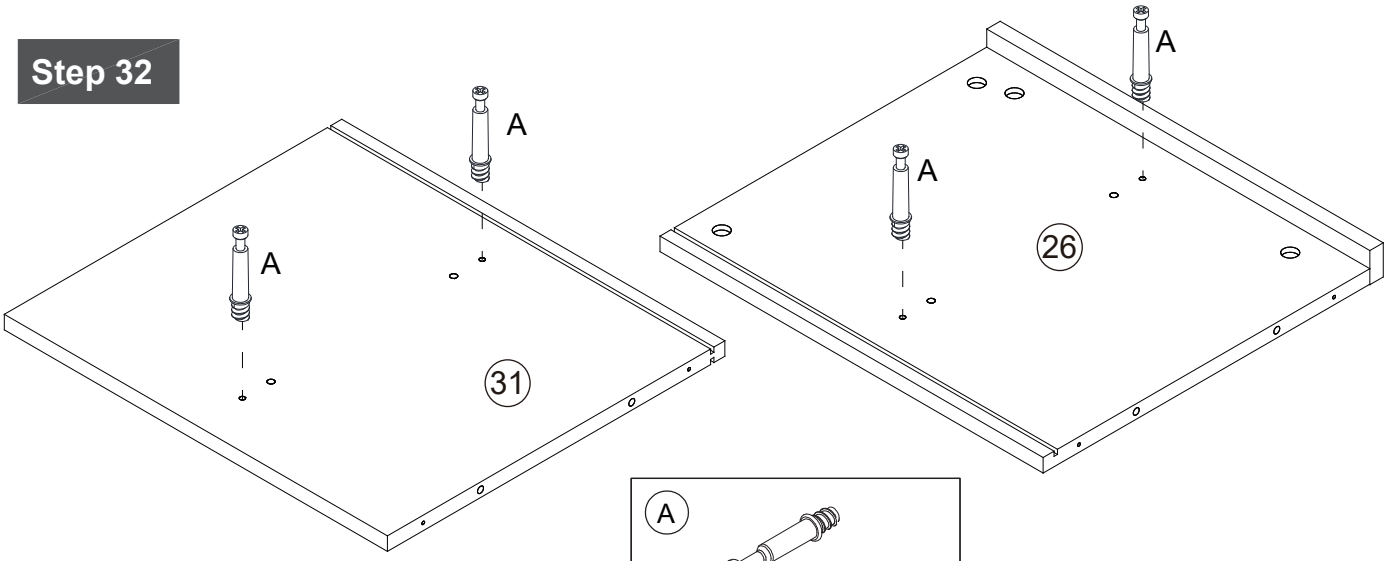


A

Cam Bolt x 4

Assembly Instructions


Step 33

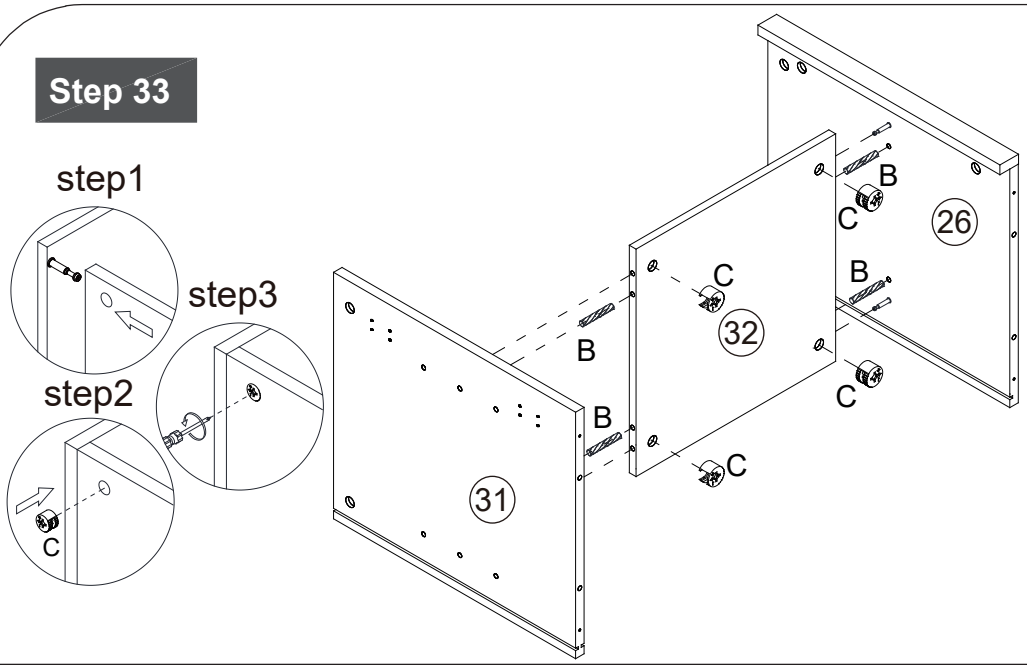

C
Cam lock x 4


B
6*30mm Dowel x 4

Step 34

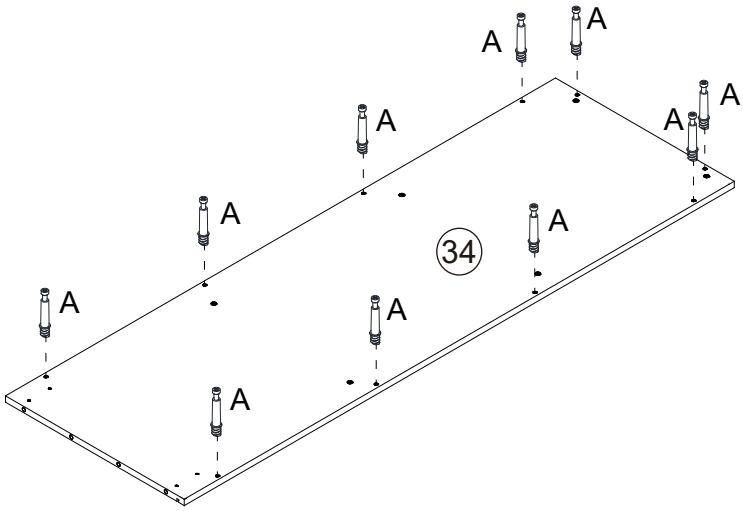

A
Cam Bolt x 10

Step 35

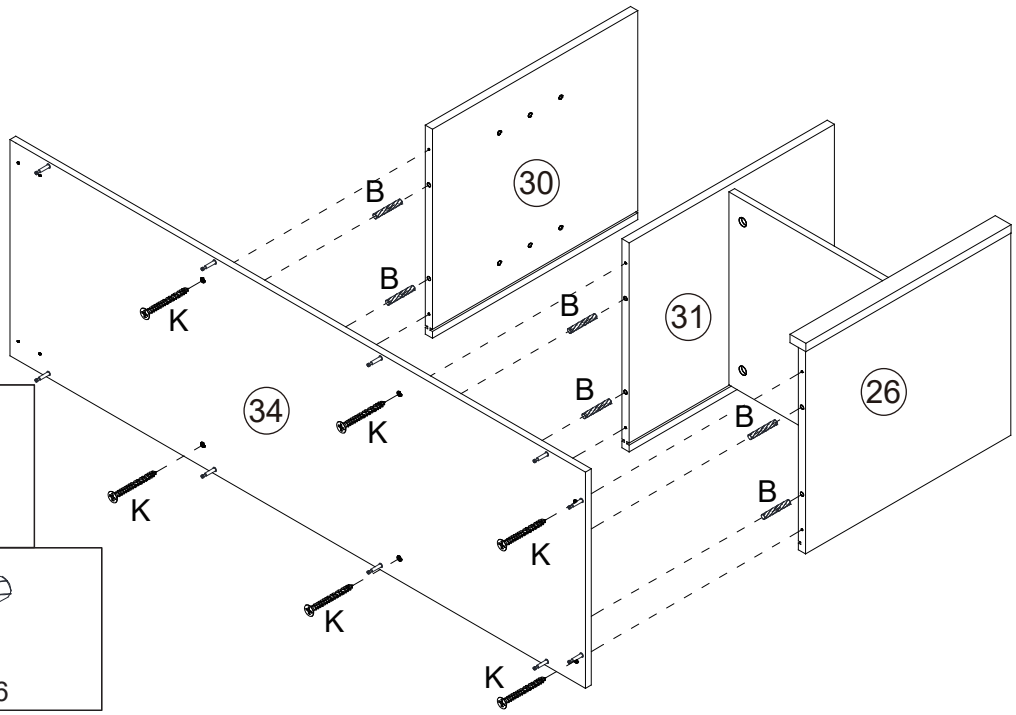


K
4*40mm Screw x 6

B
6*30mm Dowel x 6

Assembly Instructions

Step 36

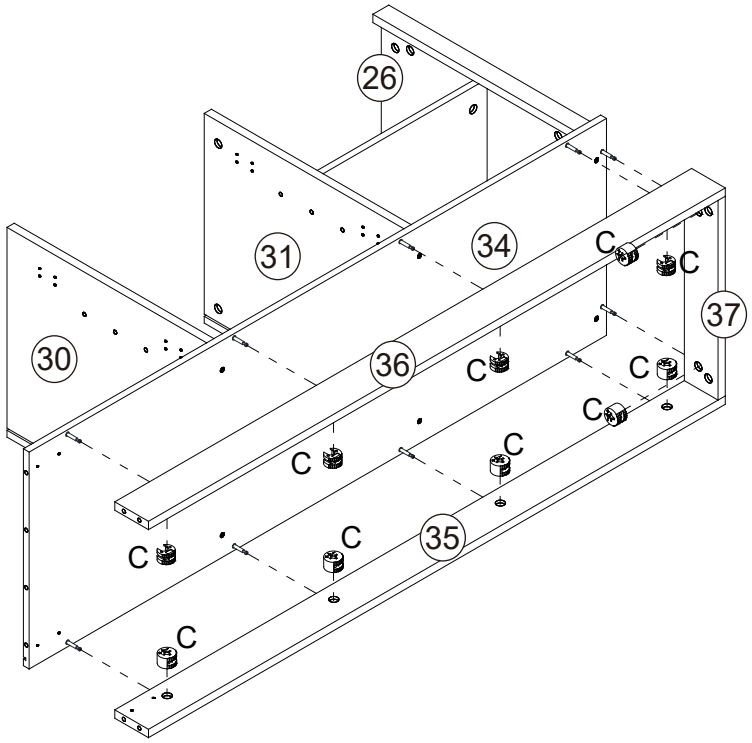


C



Cam lock x 10


Step 37

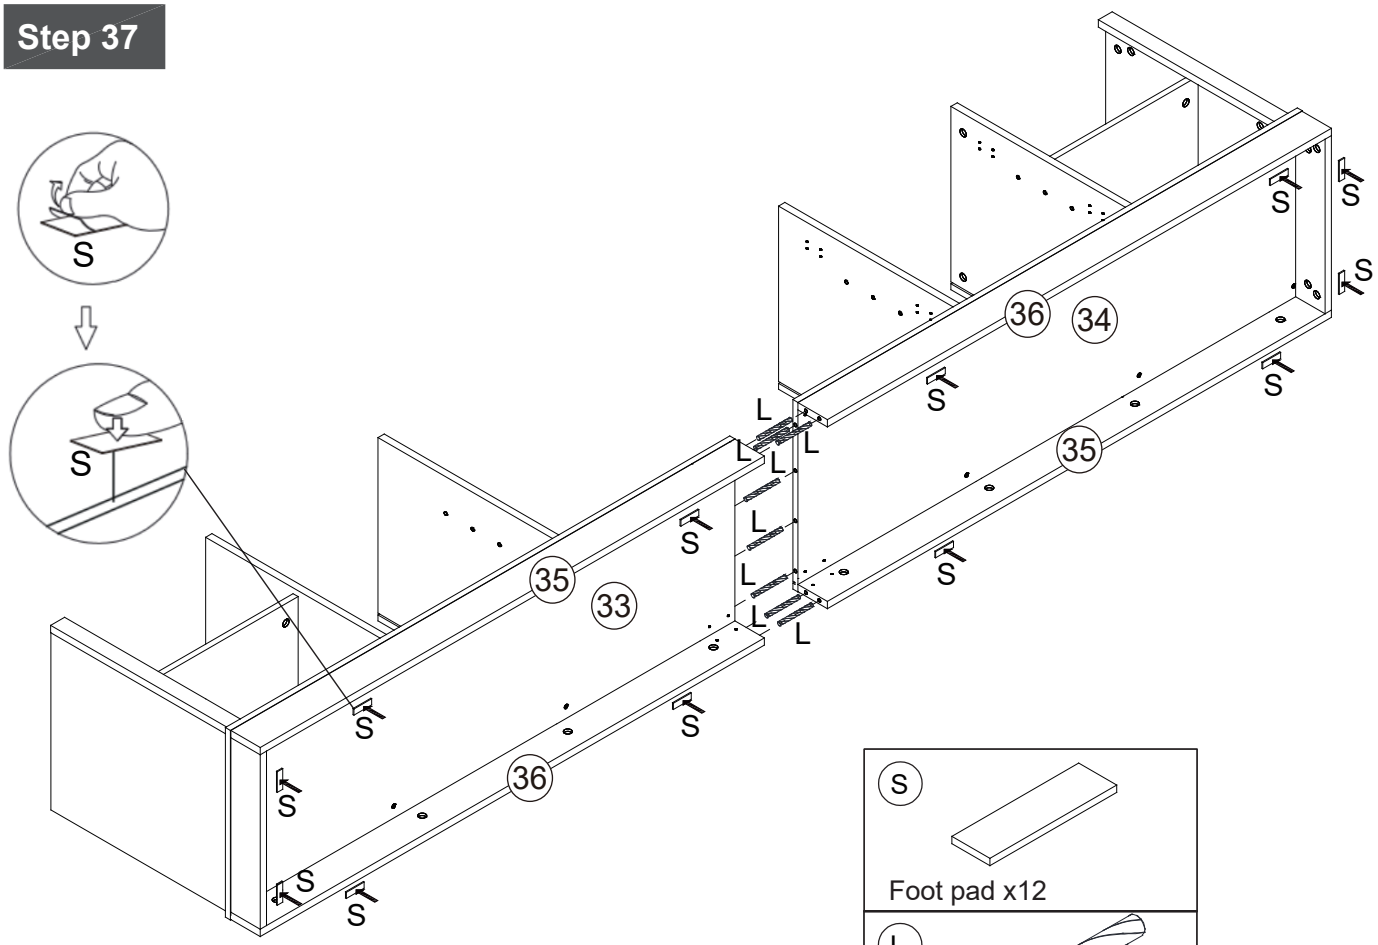

S

Foot pad x12


L

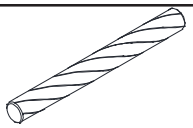


6*40mm Dowel x 8

Assembly Instructions

Step 38

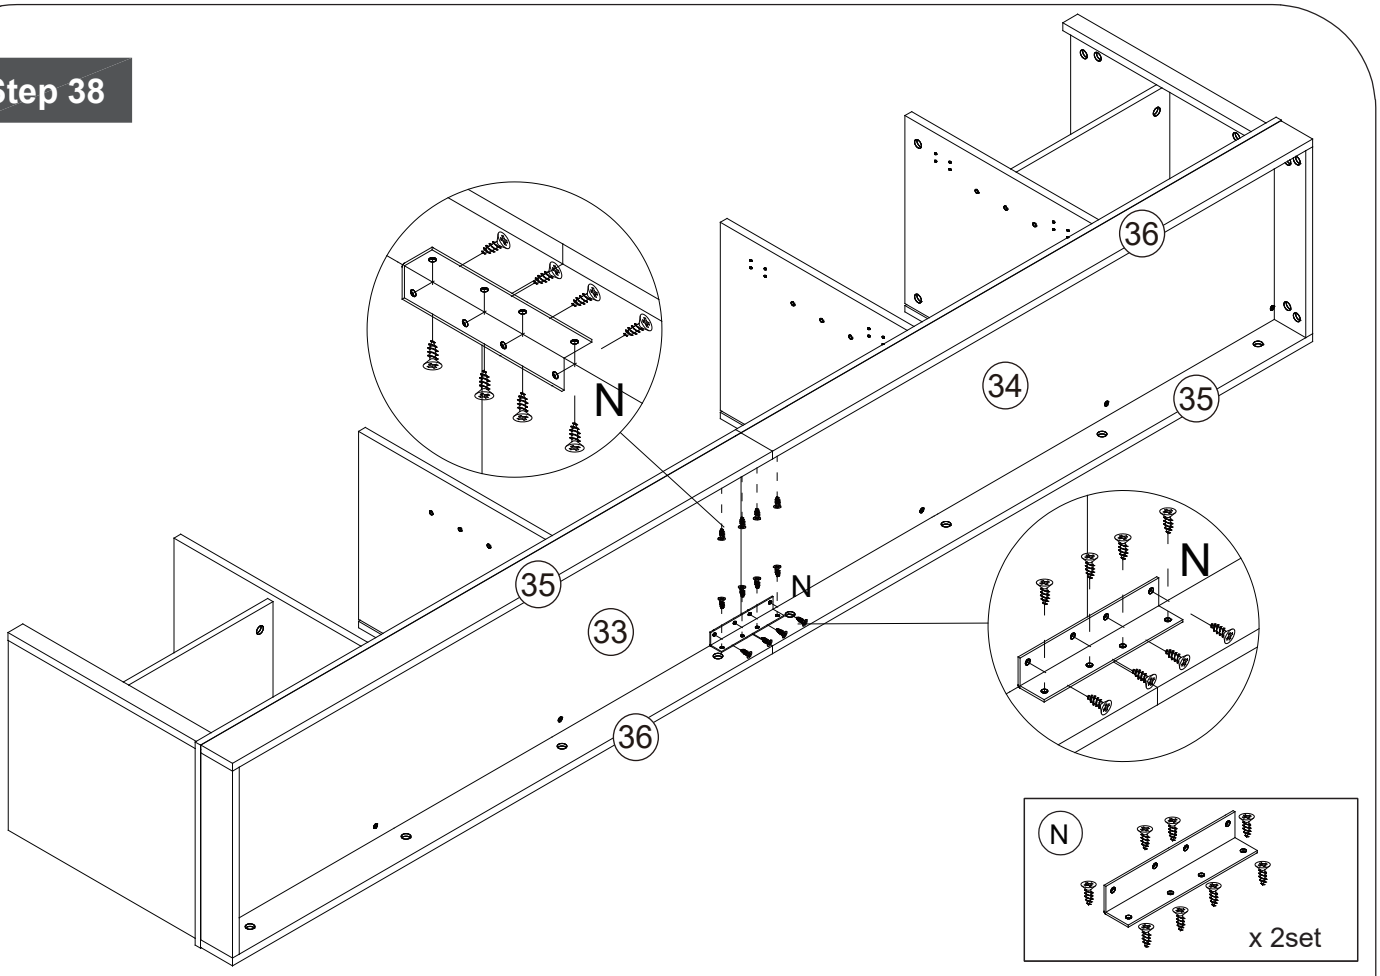



Step 39

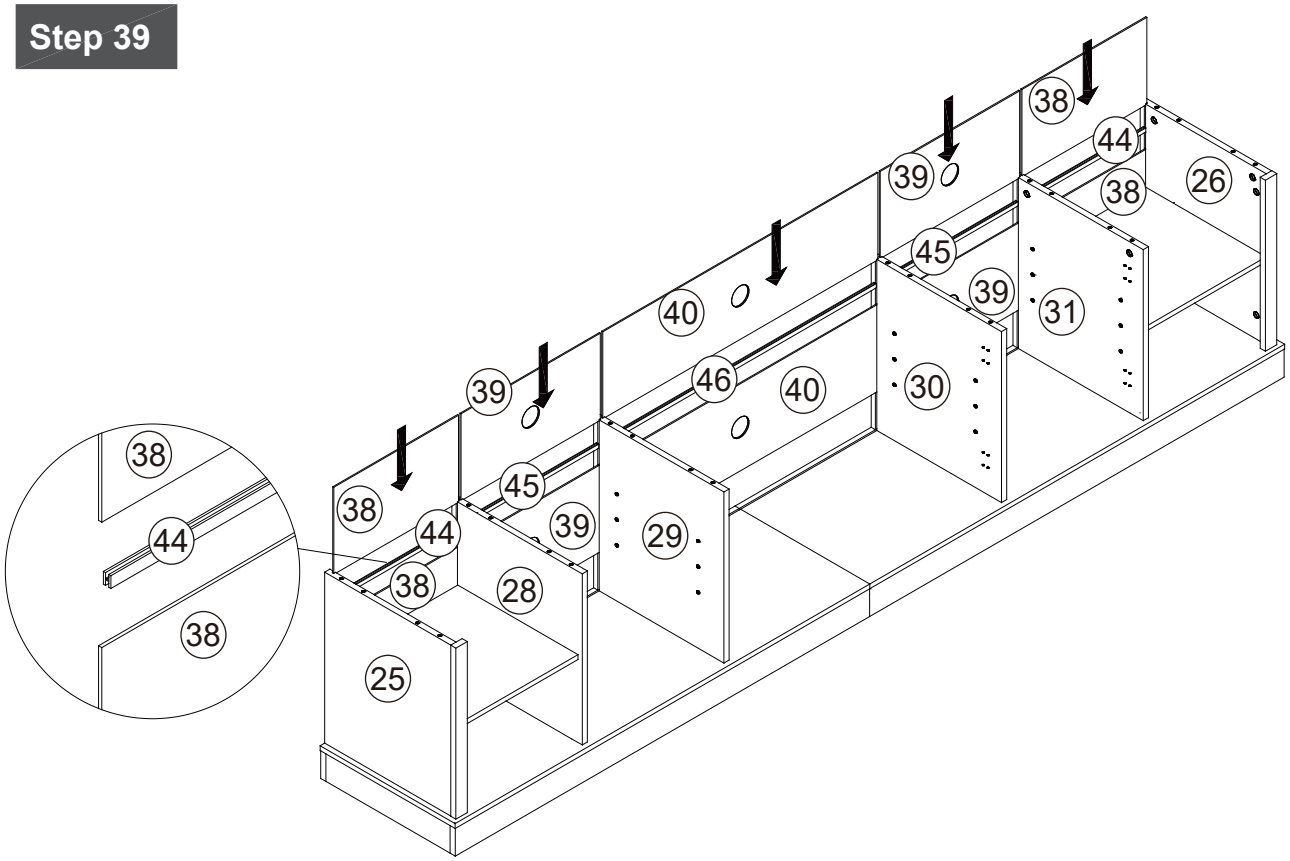

Assembly Instructions

Step 40

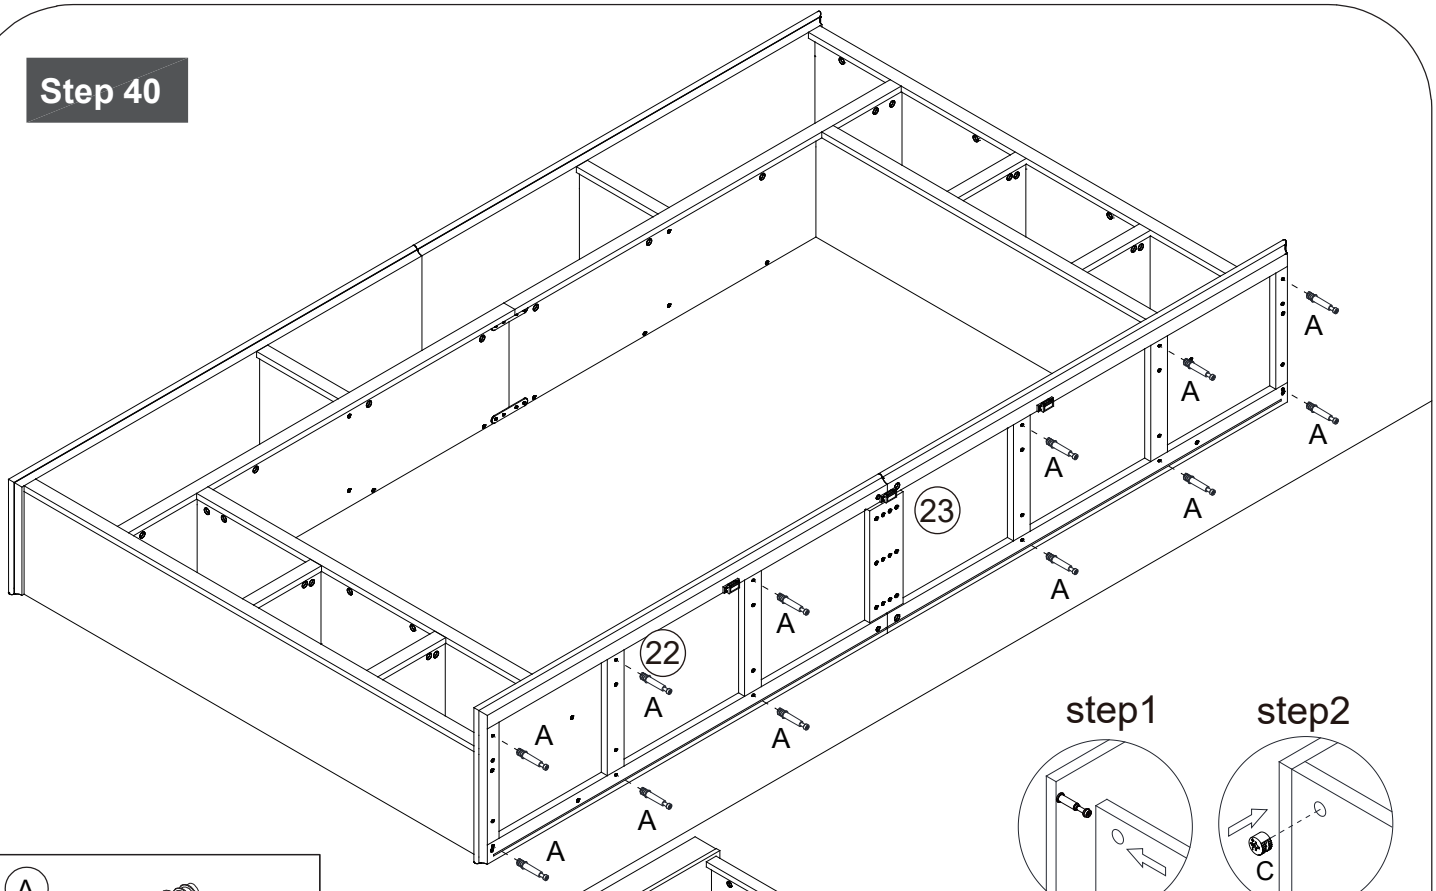

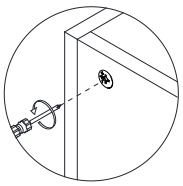

A

Cam Bolt x 12

B


6*30mm Dowel x 12

C

Cam lock x 12


Assembly Instructions

Step 41

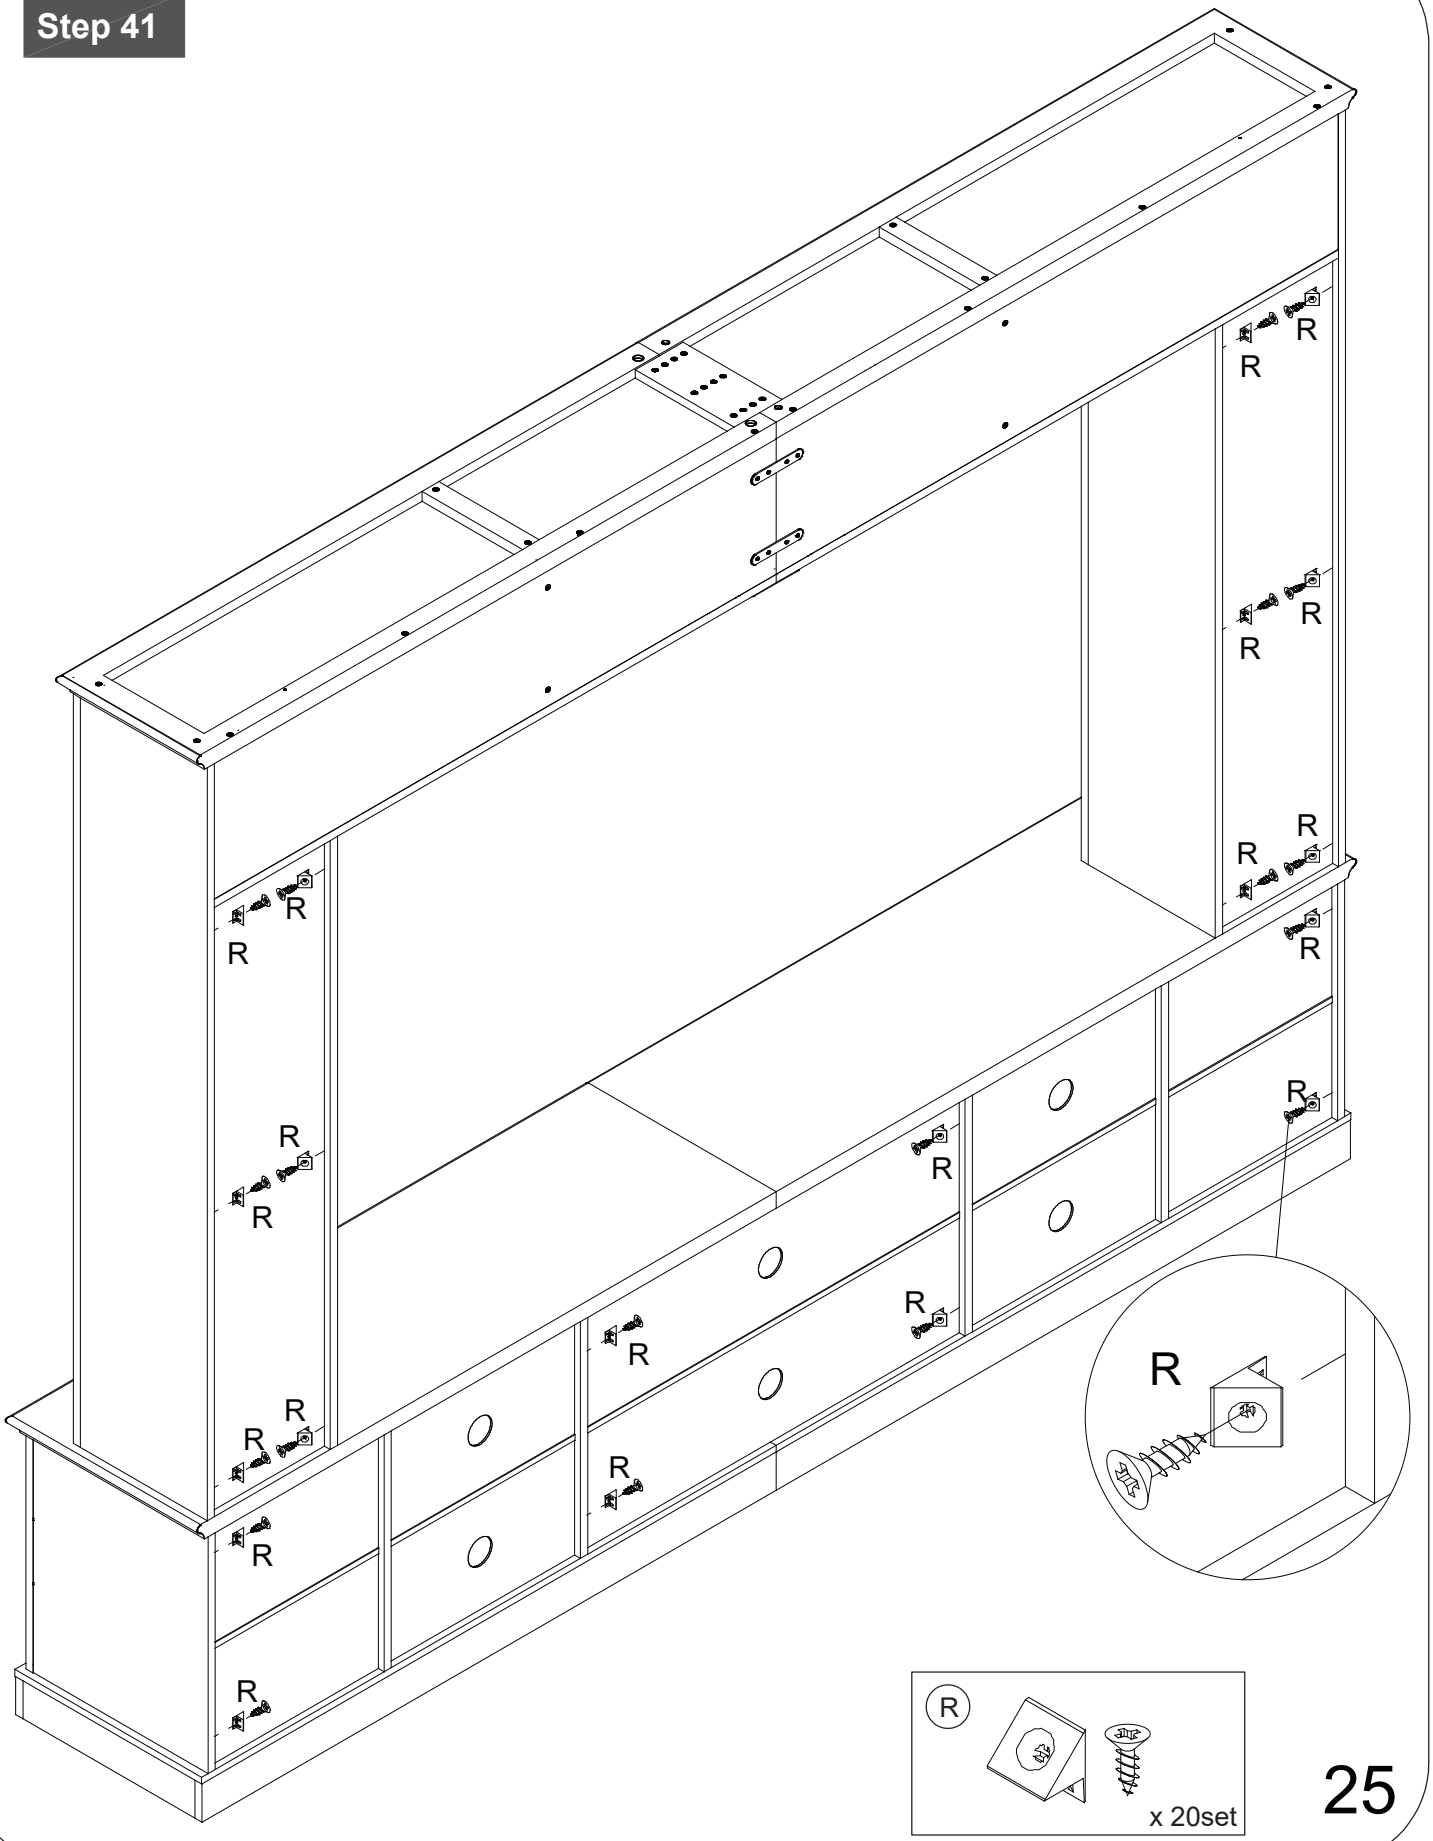
R
R
R

Assembly Instructions

Step 42

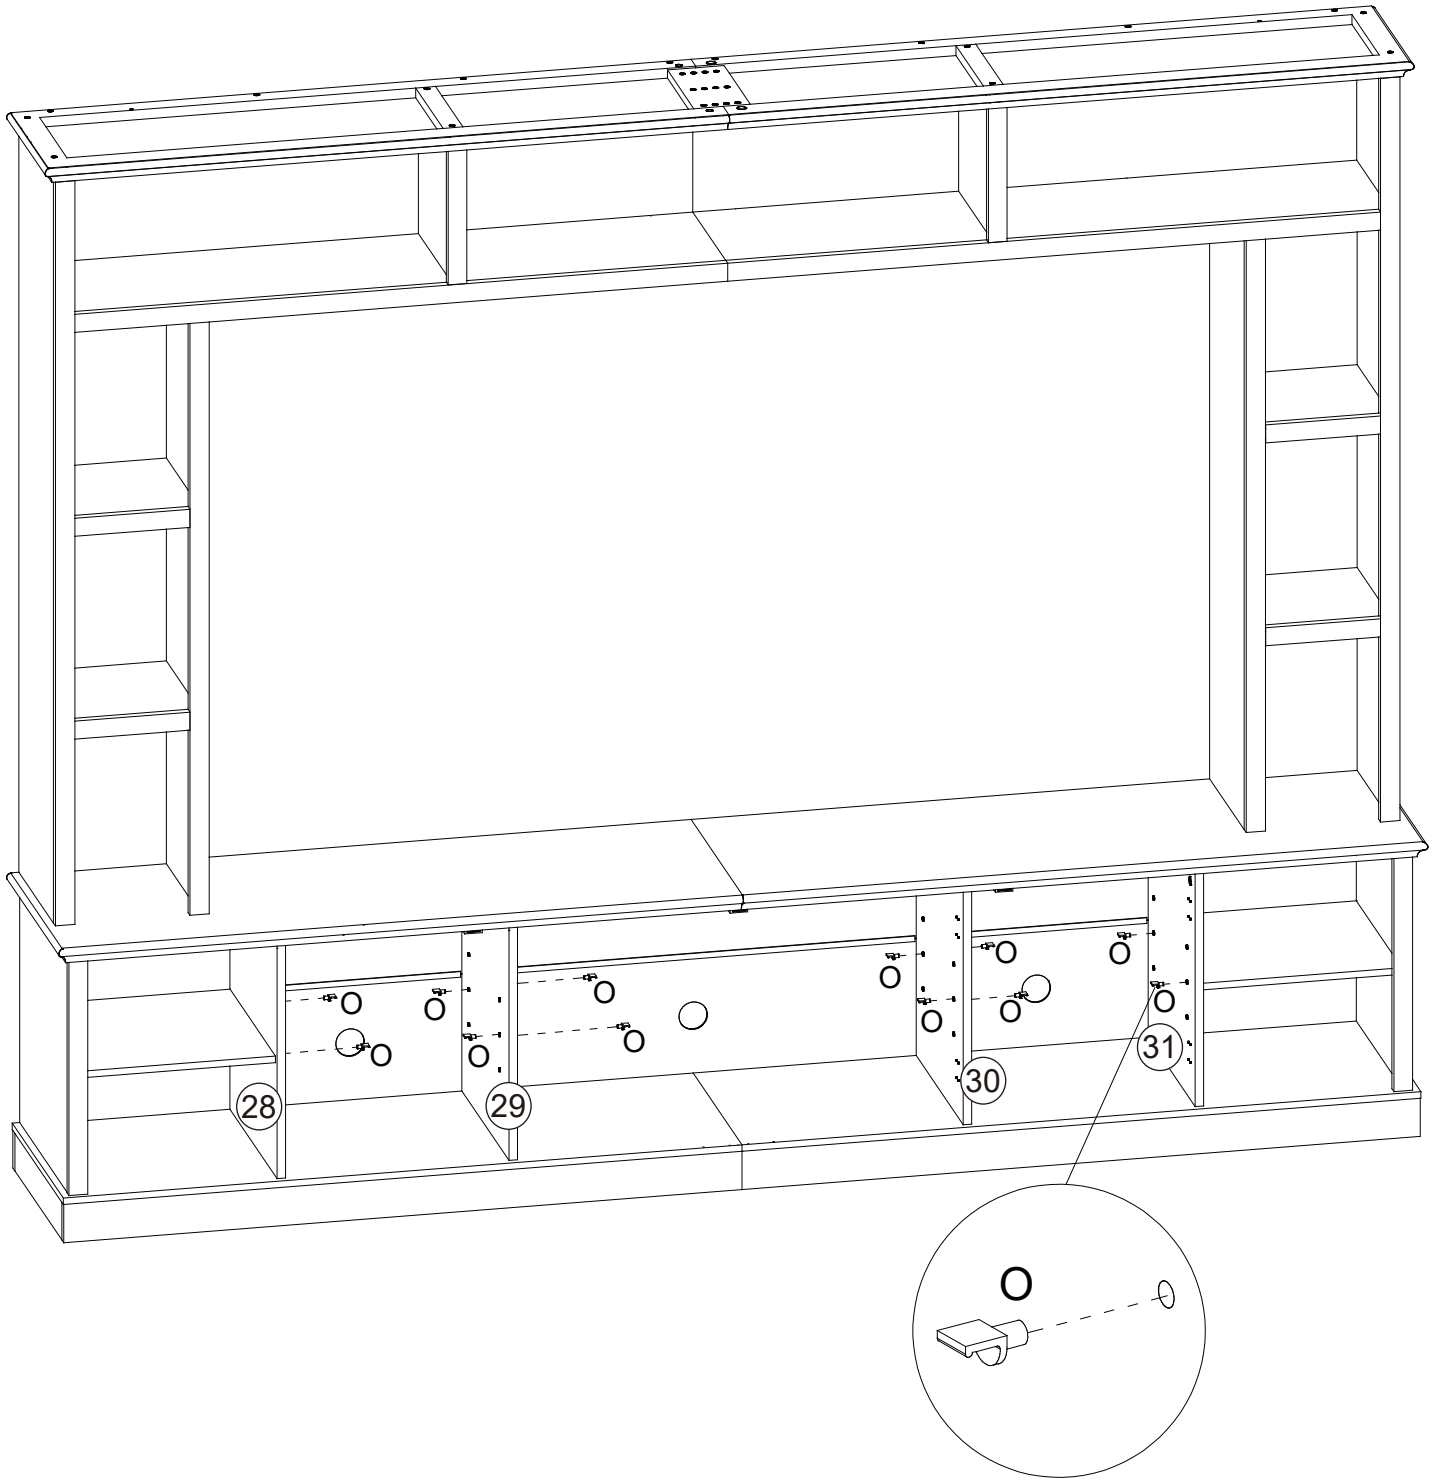


O


Shelf support pin x 12


Assembly Instructions

Step 43



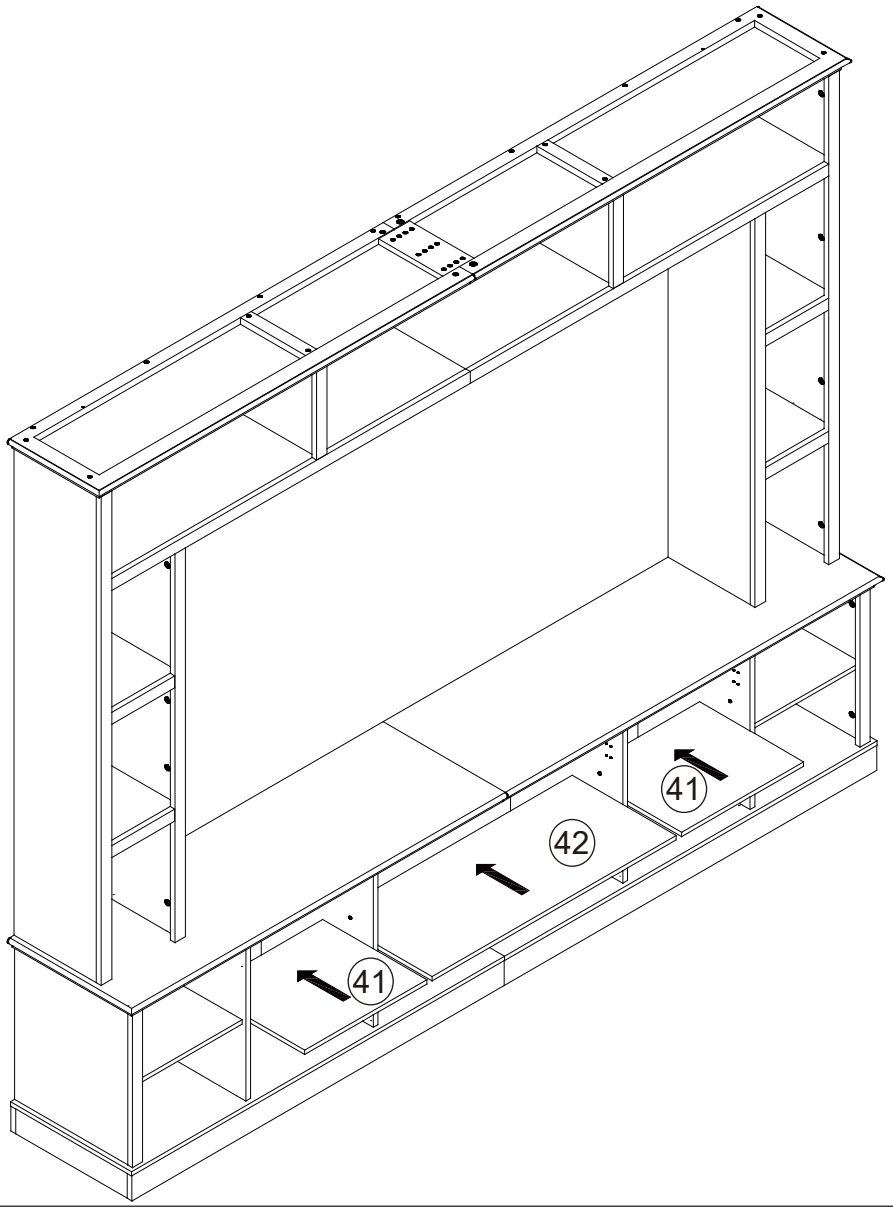


Step 44

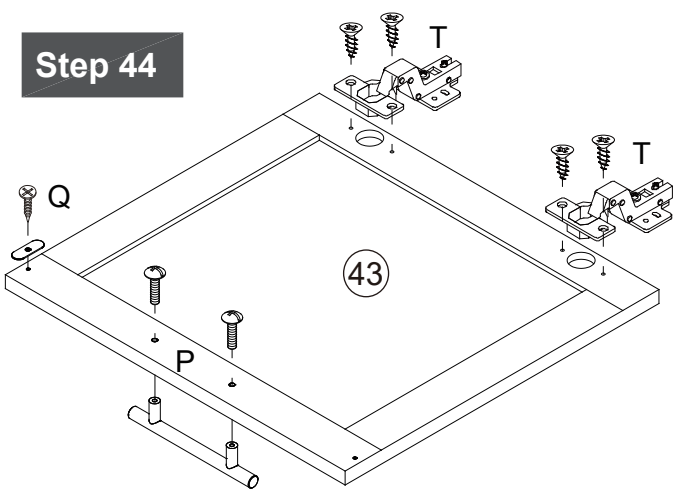

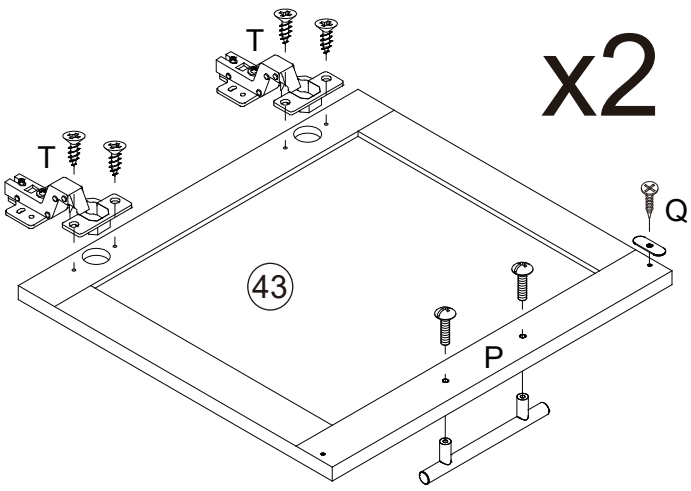


x2

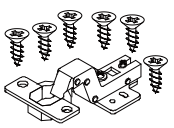
P	Q	T
 4*20mm Handle x 4set	 x 4set	 3.5*14mm Hinge x 8set

Assembly Instructions


Step 45

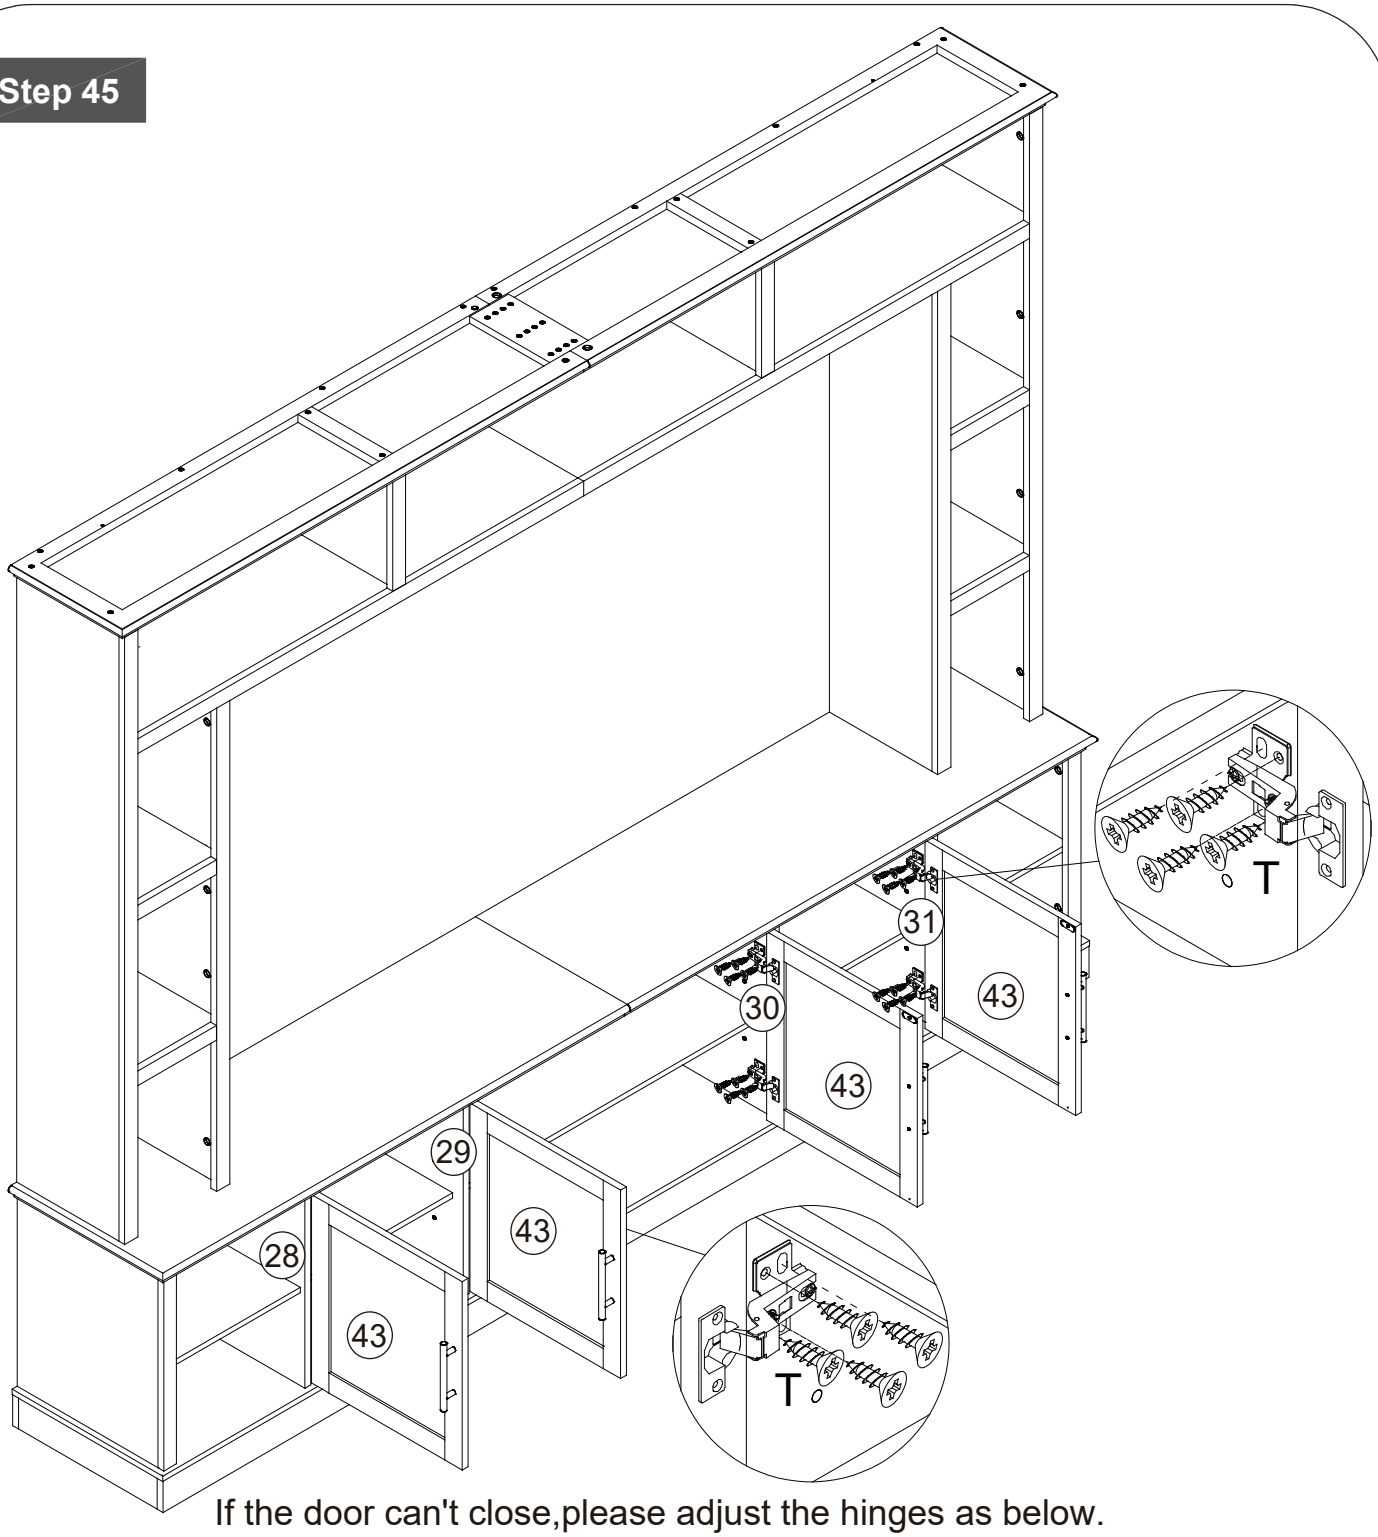


If the door can't close,please adjust the hinges as below.

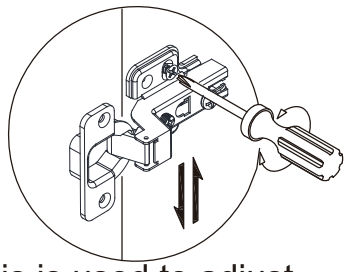

This is used to adjust the door panel in the up and down direction.

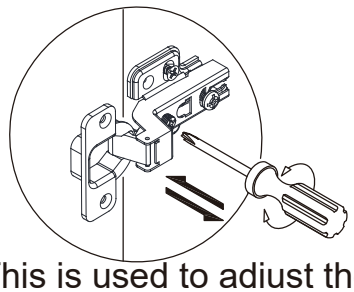


This is used to adiust the door panel in the left and right direction.

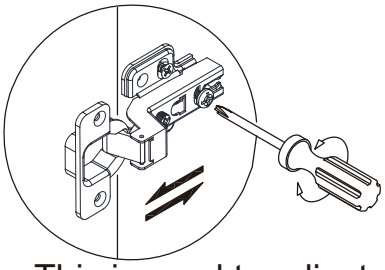


This is used to adjust the door panel in the front and rear.

Assembly Instructions

Step 46

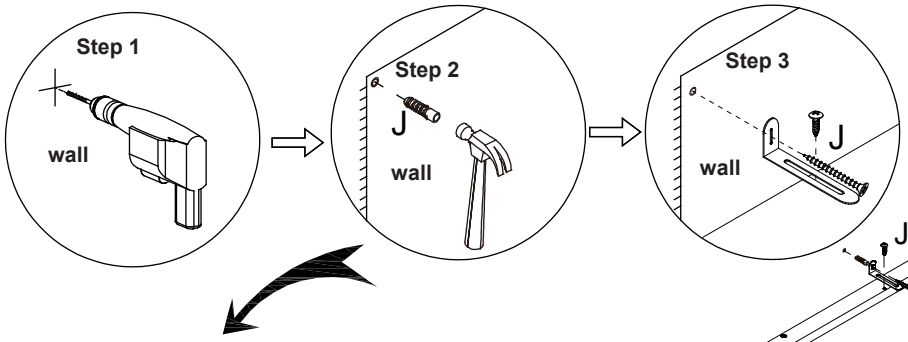

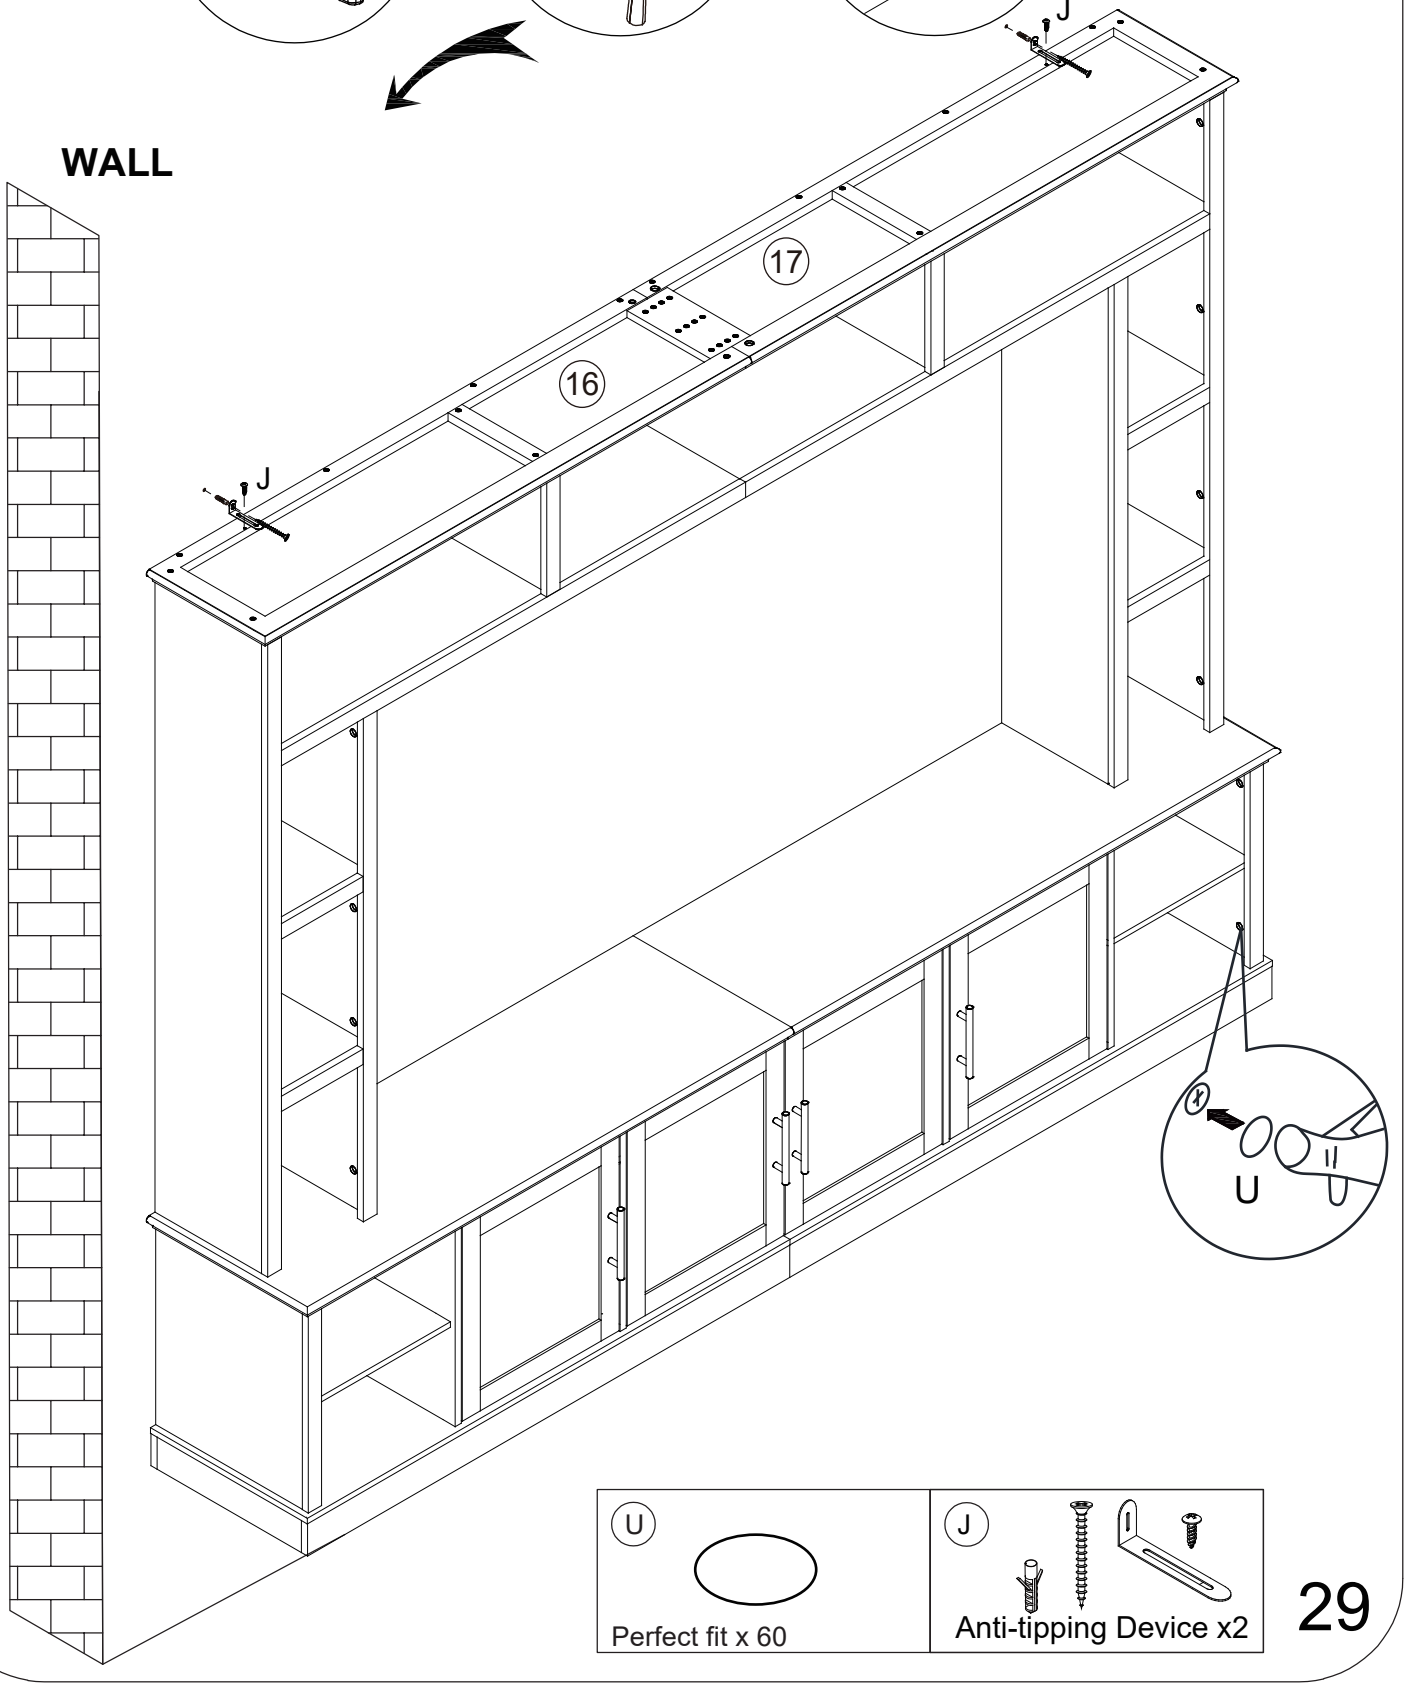

U	J
Perfect fit x 60	Anti-tipping Device x2

Assembly Instructions

Finish

