


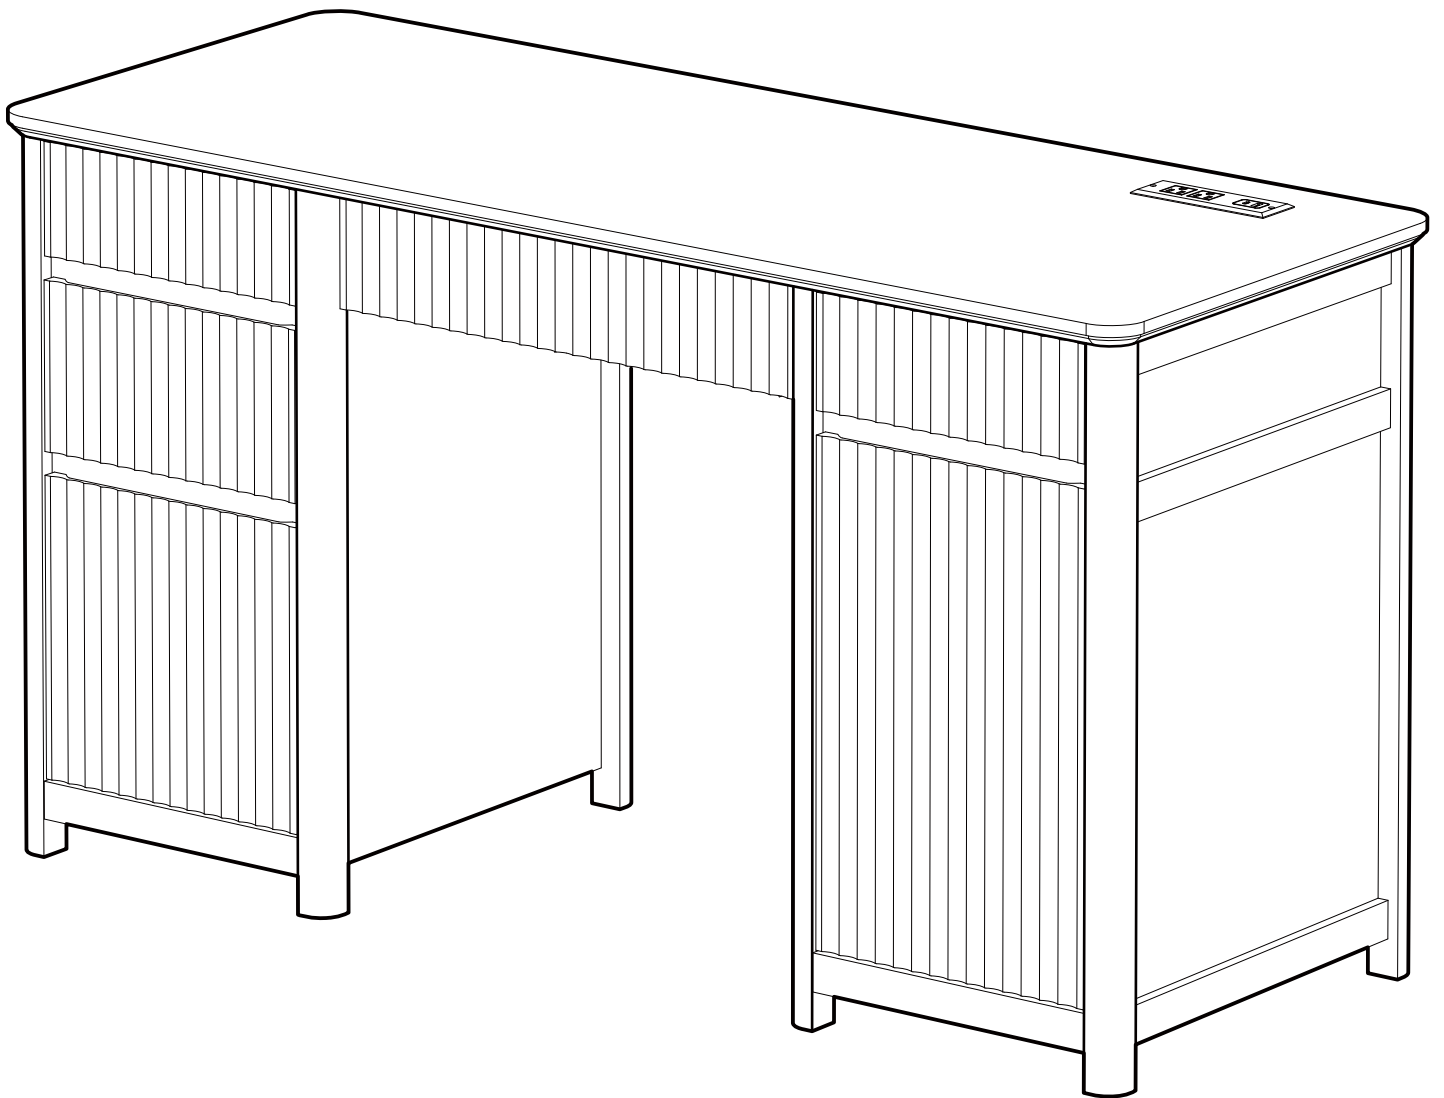
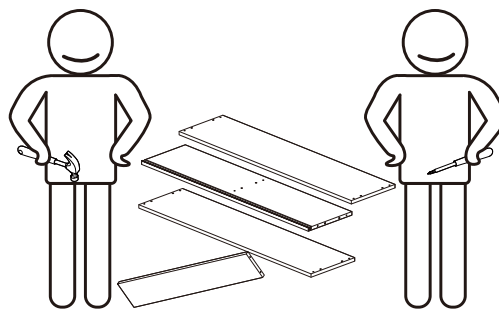


ASSEMBLY INSTRUCTIONS


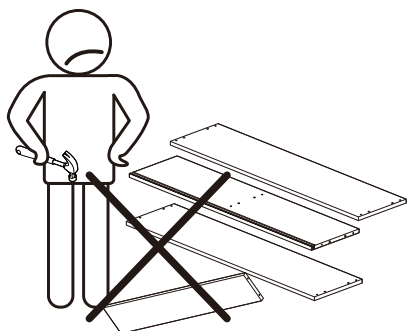


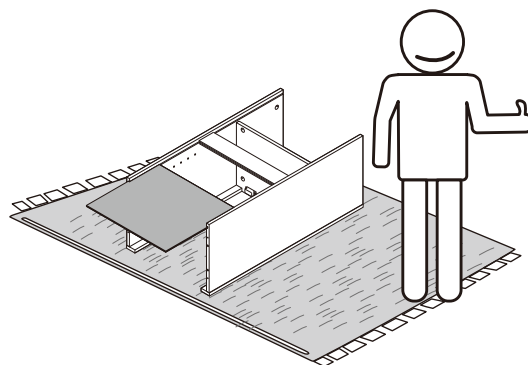



We recommend at least 2 people for the assembly.

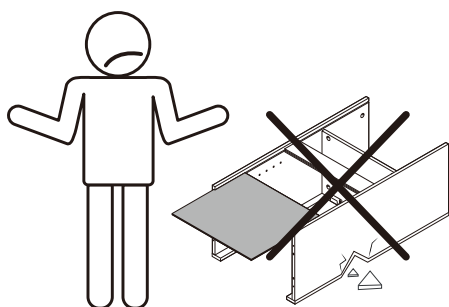



To prevent any damage during assembly, place a mat under the pieces.

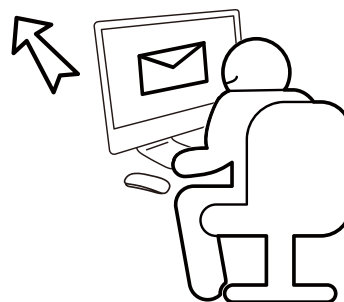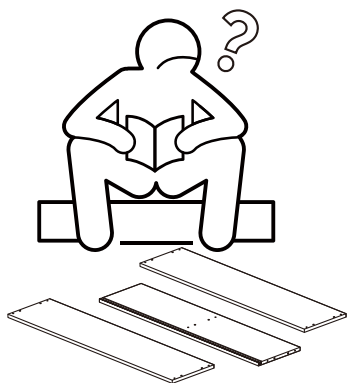


PARTS DIAGRAM

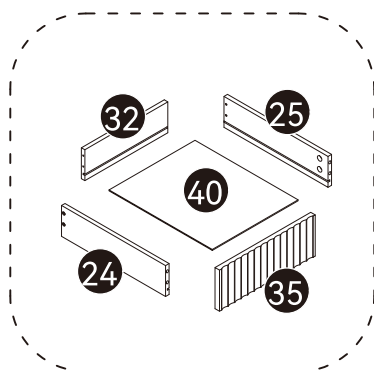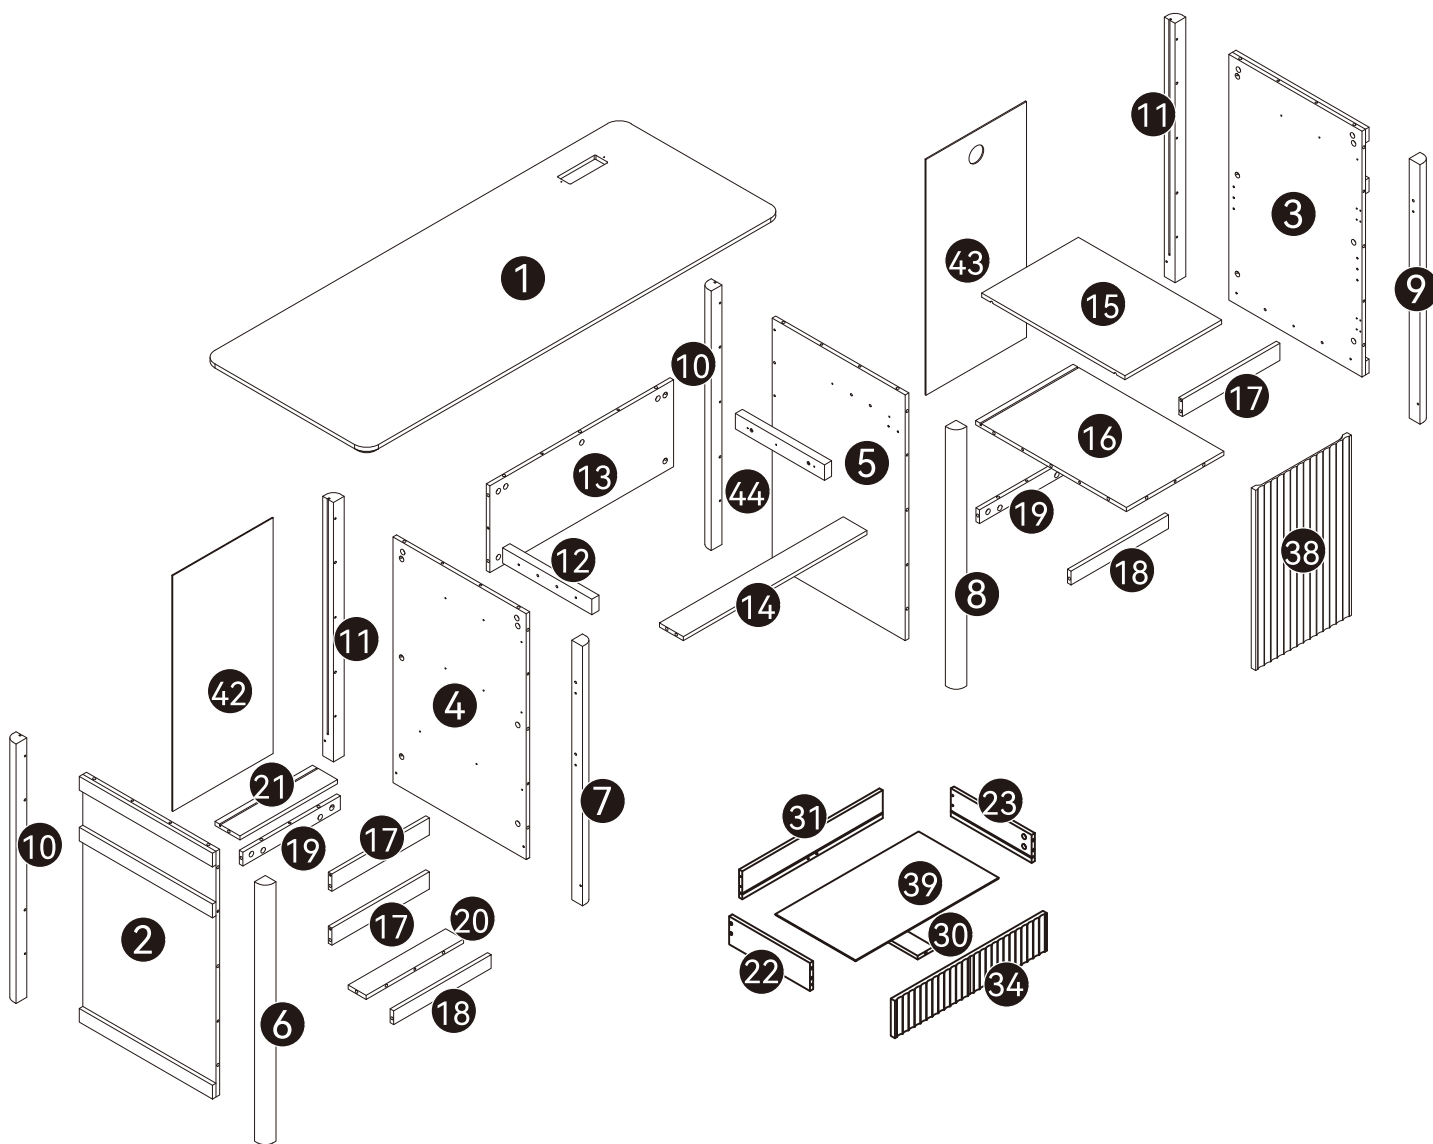


x2

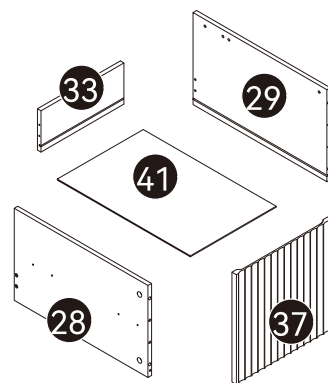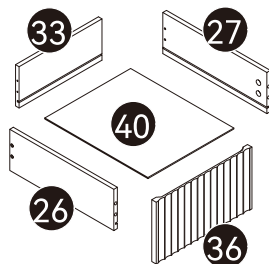


PARTS LIST

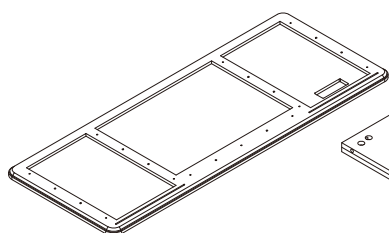


1 x 1

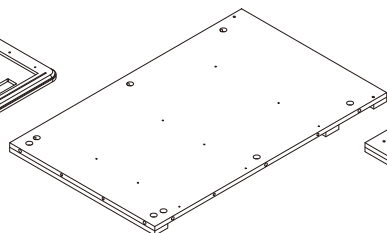


2 x 1

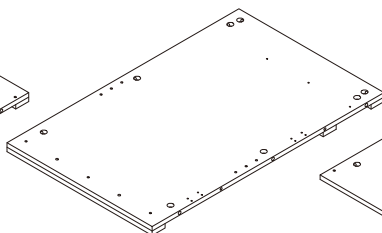


3 x 1

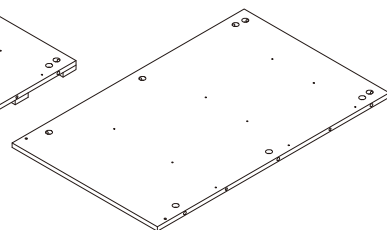


4 x 1

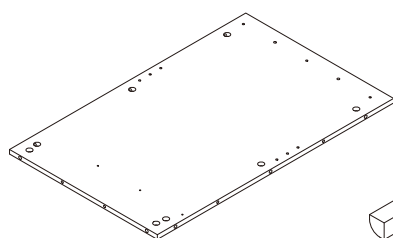


5 x 1

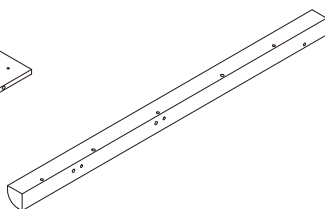


6 x 1

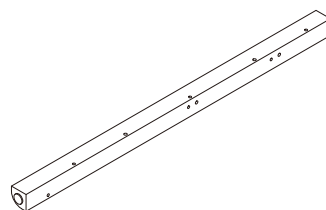


7 x 1

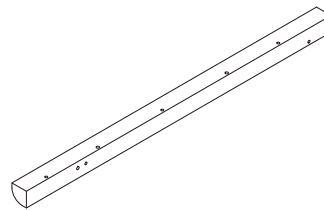


8 x 1

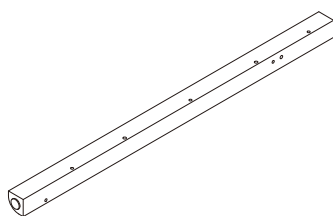


9 x 1

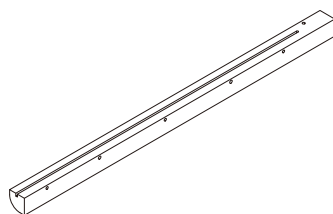


10 x 2

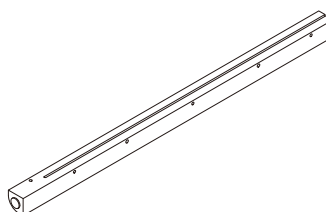


11 x 2

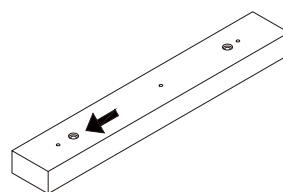


12 x 1

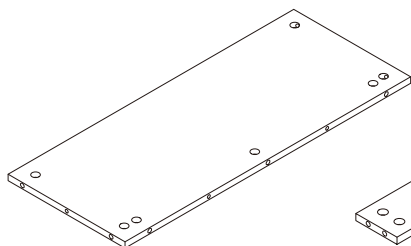


13 x 1

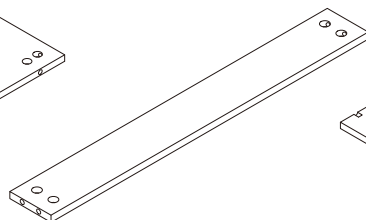


14 x 1

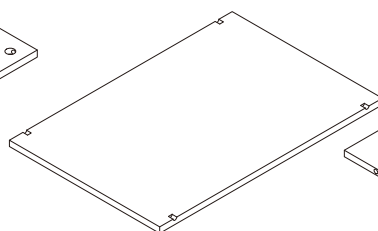


15 x 1

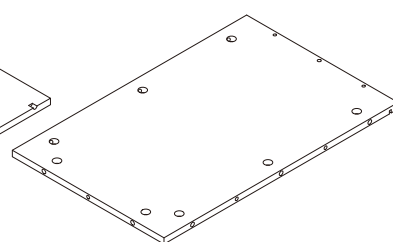


16 x 1

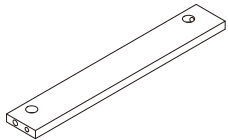


17 x 3

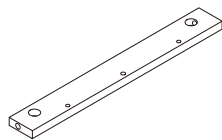


18 x 2

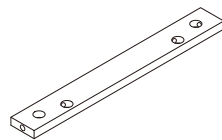


19 x 2

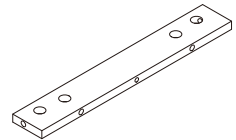


20 x 1

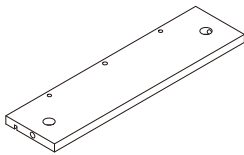


21 x 1

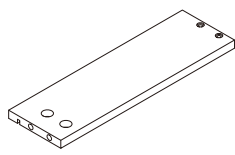


22 x 1

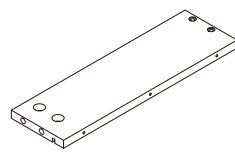


23 x 1

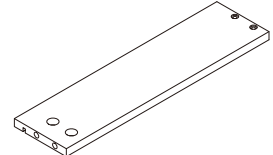


24 x 2

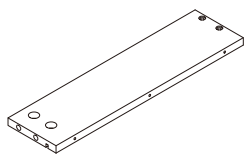


25 x 2

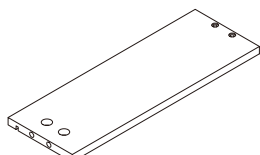


26 x 1

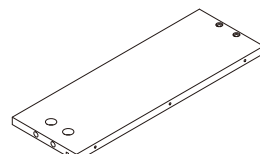


27 x 1

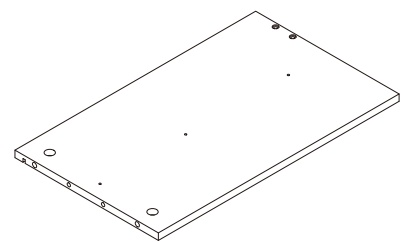


28 x 1

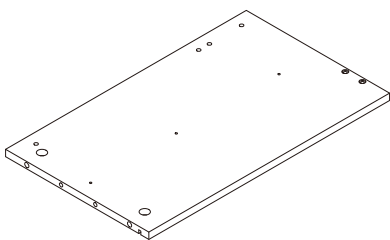


29 x 1

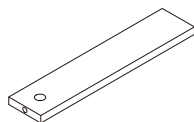


30 x 1

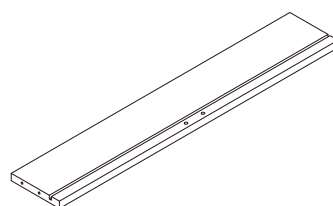


31 x 1

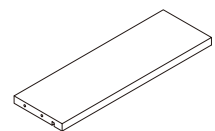


32 x 2

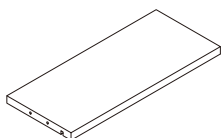


33 x 2

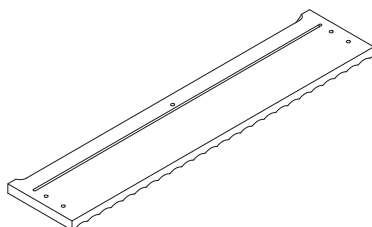


34 x 1

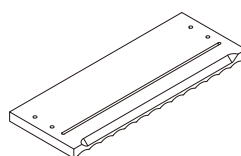


35 x 2

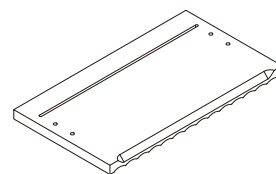


36 x 1

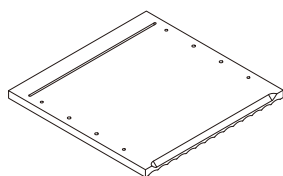


37 x 1

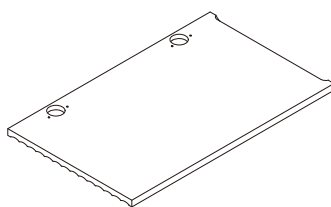


38 x 1

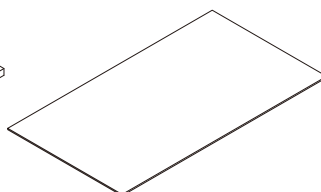


39 x 1

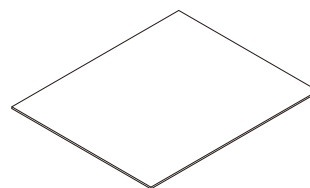


40 x 3

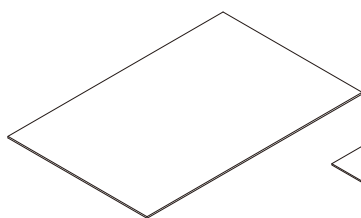


41 x 1

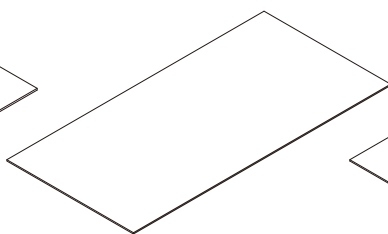

42 x 1

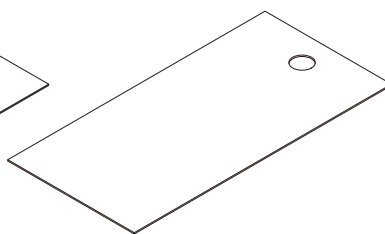


43 x 1

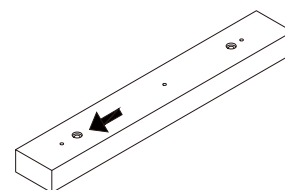


44 x 1

HARDWARES

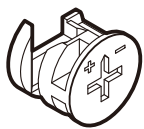


Ø15x9.5mm

A x 96

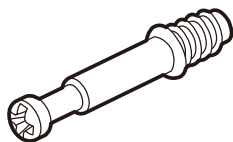

Ø6.5x30mm

B x 96

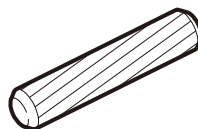

Ø6x30mm

C x 50



M3.5x12mm

D x 74



Ø4x30mm

E x 26




Ø21mm

F x 21



Ø5x16mm


G x 4

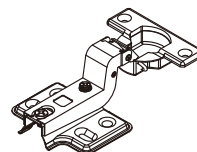

Ø35mm


H x 2

I x 1

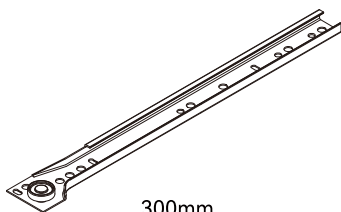


300mm

CL

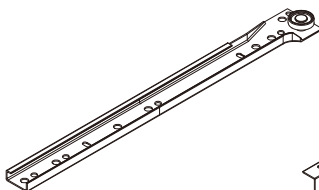


300mm

CR

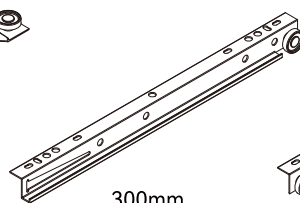

300mm


DL

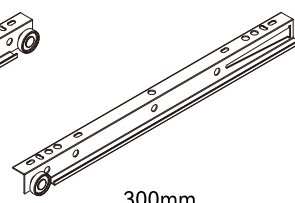

300mm


DR

J x 3

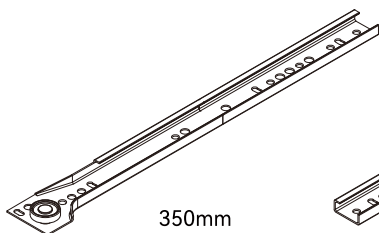


350mm

CL

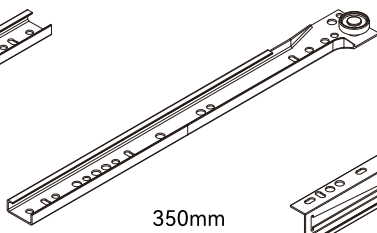


350mm

CR

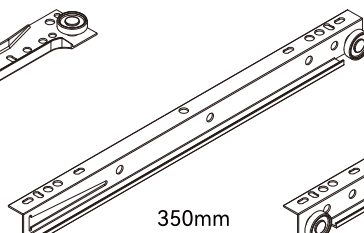


350mm

DL

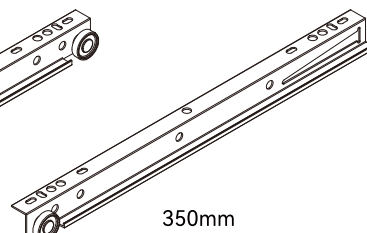


350mm

DR

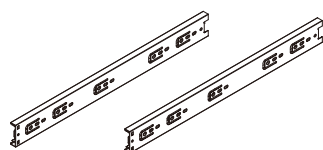

450mm


K x 1

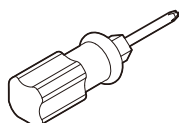


L x 1



M x 1

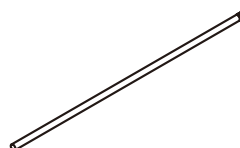

N x 2




O x 20

SPARE PARTS




The spare parts are the additional parts provided in case of missing or damaged ones. Keep the spare parts and tools for future use.

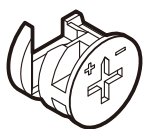


Ø15x9.5mm

A x 3

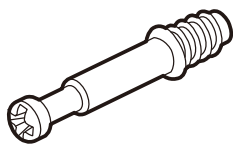

Ø6.5x30mm

B x 3

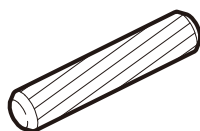

Ø6x30mm

C x 3



M3.5x12mm

D x 4



Ø4x30mm

E x 3




Ø21mm

F x 3



Ø5x16mm

G x 1





O x 2

CAM LOCK FASTEN SYSTEM




Insert the cam bolt into the hole, then insert the cam lock and tighten.



1

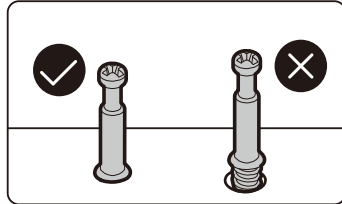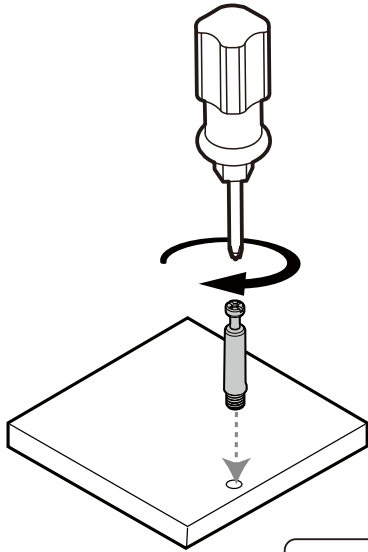

2



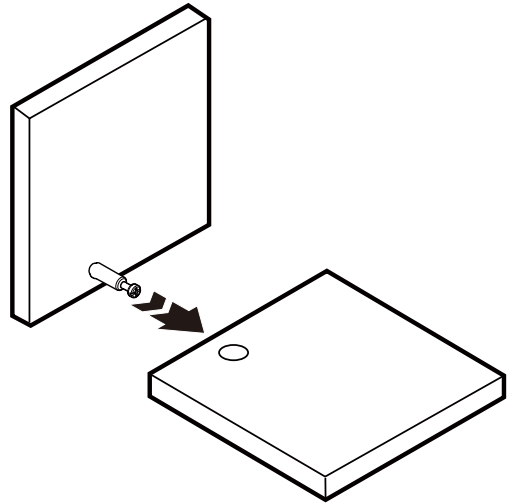


3

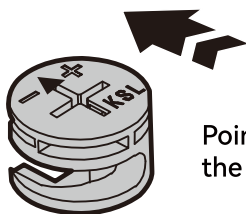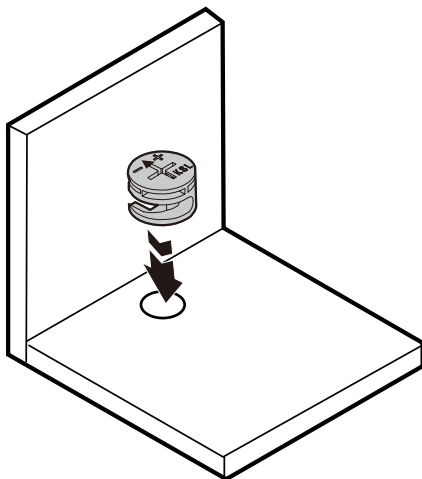


Point the opening towards the edge of the board.

4

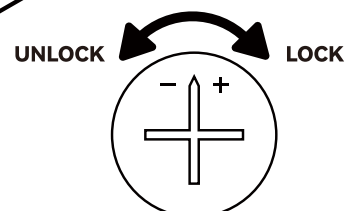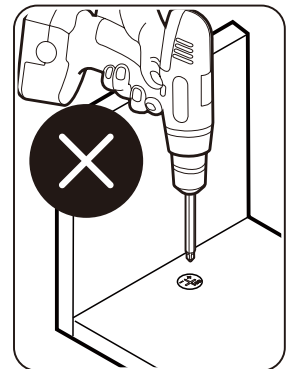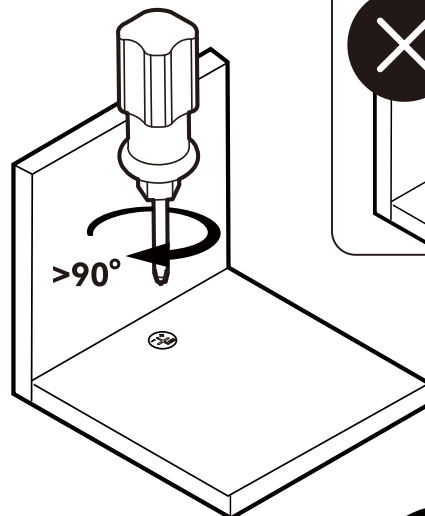

ASSEMBLY

1

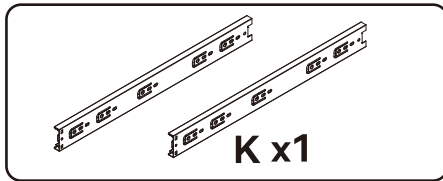

Slide Runner

K-2

Push up on
release lever

K-1

Slide Runner






K-2

Ball Bearing Slide




Ball Bearing Slide

K-1



2

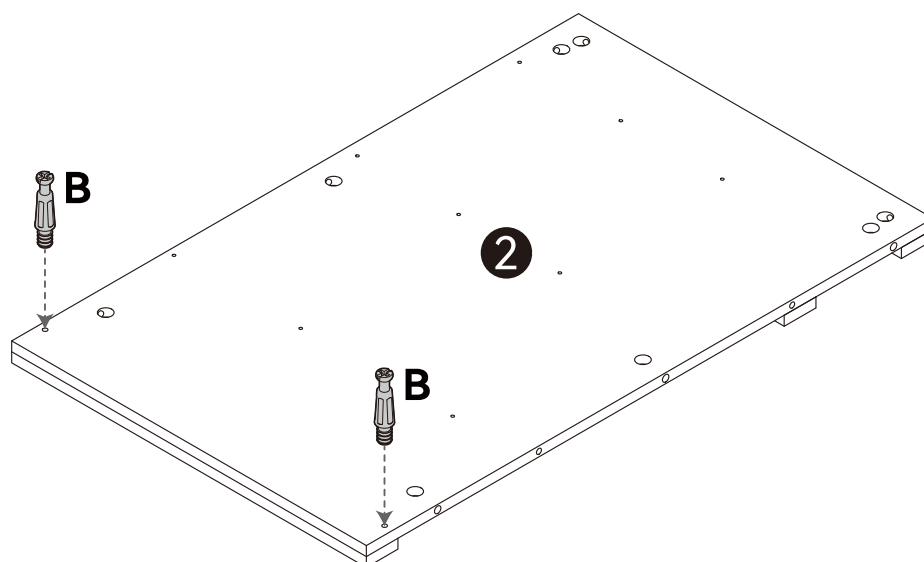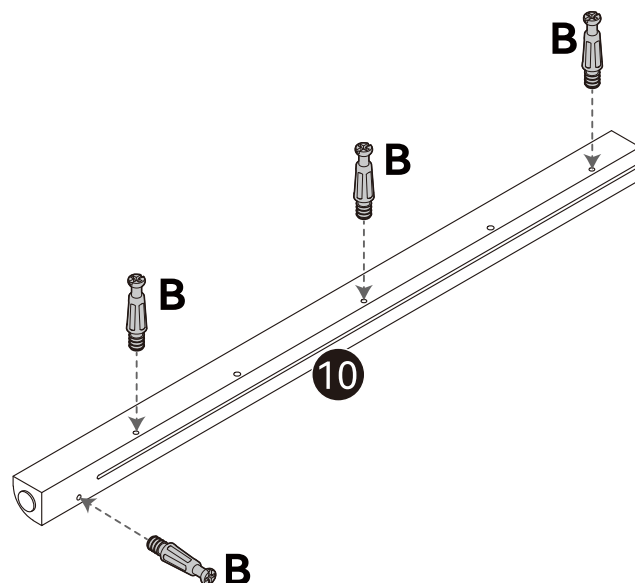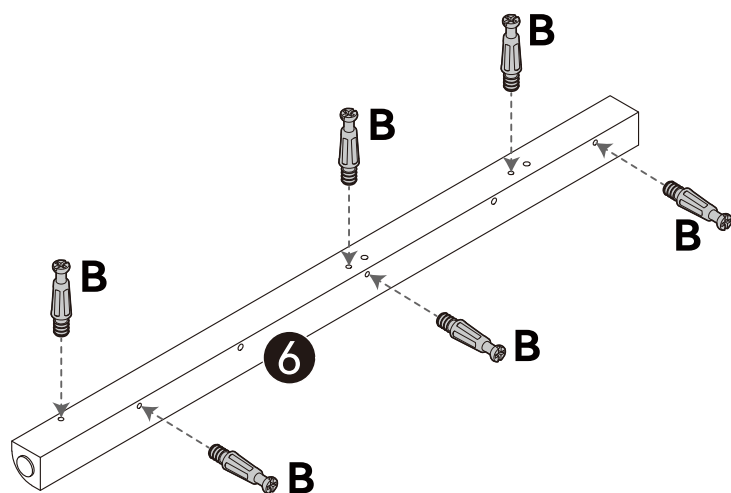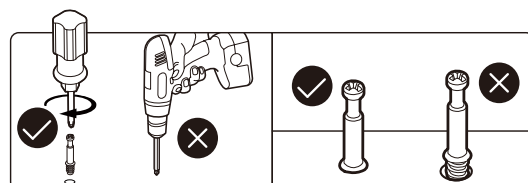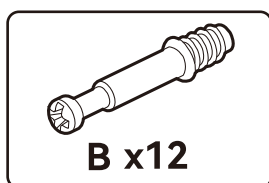




3

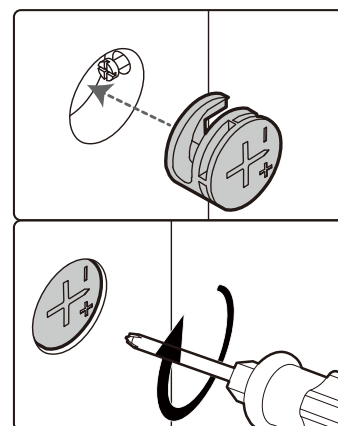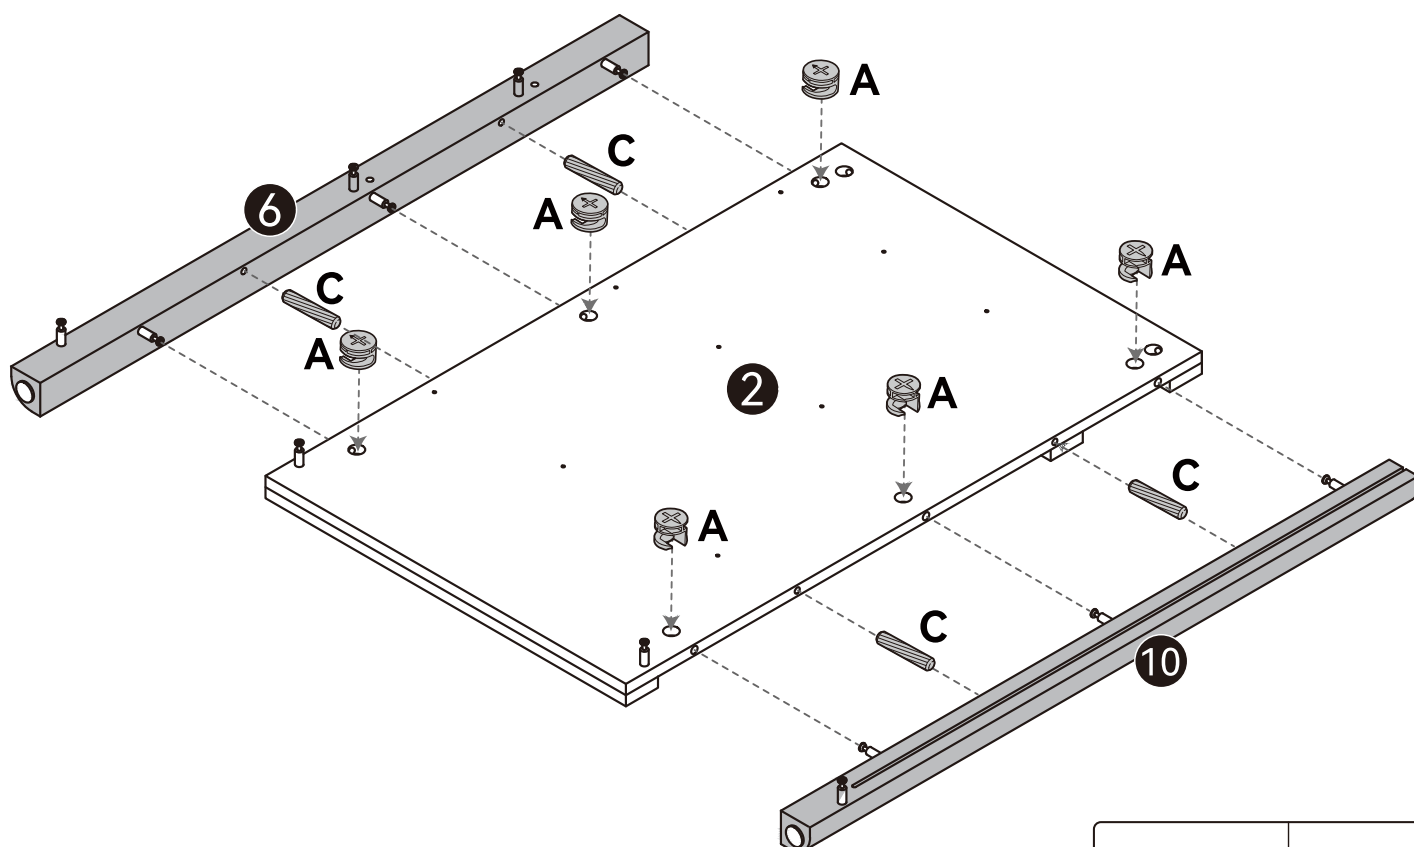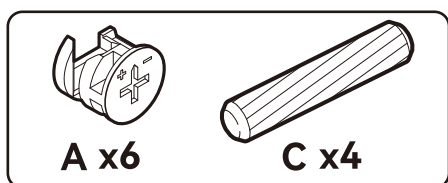




4

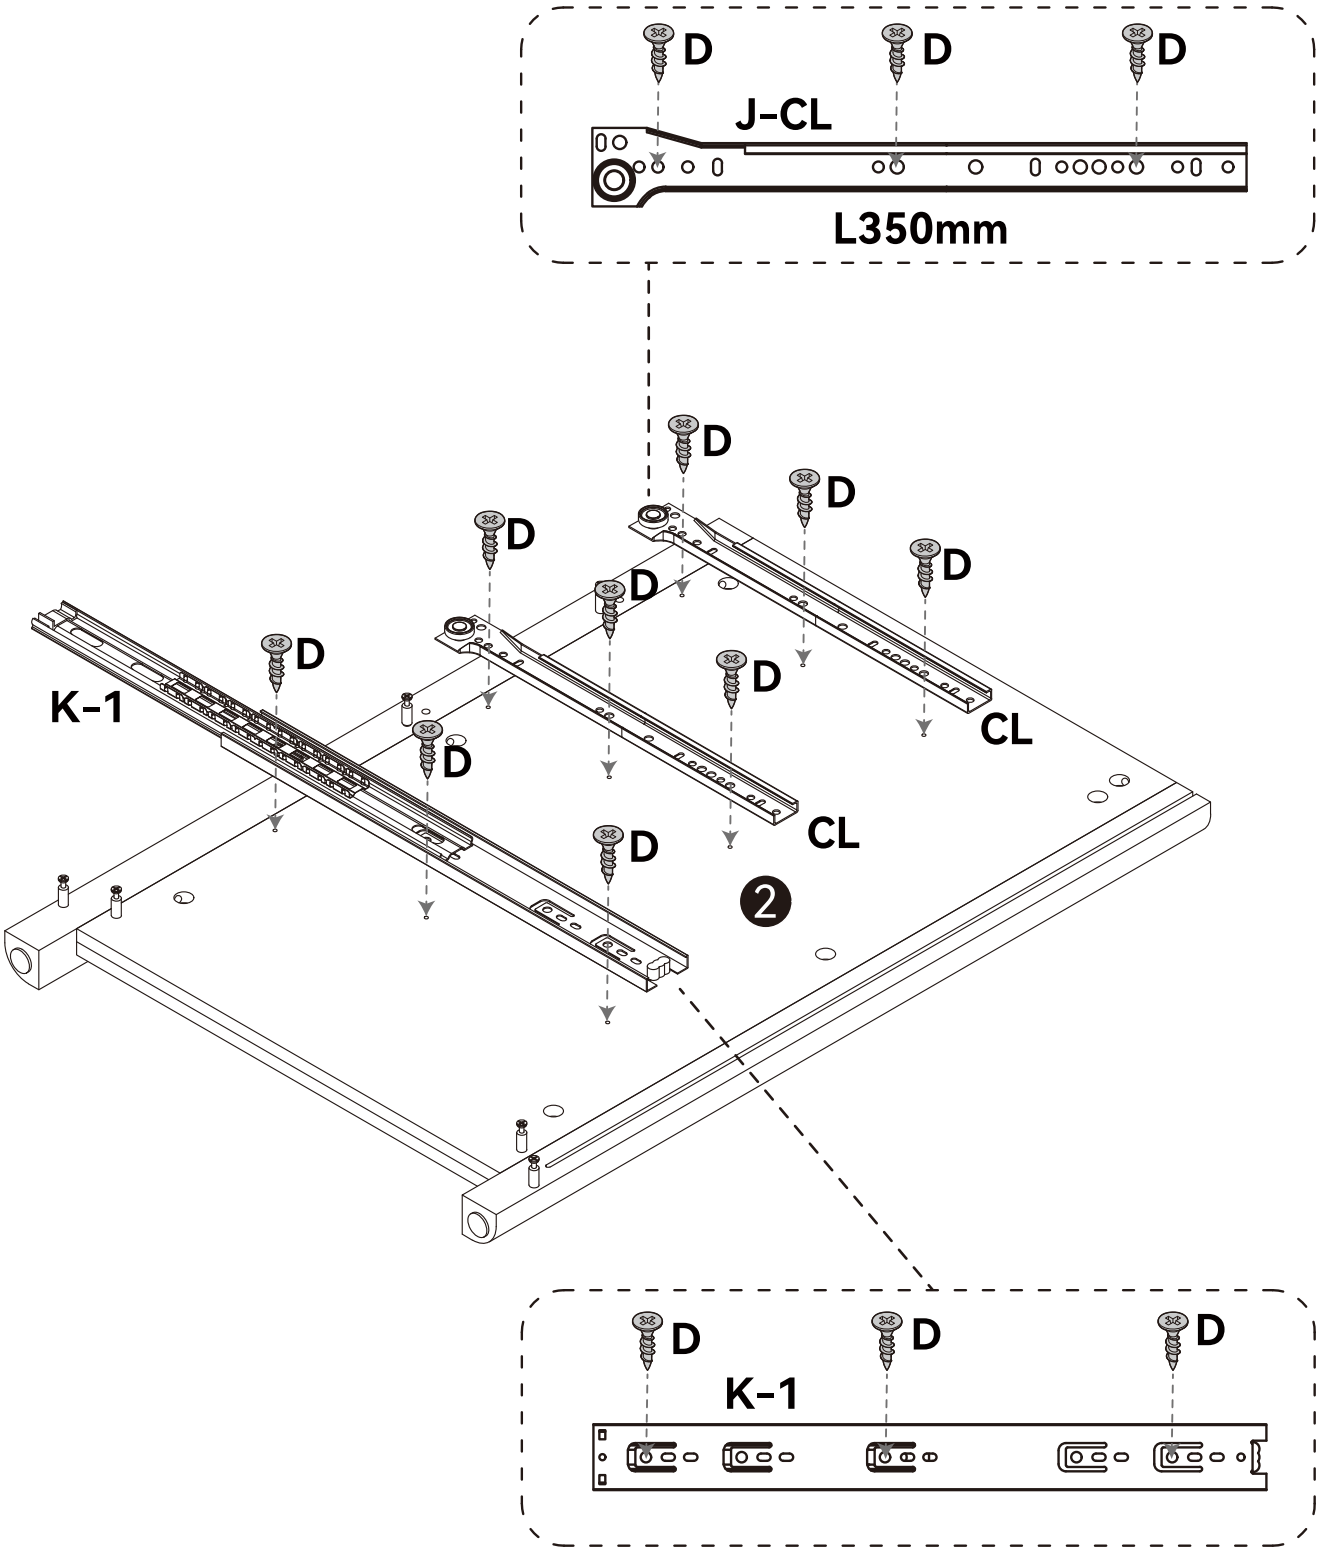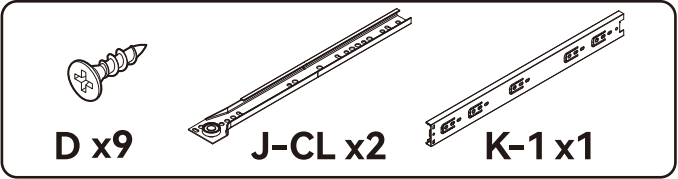


5

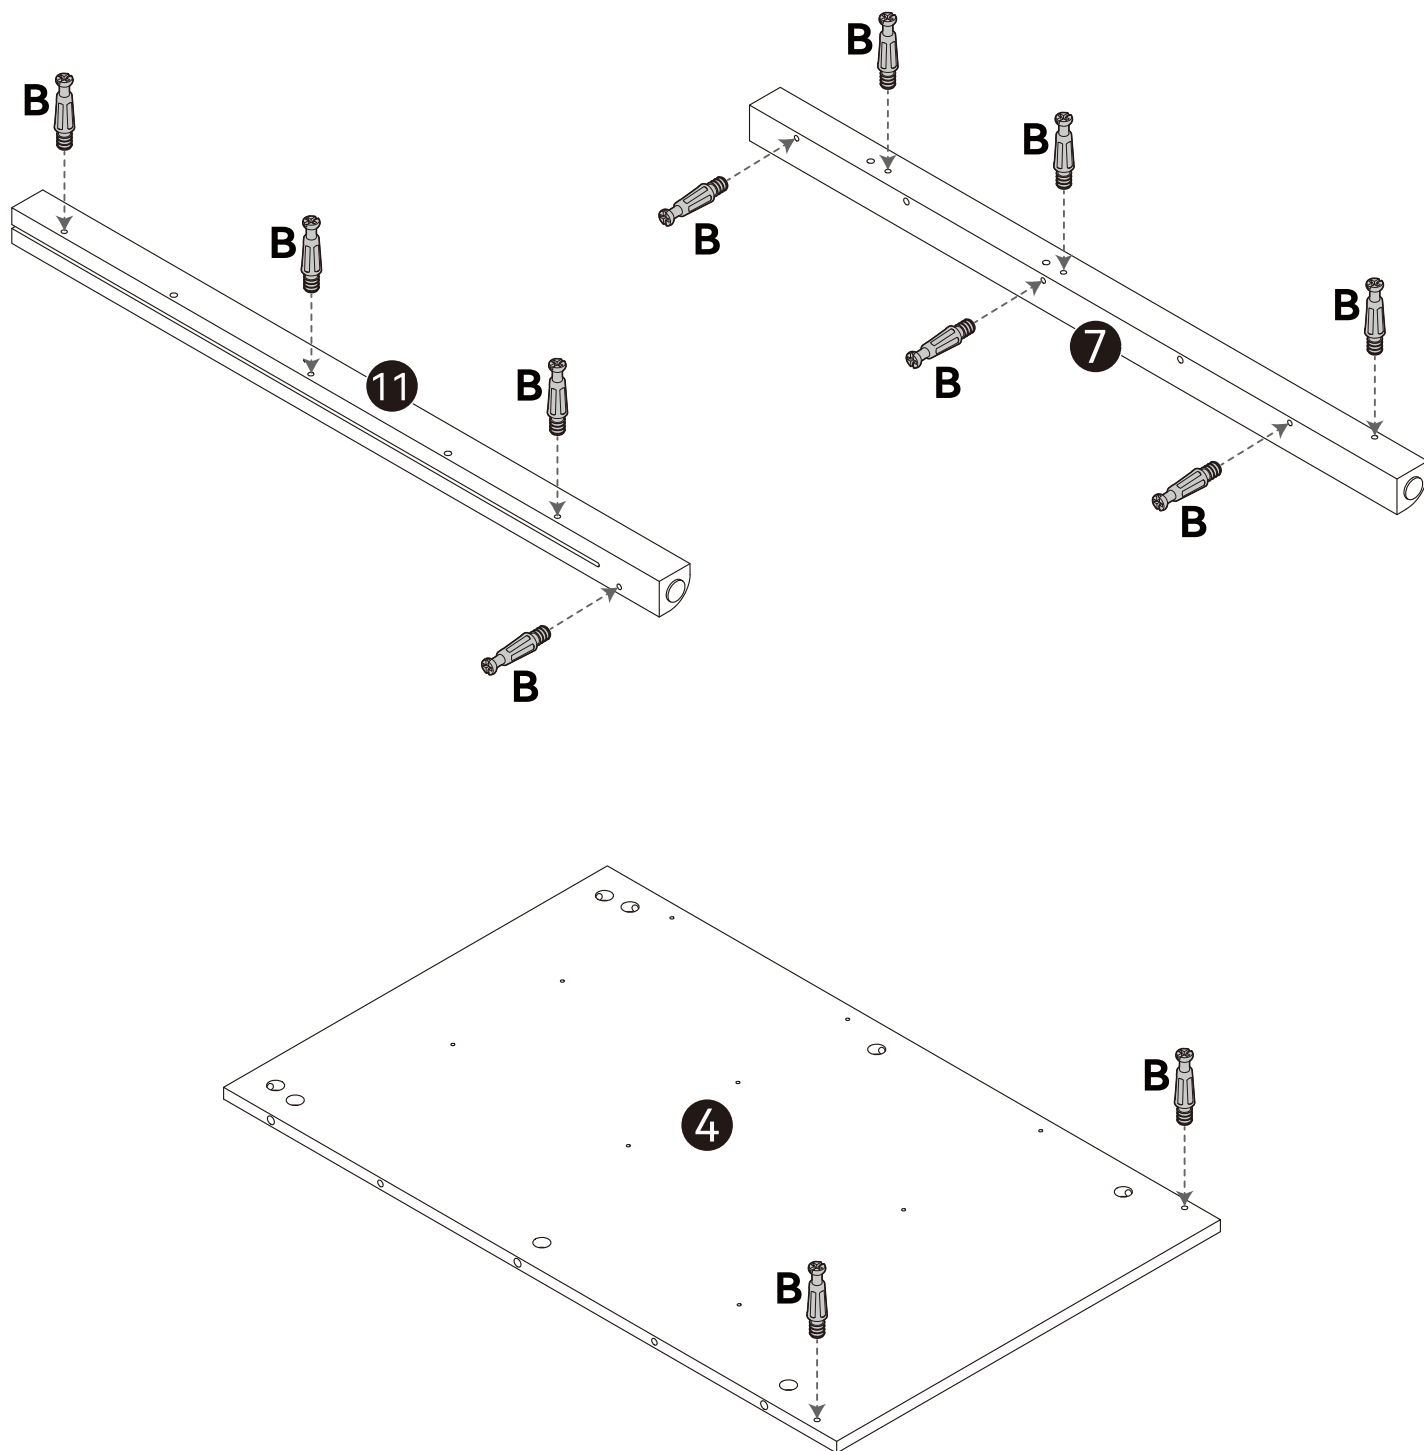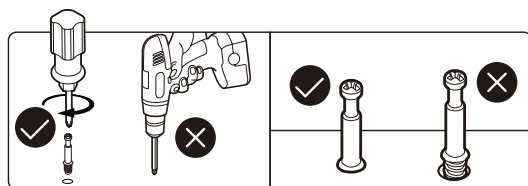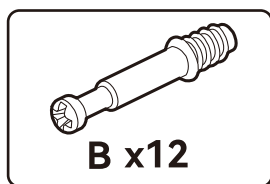








6

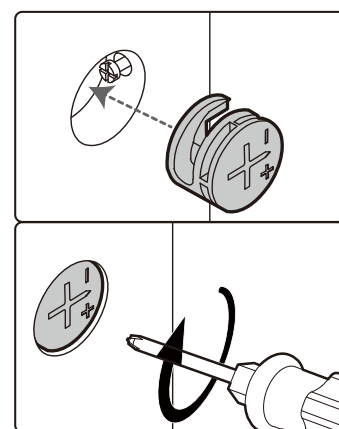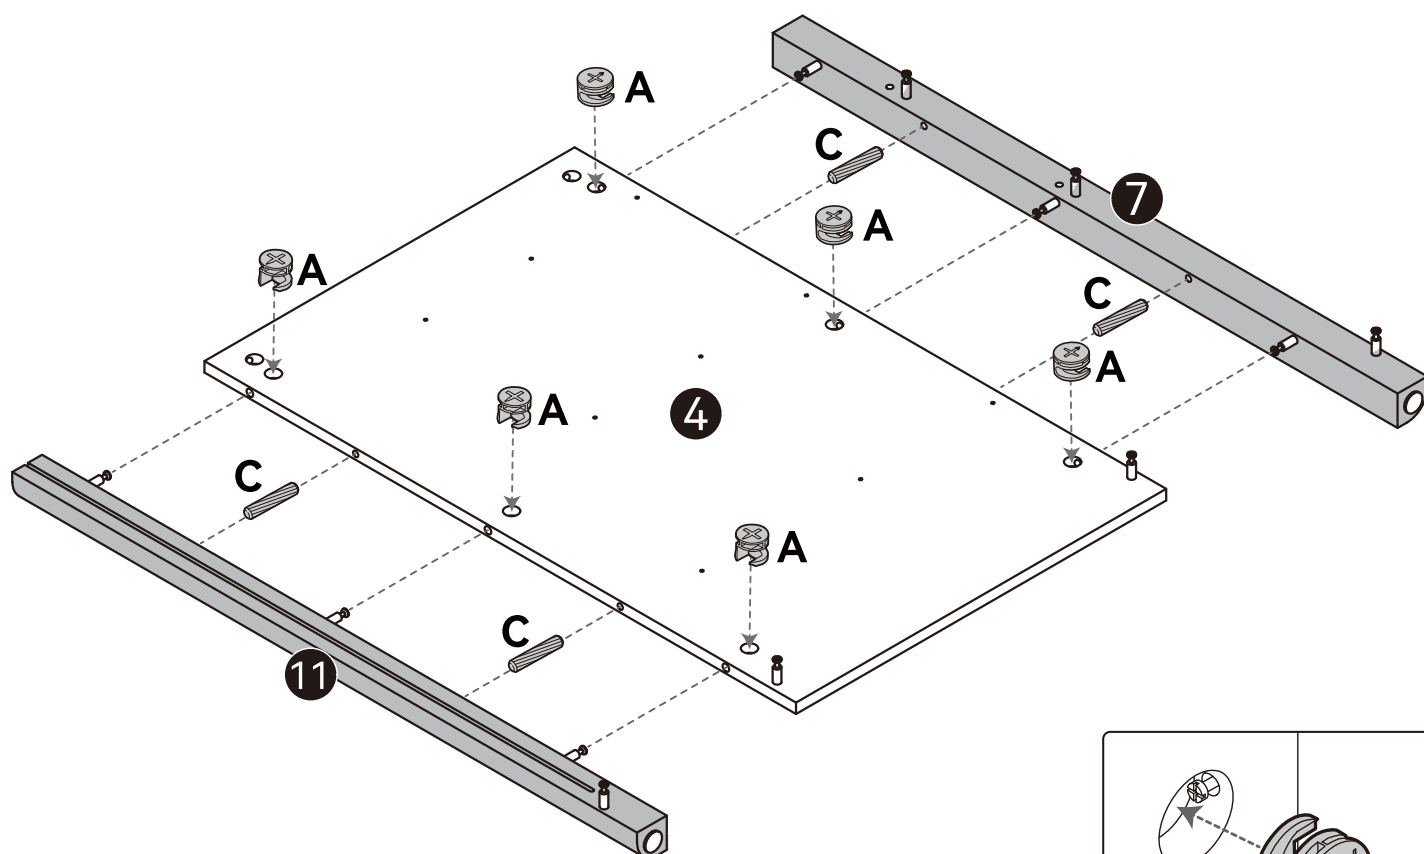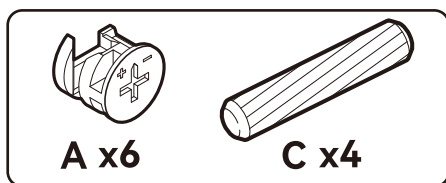




D x9 **J-CR x2** **K-1 x1**

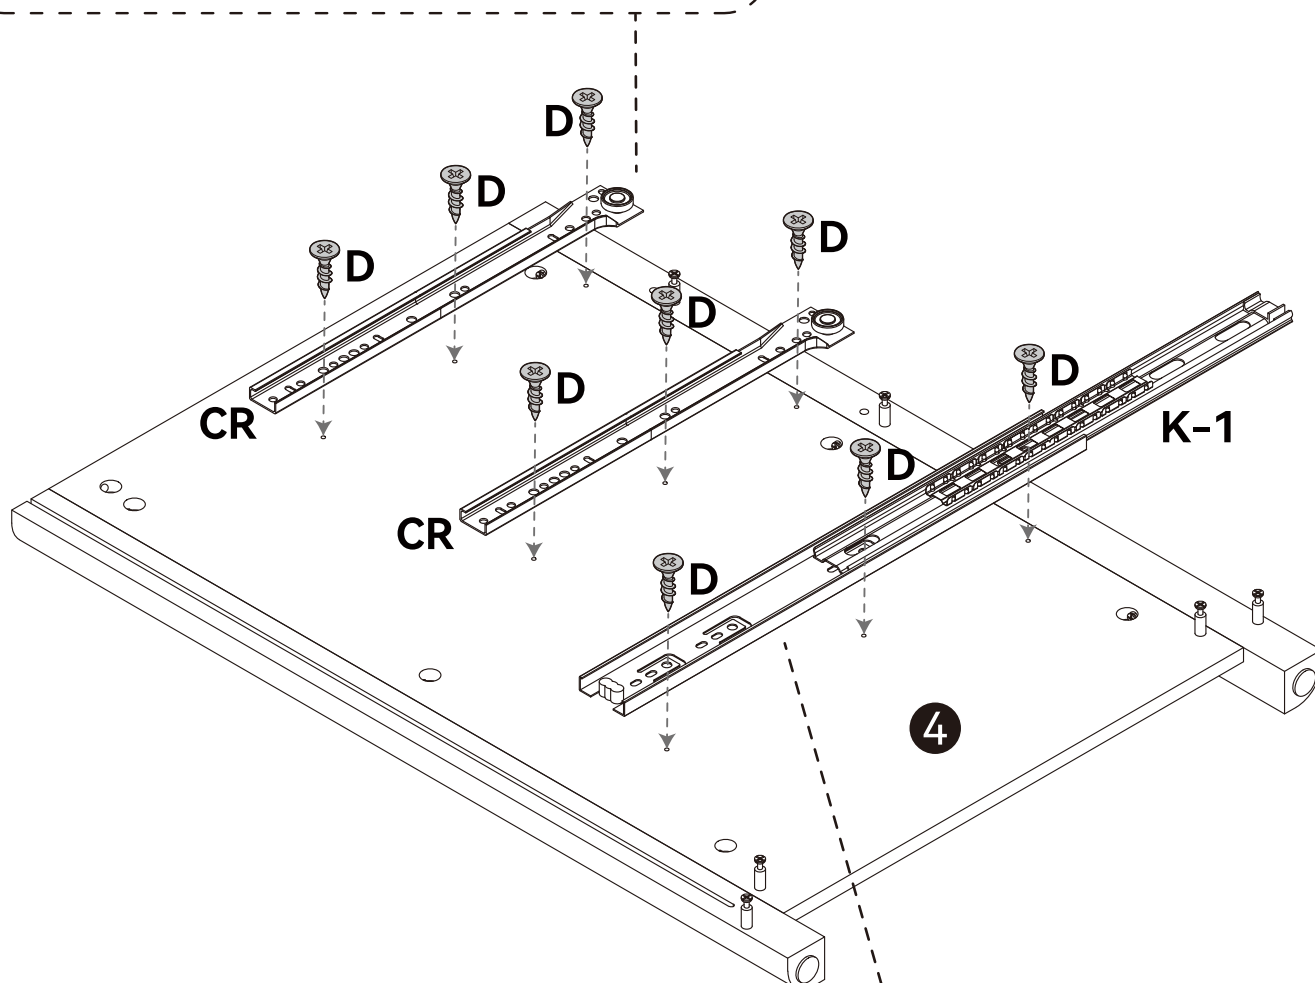




8

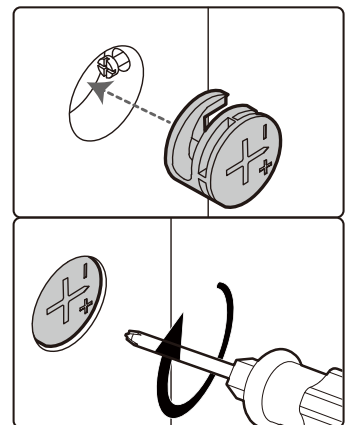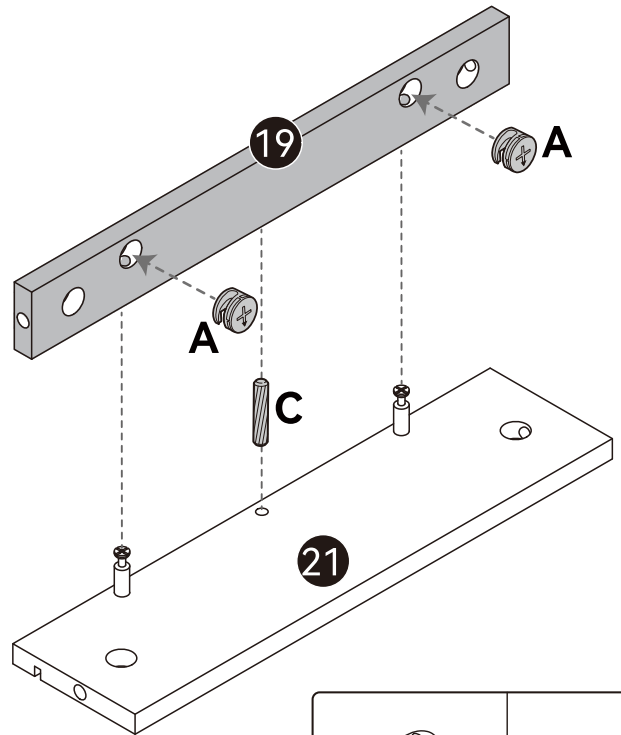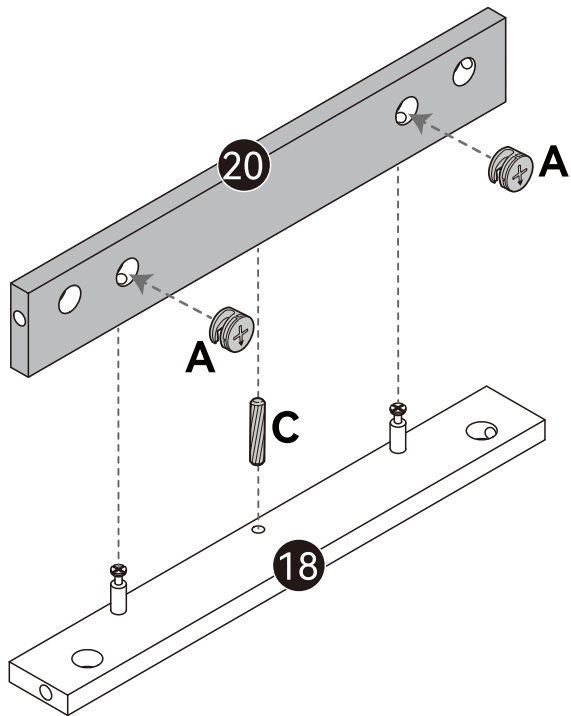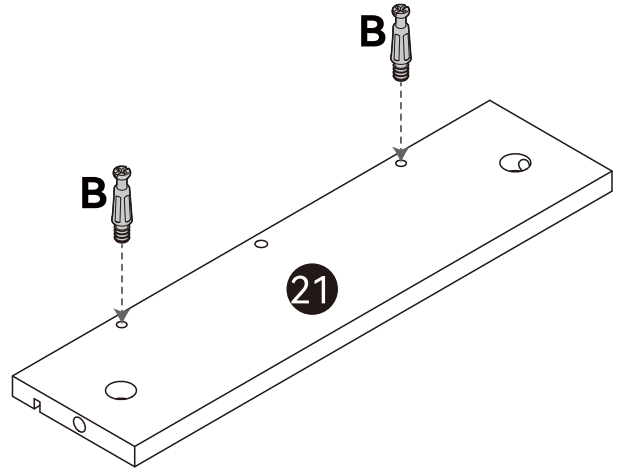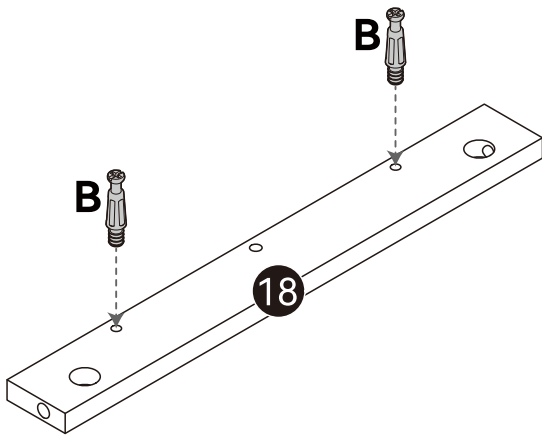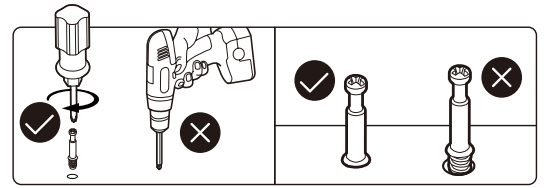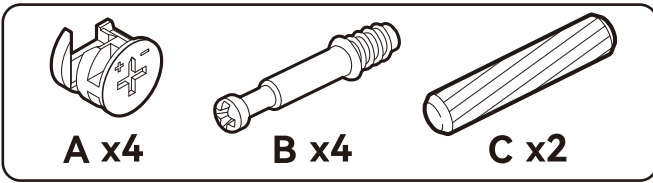




9

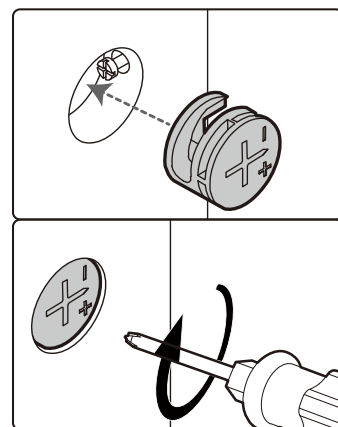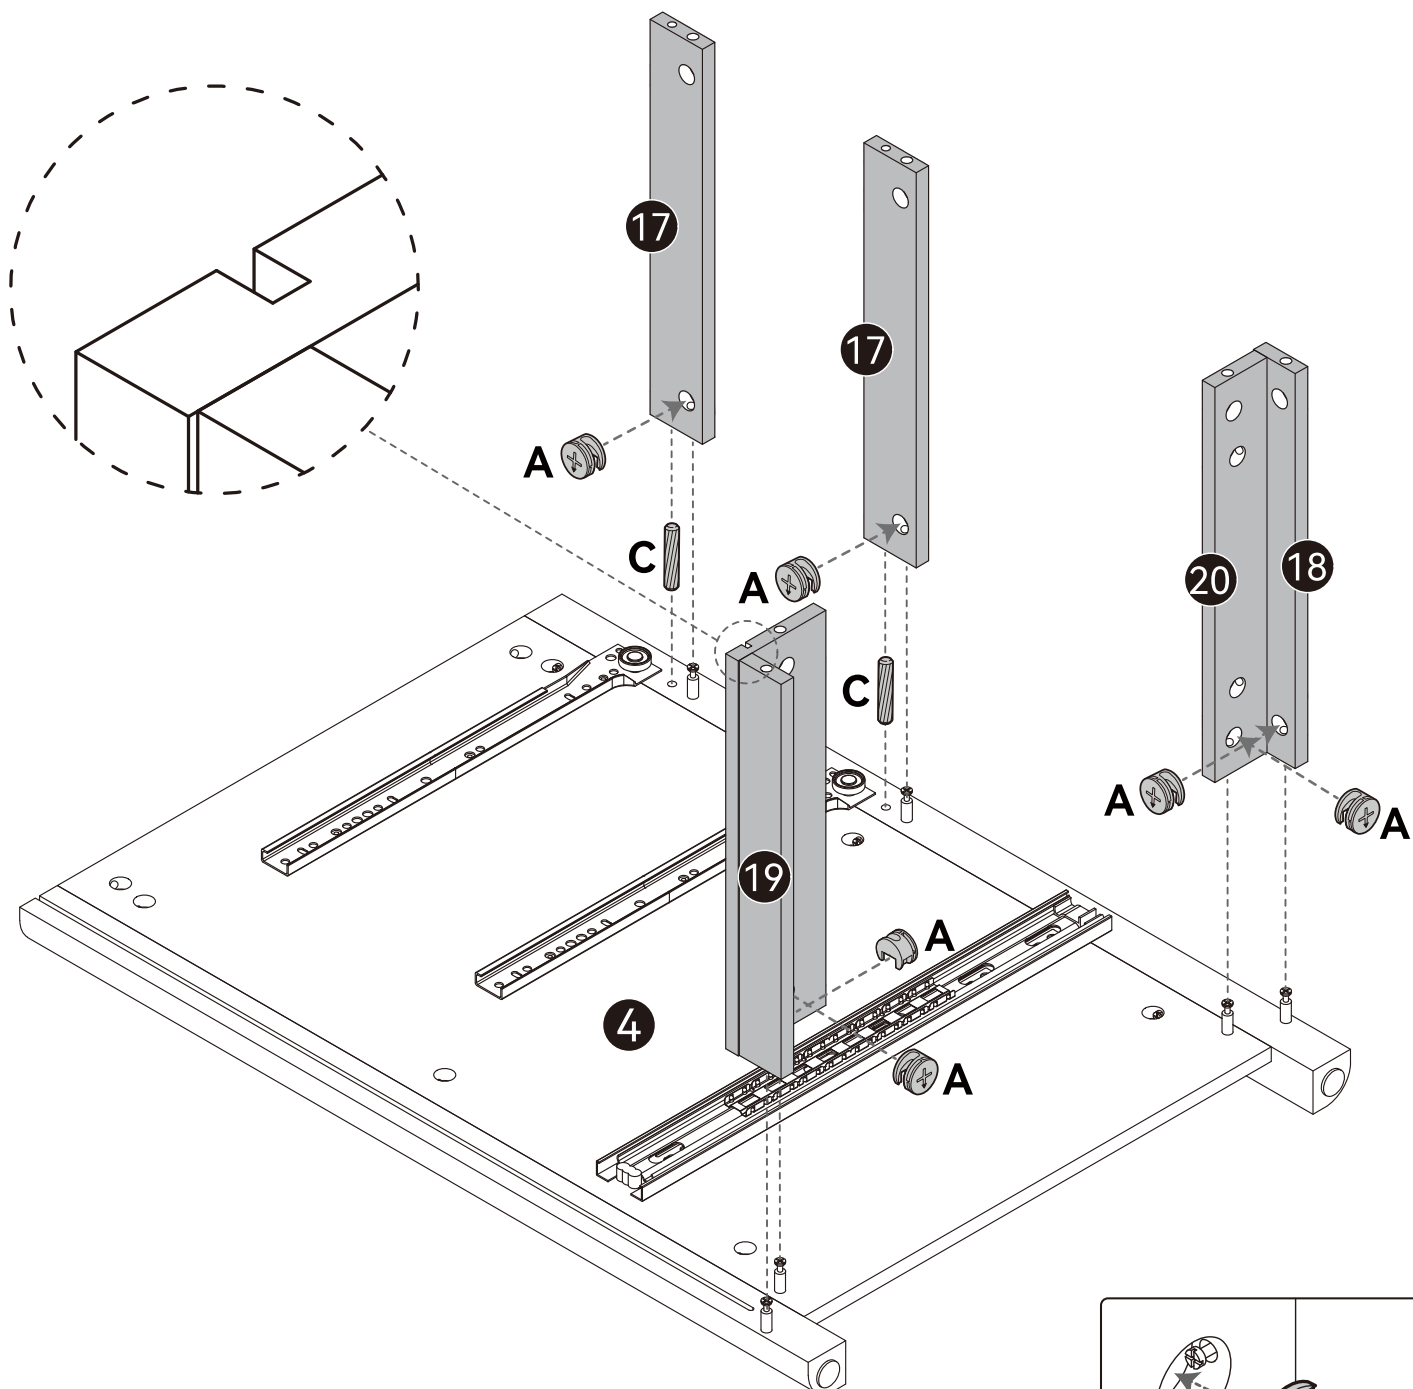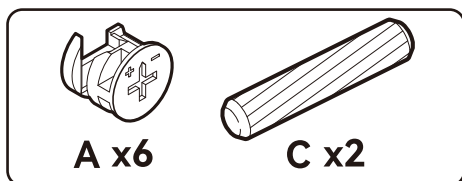



10

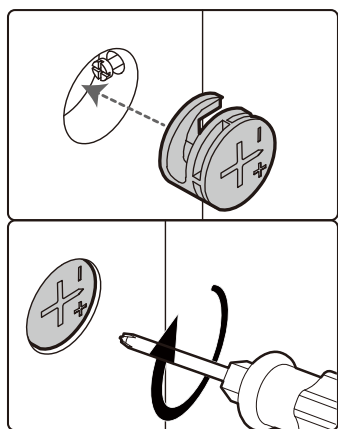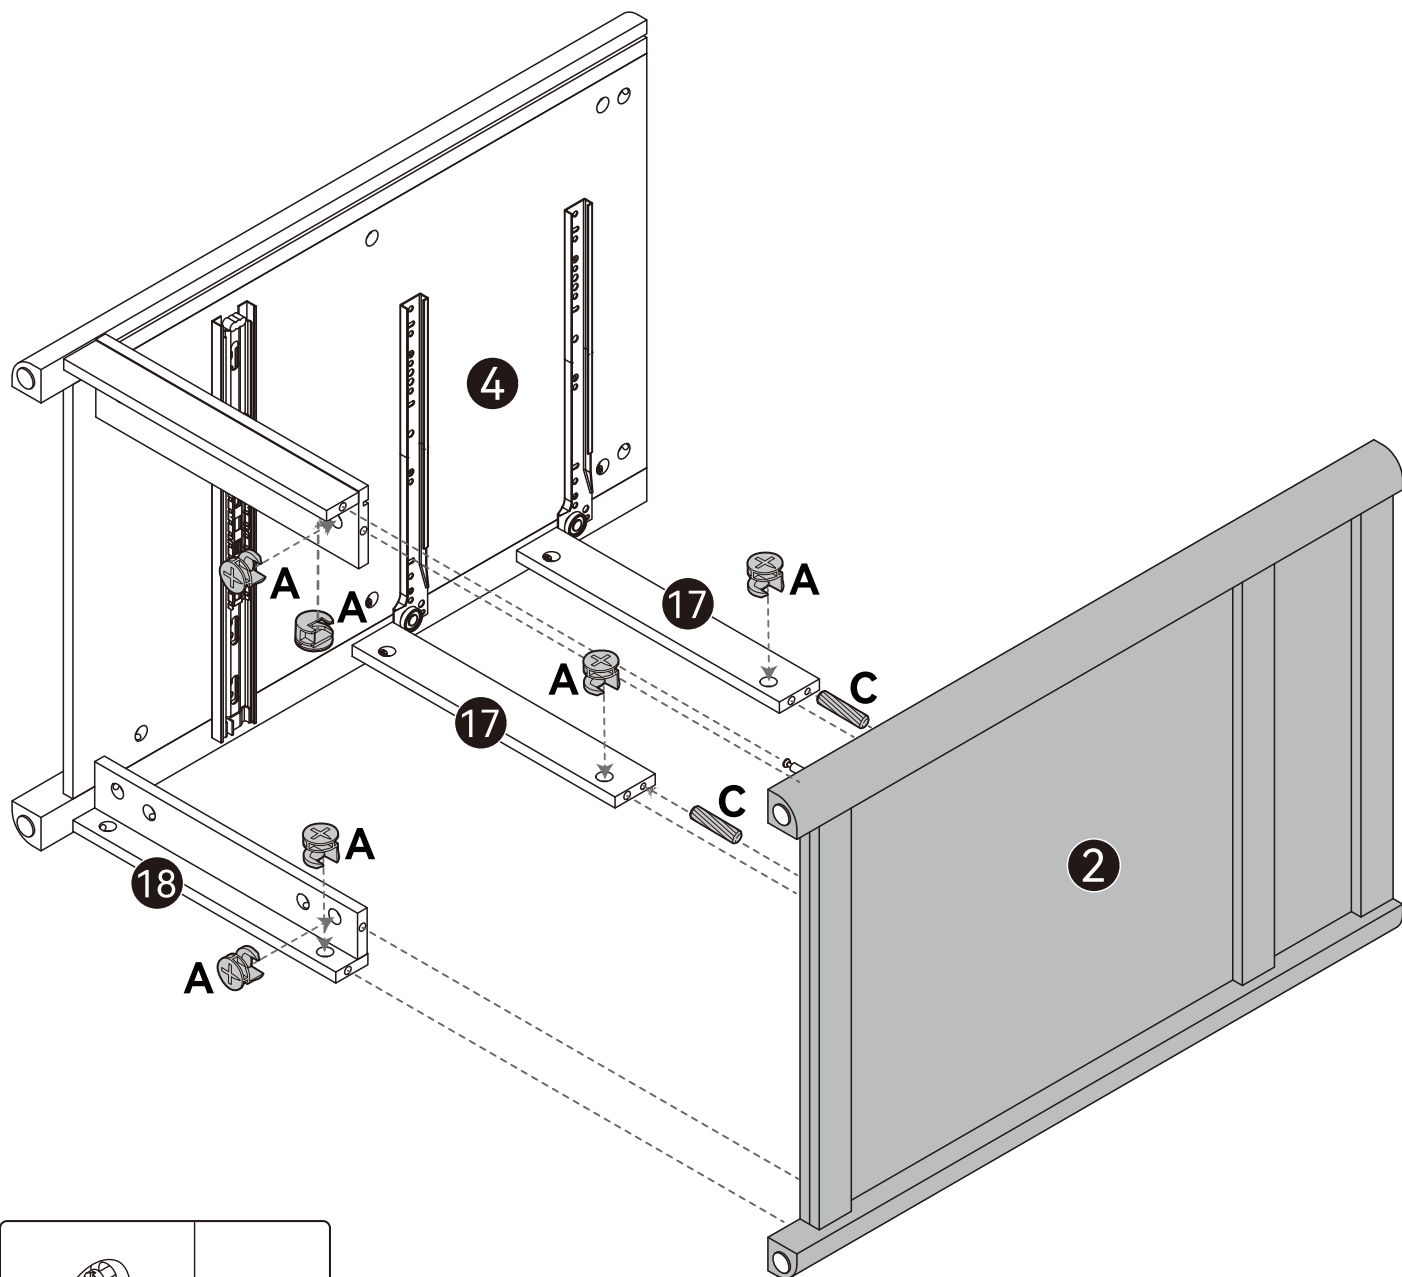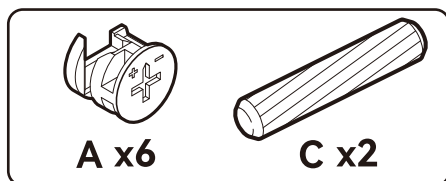

11

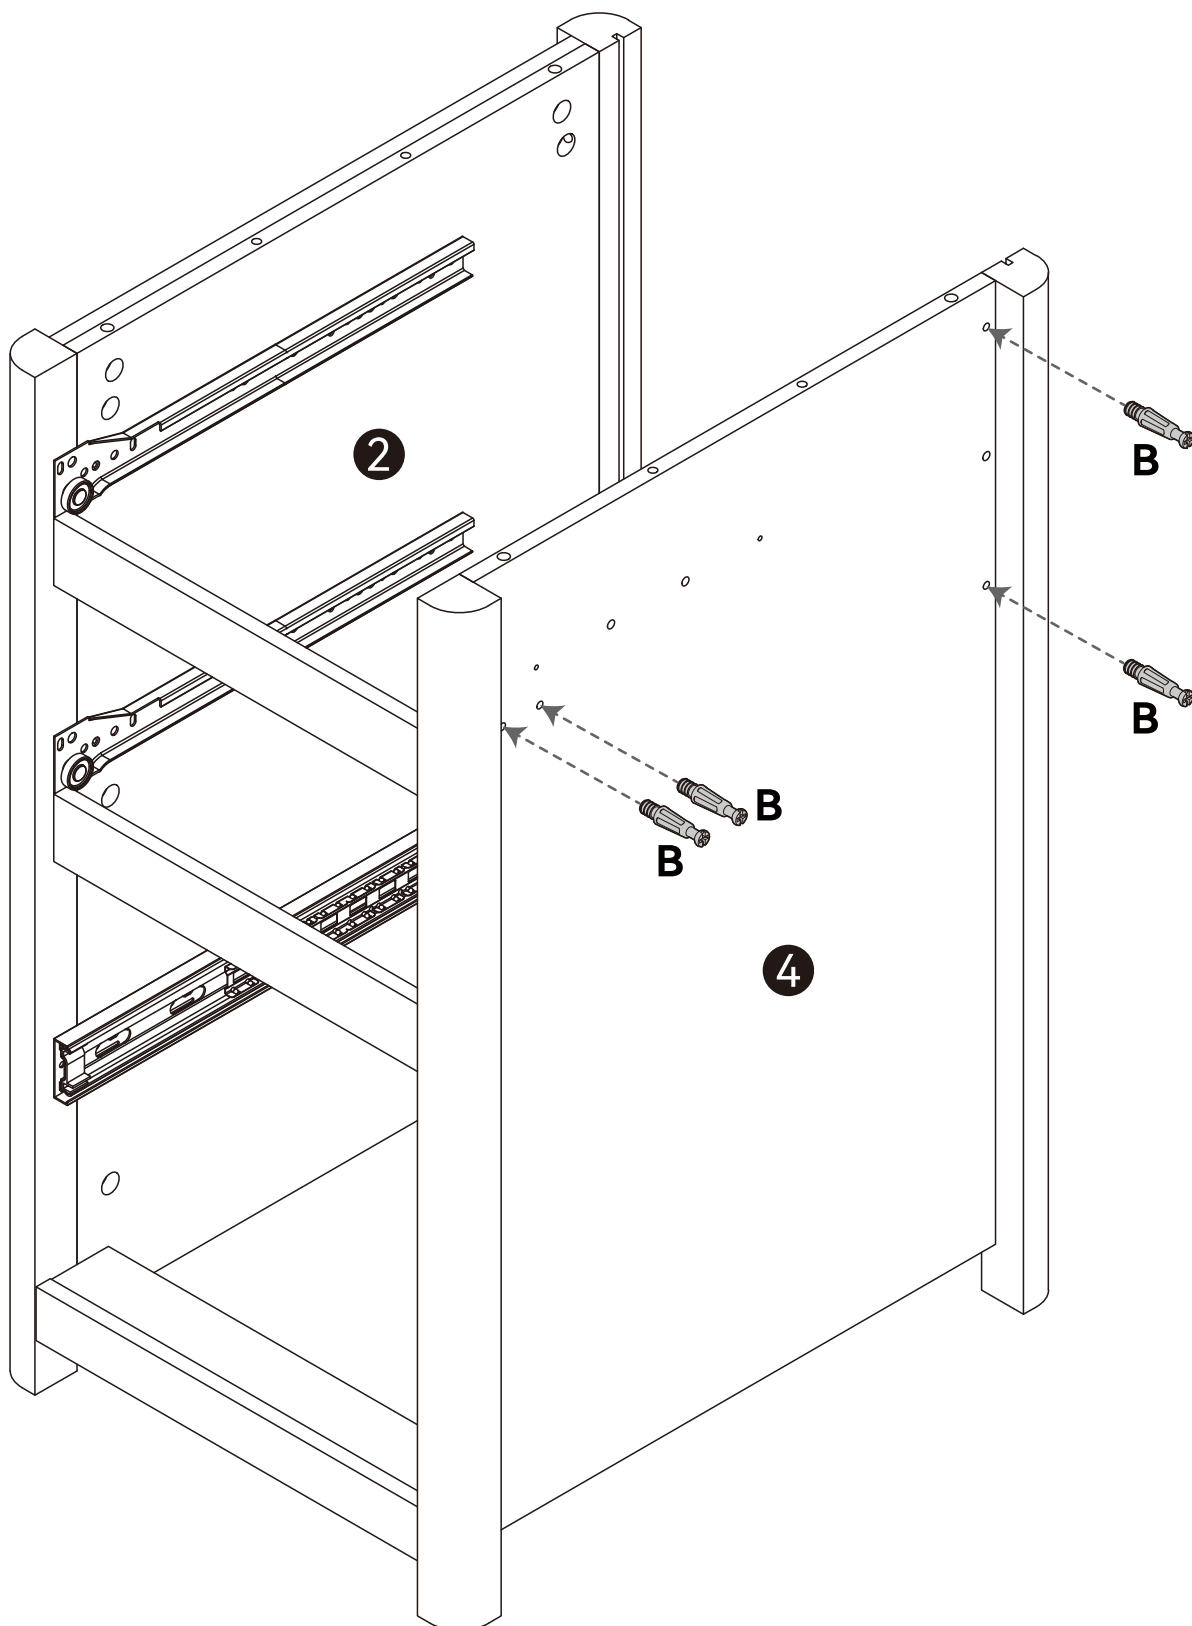
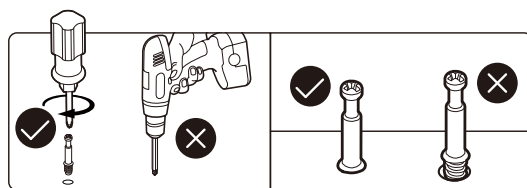
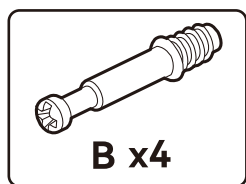


12


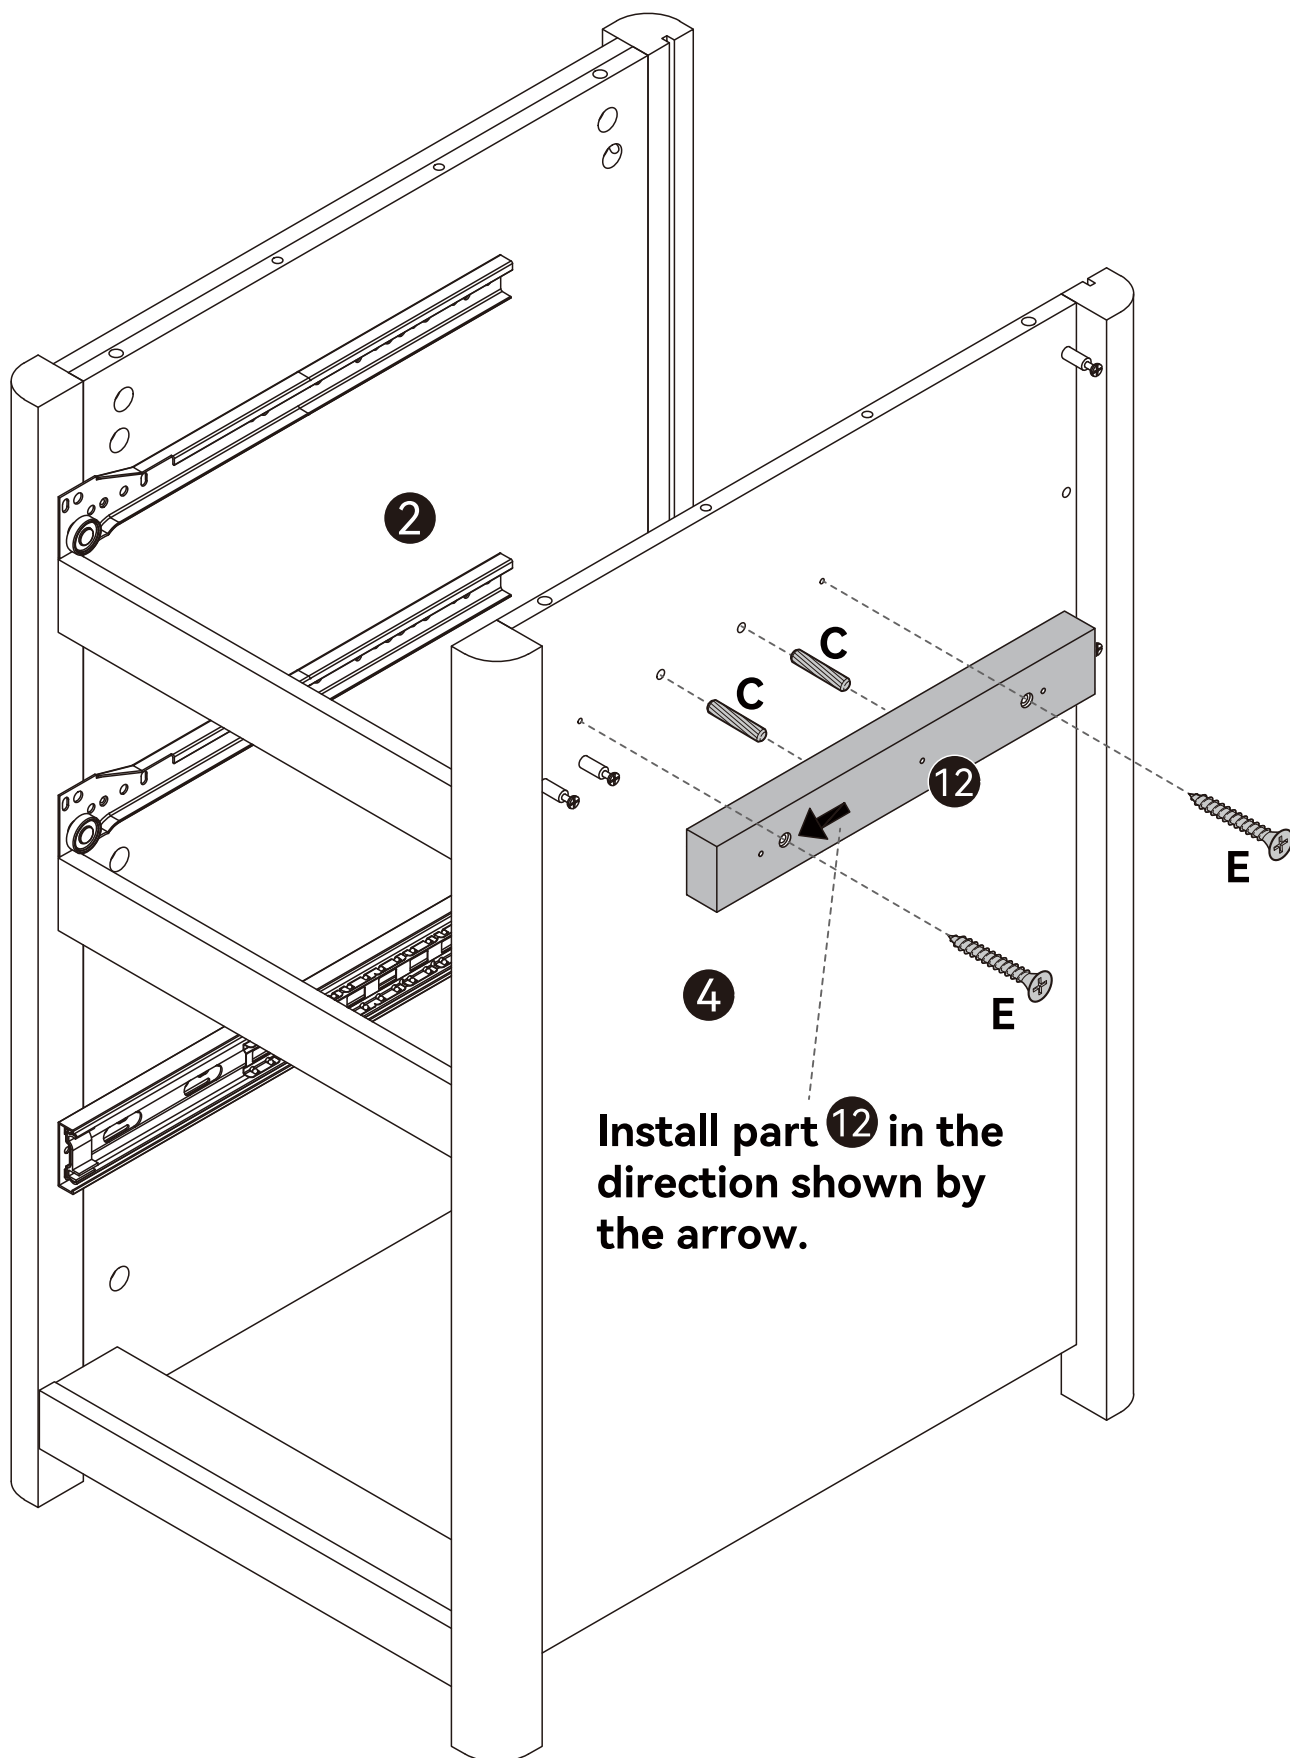
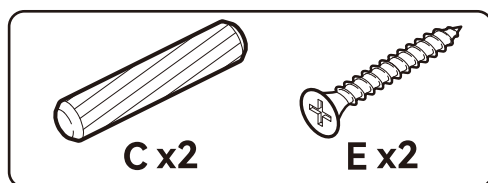


Install part 12 in the direction shown by the arrow.




13

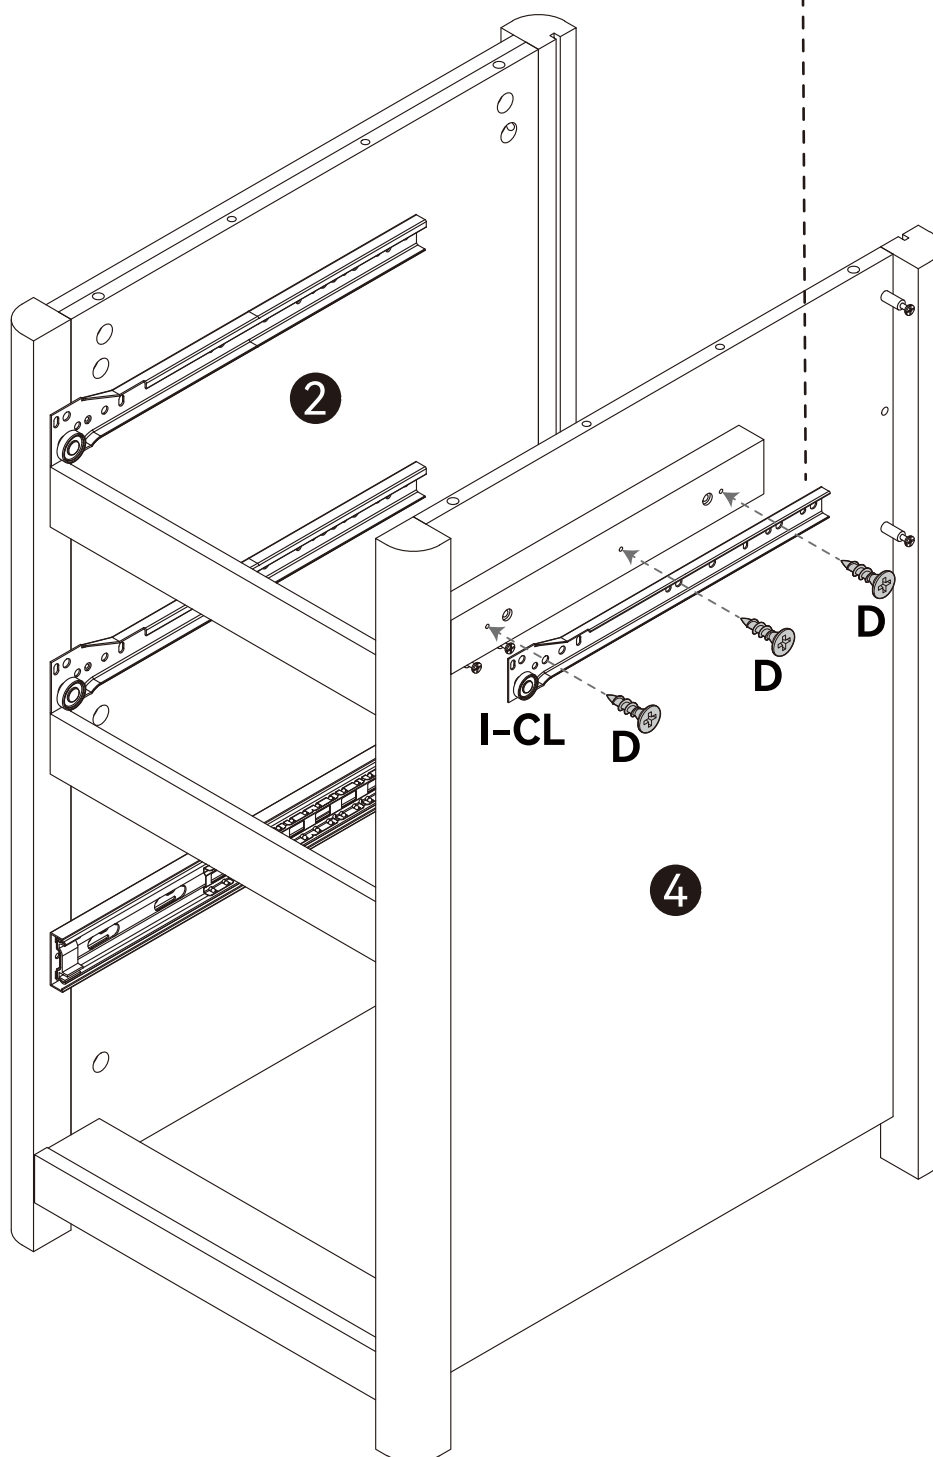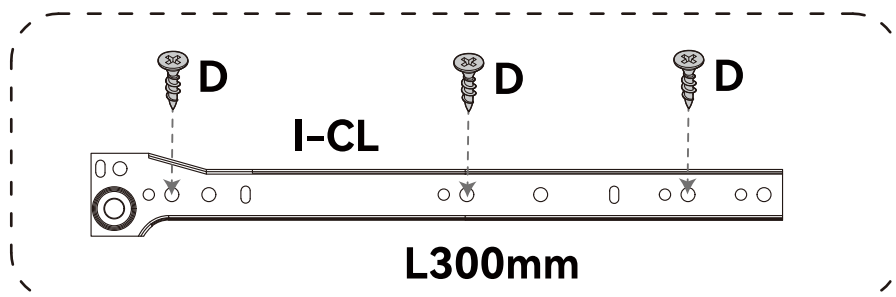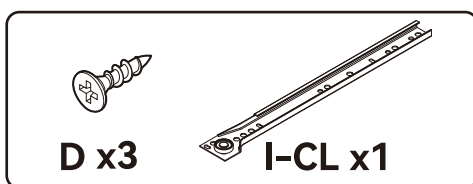




14

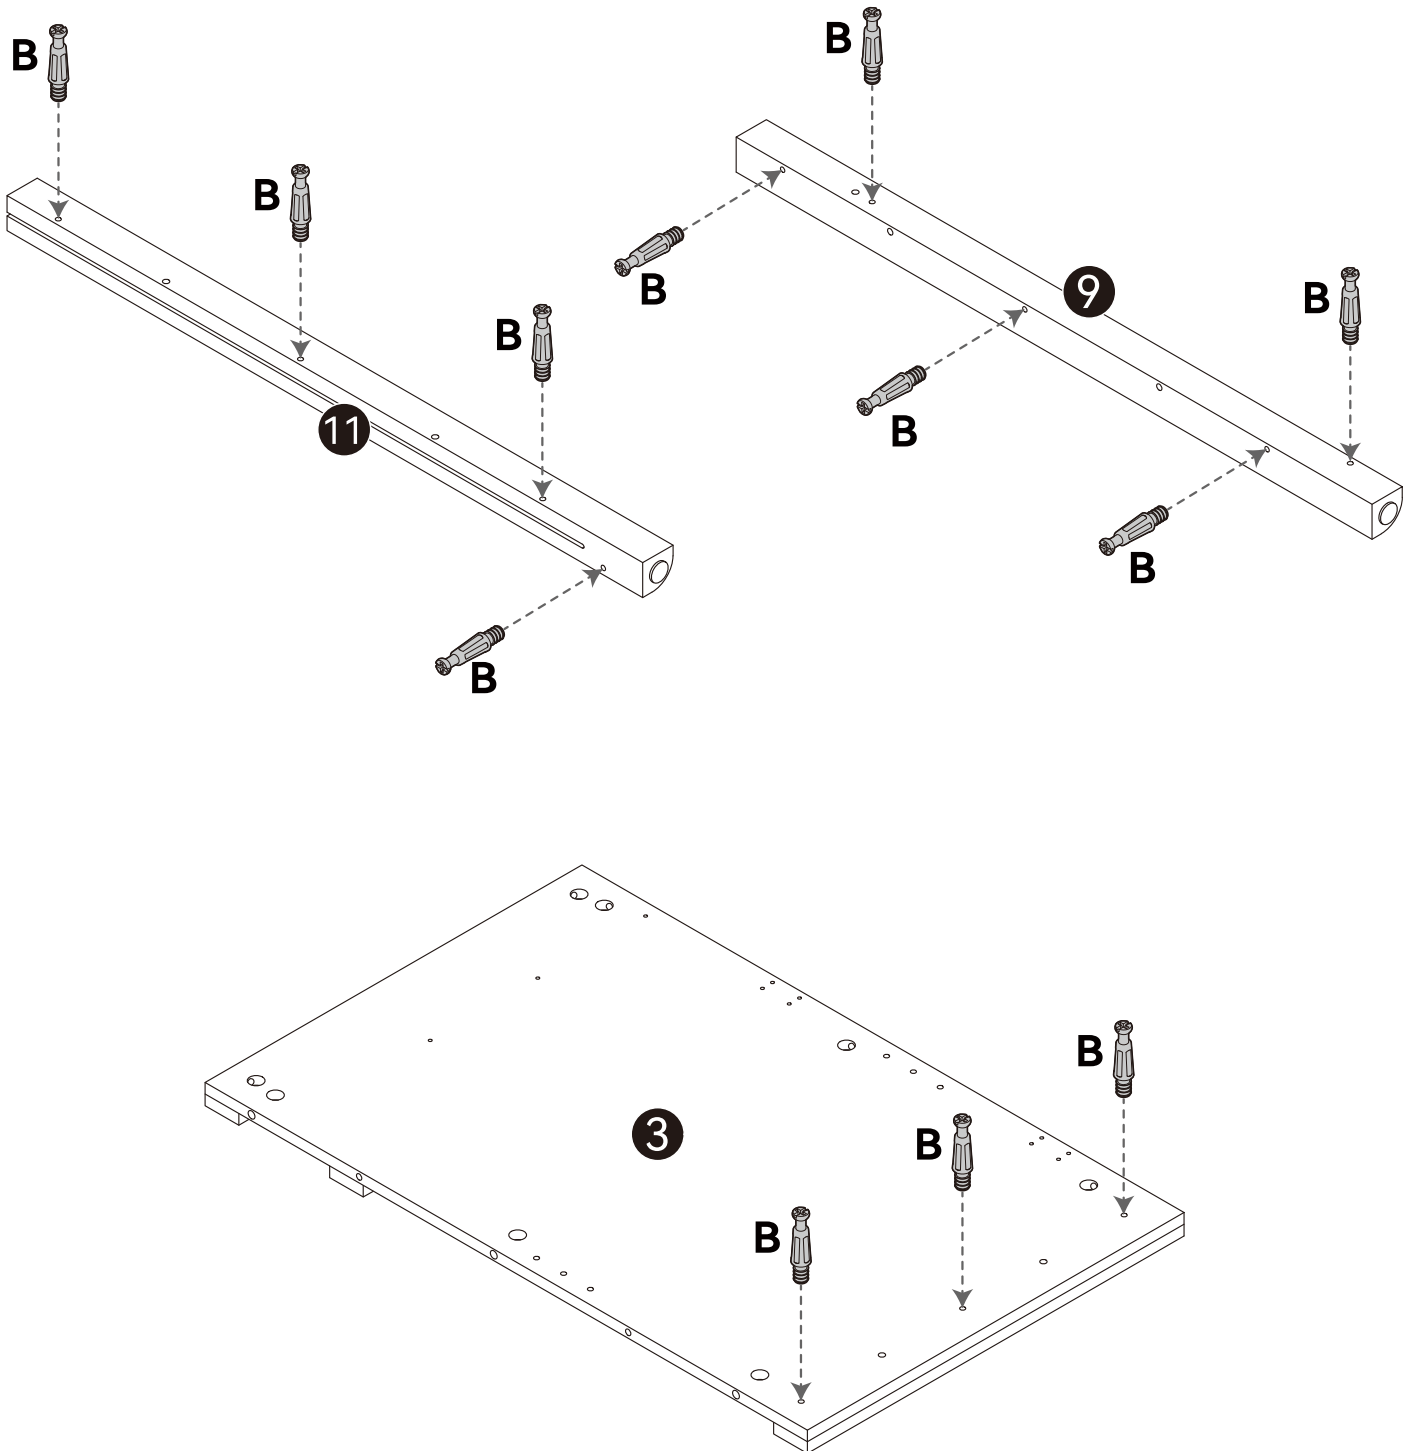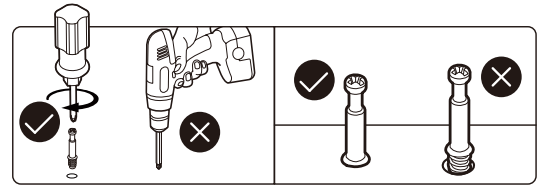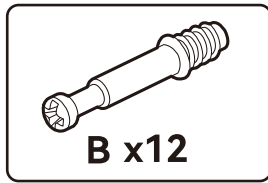






15

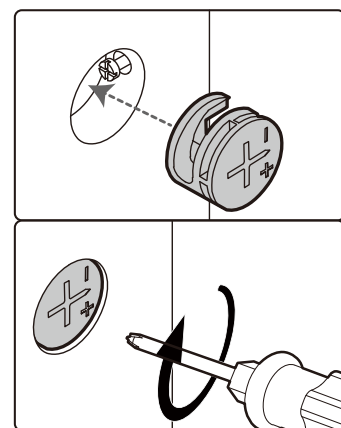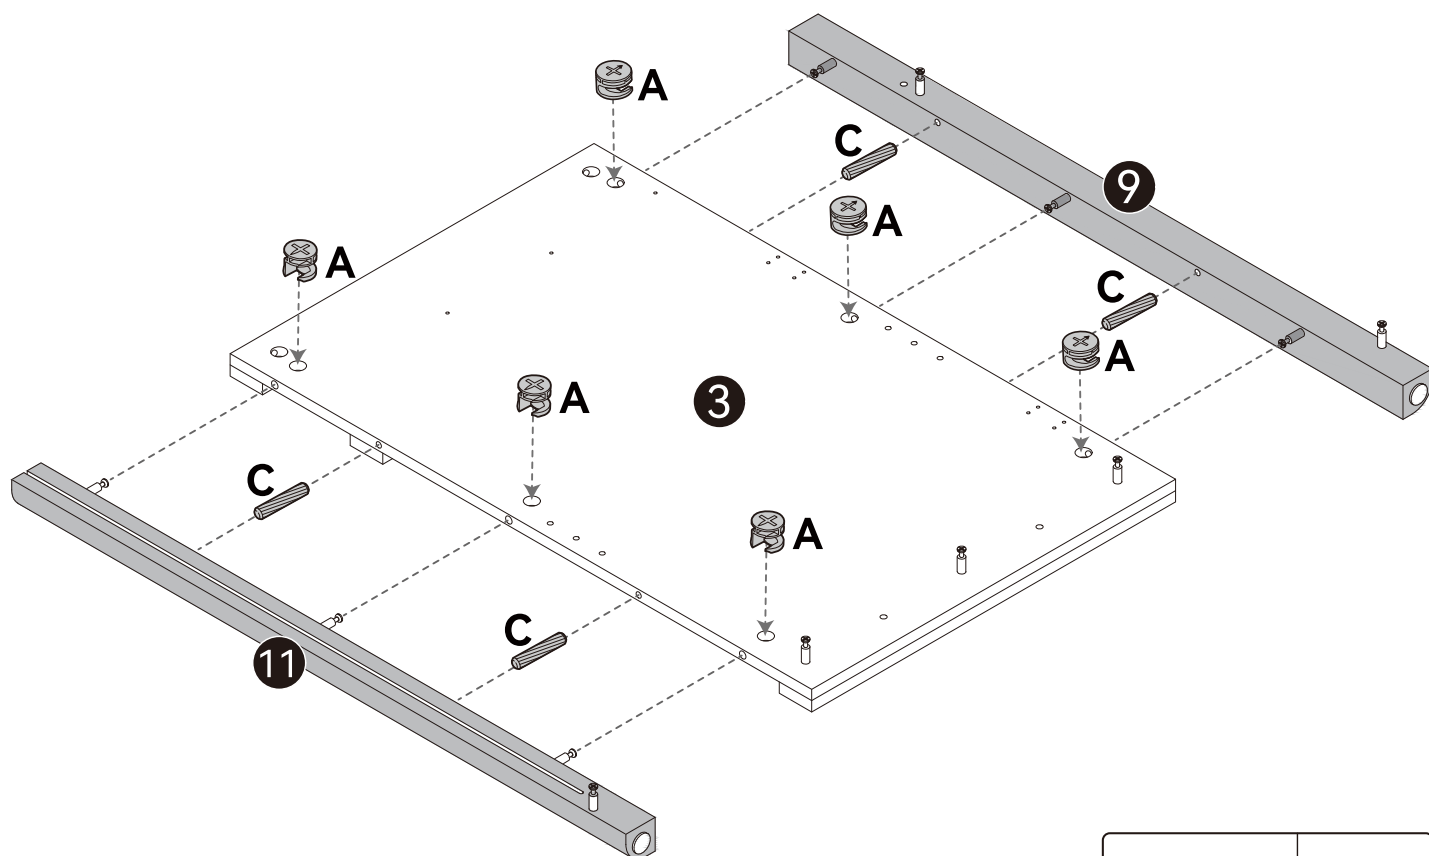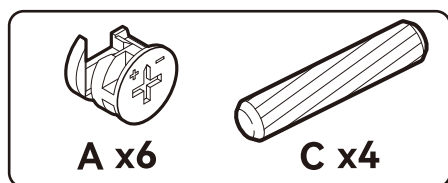




16

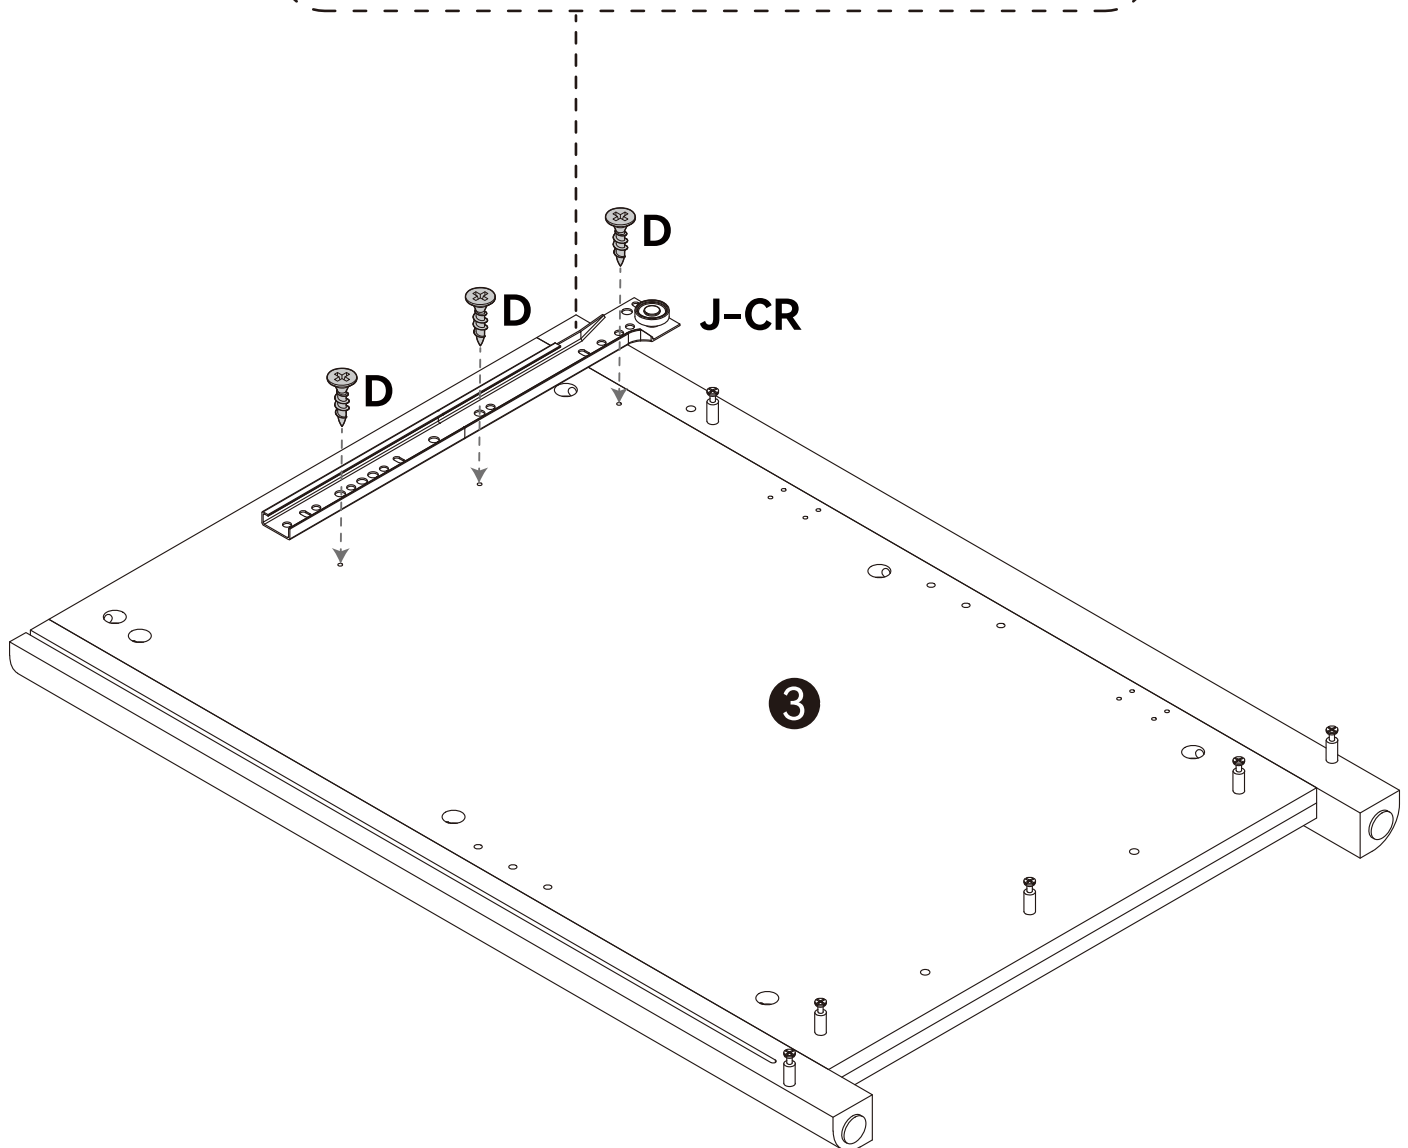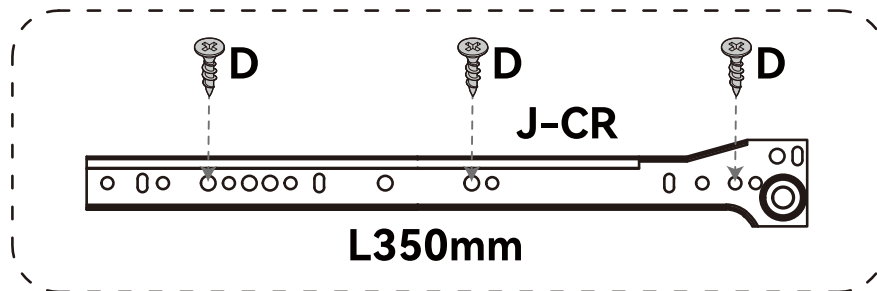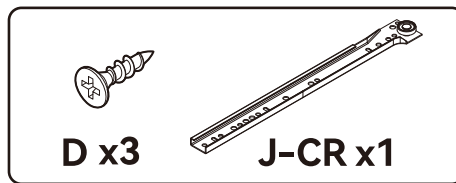



17

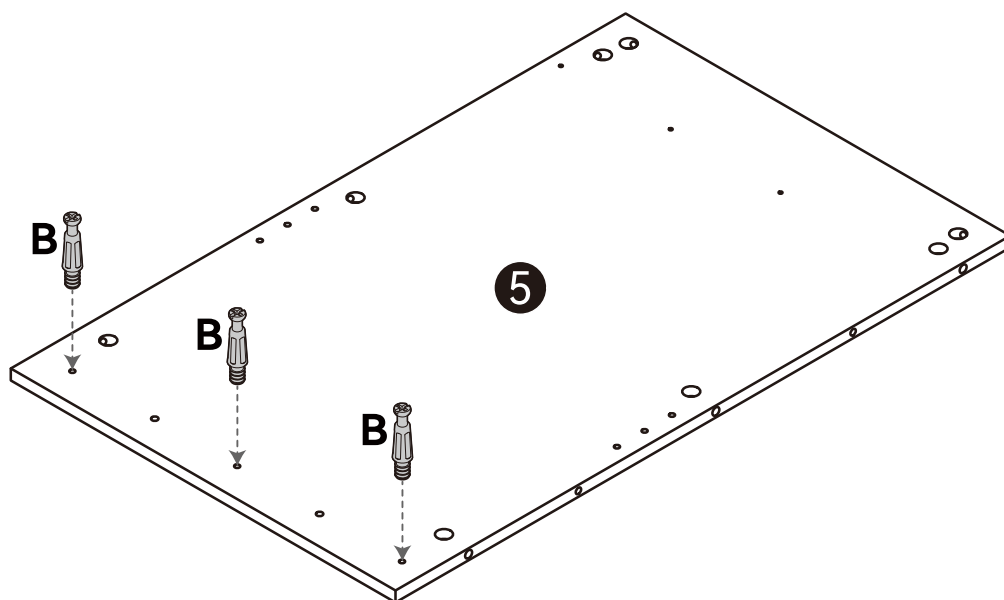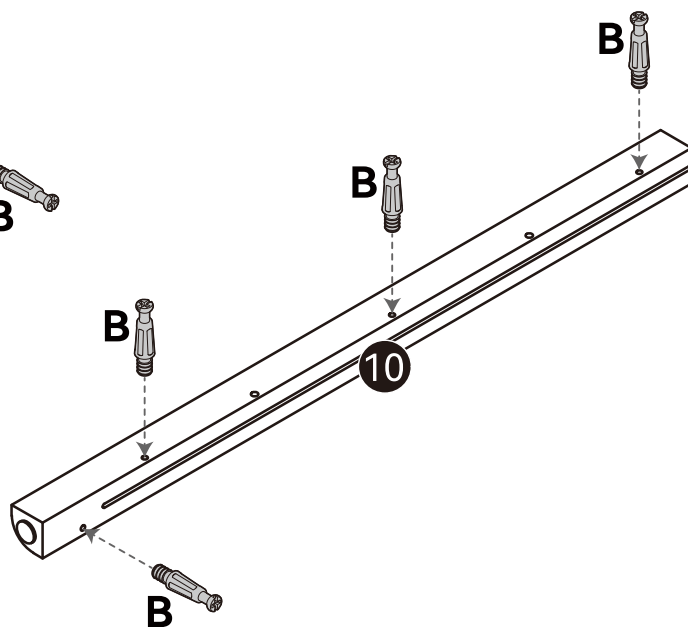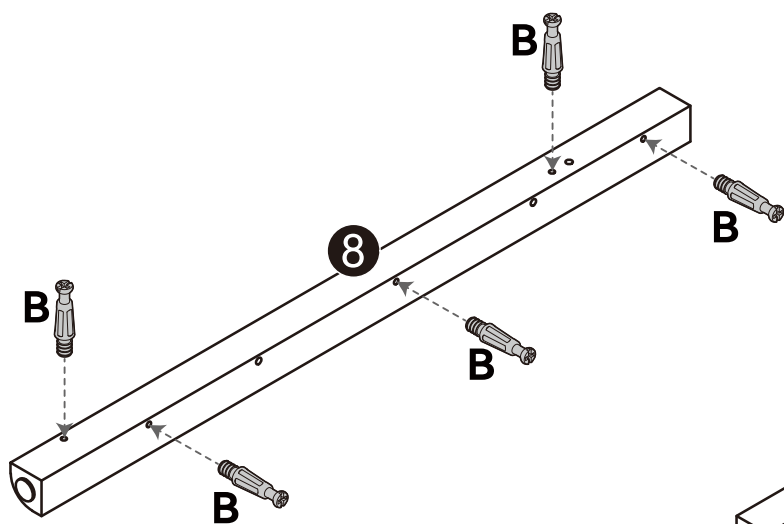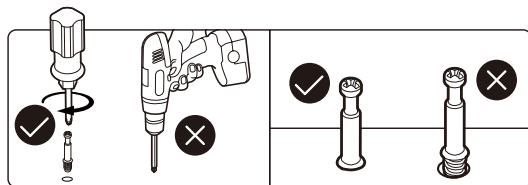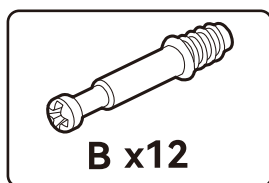







18

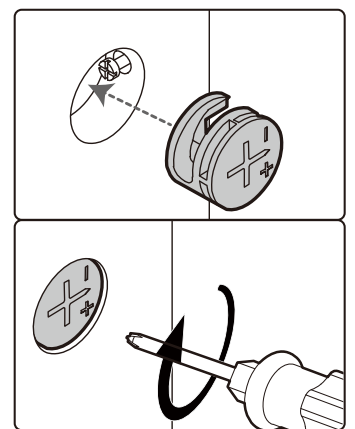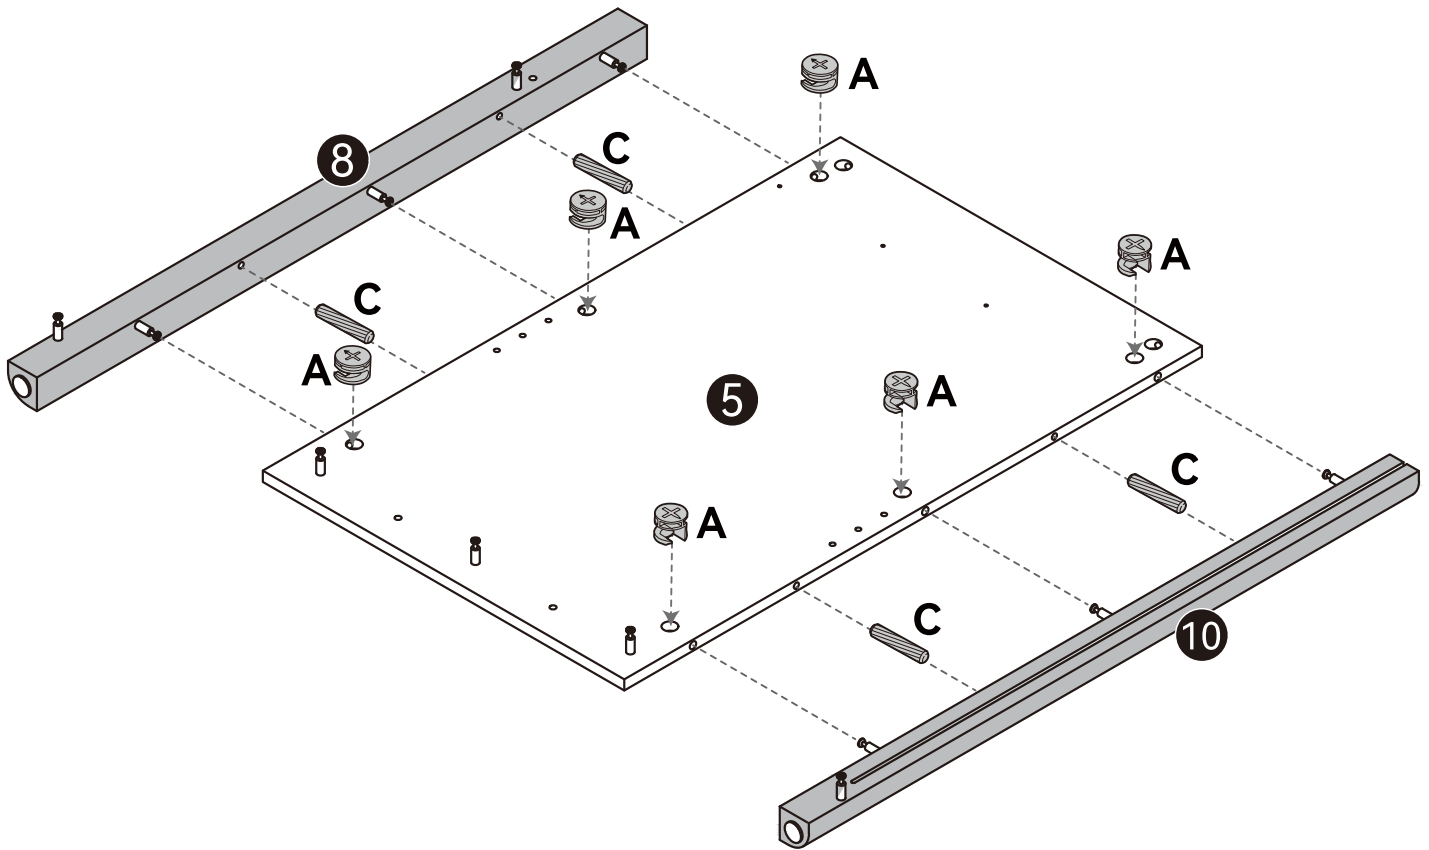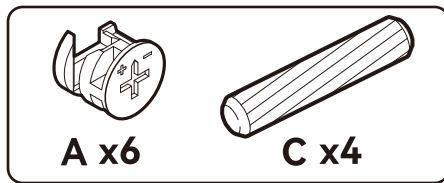



19

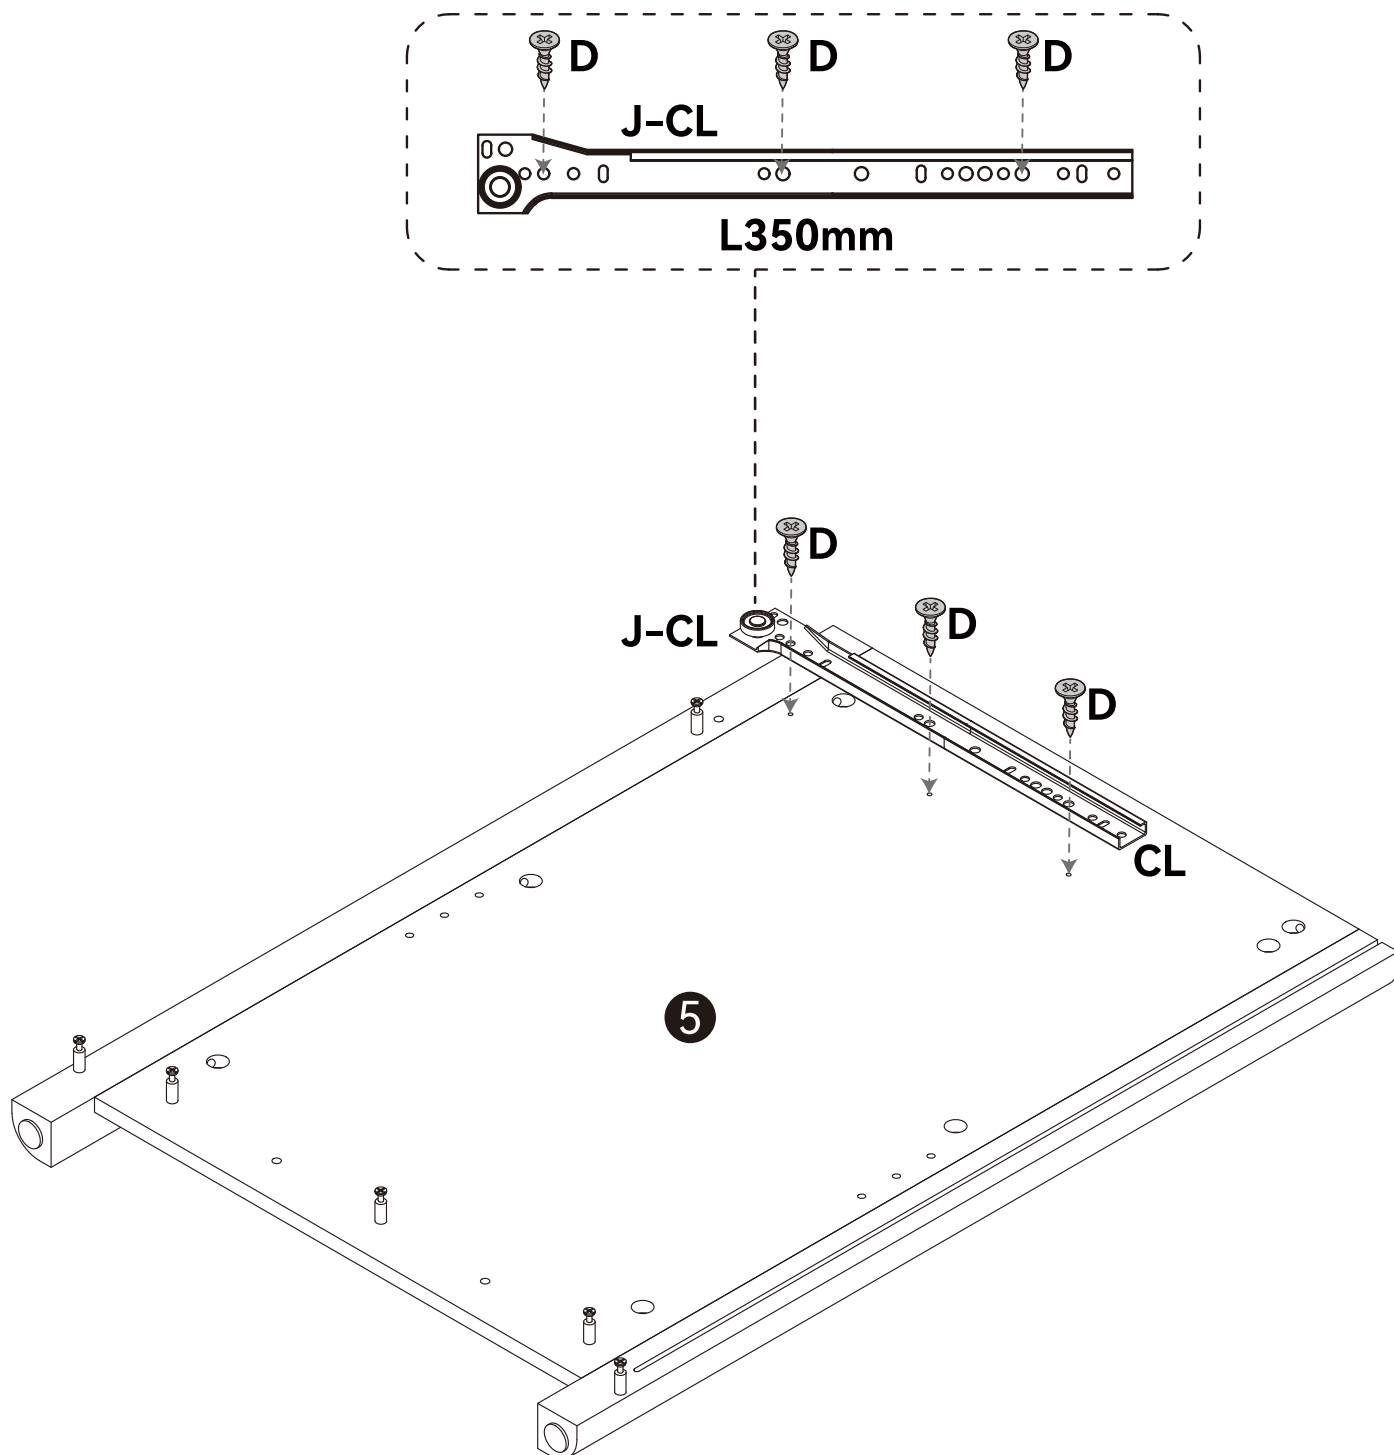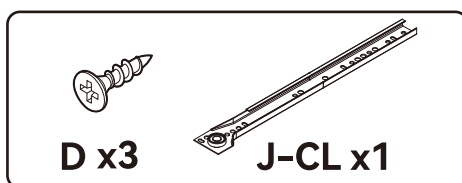




20

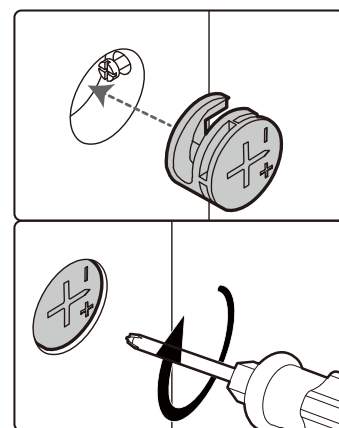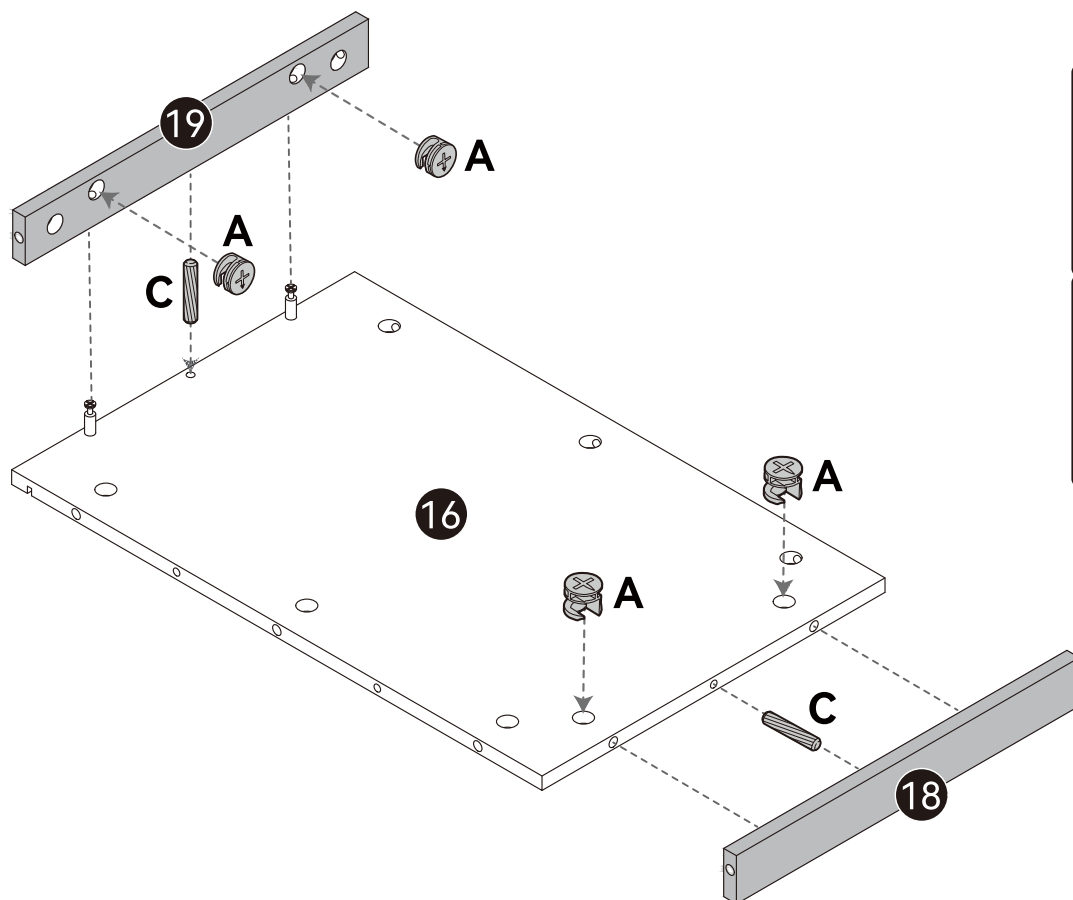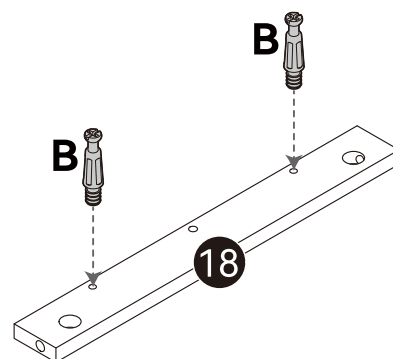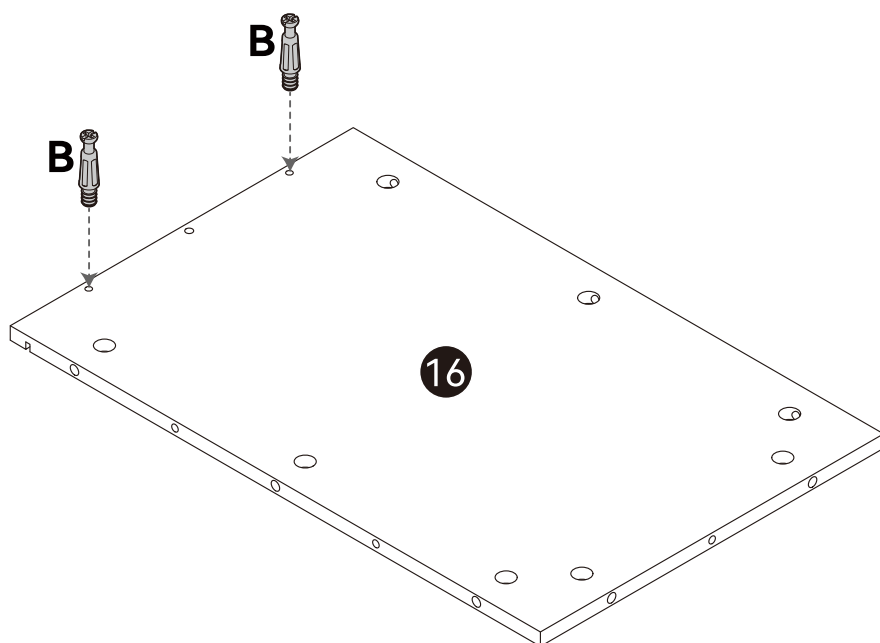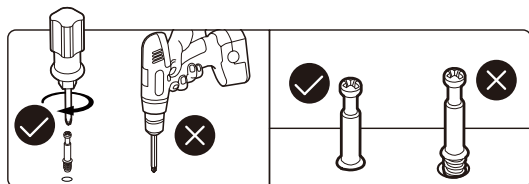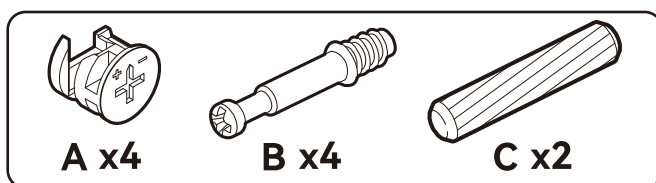




21

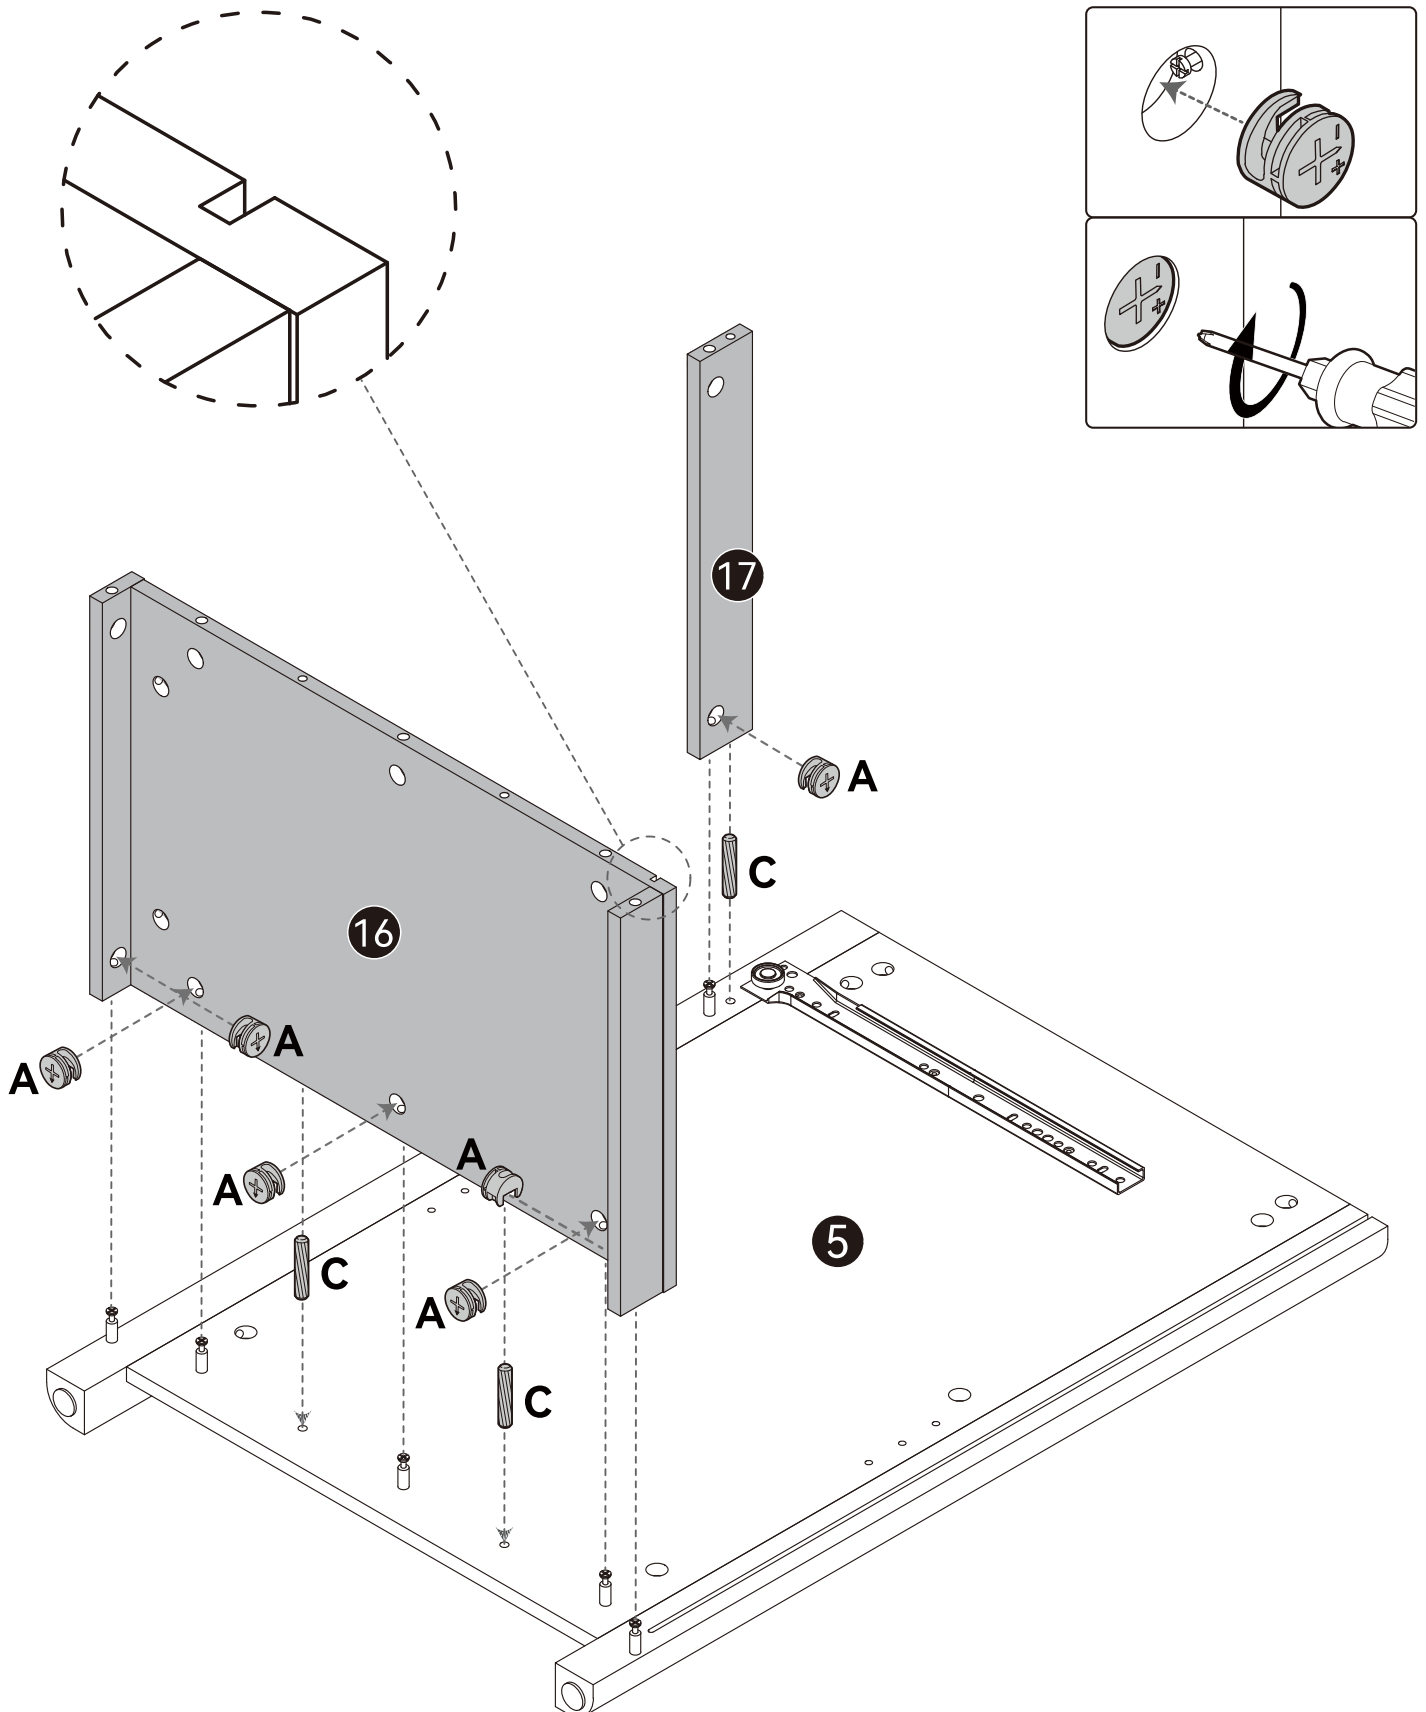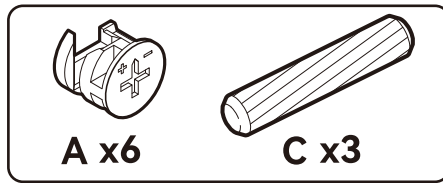



22

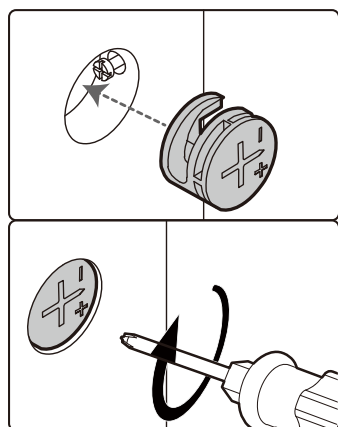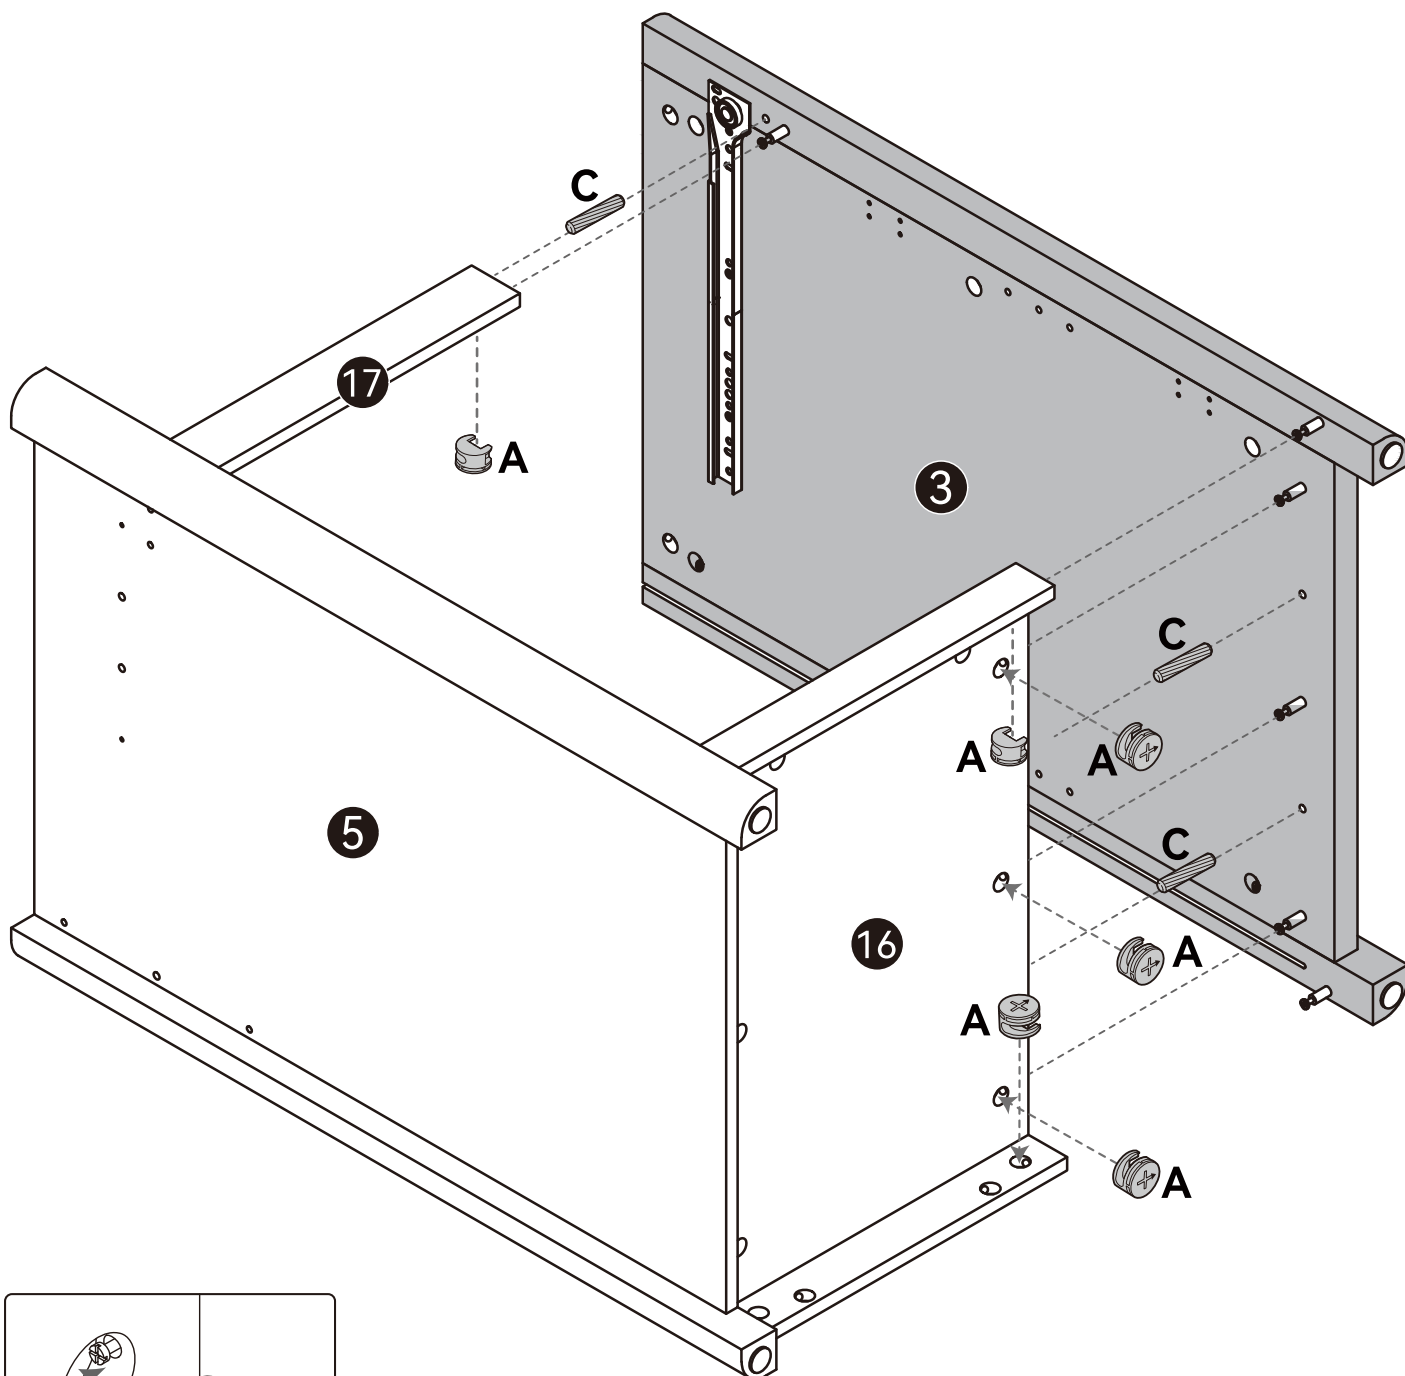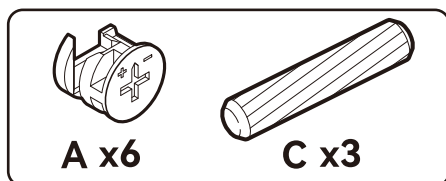

23

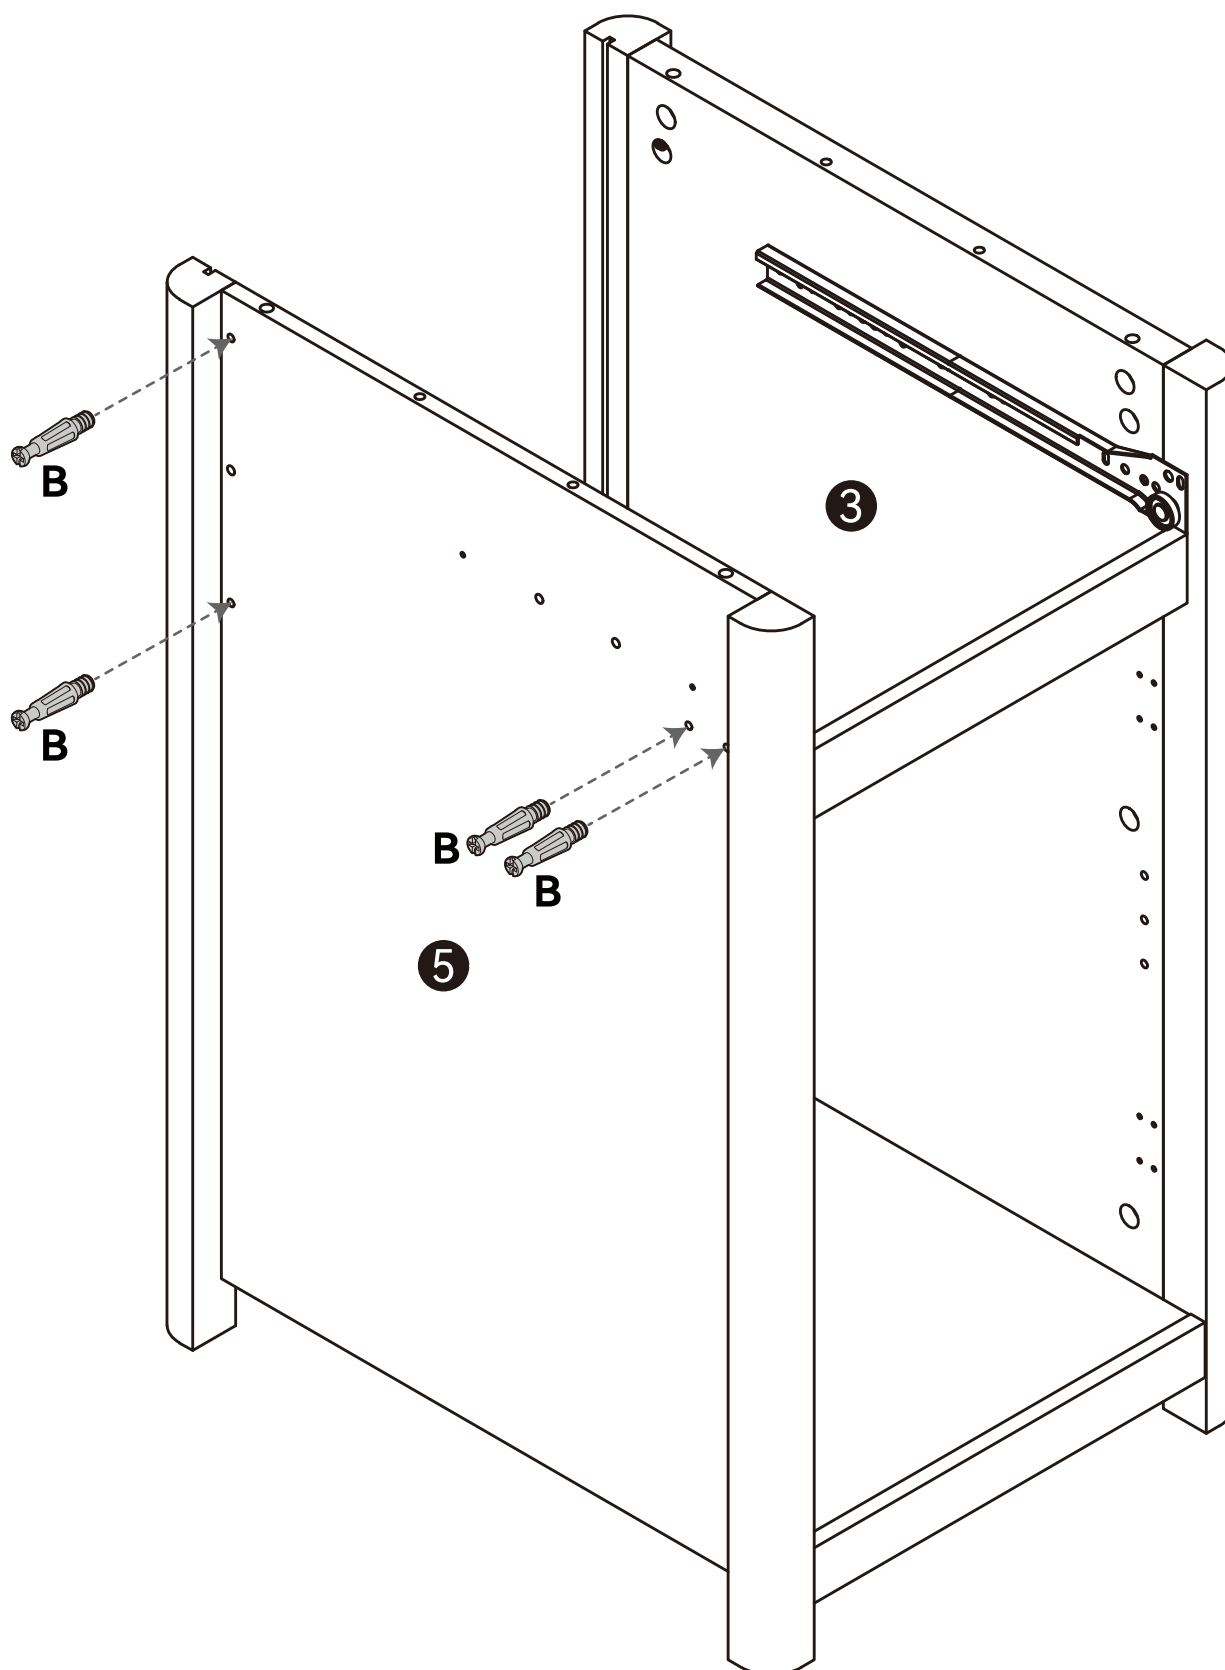
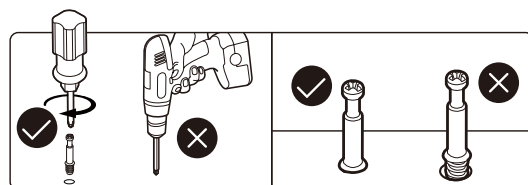
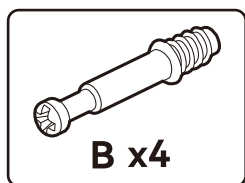


24


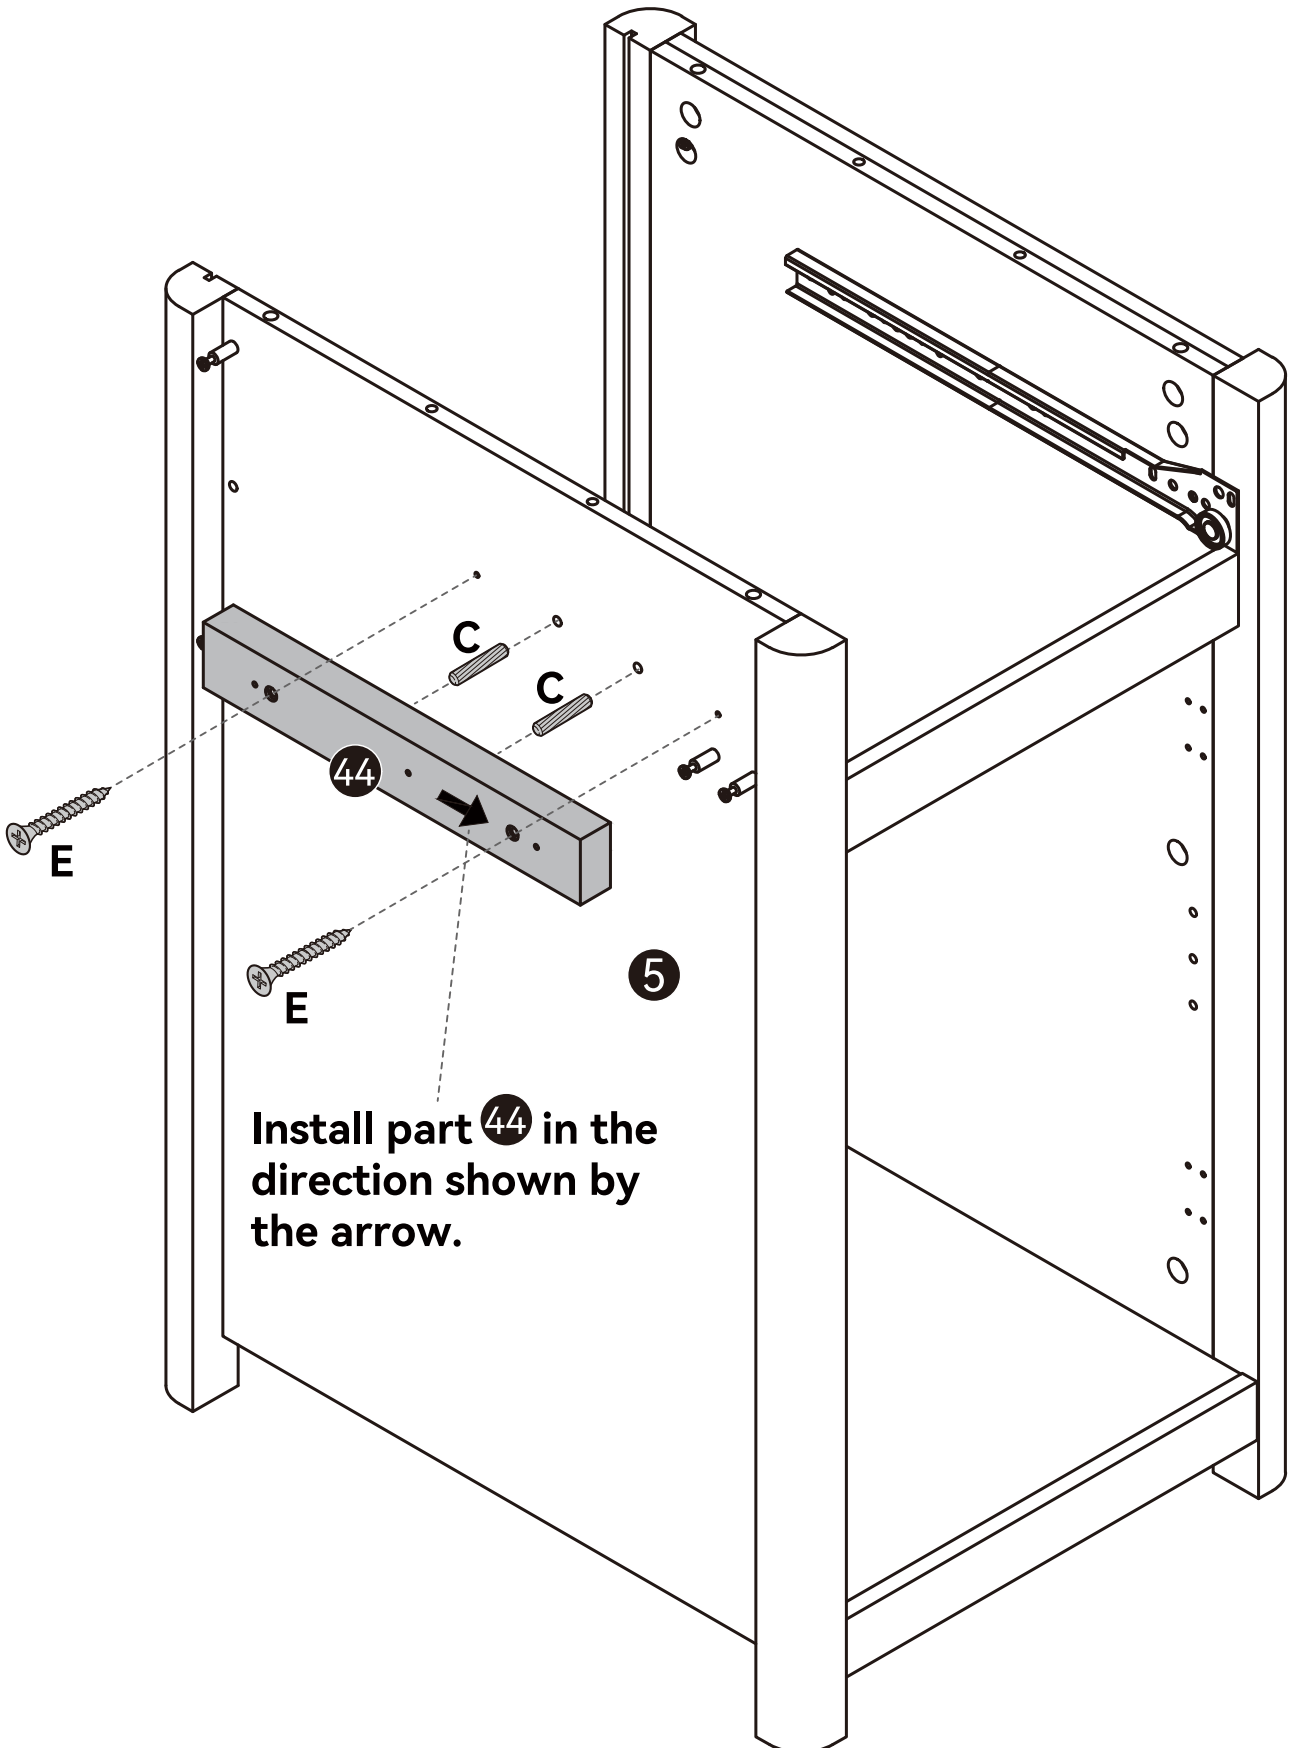
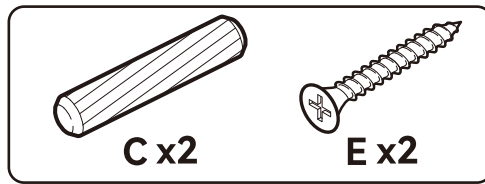


Install part 44 in the direction shown by the arrow.


25

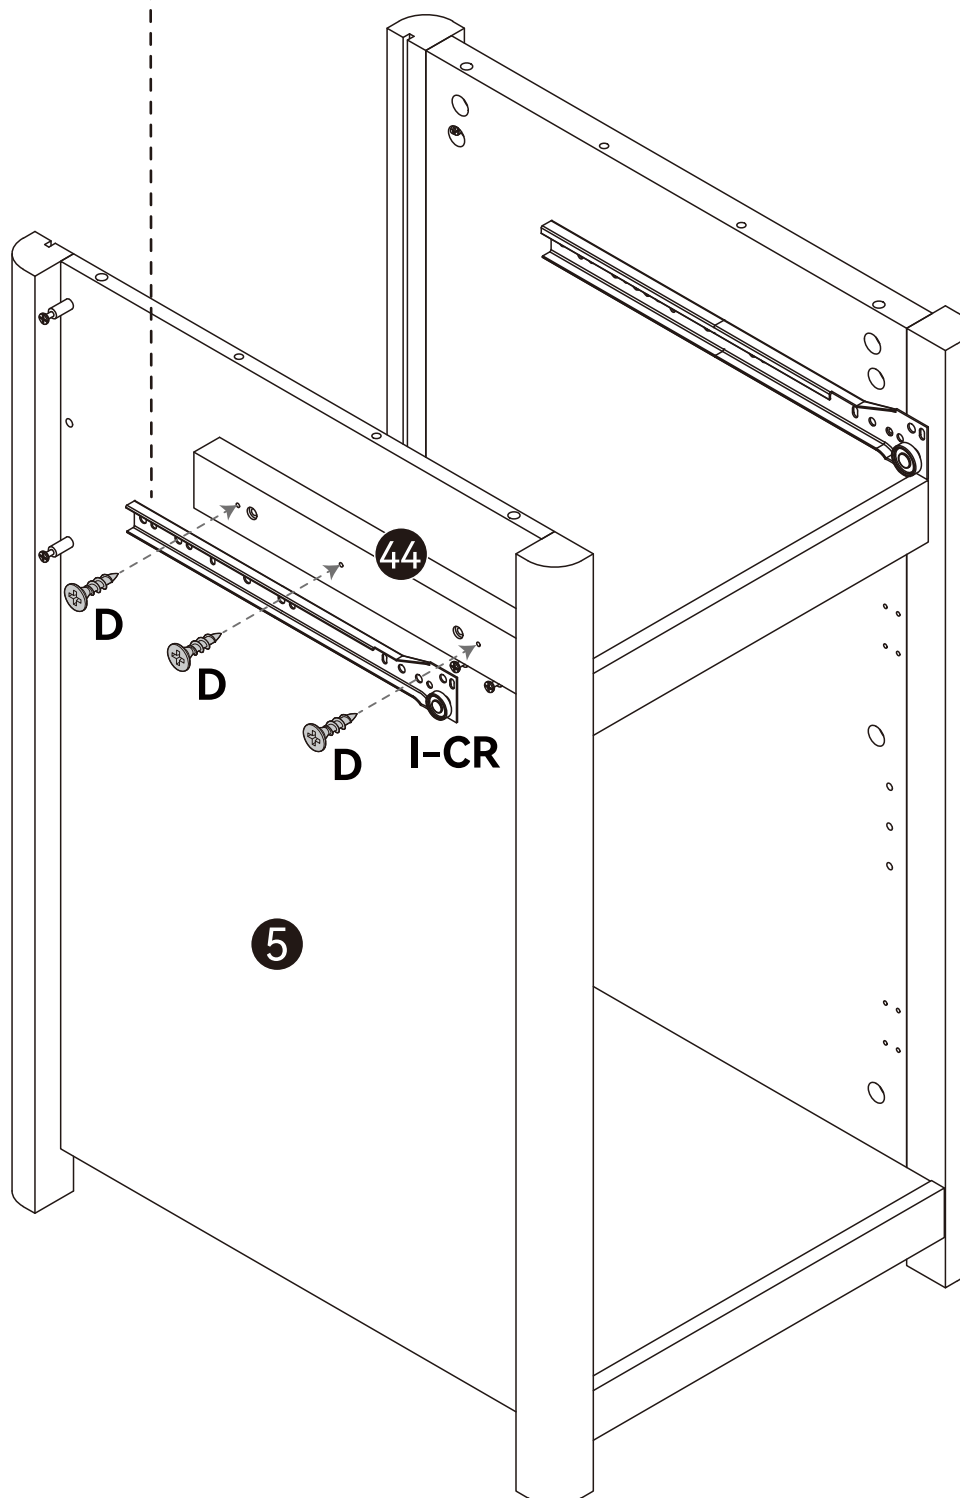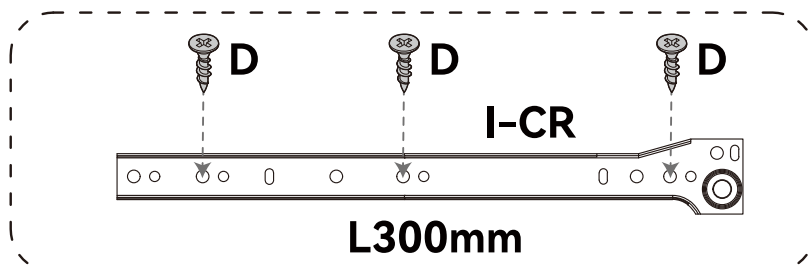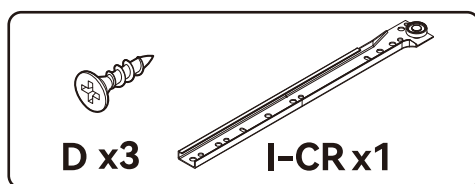




26

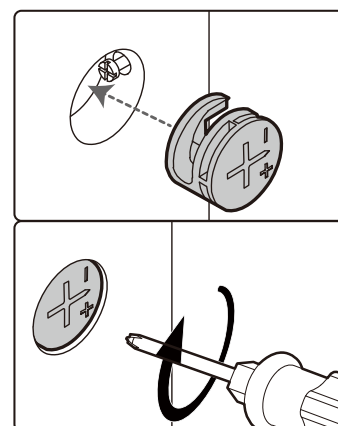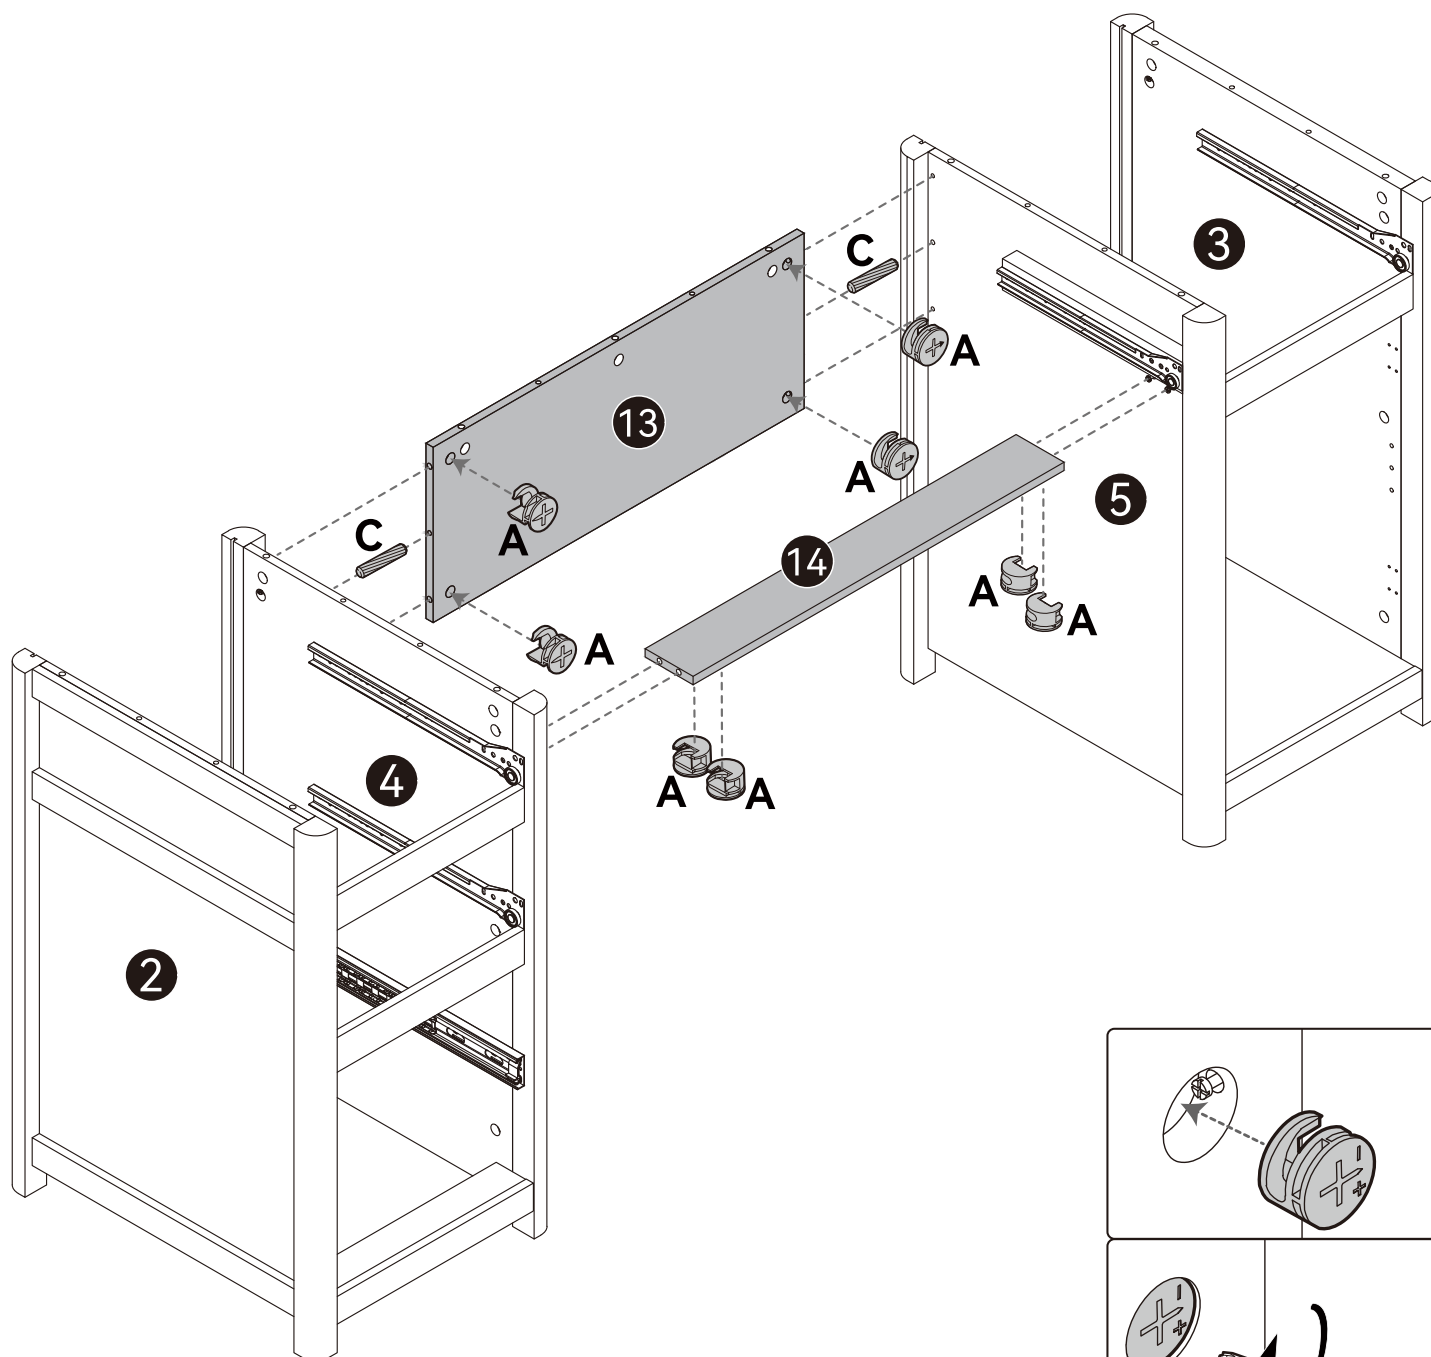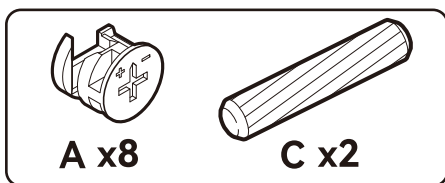




27

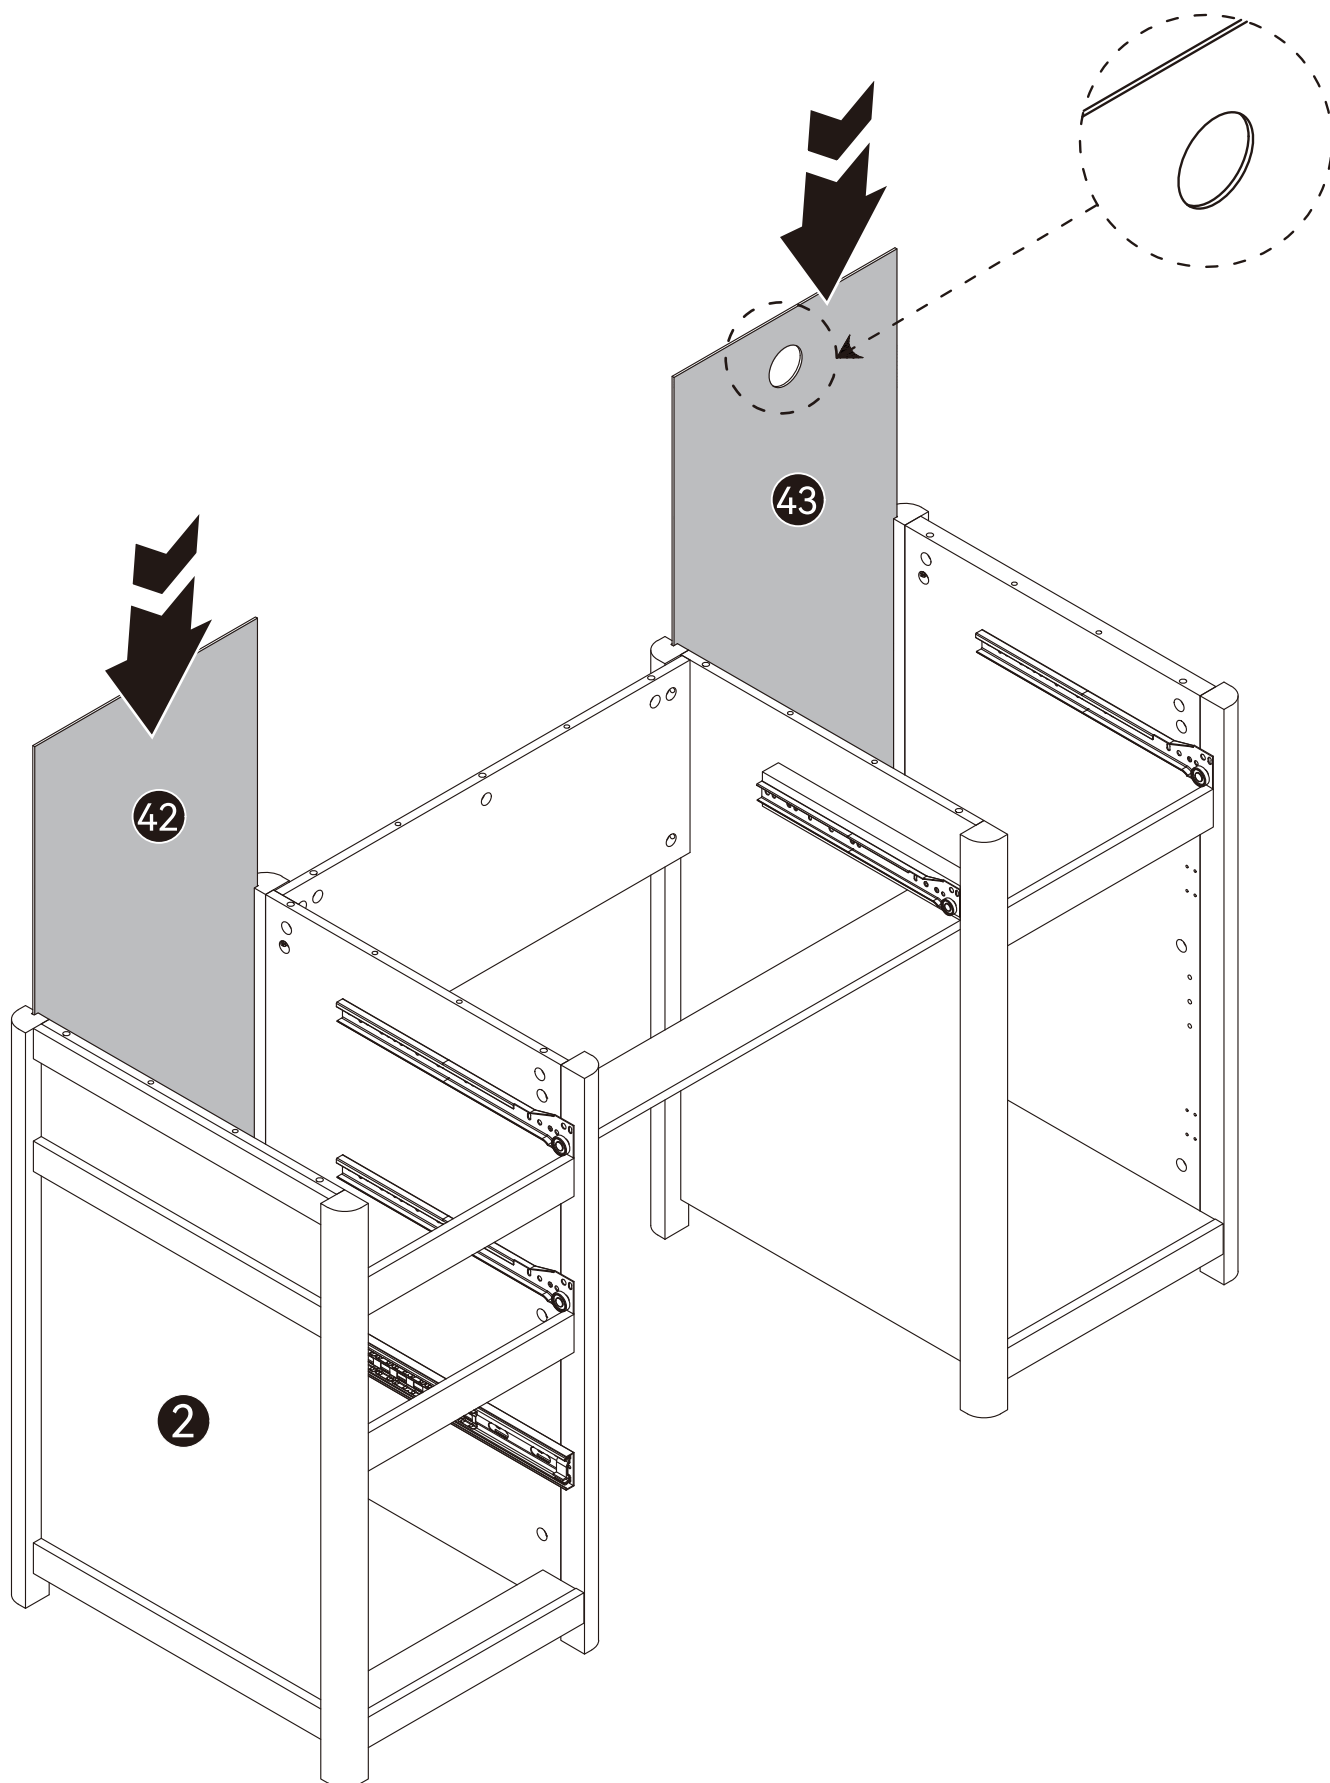



28

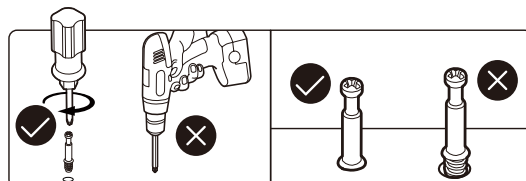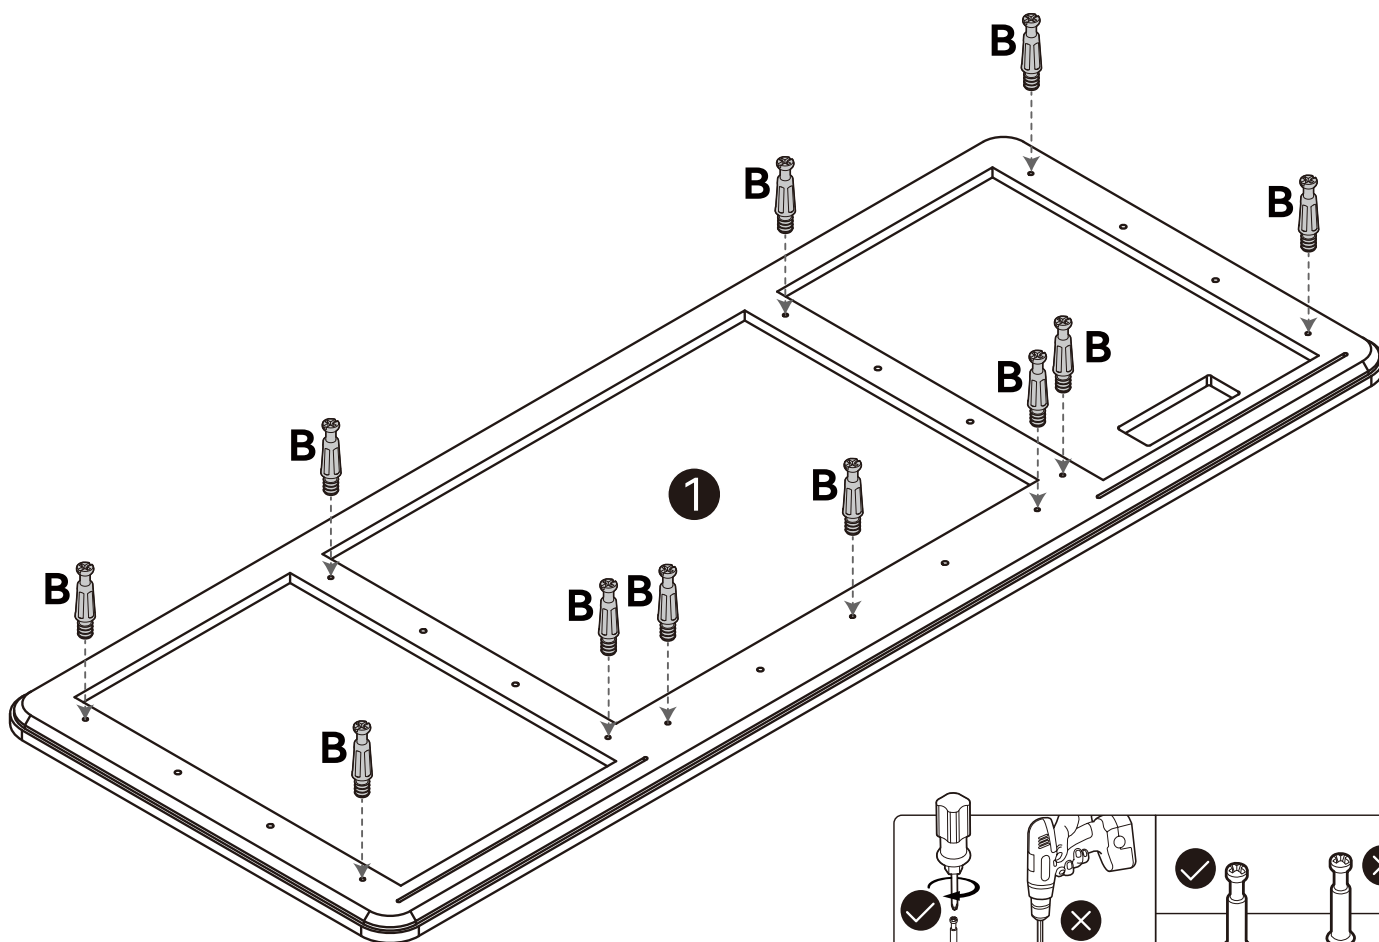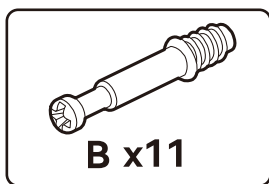


29

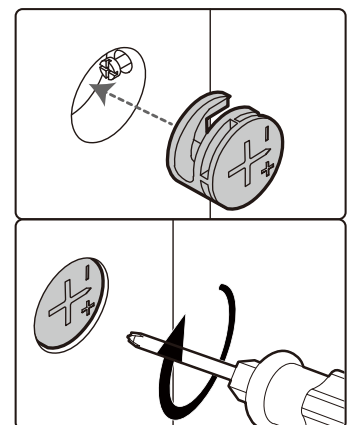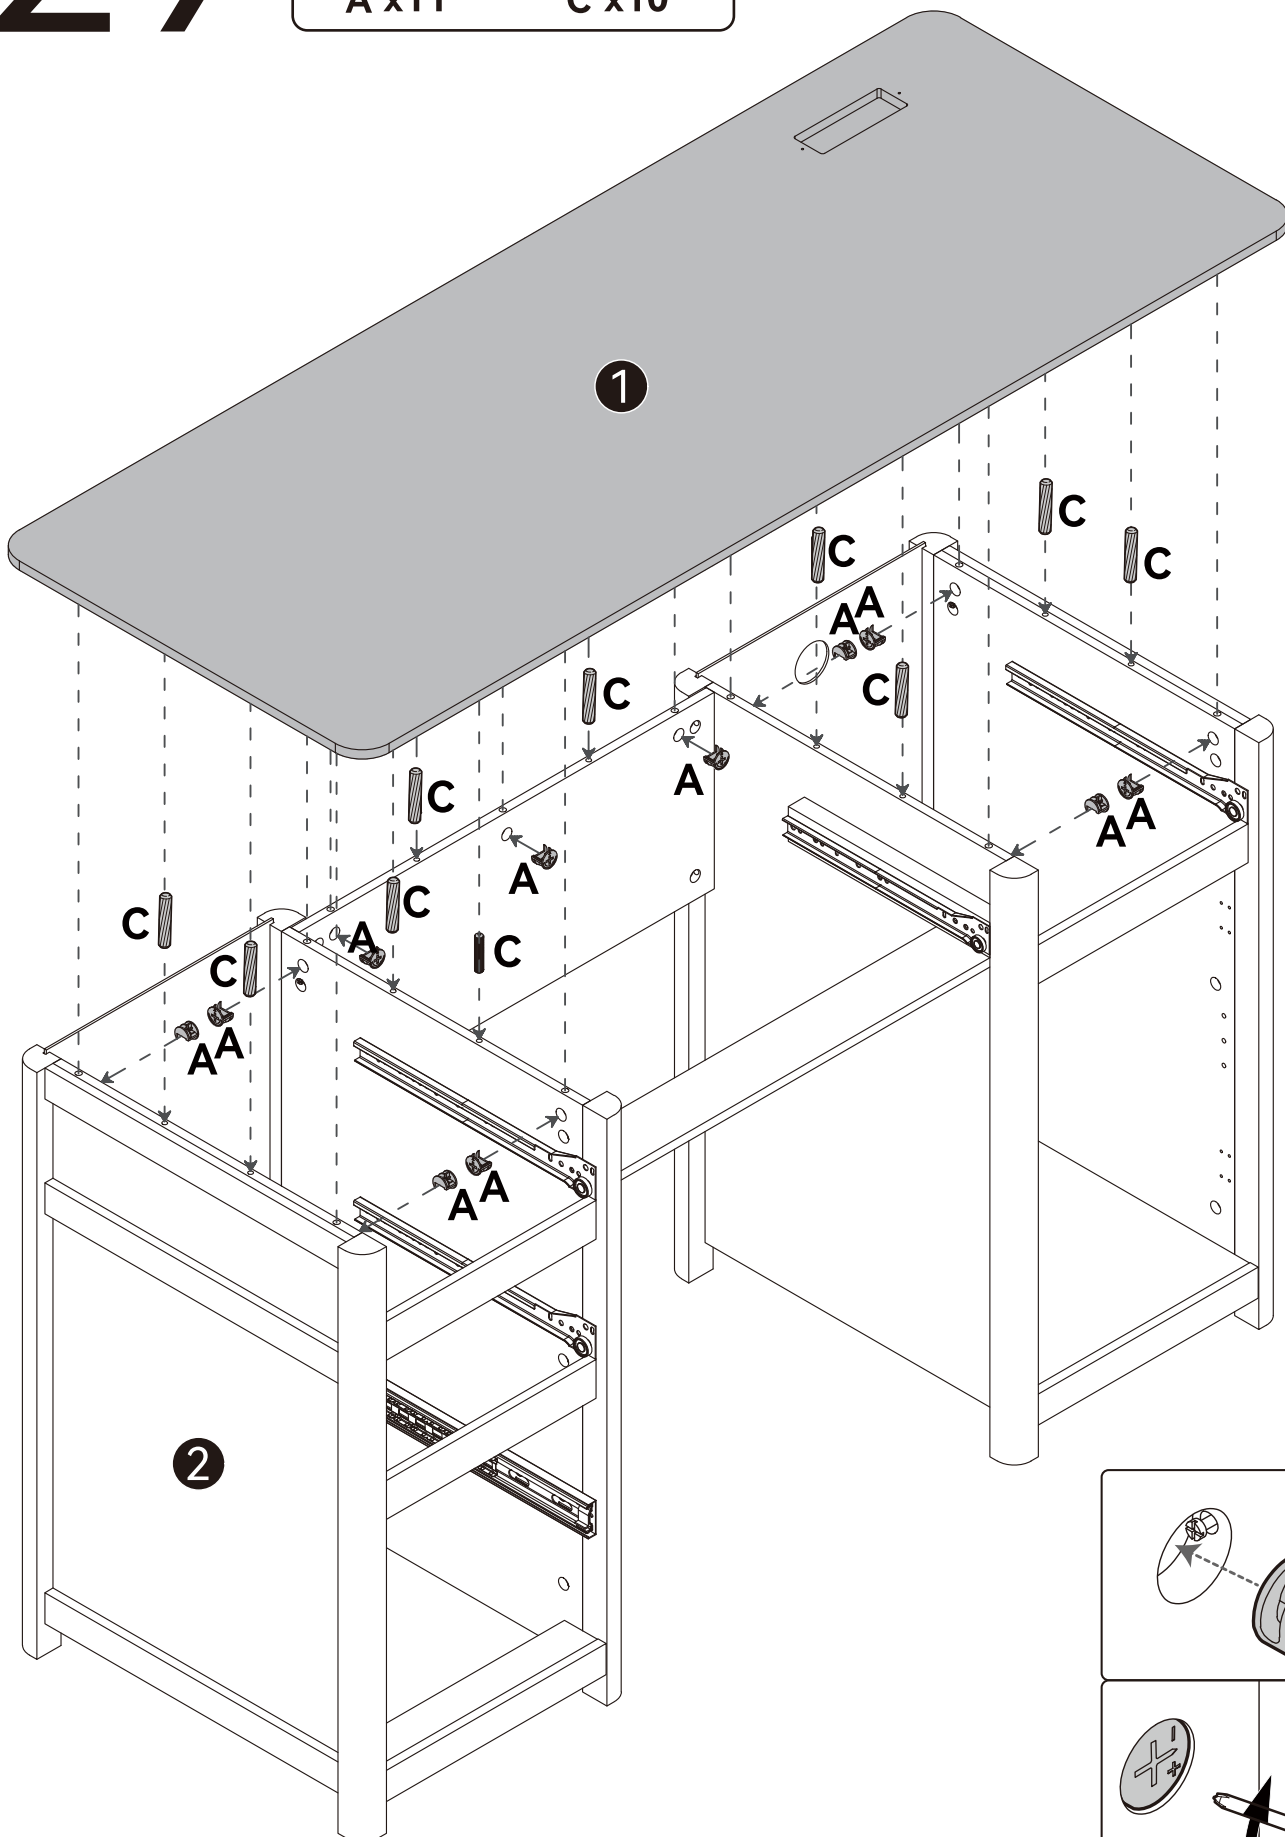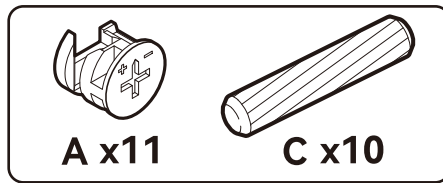




30

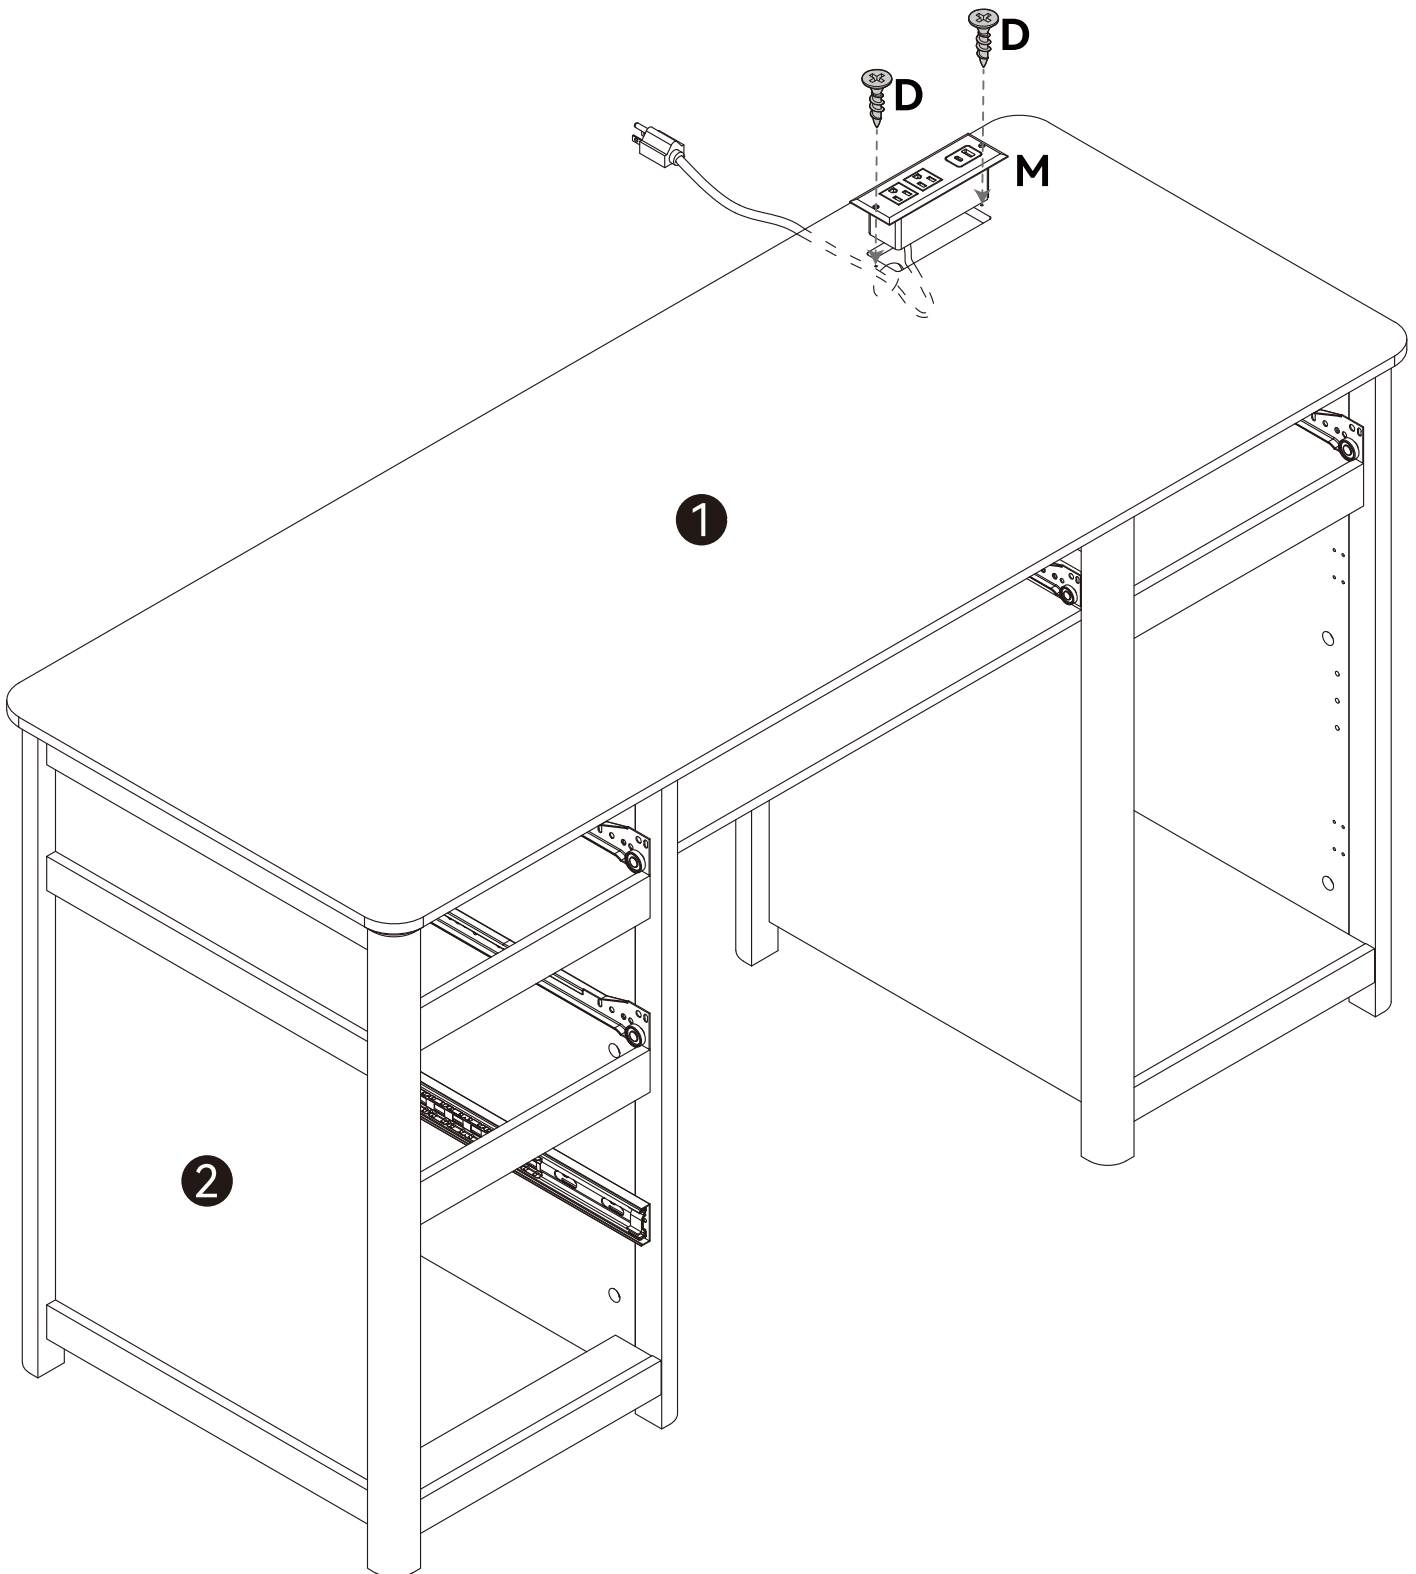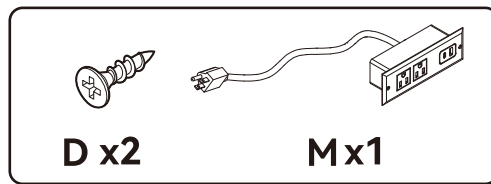

31


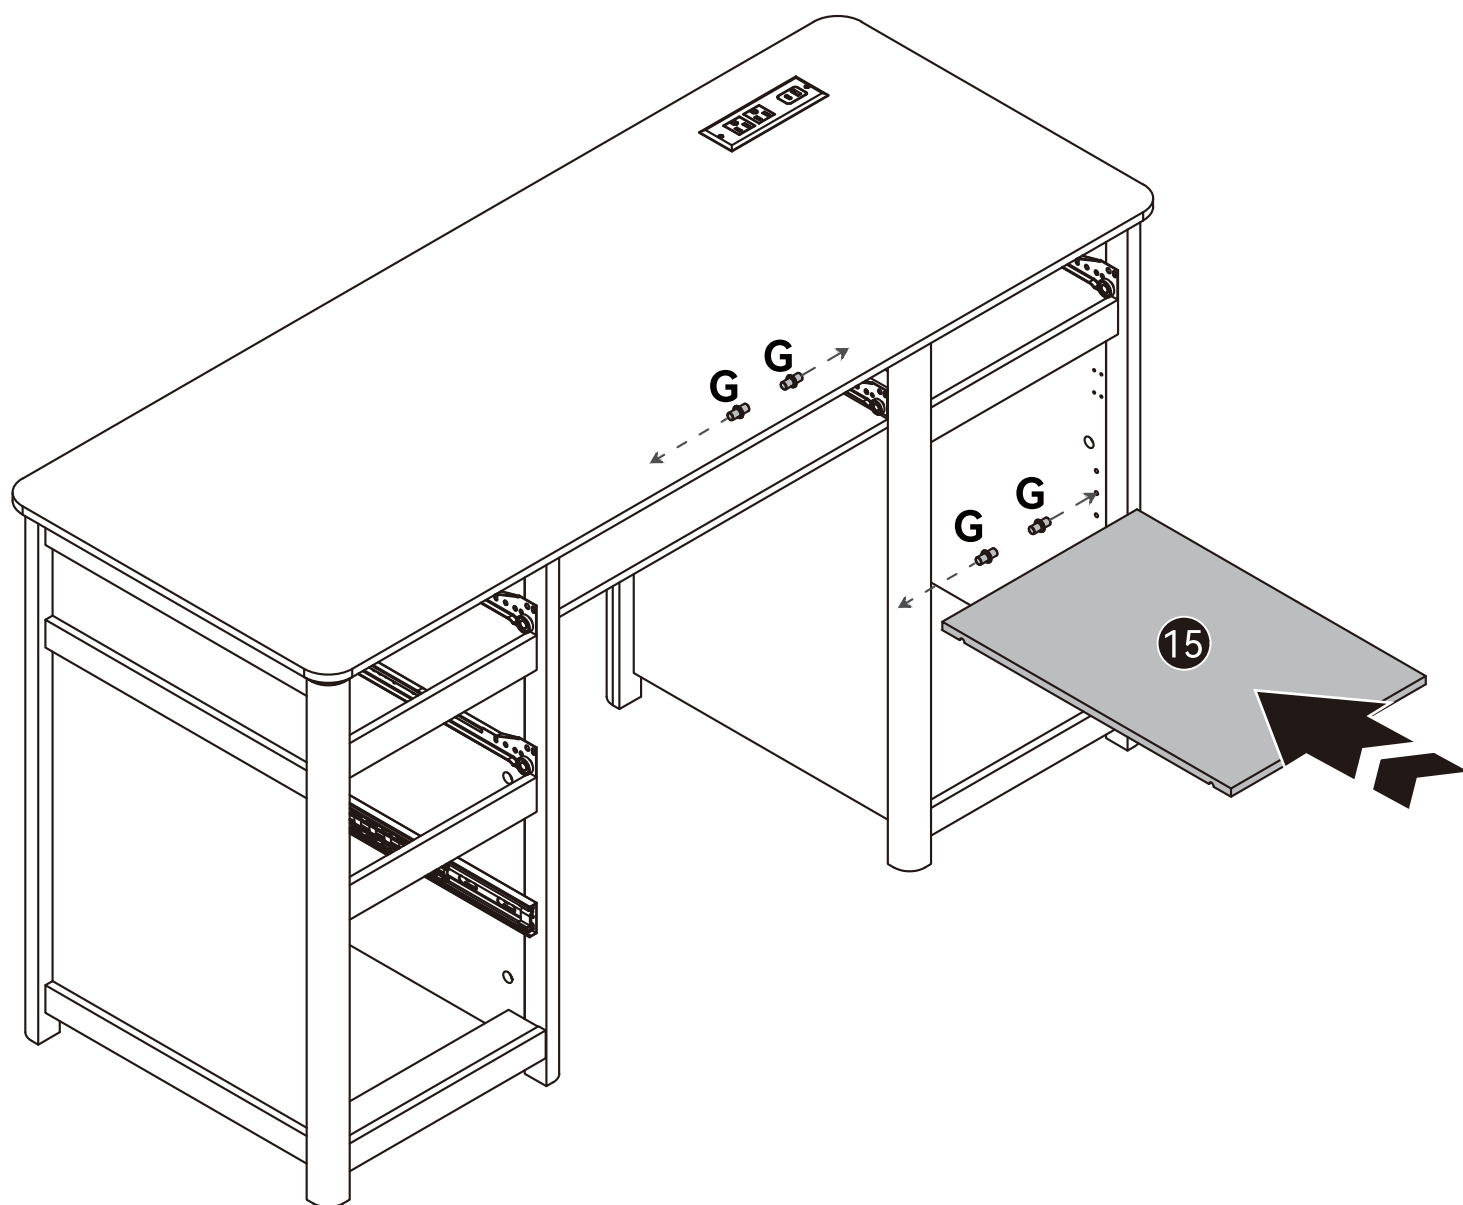


32


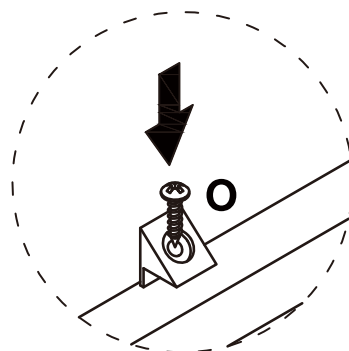
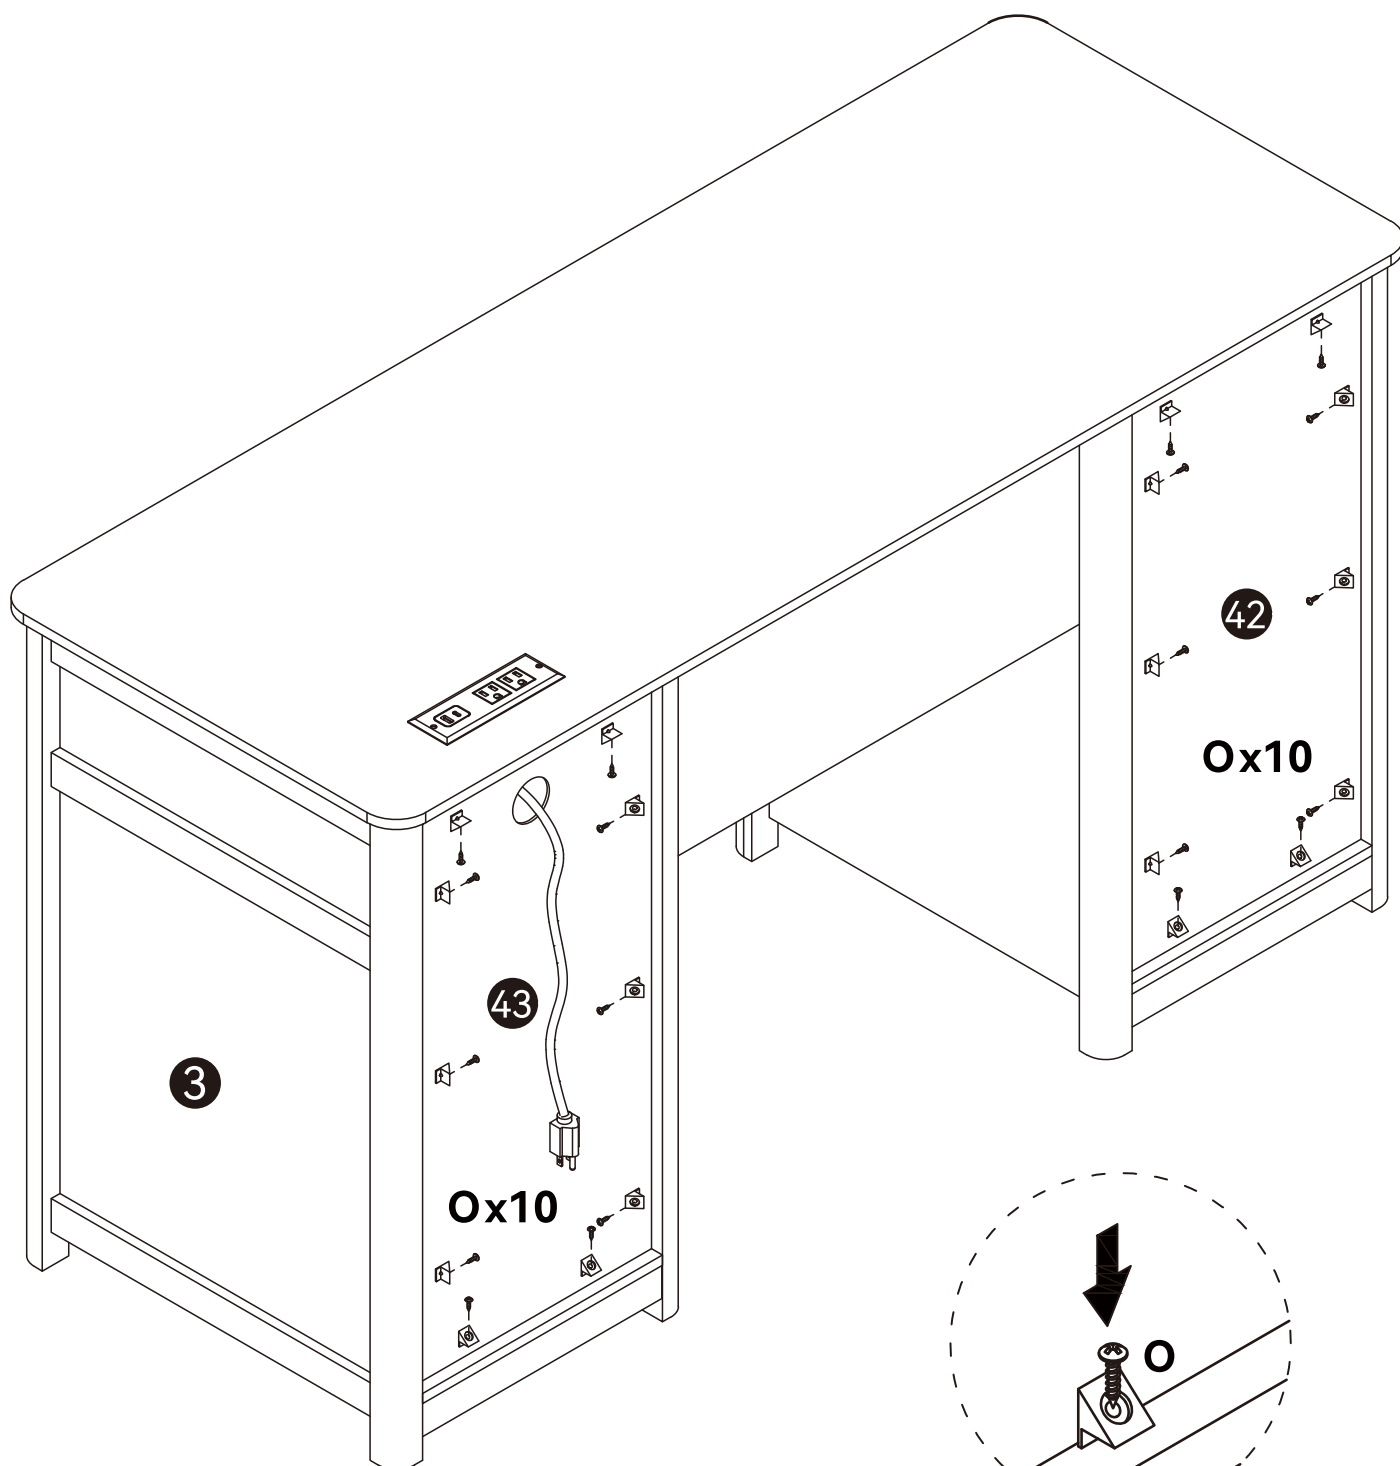
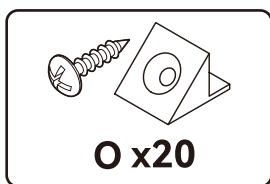


Insert the plastic buckle into the slot on the back plate. Align the screw with the hole in the buckle and tighten to secure.





33

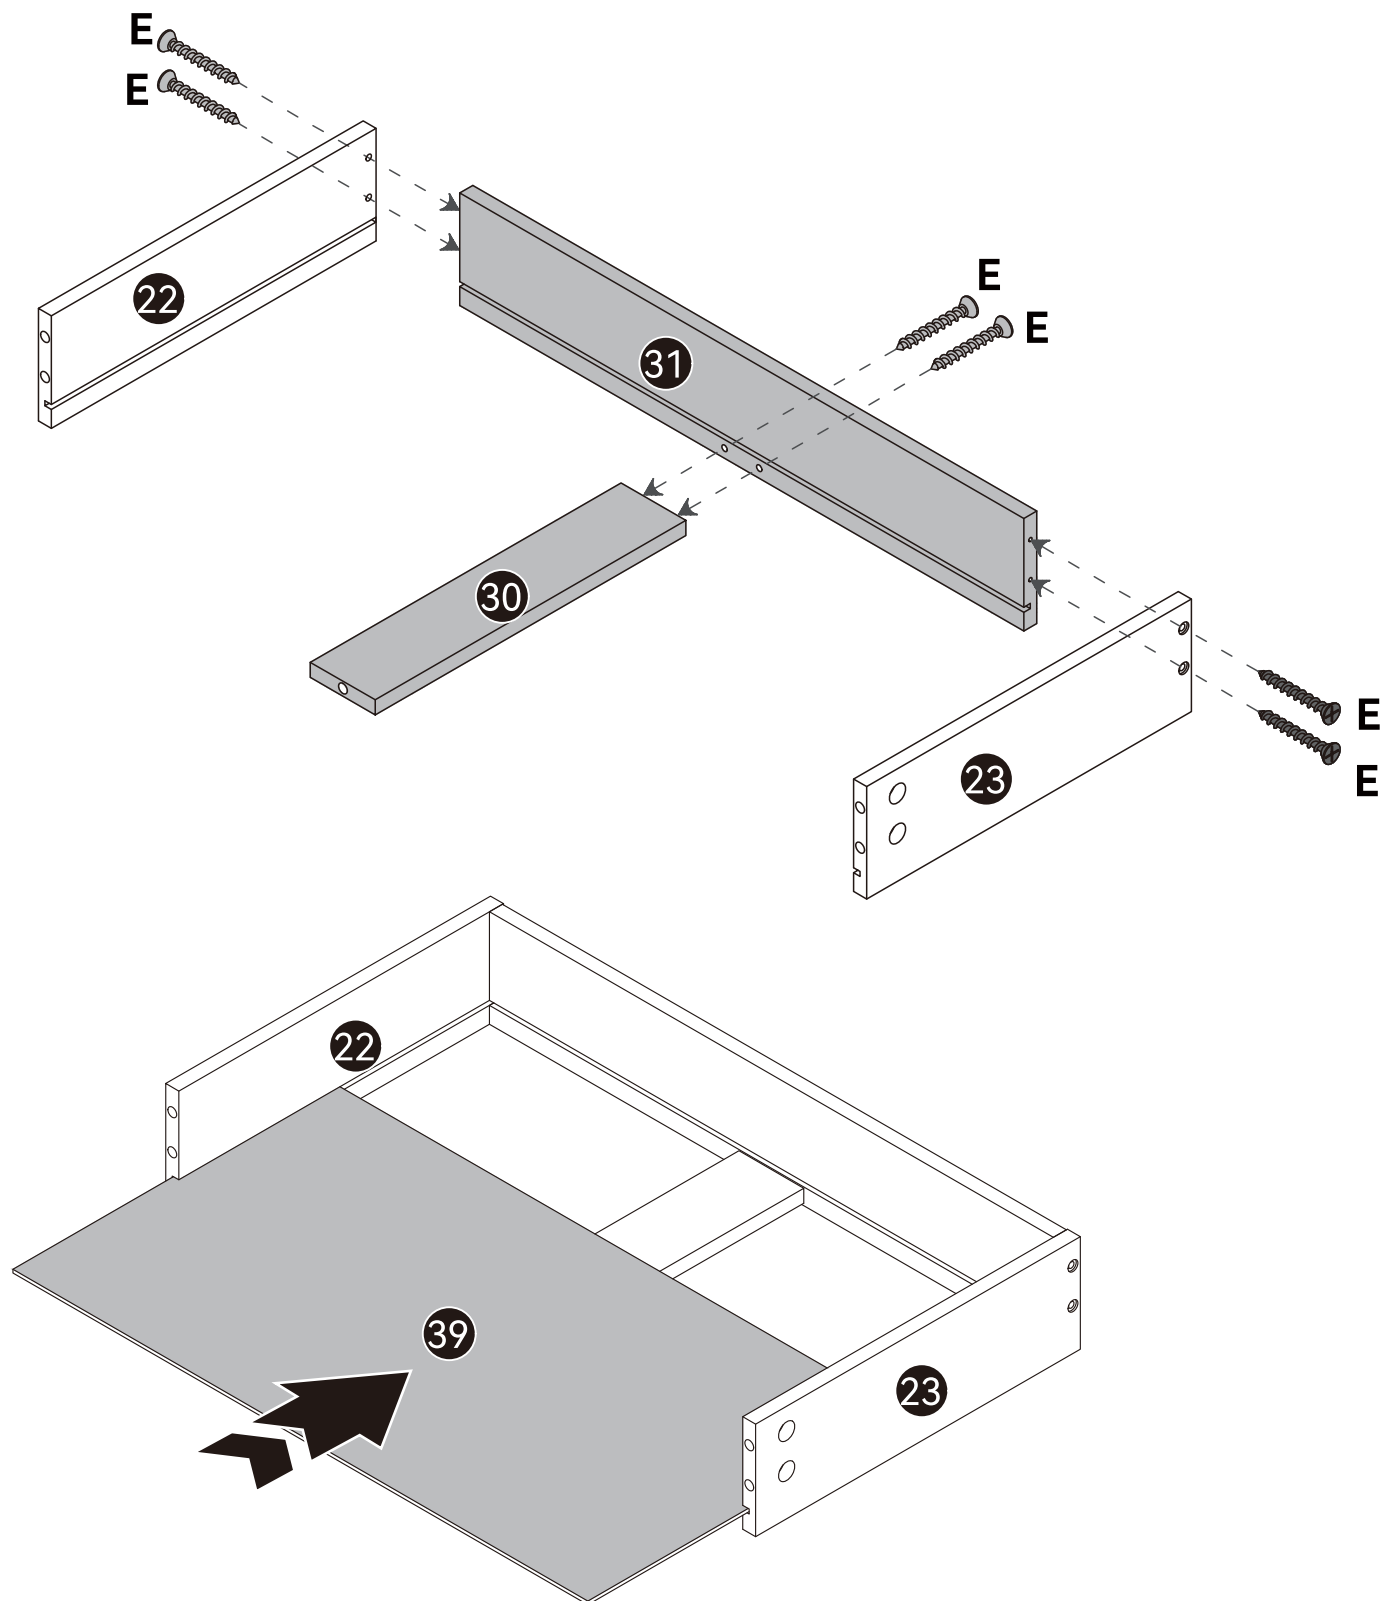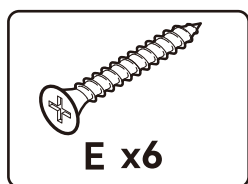




34

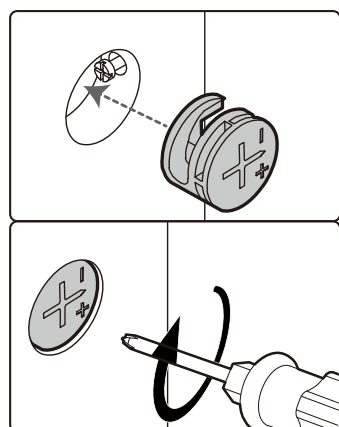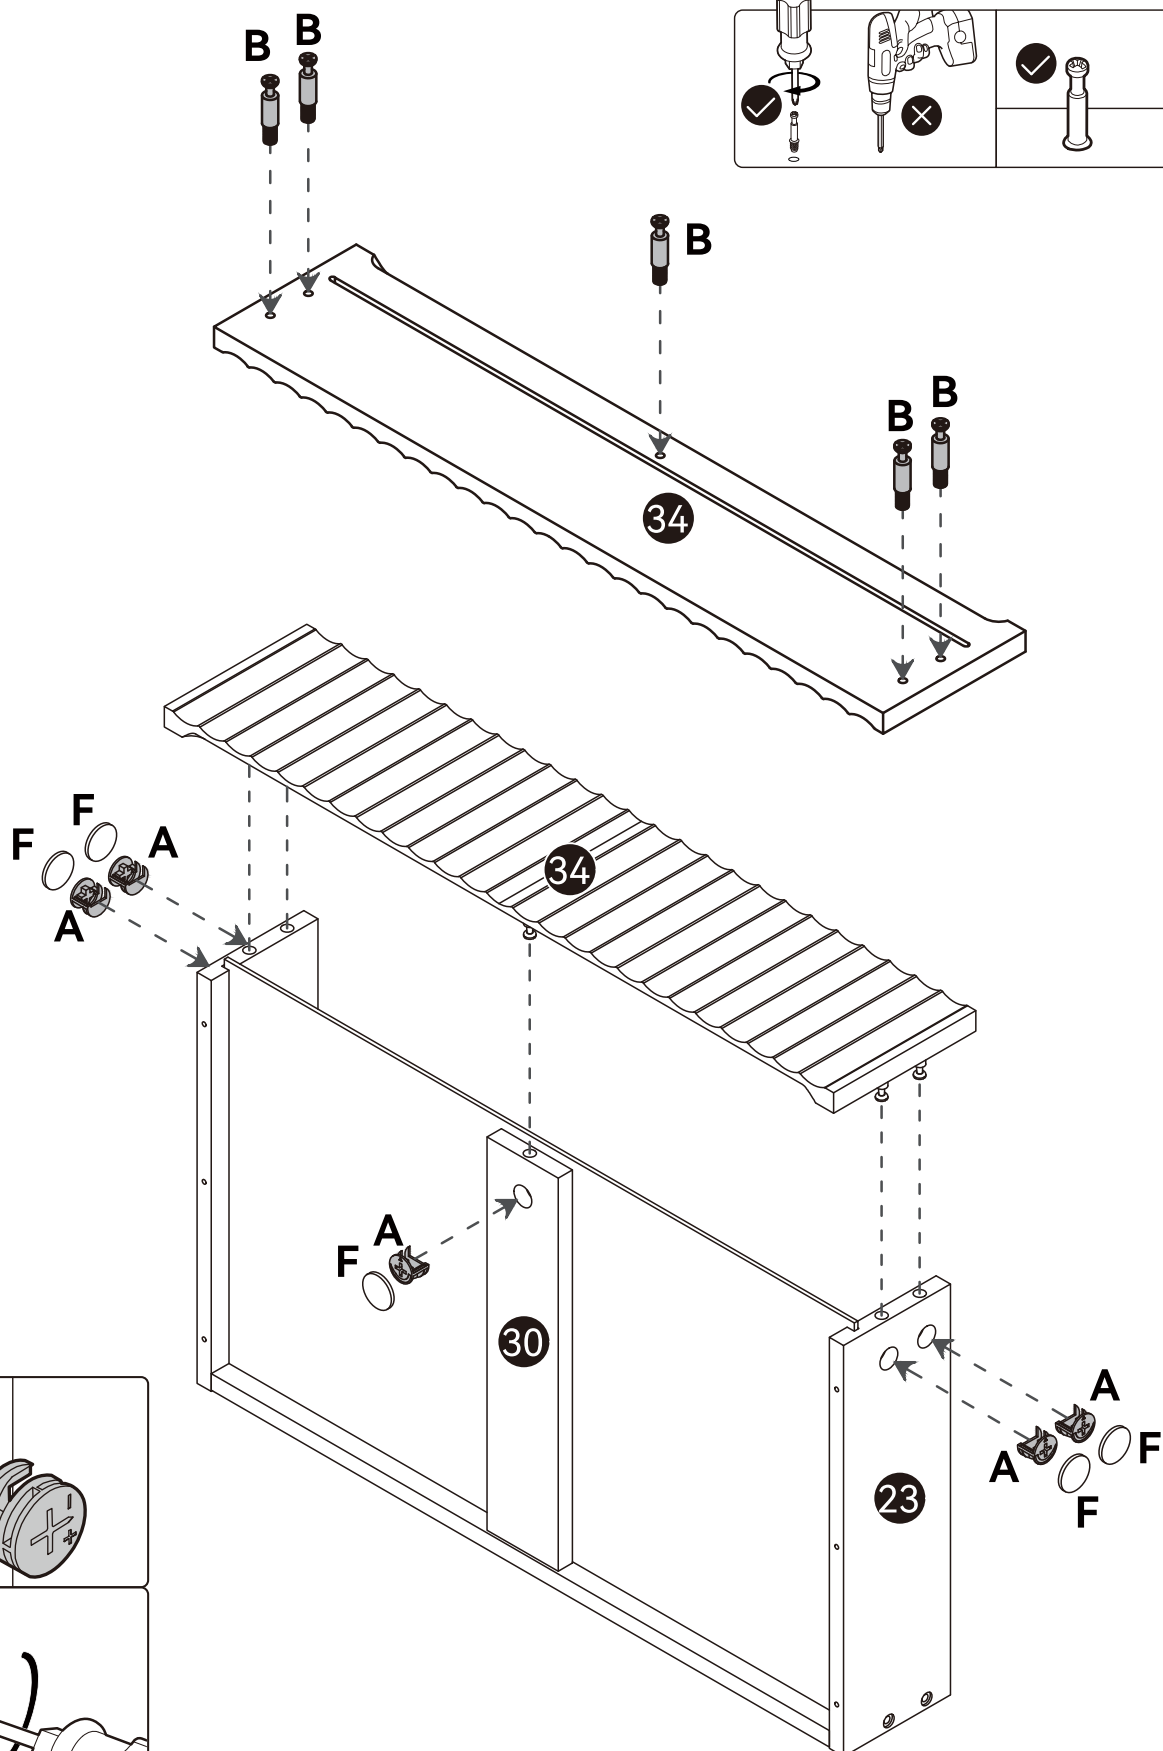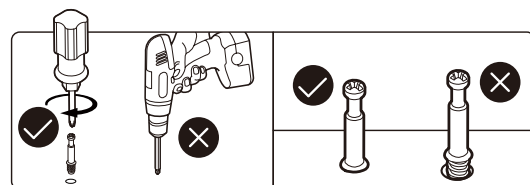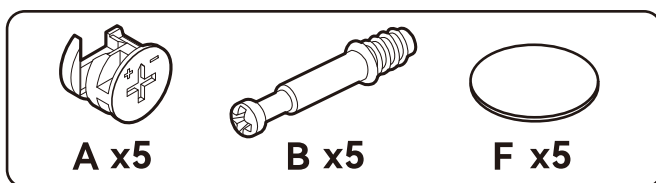





35

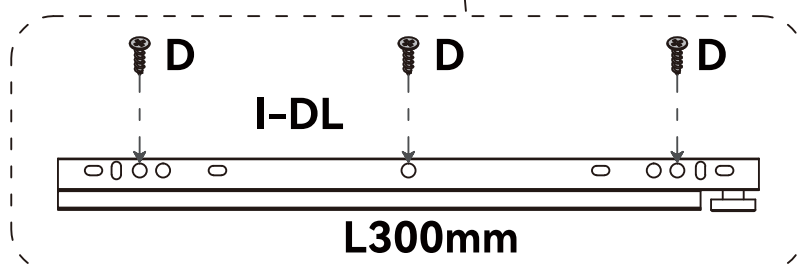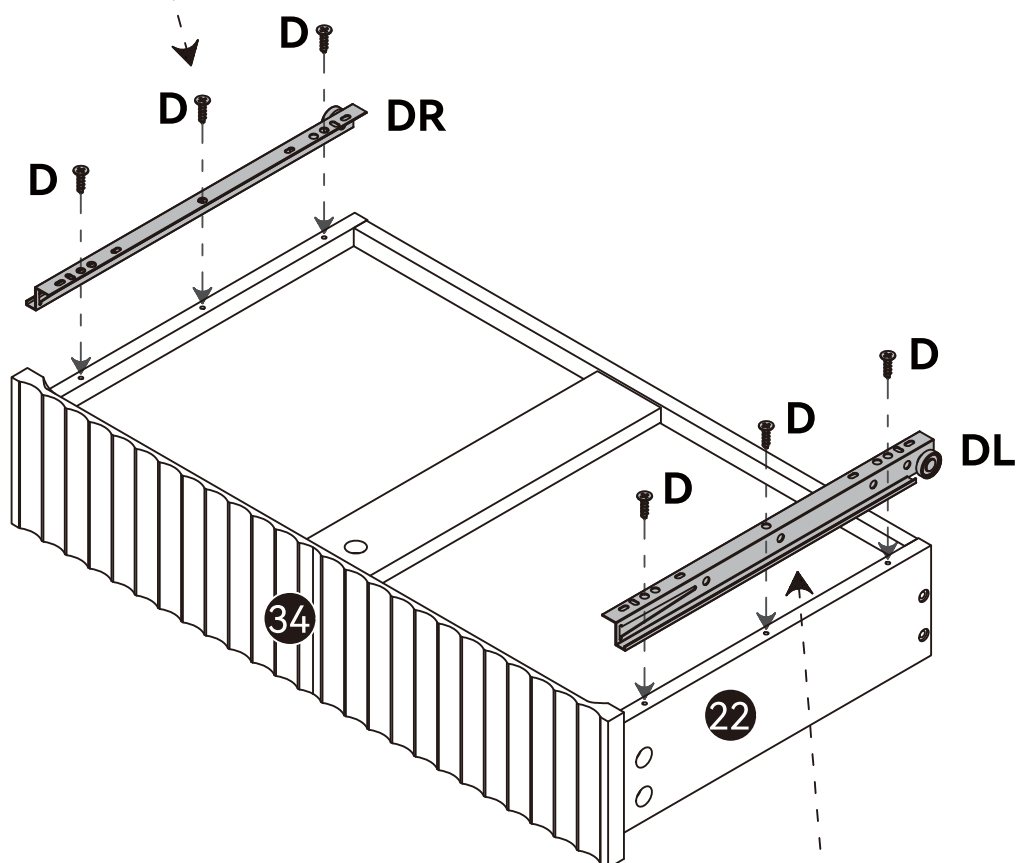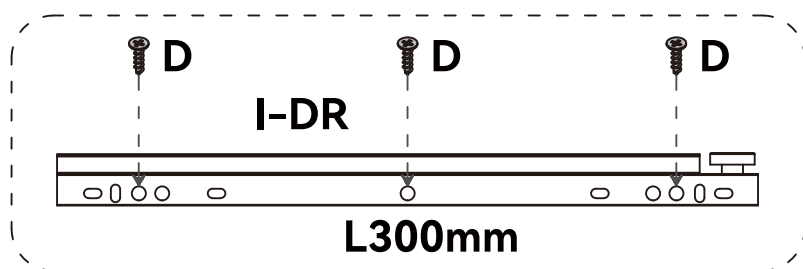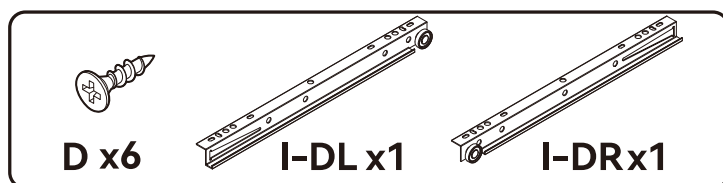


36

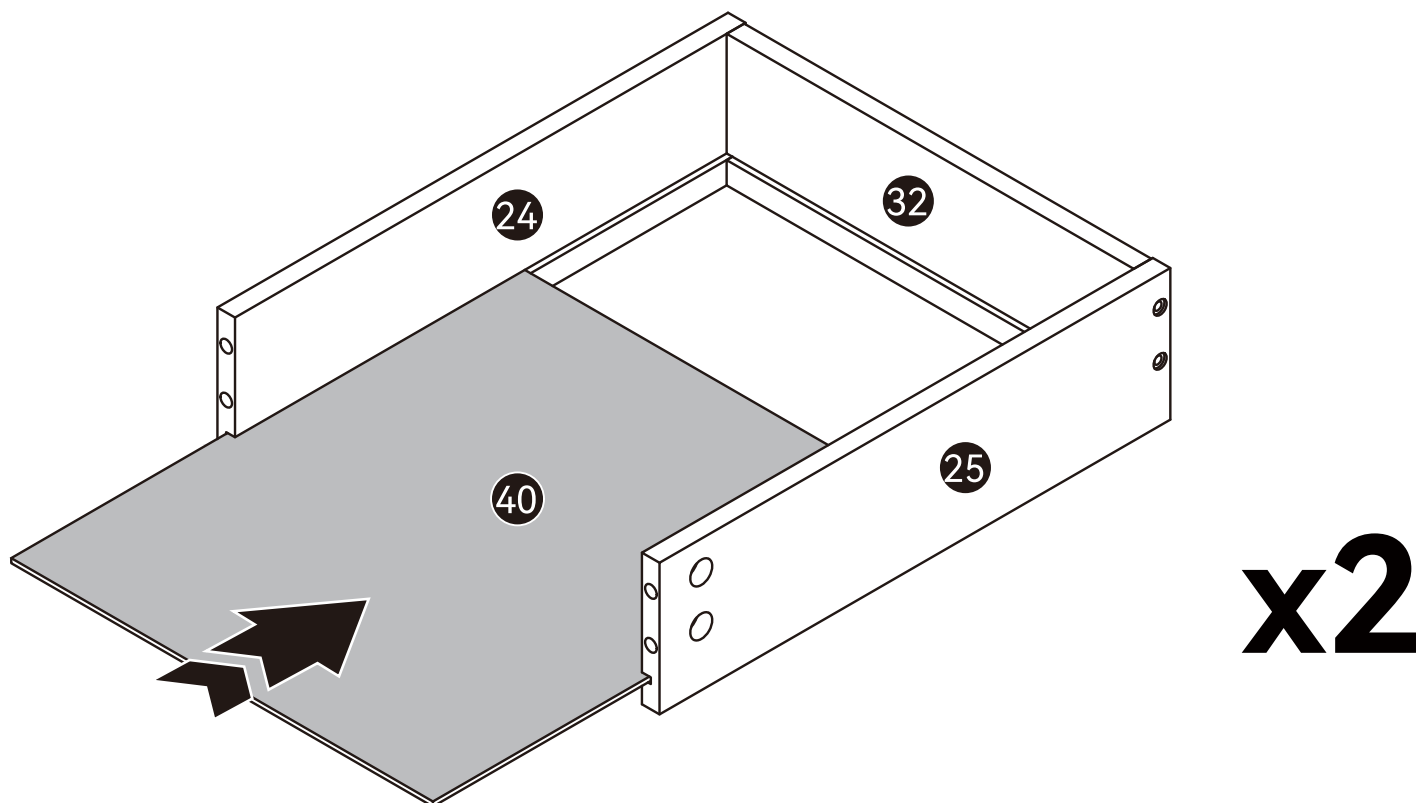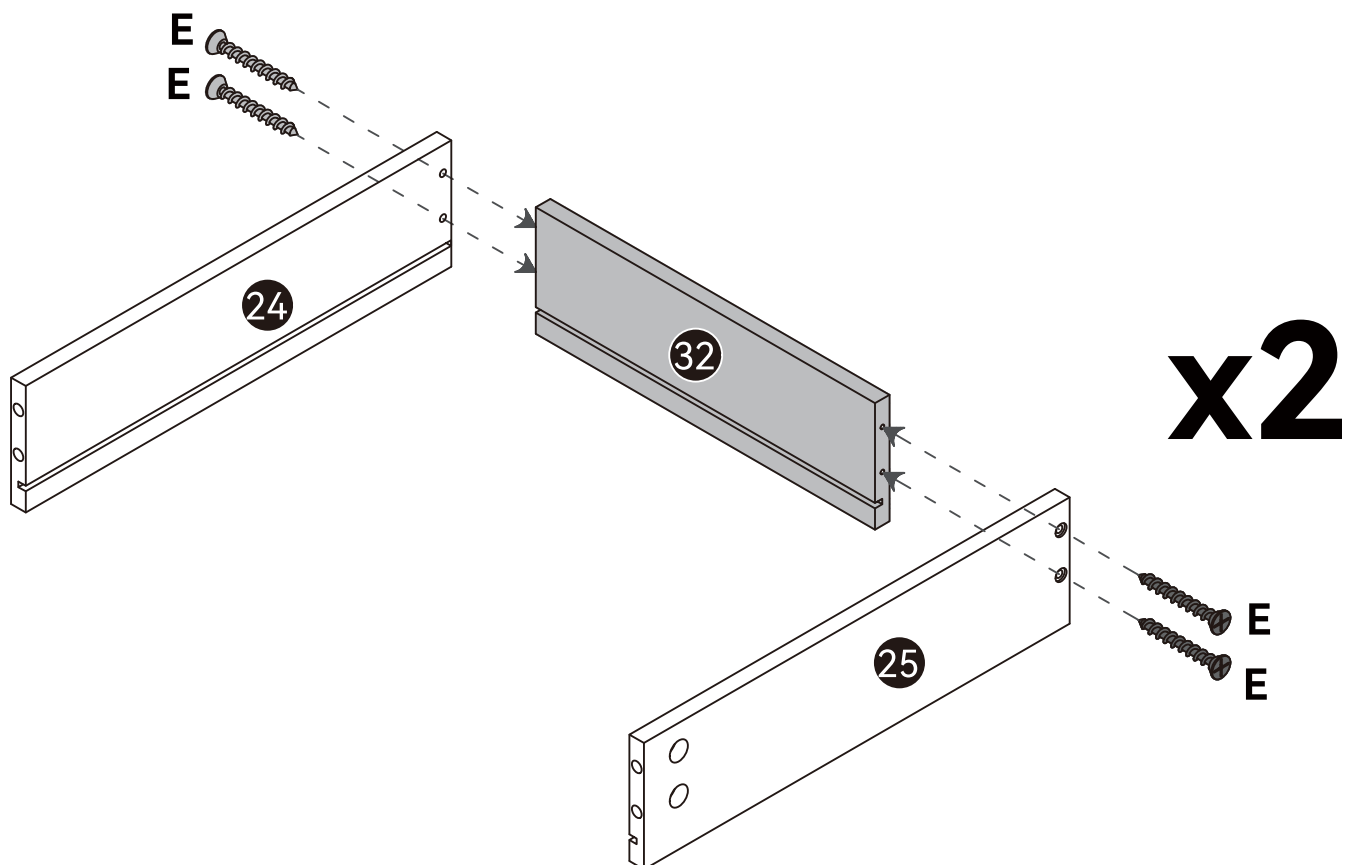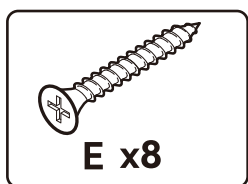




37

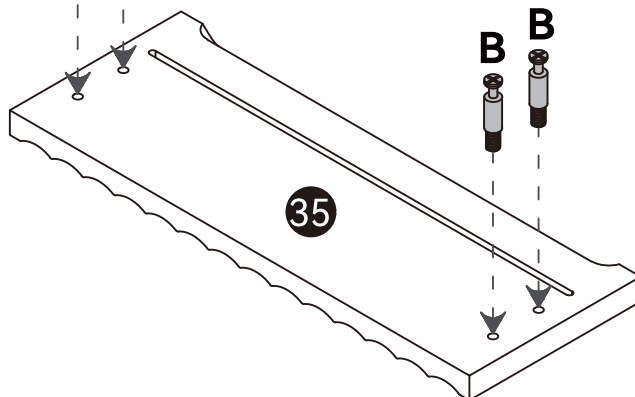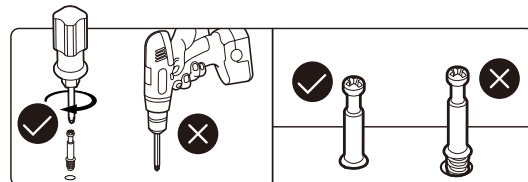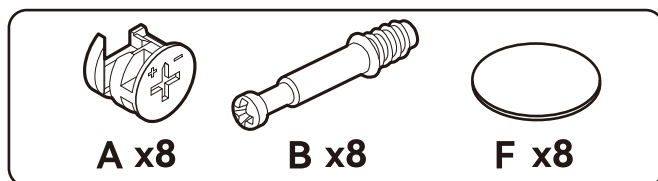




x2

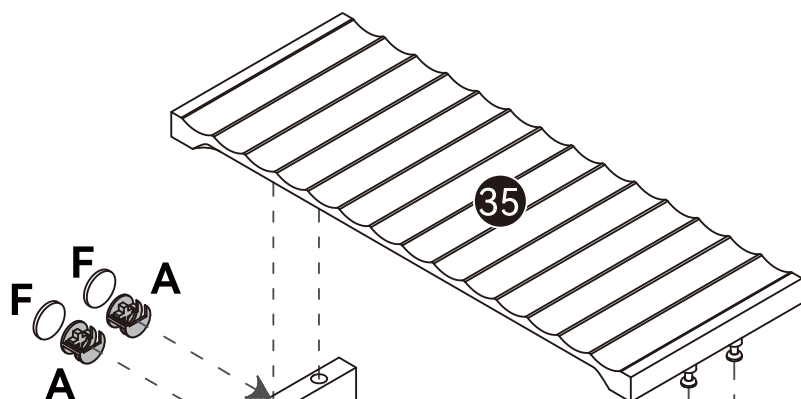


x2

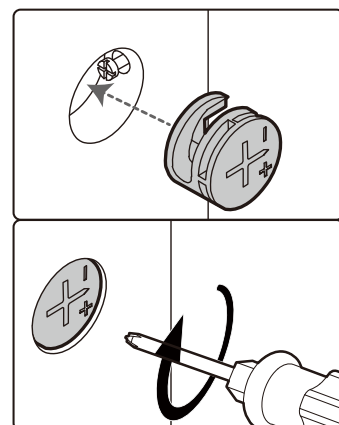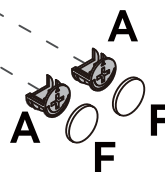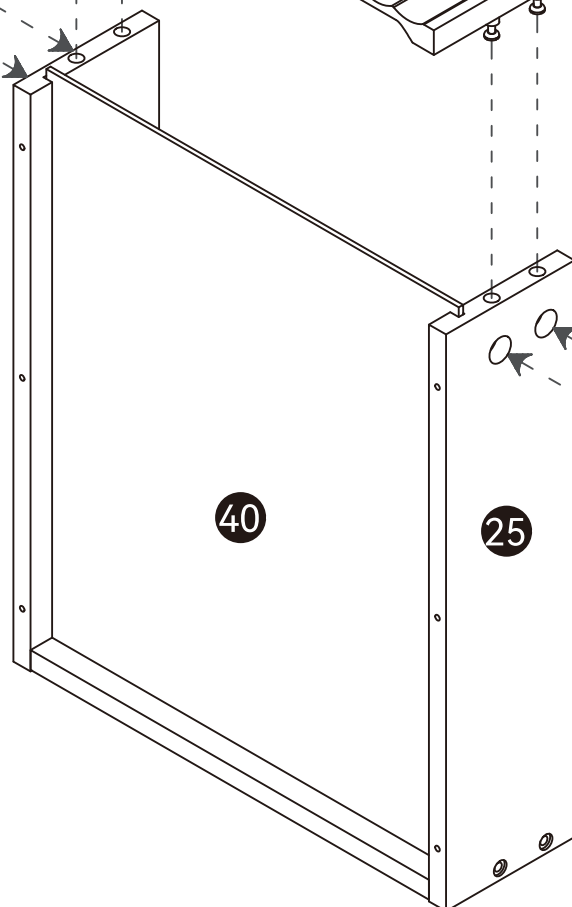




38

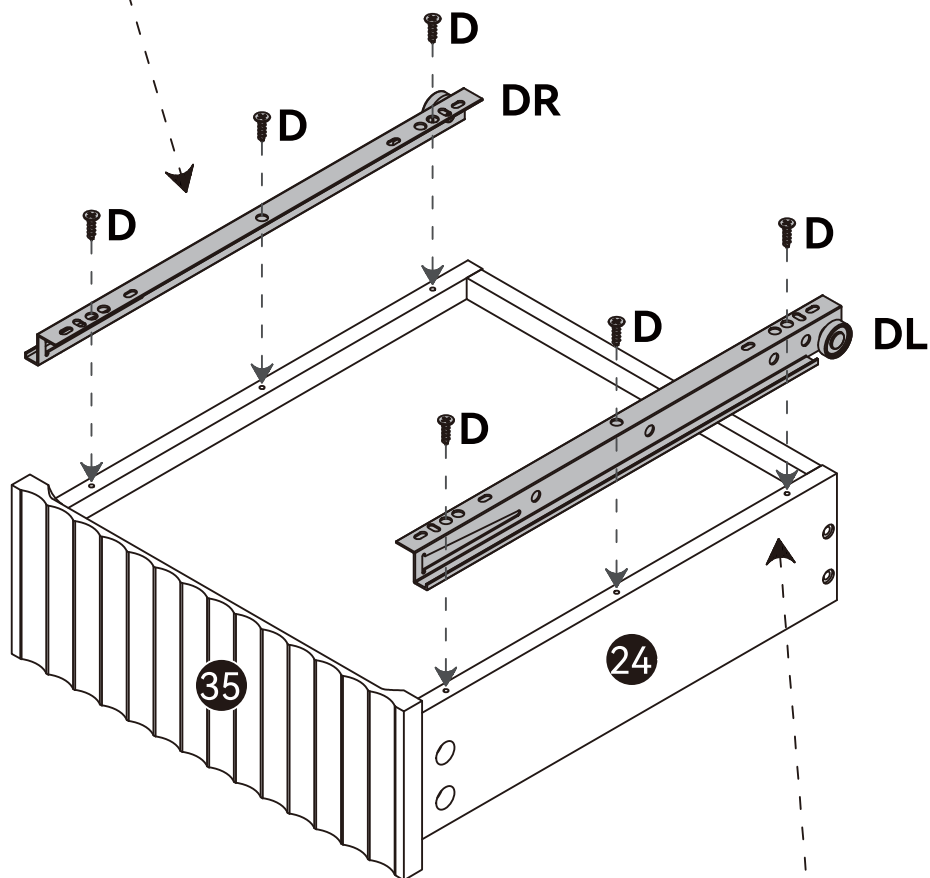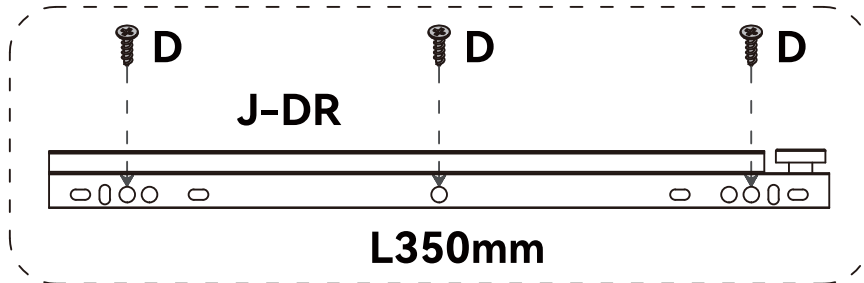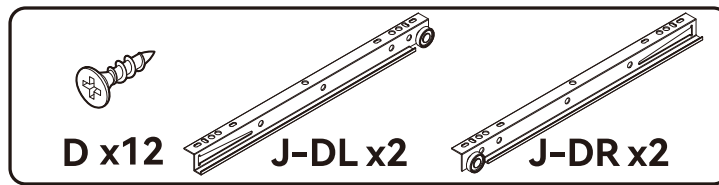






x2

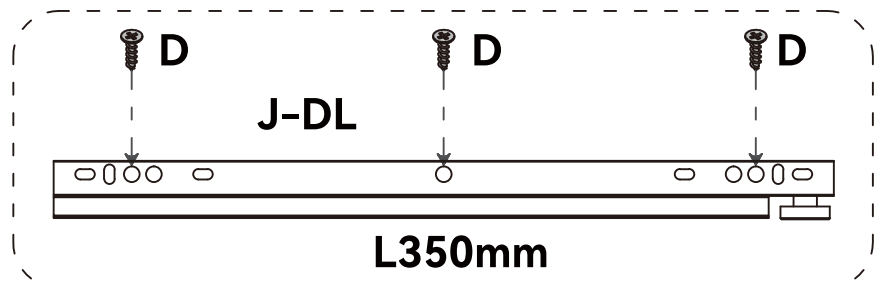





39

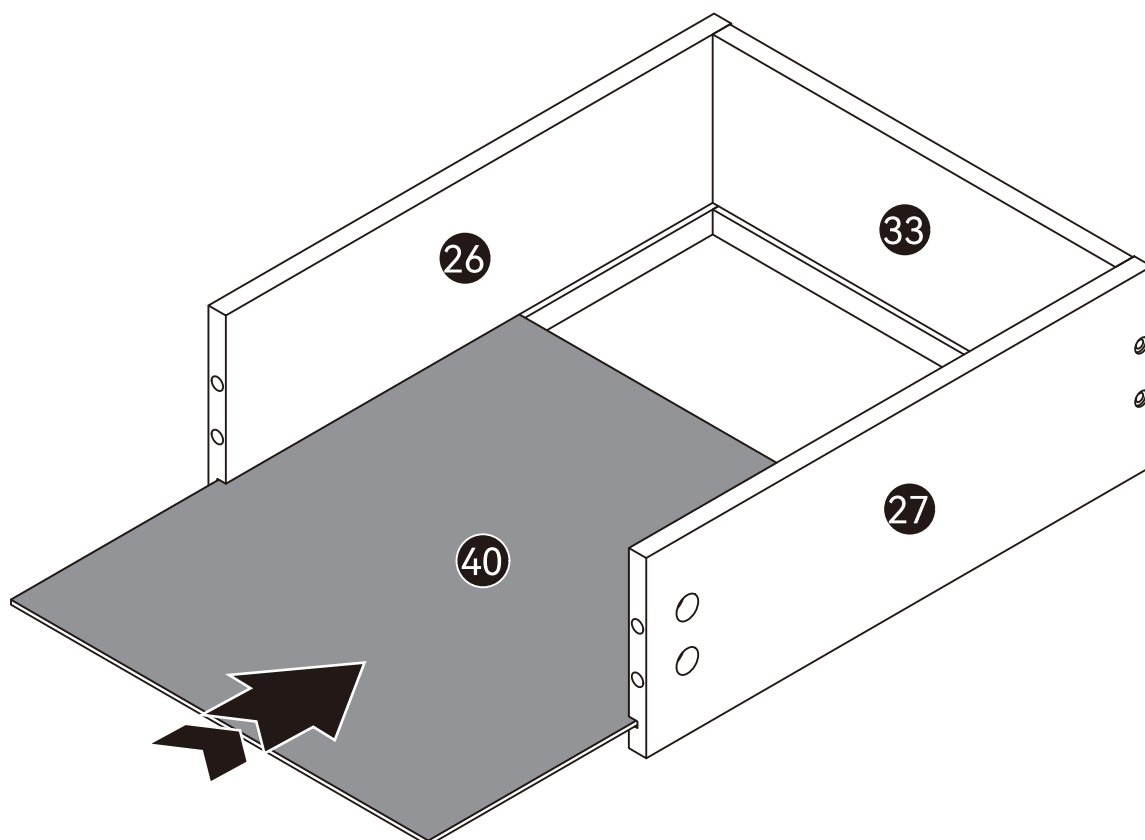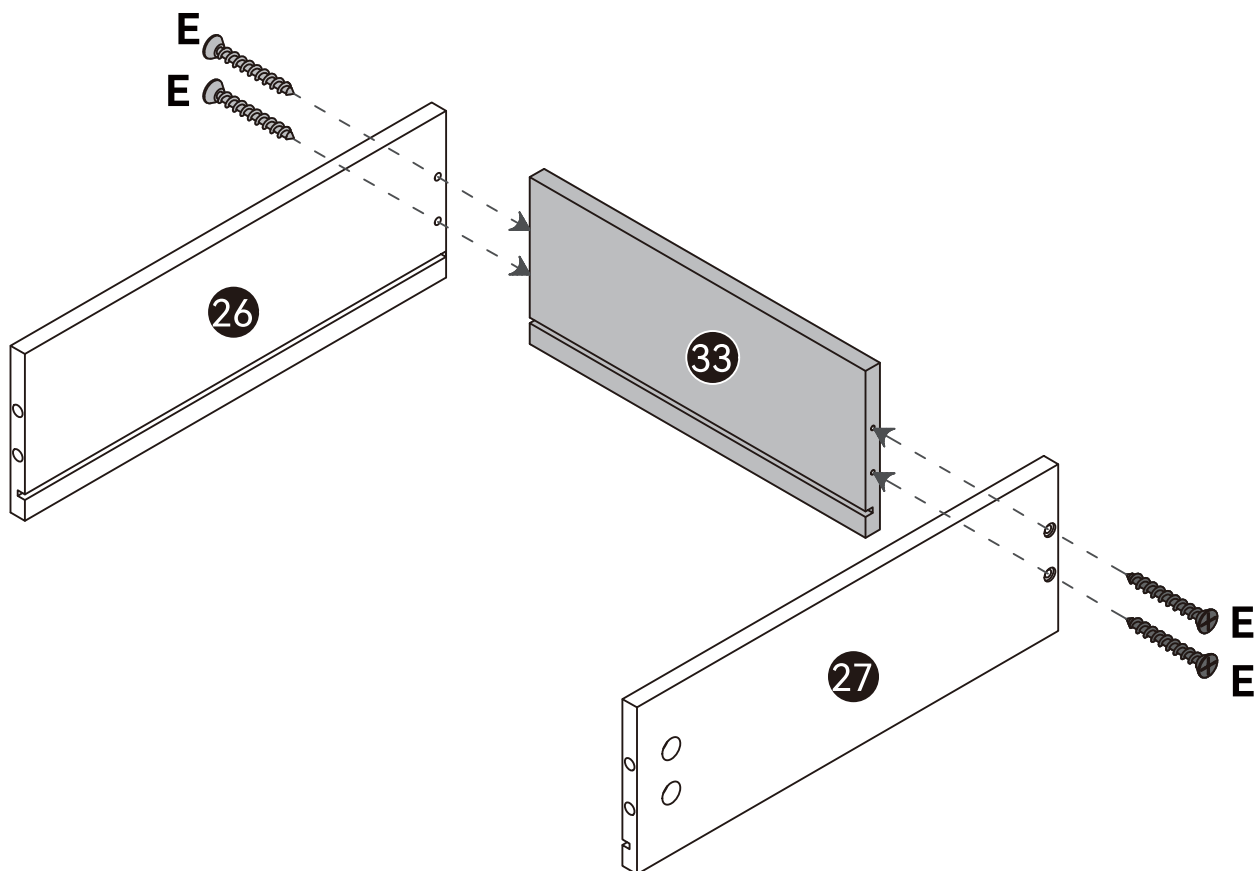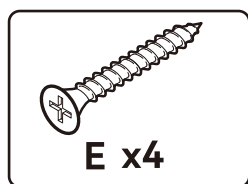




40

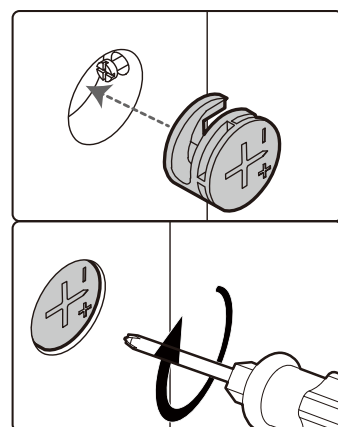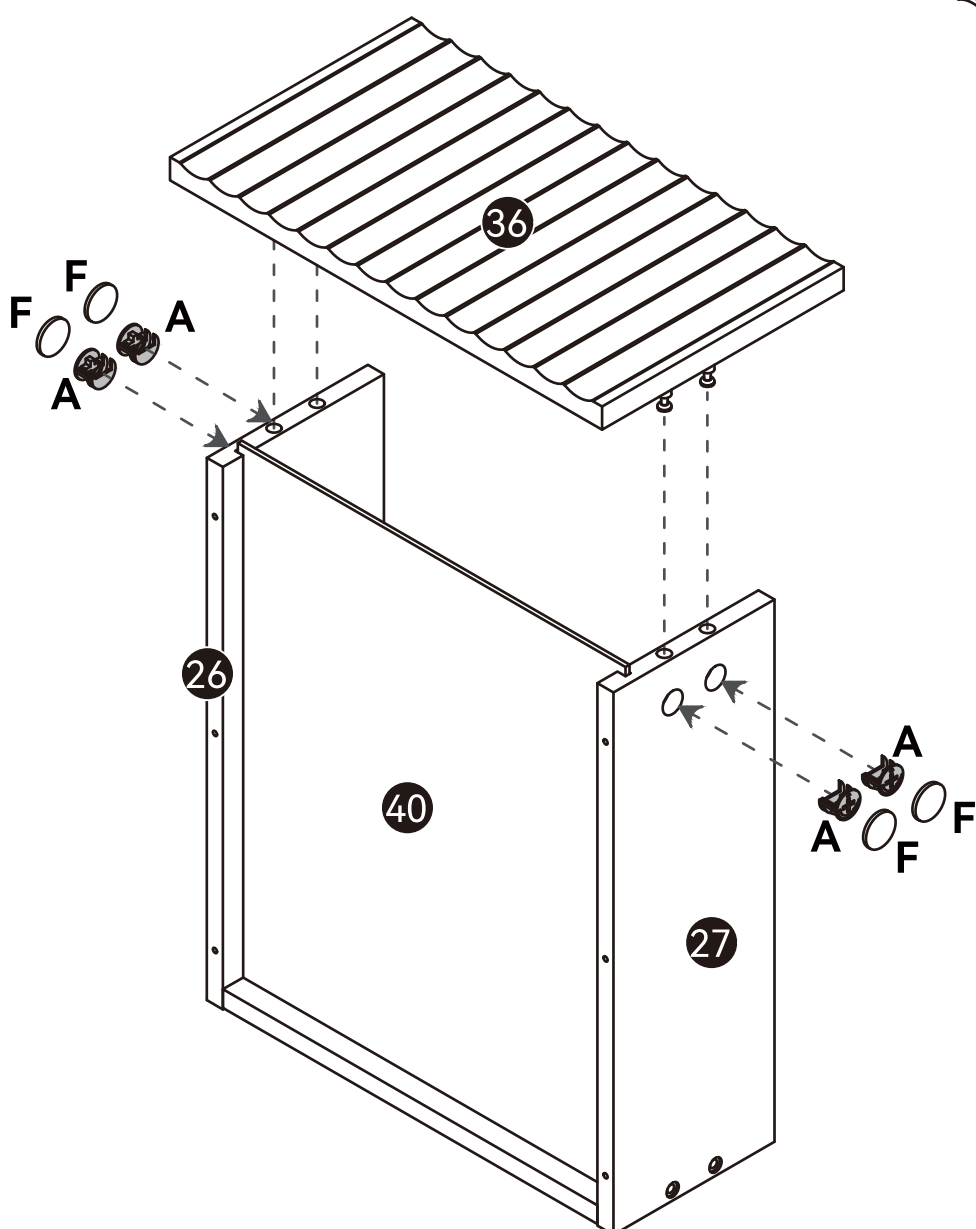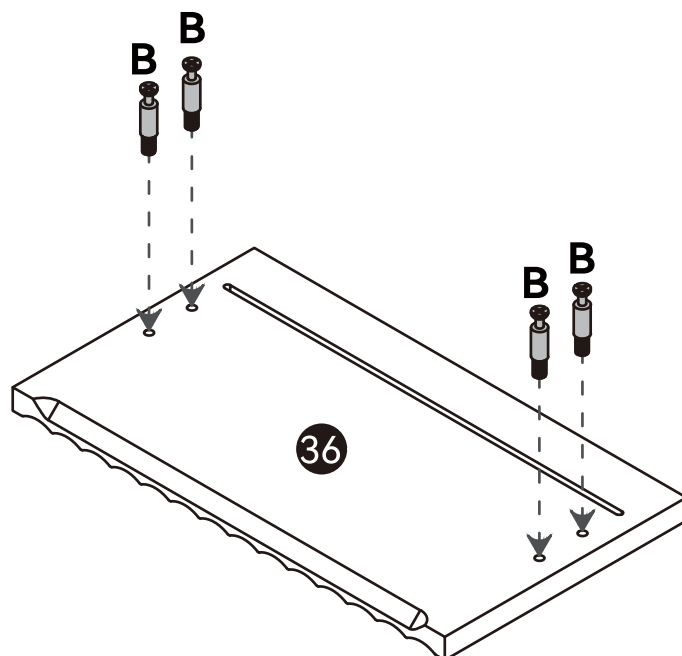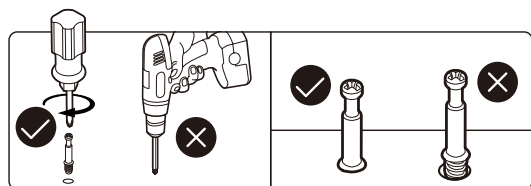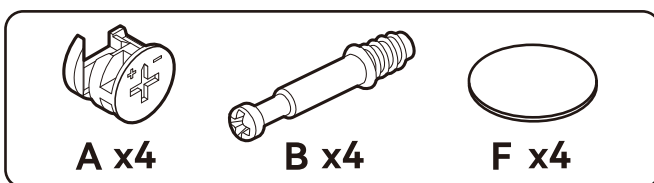






41

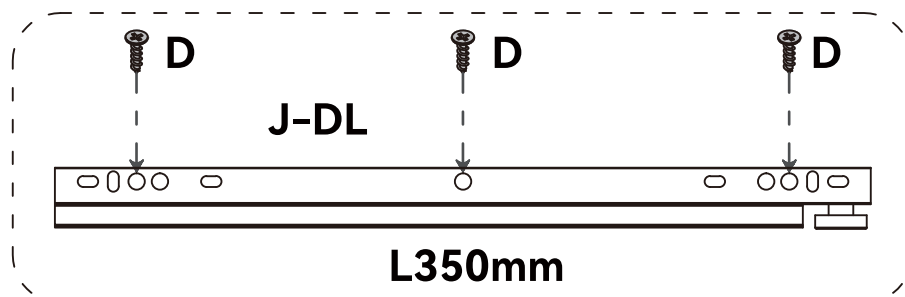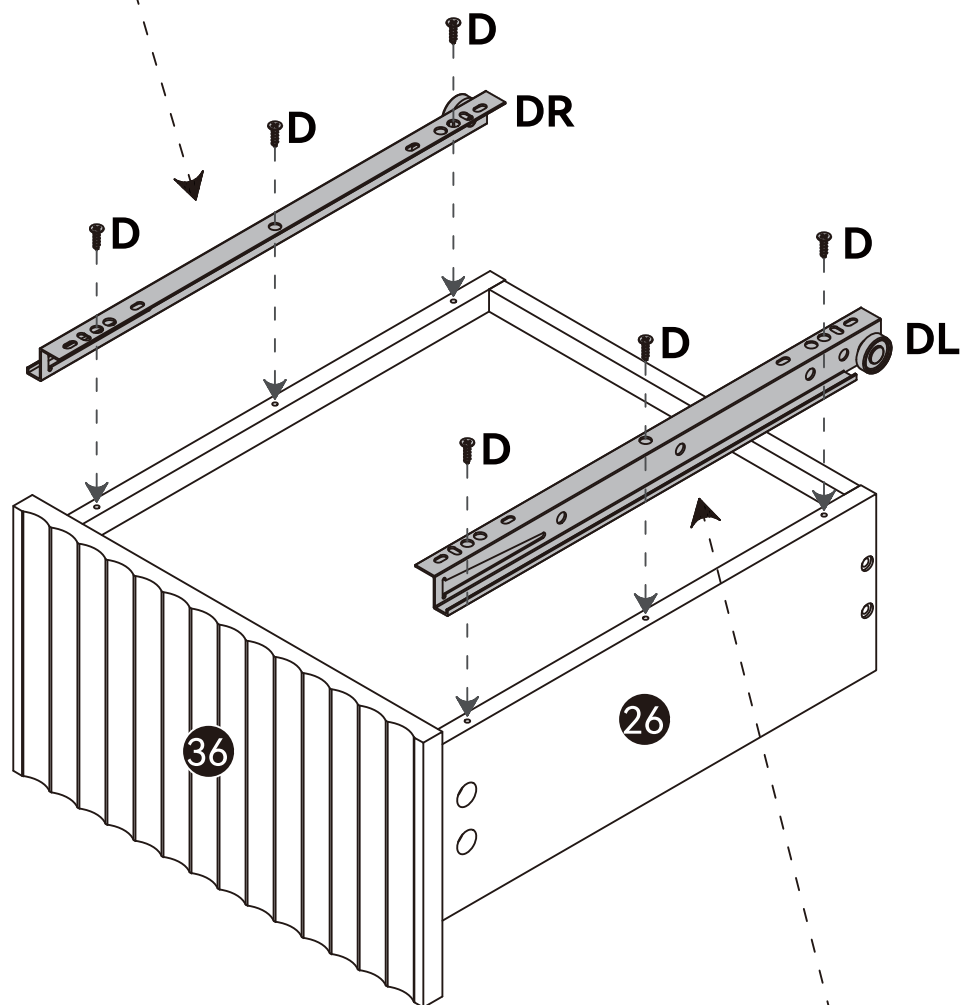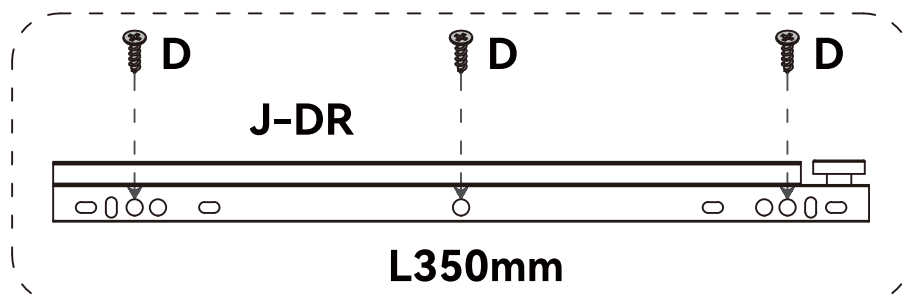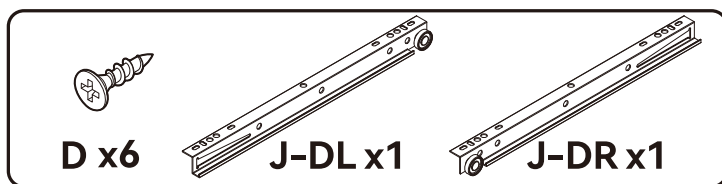

42

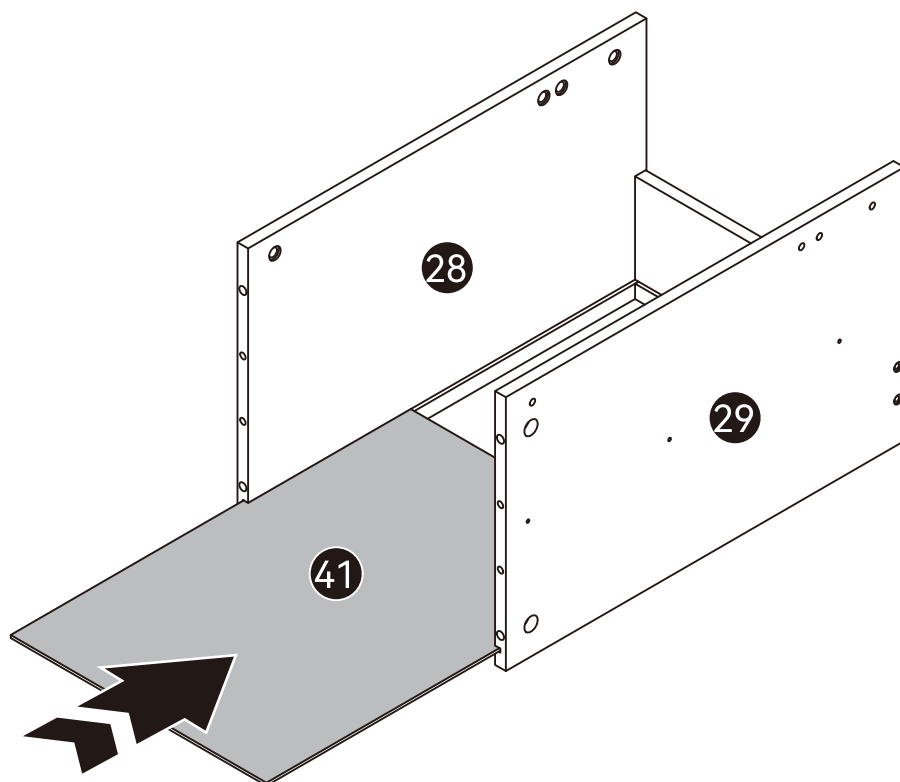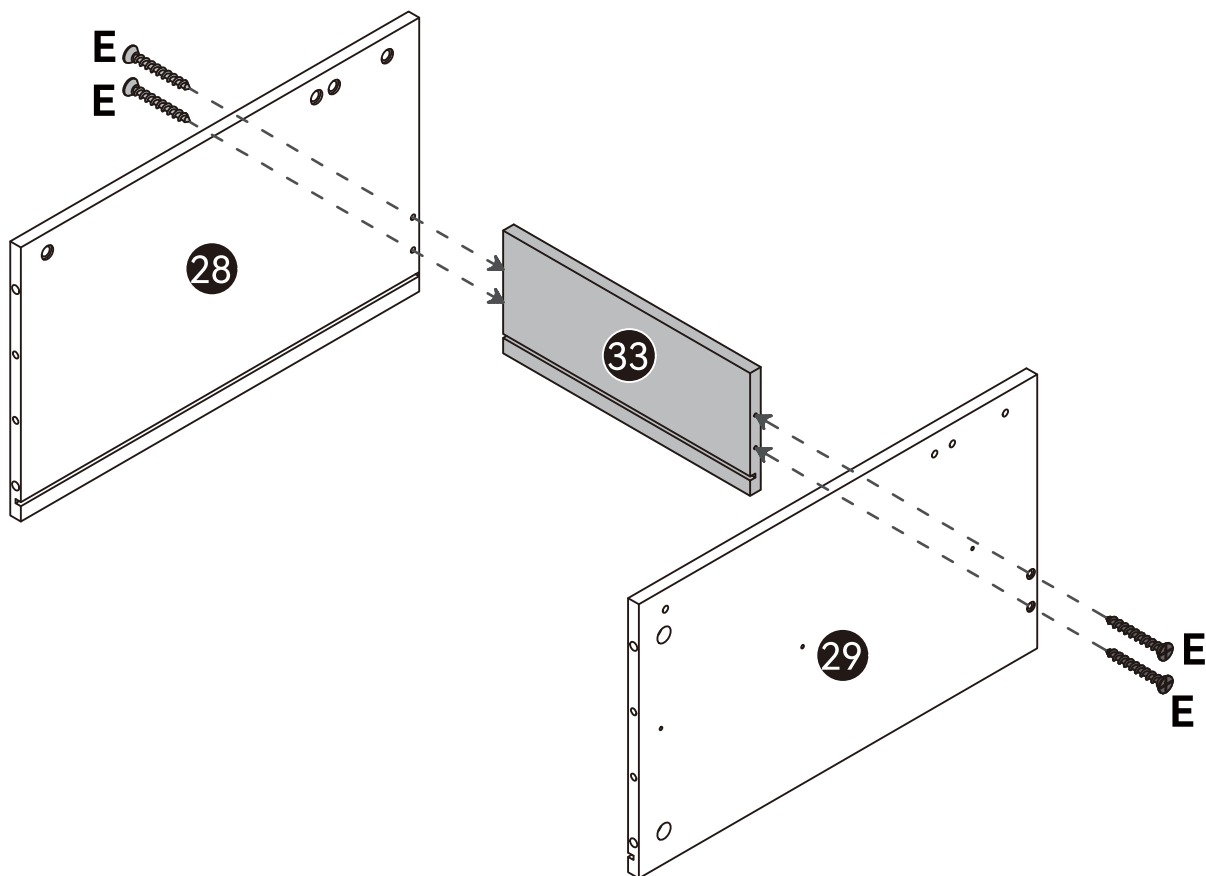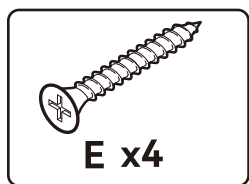

43

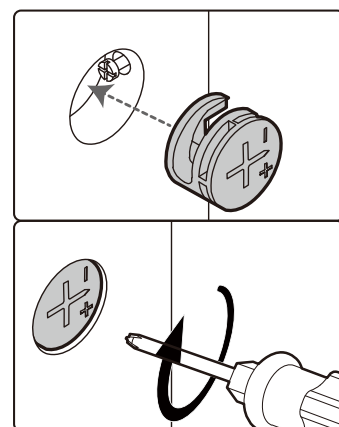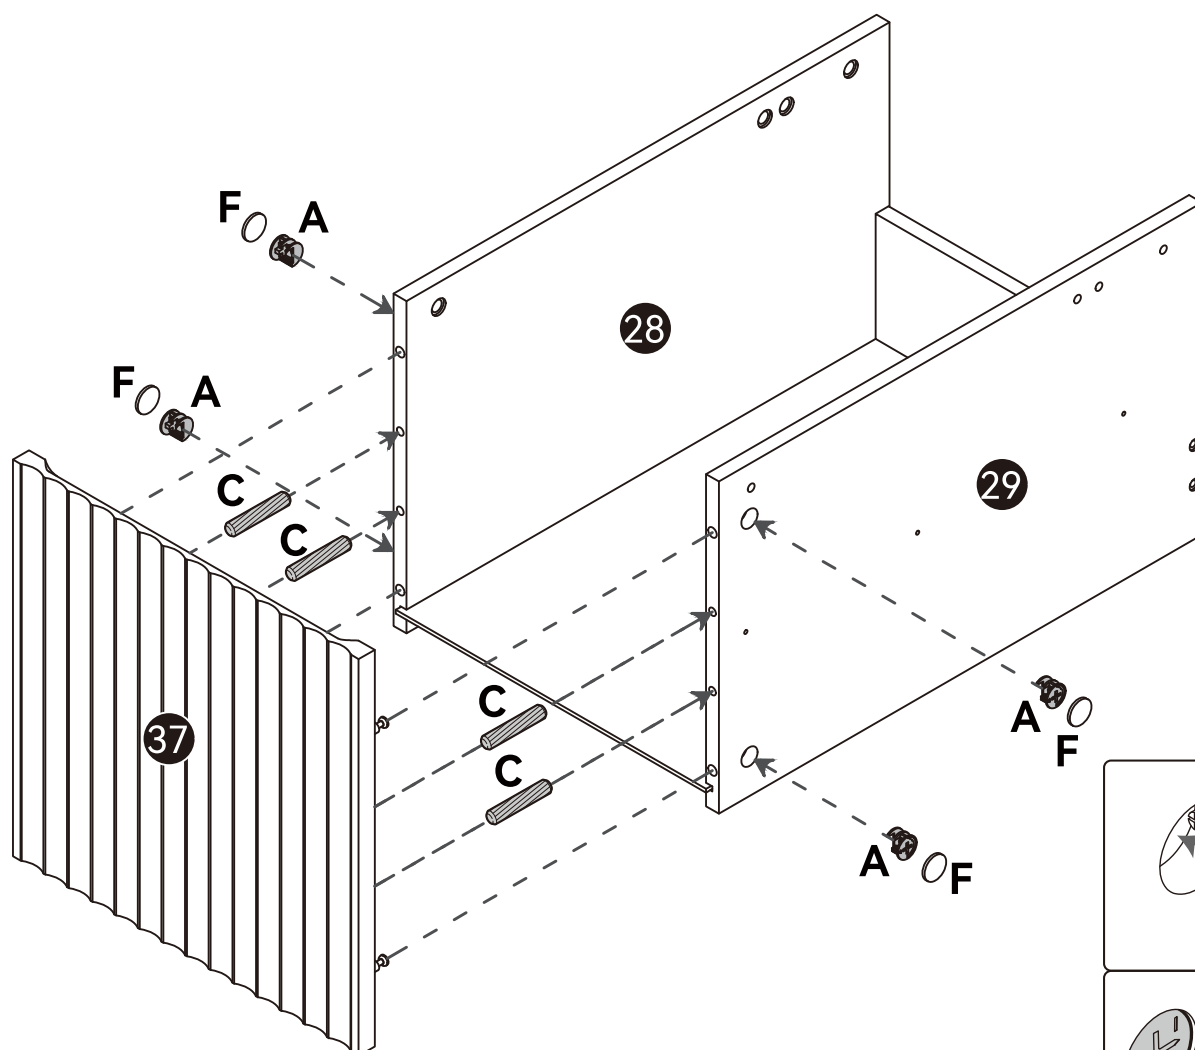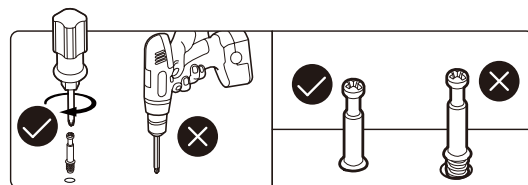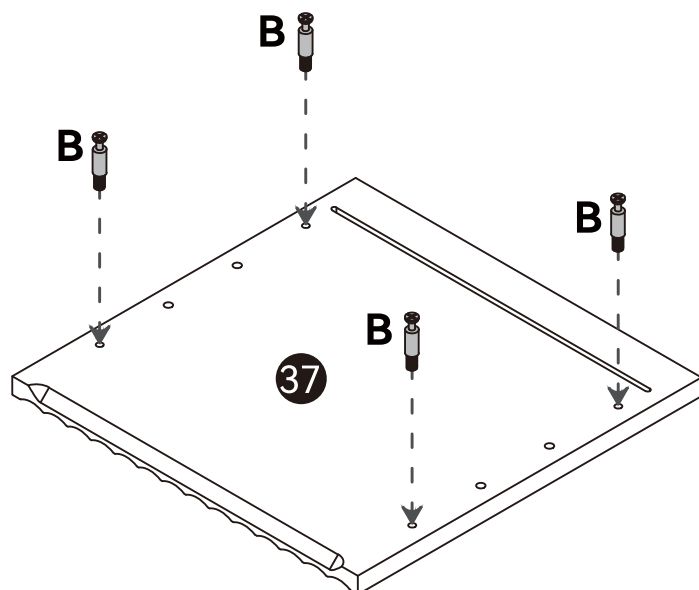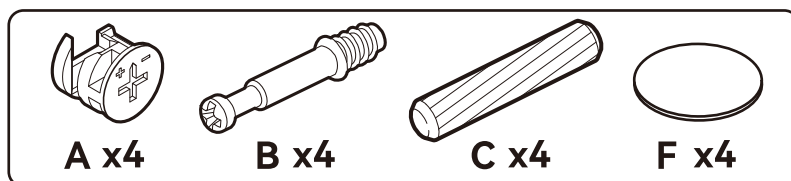

44







D x6




K-2 x2




N x2

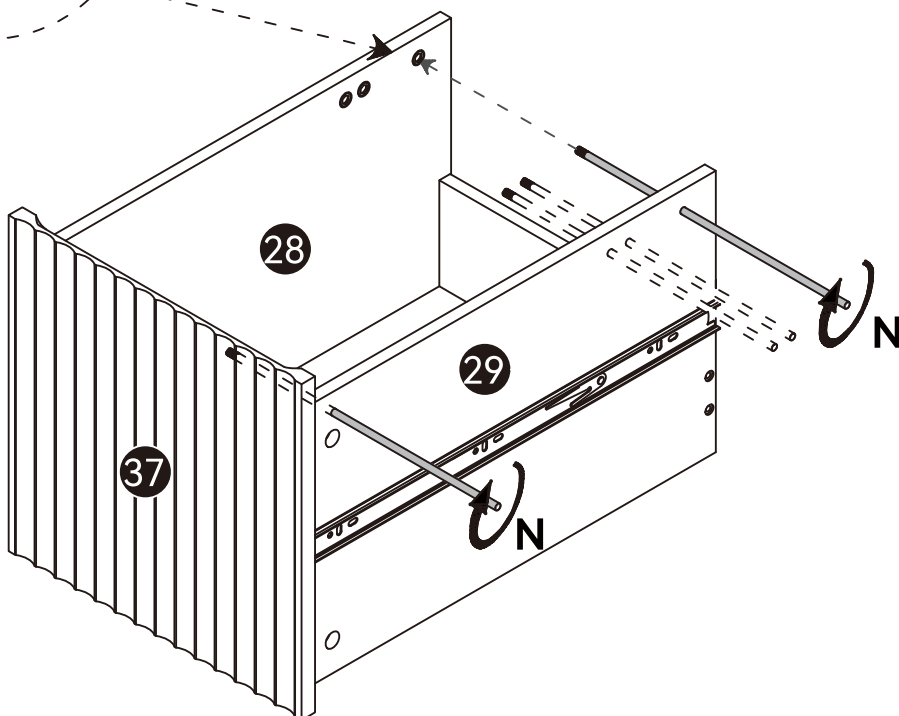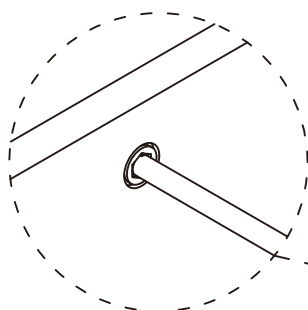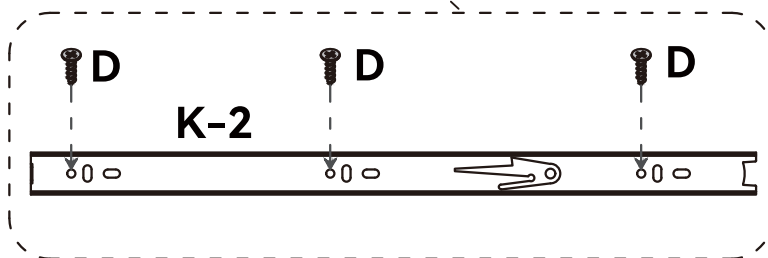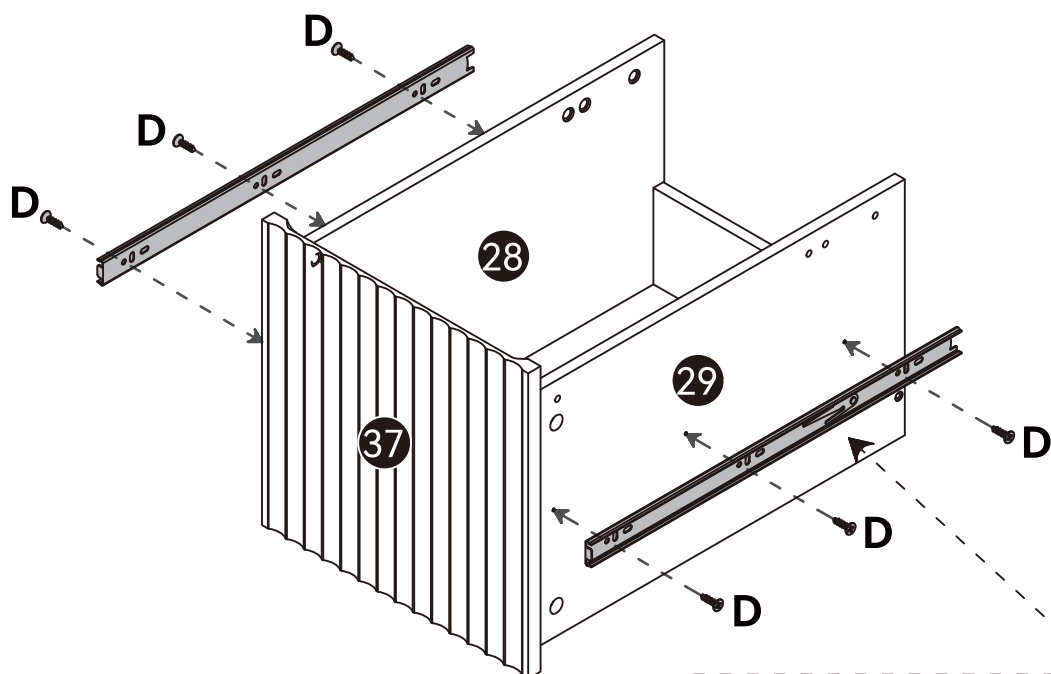

45

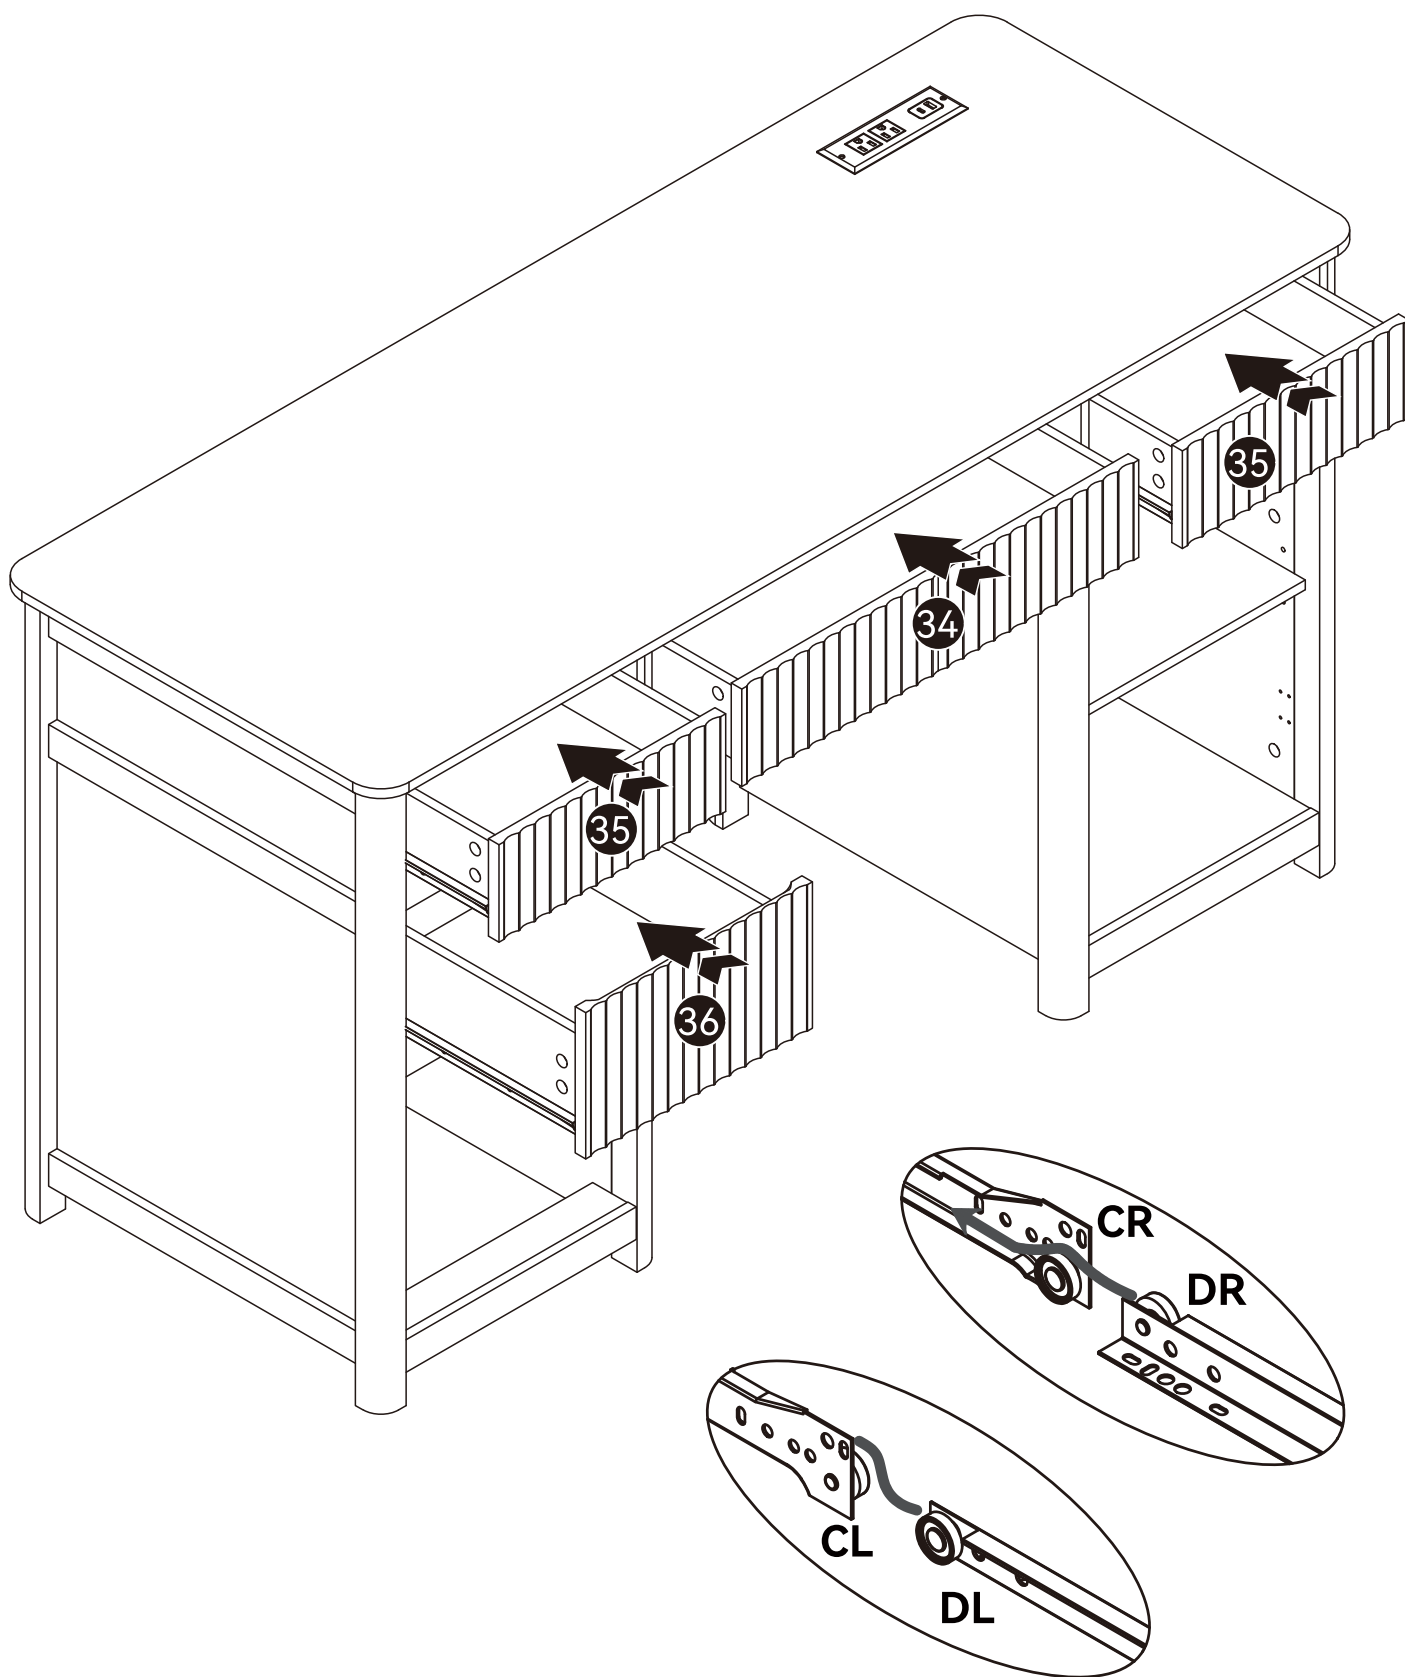

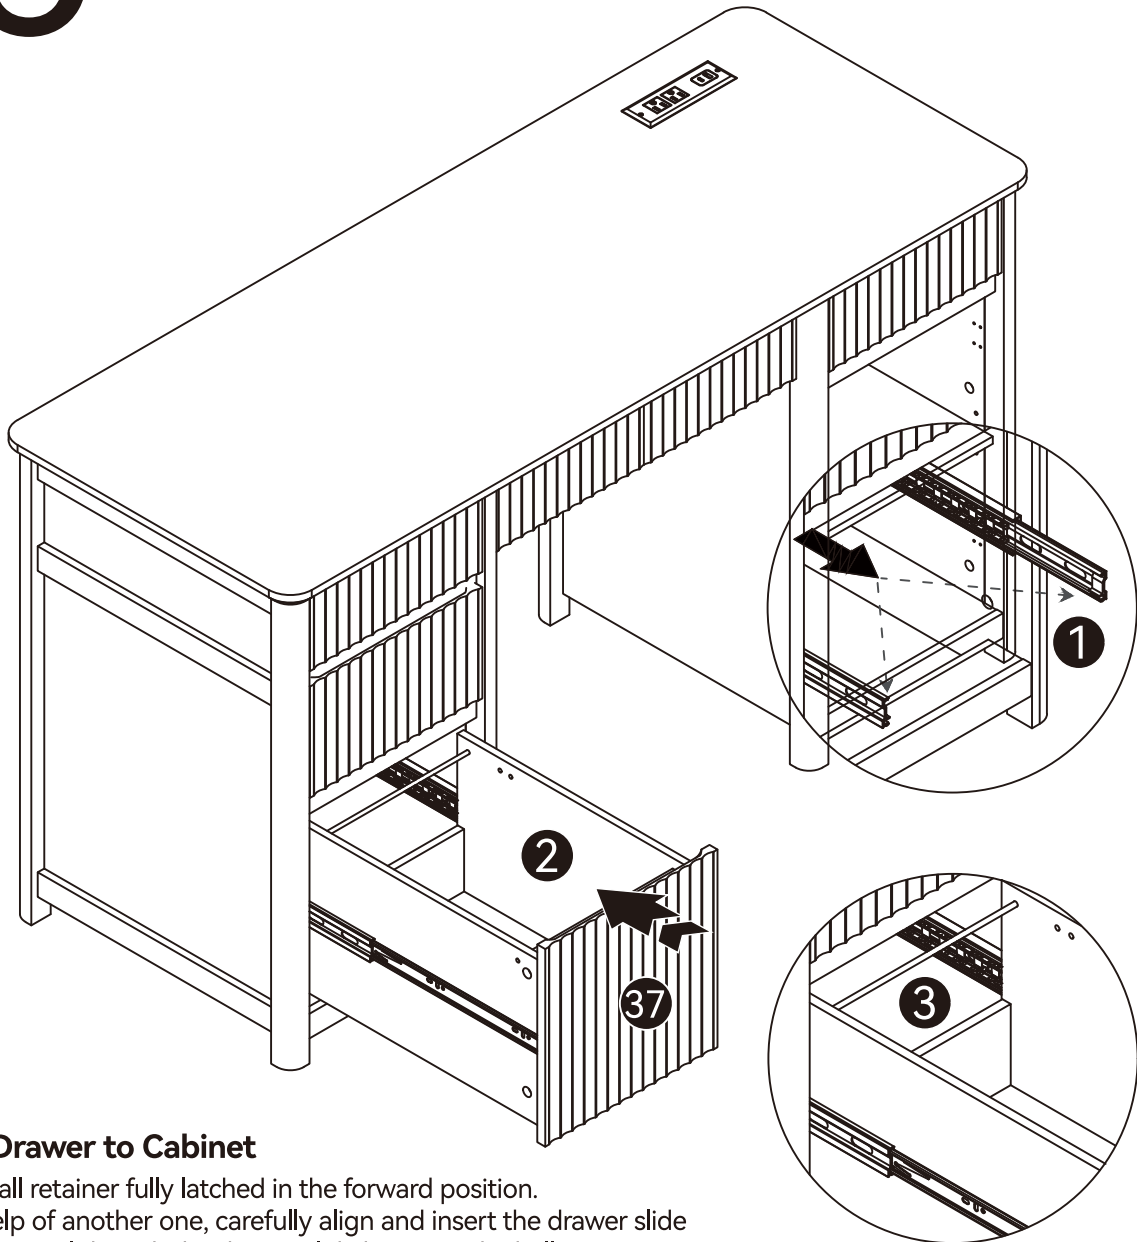


To Attach Drawer to Cabinet


1. Bring the ball retainer fully latched in the forward position.
2. With the help of another one, carefully align and insert the drawer slide into the cabinet slide with the drawer slide between the ball retainer.
3. Push the drawer in. it's normal to feel a slight resistance initially, but once both slides are properly engaged, the drawer should slide in and out smoothly.

NOTE: Avoid using excessive force to insert the drawer, as this might damage the slides or the drawer itself.

Left Side

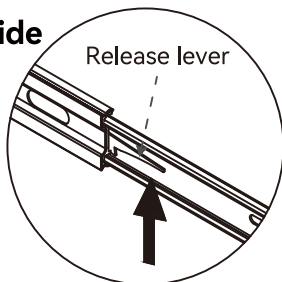




Right Side

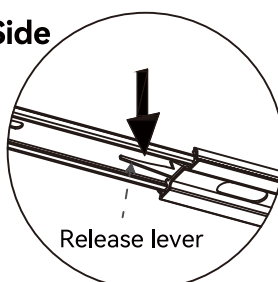



To Remove Drawer when Needed



1. Fully pull the drawer out to expose the release levers.
2. Push UP on the left release lever and DOWN on the right release lever.
3. Pull the drawer straight out while holding the levers.

47

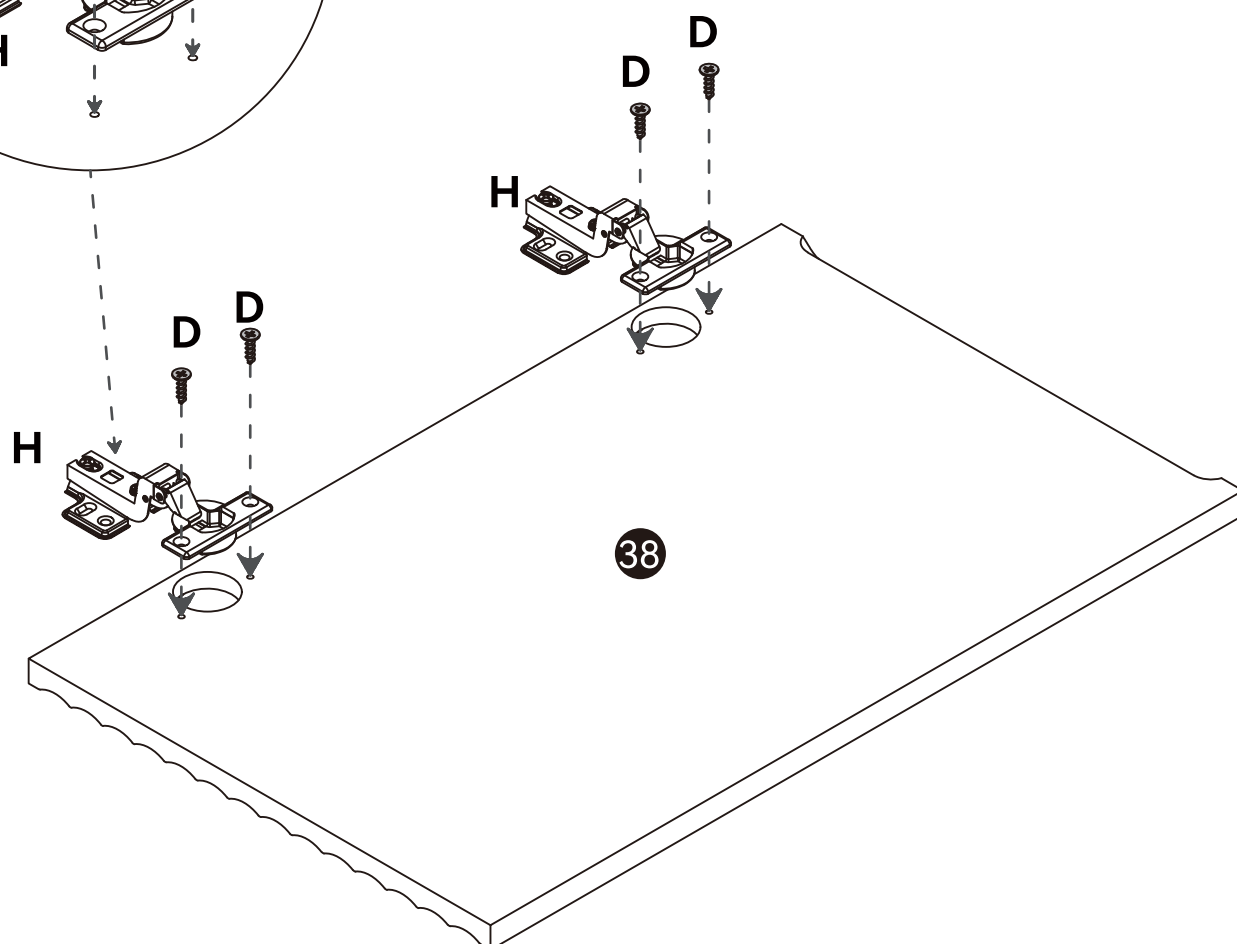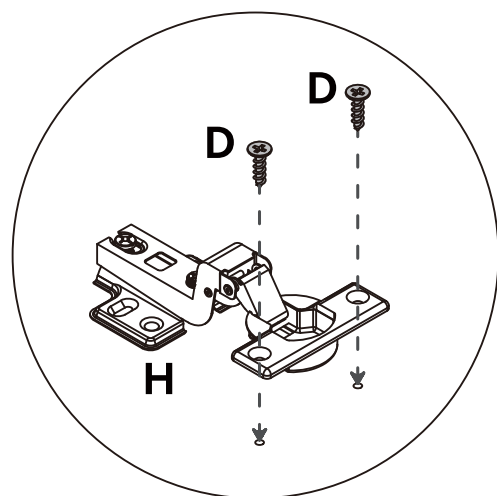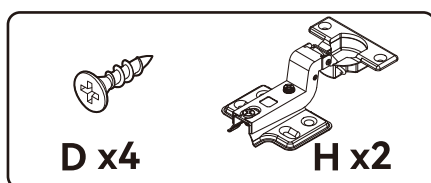


48

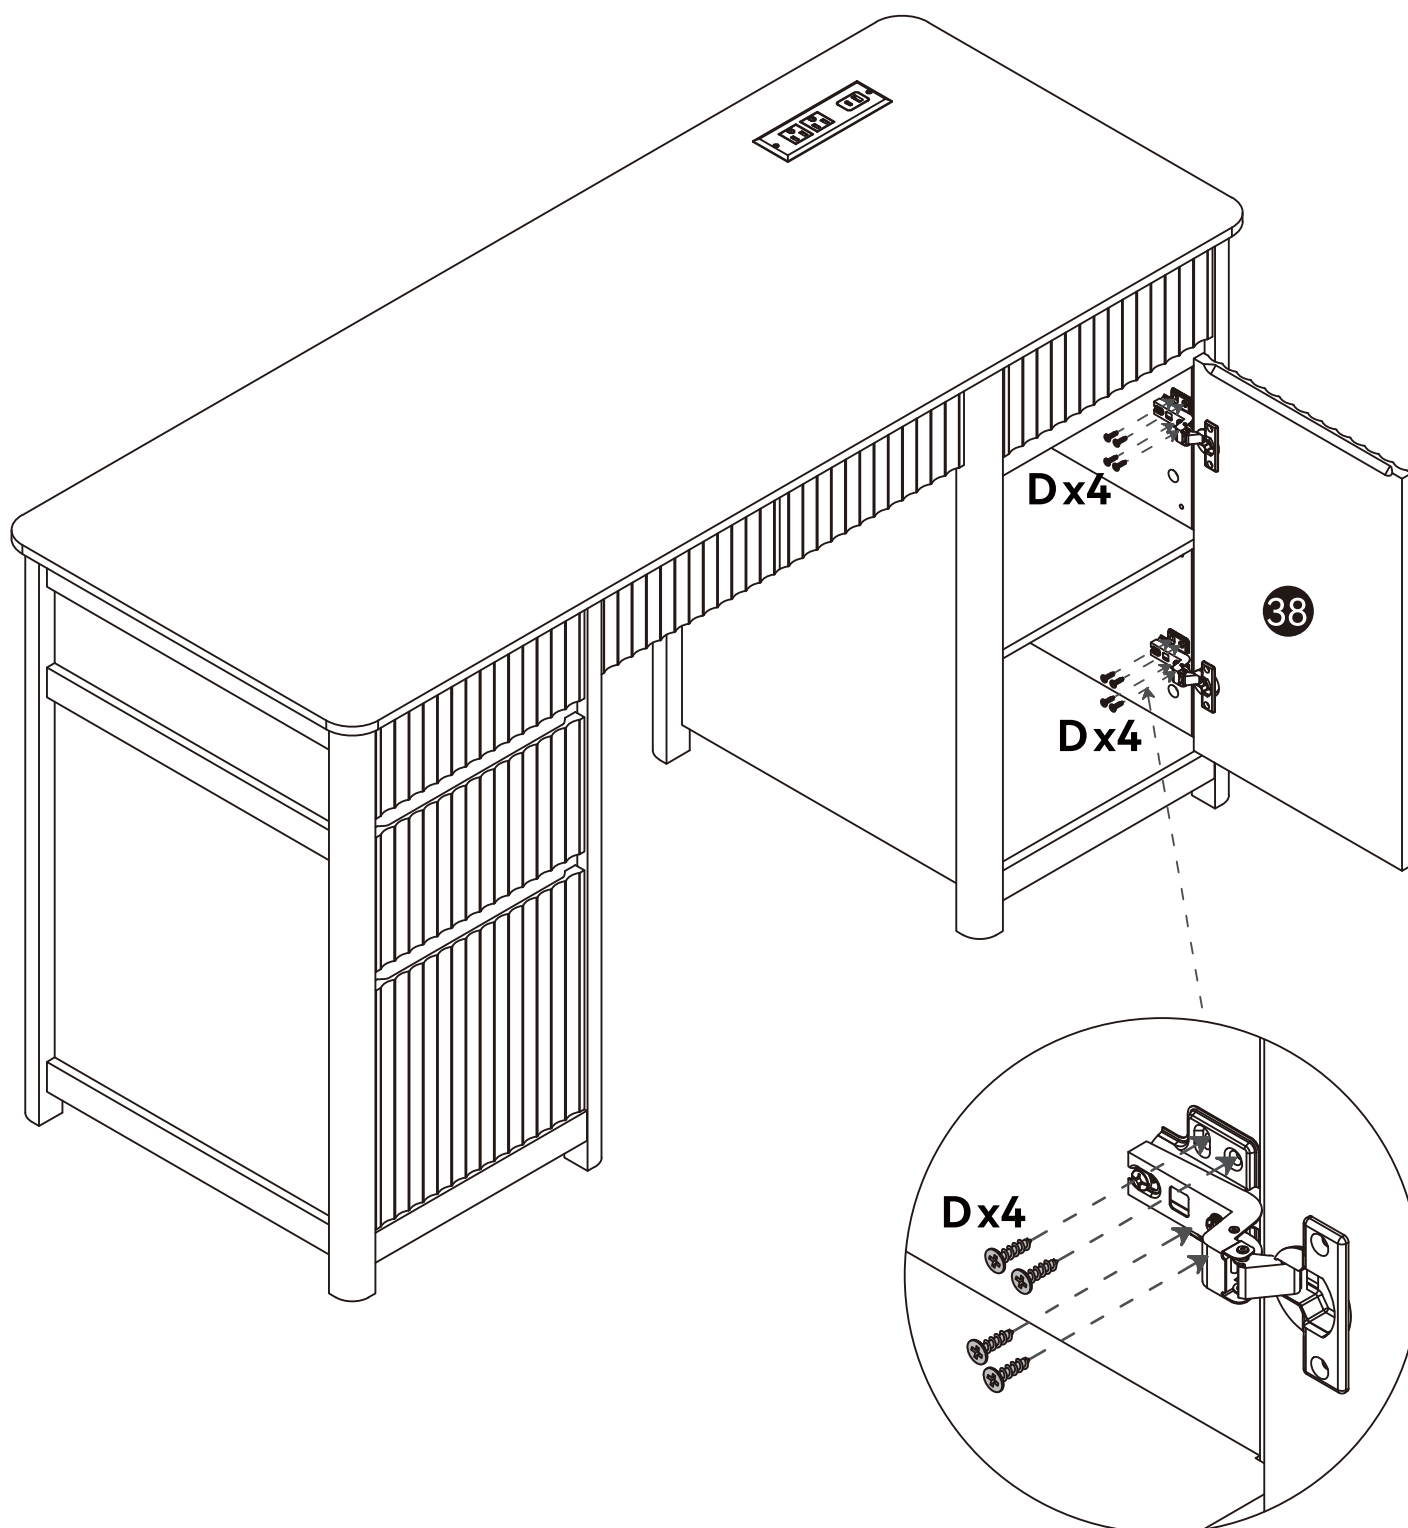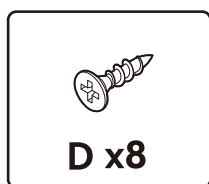

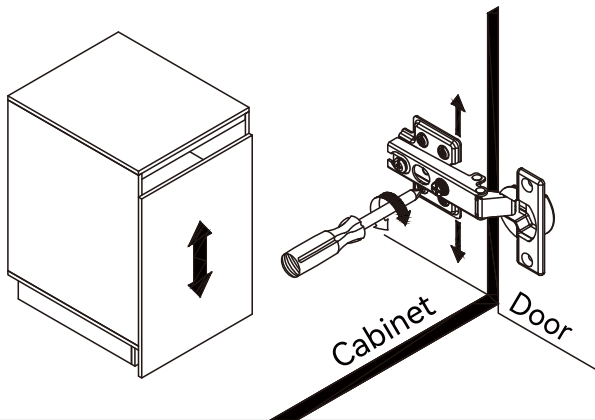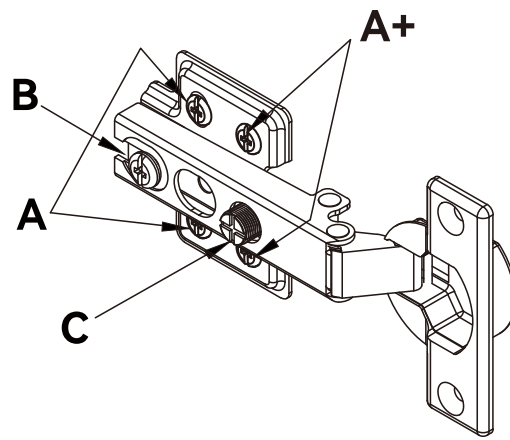


Up and Down Adjustment

1. Remove the 2 screws "A+" on the hinge.
2. Loosen the 2 screws "A" on the hinge. Adjust up or down.
3. Tighten the screws "A" and reinstall "A+".

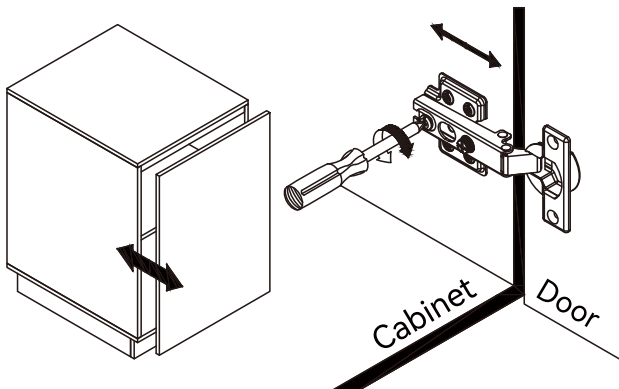

In and Out Adjustment

1. Loosen the screw "B" and adjust the depth of the door.
2. If the depth of the door cannot be adjusted, simply loosen the screw "C" slightly to adjust the door forward and backward.
3. Tighten the screw "B" to secure in place.

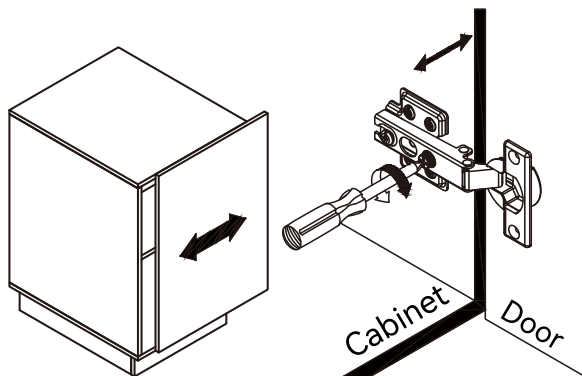

Side-to-Side Adjustment

1. Loosen the screw "C" to align the door horizontally.
2. Tighten the screw "C" to secure in place.