
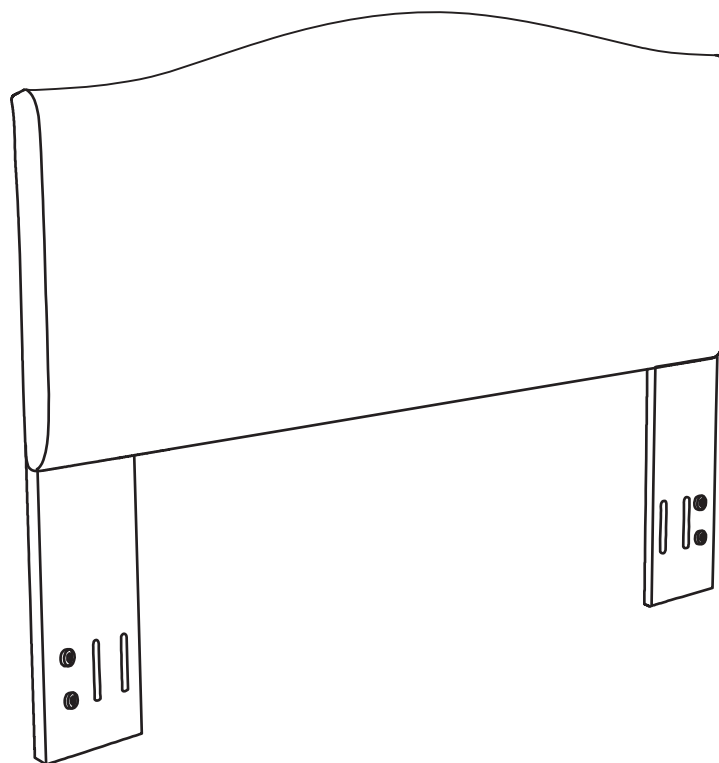


Upholstered Headboard

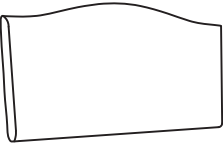

PARTLIST


A 	B 	C 
Headboard Panel 1 PC	Left Headboard Post 1 PC	Right Headboard Post 1 PC

HARDWARE LIST

#1  5/16"x1-3/4"L	#2 	#3 	#4 	#5  M5
Bolt 15PCS(Extra1)	Spring Washer 19PCS(Extra1)	Flat Washer 19PCS(Extra1)	Nut 5PCS(Extra1)	Allen Wrench 1 PC
#6  Wrench 1 PC				

Step 1. Lay headboard panel (part A) down on a soft surface, such as carpet, as shown below. Attach left headboard post (part B) and right headboard post (part C) to headboard panel (part A) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

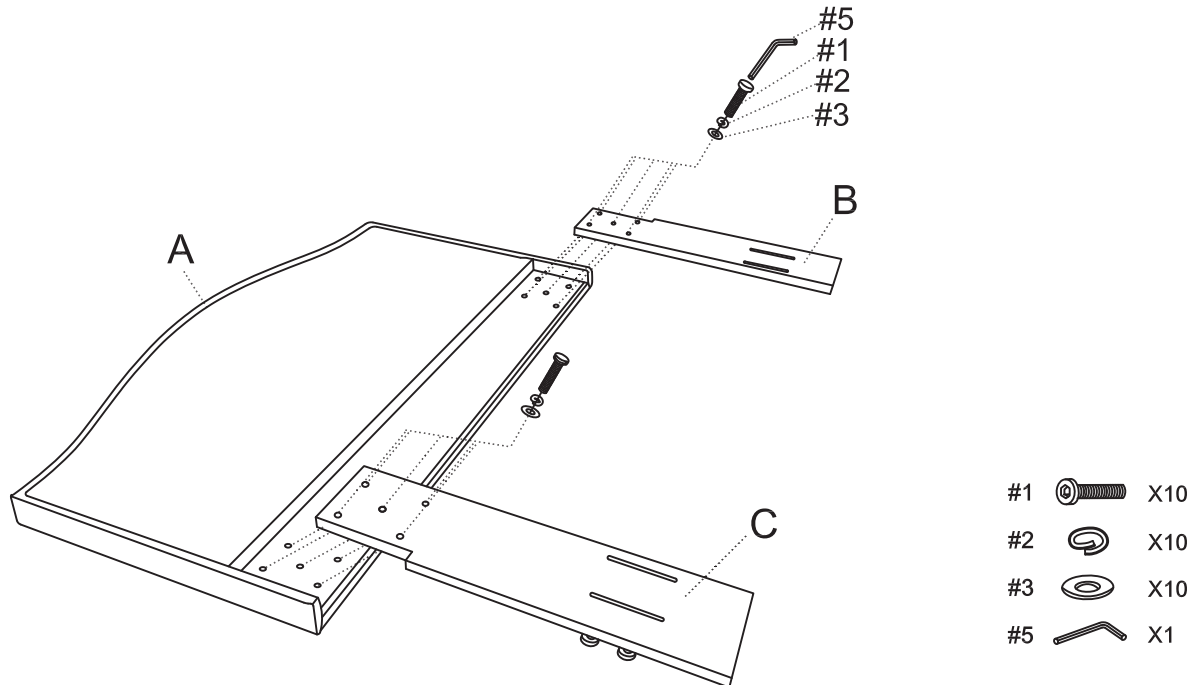

Step 2. Screw out the bolts on the headboard posts using allen wrench (part #5). Attach bed frame (*Not Included) to left headboard post (part B) and right headboard post (part C) using bolts (part #1), spring washers (part #2), flat washers (part #3), nuts (part #4), allen wrench (part #5) and wrench (part #6).

