

ASSEMBLY INSTRUCTION


MADE IN CHINA

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

Before you start assembly: Please read all instructions carefully before beginning the assembly process.



It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

CAUTION: For your safety, this product requires two people to lift.

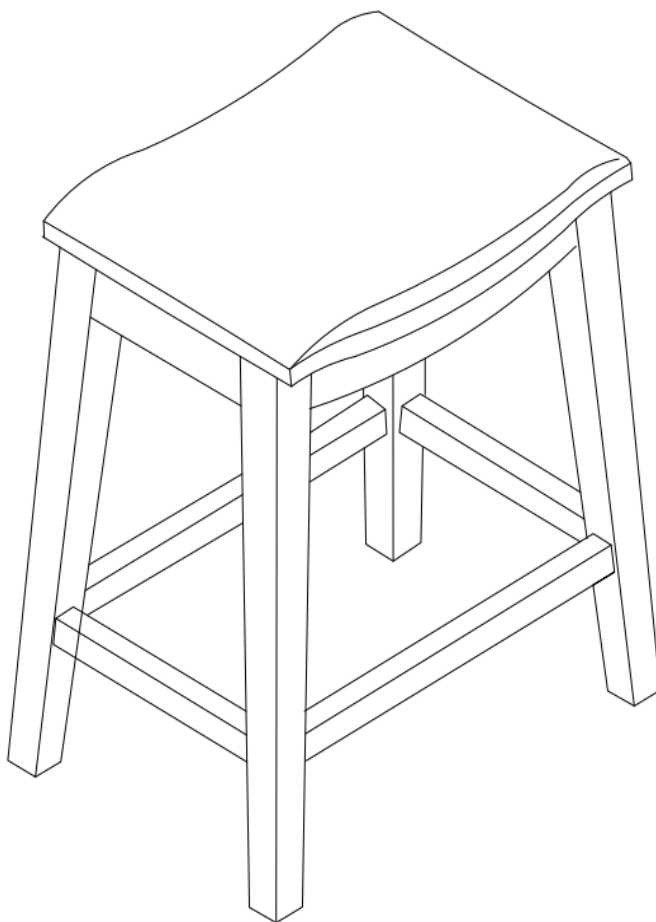


5 MINUTES





APPROXIMATE ASSEMBLE TIME 2 PERSONS

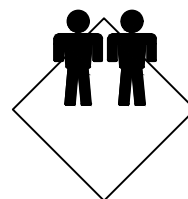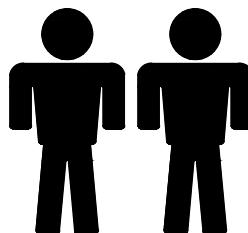


REQUIRED ASSEMBLY SPACE

PART LIST

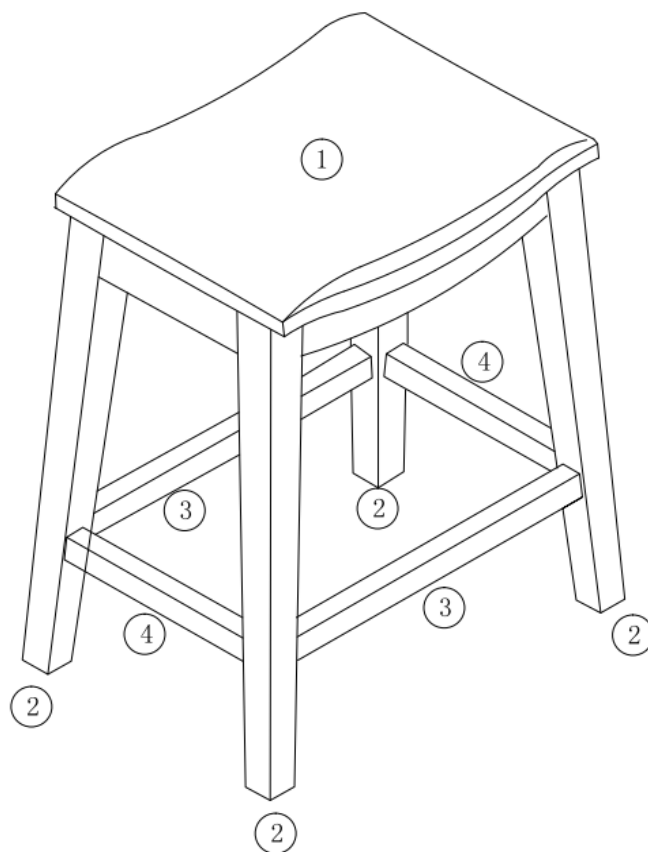

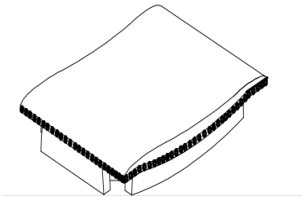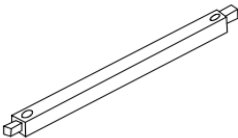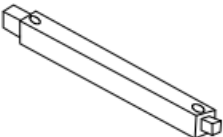NO.	PICTURE	PARTS DESCRIPTION	Q'TY
1		SEAT FRAME	1
2		WOOD LEGS	4
3		LONG STRETCHER	2
4		SHORT STRETCHER	2

HARDWARE LIST



1x

Ø 5/16"x2"

A

Allen Key



1x

2-3/4"

B

Screw Driver



8x

Ø 5/16"-2-1/2"

C

Bolt A




8x

Ø 1/5"x1-3/5"

D

Screw



8x

Ø 1/4"

E

Flat Washer




8x

Ø 1/5"

F

Spring Washer

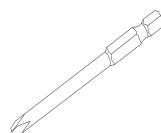

1x


Ø 5/16"-2.9"

G

Straight Allen Key



NOTE: Straight Allen Key(G) is for use with a power drill.

STEP 1

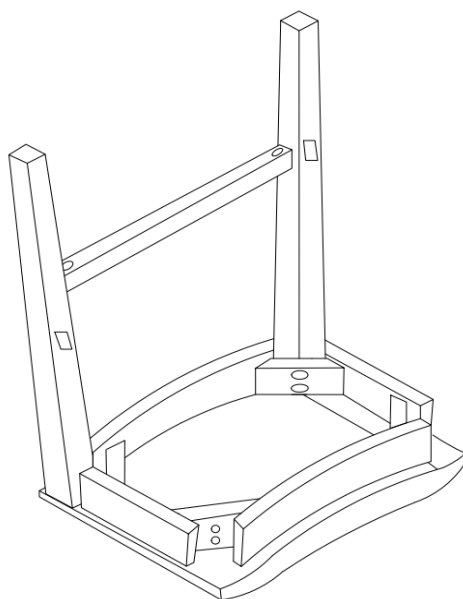

Connect two front legs(2) with the long stretcher(3) .

STEP 2

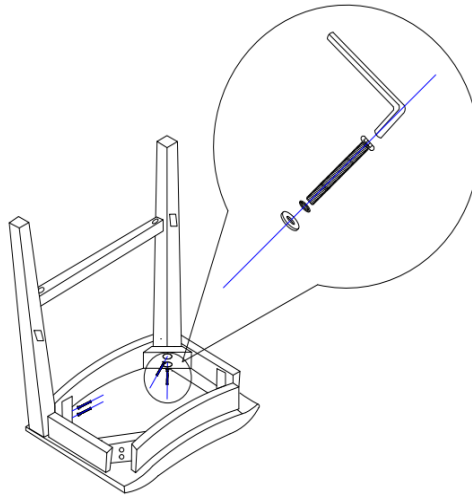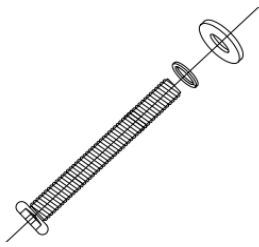


1x	4x	4x	4x
A	C	E	F

1. Firstly, put spring washer(F) and flat washer (E) onto bolt(C).

2. Then insert the bolt(C) into the hole with Allen Key(A) or power drill, but do not tighten.


Note: tighten the bolts at last step.

STEP 3

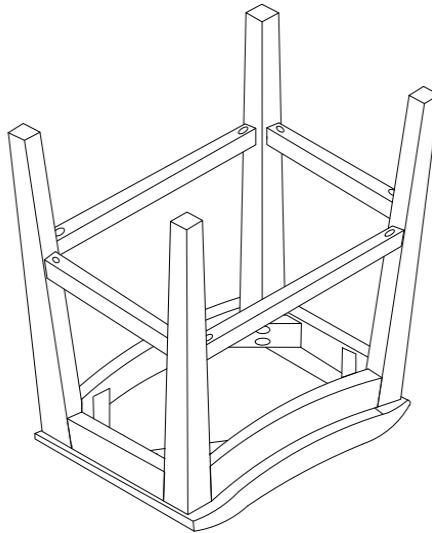

Connect the front legs(2) with the long stretcher(3), and back legs (2) with short stretcher(4), to form leg support frame.


STEP 4

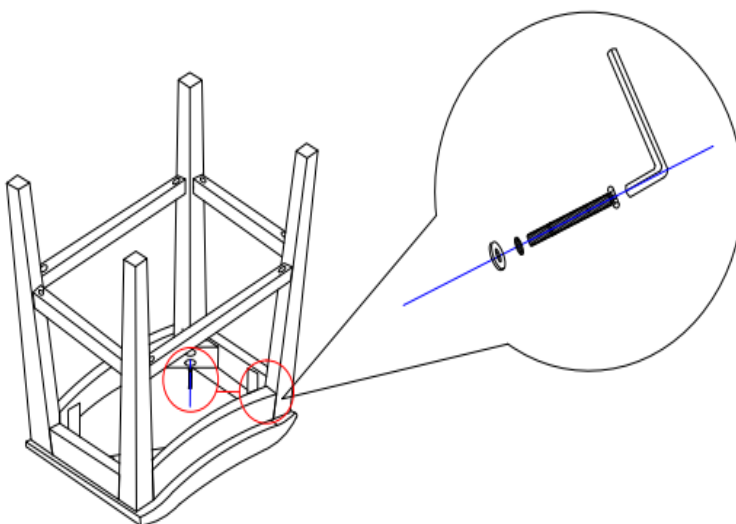

1x	4x	4x	4x
A	C	E	F

Repeat STEP 2 to insert the bolt(C) into the hole with Allen Key(A) or power drill.

STEP 5

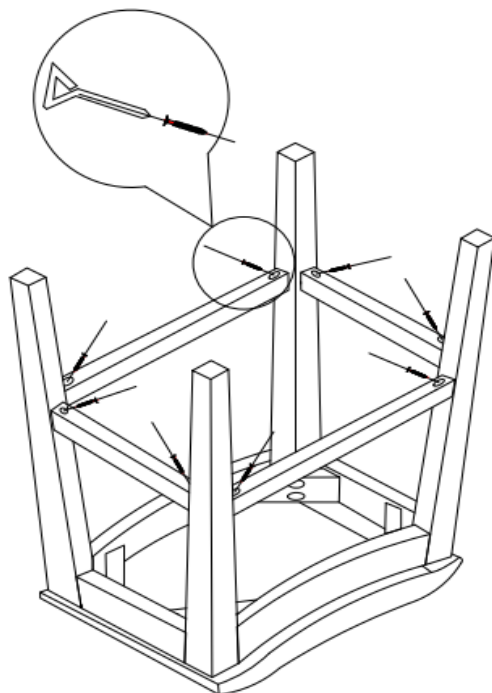

1x

B




8x

D

Tighten the screws(D) on the stretcher with screw driver(B) or power drill.

STEP 6

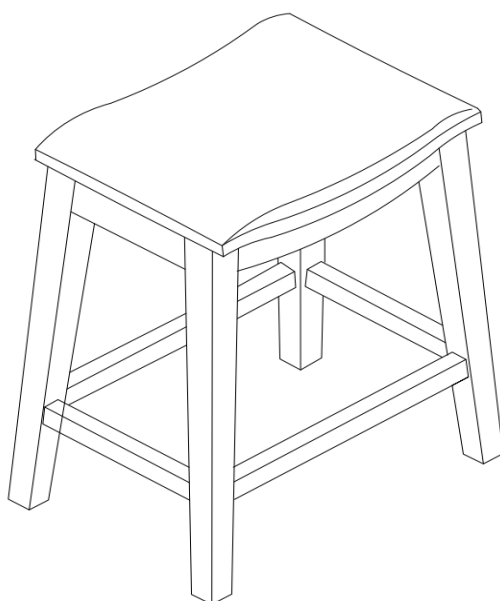

Check that all parts are secured. Turn the barstool upside on a level place to make sure all the legs are level, then tighten all the parts, including the bolts and screw. Assembly completes.