



MANUAL INSTRUCTION

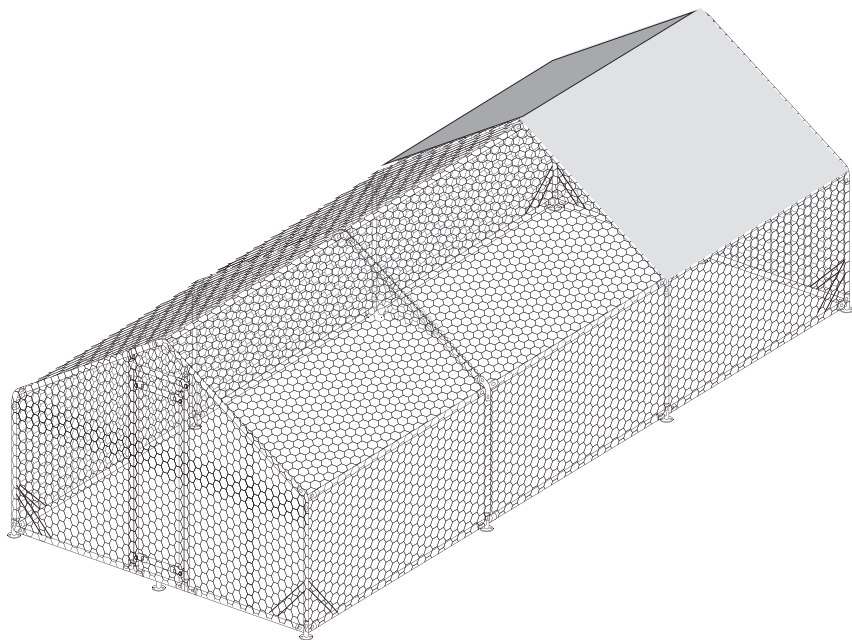

We offer a diverse range of products
to meet the needs of customers.

Reach us at
✉ service@kmcglobe-us.com

☎ (only us) +1 213-816-4788



① x 4
1420



② x 11
1925



②A x 4
1925



③ x 4
970



③A x 4
970



④ x 8
1540



⑤ x 1
1687



⑤A x 1
1687



⑥ x 1
605



⑦ x 1
1850



⑩ x 8
395

Φ16 395mm



A x 1
1580



1A x 1
1580



C x 2
564

D x 5



E1 x 2



E2 x 2



F x 5



G x 1



H x 6



V x 1



I x 8



J x 2



J1 x 2



K x 30
M6
+1(spare)



L x 2
M8
+1(spare)



M x 1




O x 1



P x 1



Q x 1



R x 12



S x 1



T x 2



W x 10





ATTENTION: E1 & E2 shall be placed in strict order, otherwise they cannot be installed



DIFFERENT HOLES SITUATIONS IN E1&E2



E1




E2

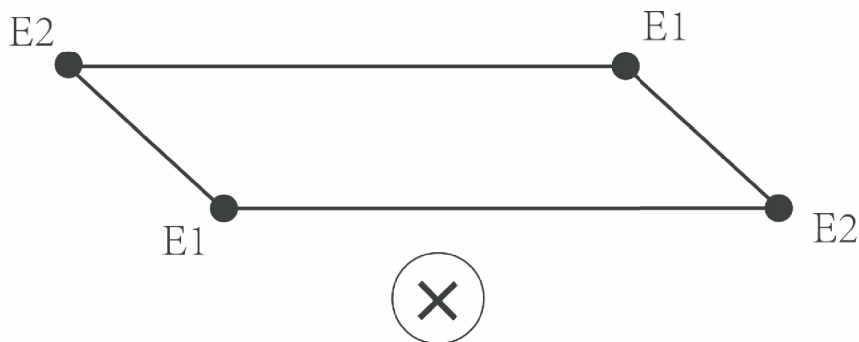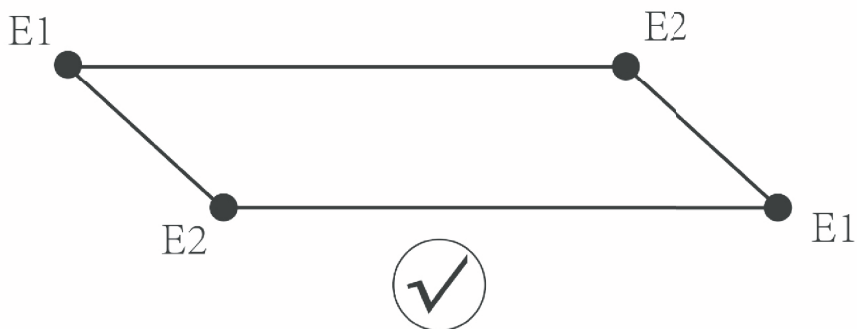


STEP1

Required Tools	 ①*4PCS	 ②*2PCS	 ②A*4PCS
 E1*2PCS	 E2*2PCS	 G*1PCS	 F*5PCS

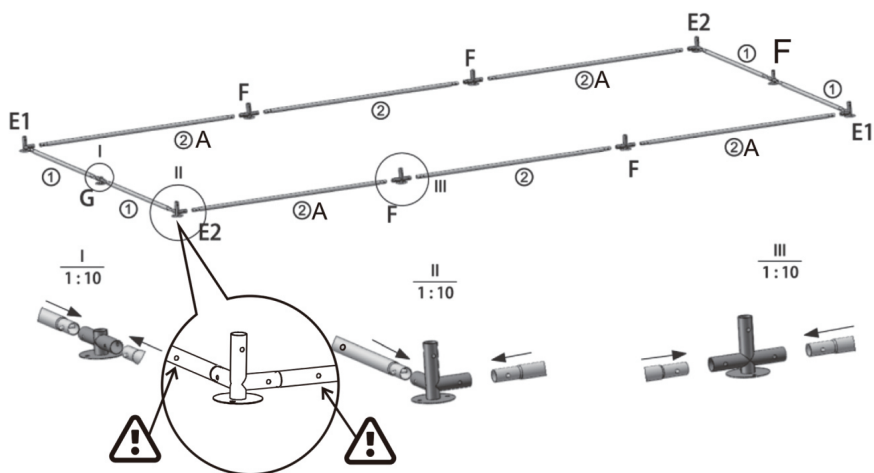


STEP2

Required Tools	 ③A*4PCS	 ③*4PCS
-------------------	--	---

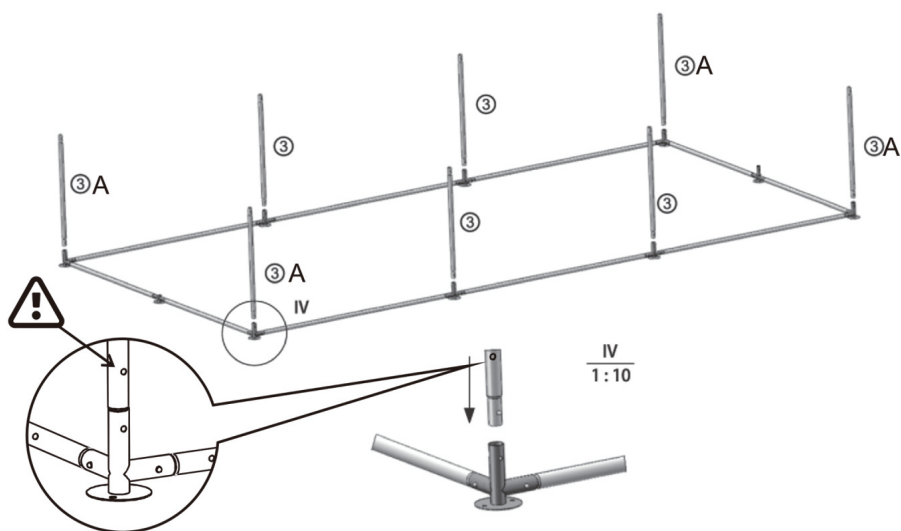


STEP3

Required Tools	 ④*8PCS	 D*5PCS	 H*6PCS	 V*1PCS
-------------------	---	---	---	---

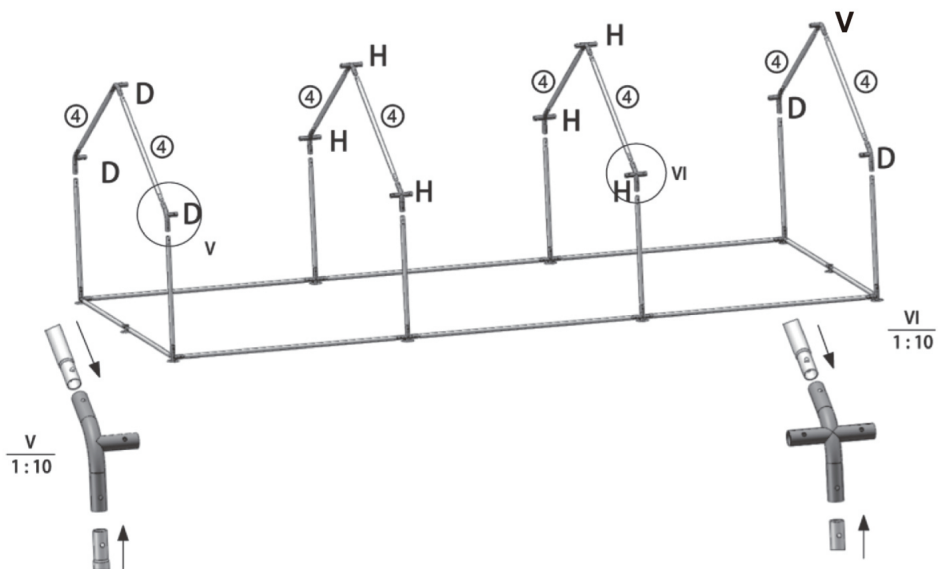


STEP4

Required Tools	 ②*9PCS	 ⑦*1PCS	 ⑩*8PCS Φ 16 300mm	 K*16PCS
-------------------	--	--	--	---

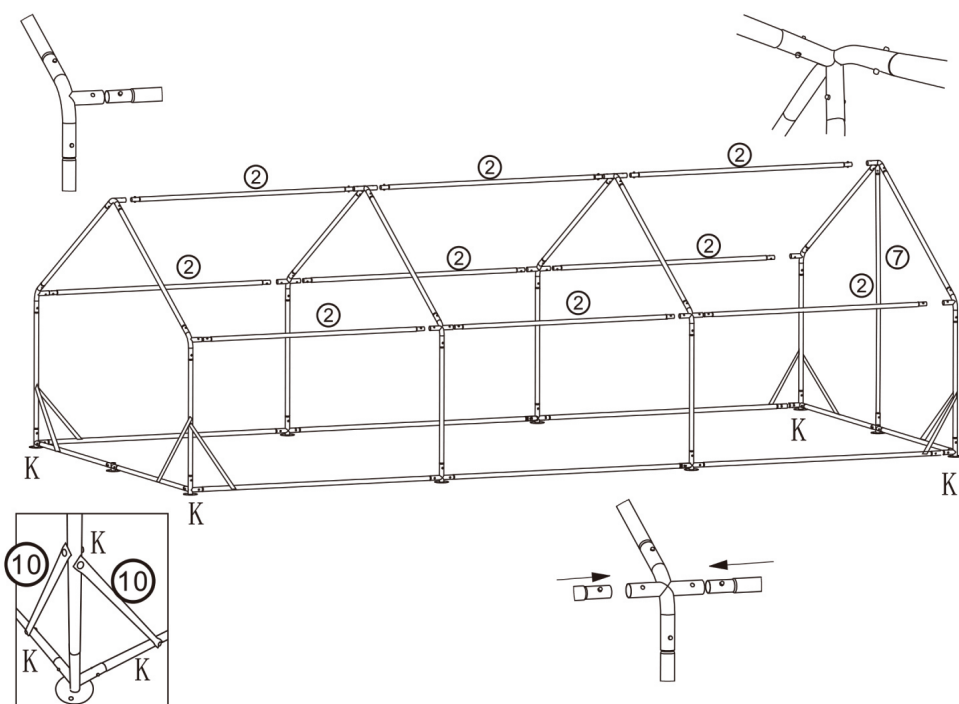


STEP5

Required Tools	 ⑤*1PCS	 ⑤A*1PCS	 ⑥*1PCS	 T*2PCS
 J*2PCS	 I*8PCS	 L*2PCS	 K*6PCS	

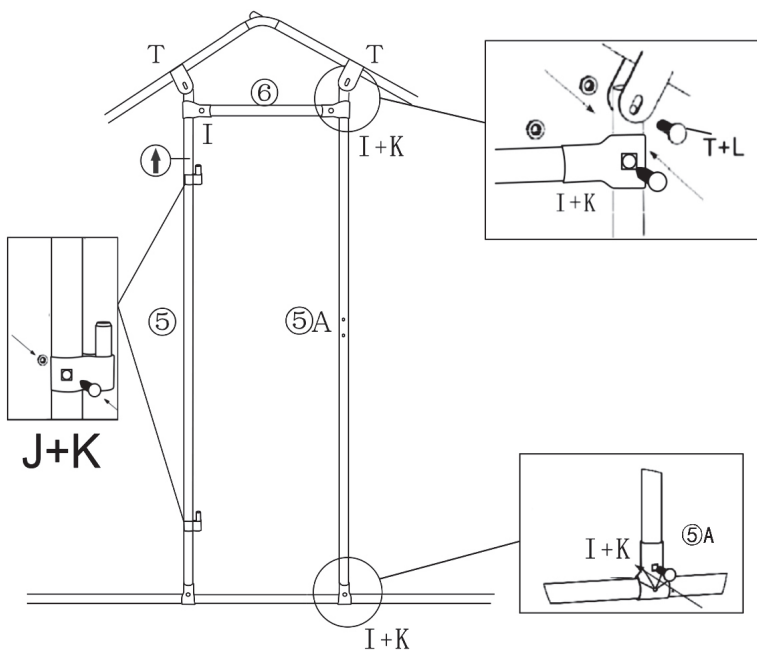

STEP6

Required Tools	 1A*1PCS	 A*1PCS	 C*2PCS	 J1*2PCS	 K*6PCS
-------------------	---	--	--	---	--

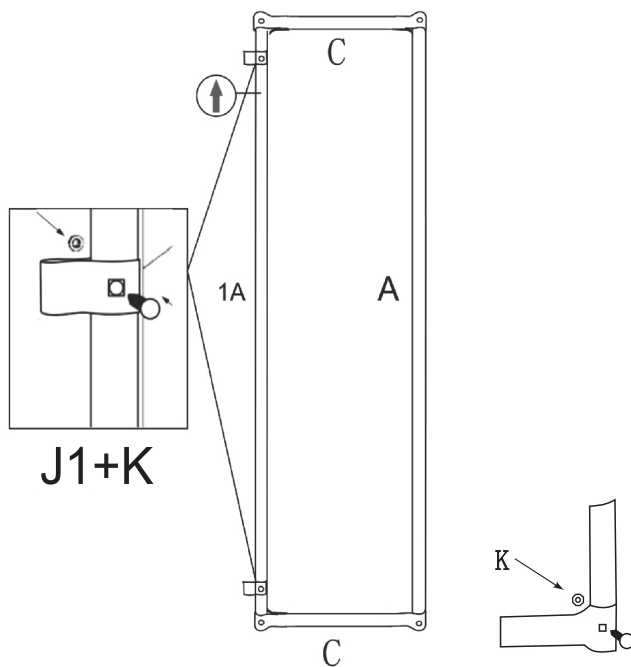

STEP7


Required
Tools



M*1PCS




K*2PCS

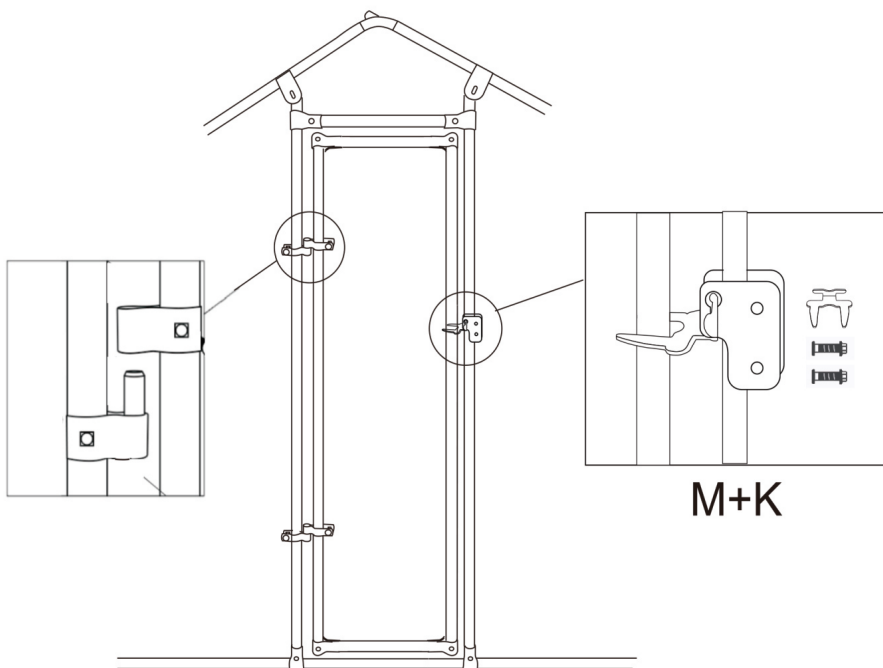

STEP8



Required
Tools



Q*1PCS




Q*1SET

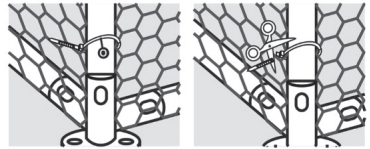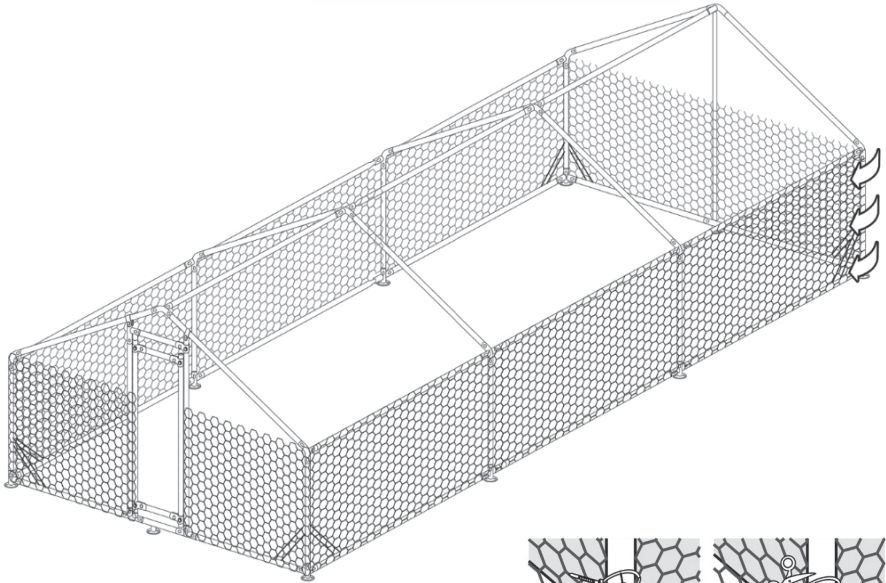

STEP9







Required
Tools



Q*1PCS






0*1SET

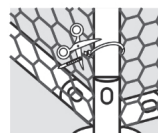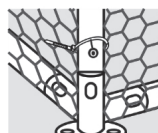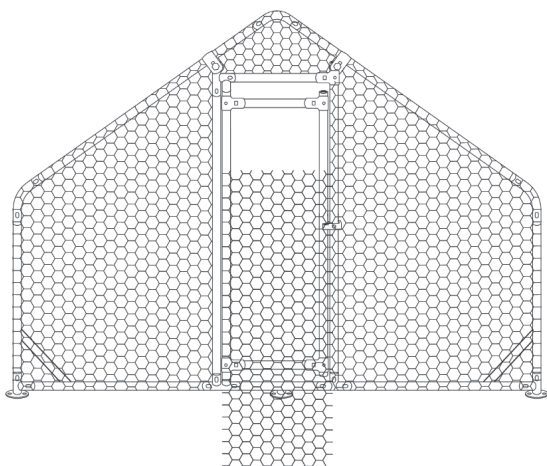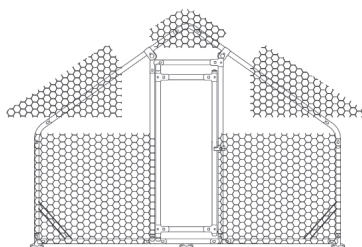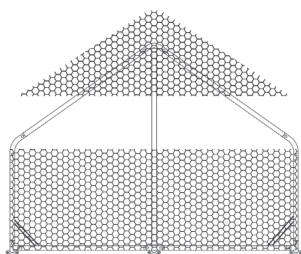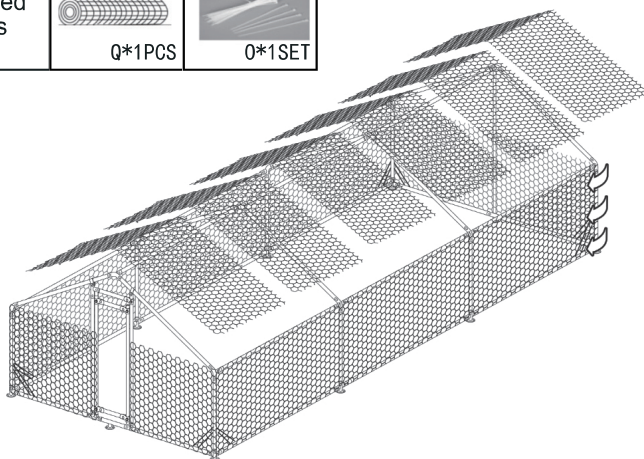

STEP10

Required Tools			
	P*1PCS	R*12PCS	W*10PCS

P

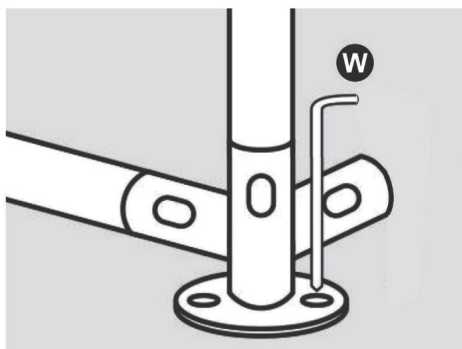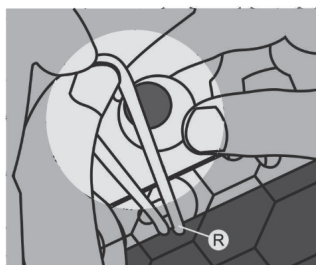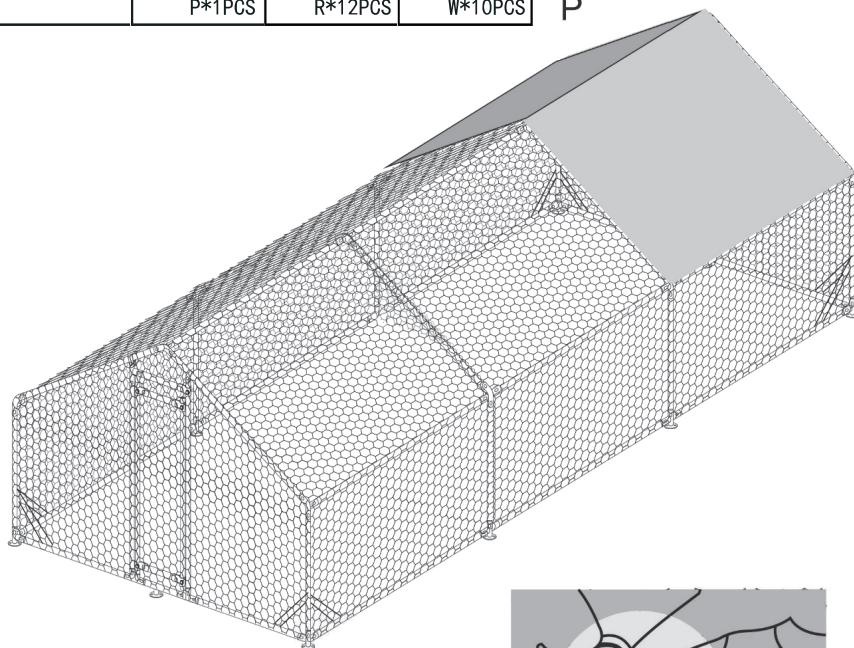

WARNING:

REMOVE THE COVER DURING HEAVY
SNOW OR RAINSTORMS TO PREVENT THE CHICKEN
COOP FROM COLLAPSING UNDER PRESSURE.