


Trolley Assembly Instructions

Accessories List

 Main Frame	 Handrail	 Wooden Wheels	 Caster Wheels
 M6 Screws	 M4 Screws		

Step 1: Install the wheels

- 1.Align the holes on the Main Frame's bottom and secure the Caster Wheels using M4 Screws.
2. First, use a tool to remove the semi-circular wooden block at the bottom of the Main Frame (as shown in Figure 1).
3. Then, place the Wooden Wheels in the corresponding positions (as shown in Figure 2).
4. Finally, reinstall the previously removed screws and semi-circular wooden block (as shown in Figure 3).

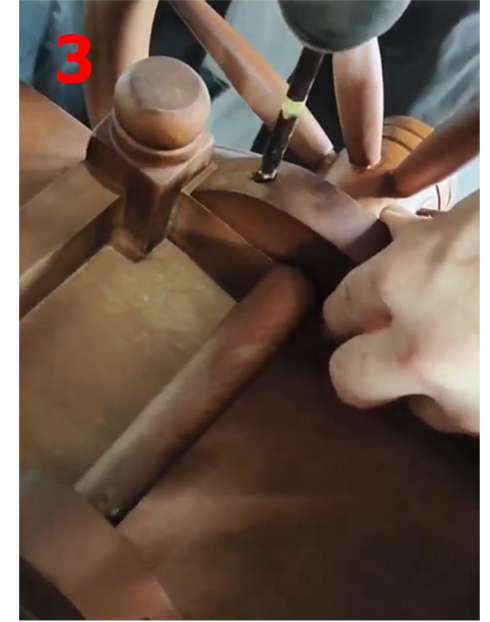

Step 2: Install the handrail

1. Align the holes of the handrail with those of the main frame. Once aligned, first screw in the M6 screws by hand (repeat the same for the other side). After hand-tightening, use a tool to secure them firmly.

