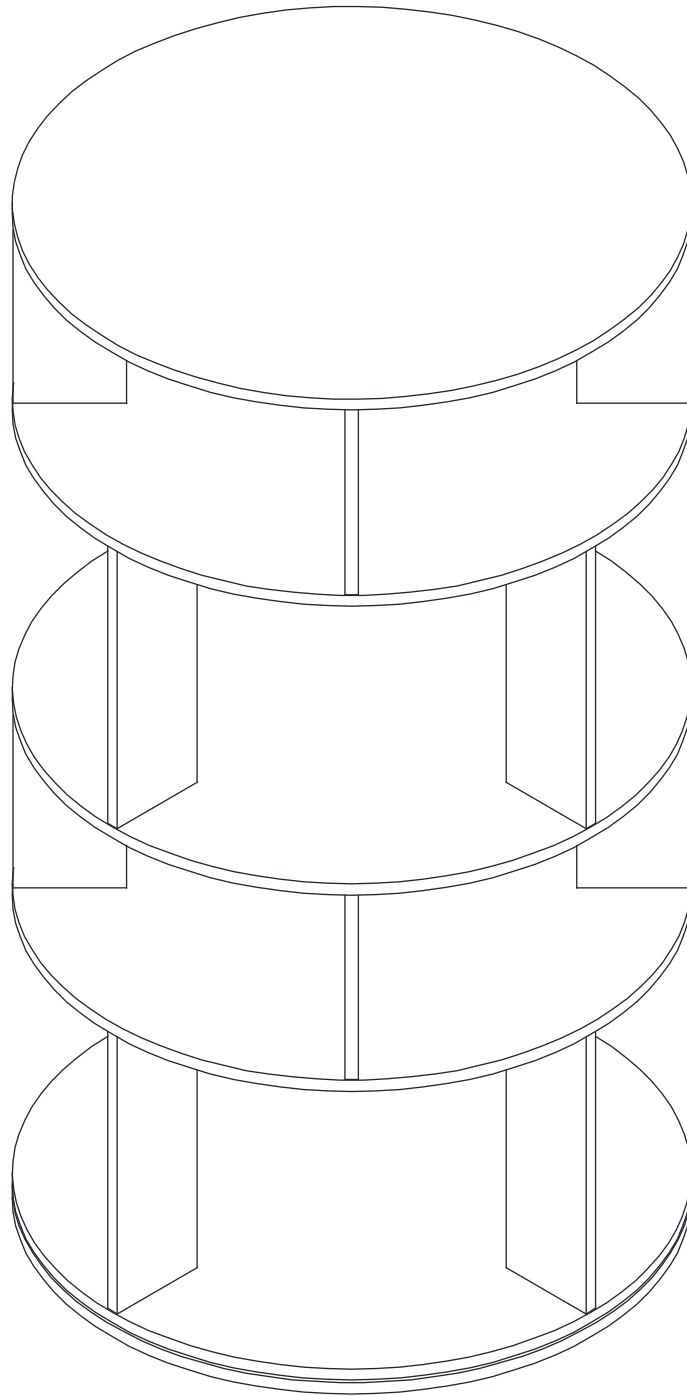
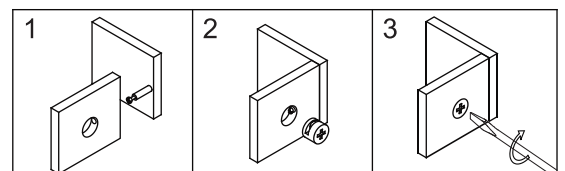


Shoe Cabinet











Installation Tips:

Please use a flat screwdriver to install the cam lock.






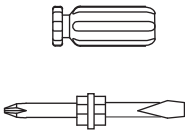


Package Contents: Parts
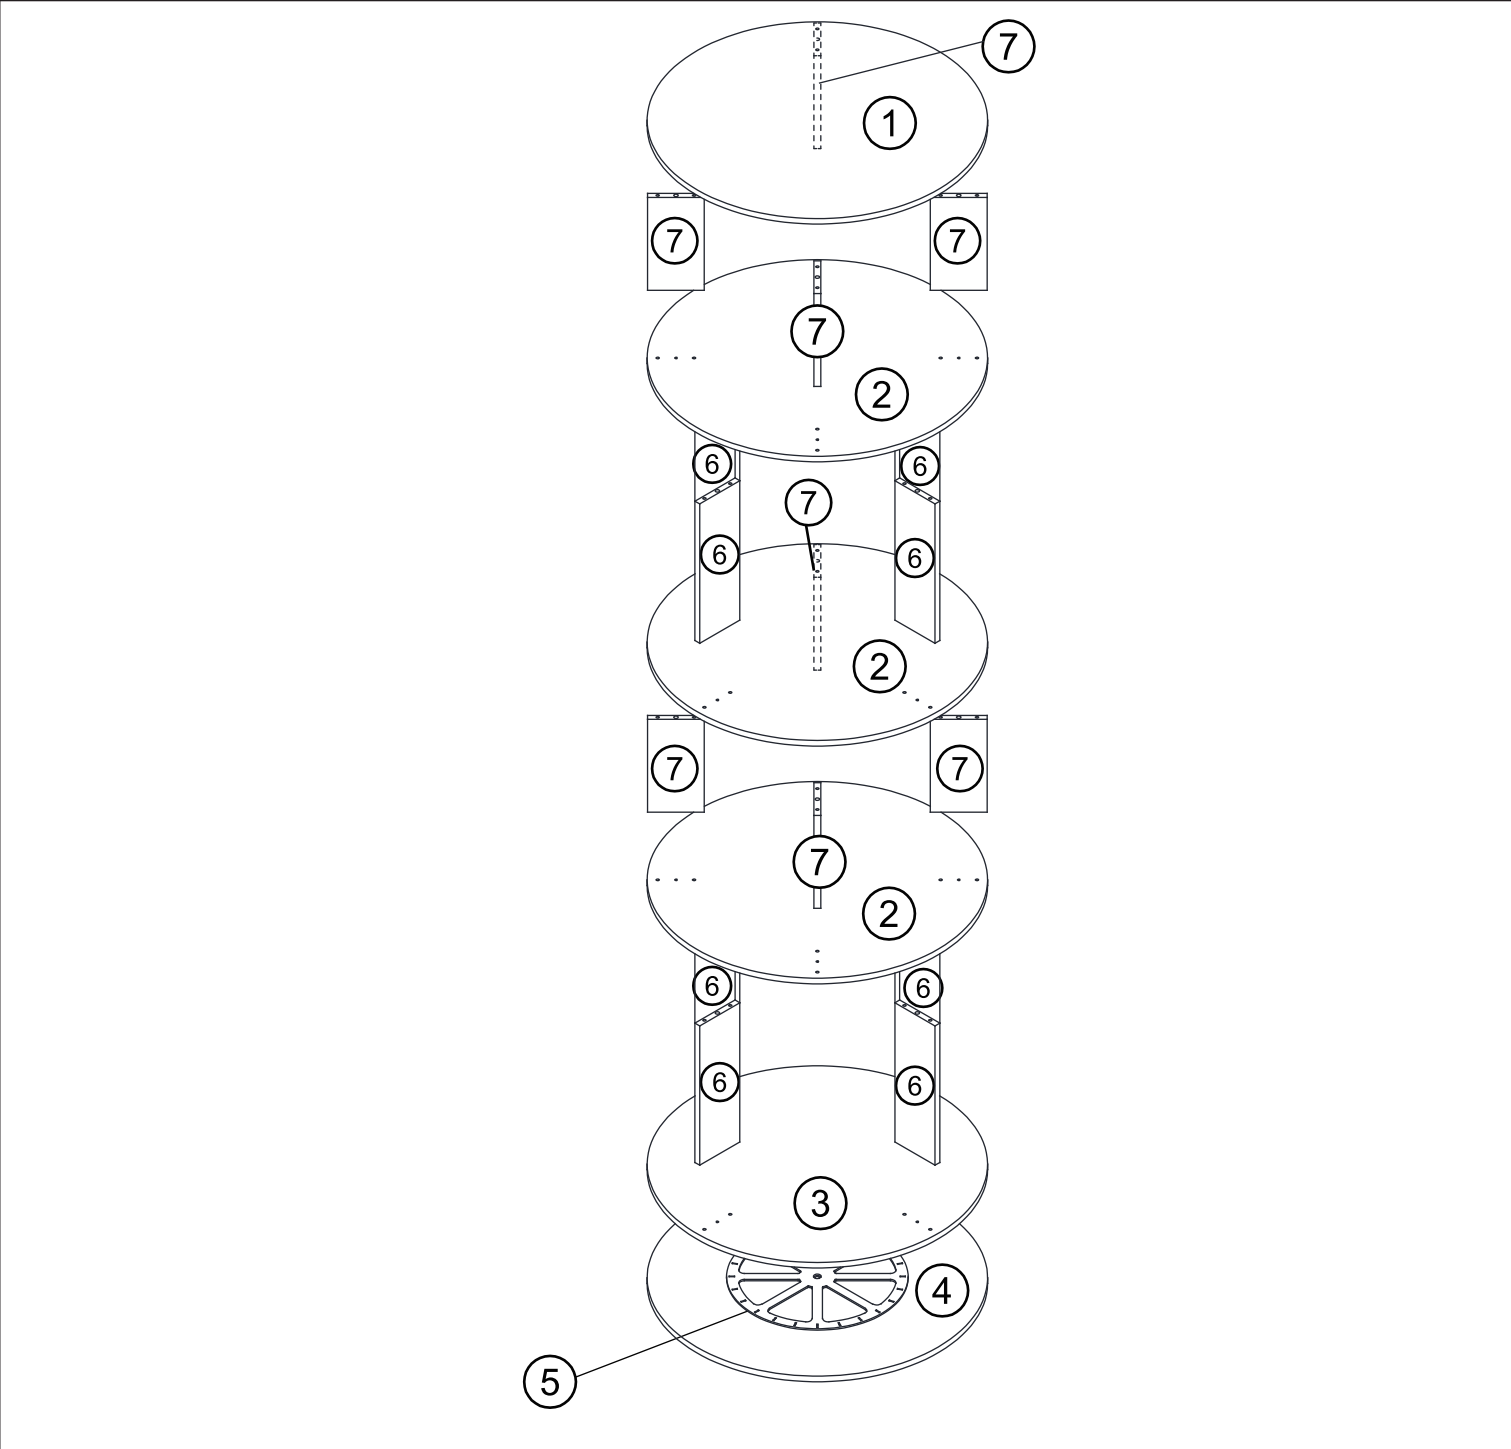
<div>①</div> <div></div> <div>×1</div>	<div>②</div> <div></div> <div>×3</div>	<div>③</div> <div></div> <div>×1</div>	<div>④</div> <div></div> <div>×1</div>	<div>⑤</div> <div></div> <div>×1</div>	<div>⑥</div> <div></div> <div>L=300mm ×8</div>	<div>⑦</div> <div></div> <div>L=200mm ×8</div>
------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------





Package Contents: Hardware

<div>A</div> <div></div> <div>×32+2</div>	<div>B</div> <div></div> <div>×32+2</div>	<div>C</div> <div></div> <div>Ø6×30mm ×64+1</div>	<div>D</div> <div></div> <div>M6×20mm ×1</div>	<div>E</div> <div></div> <div>×32+2</div>	<div></div>
-----------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------



1

Screw (D) through (4) and (5) into the hole on (3).

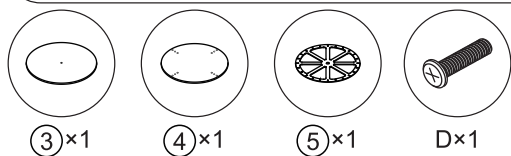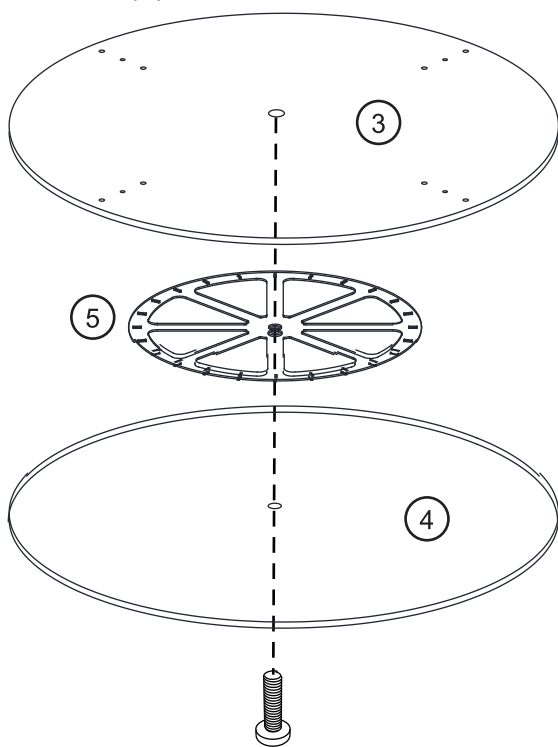



2

Insert (C) into the holes on the sides of (6) and (7).

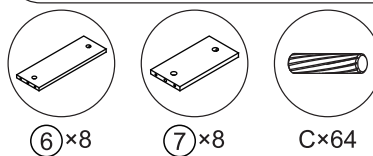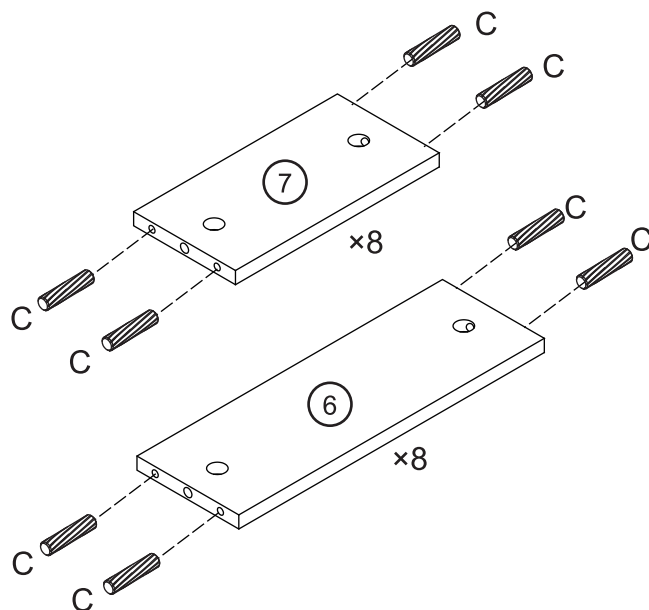



3

Screw (A) into the designated holes on (1) and (3).

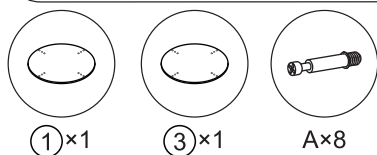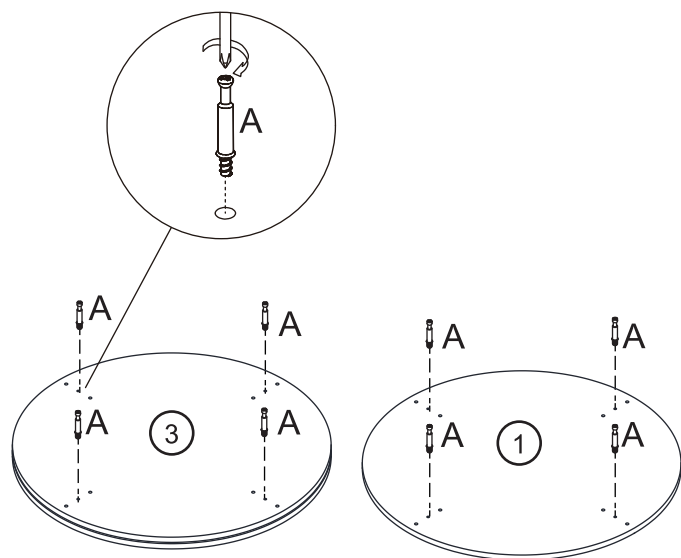



4

Screw (A) into the designated holes on (2). Flip (2) over and screw (A) into the holes on the back of (2).

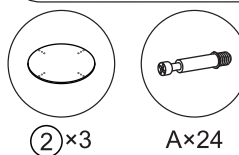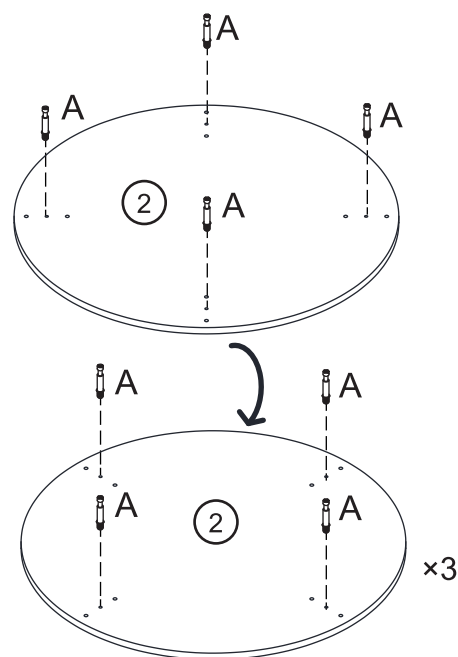

5


Connect (6) to (3) by screwing (B) into the designated holes on (6).

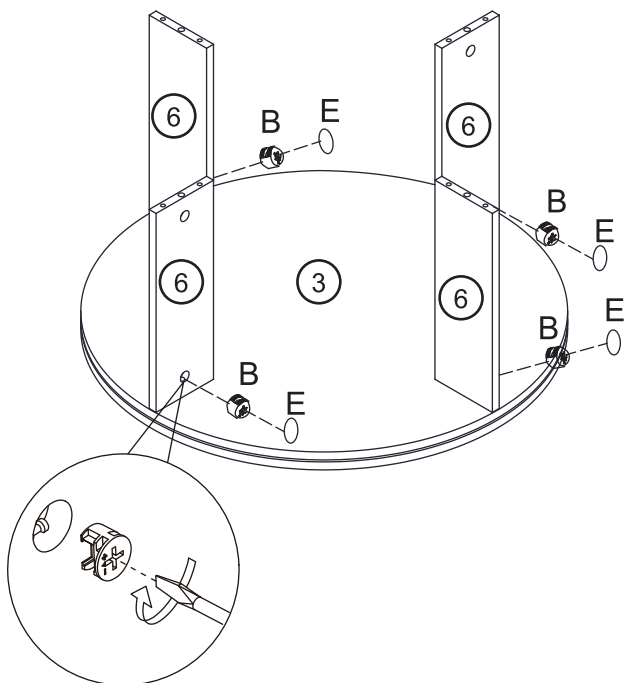

⑥×4





B×4

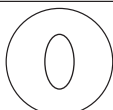

E×4

7


Connect (7) to (1) by screwing (B) into the designated holes on (7).

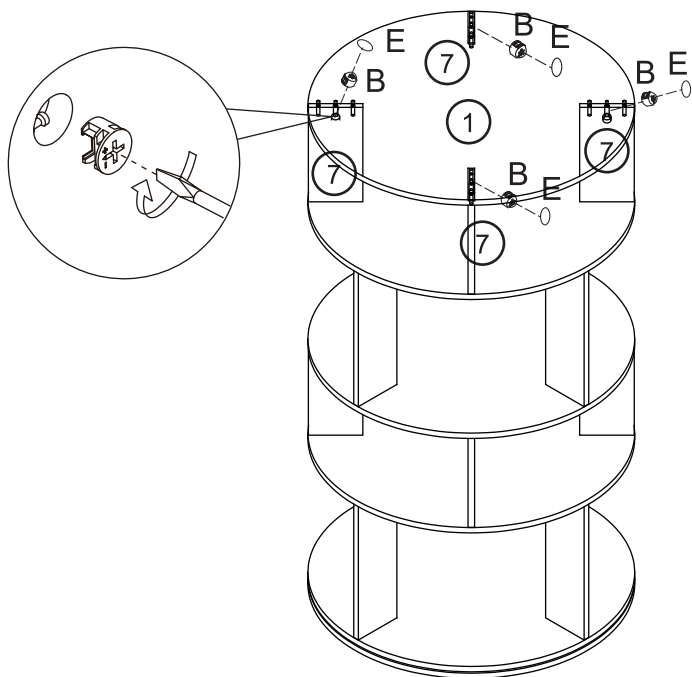

①×1





B×4



E×4

6


Connect (6) to (2) by screwing (B) into the designated holes on (6). Assemble the remaining shelves using the same method.

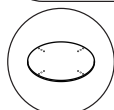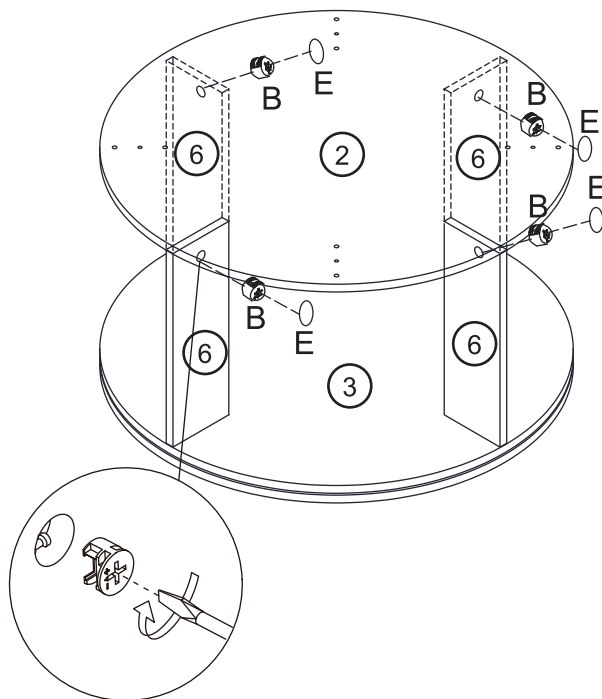

②×3



B×24



E×24

8

The height of each shelf is customizable by swapping (6), (7). For example, you can install (6) on the top as a higher shelf and (7) on the bottom as a shorter shelf to suit your shoe storage needs.

