


Installation Manual

Tools

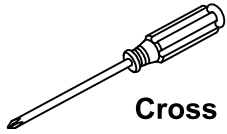

Cross Screwdriver



Allen key

During Installation


1. Do not discard packing material until assembly is complete, as small parts may loosen inside the carton during shipping. If there is a missing part, please contact our after-sales team at jerry@rupatdecor.com
2. Please assemble this item on soft surfaces such as carpets to protect the finish.
3. Pay attention to stability when assembling to avoid falling or scratching.
4. Fully tighten all screws when all parts are in place.

Cleaning and Maintenance


1. To protect the finish, avoid chemicals and household cleaners.
2. Keep away from the heat source to prolong the service life.
3. Wipe up any spilled liquid on top with a damp cloth.

Components


screw(Ax30)

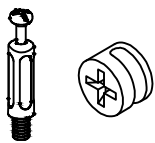


Hinge (Bx8)

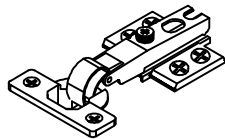


Side Hardware foot
(Cx2)

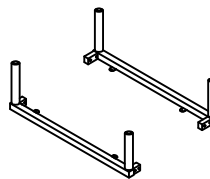


Self-tapping screws
(Dx54)short




Hardware foot
(Ex1)



Allen socket screws
(Fx8)short




Allen key
(Gx1)

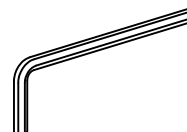


Note: Do not fully tighten all bolts until all parts are in place Failure to follow these instructions may cause the bolt to misalign during assembly.

Installation Manual

Screw (A) installation demonstration

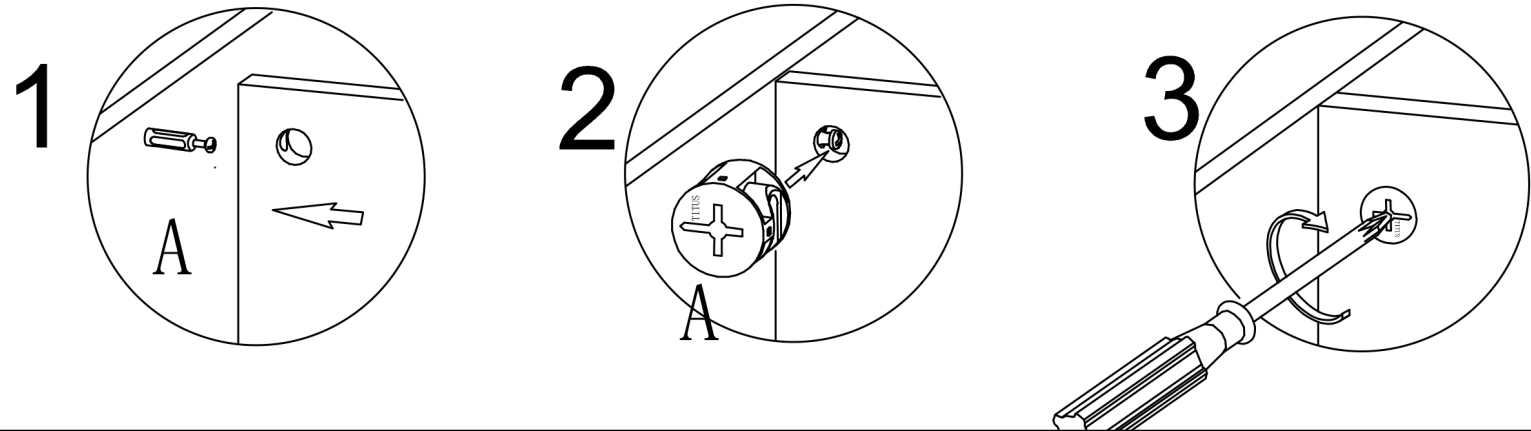


Board

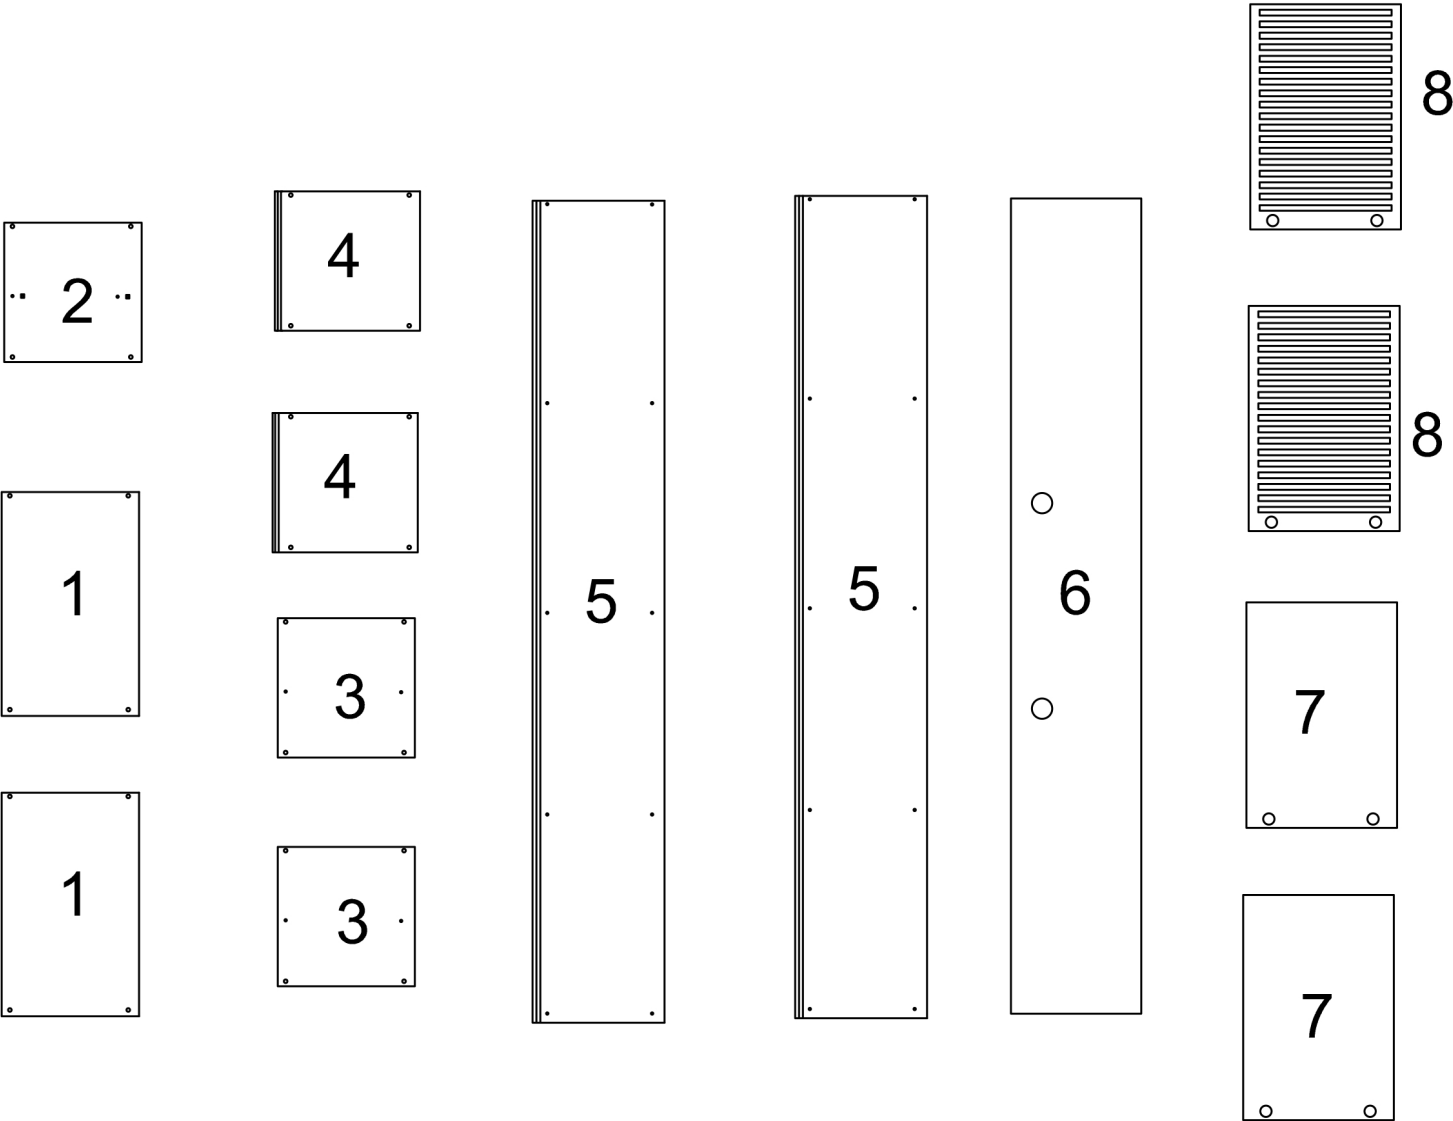


Install according to the part number sequence.

Step 1

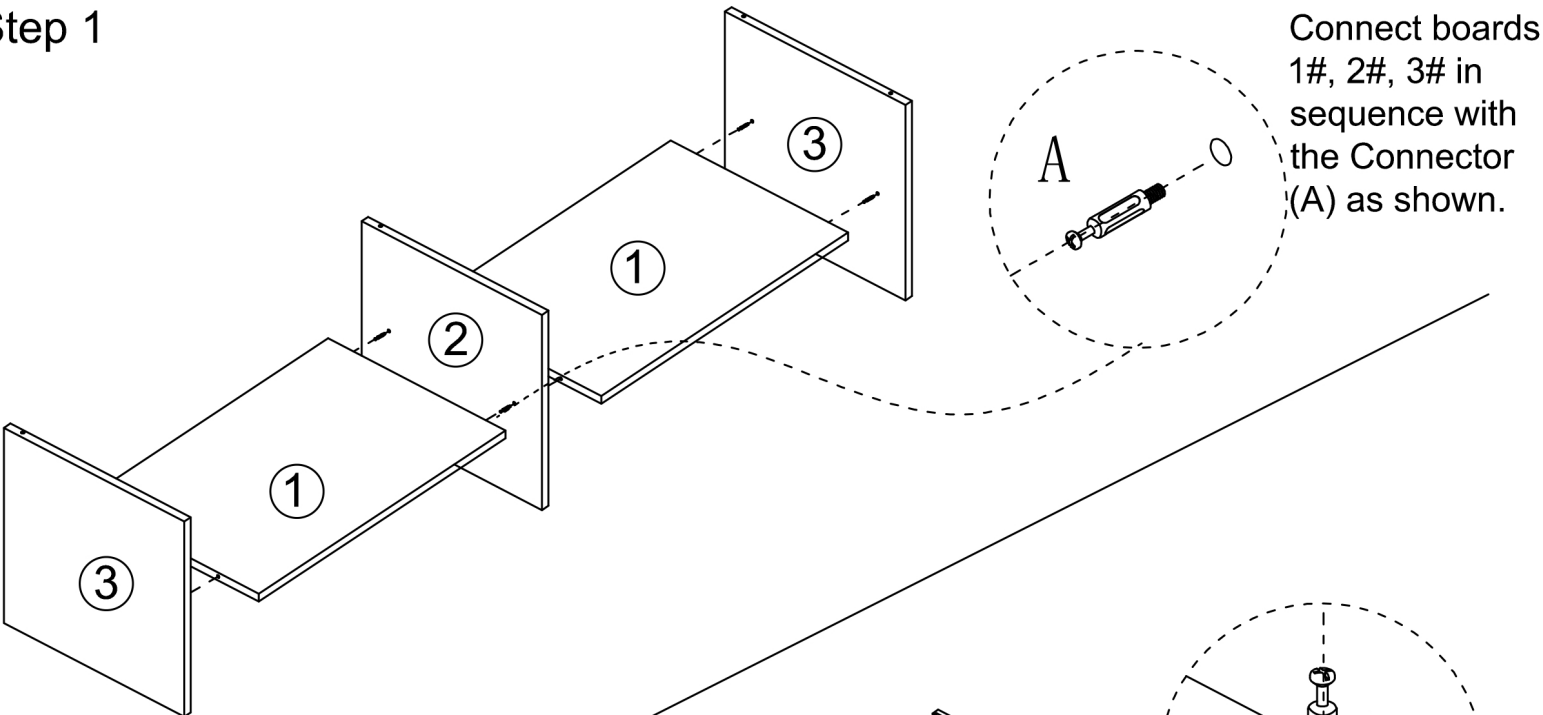


Step 2

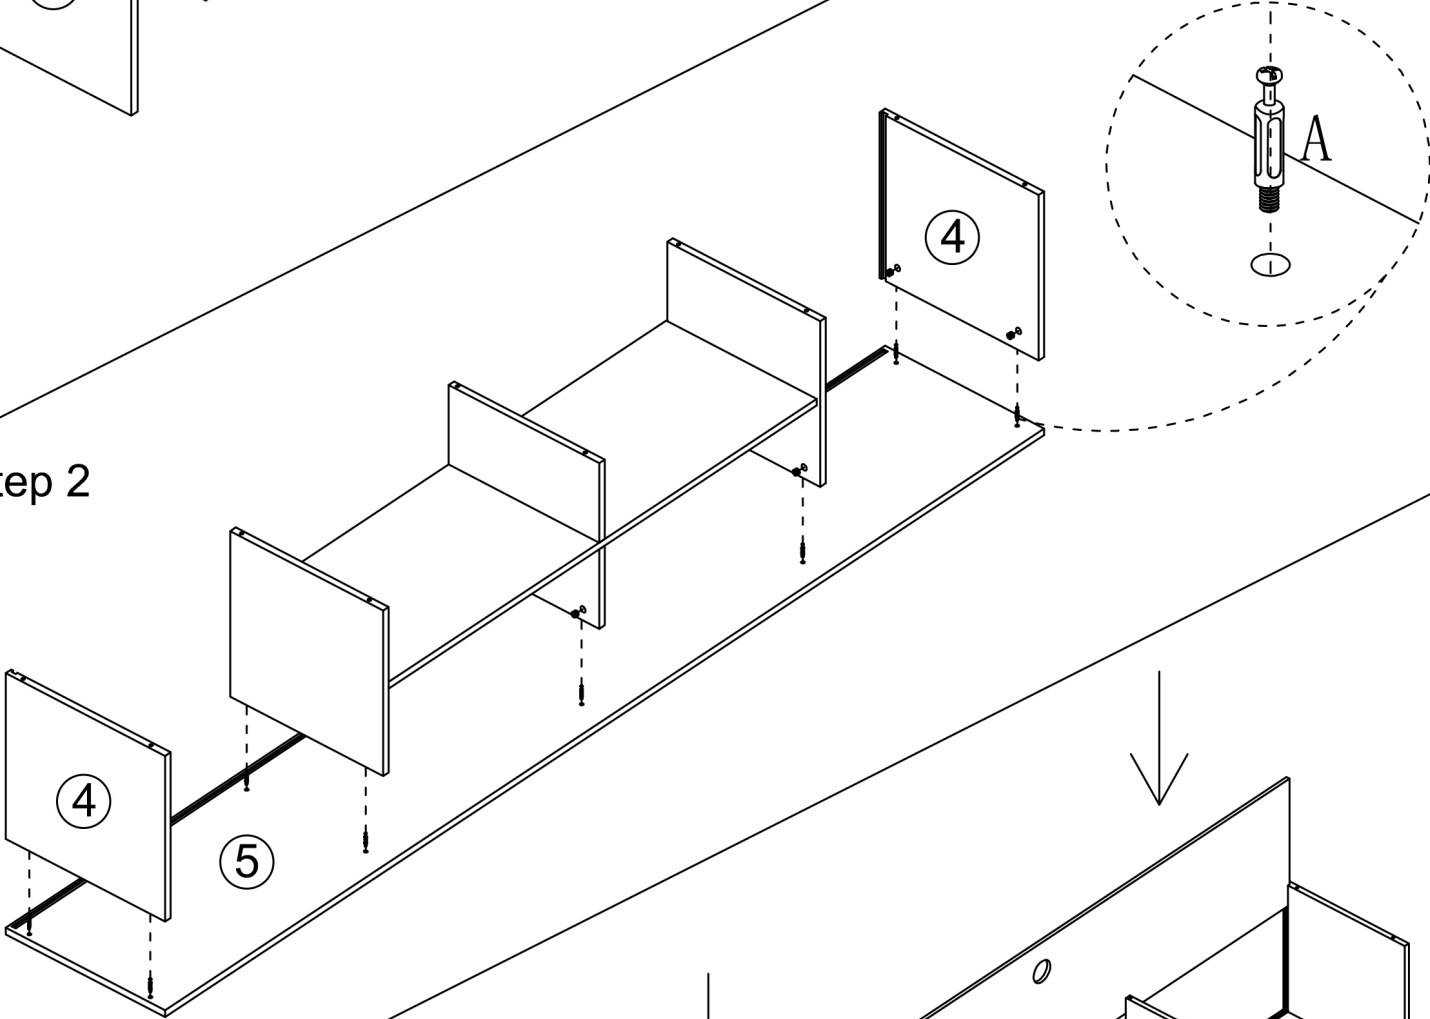

Step 3



Place the 6# board to fit the gap.

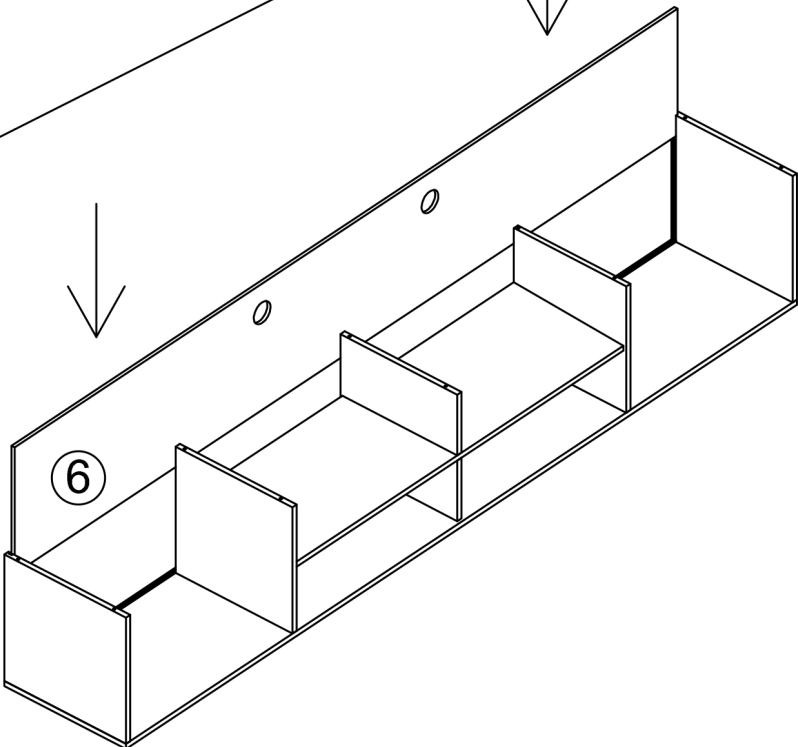


Install according to the part number sequence.

Step 4


Fix the 5# board on the workpiece from Step 3 with the Connector (A).

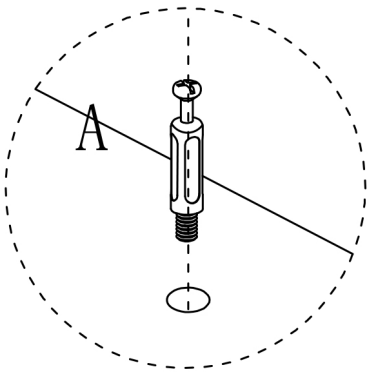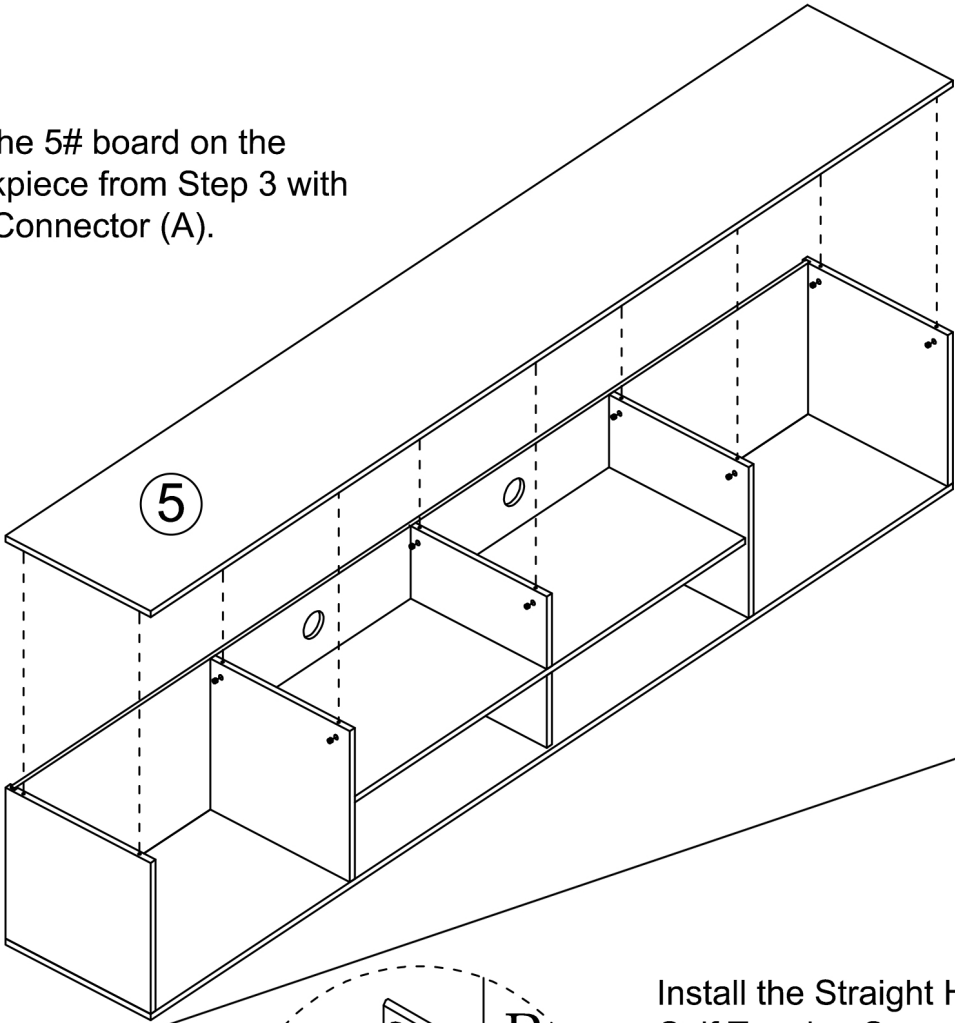

Install the Straight Hinge (B) with Short Self Tapping Screws (D) between 7# and 8# boards and the joints of the layers.

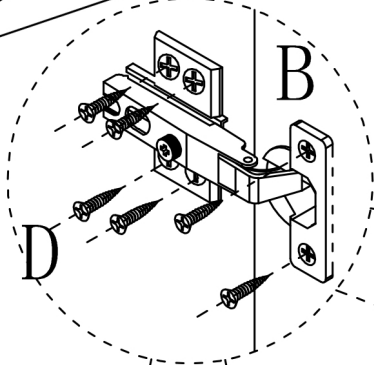


Step 5

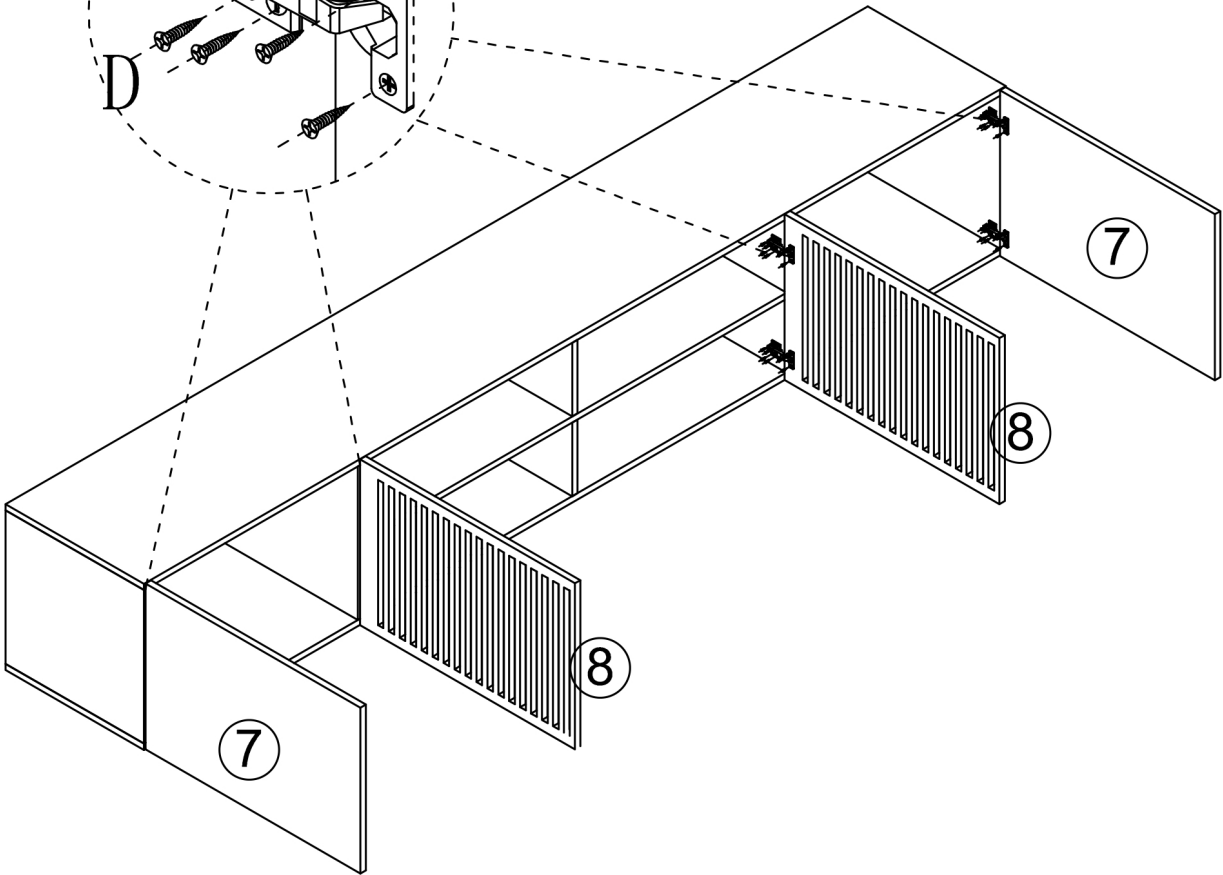


Step 6


Nested metal frame

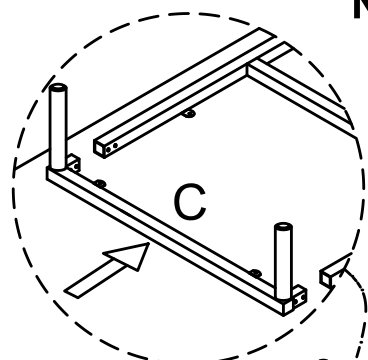


Enlarge image

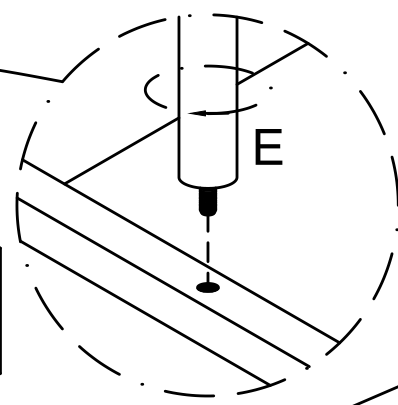


Enlarge image

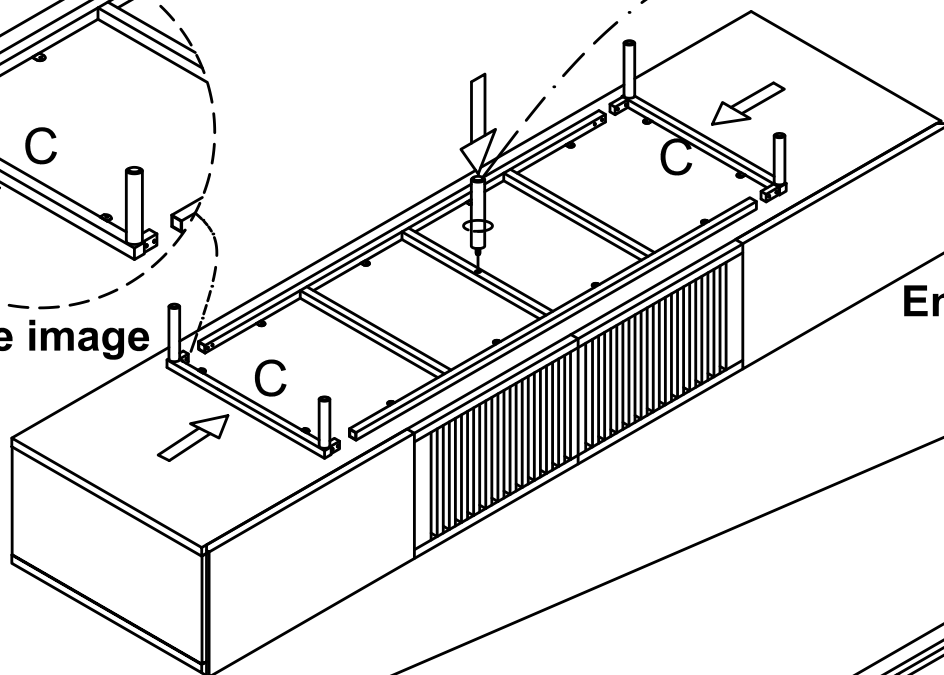


Step 7

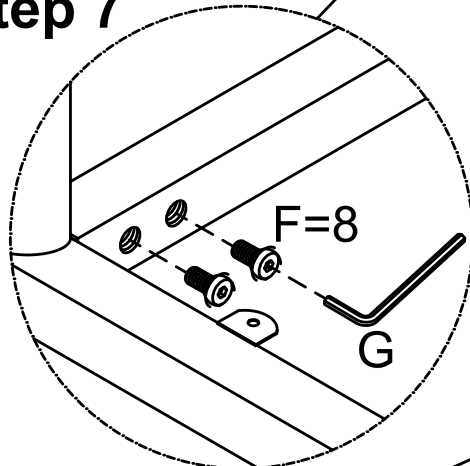



Enlarge image

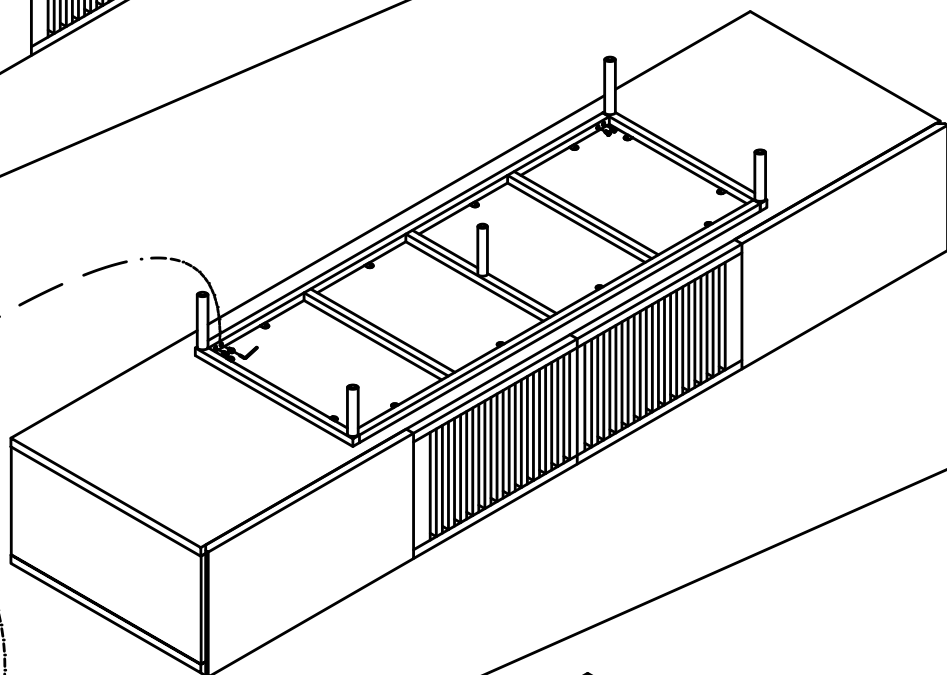

Step 8

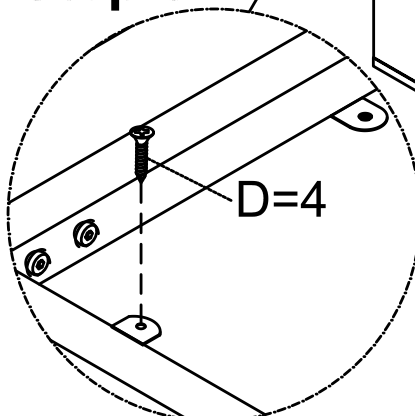

Enlarge image

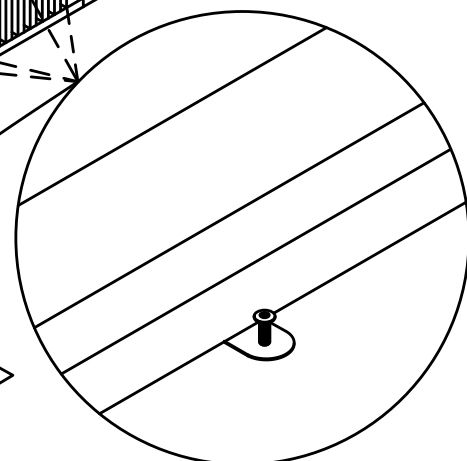

As shown, fasten the 4 fixing screws of the scaffold.

Install according to the part number sequence.

Step 9

