

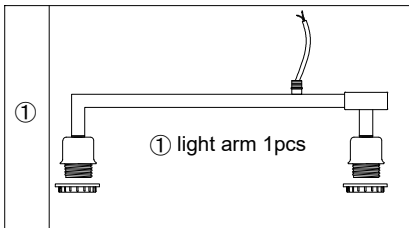
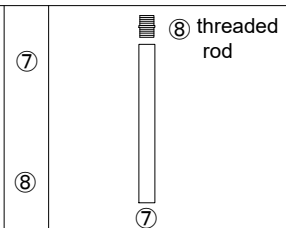
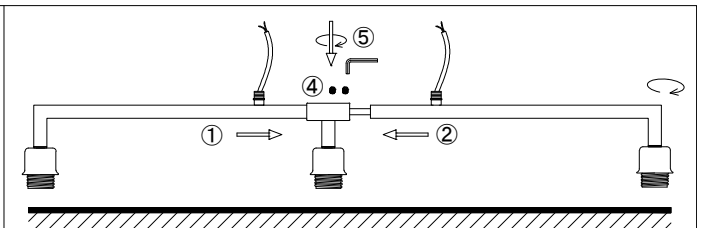
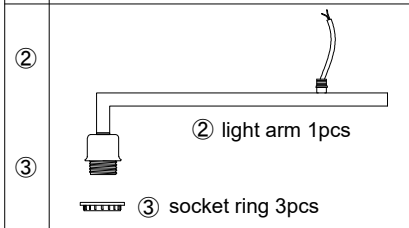
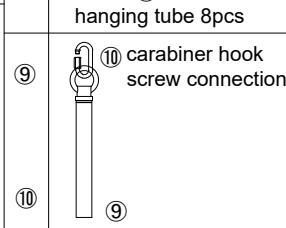













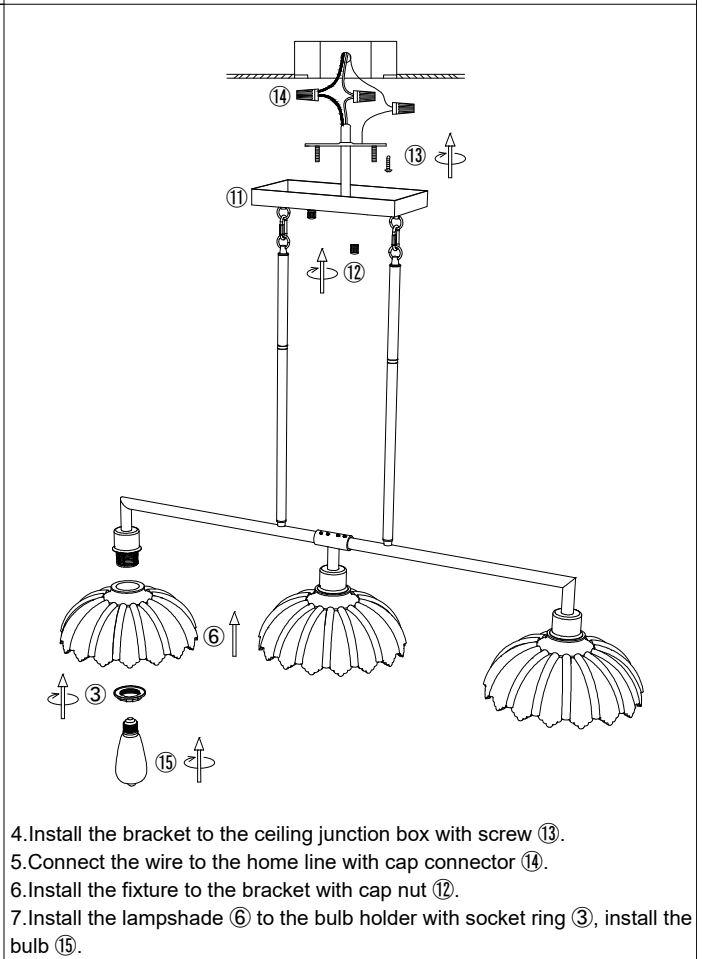
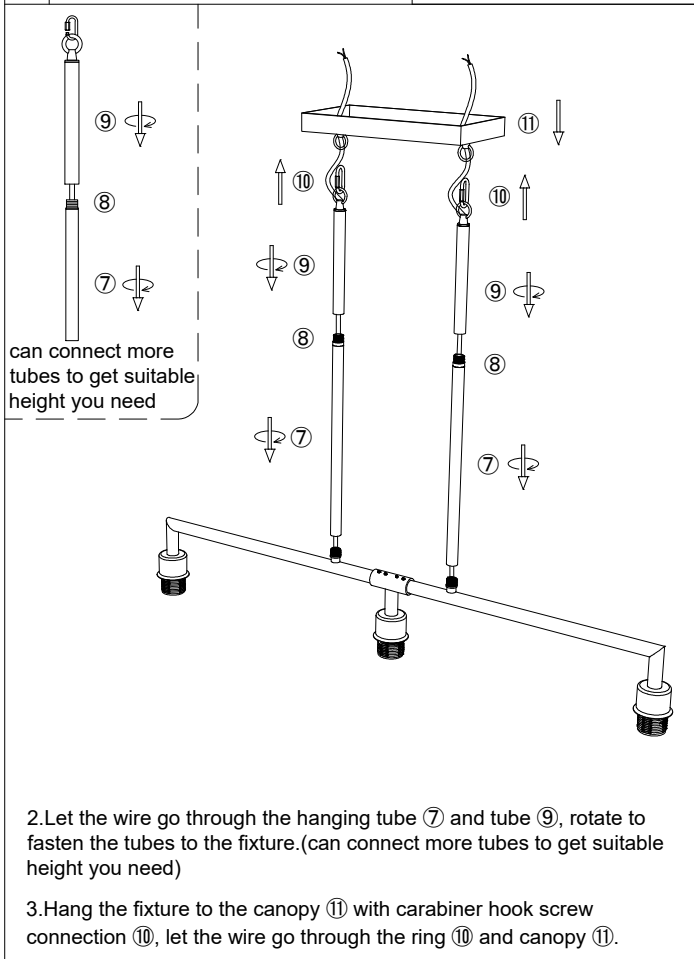


Installation & Assembly


| | | |
|--|---|--|
|  <p>① light arm 1pcs</p> |  <p>⑧ threaded rod</p> |  |
|  <p>② light arm 1pcs</p> |  <p>⑦ hanging tube 8pcs</p> | <p>Put light arm ① and light arm ② on a flat surface, adjust two arms in a proper position to make the whole fixture straight, after that fixed both arms with grub screw.</p> |
|  <p>③ socket ring 3pcs</p> |  <p>⑩ carabiner hook screw connection</p> |  <p>Push the fixtures on both sides towards each other to minimize the gap between the joints as much as possible.</p> |
|  <p>④ grub screw 2pcs</p> |  <p>⑨ hanging tube 2pcs</p> | <p>1. Put the arm ① into the arm ②, adjust two arms in a proper position to make the whole fixture straight, after that fixed both arms with grub screw ④ by rotate hex key ⑤.</p> |
|  <p>⑤ hex key 1pcs</p> |  <p>⑪ canopy 1pcs</p> |  <p>⑫ cap nut 2pcs</p> |
|  <p>⑥ glass lampshade 3pcs</p> | <p>  X 1PCS  X 1PCS  X 3PCS  X 3PCS  X 3PCS  X 3PCS </p> |  |

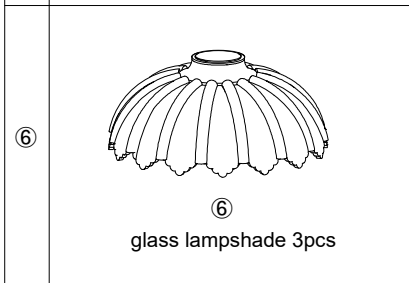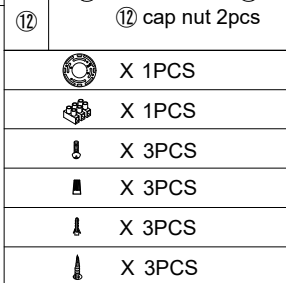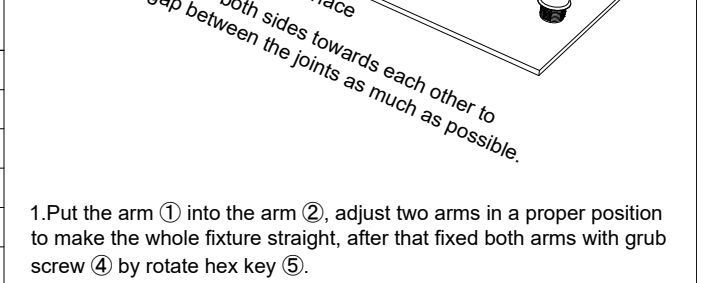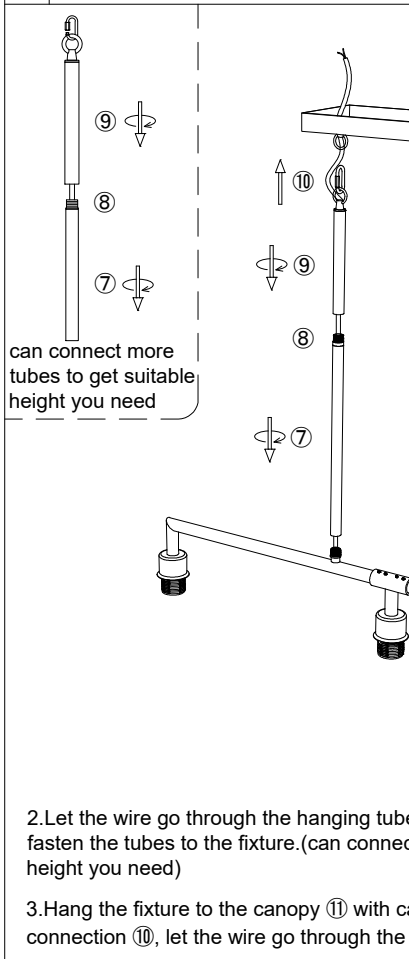

can connect more tubes to get suitable height you need

2. Let the wire go through the hanging tube ⑦ and tube ⑨, rotate to fasten the tubes to the fixture. (can connect more tubes to get suitable height you need)

3. Hang the fixture to the canopy ⑪ with carabiner hook screw connection ⑩, let the wire go through the ring ⑩ and canopy ⑪.

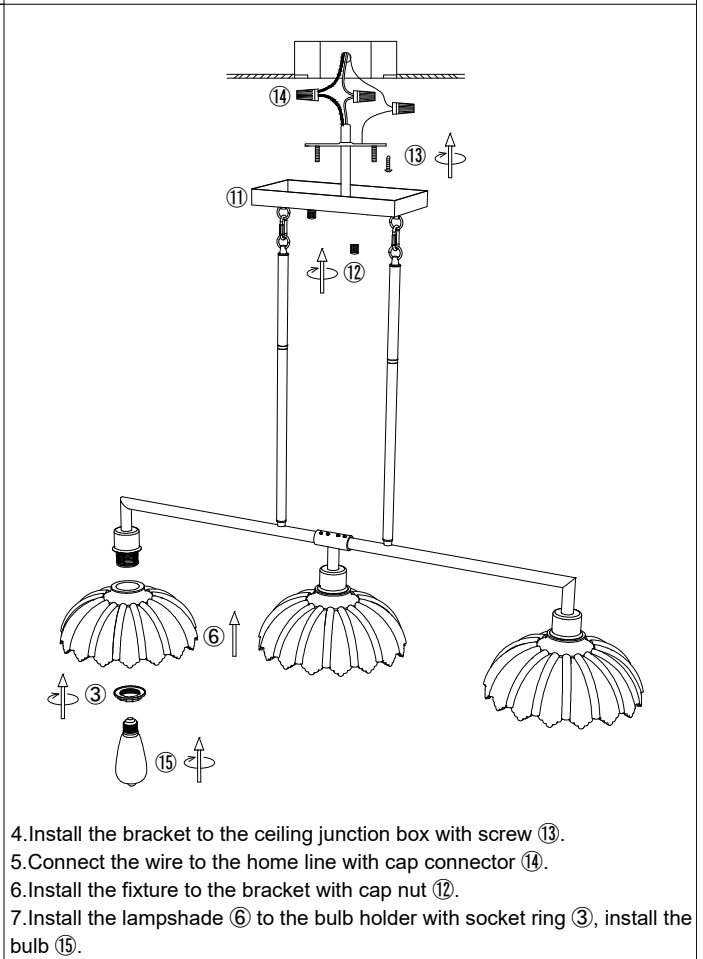

4. Install the bracket to the ceiling junction box with screw ⑬.

5. Connect the wire to the home line with cap connector ⑭.

6. Install the fixture to the bracket with cap nut ⑫.

7. Install the lampshade ⑥ to the bulb holder with socket ring ③, install the bulb ⑮.

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !

Only a professional electrician should install this kind of product !