


Installation & Assembly

① ② ③	③socket ring 3pcs ② lock nut & teeth lock washer 3pcs ① short light arm 3pcs	⑪ ⑫	⑪ carabiner hook screw connection 1pcs ⑫ hanging tube 1pcs	⑰ ⑱	⑰ canopy 1pcs ⑱ cap nut 2pcs
				㉑	tool 1pcs
④	③socket ring 6pcs ② lock nut & teeth lock washer 6pcs ④ long light arm 6pcs	⑬ ⑭	⑬ threaded rod 3pcs ⑭ hanging tube 3pcs		X 1PCS X 1PCS
⑤ ⑥ ⑦ ⑧ ⑨ ⑩	⑤threaded rod ⑥small metal cover ⑦small metal box ⑧big metal box ⑨big metal cover ⑩ end cap	⑮	splicing connector 4pcs		X 3PCS X 3PCS
		⑯	lampshade 9pcs		X 3PCS X 3PCS

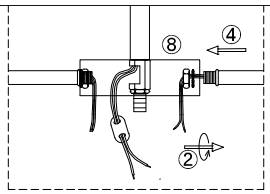


1.Pull the orange operating handle A to open the inlet hole,insert the wire B.
2.Press the operating handle A to finish wiring.(Note: one inlet hole can put 2 or 3 wires inside)

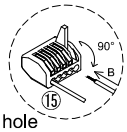


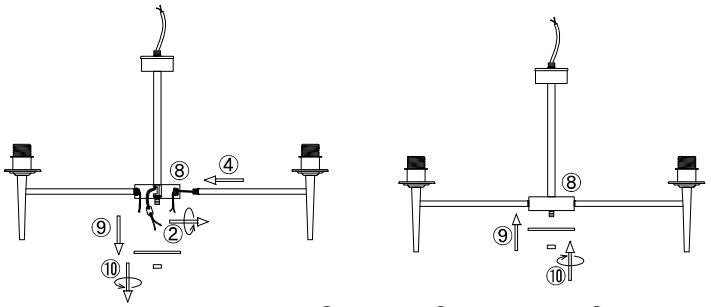


1.Loosen and remove out the end cap ⑩ and cover ⑨ from metal box ⑧, install the long light arm ④ to the metal box ⑧ with lock nut & teeth lock washer .(don't tighten the lock nut until all light arms are ready installed to the metal box ⑧, adjust the arms even and rotate to fasten the lock nuts at last)
2.Connect all the wires by parallel with connectors ⑮ (all live line-L use one connector, and neutral Line-N use another connector).
3. Close back the cover ⑨ to the box ⑧ with end cap ⑩.

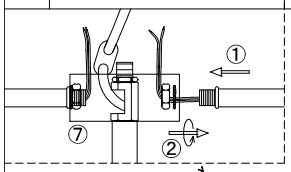



1.Pull the orange operating handle A to open the inlet hole,insert the wire B.
2.Press the operating handle A to finish wiring.(Note: one inlet hole can put 2 or 3 wires inside)

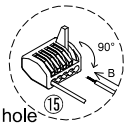

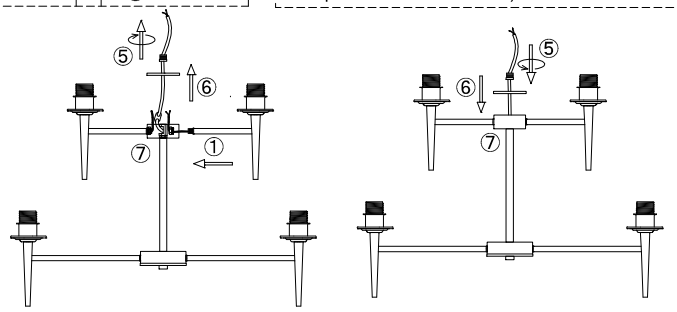


4.Rotate to loosen and remove out the threaded rod ⑤ and small cover ⑥ from metal box ⑦, install the short light arm ① to the metal box ⑦ with lock nut & teeth lock washer ②.(don't tighten the lock nut until all light arms are ready installed to the metal box ⑦, adjust the arms even and rotate to fasten the lock nuts at last)
5.Connect all the wires by parallel with connectors ⑮ (all live line-L use one connector, and neutral Line-N use another connector).
6. Close back the cover ⑥ to the box ⑦ with threaded rod ⑤.

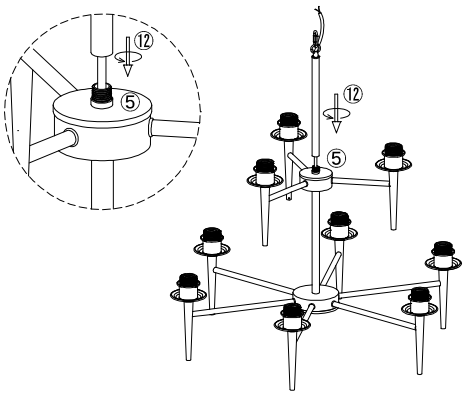

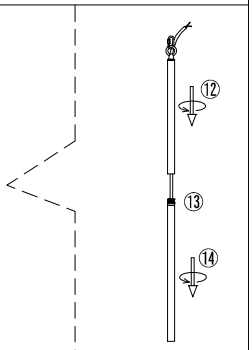


can connect more tubes to get the height you need)


7. Rotate to install the tube ⑫ to the light fixture.(can connect more tubes to get the height you need)

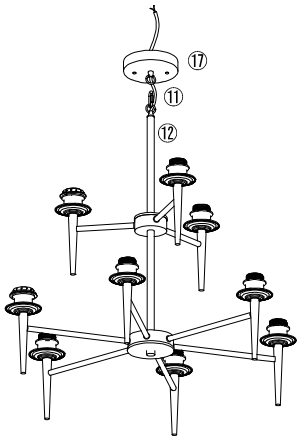

8.Hang the fixture to the canopy ⑰ with carabiner hook screw connection ⑪, let the wire go through the ring ⑪ and canopy ⑰.

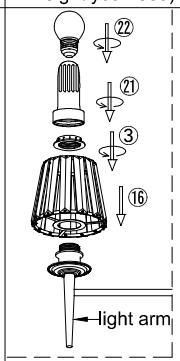

suggest to use G45 pingpong bulb !

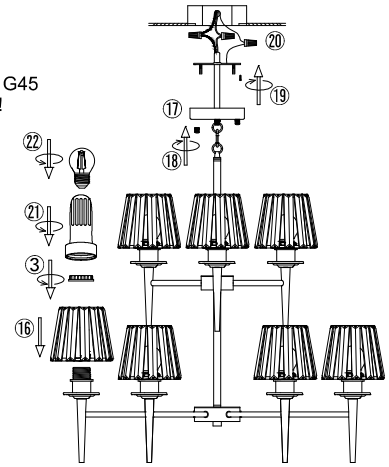



Please operate with gloves to avoid leaving stains on the lampshade.

7. Install the bracket to the ceiling junction box with screw ⑲.
8. Connect the wire to your home line with cap connector ⑳.
9. Install the fixture to the bracket with cap nut ⑱.
10.Use tool ㉑ to install the lampshade ⑯ to the fixture with socket ring ③, and install the bulb ㉒.(bulb is not included in the package)

Please read carefully before installation!!!
Note : Please make sure that the electricity is powered off during installation !
Only a professional electrician should install this kind of product !