


Assembly Instructions

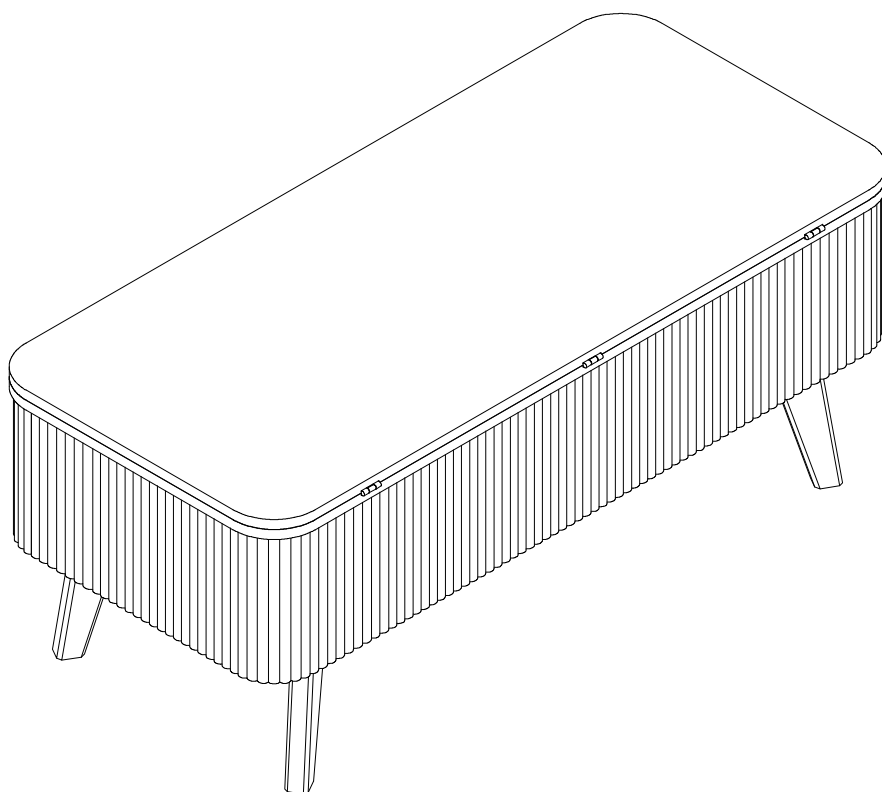


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

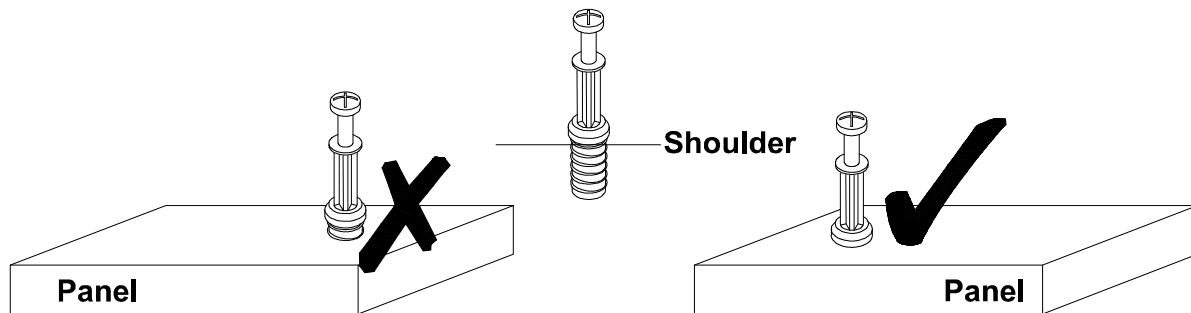

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

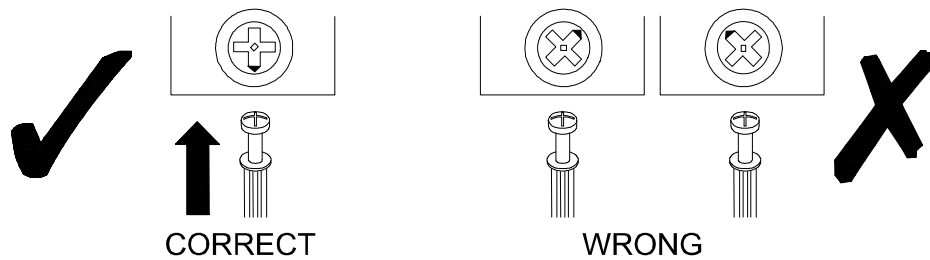

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT



Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

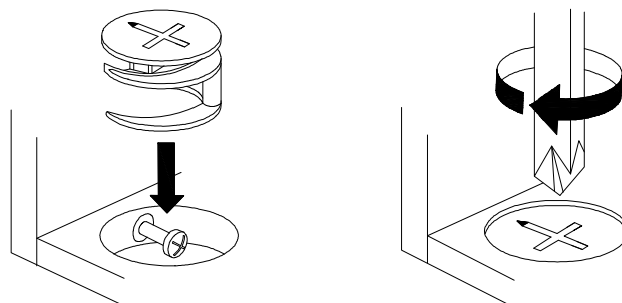


Turn cam lock clockwise to tighten.

Part List

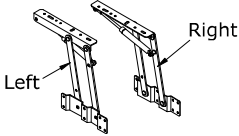
No. A Quantity: 8 Pcs Screw M8*35mm 	No. B Quantity: 1 Pcs Allen Key 5# 	No. C Quantity: 3 Pcs Hinge 84*30*6mm 	No. D Quantity: 18 Pcs Screw M3*14mm 
No. E Quantity: 1 Sets Lifting rod 	No. F Quantity: 24 Pcs Screw M4*16mm 	No. G Quantity: 18 Pcs Sticker Ø20 	No. H Quantity: 8 Pcs Foot Pad Ø20 
No. I Quantity: 8 Pcs Rubber particles Ø10 	No. J Quantity: 8 Pcs Gasket Ø17 		

Product structure

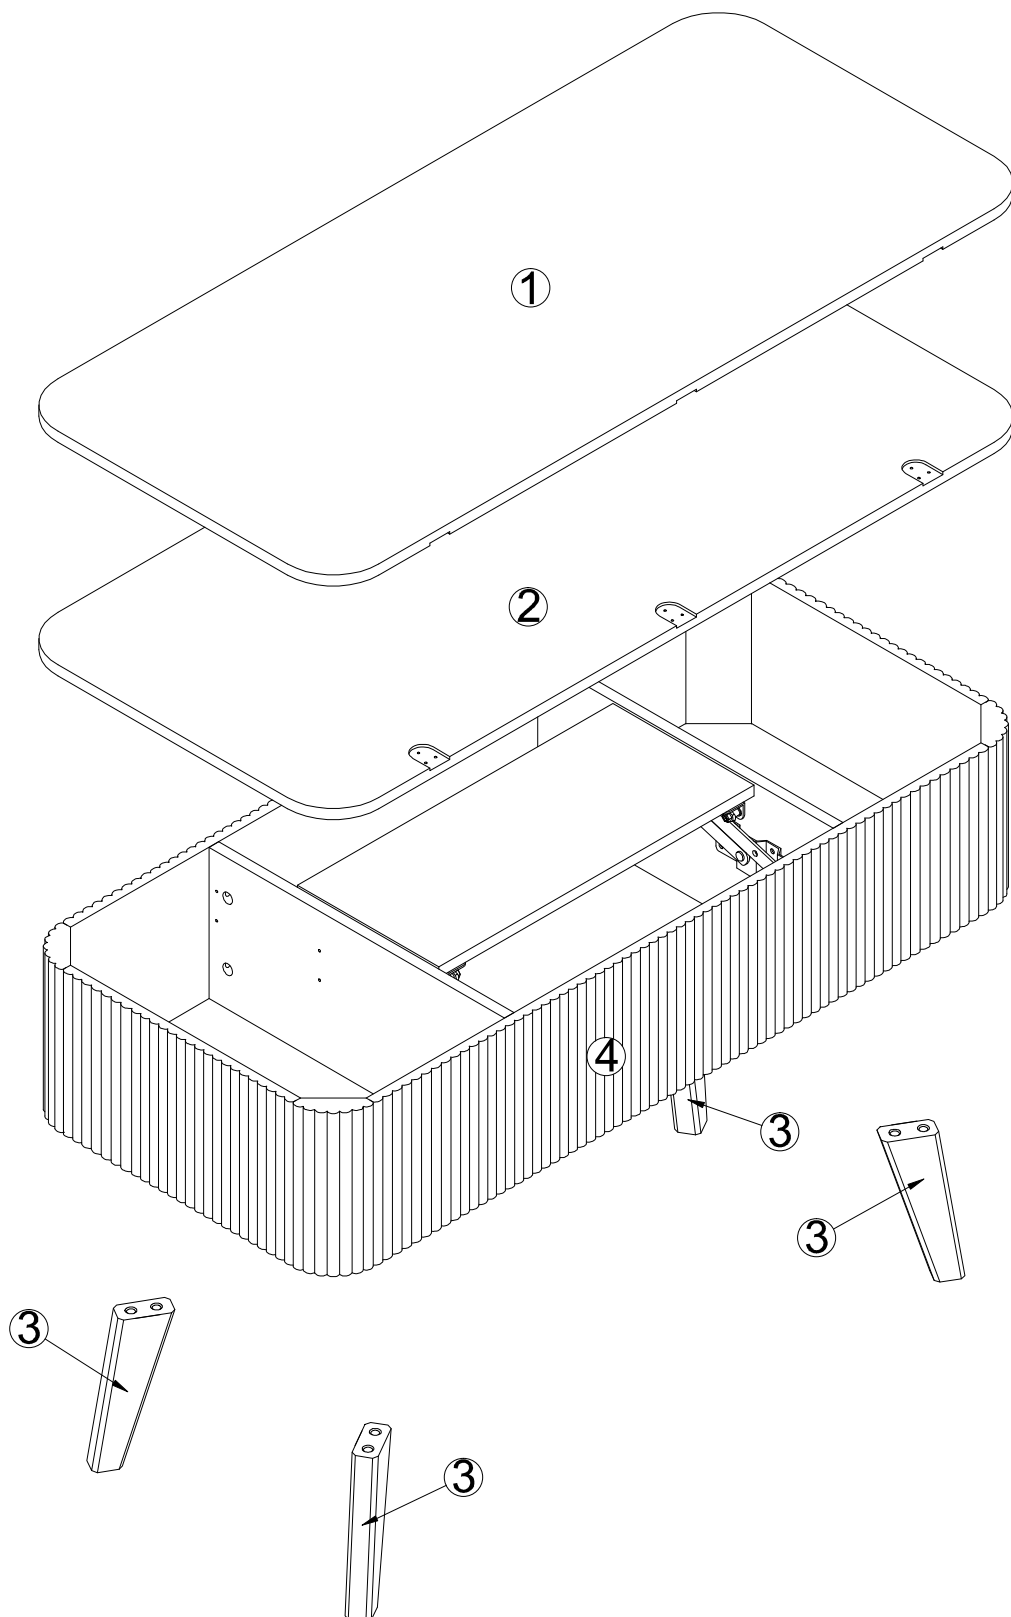

STEP 1


Note: First, take the cardboard box out from the inside of the cabinet, and then take the feet and hardware out from the cardboard box to facilitate the subsequent installation.

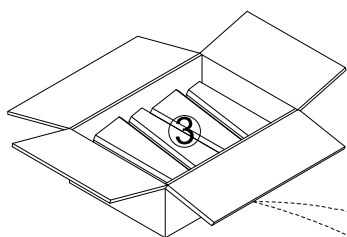


No. H
Quantity: 4 Pcs
Ø20



No. I
Quantity: 8 Pcs
Ø10

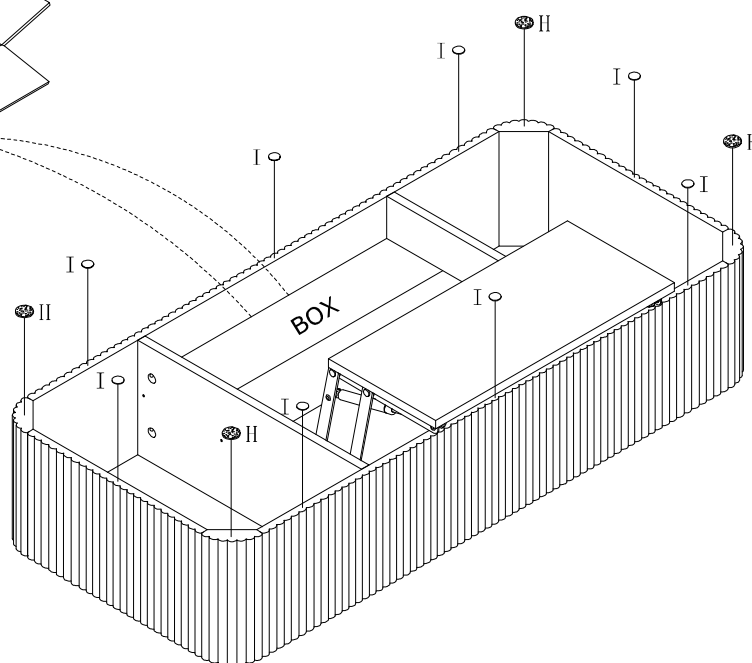

STEP 2

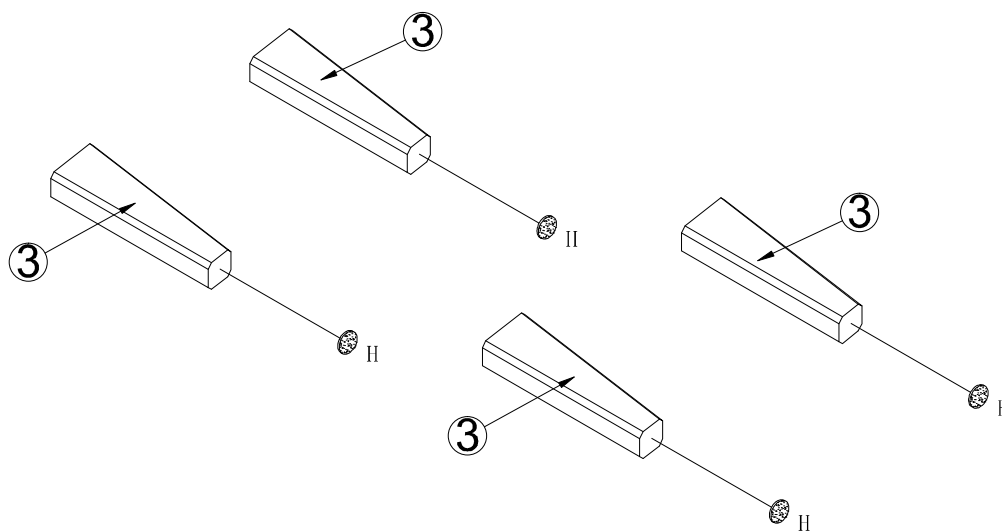

No. H
Quantity: 4 Pcs
Ø20



STEP 3

Note: When assembling the table legs, please use screws to secure the table legs from the inside.


No. A
Quantity: 8 Pcs
M8*35mm



No. B
Quantity: 1 Pcs
5#




No. J
Quantity: 8 Pcs
Ø17

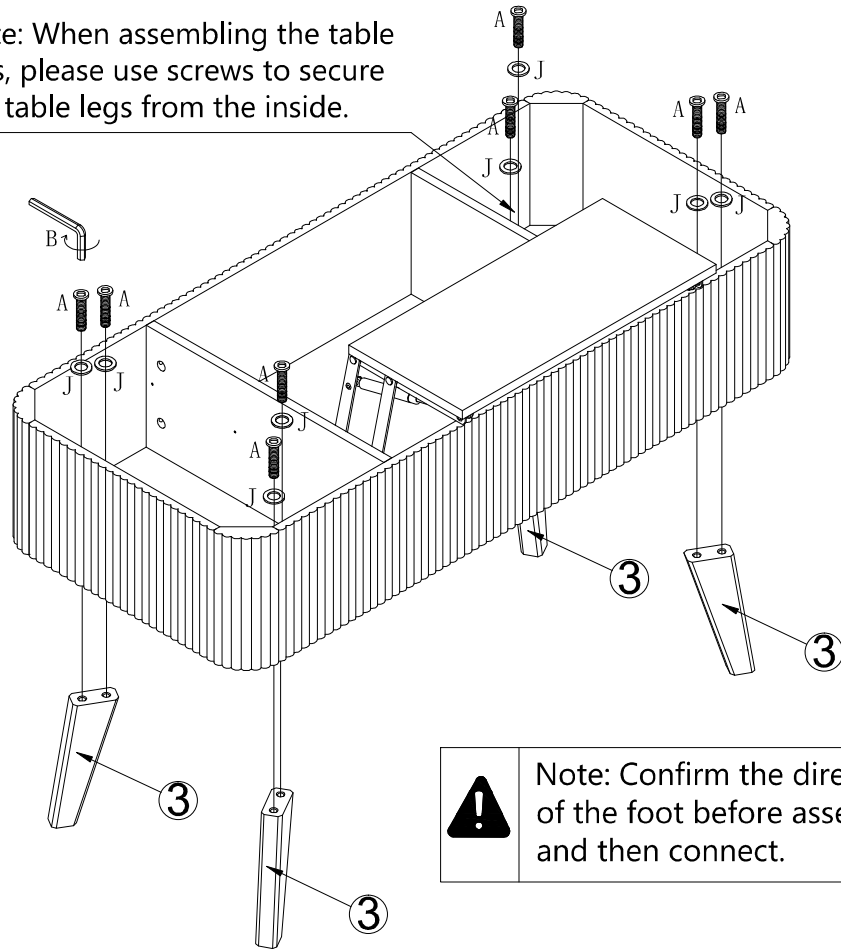


Note: Confirm the direction of the foot before assembly and then connect.

STEP 4

Note: First align the front guide hole, then tighten the screw, and then align the rear guide hole and tighten the screw.

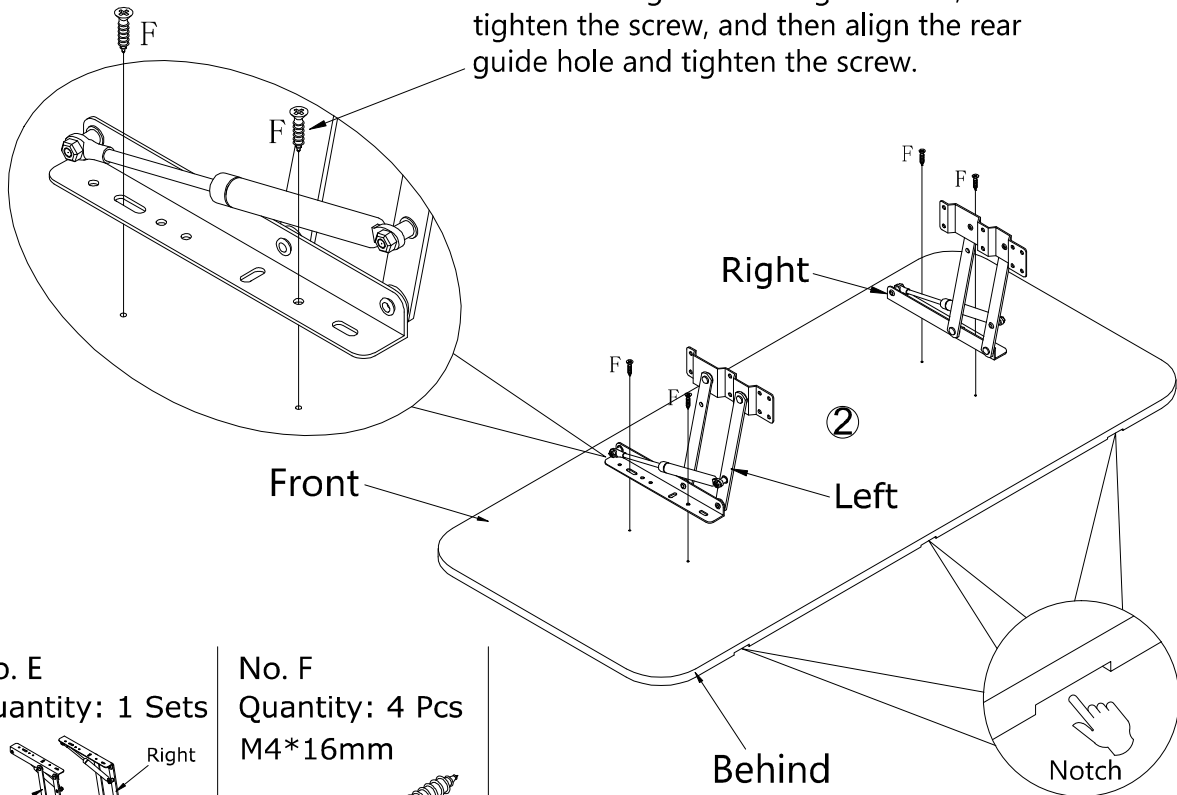

No. E
Quantity: 1 Sets

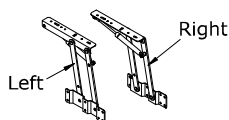


No. F
Quantity: 4 Pcs
M4*16mm



STEP 5

Note: Use screws to reinforce the lifting rod, there are no pilot holes here, the screws can be tightened directly.

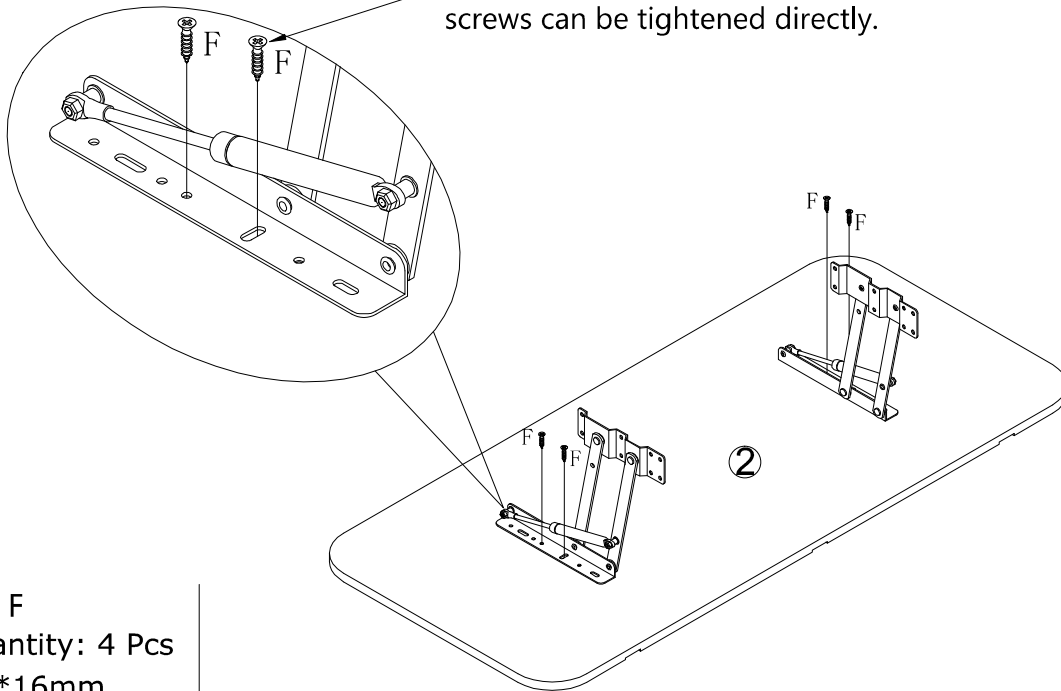


No. F
Quantity: 4 Pcs
M4*16mm



STEP 6



Note: It takes two people to work when installing the No. 2 board, and someone needs to lift the other side to keep it balanced when installing one side.

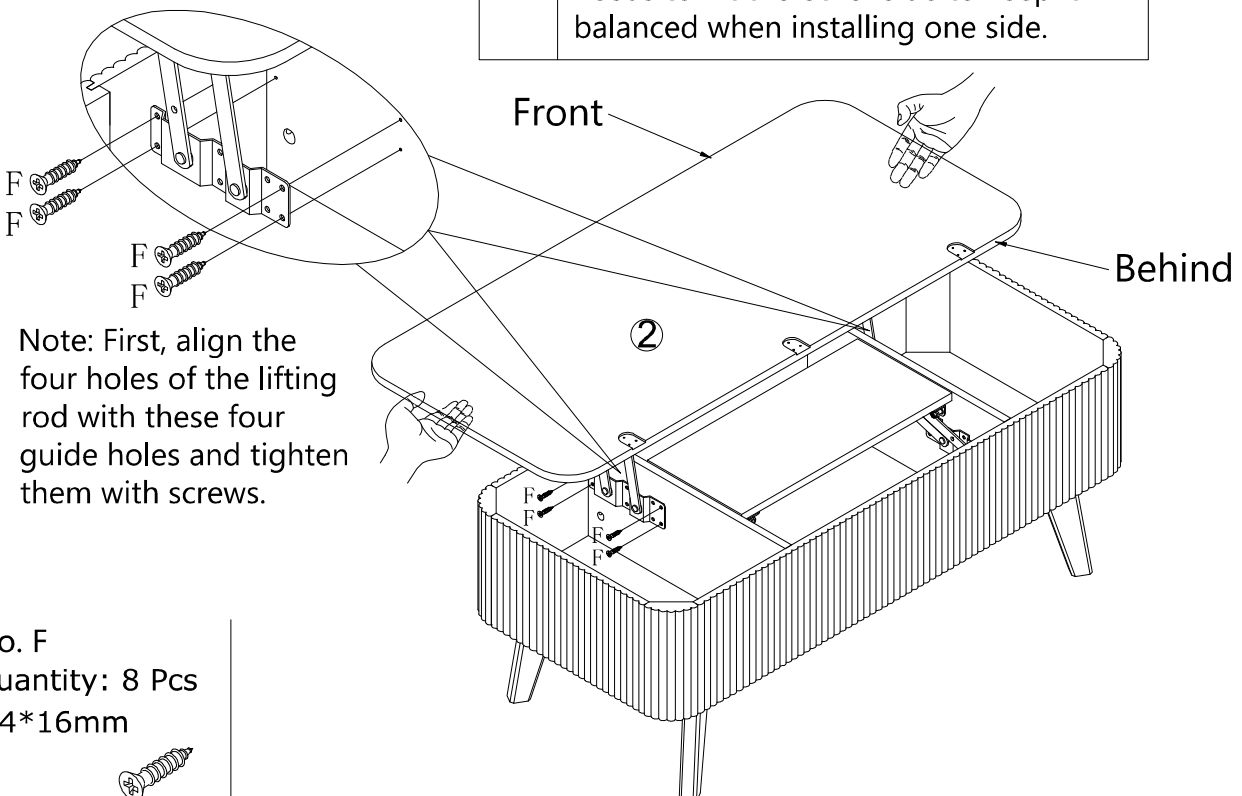


Note: First, align the four holes of the lifting rod with these four guide holes and tighten them with screws.

No. F
Quantity: 8 Pcs
M4*16mm



STEP 7

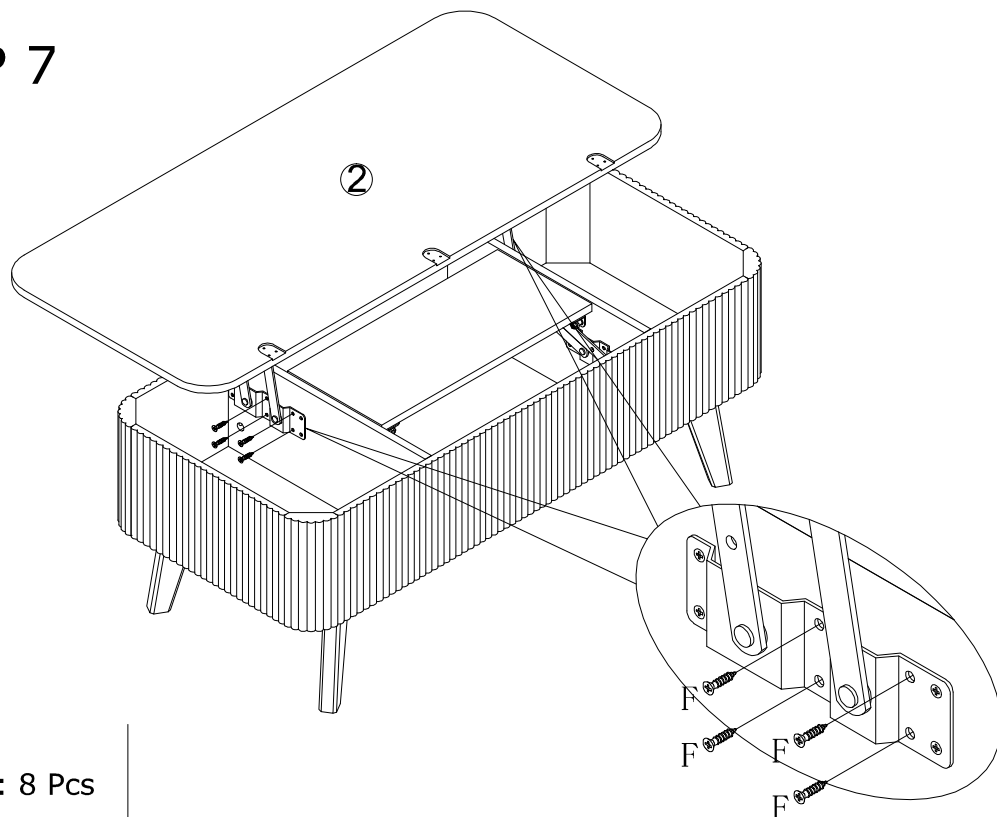


No. F
Quantity: 8 Pcs
M4*16mm




Note: Use screws to reinforce the lifting rod, there are no pilot holes here, the screws can be tightened directly.

STEP 8

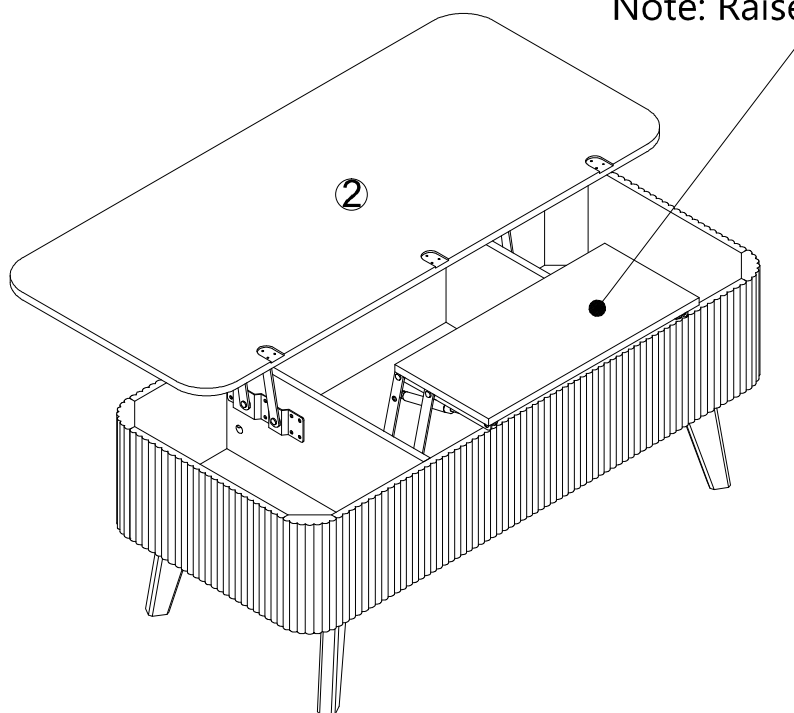


Note: Raise the small panel first.

STEP 9


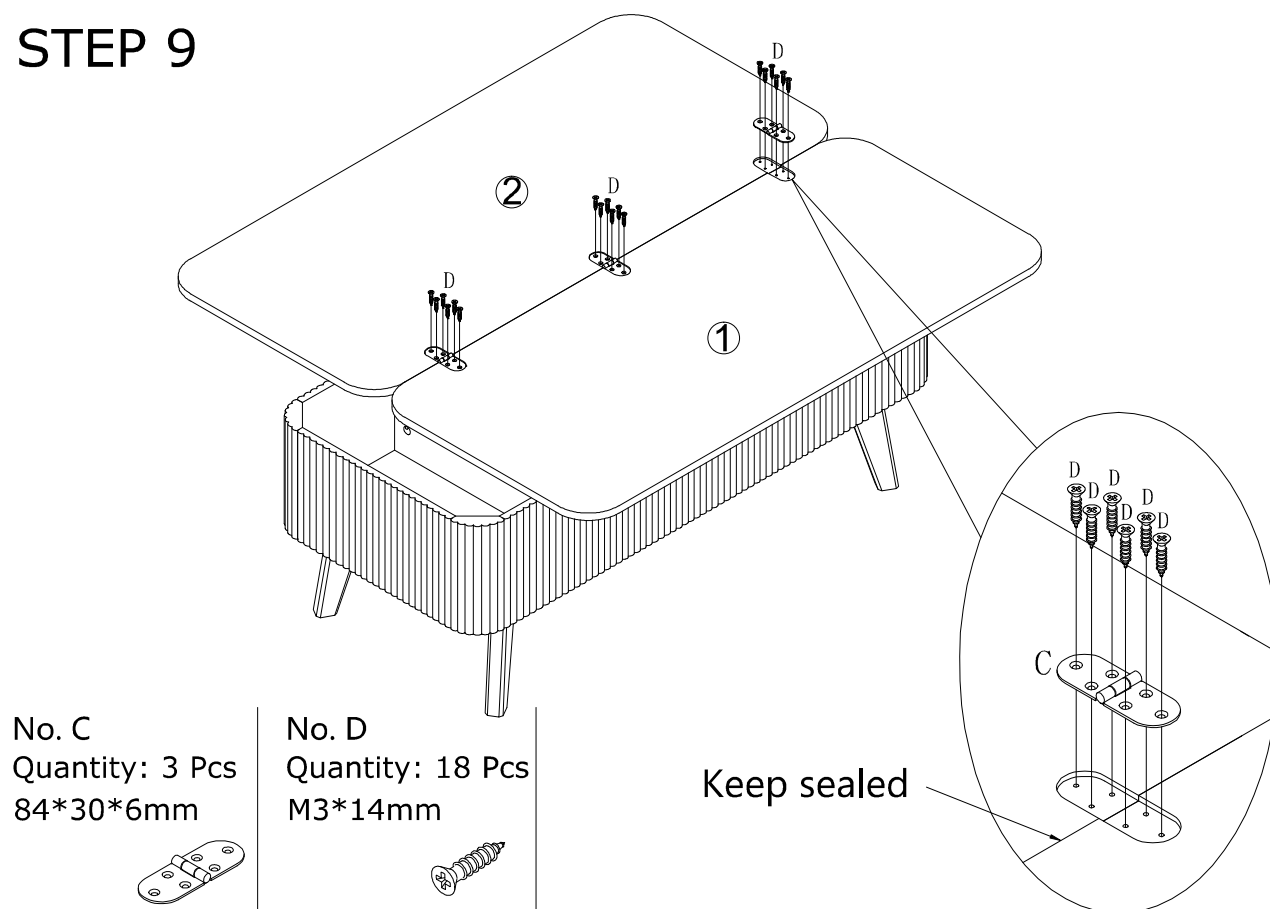


STEP 10

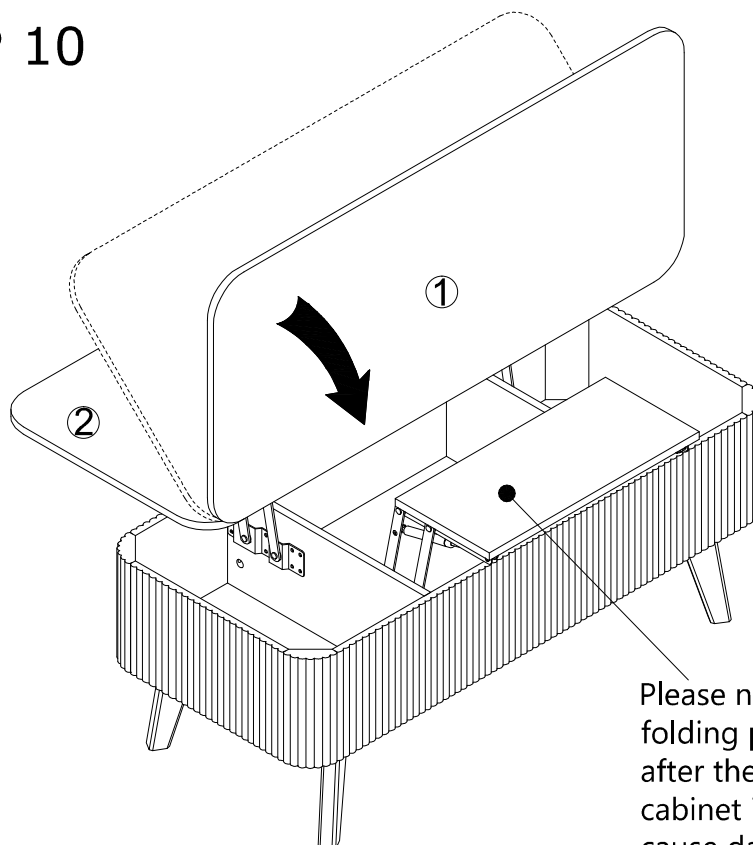

Please note that when using, the folding panel needs to be expanded after the small panel inside the cabinet is lifted up, otherwise it may cause damage to the panel.

Please Note! ! !
If you push or pull the coffee table directly,
the legs will break.

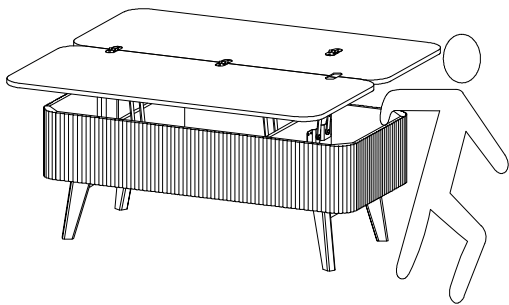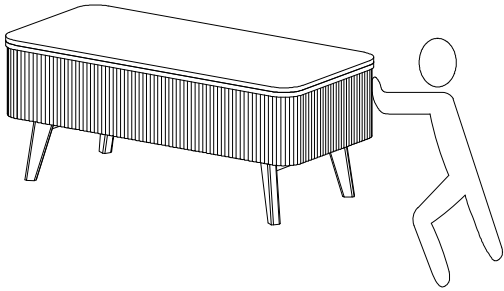

Tip

Please note that when moving this coffee table,
please lift the table with both hands or use two
people to carry this table.

