


# COUNTER HEIGHT DINING TABLE

## STEP 1

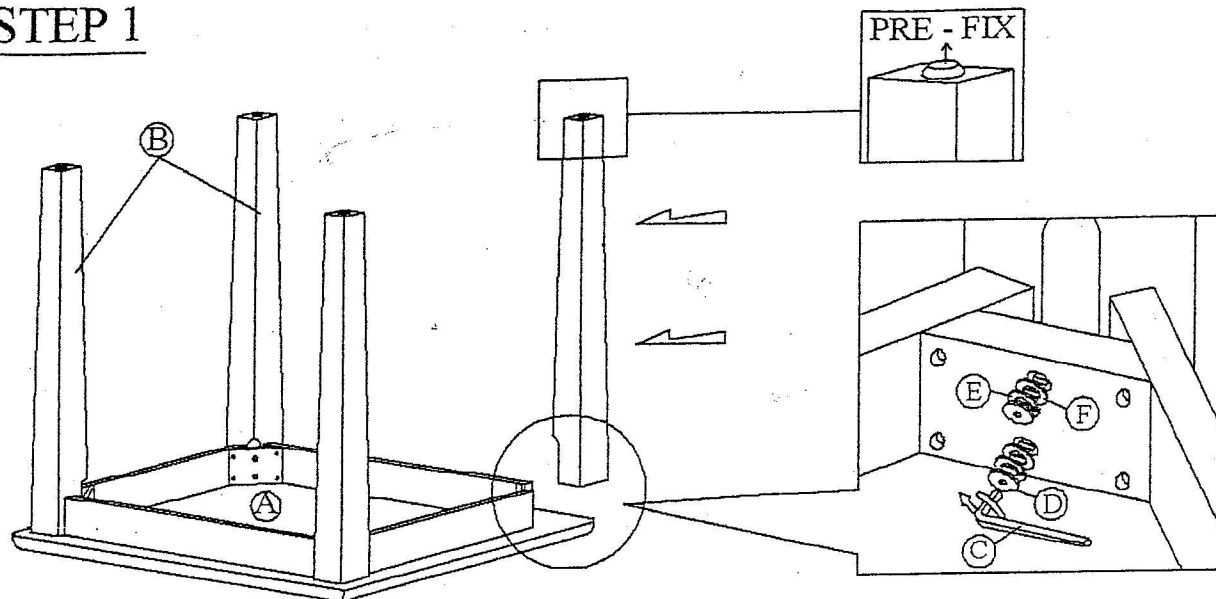


Tips : Place all parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.  
Check to be sure that you all parts and hardware before you attach to assemble.

Step 1 : Attach Leg (B) to Table Top (A) using Flat Washer (F) , Spring Washer (E) and JCB (D) . Tighten JCB (D) with Allen Key (C) .

Step 2 : Repeat step 1 to assemble the other three legs (B) .

## STEP 2

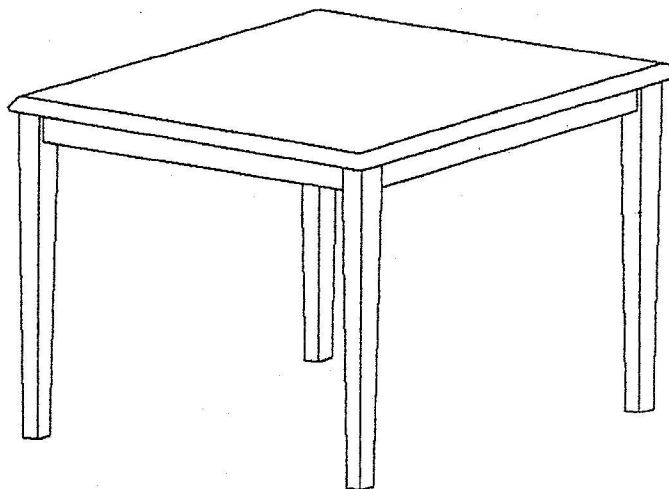

Fully Set-up

### PARTS LIST

<b>A</b>		1 PC
<b>B</b>		4 PCS

### HARWARE LIST

<b>C</b>	M5 ALLEN KEY	1 PC
<b>D</b>	JCBB M8 X 60MM	8 PCS
<b>E</b>	SPRING WASHER 5/16"	8 PCS
<b>F</b>	FLAT WASHER 5/16"	8 PCS

MADE IN MALAYSIA

# ASSEMBLY INSTRUCTIONS

## 24" CROSS BACK STOOL

### IMPORTANT NOTE:

Please read and follow the Assembly Instructions carefully.

- Identify and separate all parts before discarding packaging.
- Place wooden parts on clean soft surface to avoid scratching.
- Do not completely tighten screws until, after final assembly.
- Do not use a power tool for assembly.
- As with all assembled furniture, occasionally check to insure hardware is tight.

### TOOL REQUIRED (NOT PROVIDED) PHILIPS SCREWDRIVER


NO	PART LIST	QTY
1	CHAIR BACK	1PC
2	SIDE RAIL (L/R)	2PCS
3	STRETCHER (L/R)	2PCS
4	FRONT LEG	1PC
5	WOODEN SEAT	1PC

NO	HARDWARE LIST	QTY
A	CSK SCREW M4 x 38mm 	4PCS
B	CSK SCREW M4 x 32mm 	3PCS
C	JCBC BOLT M6 x 50mm 	6PCS
D	SPRING WASHER 	6PCS
E	FLAT WASHER 	6PCS
F	ALLEN KEY 	1PC




### **STEP 1**

LOOSELY ATTACH (L/R) SIDE RAIL TO FRONT LEG USING BOLT (C) SPRING WASHER (D) AND FLAT WASHER (E).

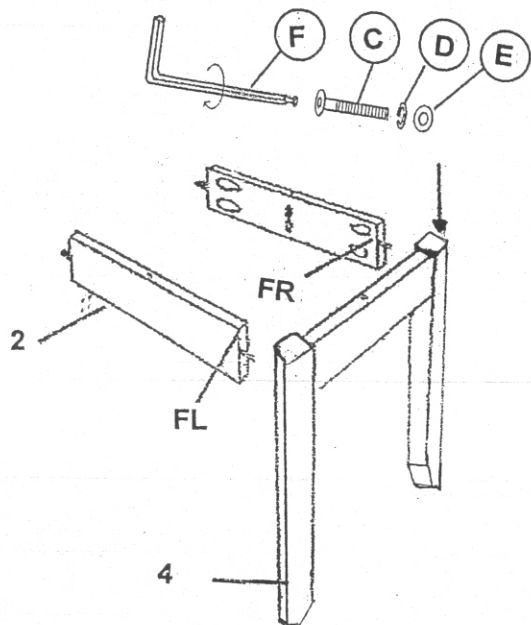


### **STEP 2**

LAY CHAIR BACK OF FLAT SURFACE AND LOOSELY ATTACH (L/R) SIDE RAIL TO CHAIR BACK USING BOLT (C), SPRING WASHER (D) AND FLAT WASHER (E).

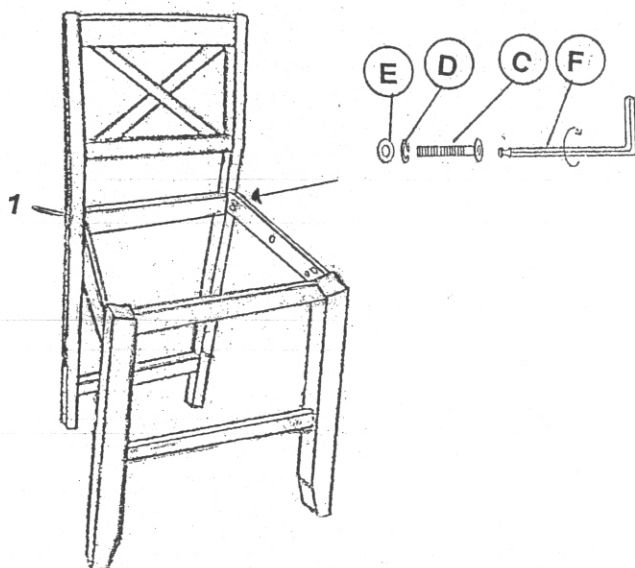

### **STEP 3**

PLACE TWO STRETCHERS (L/R) IN THE HOLES IN CHAIR BACK ALIGN AND FRAME UP CHAIR USING HAND PRESSURE TO GET STRETCHERS (L/R) IN PLACE. COMPLETELY TIGHTEN ALL SCREWS.

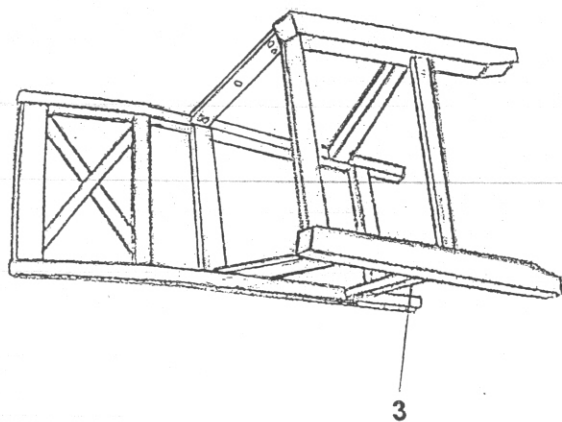

### **STEP 4**

TURN STRETCHERS SO THE PREDRILLED HOLES FACE DOWNWARD AND SECURE USING 38mm SCREWS (A). ATTACH WOODEN SEAT USING 32mm SCREW (B).

