

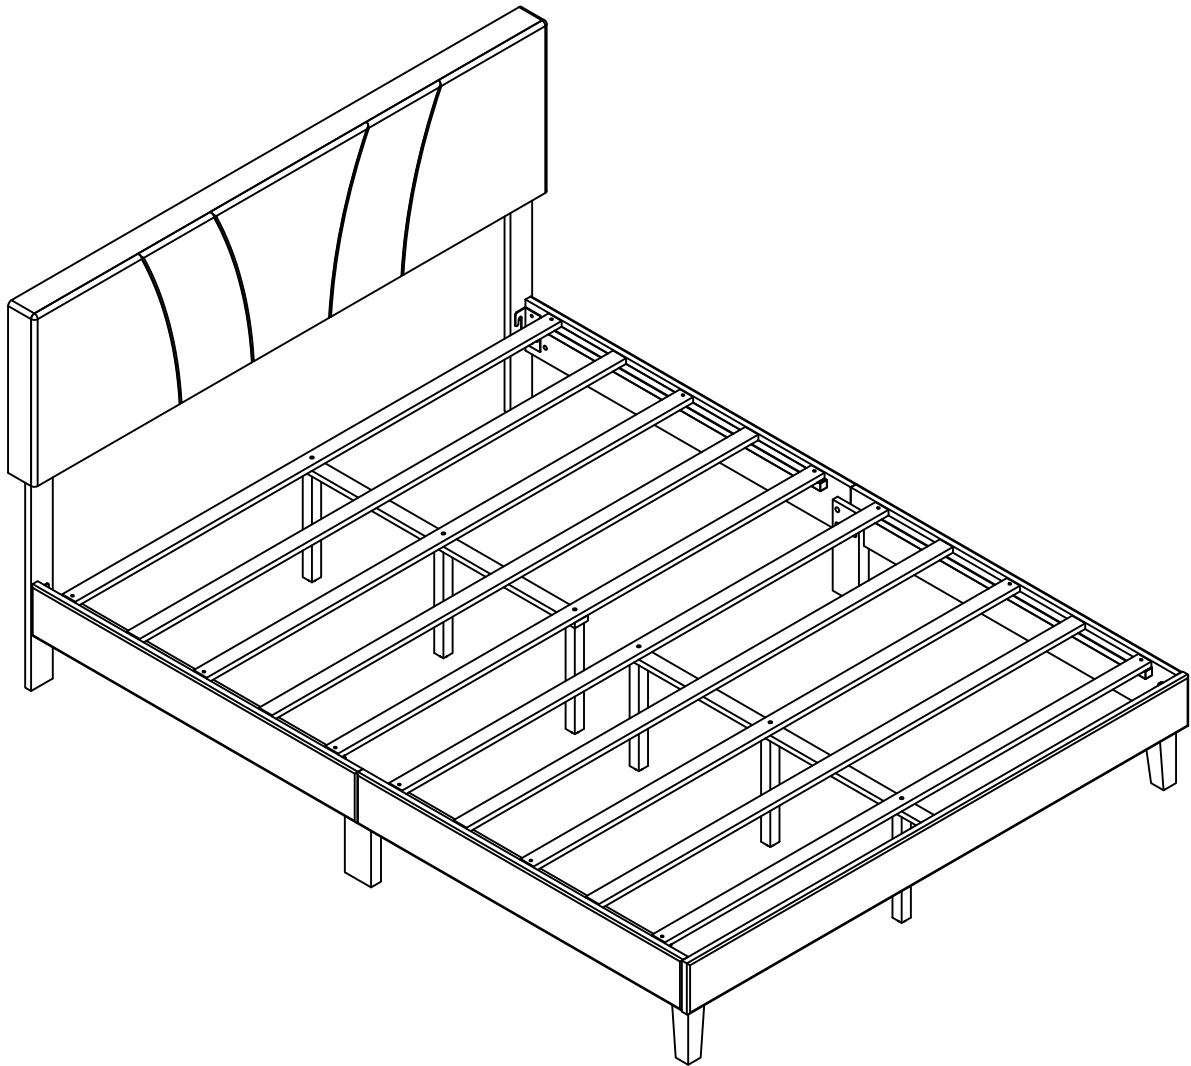
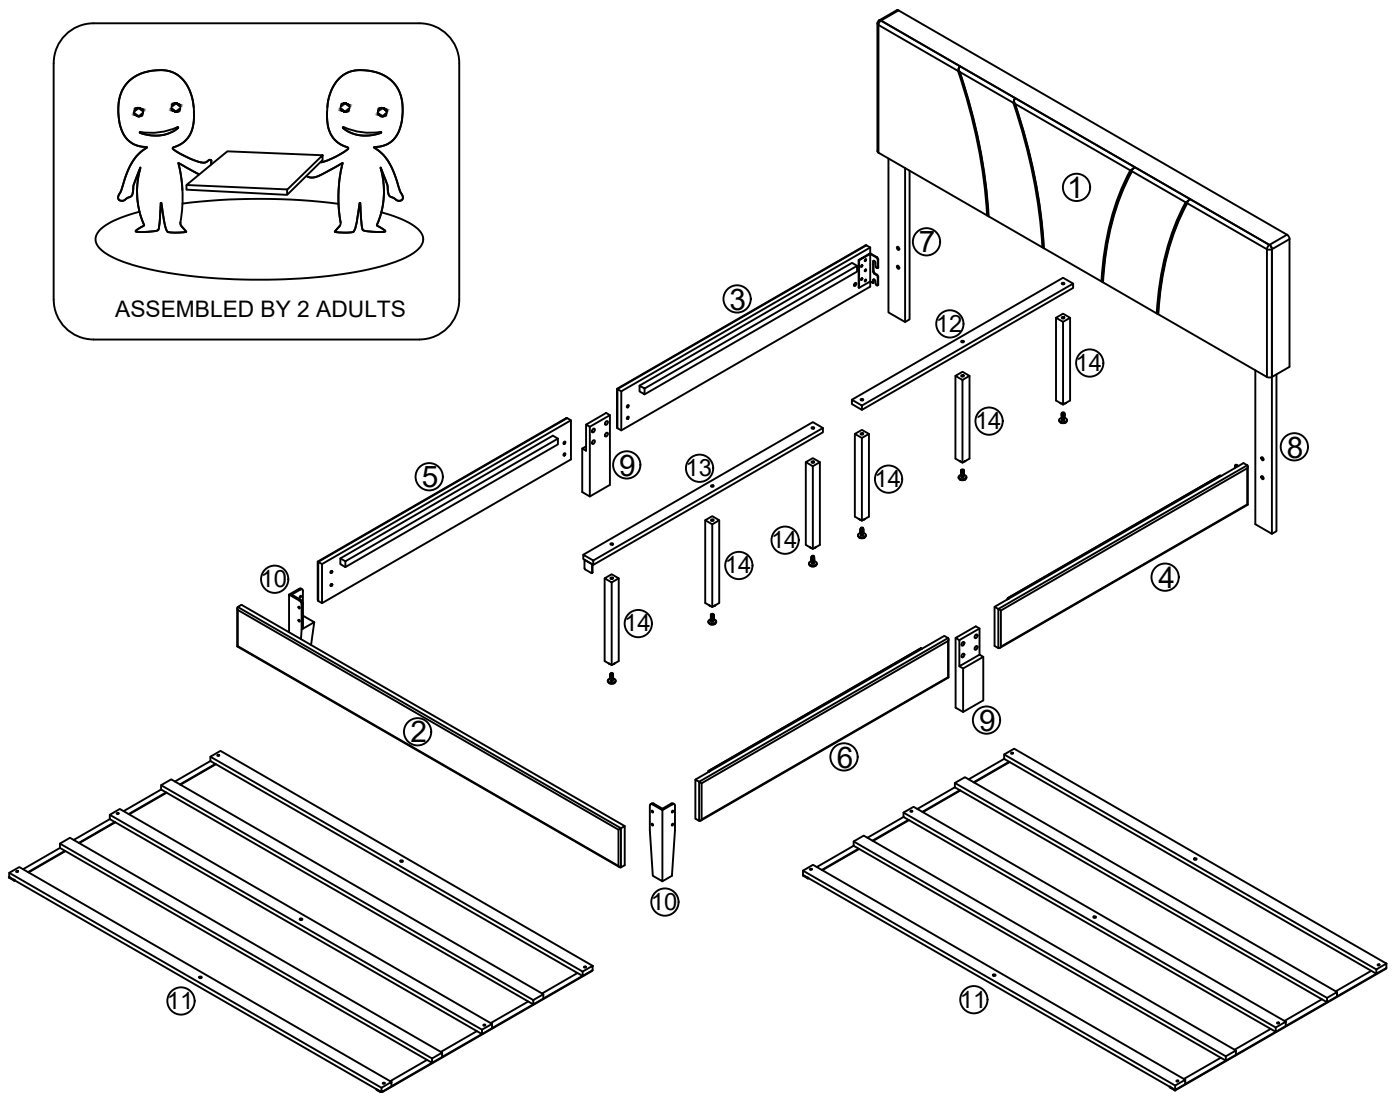
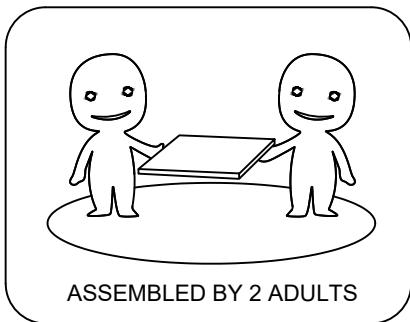
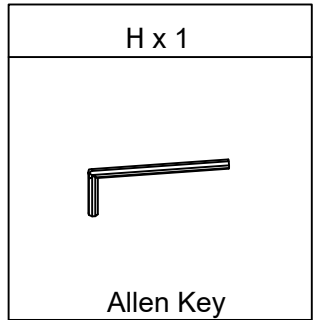
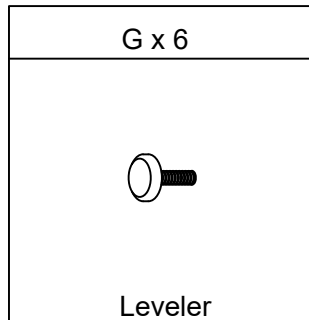
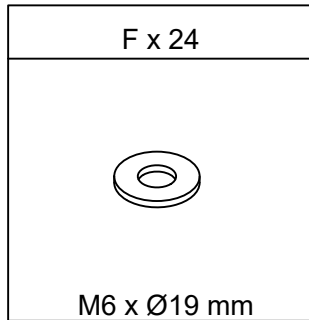
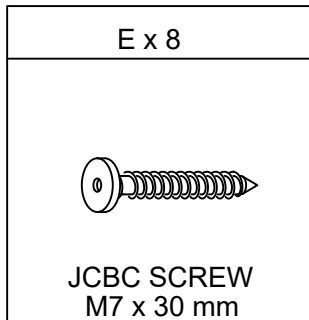
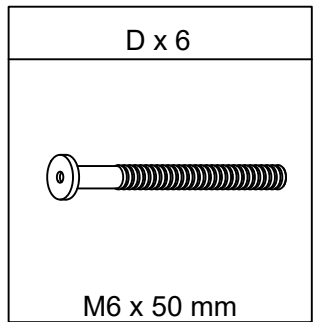
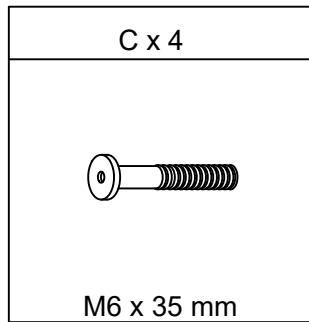


ASSEMBLY INSTRUCTION

MODEL : QUEEN / FULL UPHOLSTERY BED

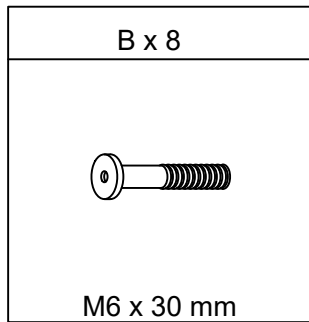

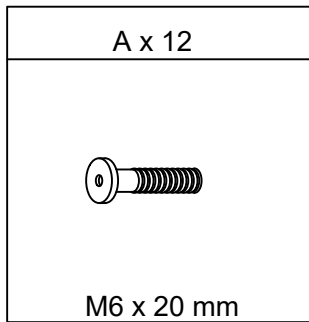


1





C x 4pcs
M6*35mm

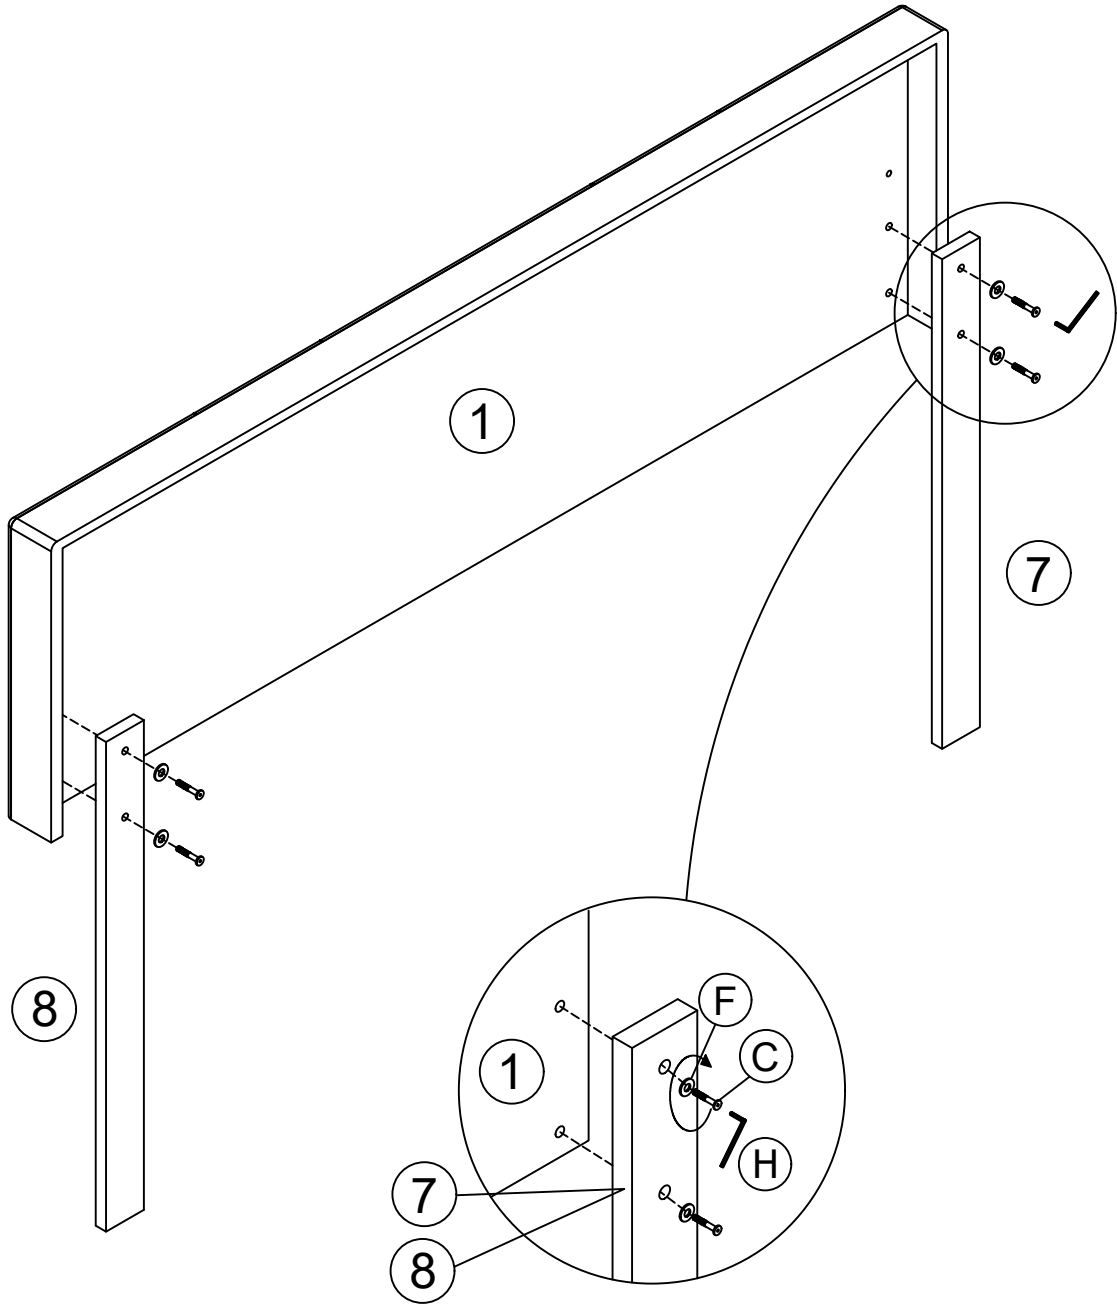
F x 4pcs
M6*19mm

H
M4 Allen Key





2

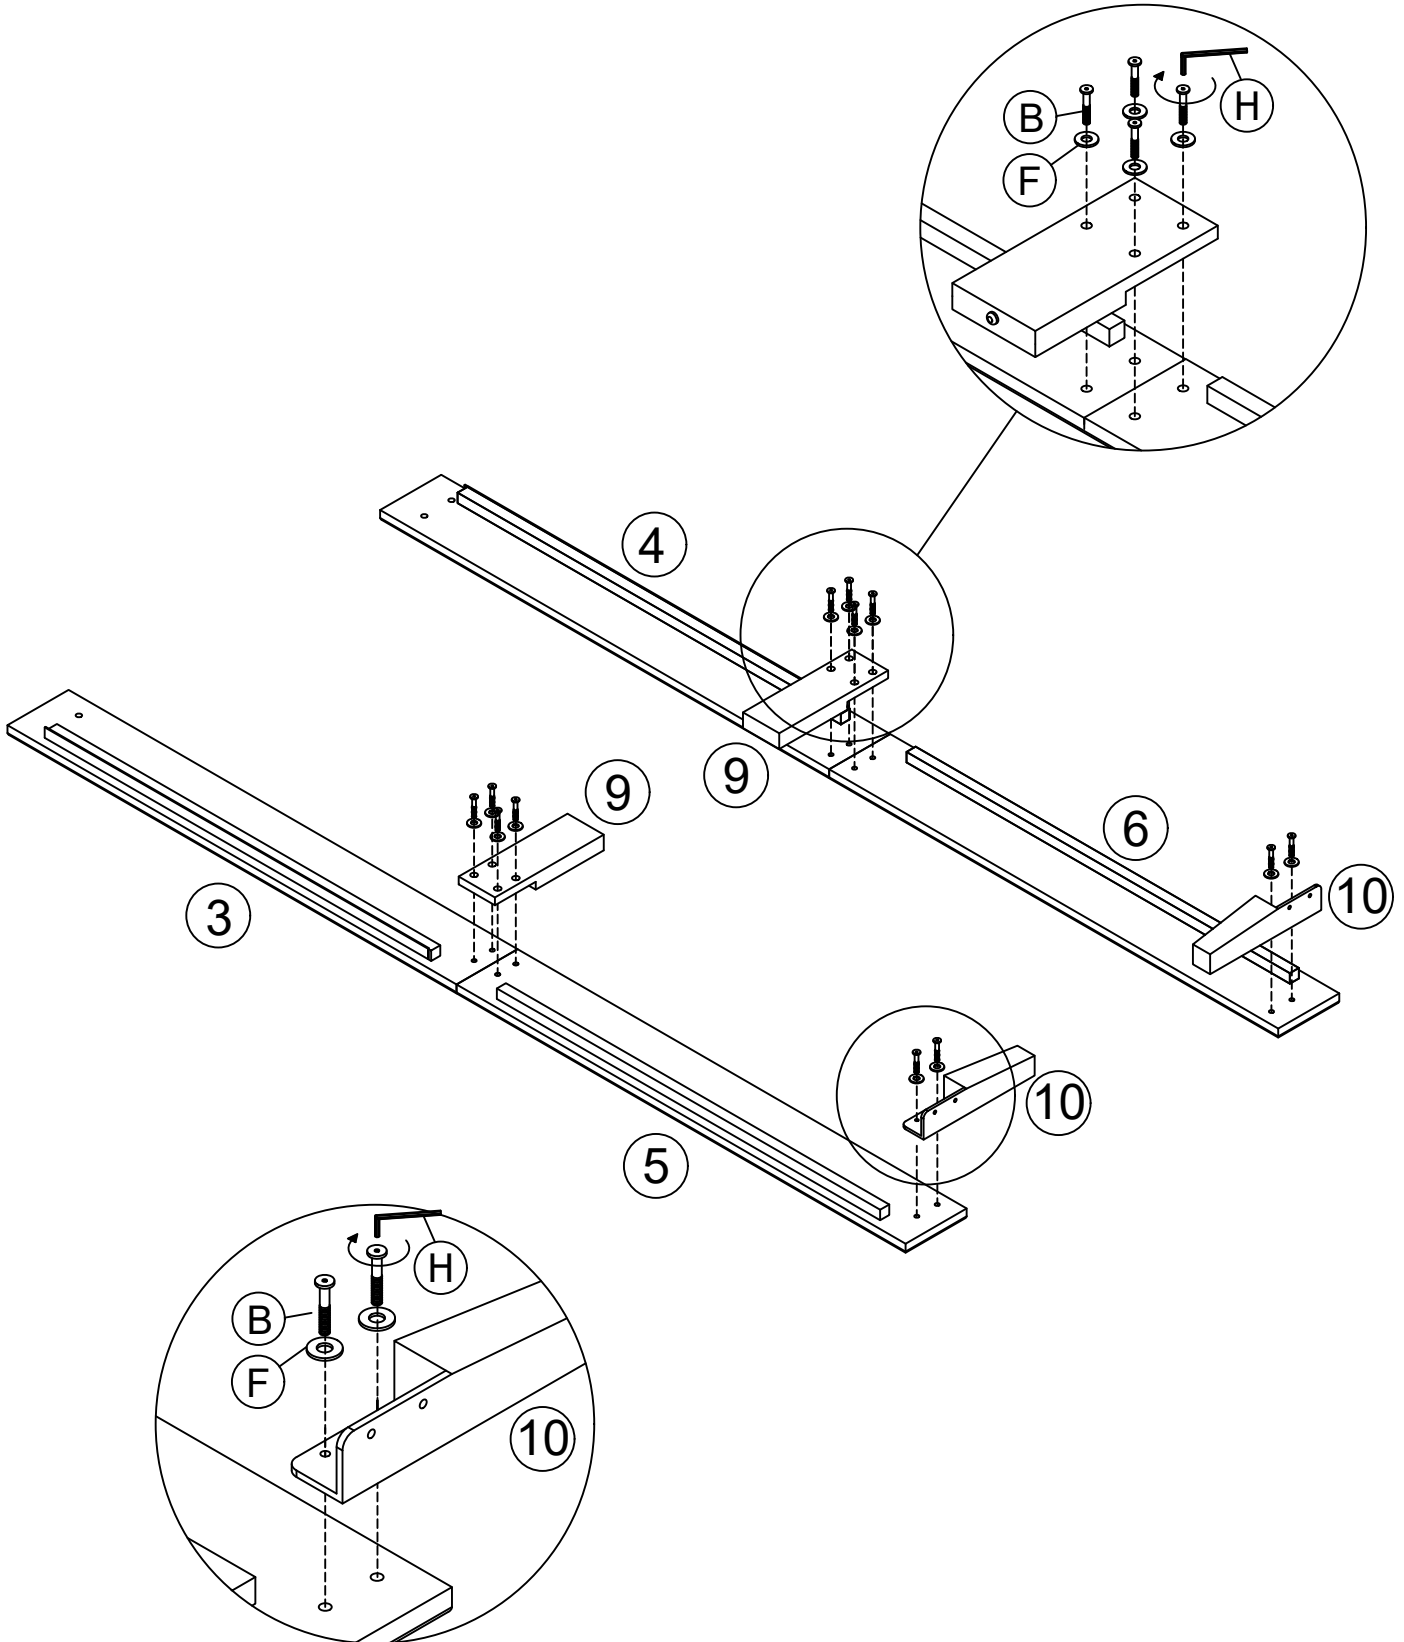
A x 4pcs  M6*20mm	B x 8pcs  M6*30mm	F x 12pcs  M6*19mm	H  M4 Allen Key
--	--	---	--




3

A x 8pcs

M6*20mm





F x 8pcs

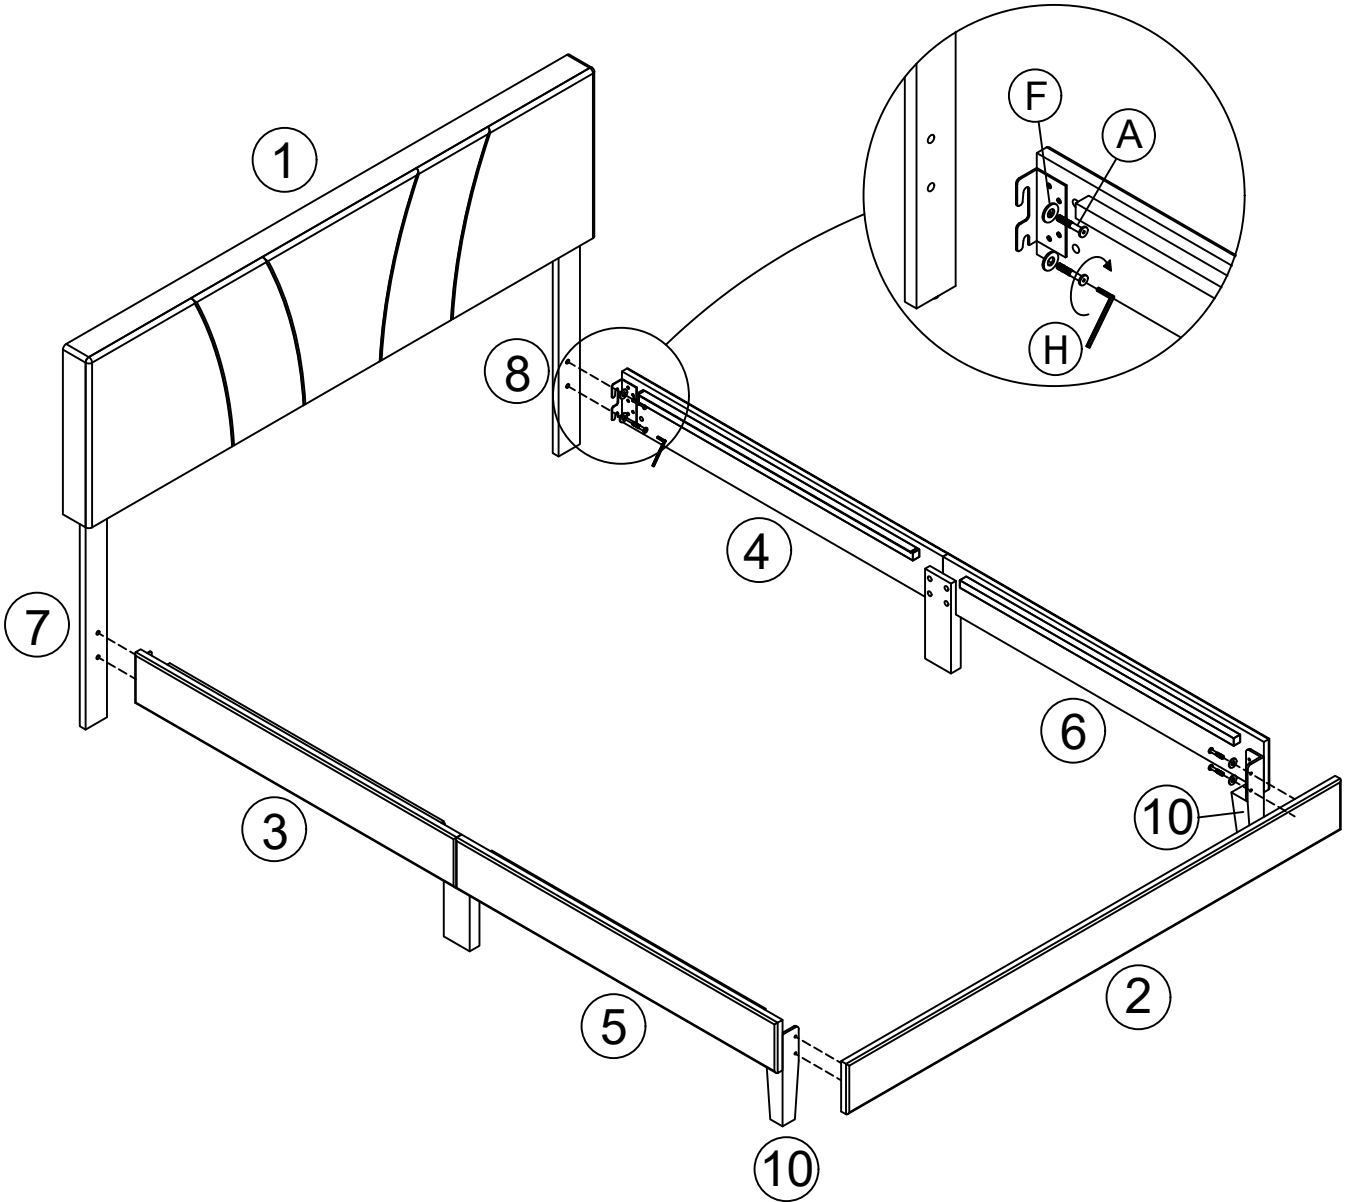M6*19mm

H

M4 Allen Key



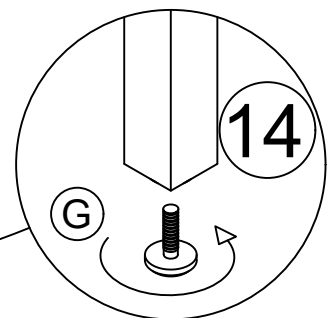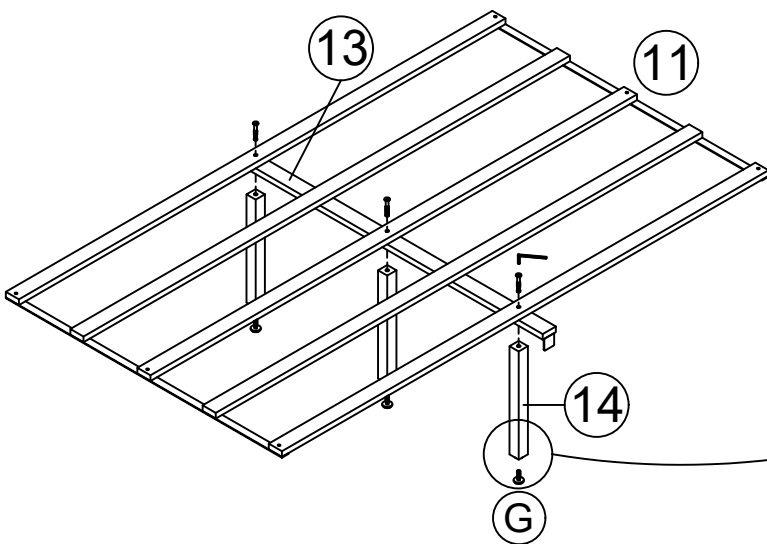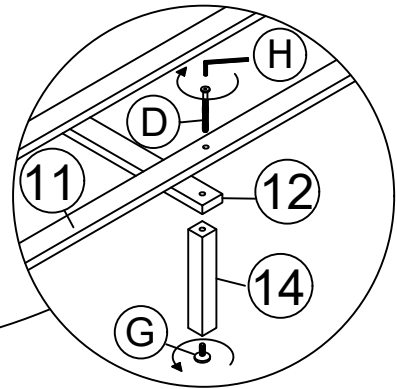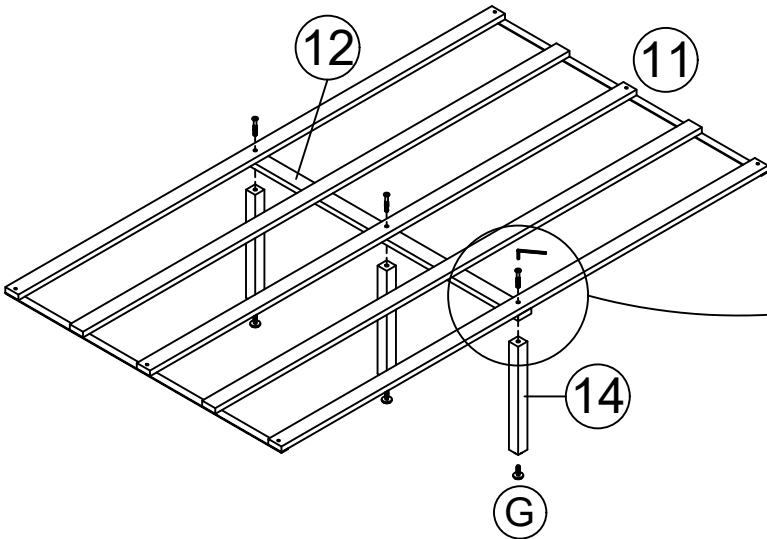

4





<p>D x 6pcs</p>  <p>M6*50mm</p>	<p>G x 6pcs</p>  <p>Leveler</p>		<p>H</p>  <p>M4 Allen Key</p>
--	--	--	--




5

E x 8pcs

M7*30mm

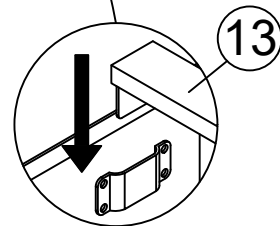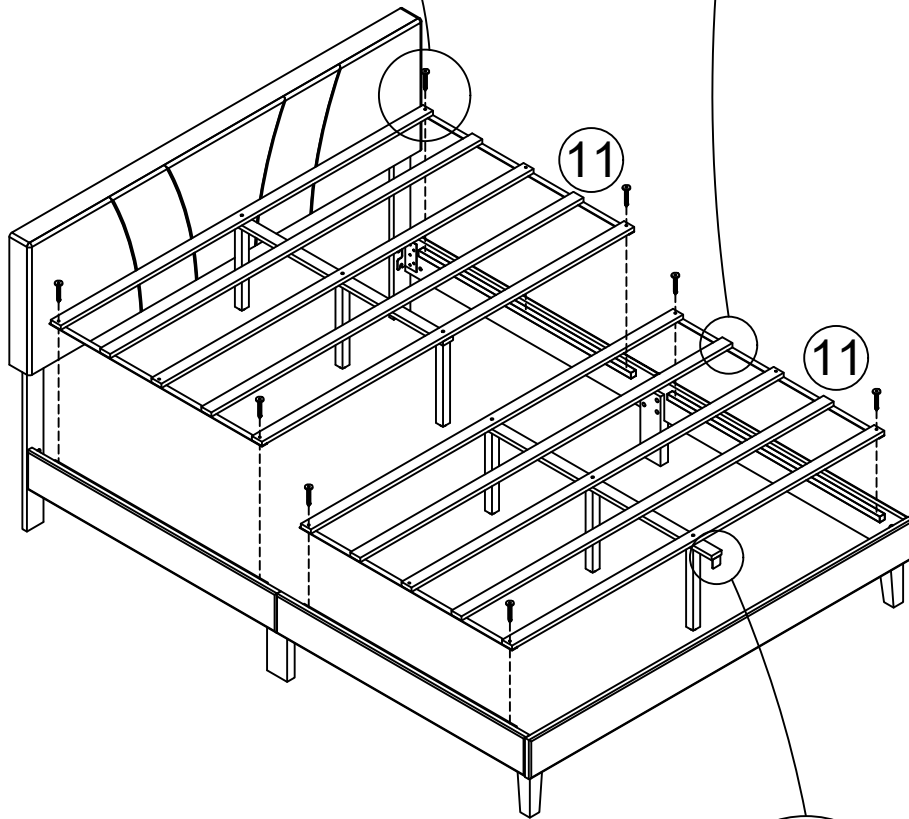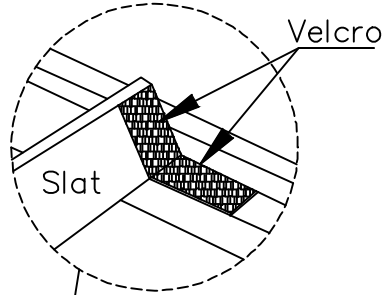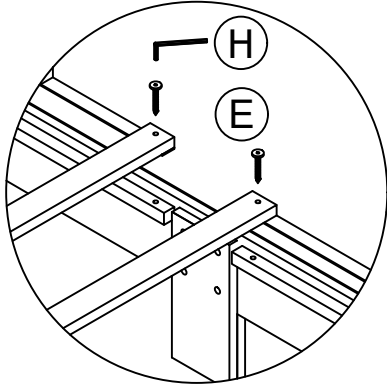H

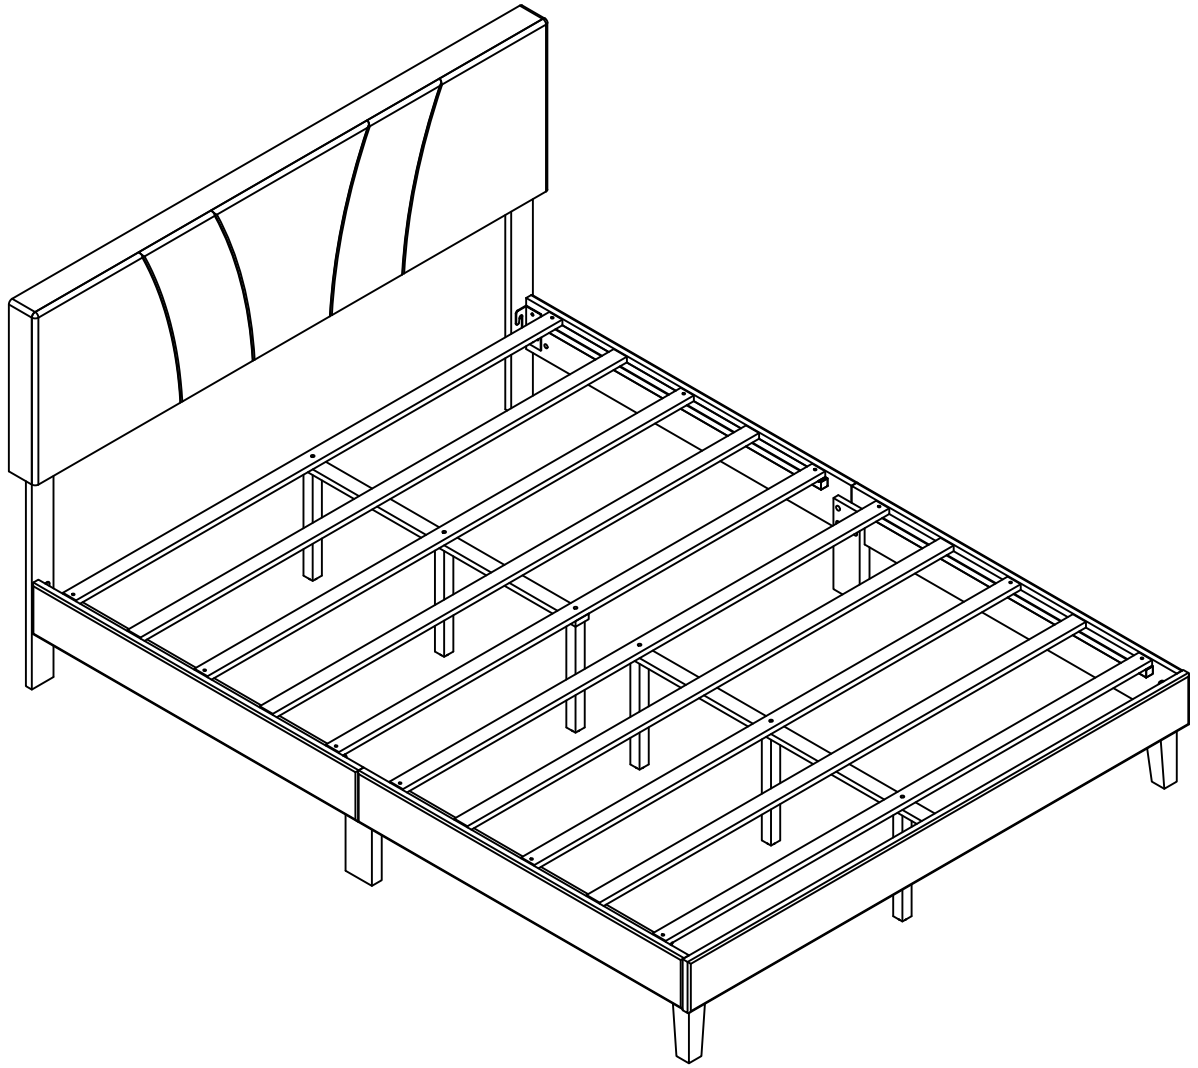M4 Allen Key





Assembly Complete

