

Bed Frame

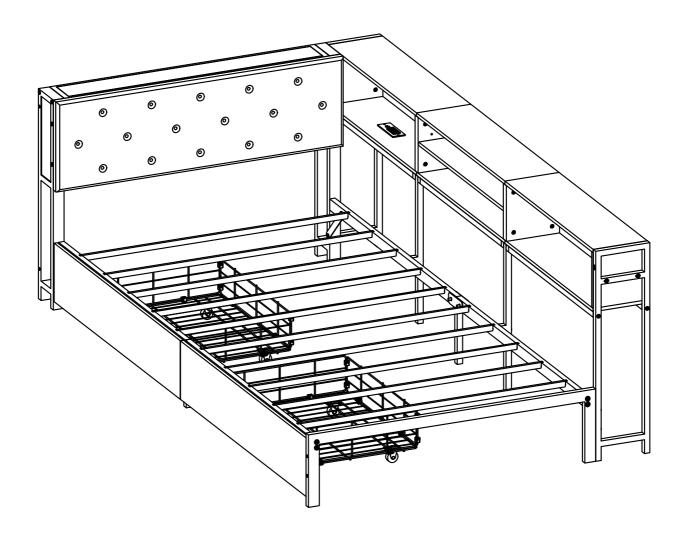



PRODUCT GUIDE AND INSTALLATION MANUAL


Parts List:

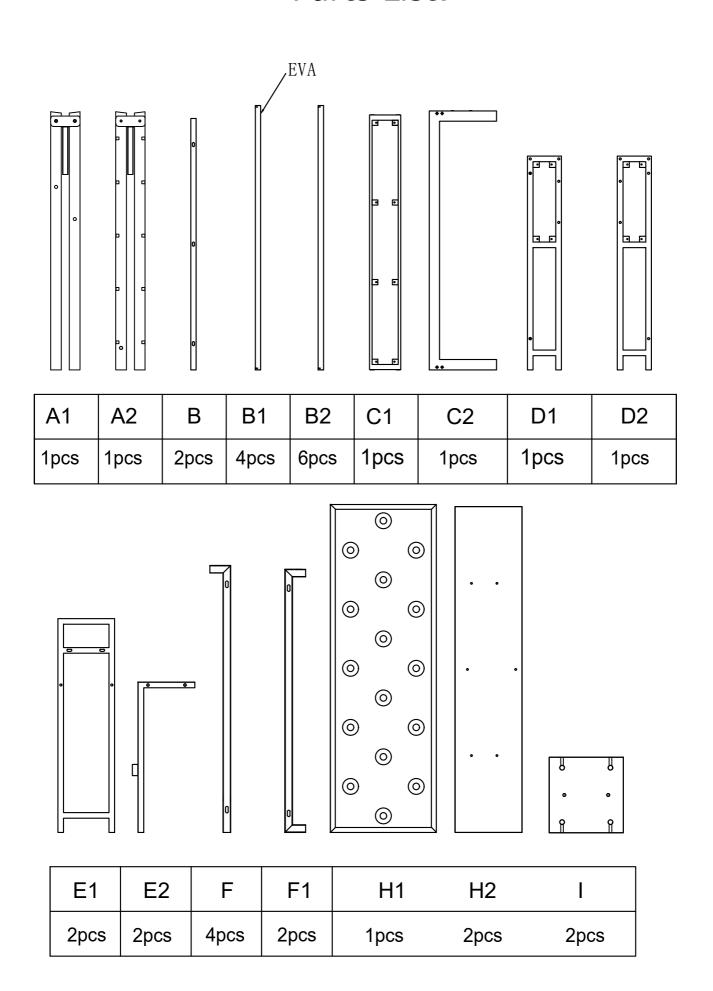



Parts List:

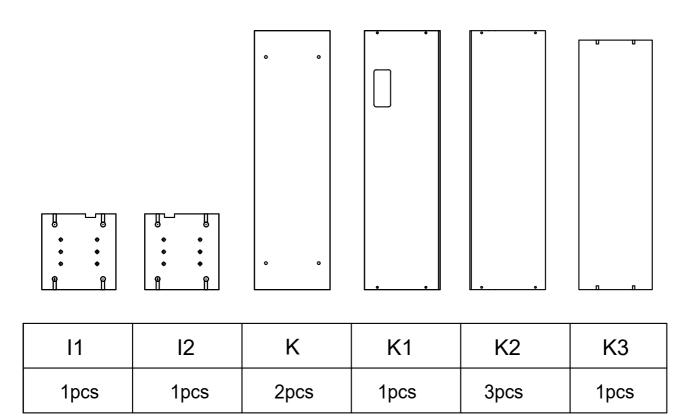

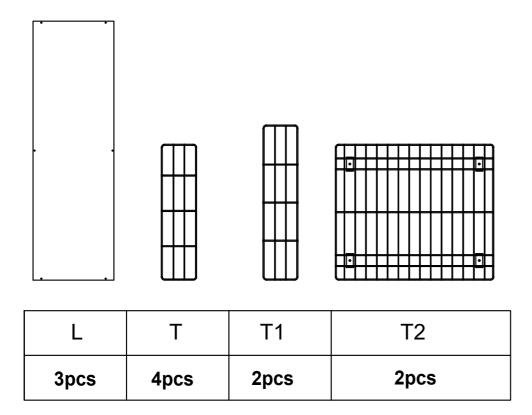


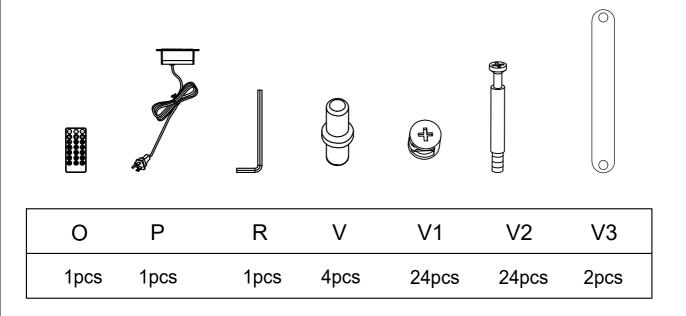


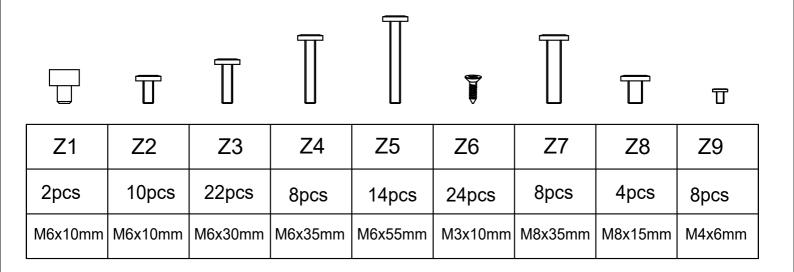

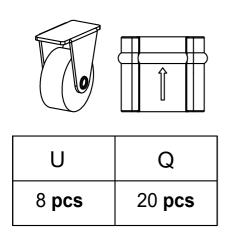


Step 1 Details folded straight at 90° Output Details folded straight at 90° Output

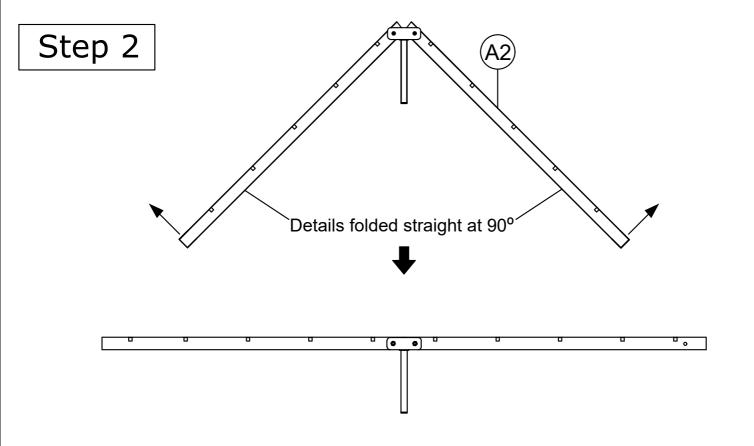

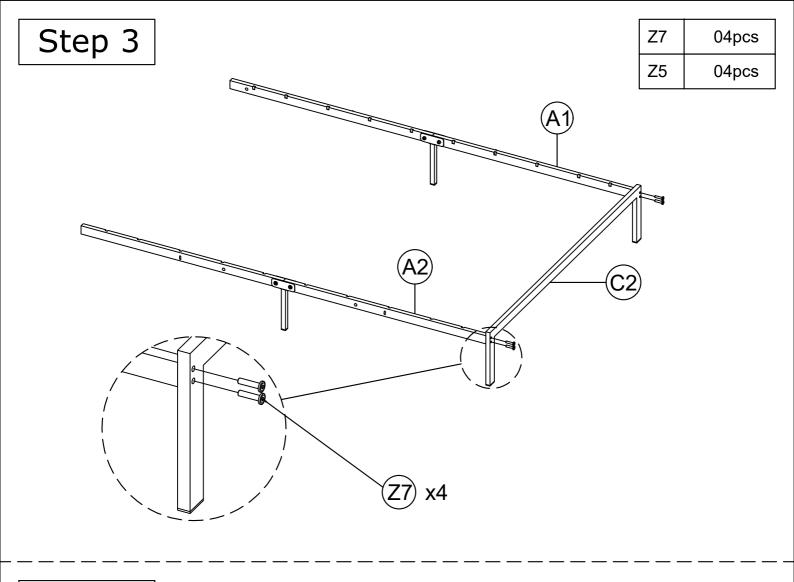





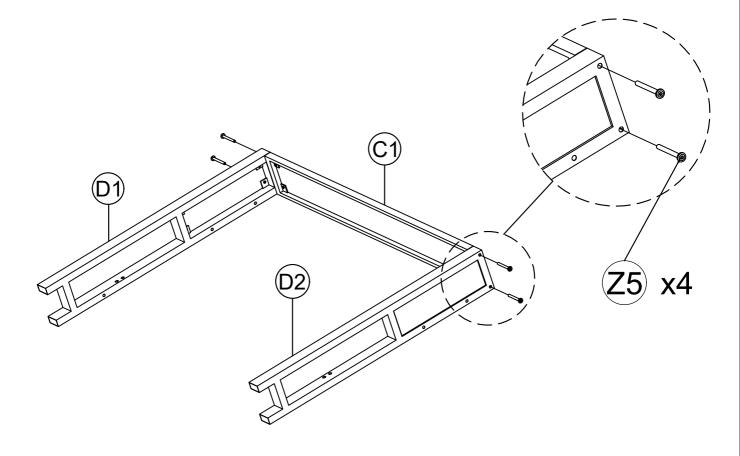

Step 5


Z 3	06pcs
Z5	04pcs

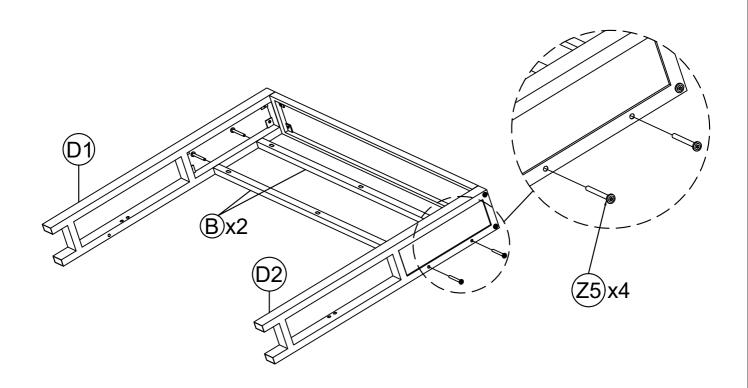


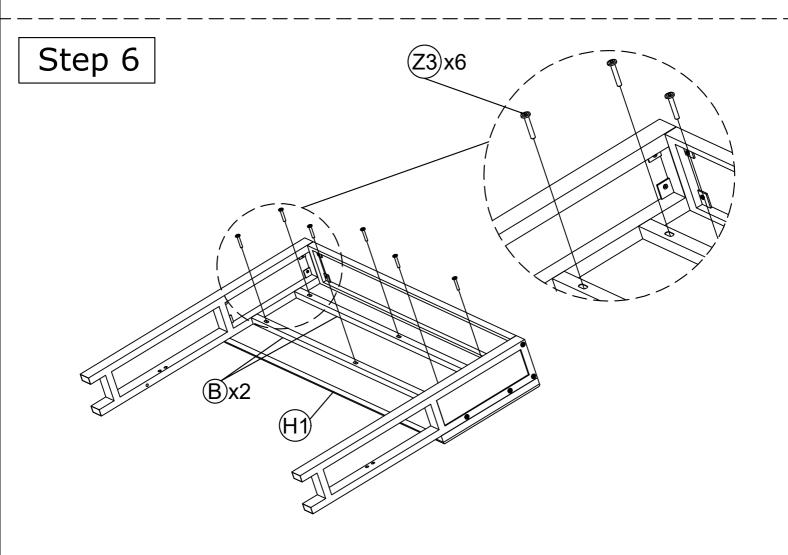



Step 7


Z4	02pcs
Z 7	04pcs
Z8	04pcs

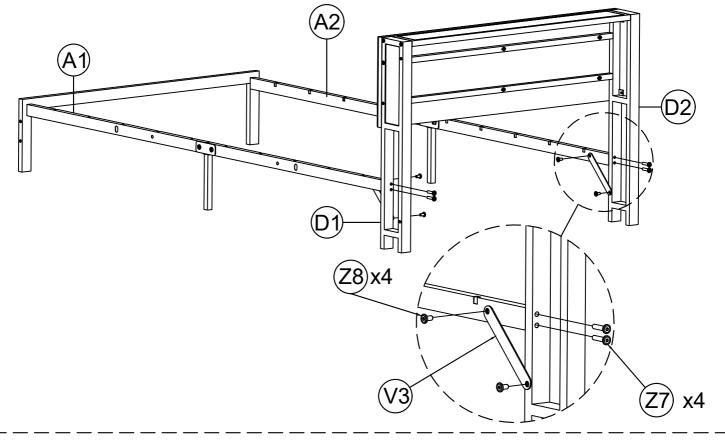


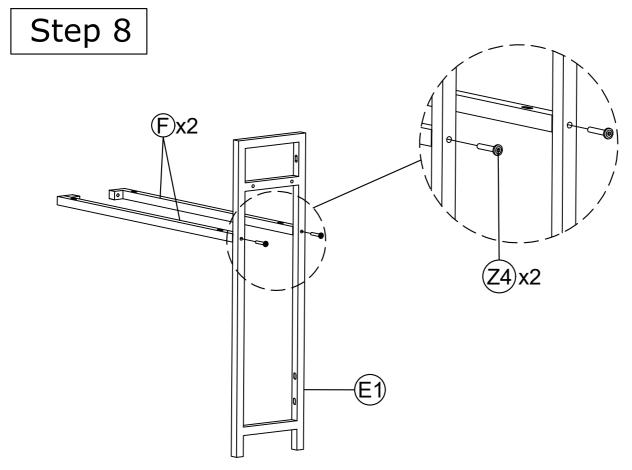


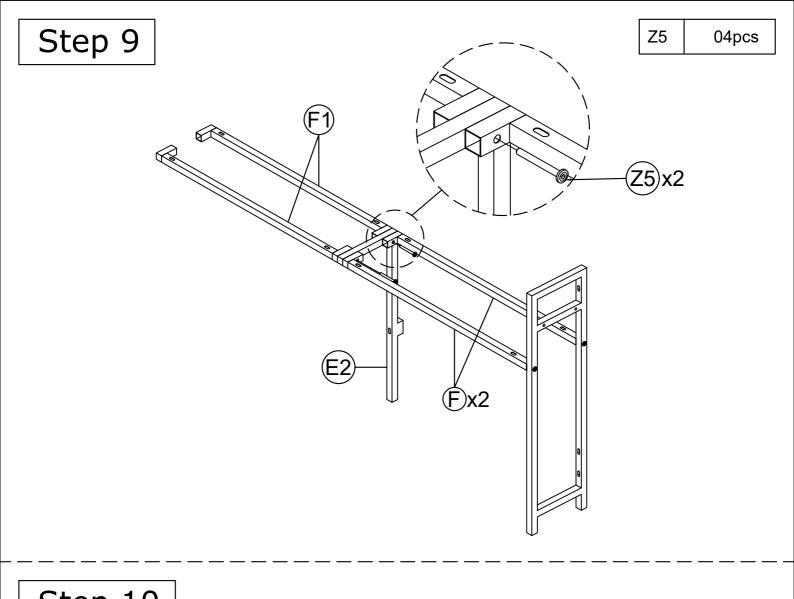

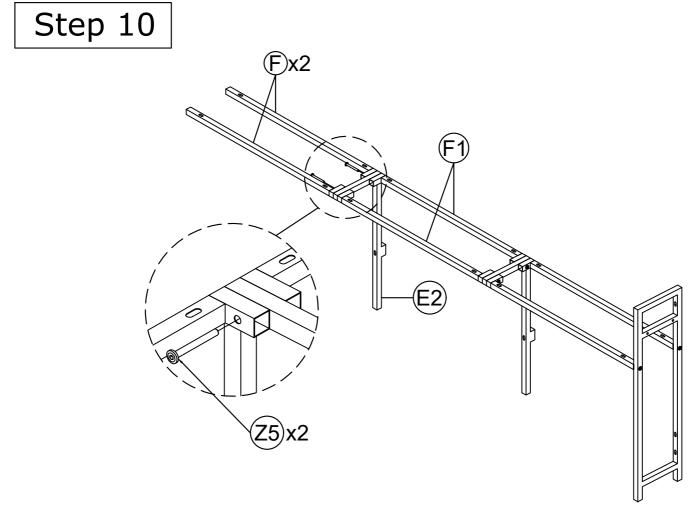


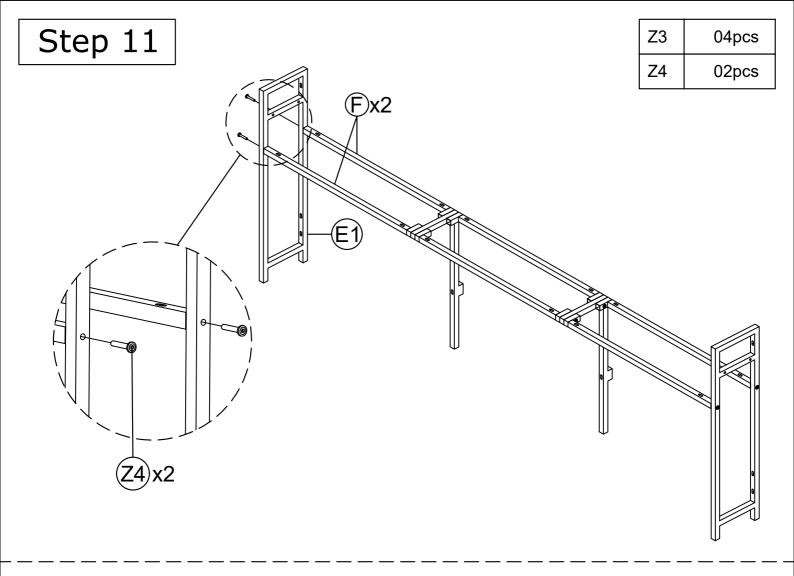


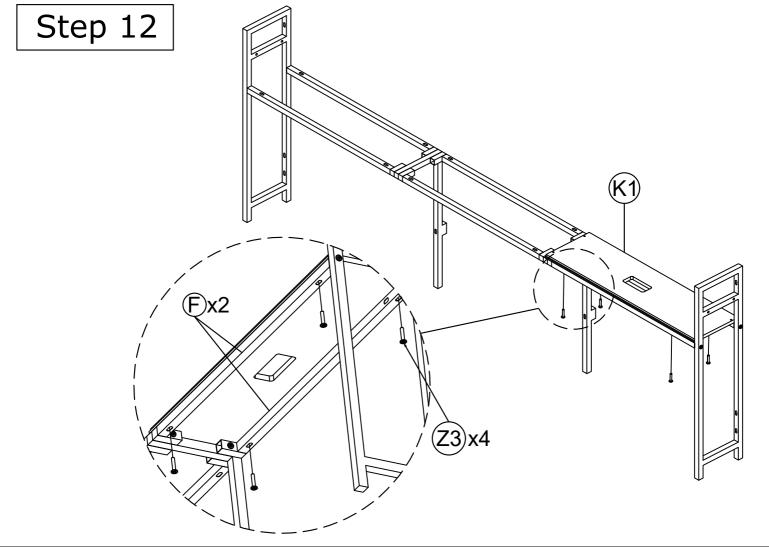


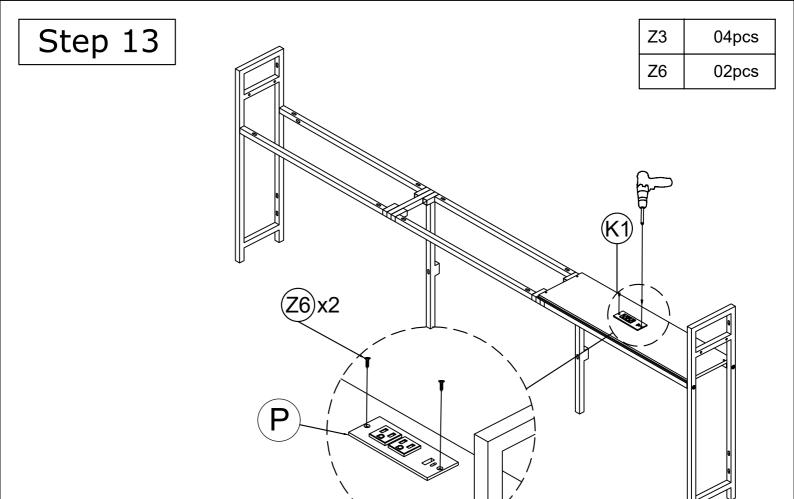





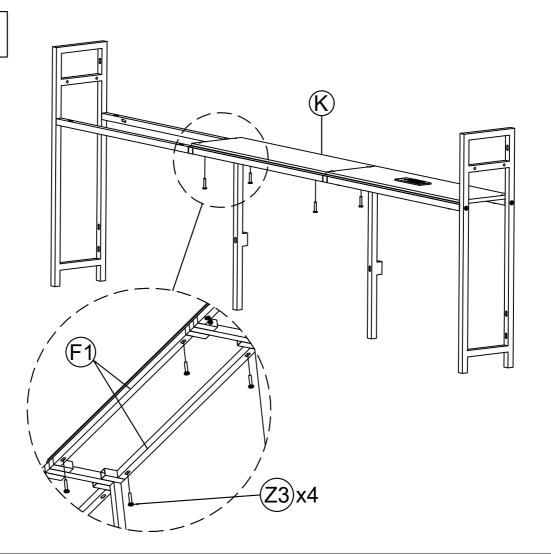


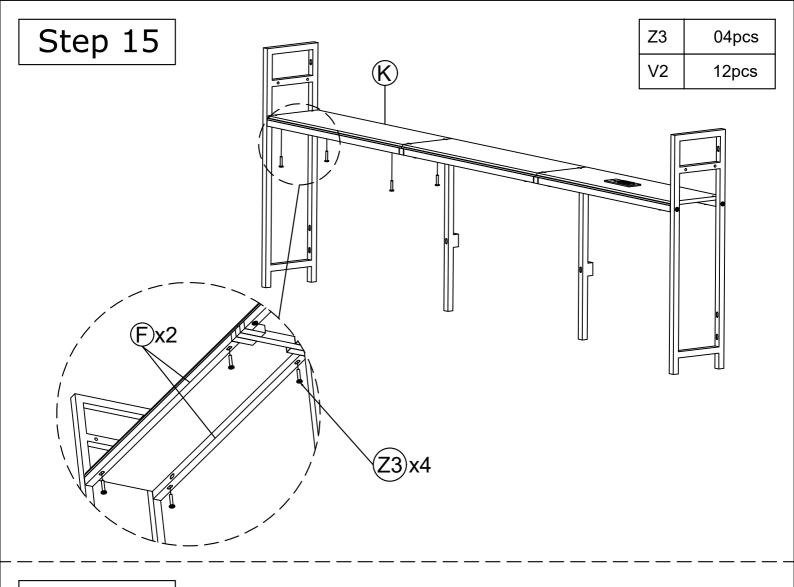


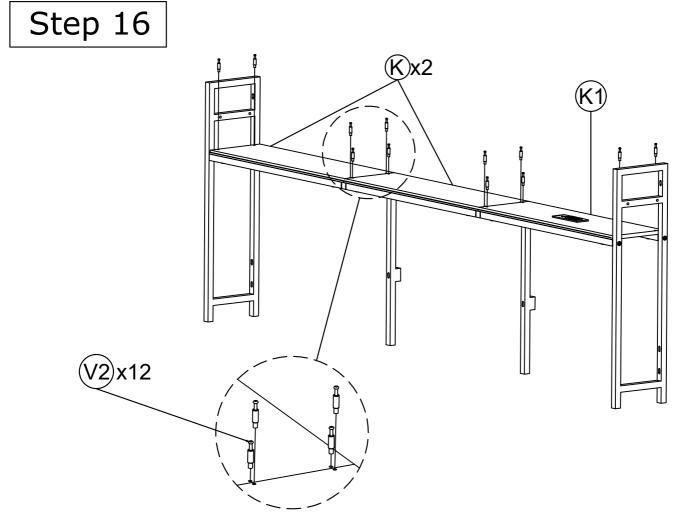


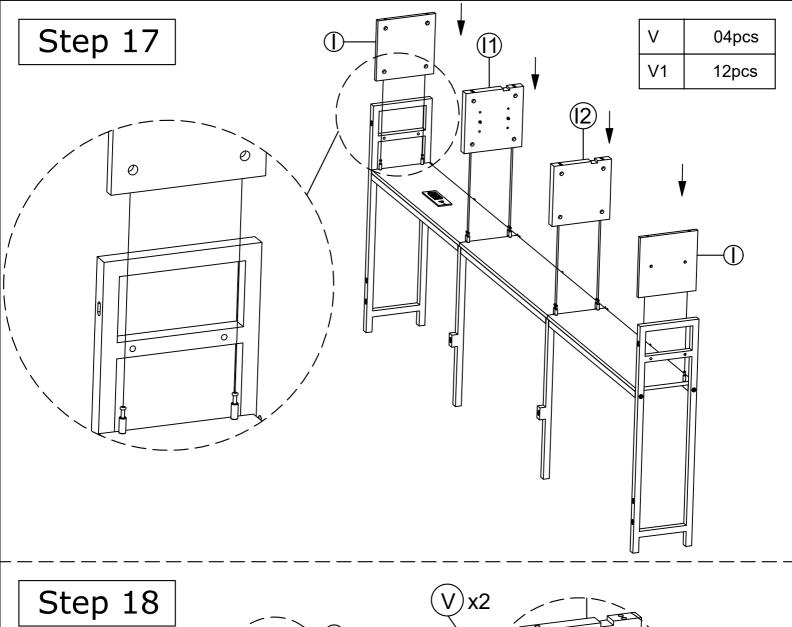

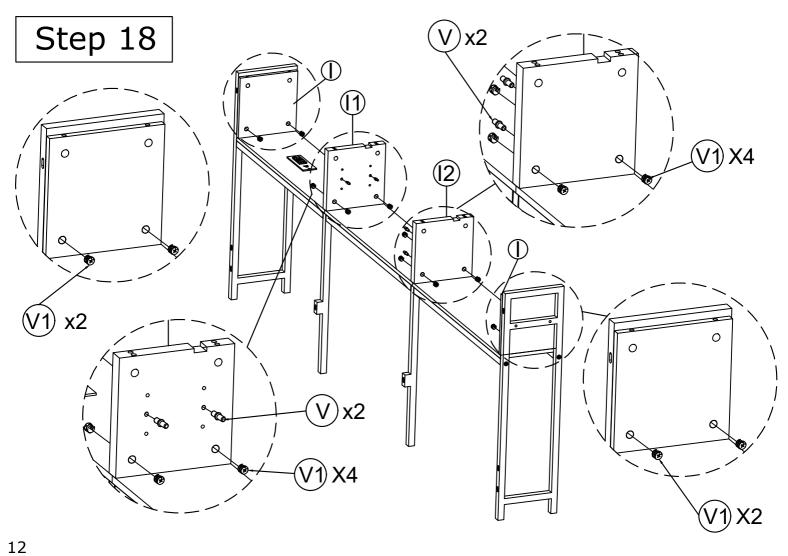


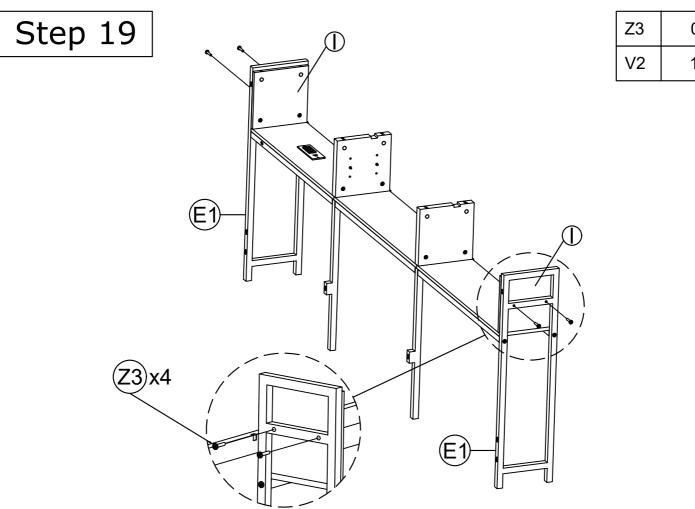


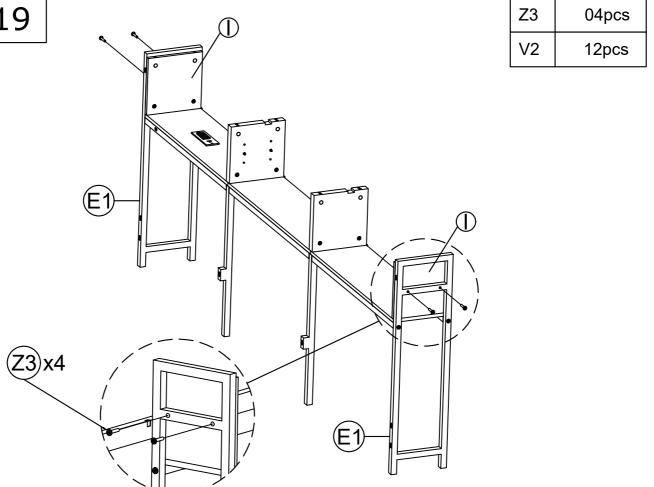


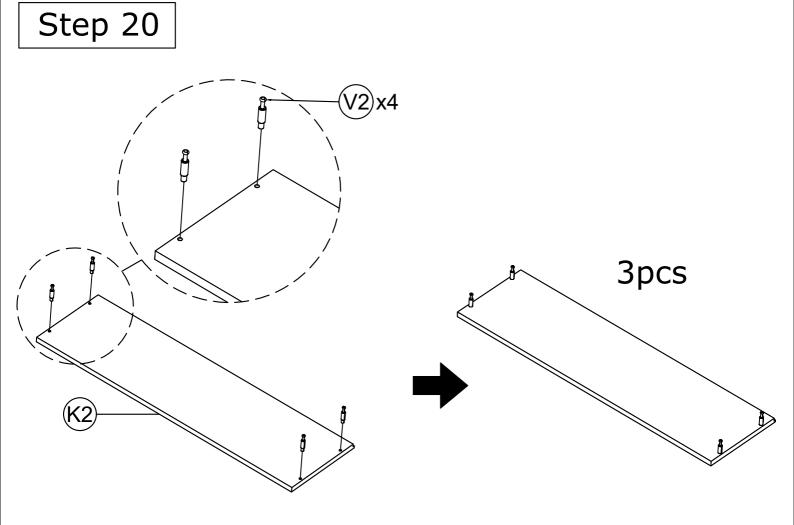



REMOVE GLUE AND PUT THE LED LIGHT ON THE WOOD

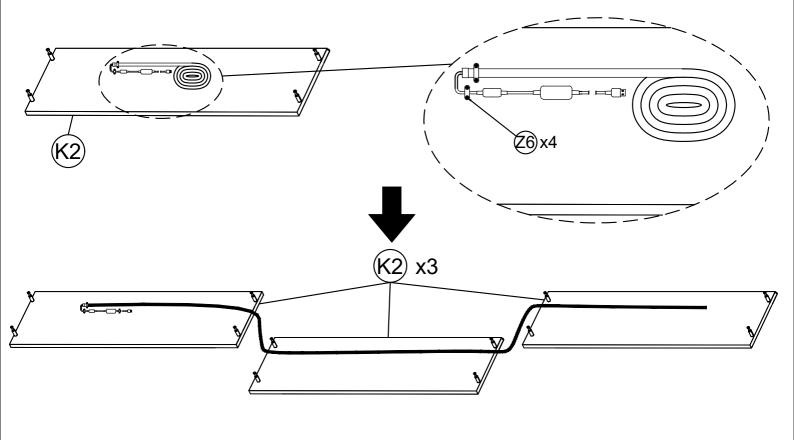


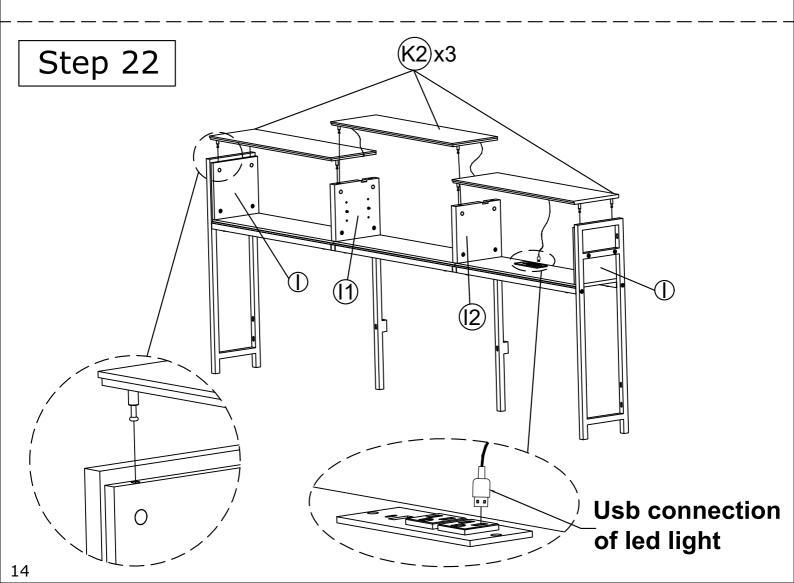


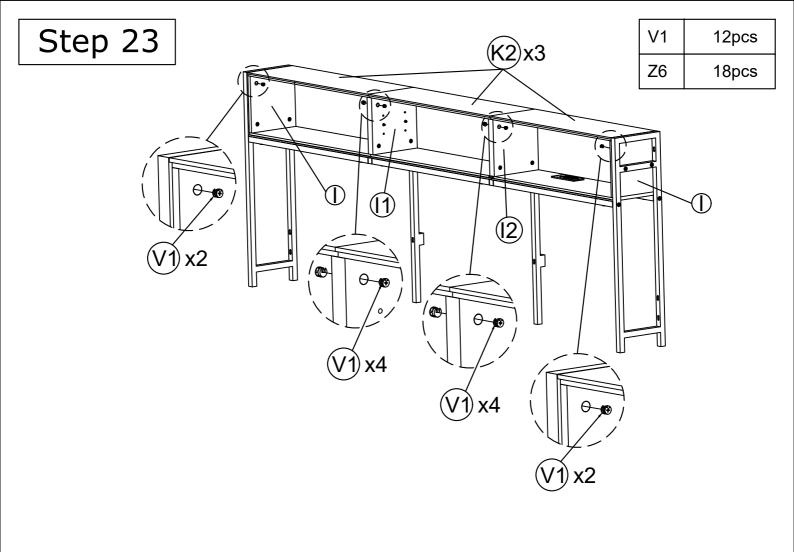

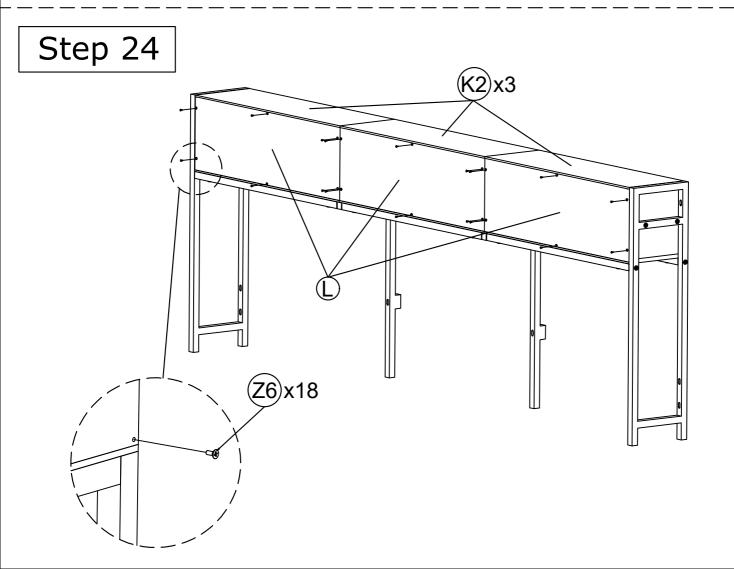


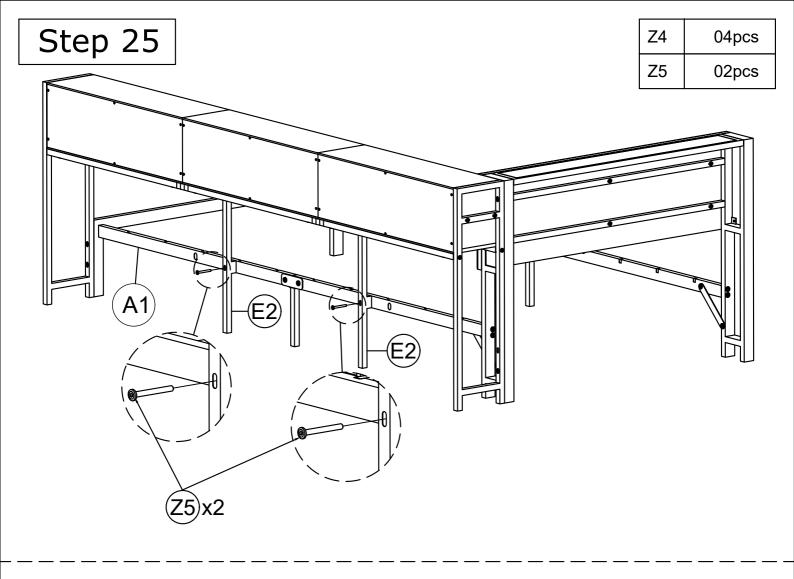

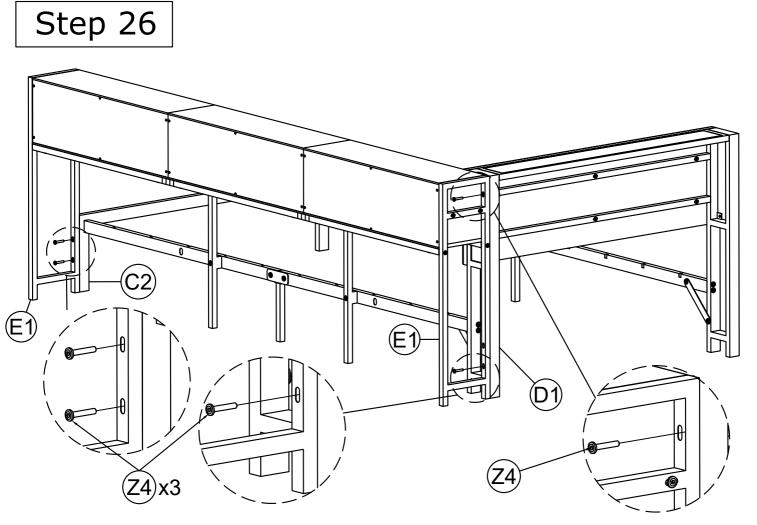

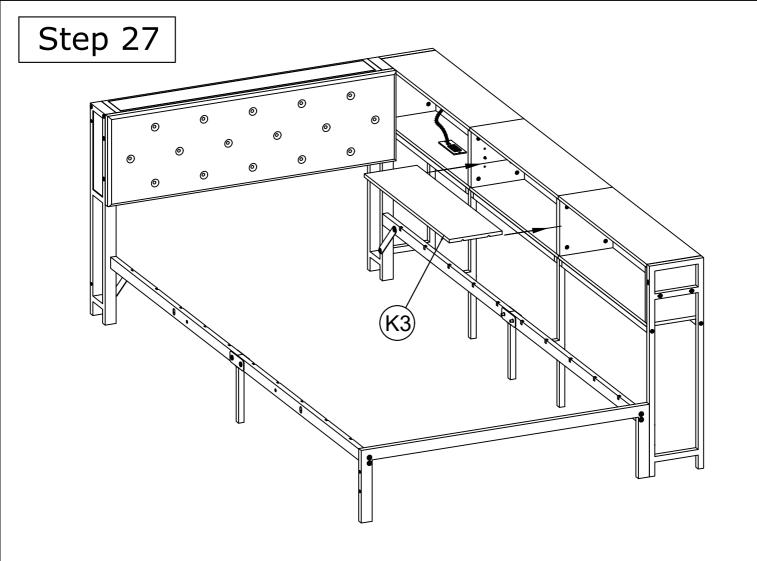


Step 28 Power outlet at the head of the bed when the cabinet is installed on the right side of the bed

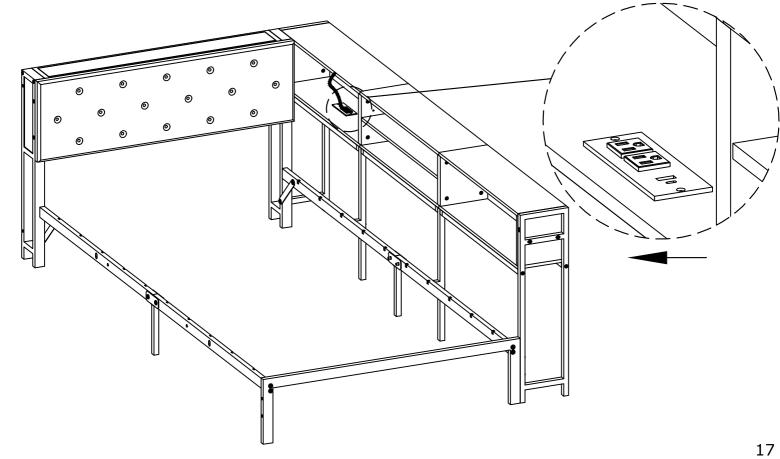


Step 29

Option 2

Move the wooden panel with led and the wooden panel with power outlet in reverse

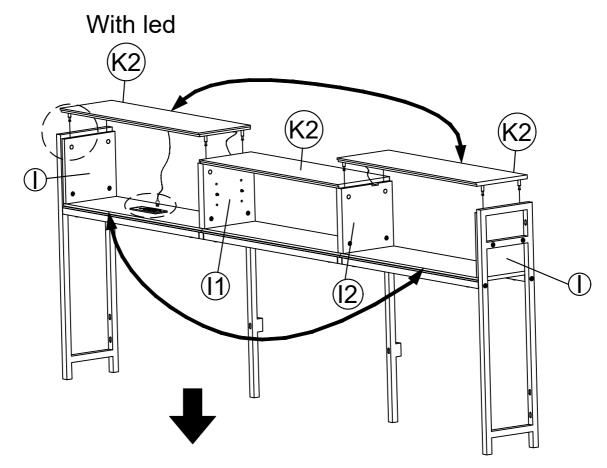


Power outlet at the head of the bed when the cabinet is installed on the left side of the bed

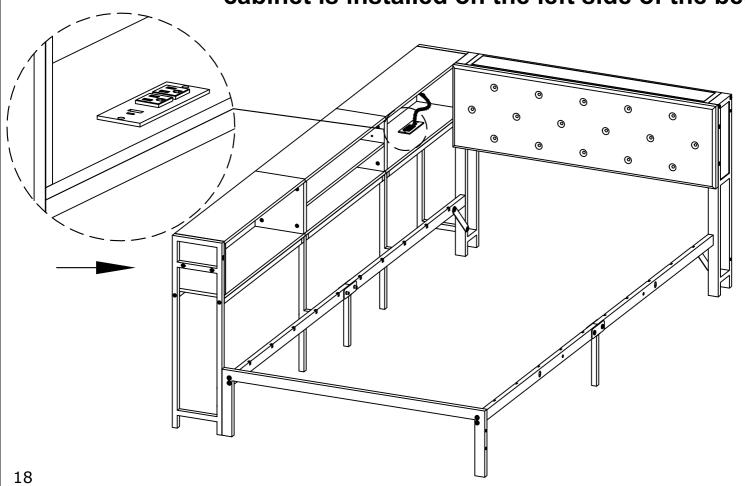






Z9 8pcs

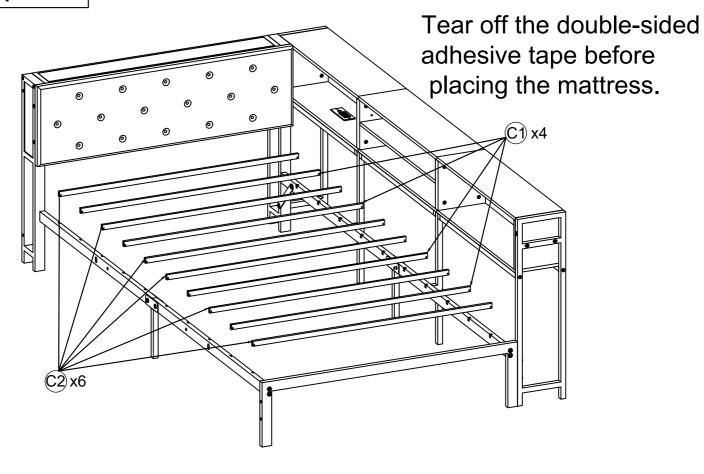


Step 31

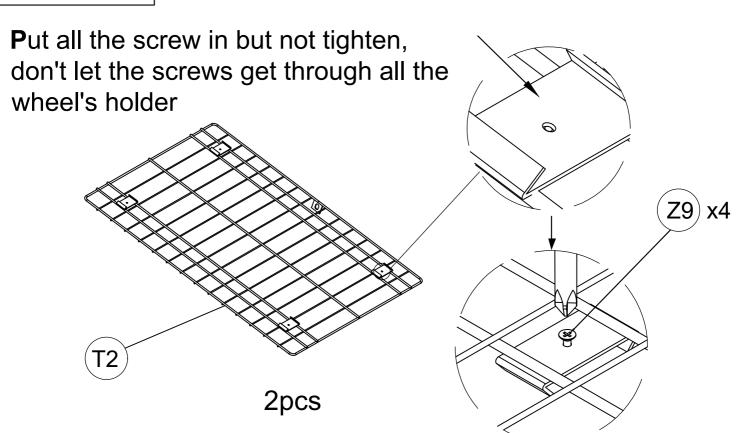


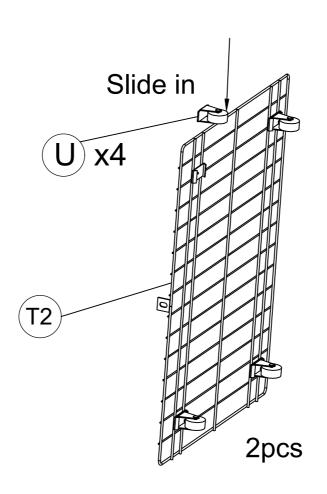


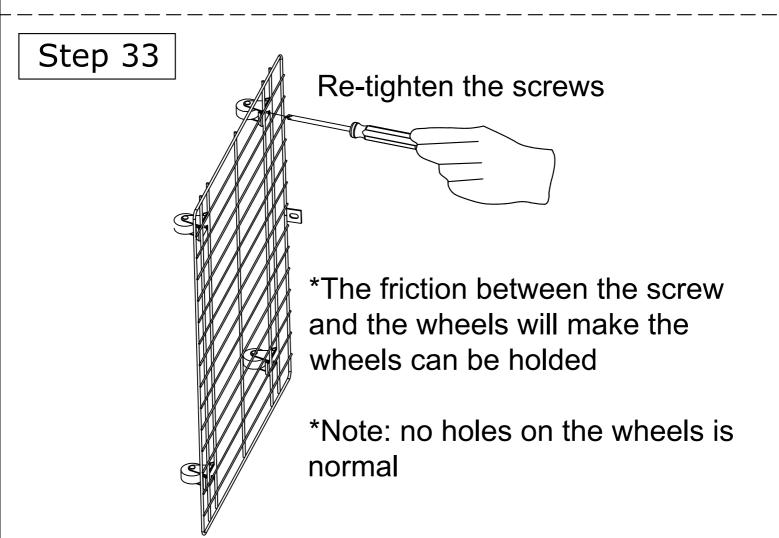


Detailed assembly instructions Q

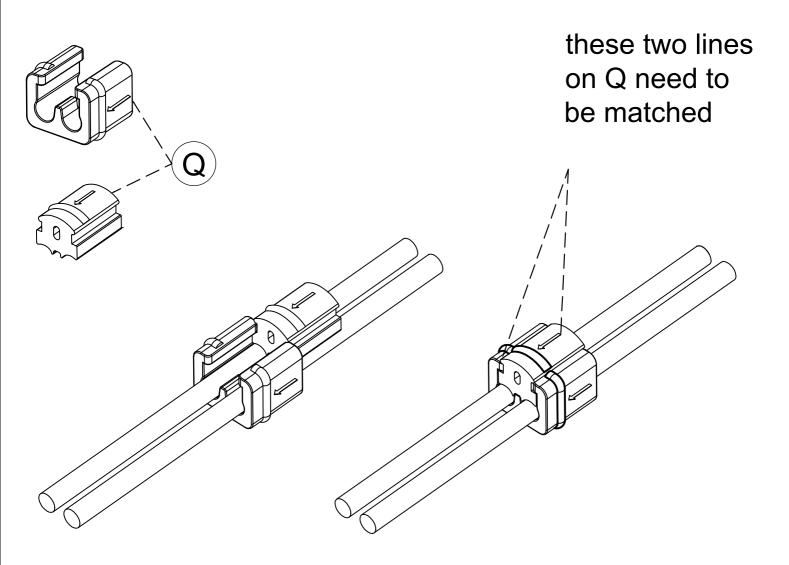

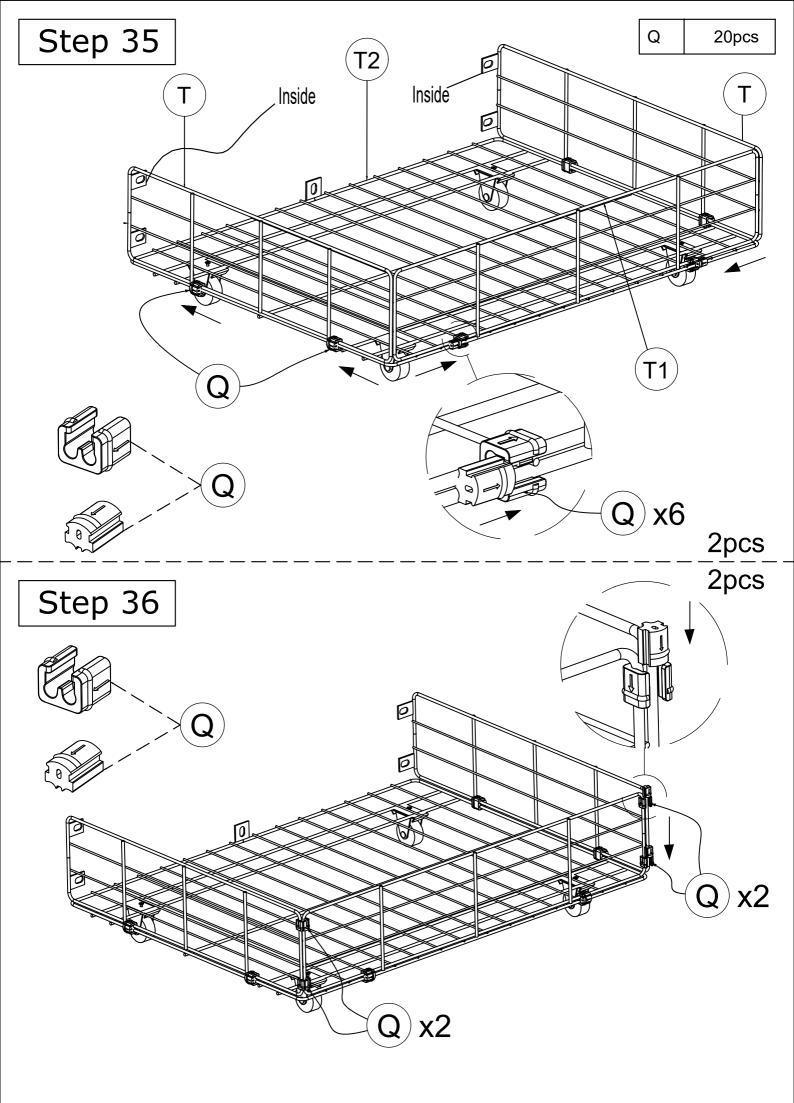

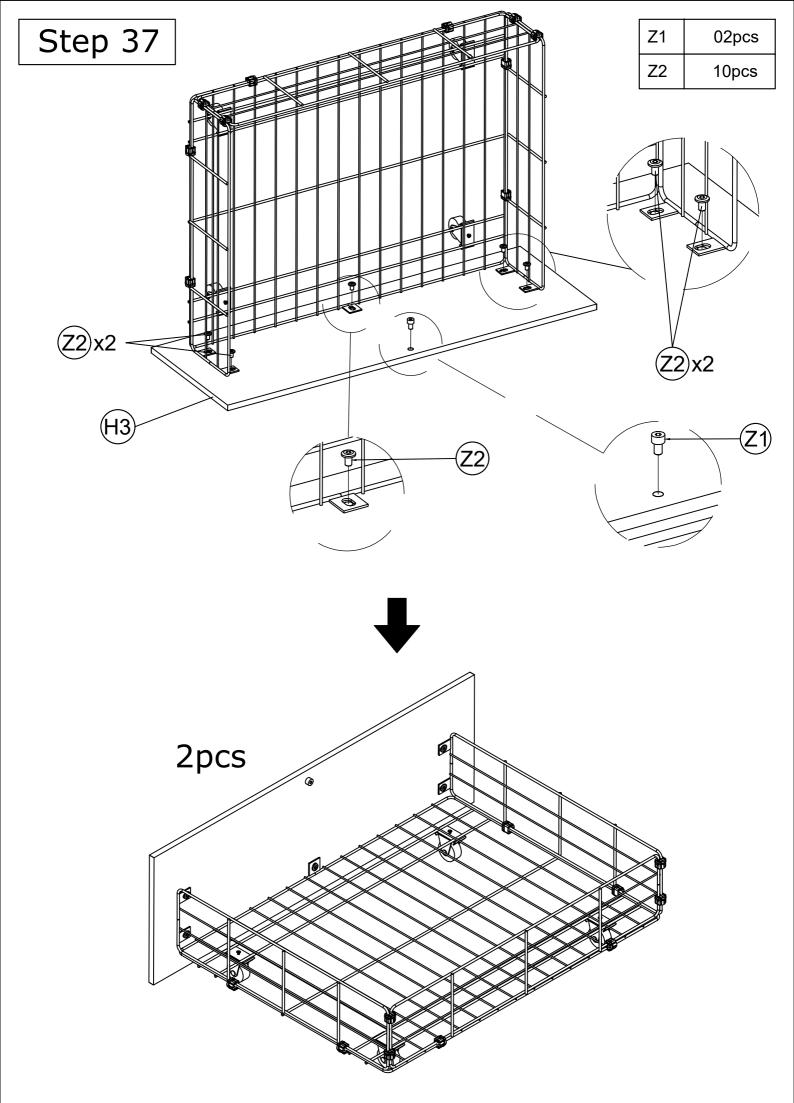

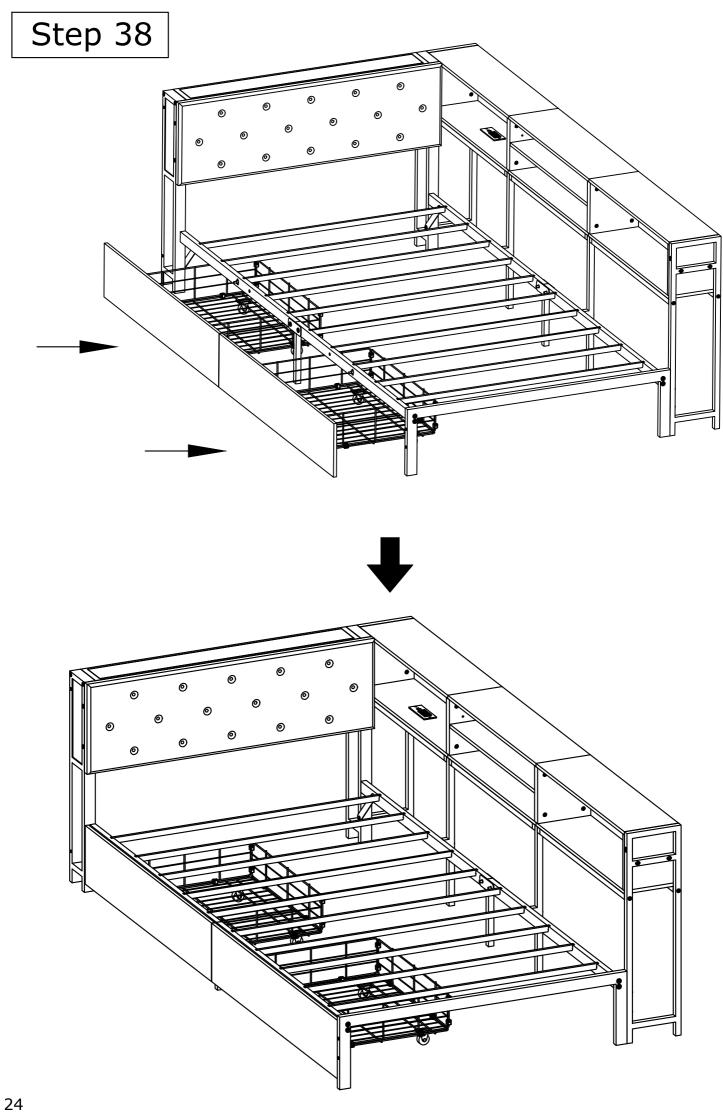

REMOTE CONTROL

