


wampat™

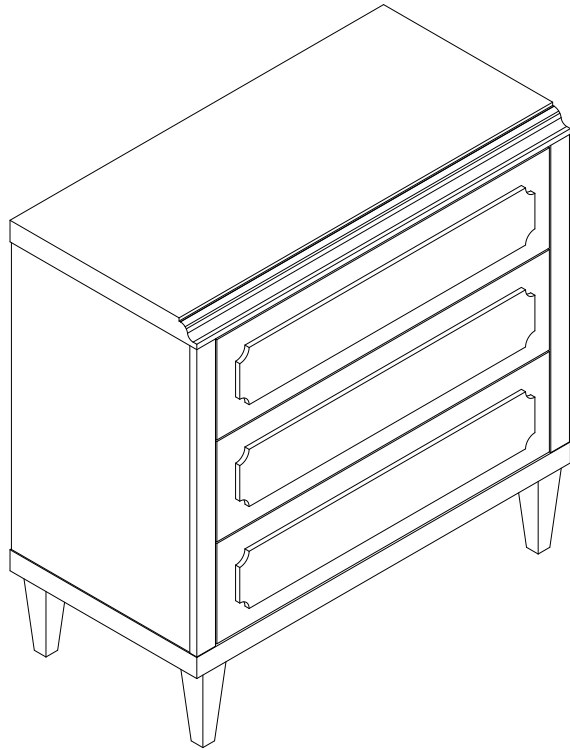




ASSEMBLY INSTRUCTIONS

**/ MODEL
W11HD08AL W11HD08BN**




IMPORTANT : please read this manual carefully before beginning
assembly of this product. keep this manual for future reference.

wampat


WHAT'S IN THE BOX

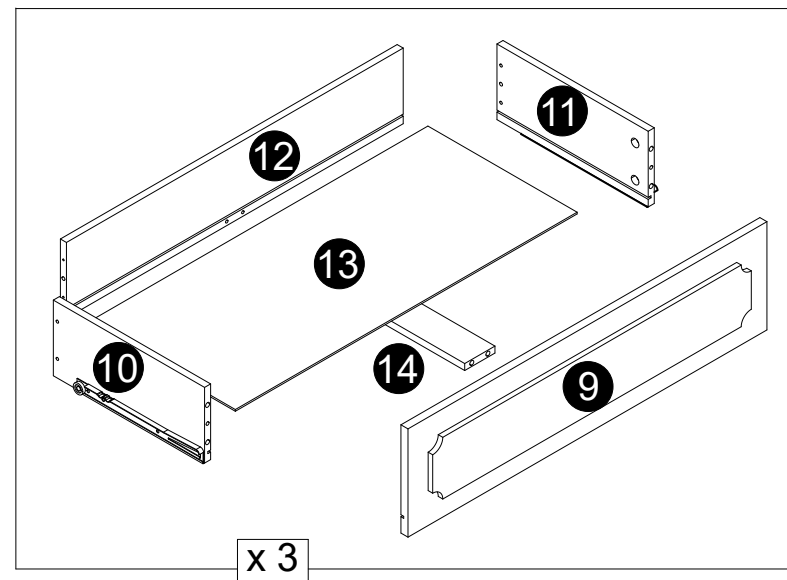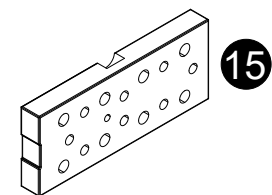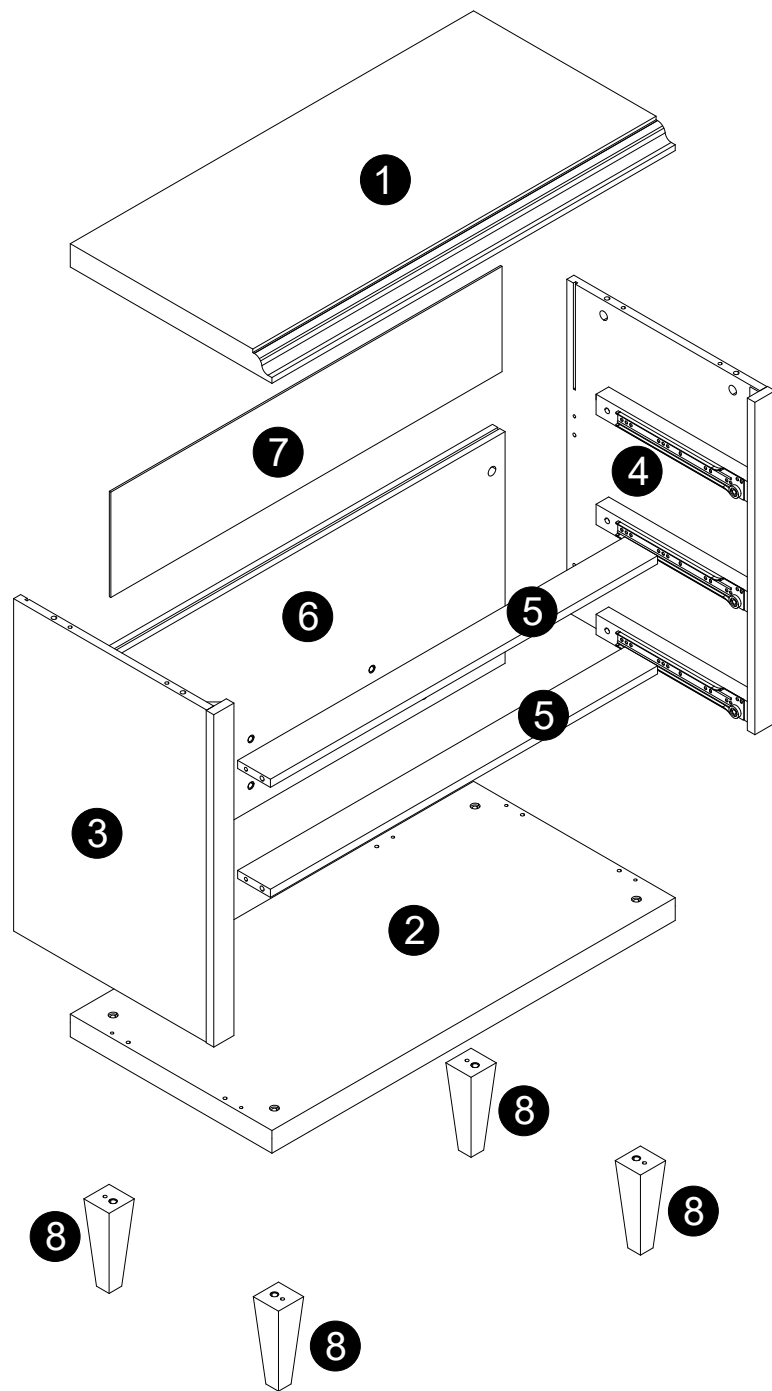


WHAT'S IN THE BOX

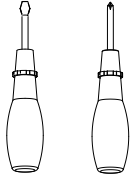 Wooden dowel Ø6x30mm A x 34	 Cam bolt Ø6x35mm B x 38	 Cam lock Ø15x9mm C x 38	 Plastic wedge D x 4
 Flat-head screw Ø3x16mm E x 4	 Door push F x 3	 Screw Ø3.5x14mm G x 6	 Glue tube H x 1
 Screw Ø4 x 30mm I x 12	 Screw Ø4 x 50mm J x 4	 Bolt Ø1/4x40mm K x 4	 Bolt Ø1/4x55mm L x 4
 Hex key M x 1	 Footpads N x 4	 Screw Ø4*12 O x 2	 Screw Ø4*25 P x 2
 Plastic strap Q x 2	 Nut R x 2	 Tools Required (Not included)	


- The provided glue(H) is to secure wood dowels(A) in place . When first inserting dowels, locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

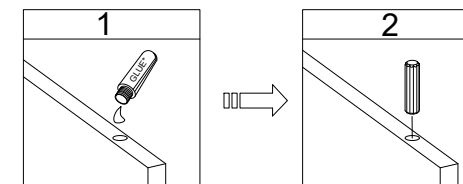


- In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

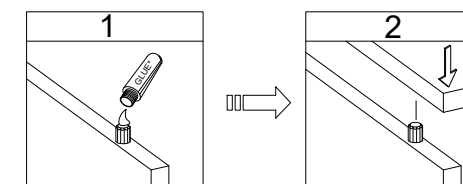


- Unpack the unit and confirm that you have all the hardware and required parts.
Assemble the unit on a carpeted floor or the empty carton to avoid any scratches.

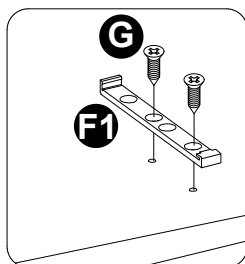


Step 1

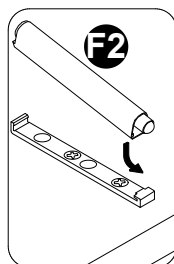




Step 2

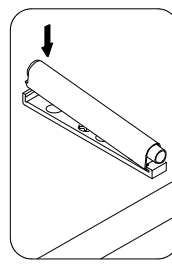

Step 3

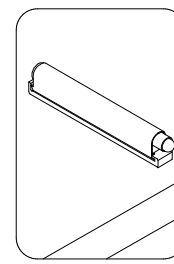

Final Assembly


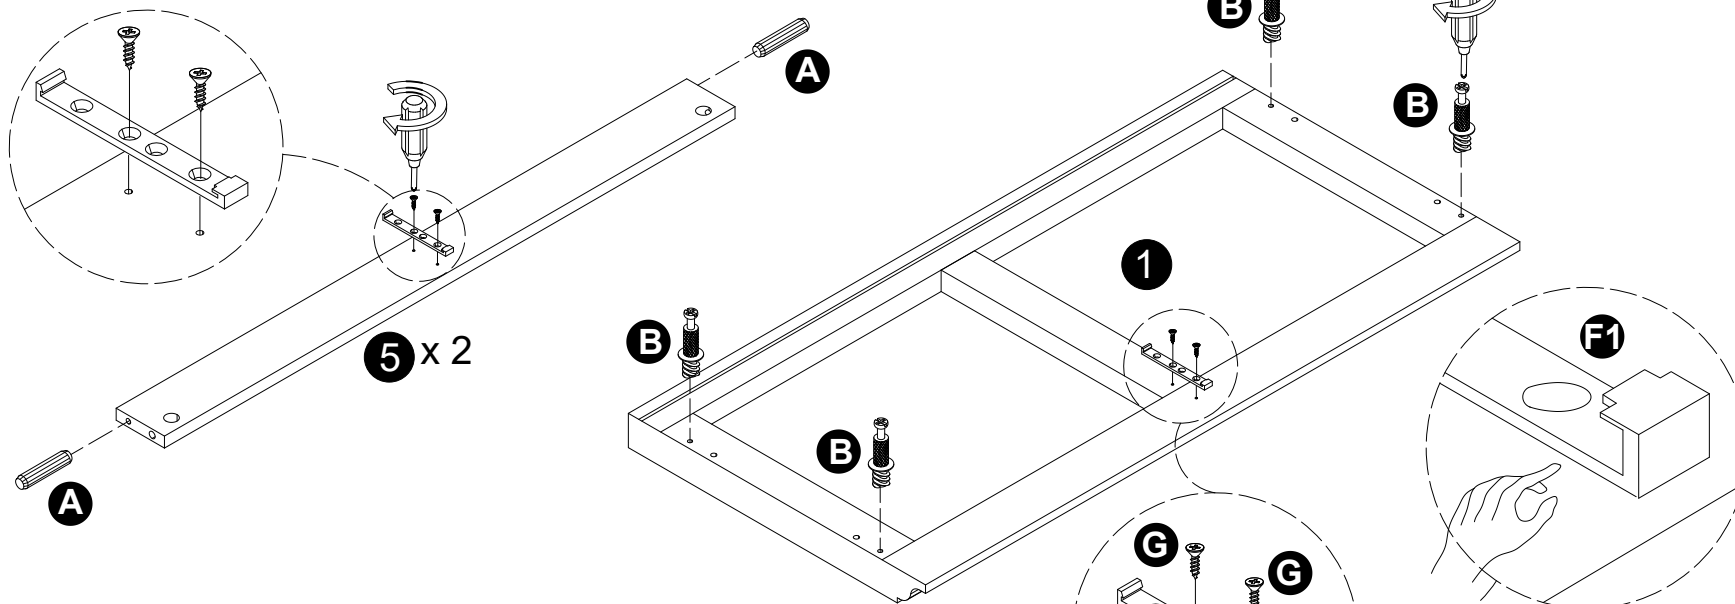
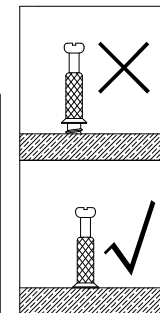
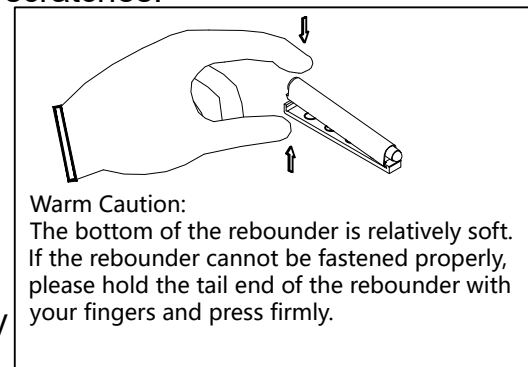




G x 6	F x 3
A x 4	H
	B x 4

- Screw cam bolts (B) into panel (1).
- Insert dowels (A) into panels (5).
- Attach part (F) to panels (1,5) with screws (G).

INSTALLATION STEPS

2

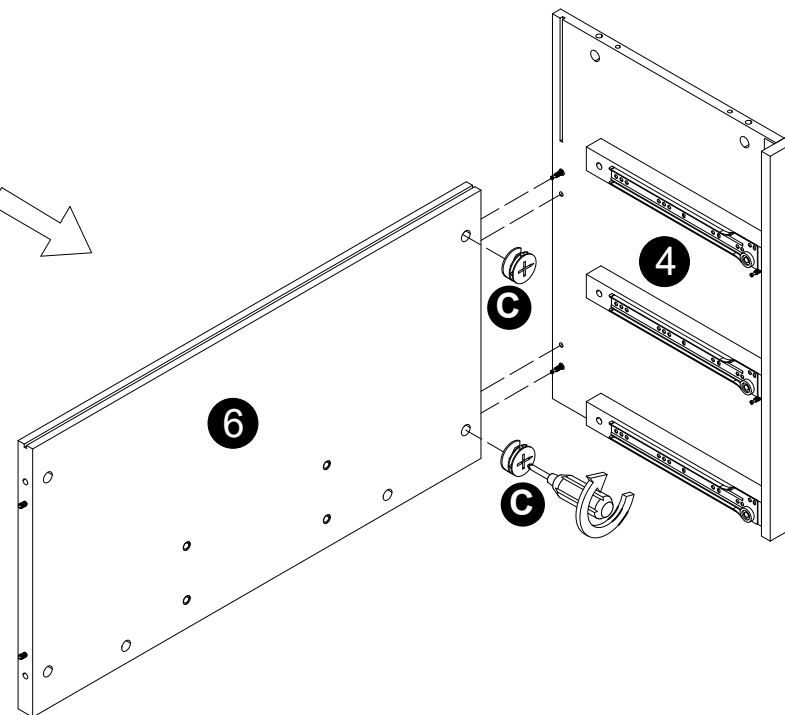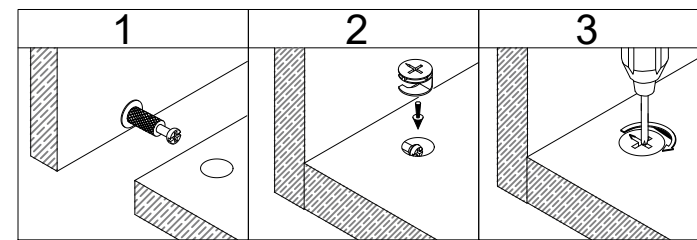

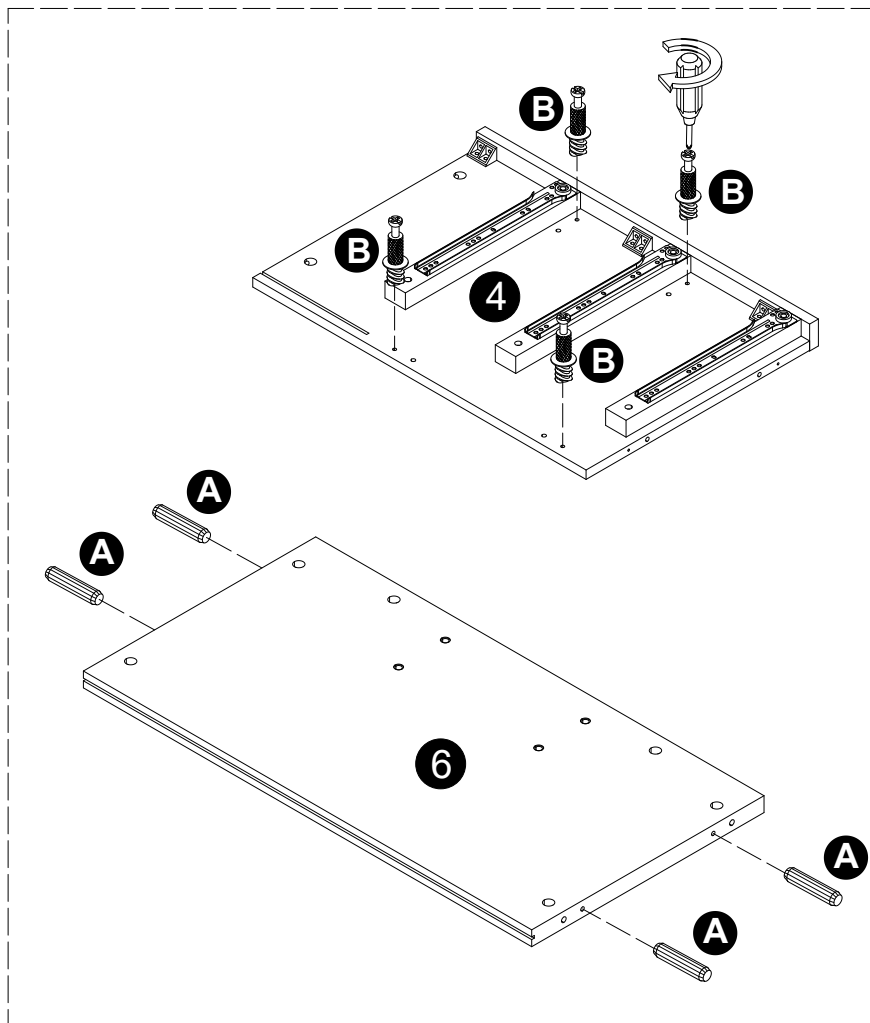


B x 4	C x 2
	
A x 4	H
	


- Screw cam bolts (B) into panel (4).
- Insert dowels (A) into panels (6).
- Attach panel (4) to panel (6).
- Insert and secure cam locks(C) to panel (6) to lock it.

3

INSTALLATION STEPS

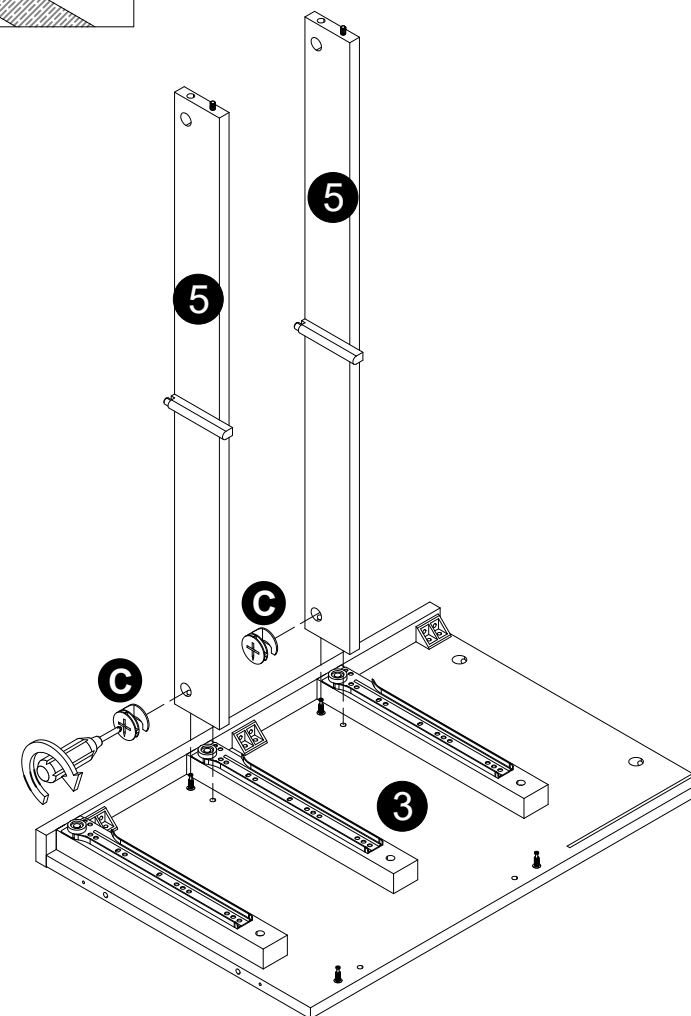
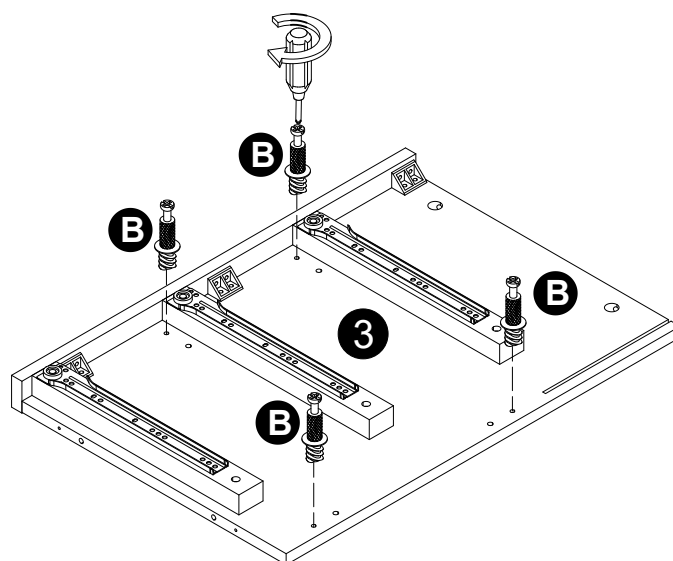
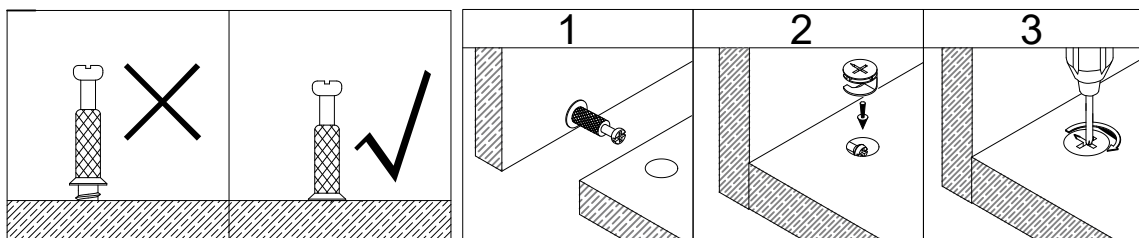


- Screw cam bolts (B) into panel (3).
- Attach panels (5) to panel (3).
- Insert and secure cam locks (C) to panels (5) to lock it.


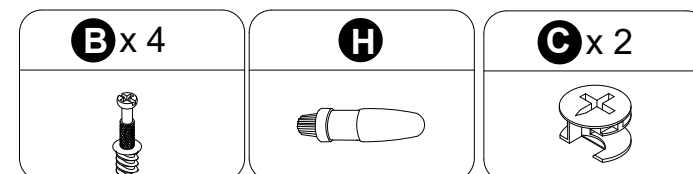


4

INSTALLATION STEPS

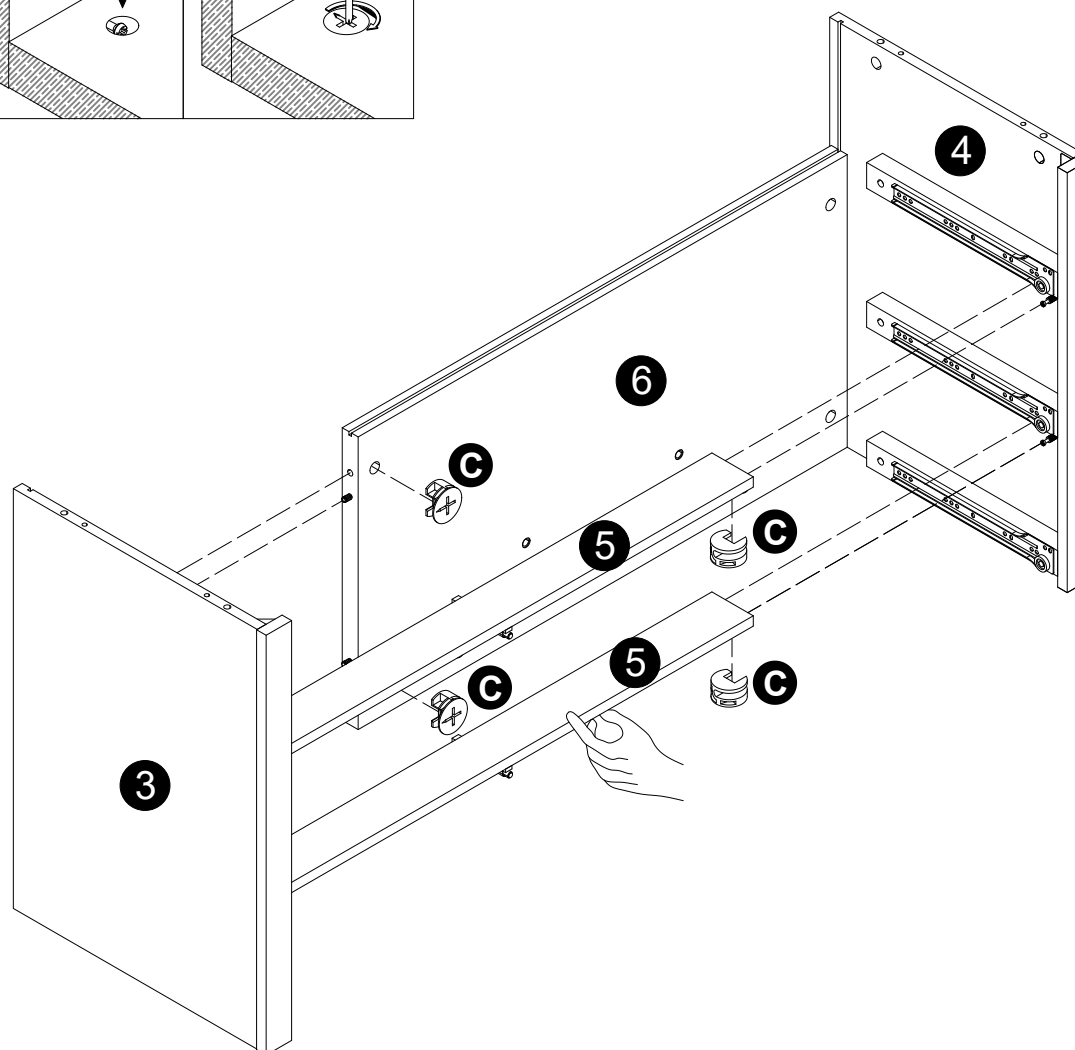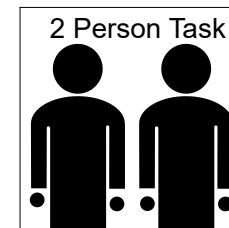
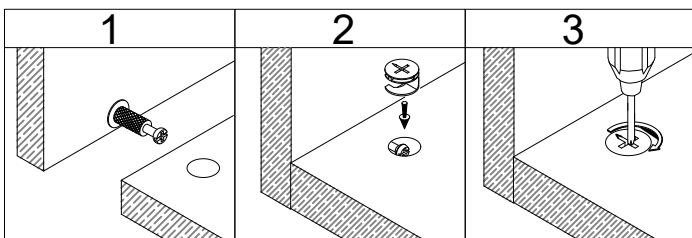




- Attach panels (3,5) to panels (4,6).
- Insert and secure cam locks(C) to panels (5,6) to lock it.

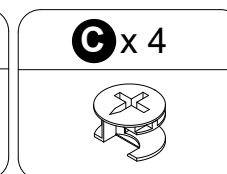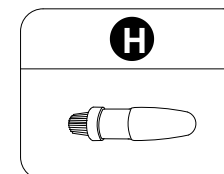

5

INSTALLATION STEPS




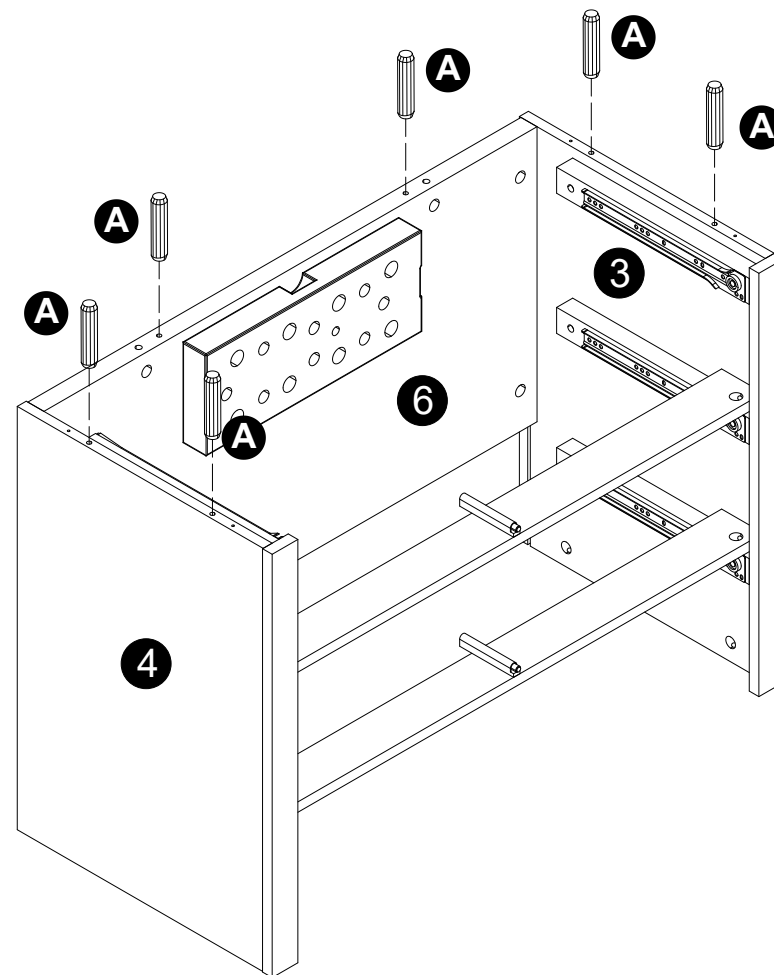
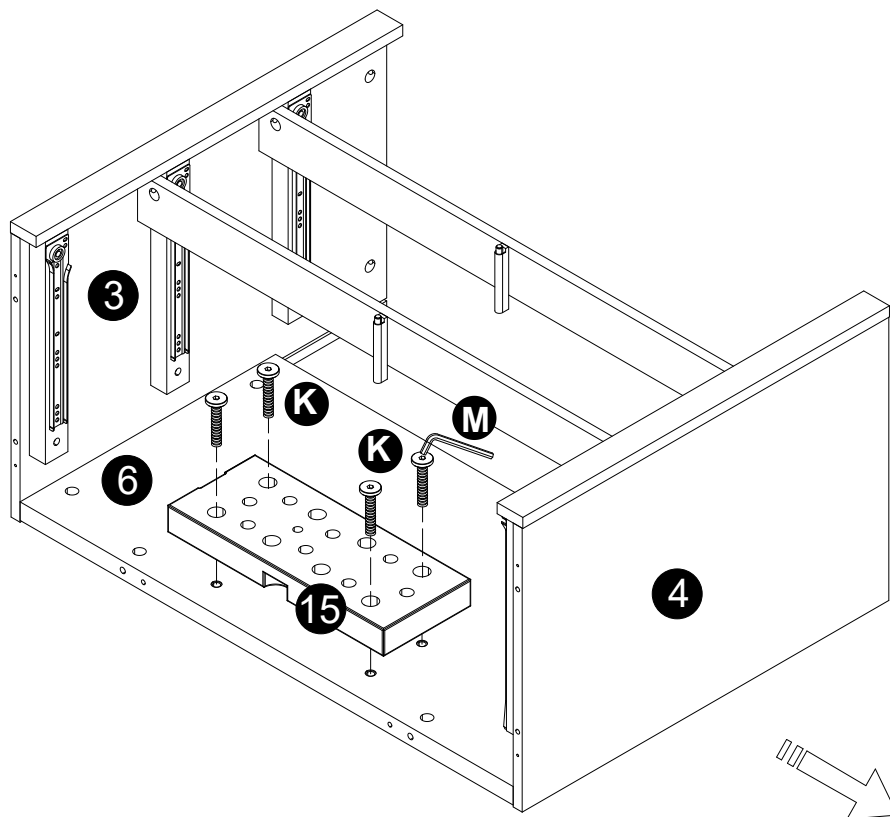


K x 4	M
	
A x 6	H
	

- Attach part (15) to panel (6) with parts (K,M) correctly.
- Insert dowels (A) into panels (3,4,6).

6



INSTALLATION STEPS

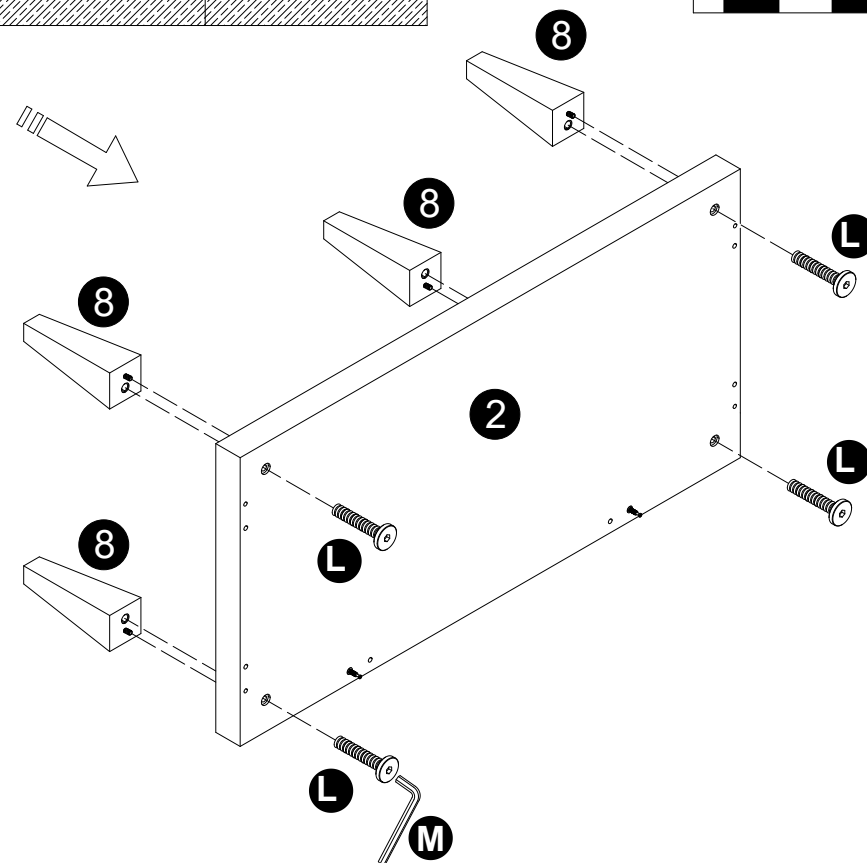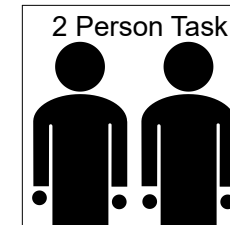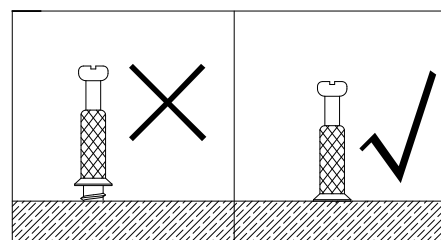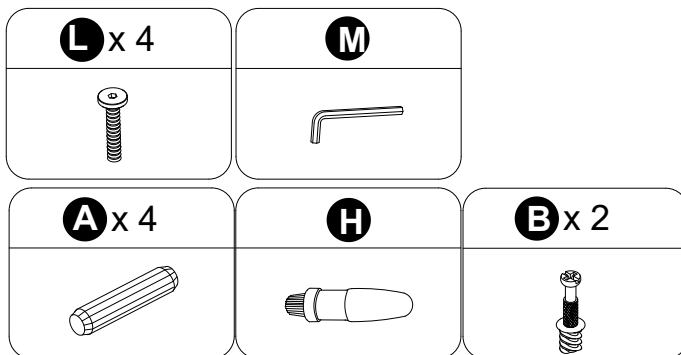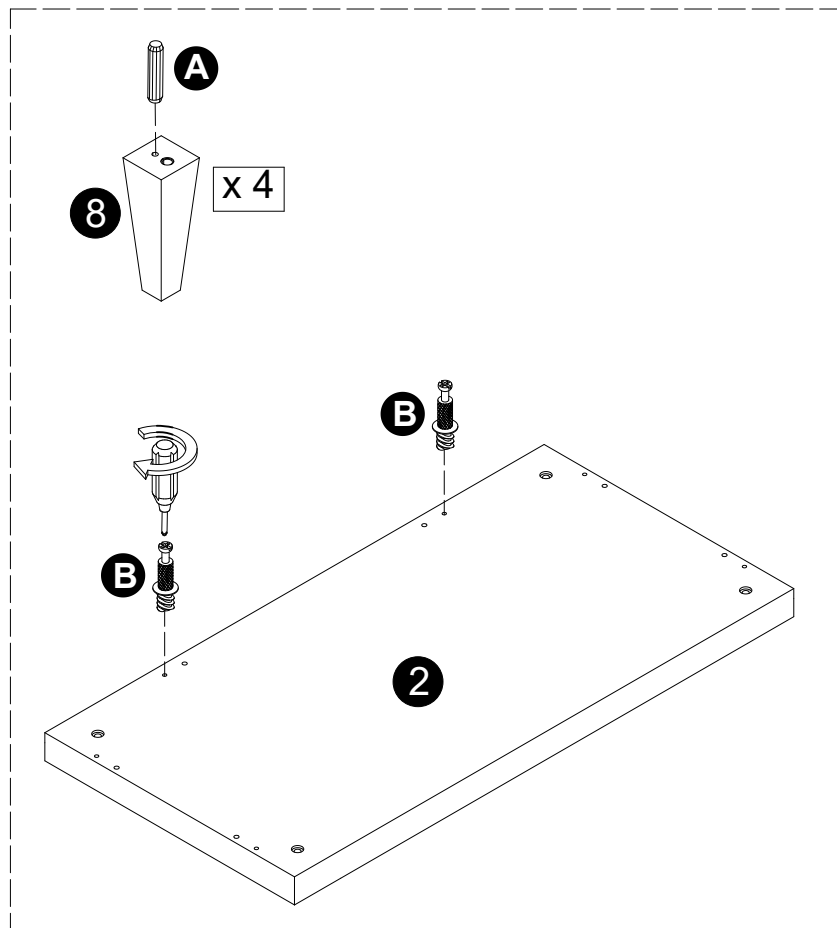

- Insert dowels (A) into legs (8).
- Screw cam bolts (B) into panel (2).
- Attach legs (8) to panel (2) with parts (L,M).




7

INSTALLATION STEPS

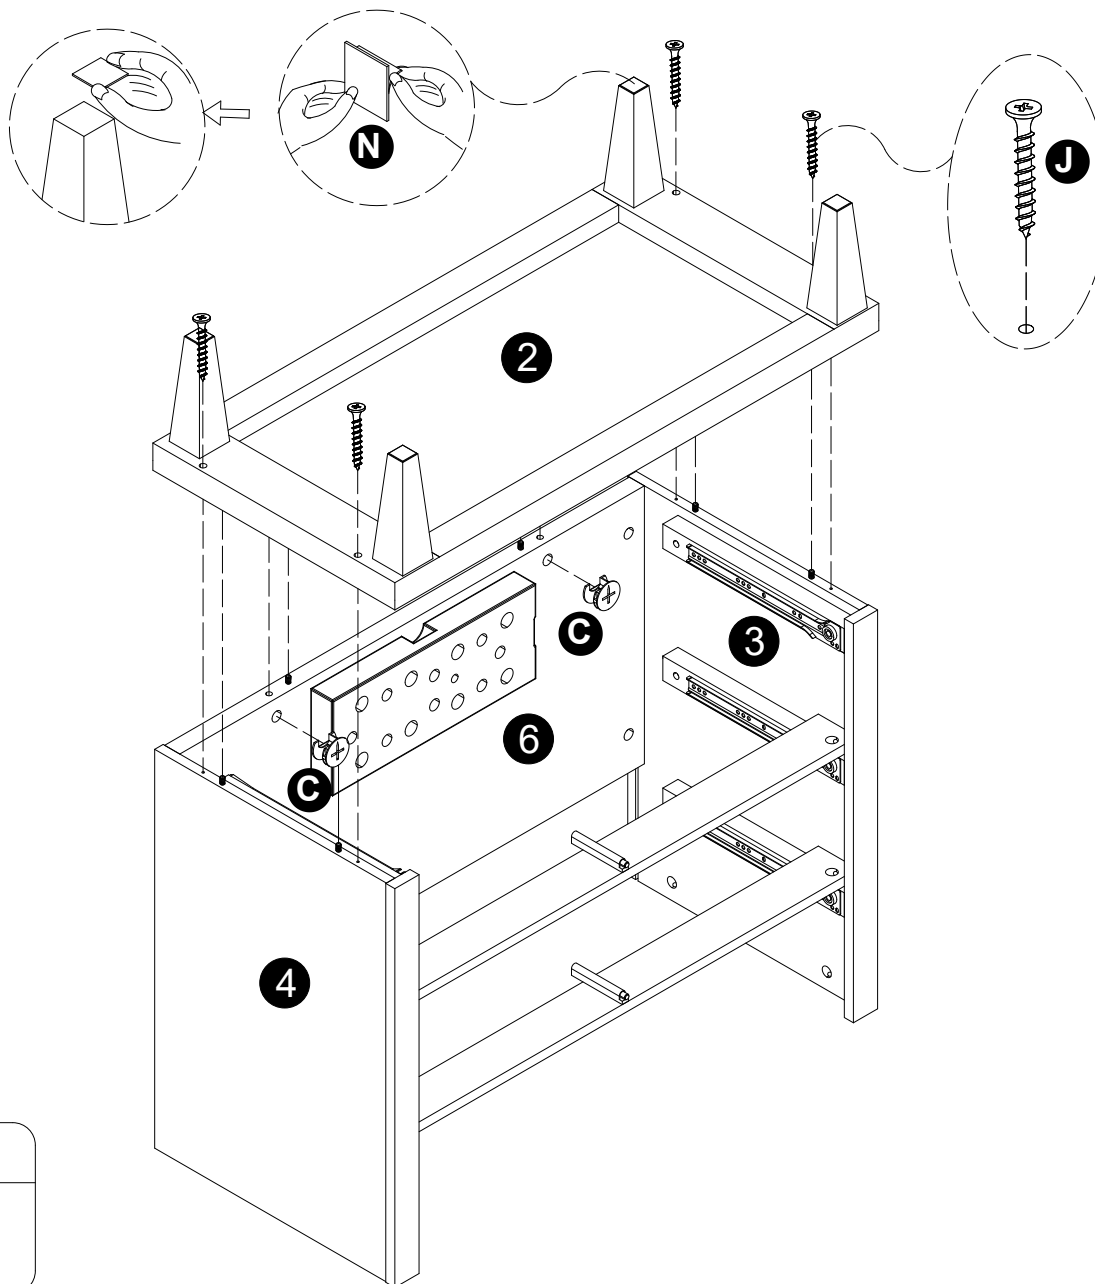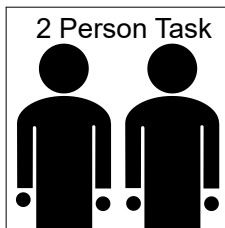


J x 4	N x 4
	
H	C x 2
	

- Attach panel (2) to panels (3,4) with screws (J).
- Insert and secure cam locks (C) to panel (6) to lock it.
- Stick the skid pads (L) on the bottom of the legs.



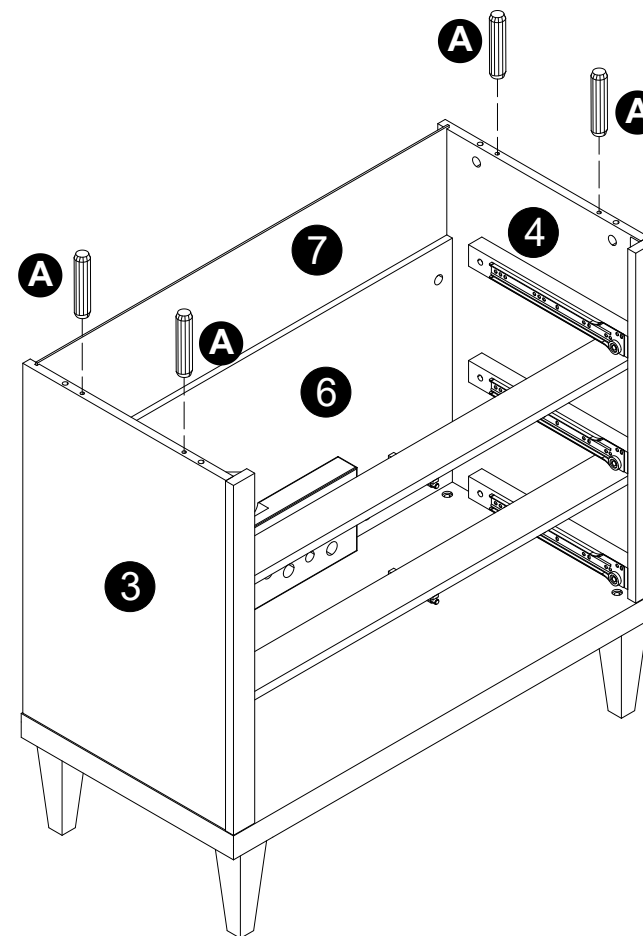

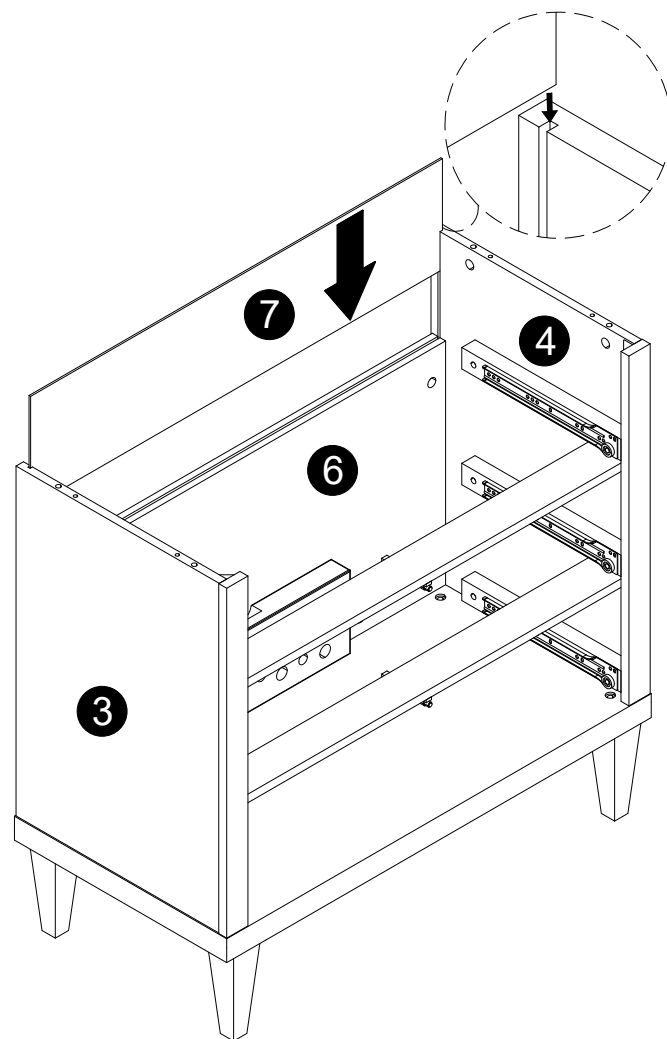


- Carefully slide part (7) into place along the back of the assembly.
- Insert dowels (A) into panels (3,4).

A x 4**H**

9

INSTALLATION STEPS

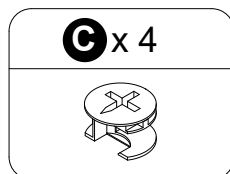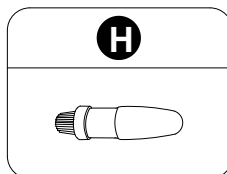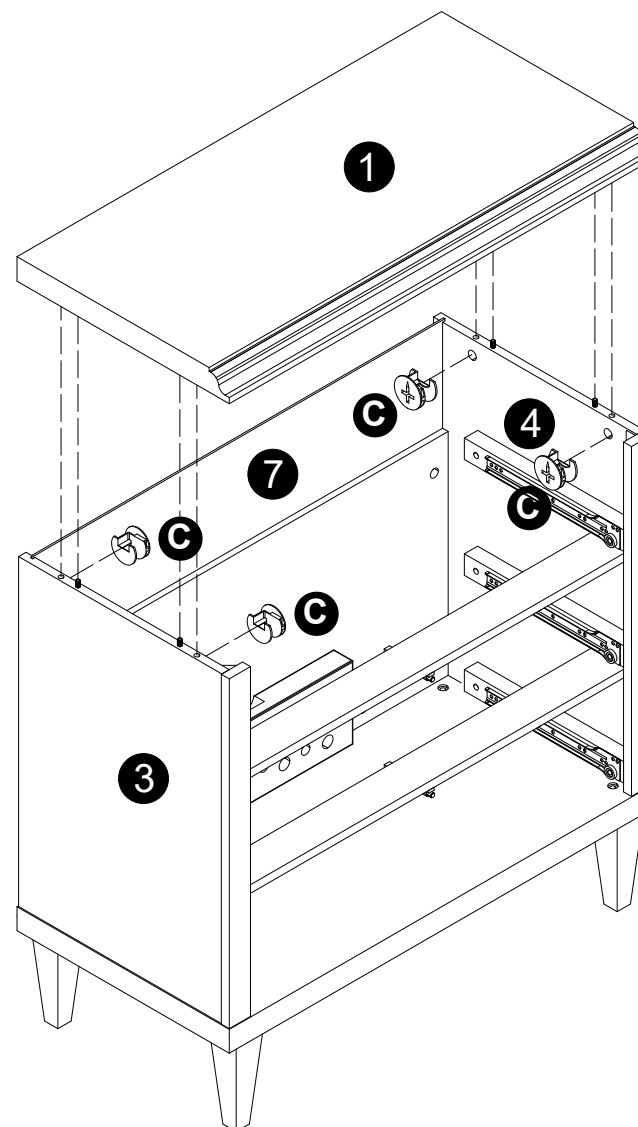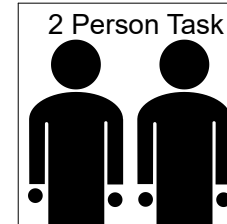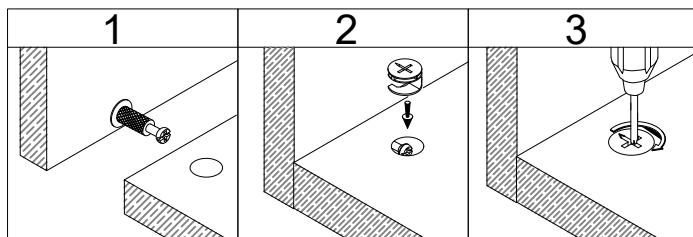


- Attach panel (1) to panels (3,4).
- Insert and secure cam locks(C) to panels (3,4) to lock it.


10

INSTALLATION STEPS

NOTE: Ensure the cabinet body is stable, please make sure to lock the plastic wedge.





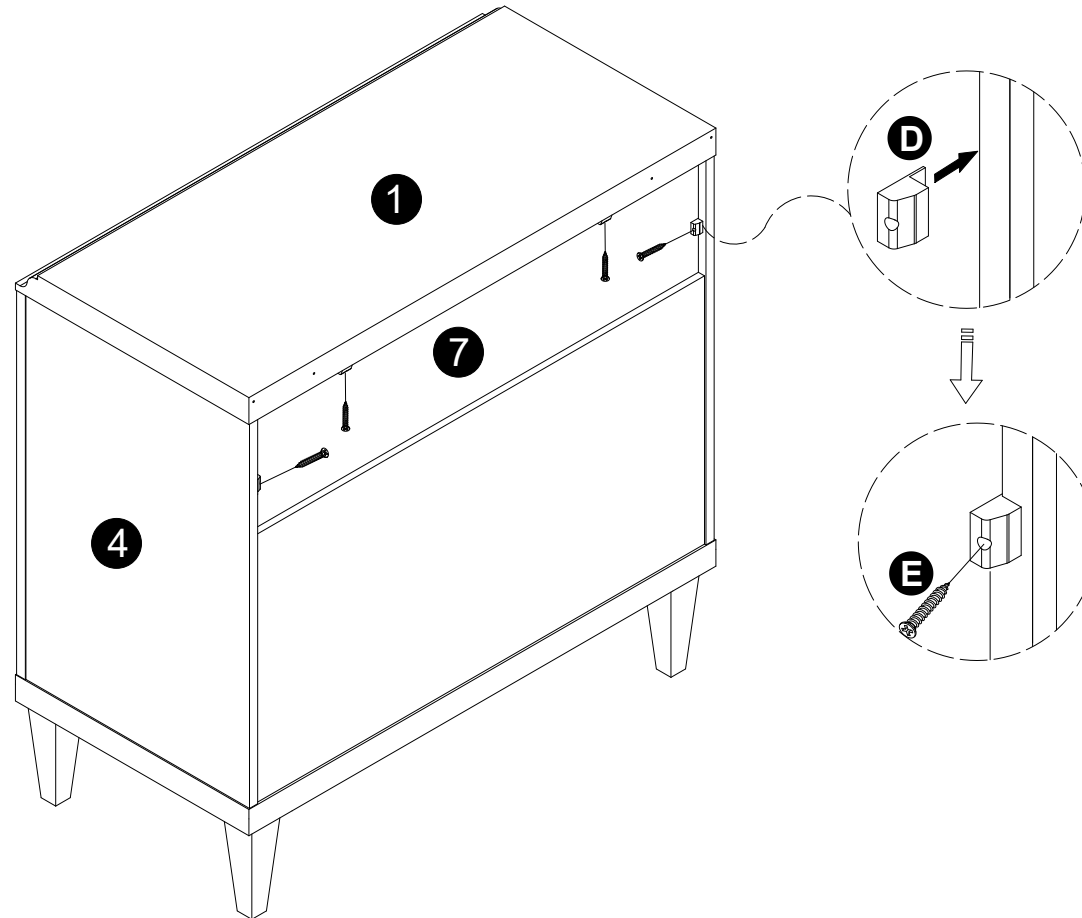


· Secure parts (D) with screws (E) as per diagram.



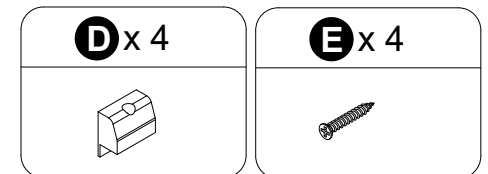


11

INSTALLATION STEPS

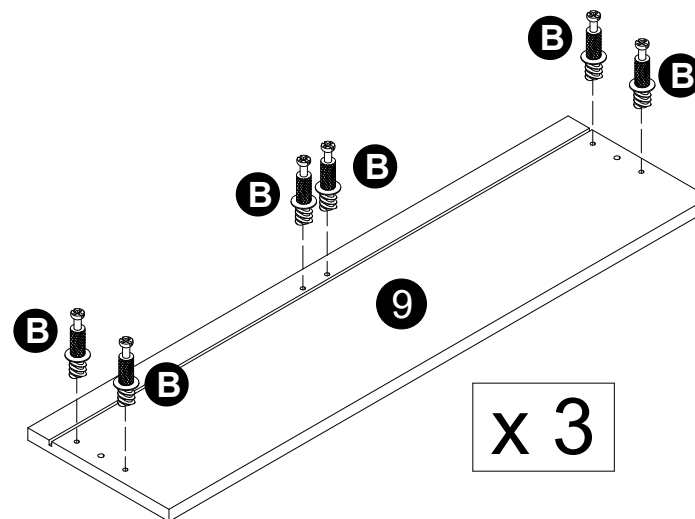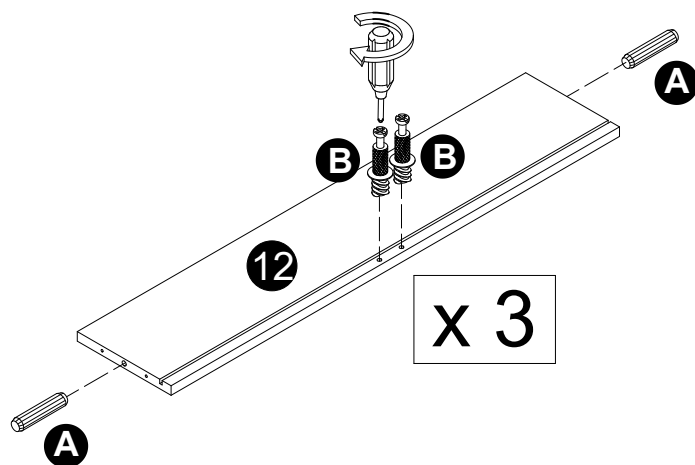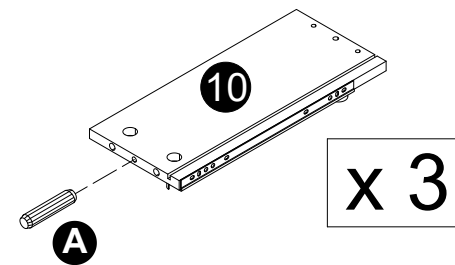
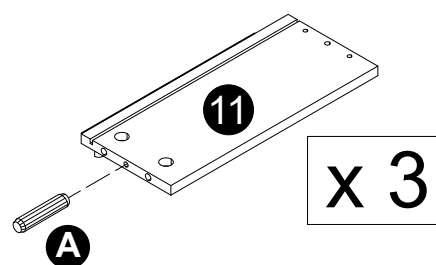
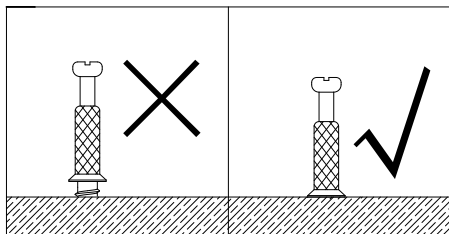


- Screw cam bolts (B) into panels (9,12).
- Insert dowels (A) into panels (10,11,12).

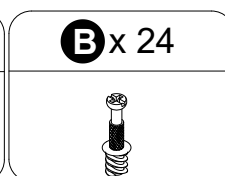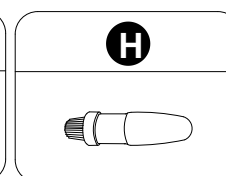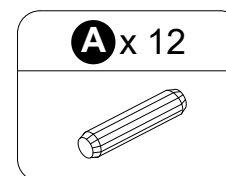

12




INSTALLATION STEPS

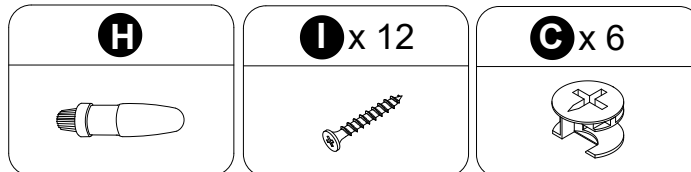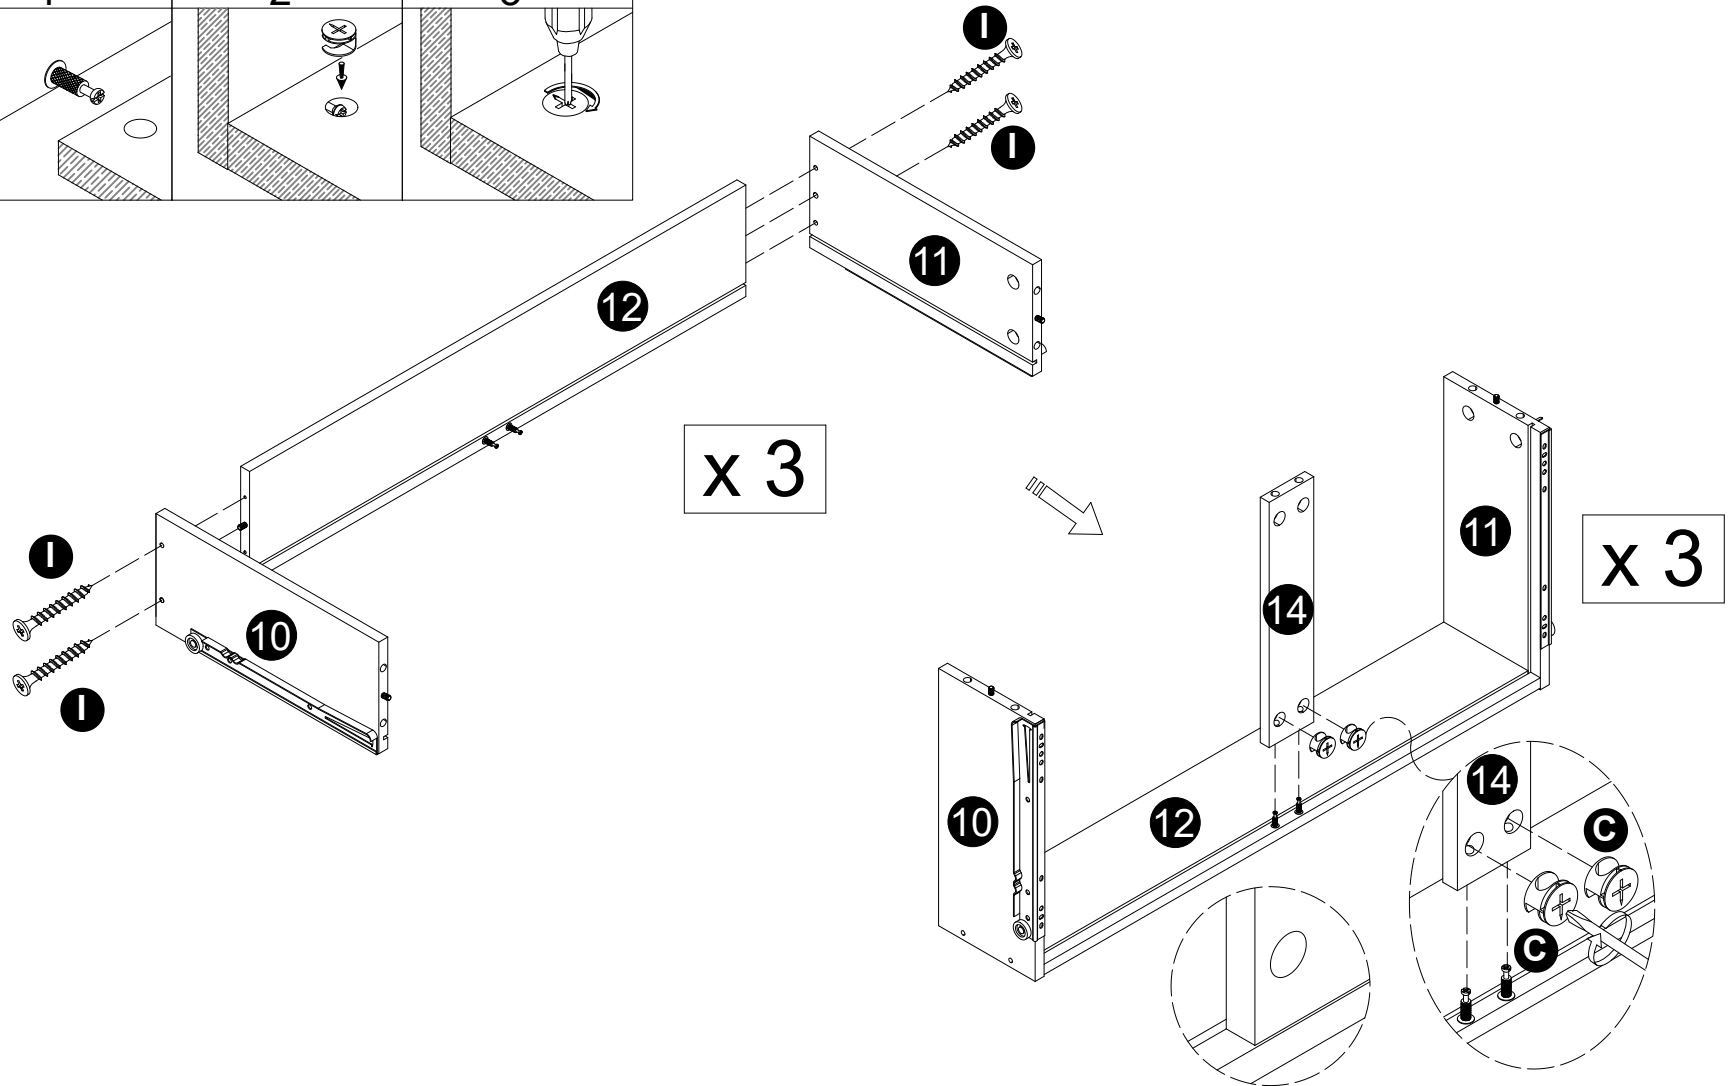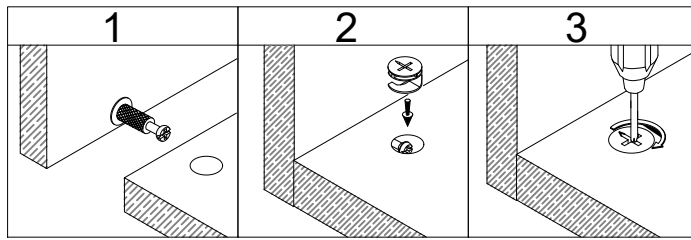


- Attach panels (10,11) to panel (12) with screws (I) correctly.
- Attach panel (14) to panel (12).
- Insert and secure cam locks(C) to panel (14) to lock it.

13

INSTALLATION STEPS

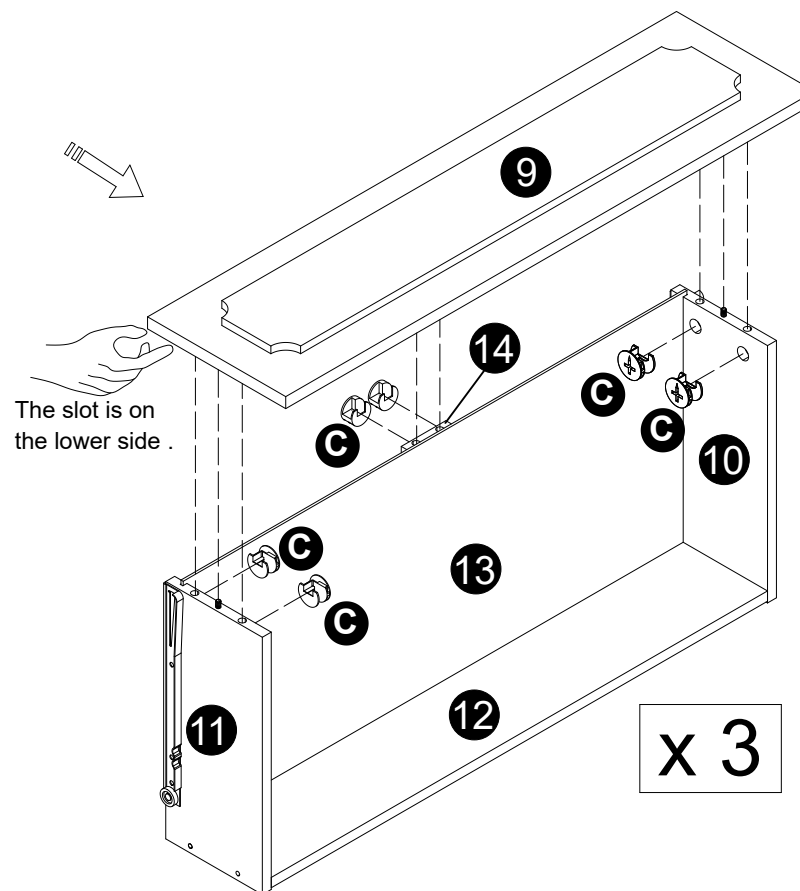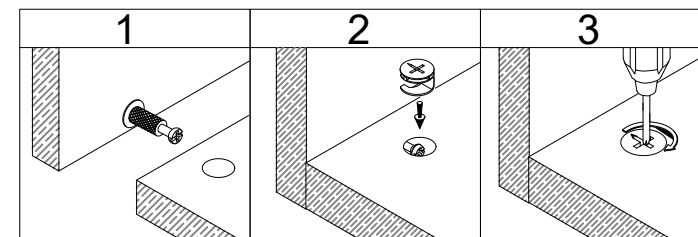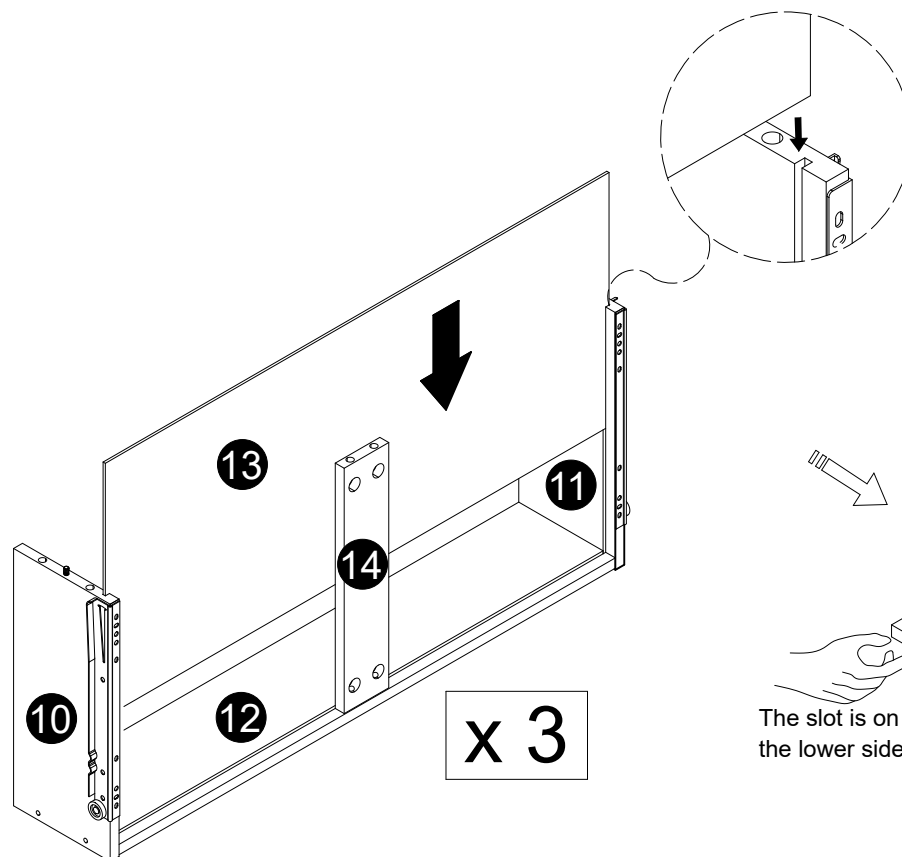

The slot is on
the lower side .


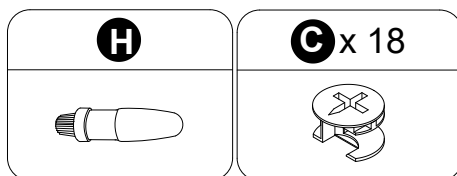


- Carefully slide part (13) into place along the back of the assembly.
- Attach panel (9) to panels (10,11,14).
- Insert and secure cam locks(C) to panels (10,11,14) to lock it.

14



INSTALLATION STEPS

NOTE: Never open more than one drawer at a time.

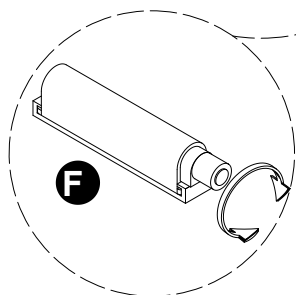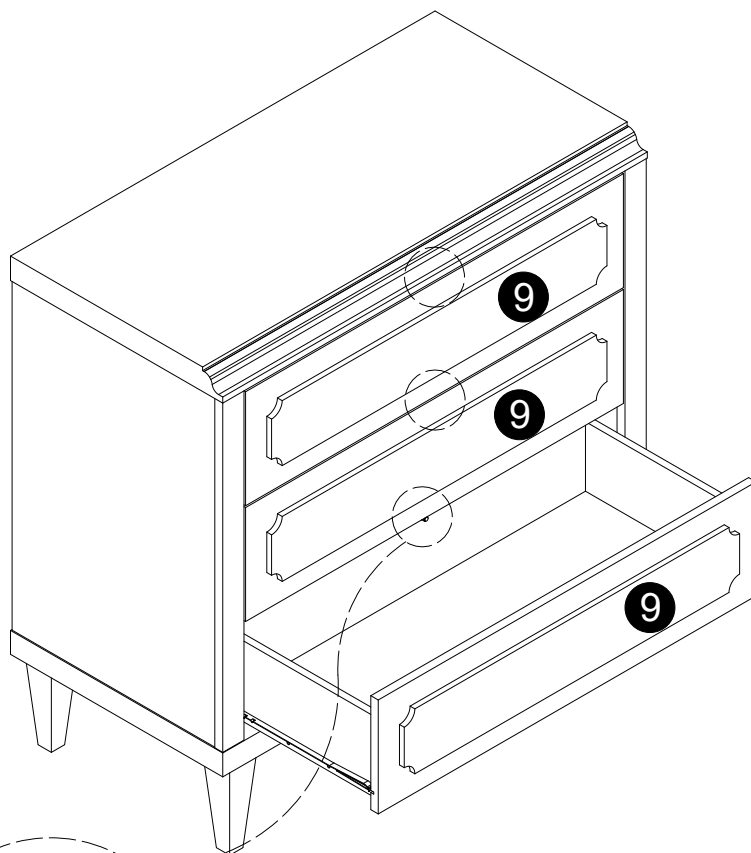


•Adjust part (F) to achieve the door panel is flat.


1.Please ensure that you have matched the wheels on **BOTH** sides of the drawer with the wheels on rails installed **BEFORE** push in the drawer.

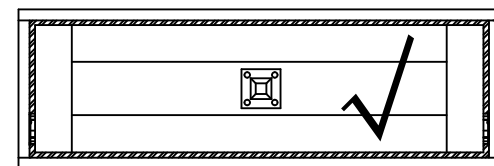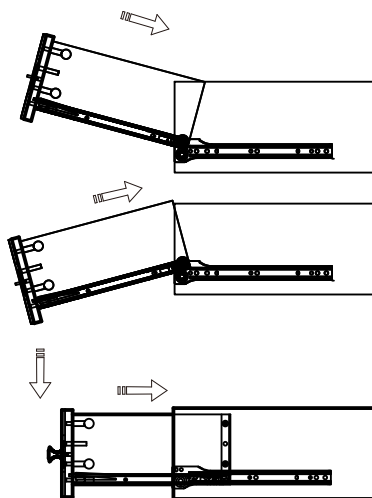

2.If the following occurs, redo the first two step.

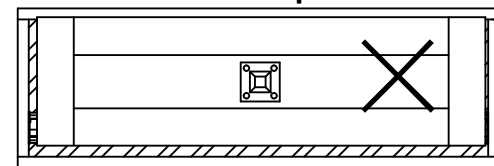

(both wheel are off the rails)

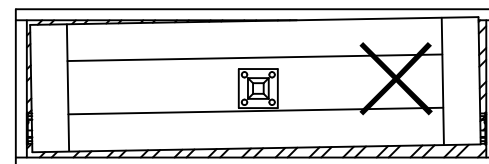


(one wheel is off the rail)

15

INSTALLATION STEPS


Step ①

WALL

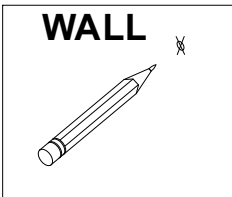

Step ②


WALL

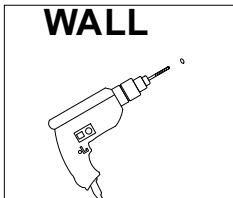


Tools required: Phillips screwdriver, Power Drill, 15/64" Drill Bit and Rubber Mallet.

Step ③



WALL

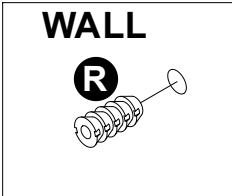

Step ④

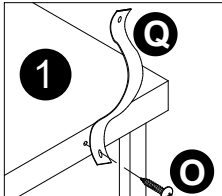

Step ⑤

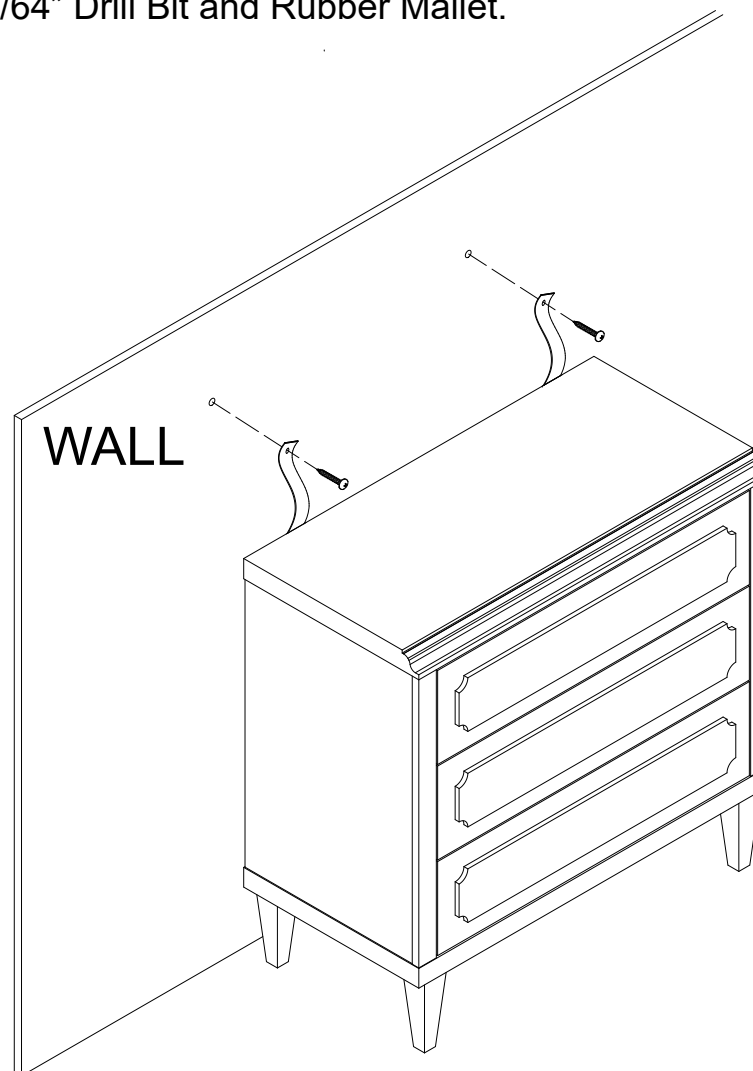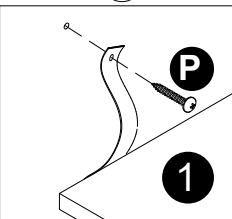

WARNING

Serious or fatal crushing injuries can occur from furniture tipover.

To prevent tipover:

- * Install tipover restraint provided
- * place heaviest items in the lowest drawers
- * Unless specifically designed to accommodate, do not set TV or other heavy objects on the top of this product
- * Never allow children to climb or hang on drawers, door, or shelves.

Use of tipover restraints may only reduce, but not eliminate the risk of tipover

O x 2



P x 2



Q x 2



R x 2



Dear customer:

Thanks for your purchase in our store.

Any questions, please contact us via Support @ s-wampat.com with below details:

- 1. Purchase platform & order number**
- 2. Model number & Instruction version#**
- 3. The detailed photo (faulty part, damage part, if some parts are missing,
please circle it/them on the manual instruction) and send to us.**

wampatTM



We'll reply as soon as we receive your message (usually within 24 hours).