
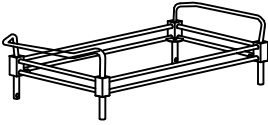
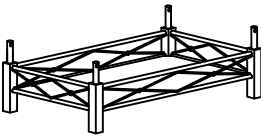





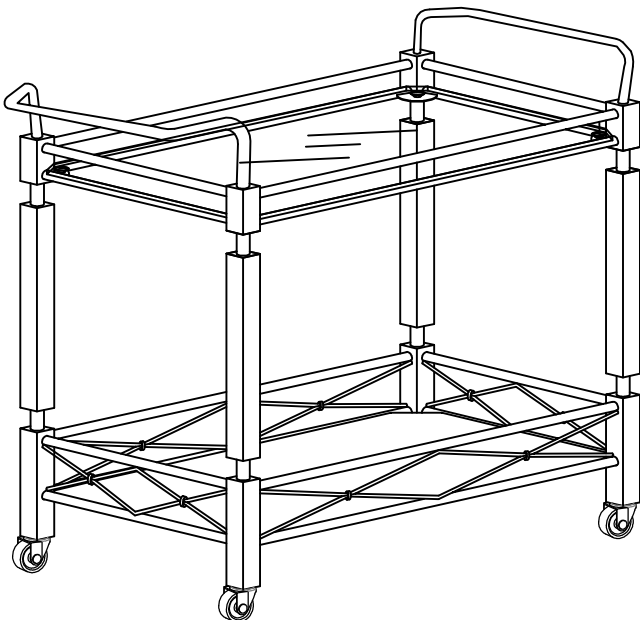


ASSEMBLY INSTRUCTION

ANTIQUE BRASS FINISH CLEAR TEMPERED GLASS METAL KITCHEN CART


A Top Frame	B Bottom Frame	C Leg	D Top Glass
			
1 pc	1 pc	4 pcs	1 pc
E Screw	F Suction Cup	G Castor	H Open End Wrench
			
15mm 8 pcs	4 pcs	4 pcs	1 pc



This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1

Face down top frame (A), leg (C) and bottom frame (B) as shown in the drawing. And insert leg (C) into the connecting inner tube of top frame (A) and bottom frame (B).

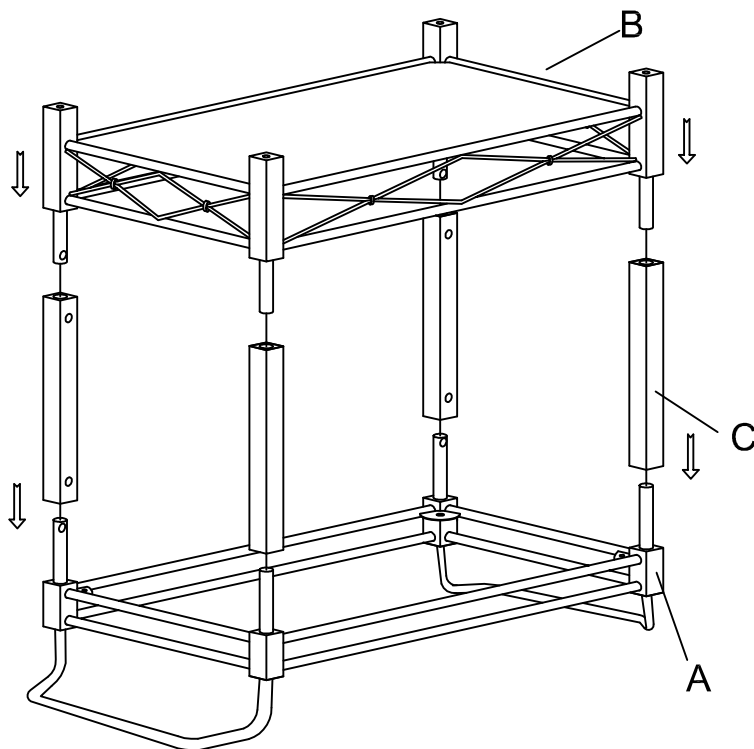


2

Assemble leg (C), bottom frame (B) and top frame (A) with screw (E) with screwdriver (not provide). Then screw in castor (G) into the hole of tube end of bottom frame (B) and tighten with open end wrench (H).

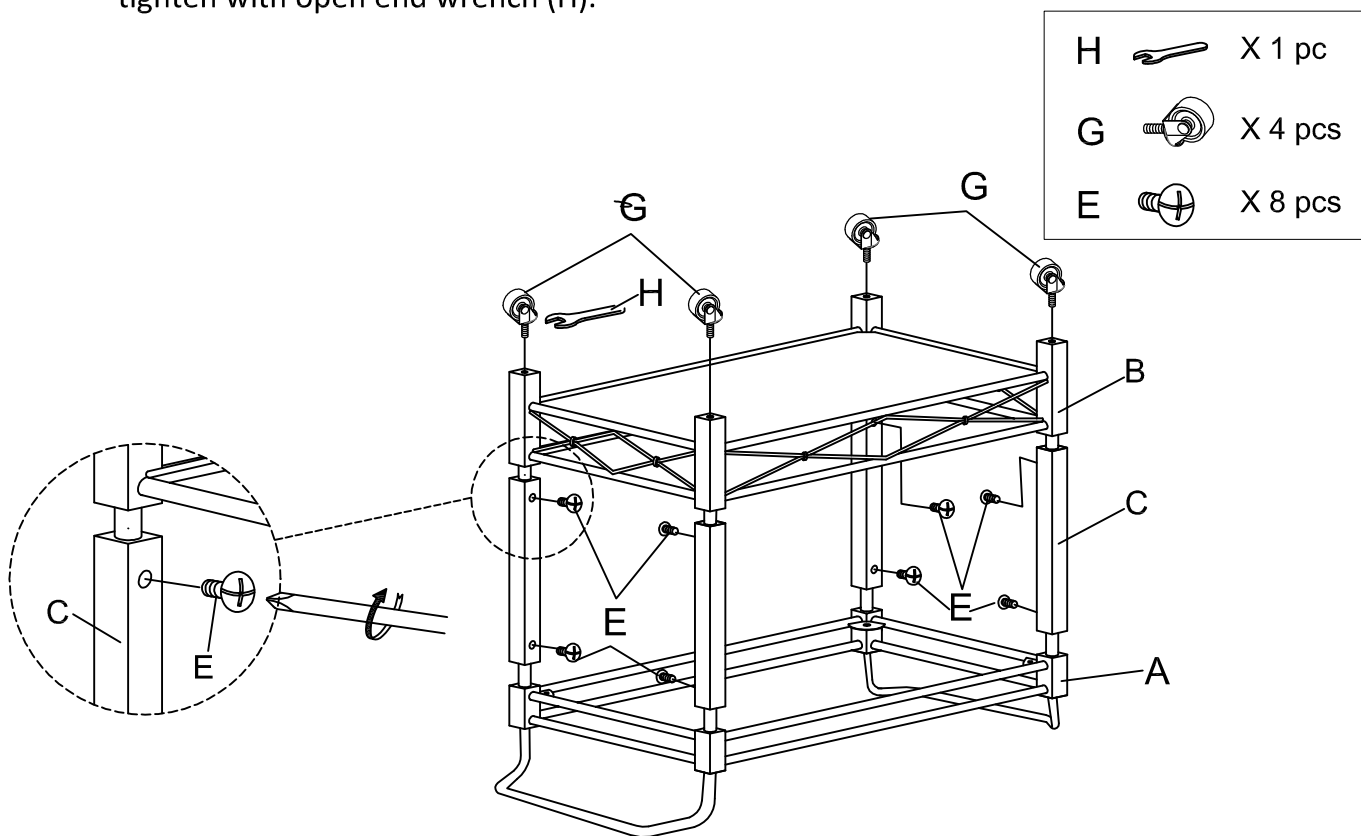

3

Upright the bar cart as shown in the drawing and place suction cup (F) in the corner tab of top frame (A). Then put glass (D) on the top frame (A).

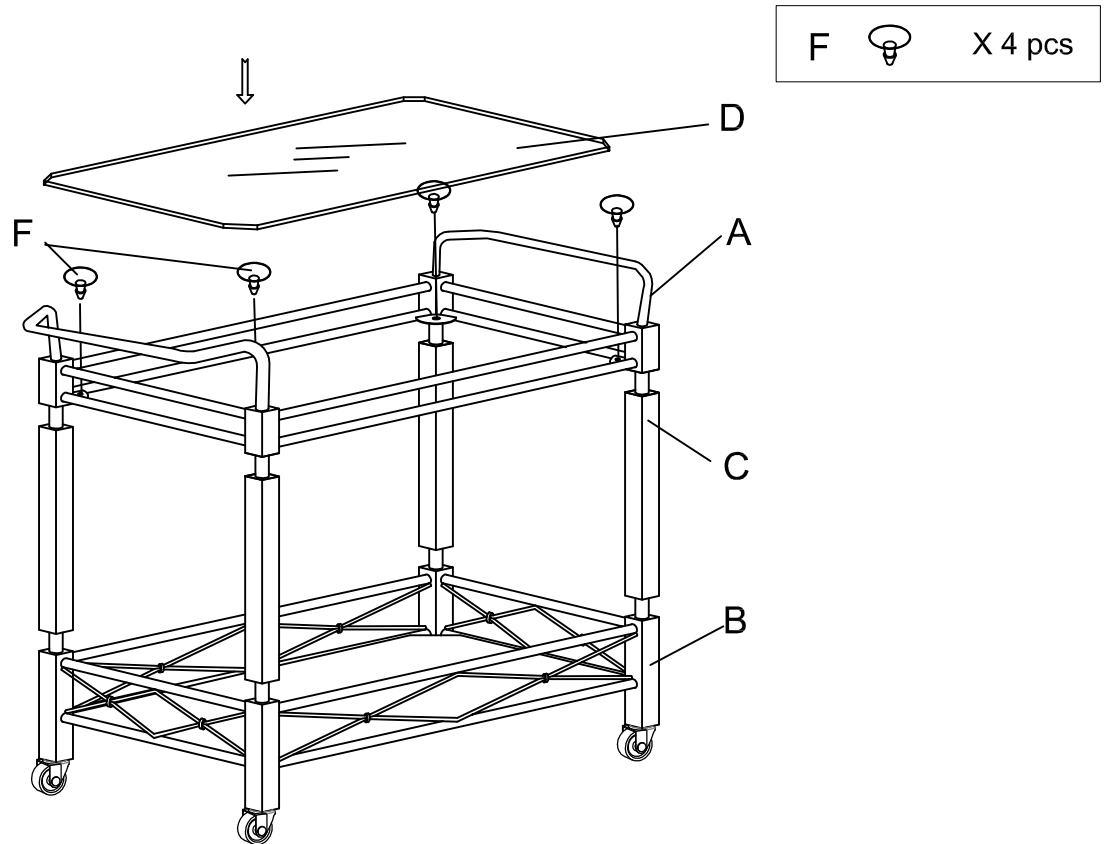

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.