
ASSEMBLY INSTRUCTION

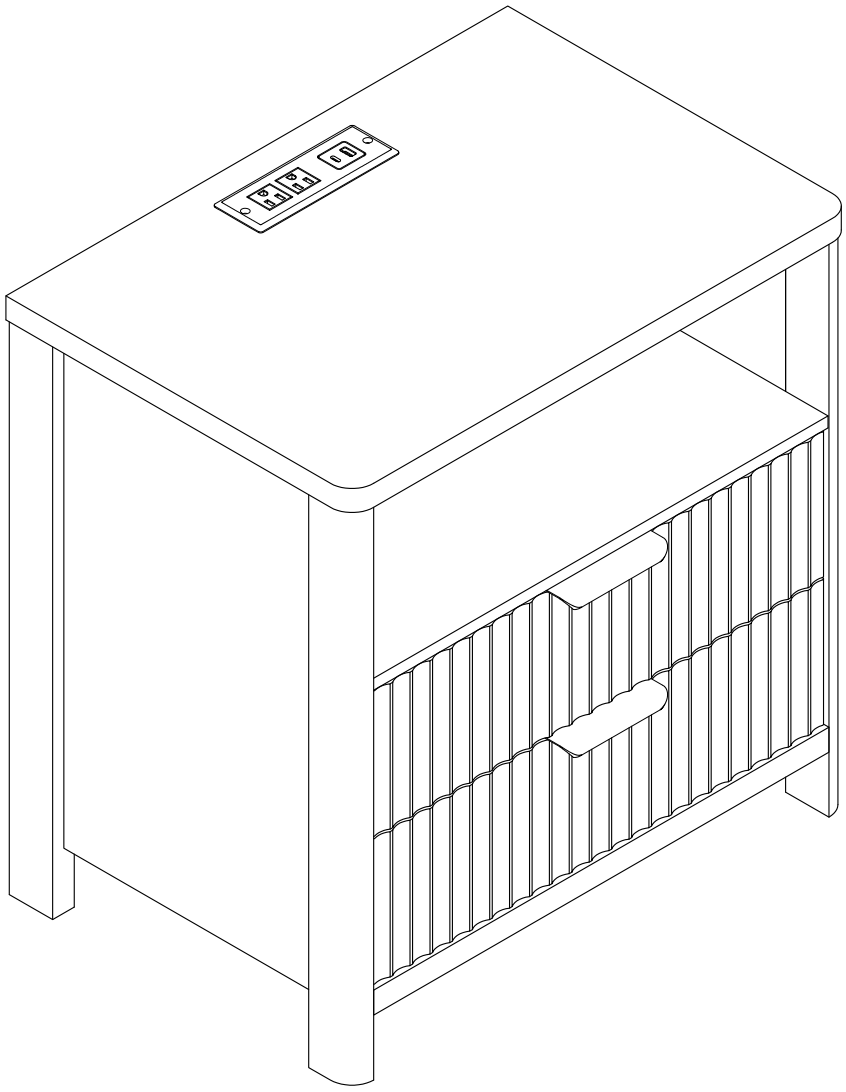

After-sales Service

Dear customer,

We're excited that you've chosen our product to be a part of your home. We care deeply about your experience and want to make sure you have all the help you need.


If you have any questions while assembling your new product, don't hesitate to contact our dedicated customer support team through the original purchase platform.

Creating your ideal space is important, and we're committed to helping you every step of the way.

Thank you for choosing us, where comfort and style meet practicality.












Sincerely,
Customer Service Manager

Packaging Details

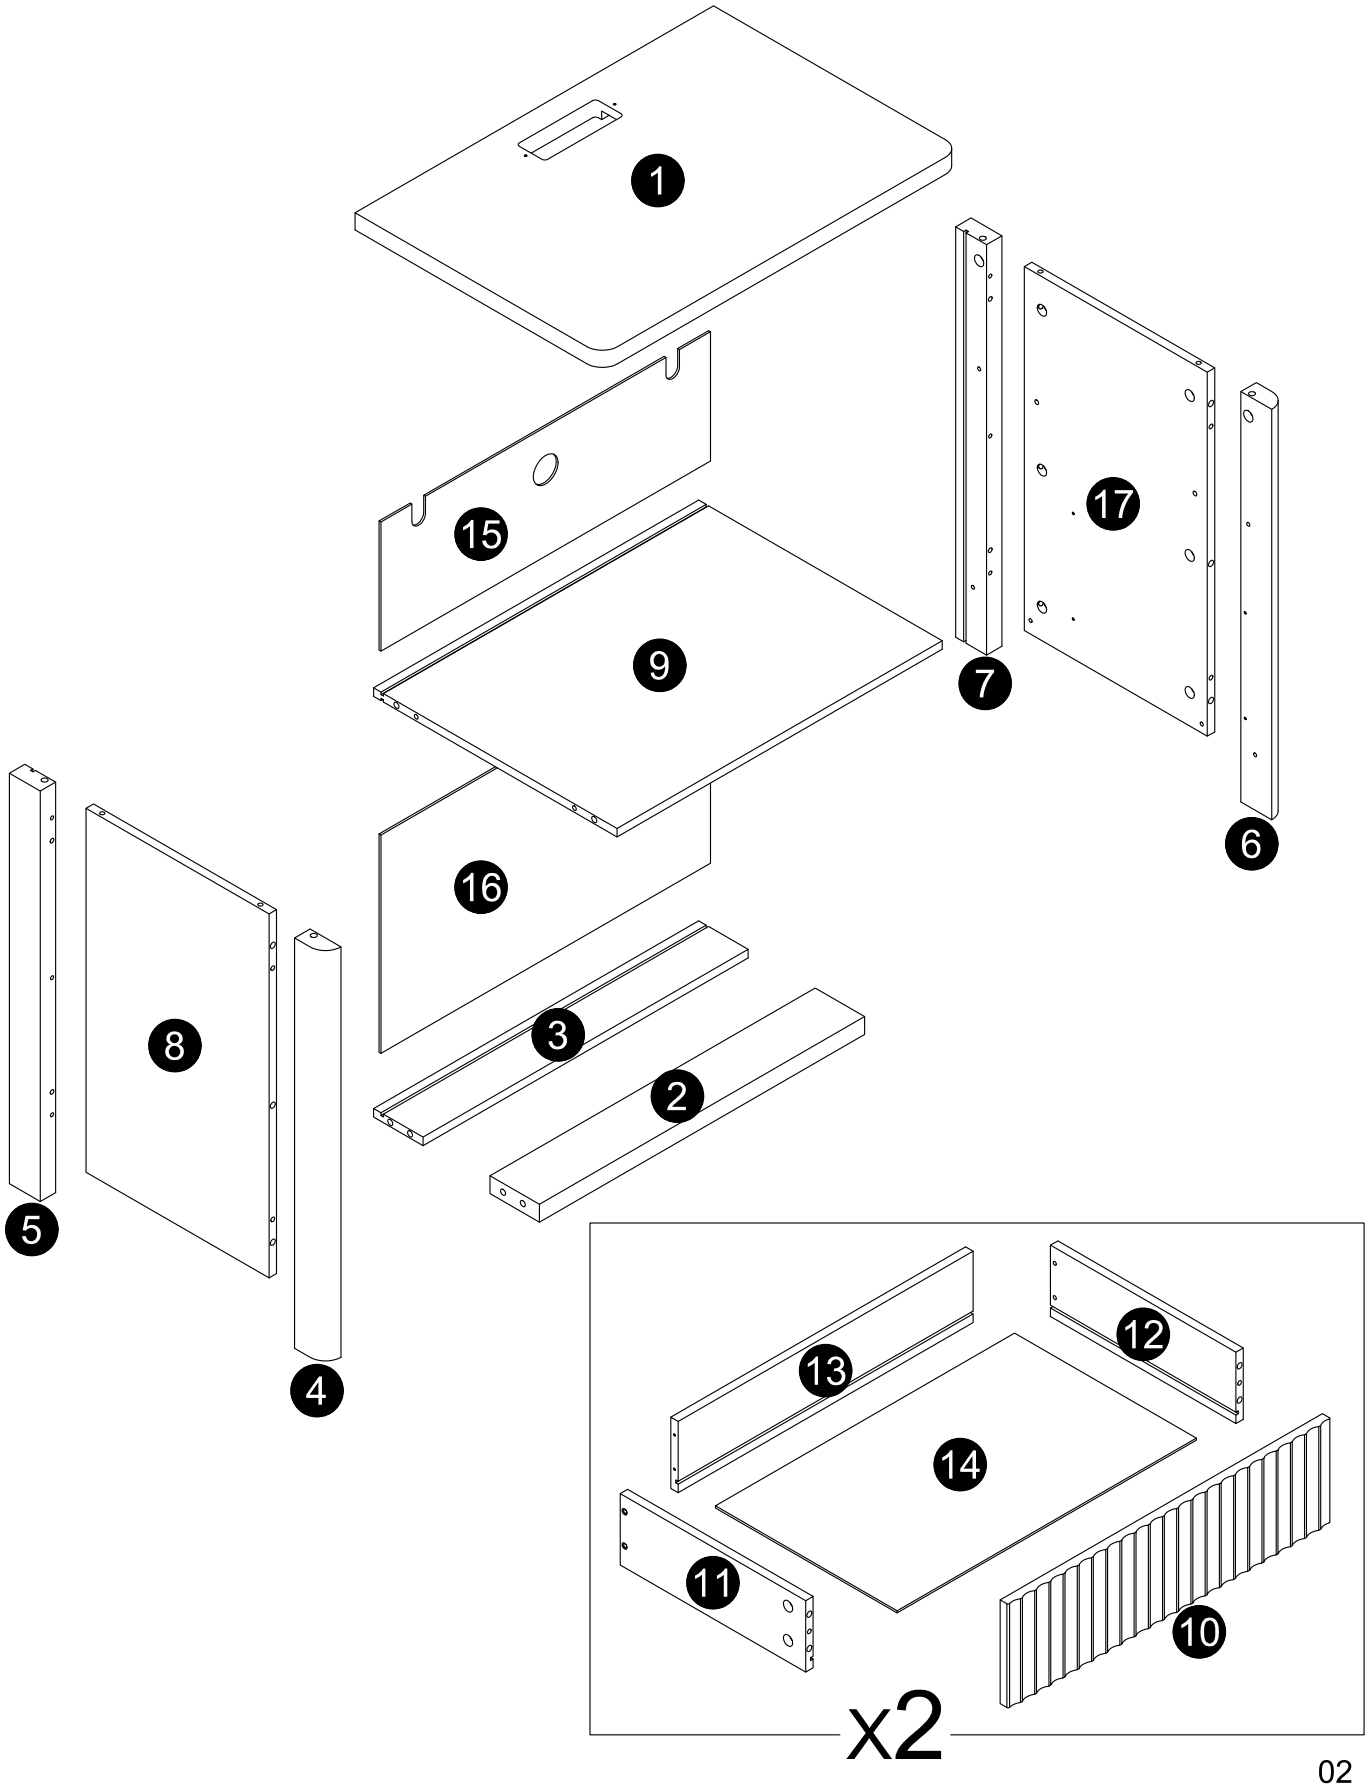


Please check all parts and accessories according to the parts list befor assembling,make sure all contents are sufficint and in good condition.
If there is any parts missing or defective, please contact us immediately with purchase platform message to get replacement parts.

PARTS:

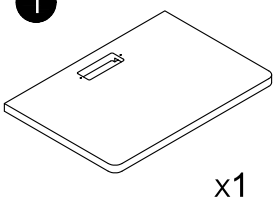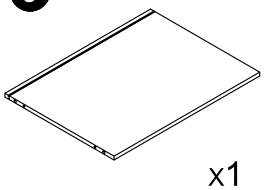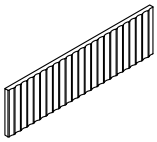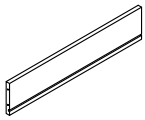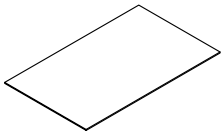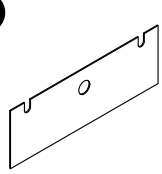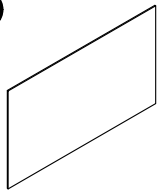1  x1	2  x1	3  x1	4  x1
5  x1	6  x1	7  x1	8  x1
9  x1	10  x2	11  x2	12  x2
13  x2	14  x2	15  x1	16  x1
17  x1			

A

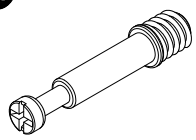

6x35mm x36

B



Ø15x9mm x36

C



6x30mm x20

D




L=300mm x2

E



3x12mm x24

F

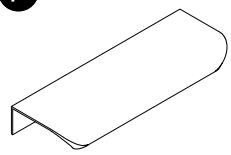

x2

G




4x12mm x2

H



4x40mm x10

I

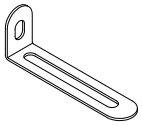


x2

J



x2

K




3x14mm x6

L




x6

M




x20

N




3.5x12mm x2

O

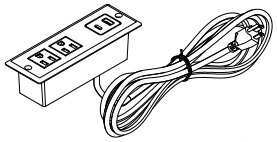

x1

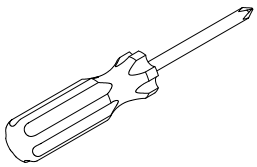


x1

HOW TO INSTALL


NOTICE:

1. Use electric drill for easier installation experience.
2. Please drive the screws in pre-drilled holes.
3. Please strictly follow the instruction and diagram in every step.
4. Make sure every part is on the right position, otherwise it may cause unnecessary problem.
5. Select the proper component via the label on every part while assembling.

REMAEK:

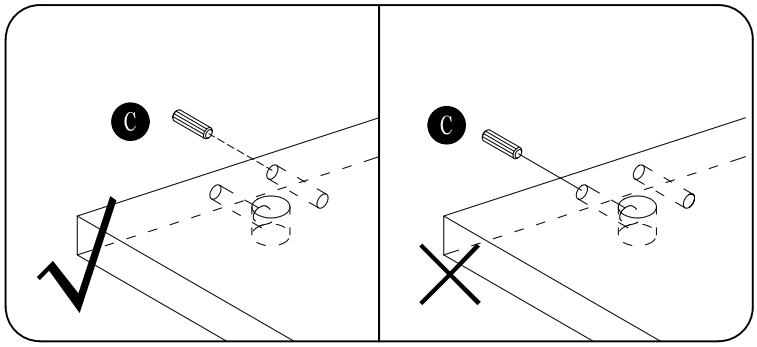


Avoid inserting part C into wrong holes.

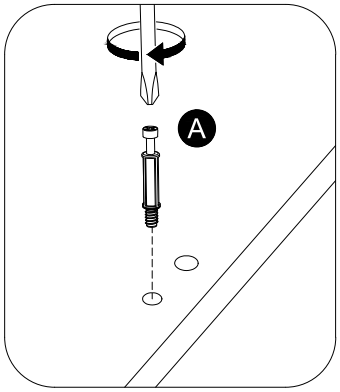


Part A must be installed into the holes with rubber nuts which are smaller than others.


Make sure that part A is facing the direction of part B opening.


When locking part B, please make sure part A is fully inserted.

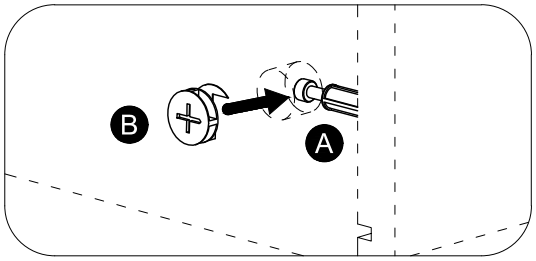


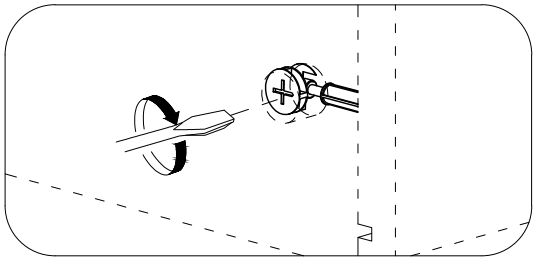


Step 1

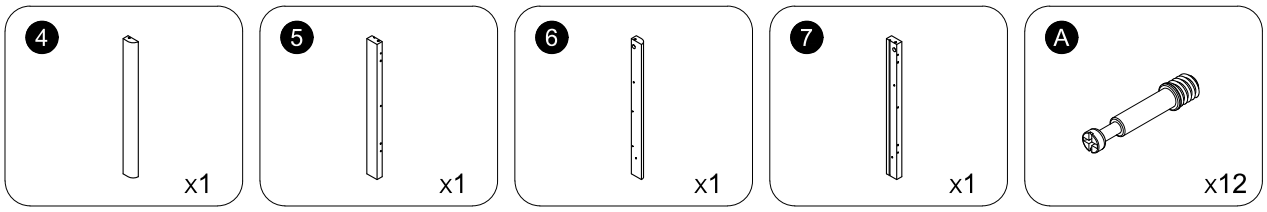


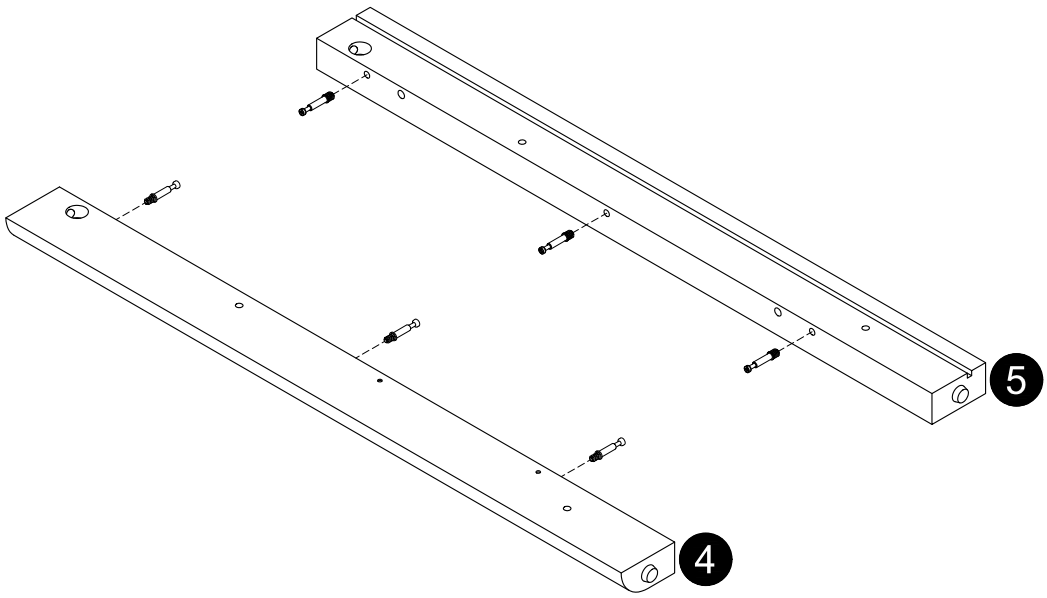

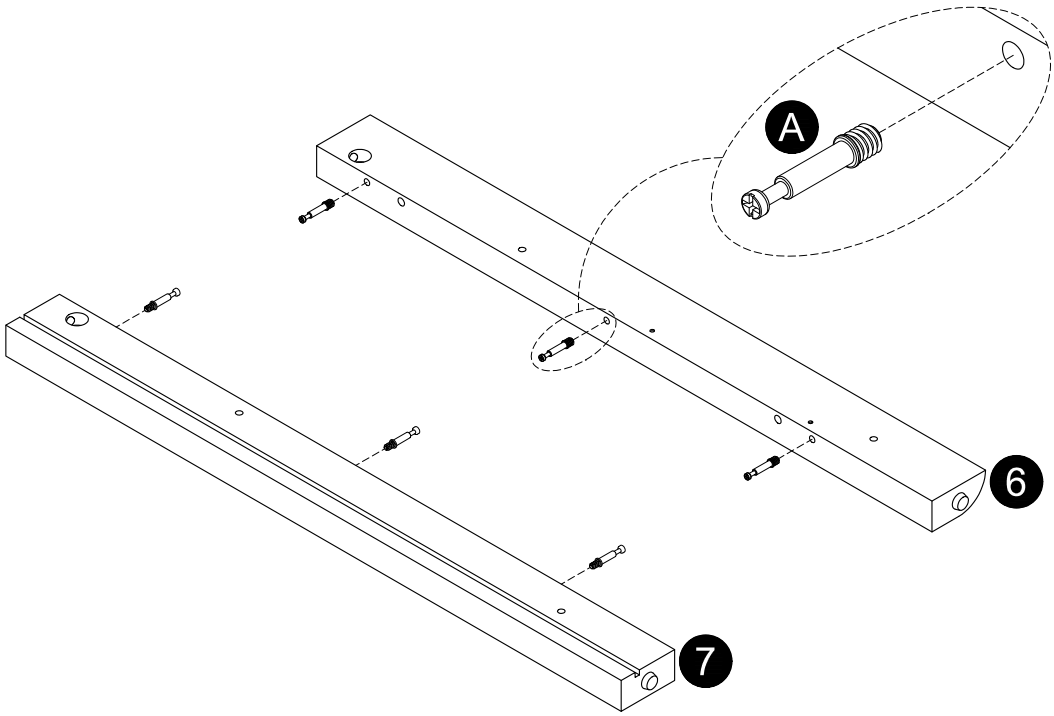



Step 2

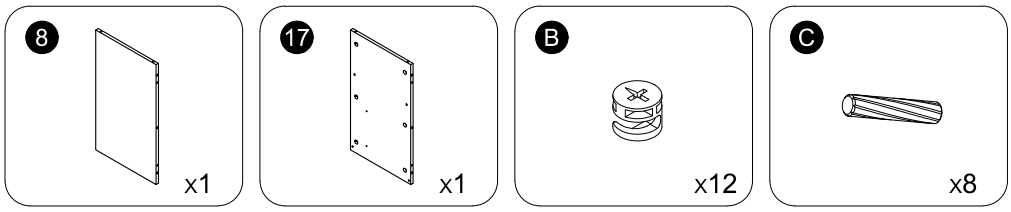


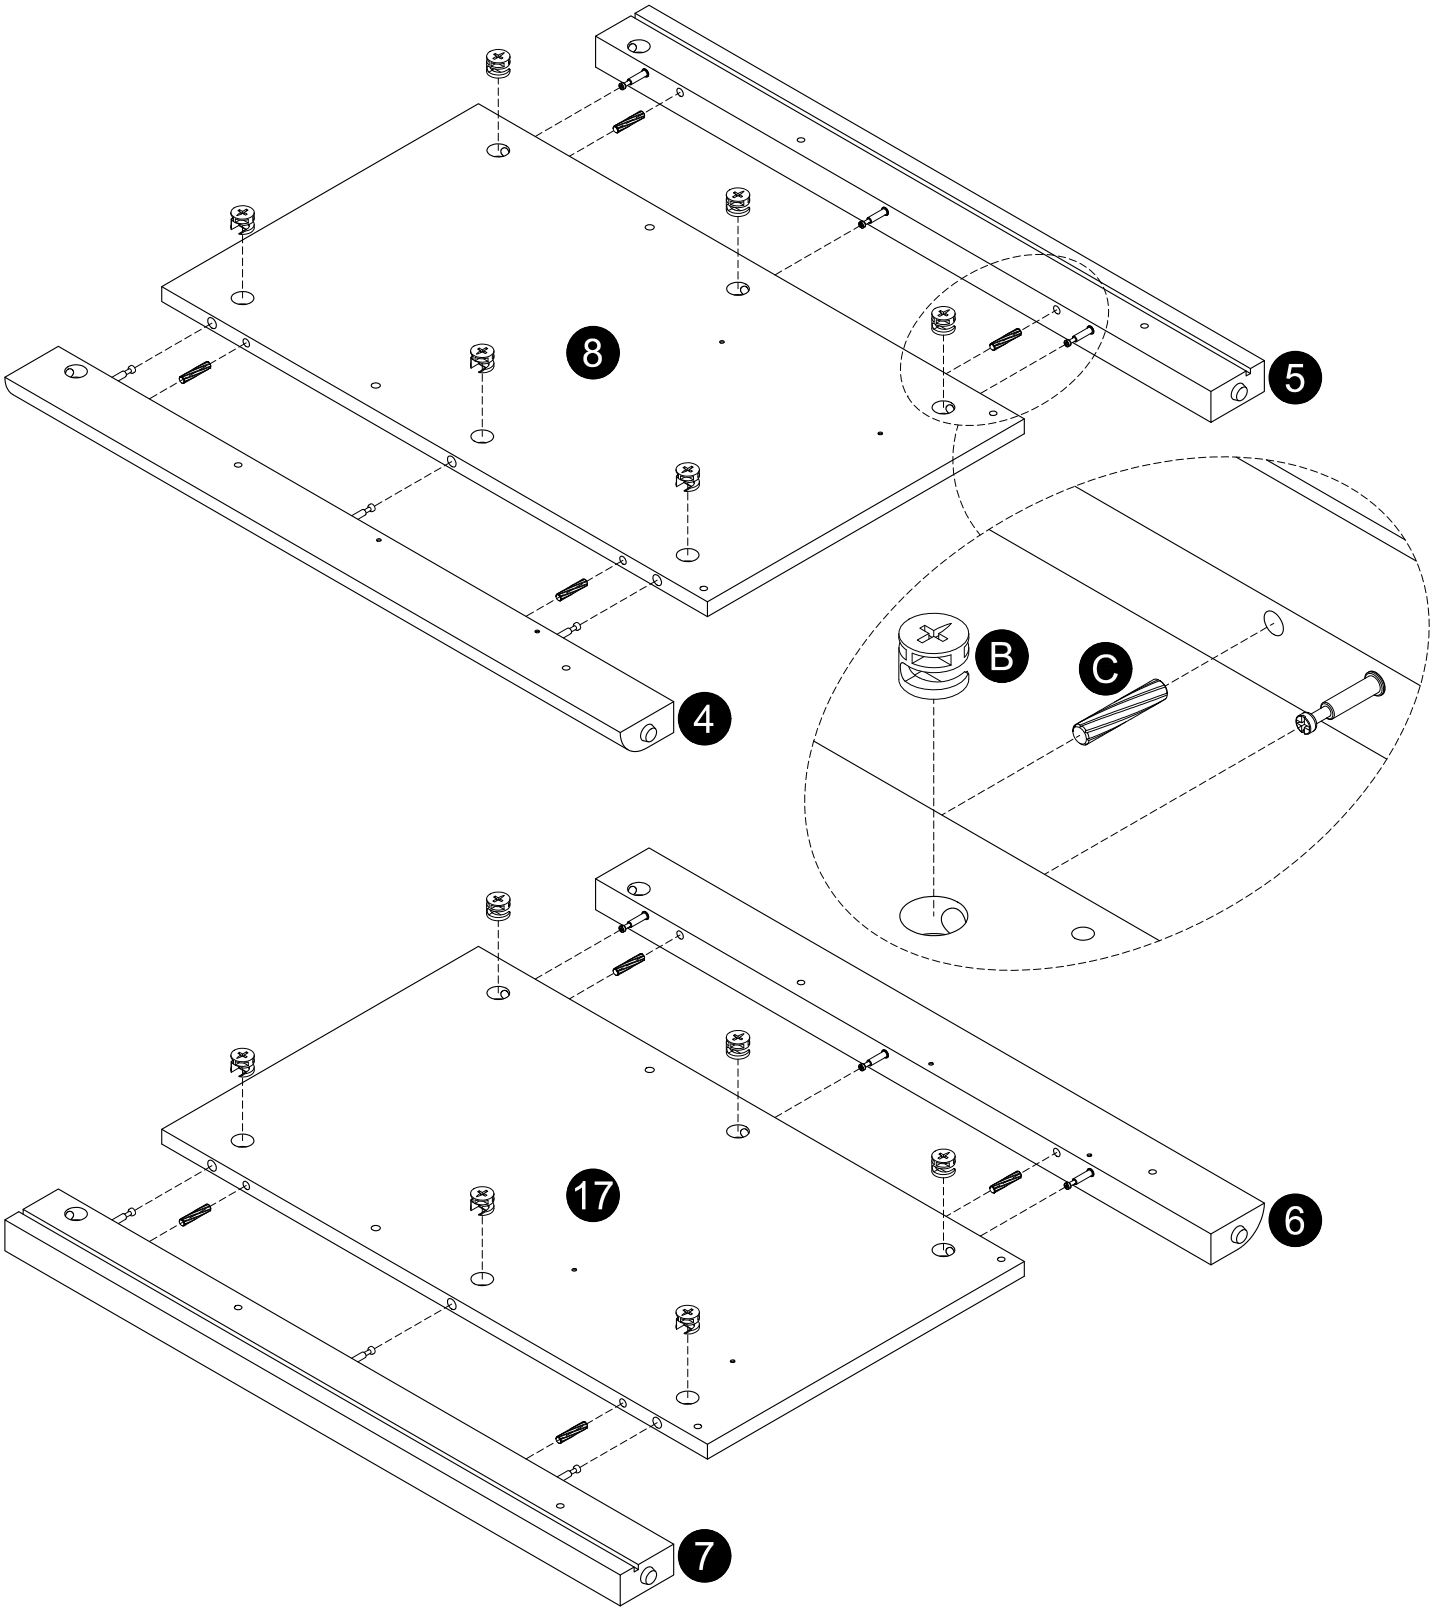


Step 3

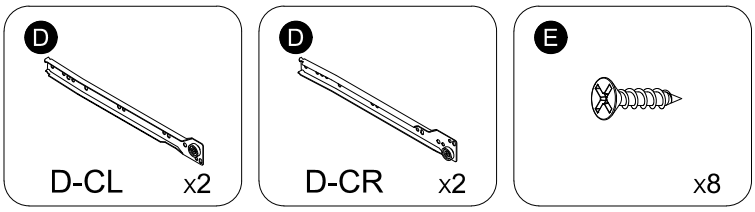


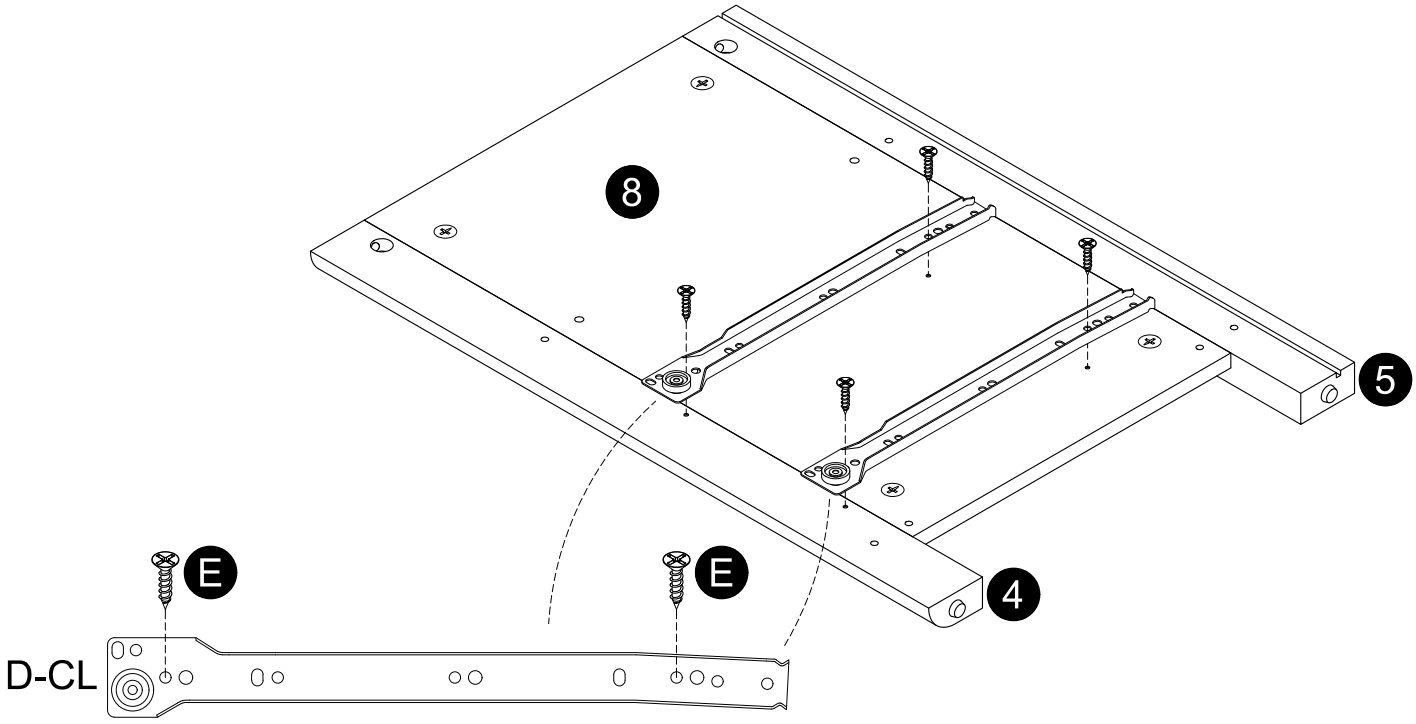

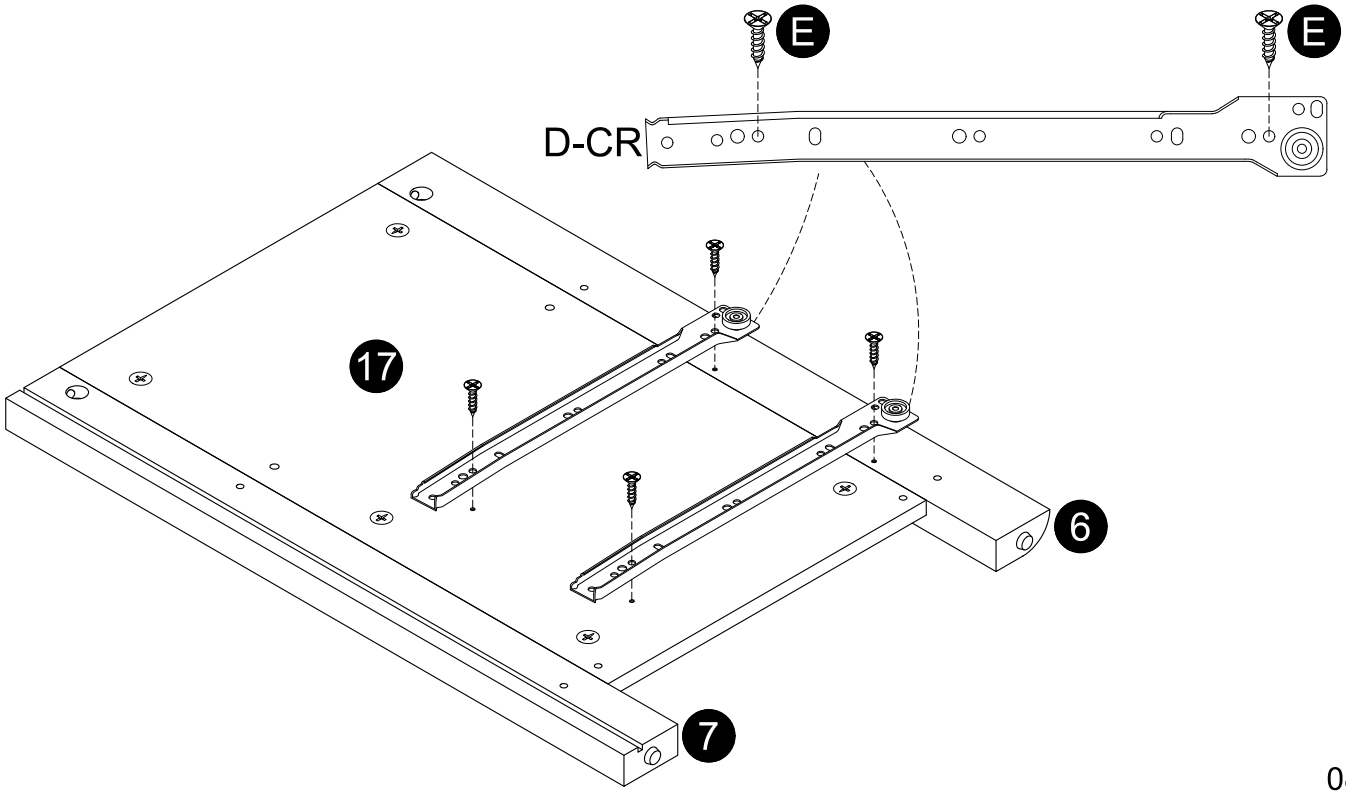



Step 4

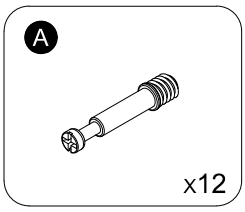

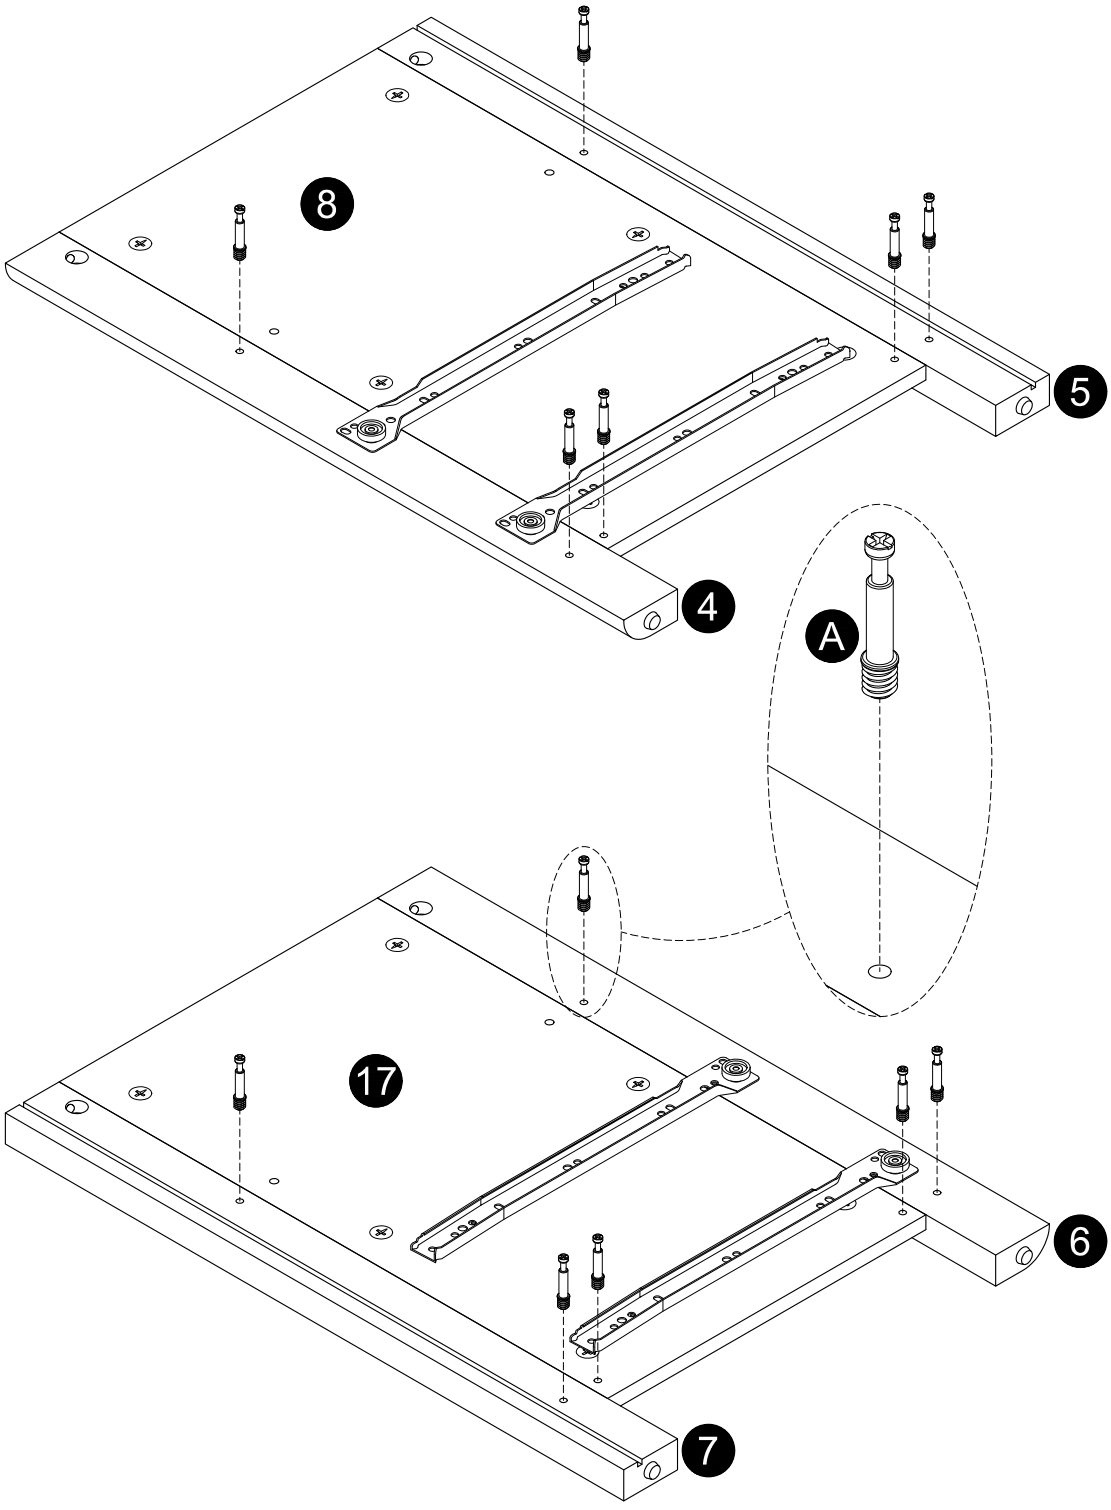


Step 5

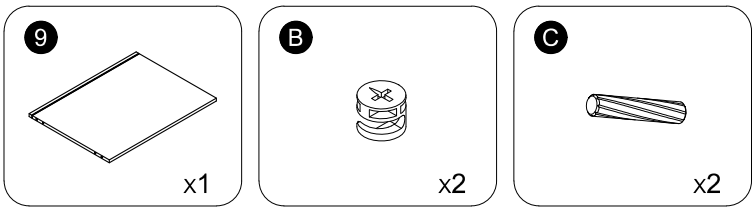


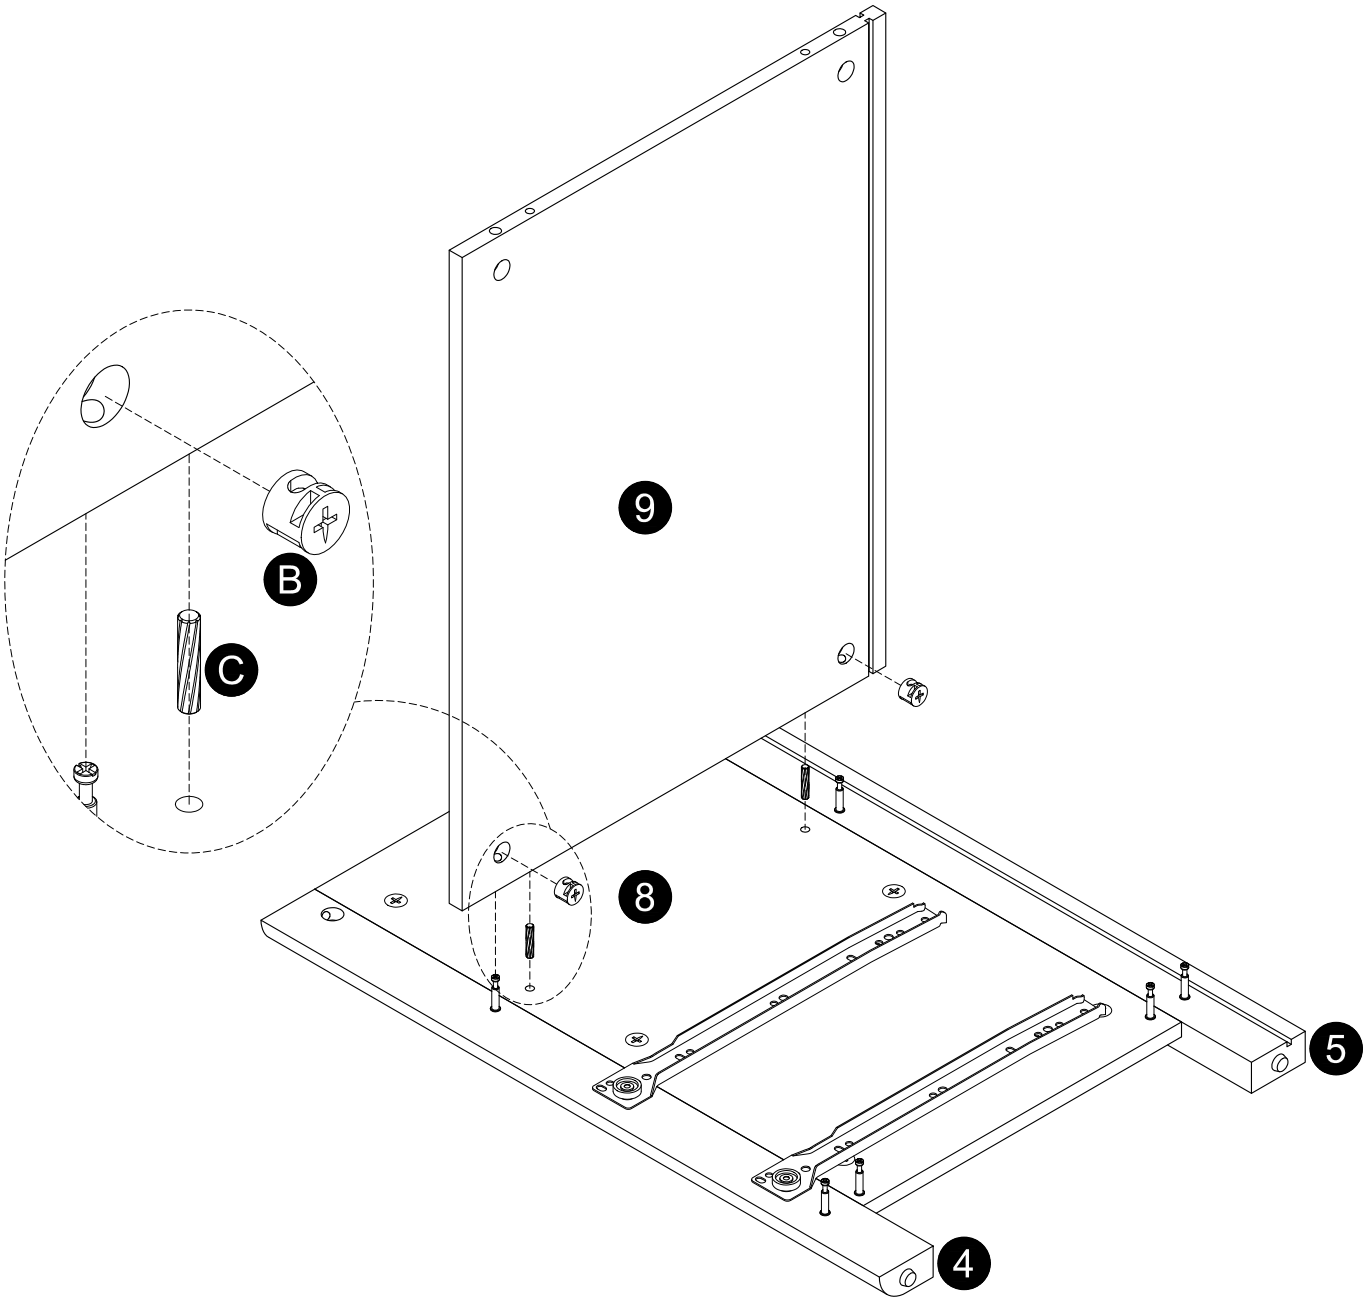


Step 6

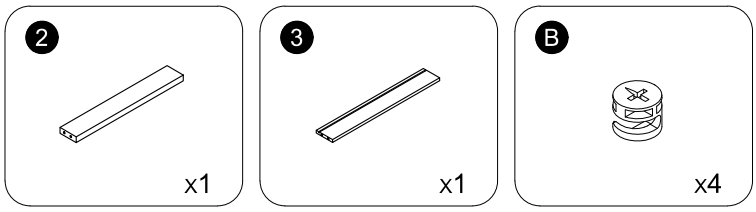


Note the orientation of boards 2 & 3 so that their outer edges are aligned with the frame.

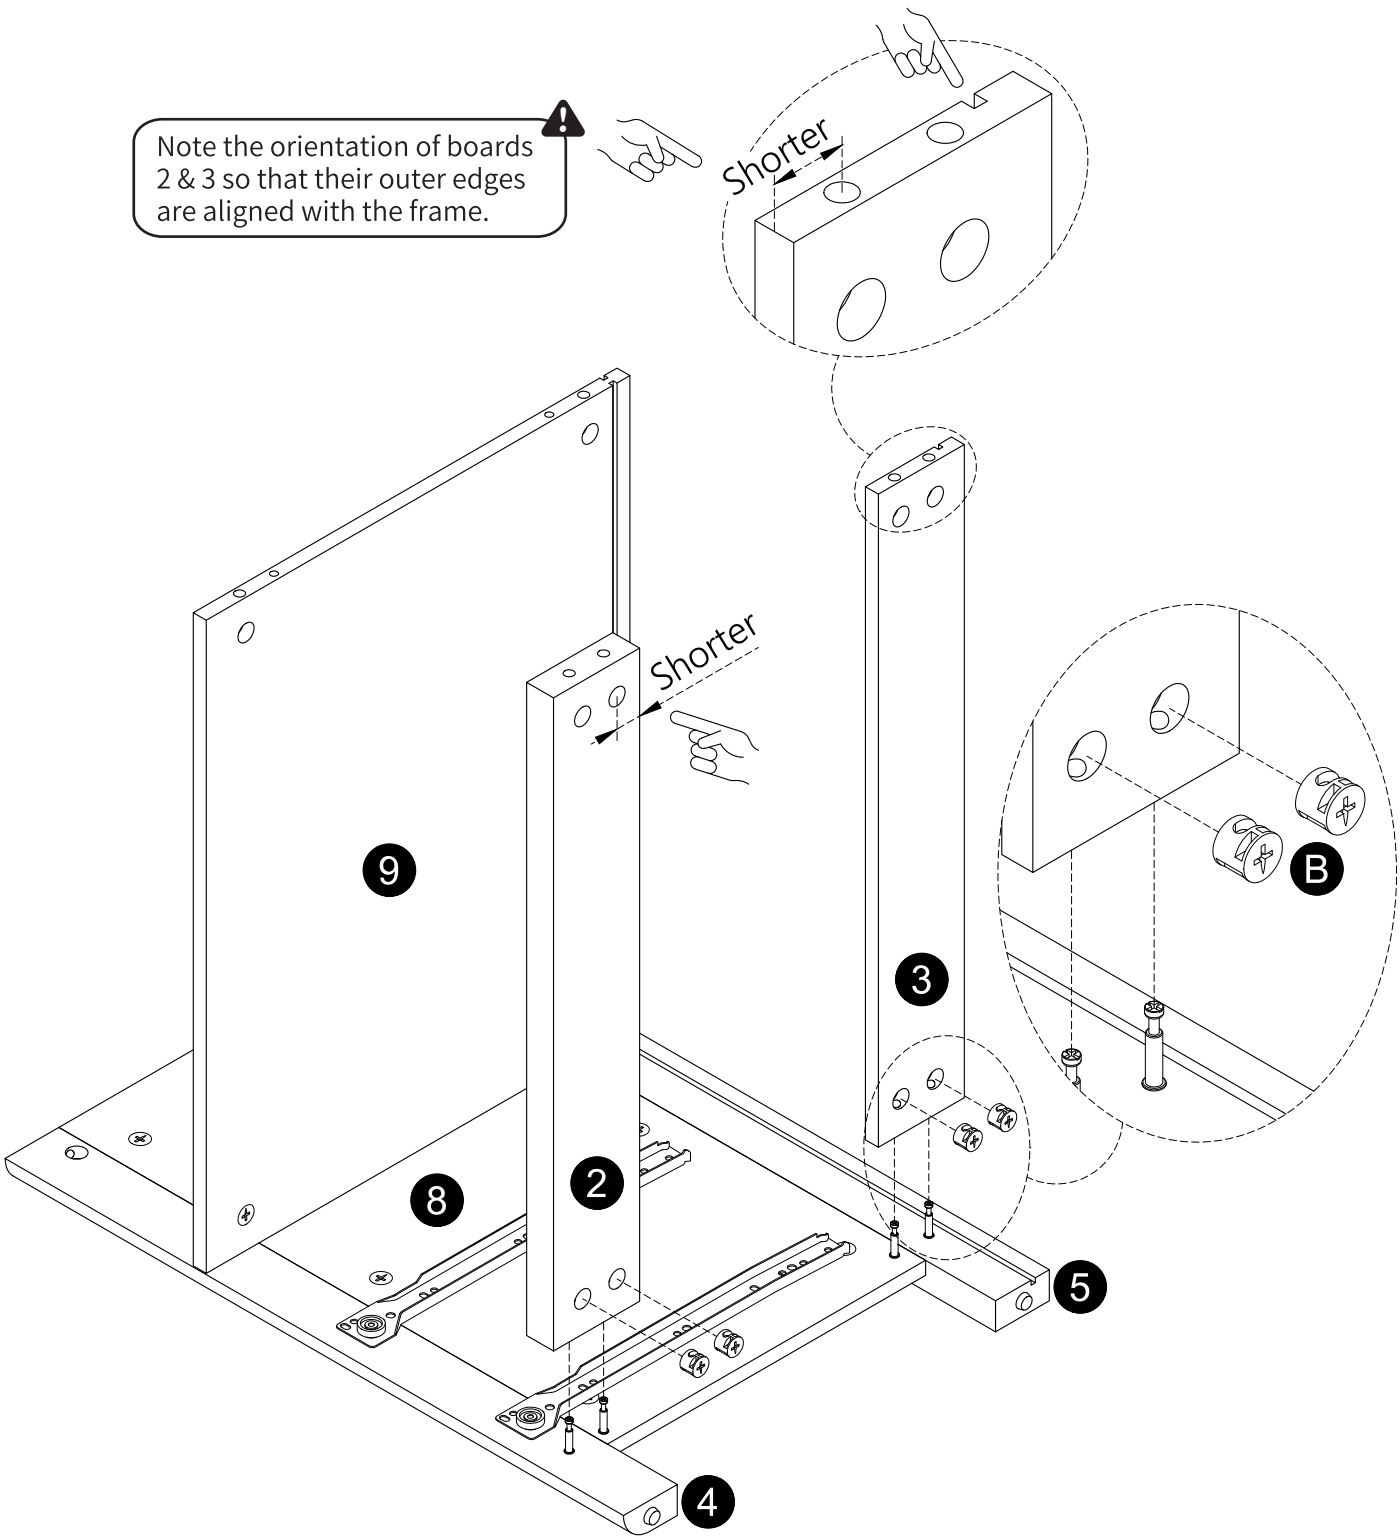



Step 7

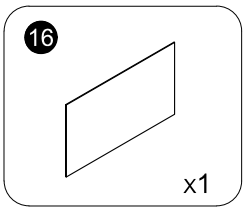

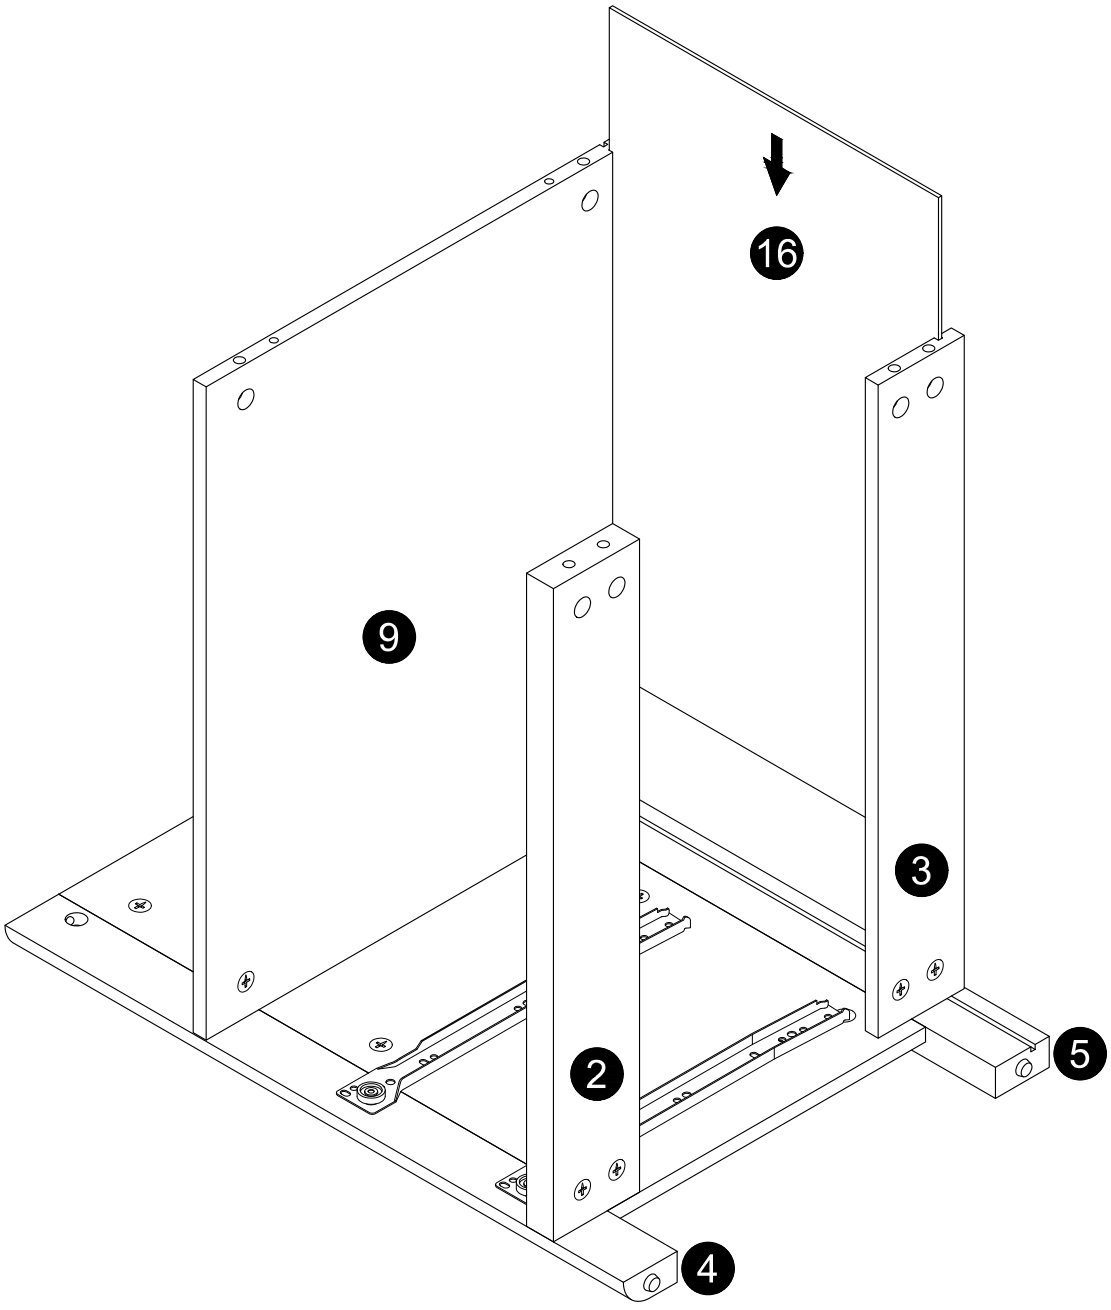



Step 8

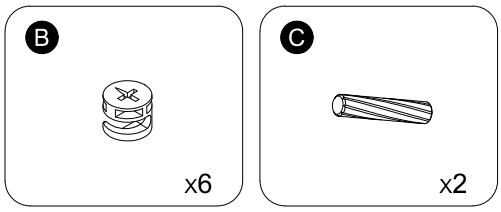

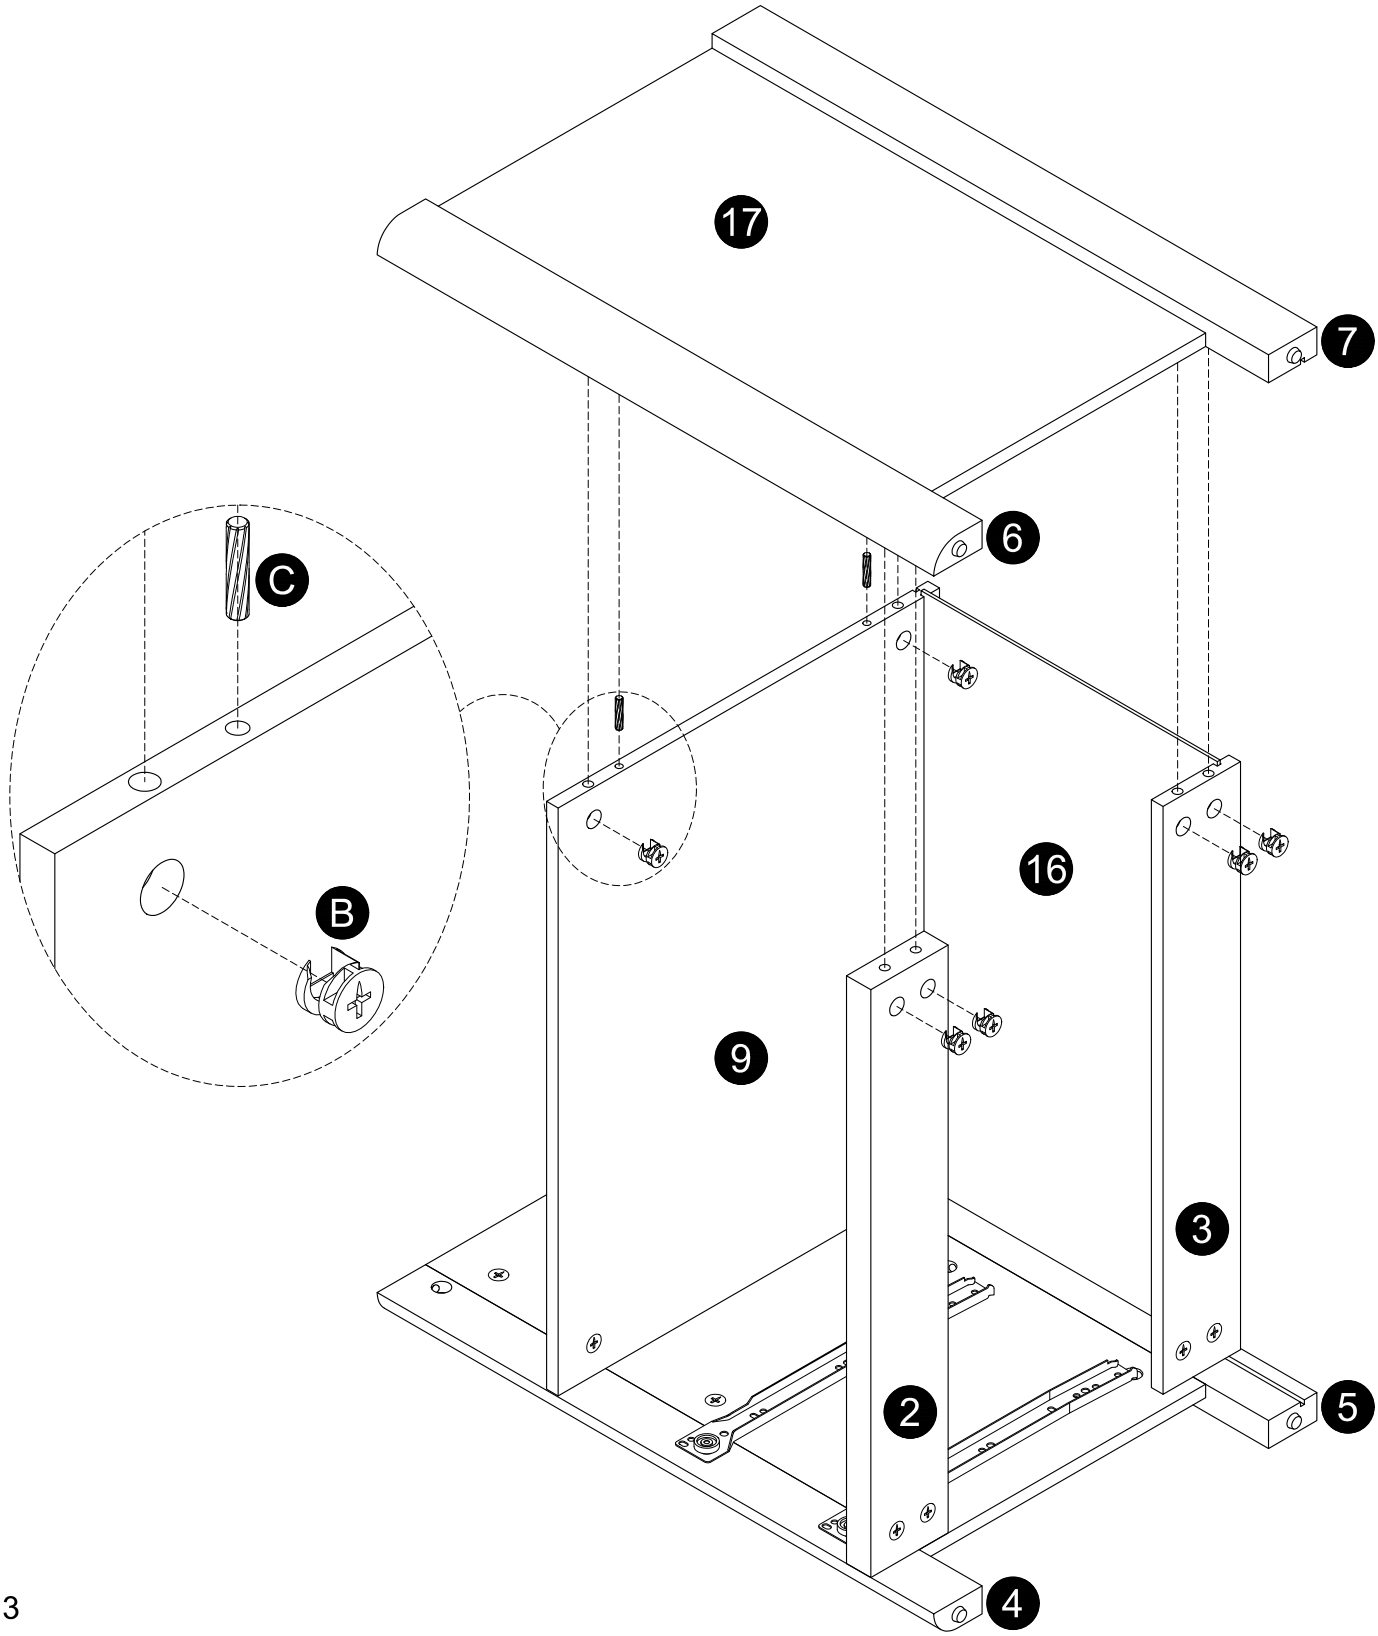



Step 9

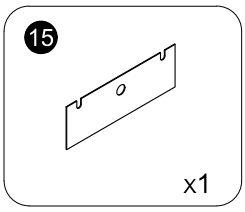

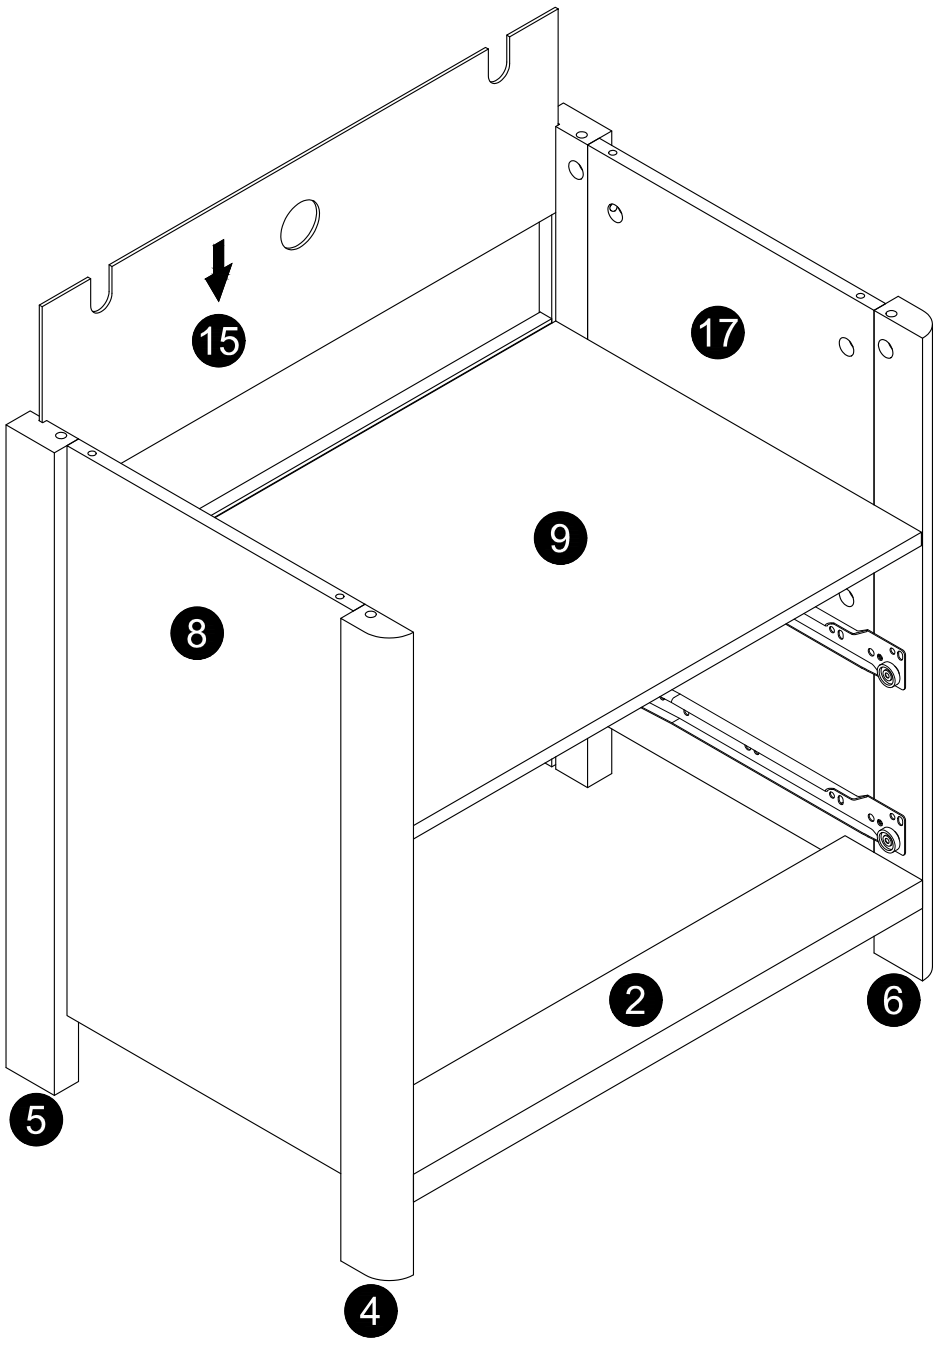



Step 10

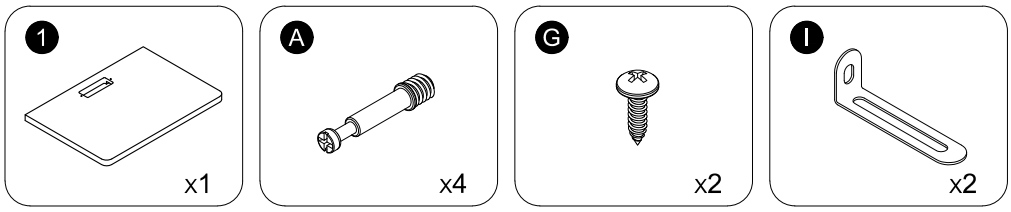

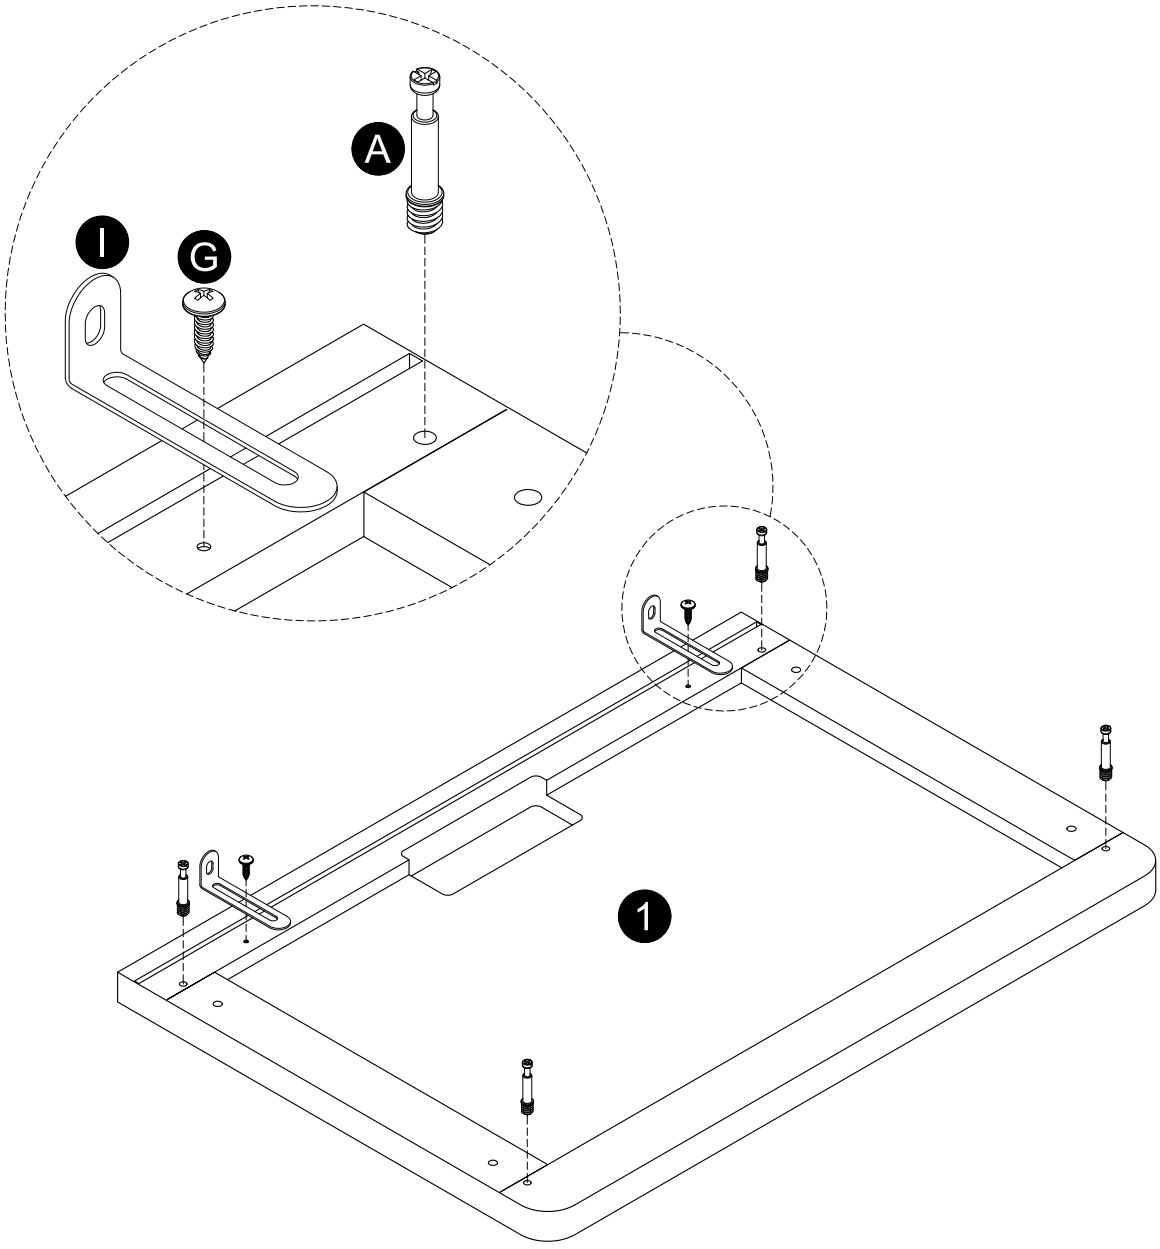



Step 11

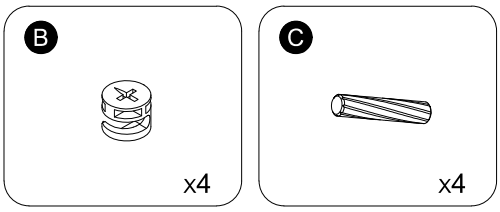


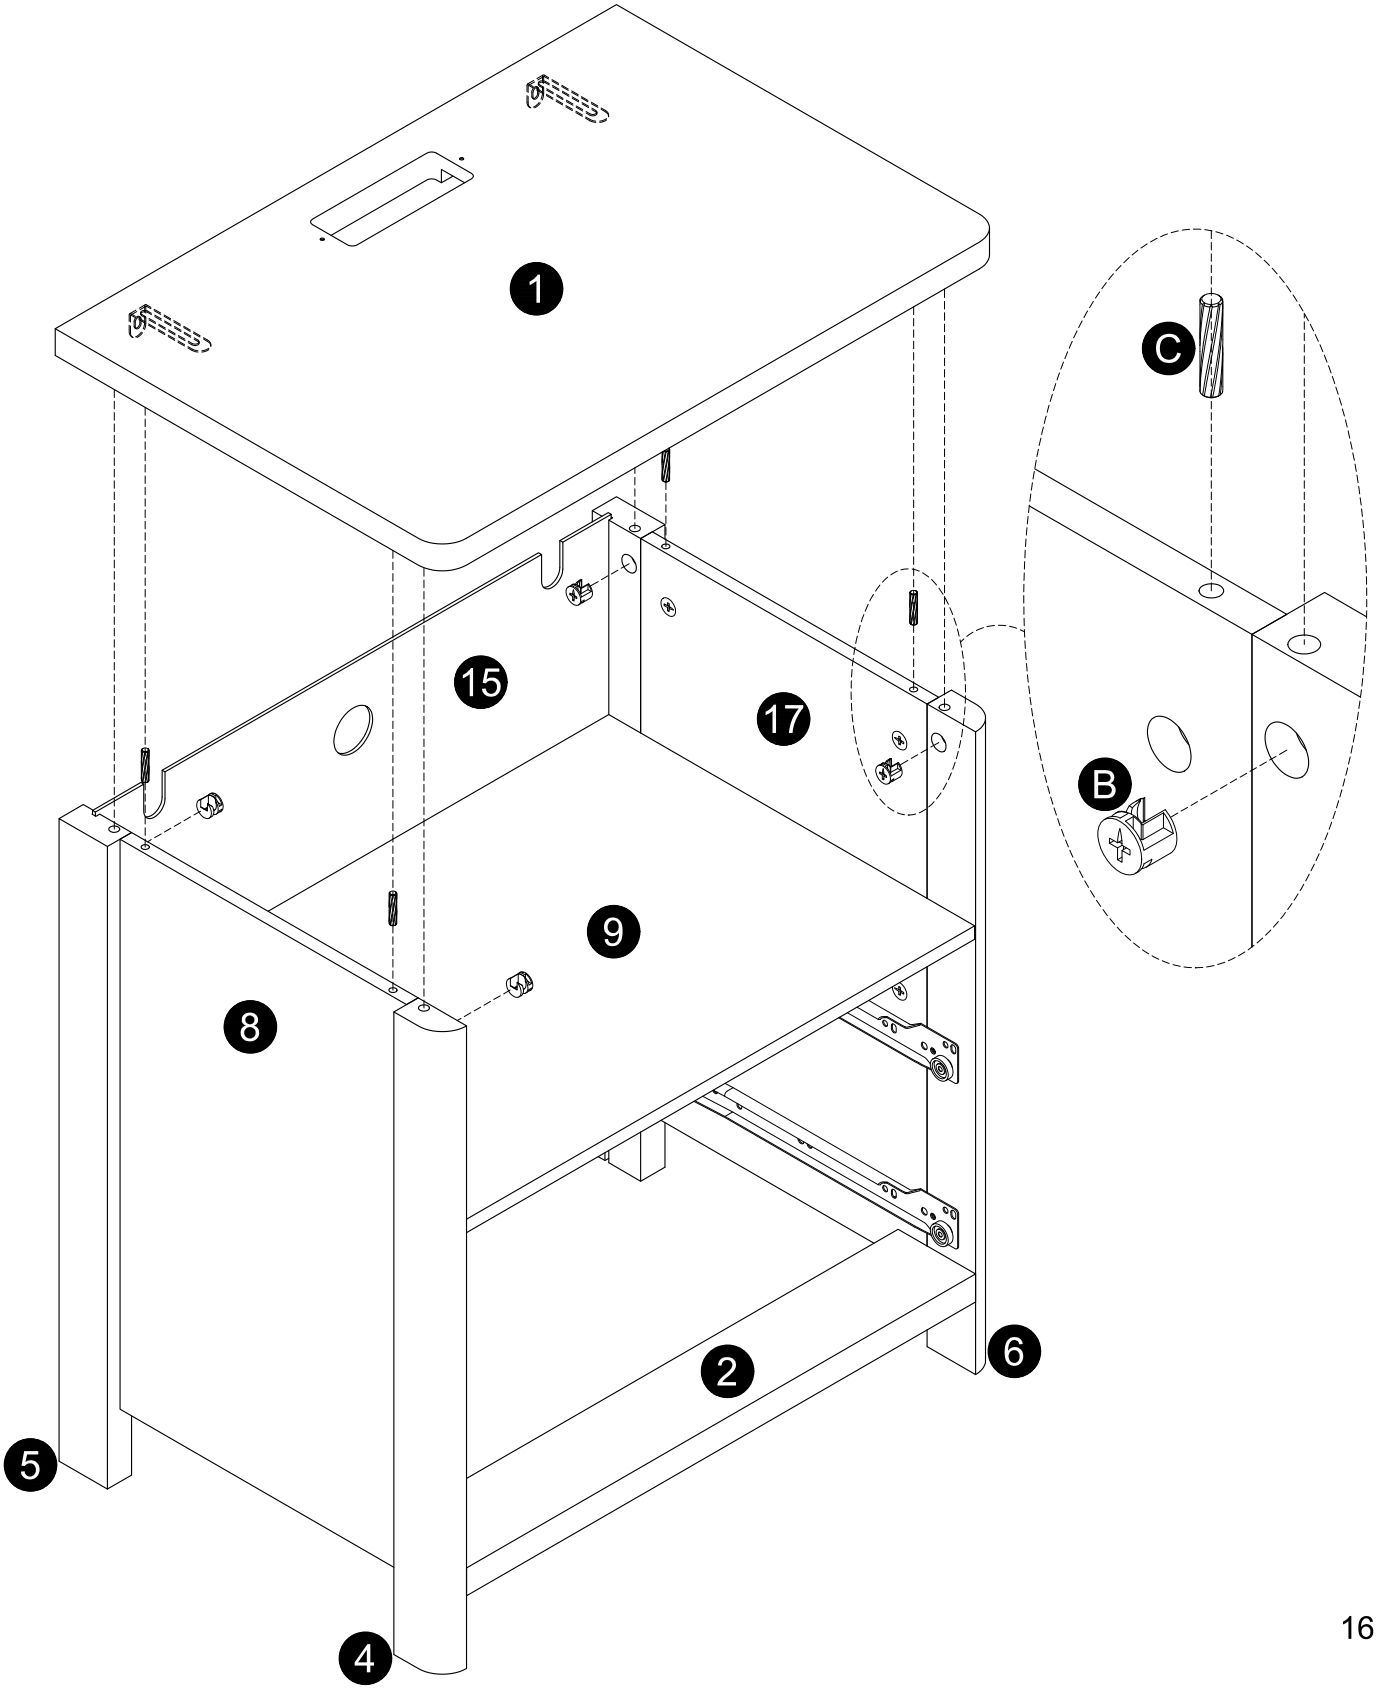


Step 12

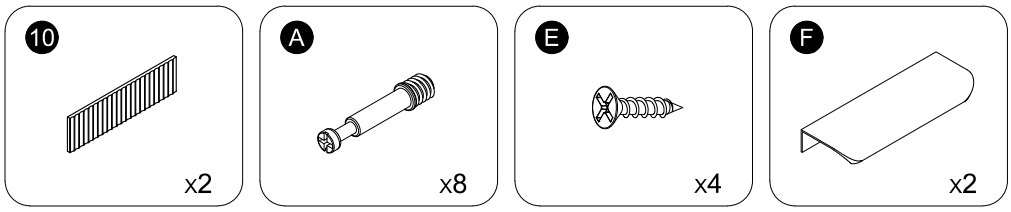


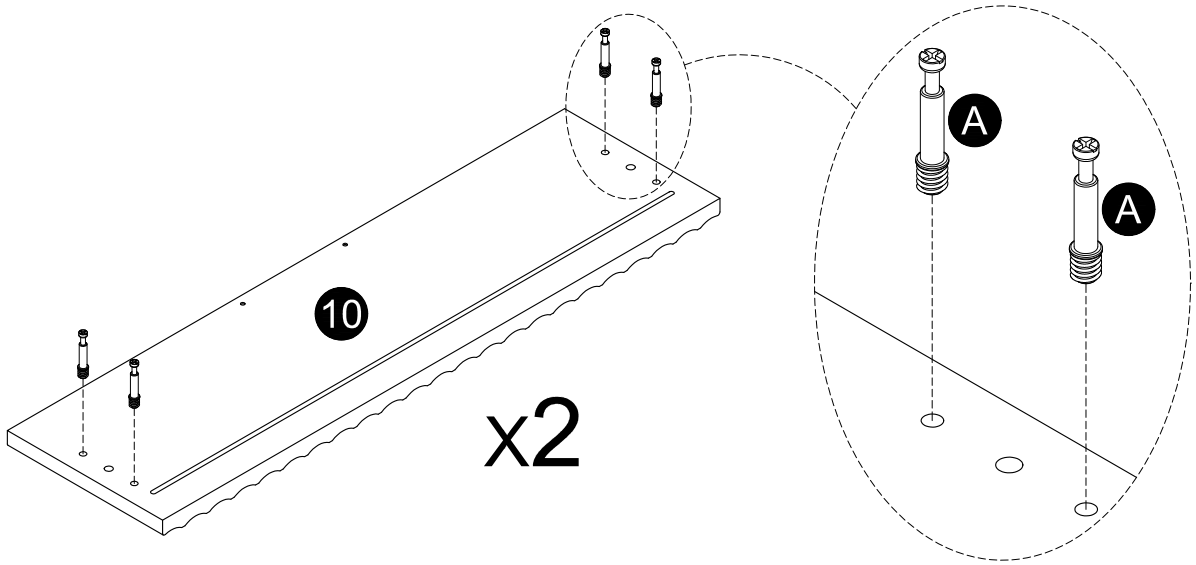


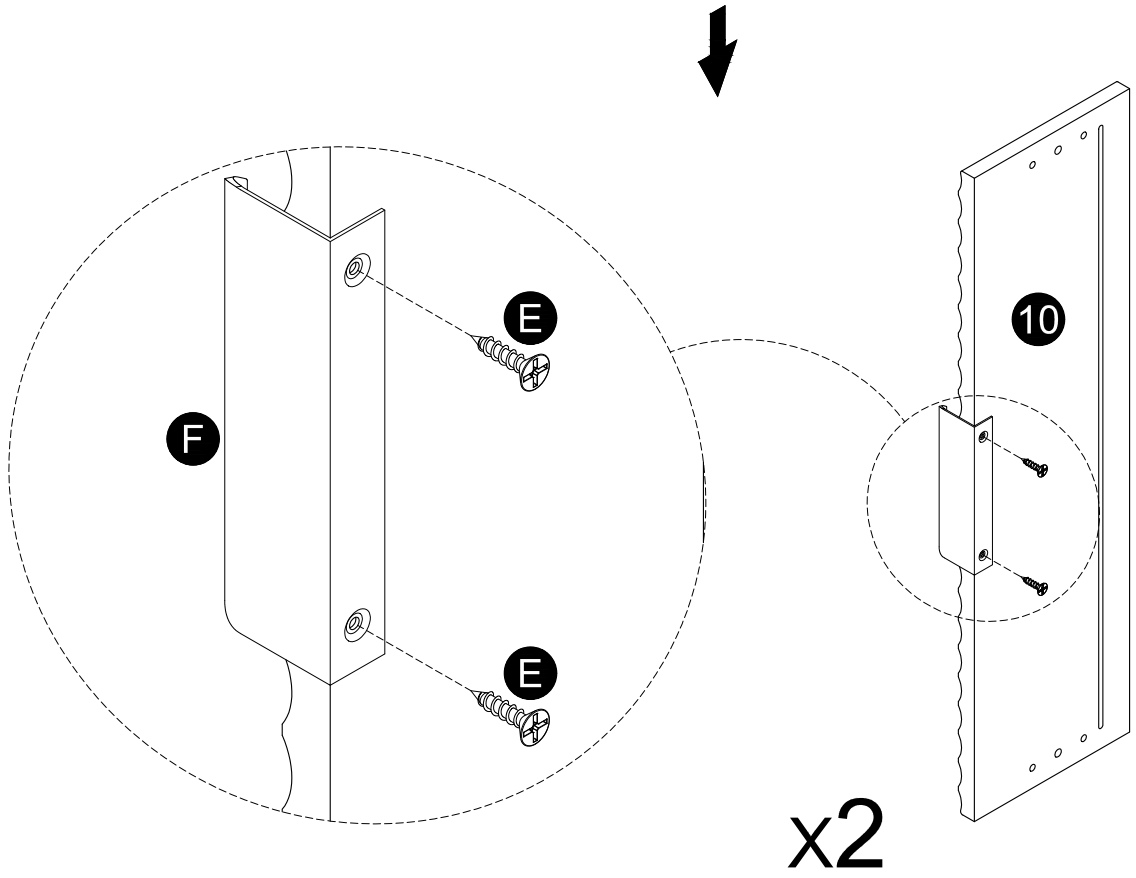


Step 13

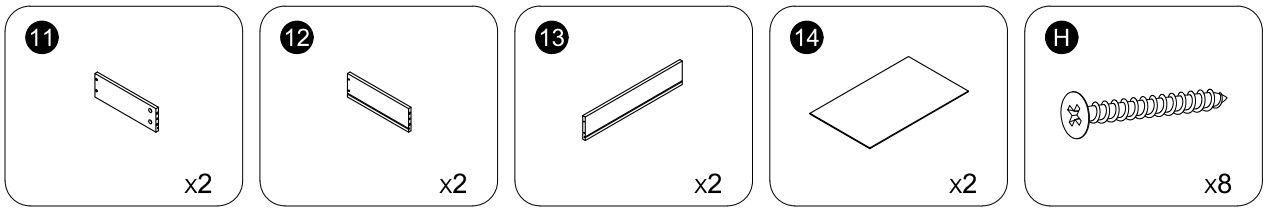


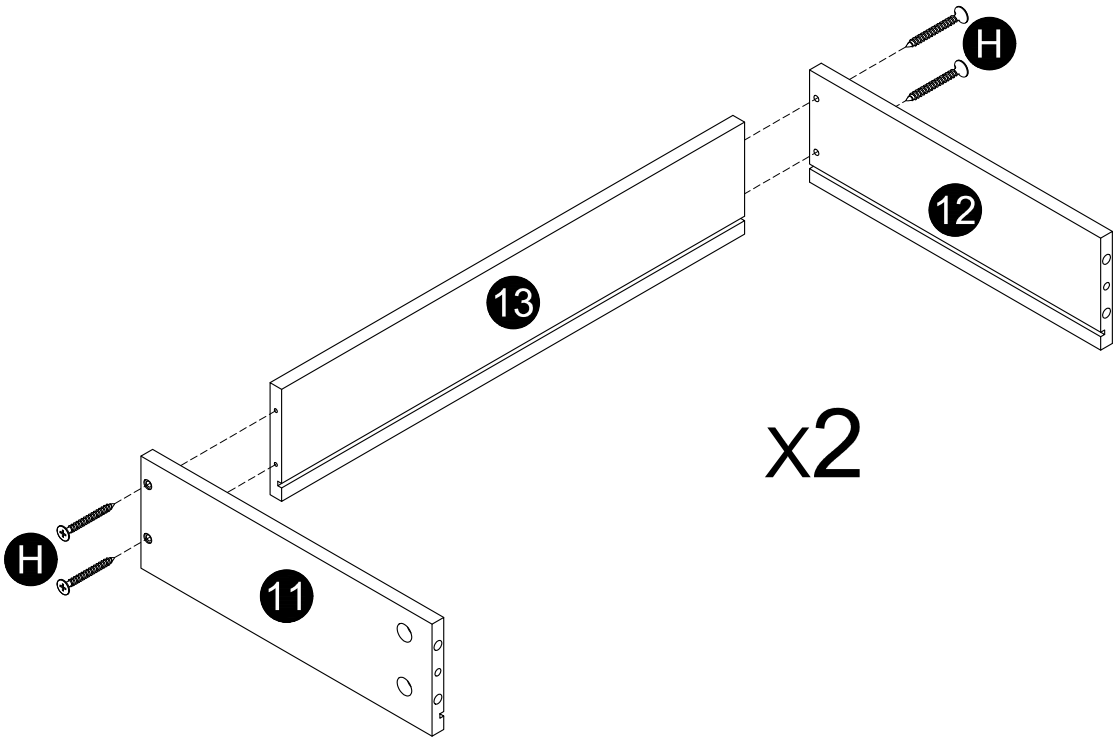

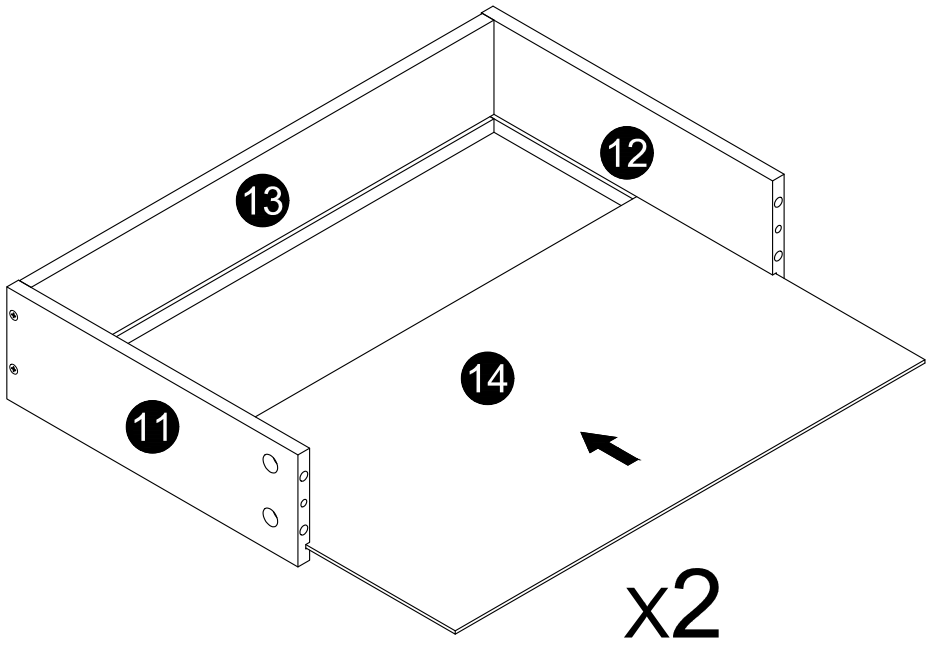



Step 14

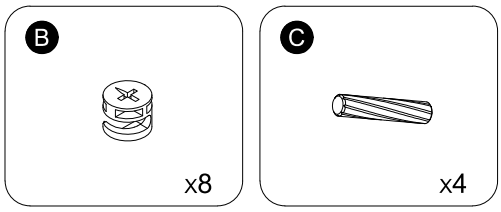

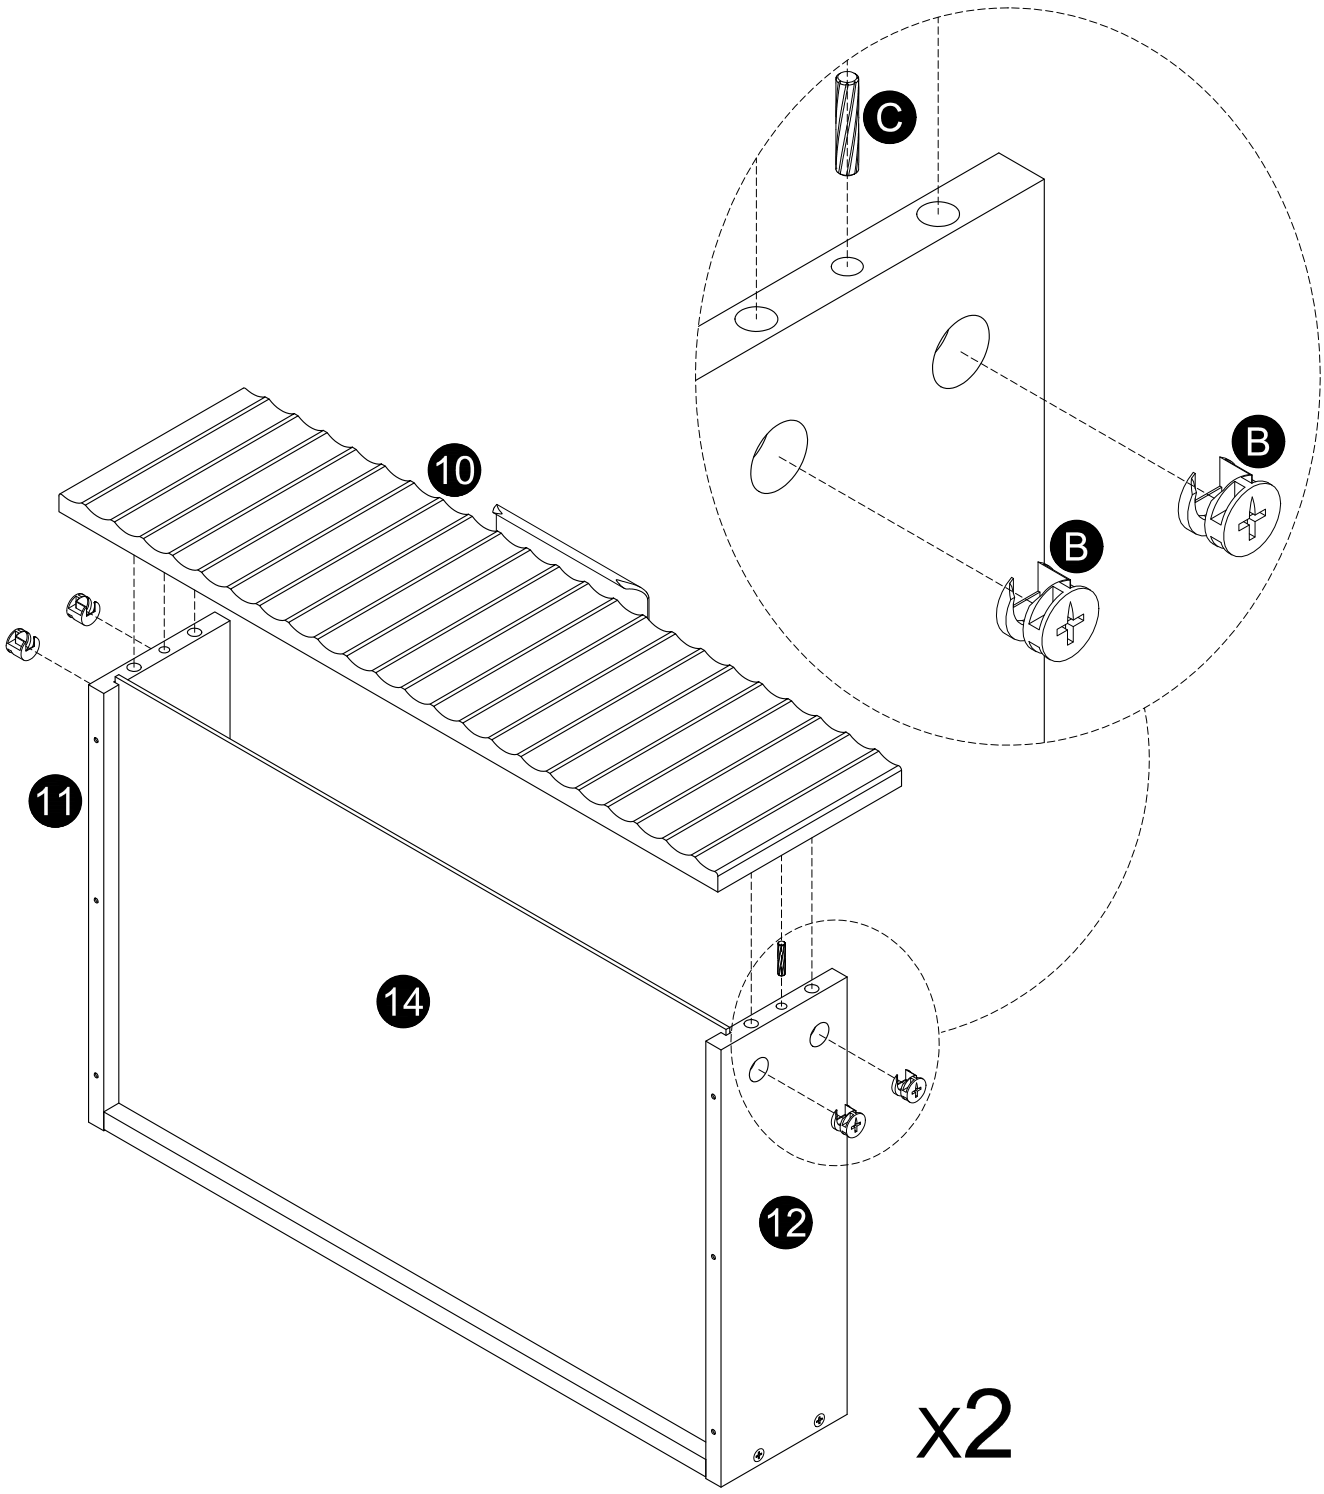



Step 15

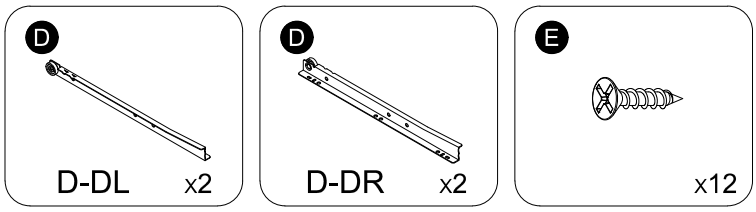

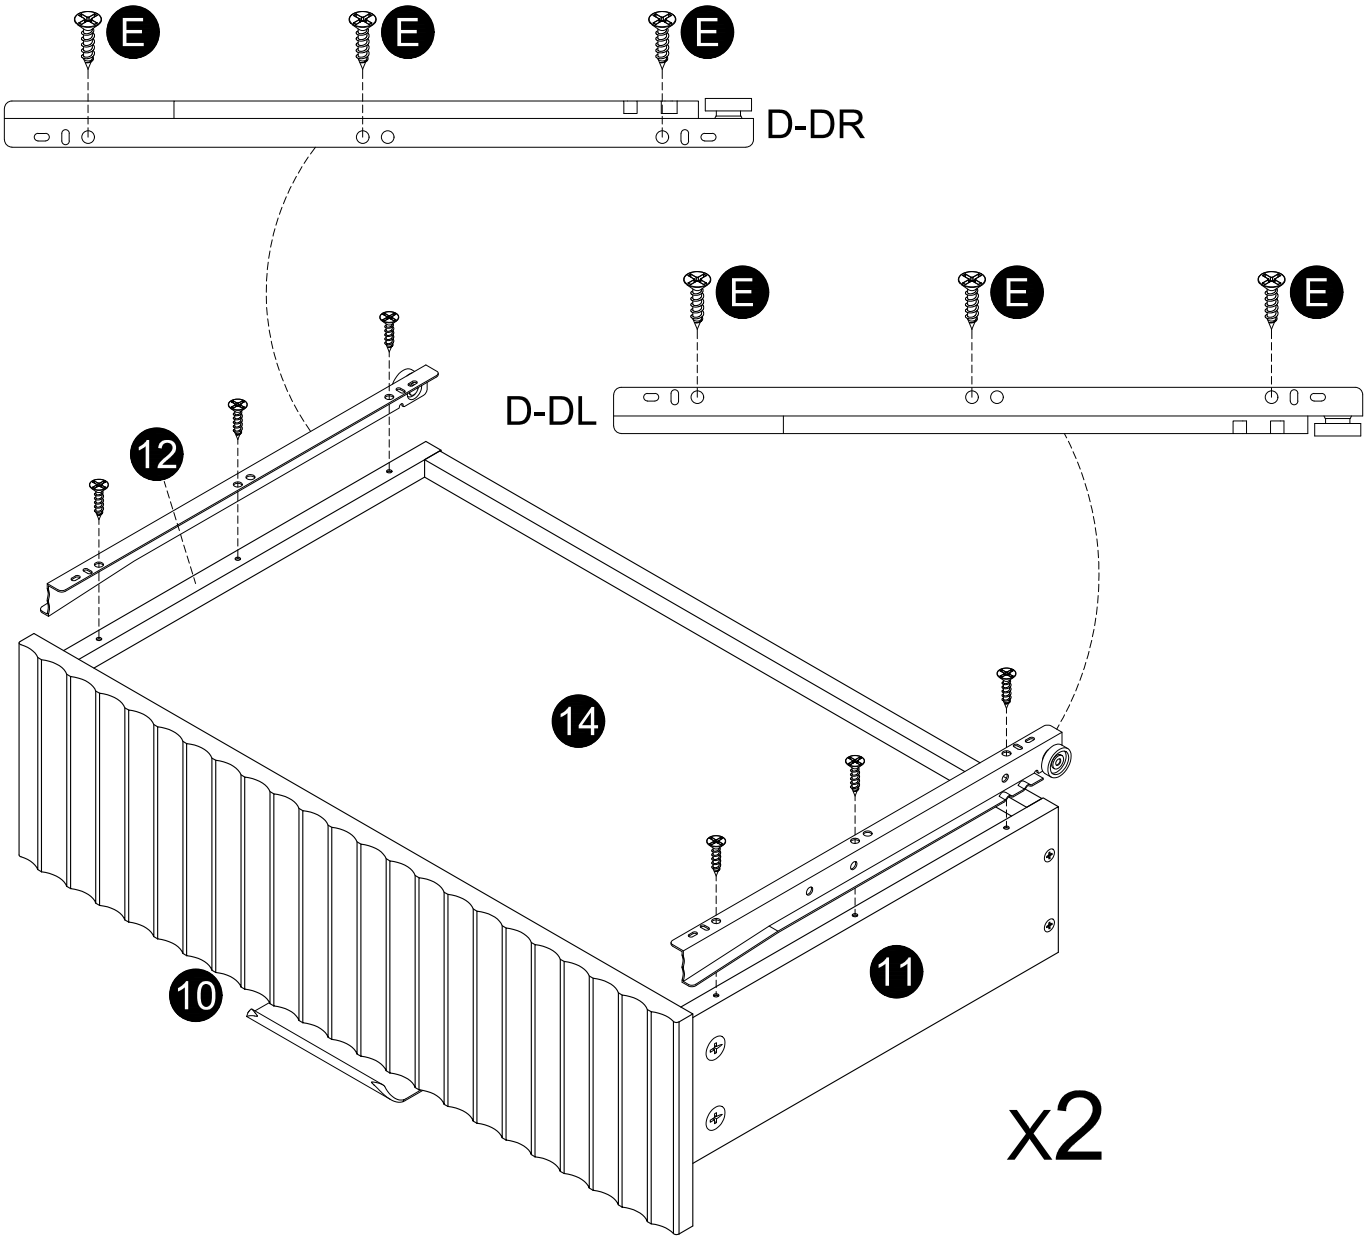



Step 16

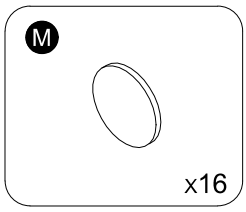

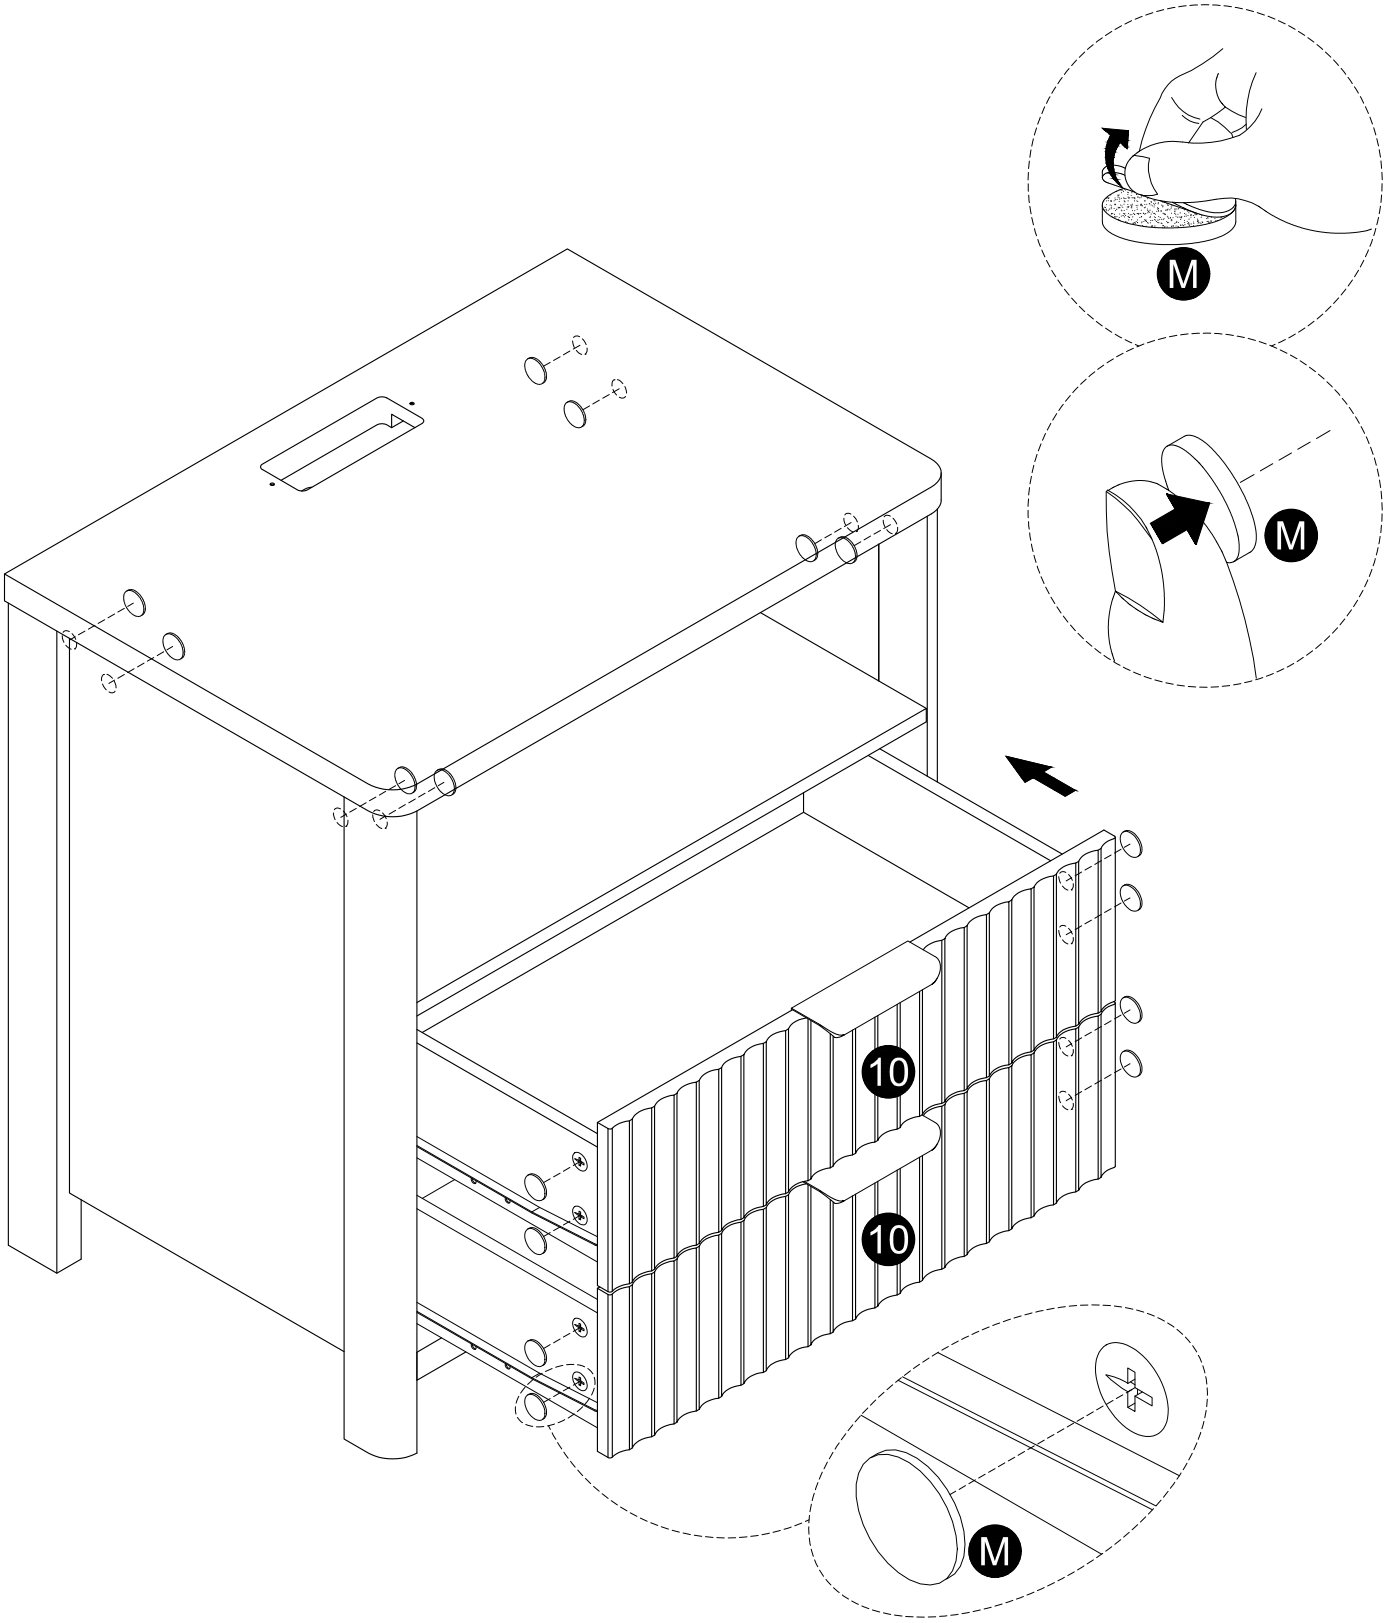



Step 17

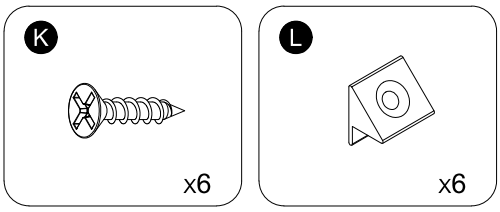

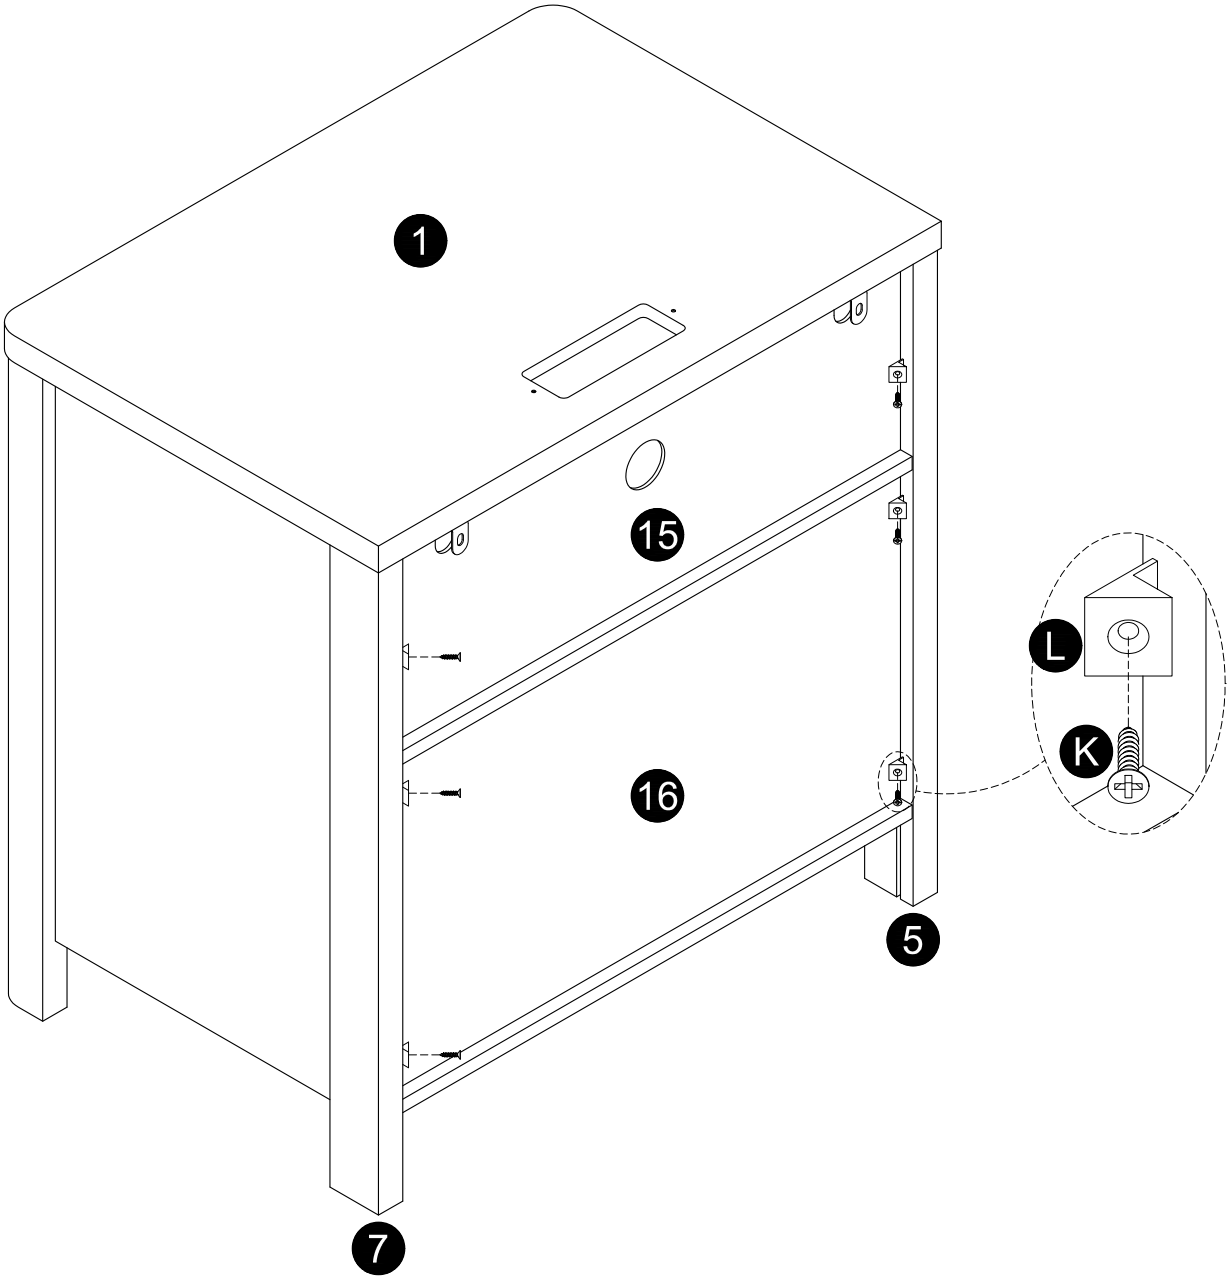



Step 18

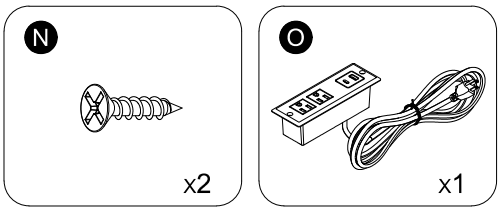

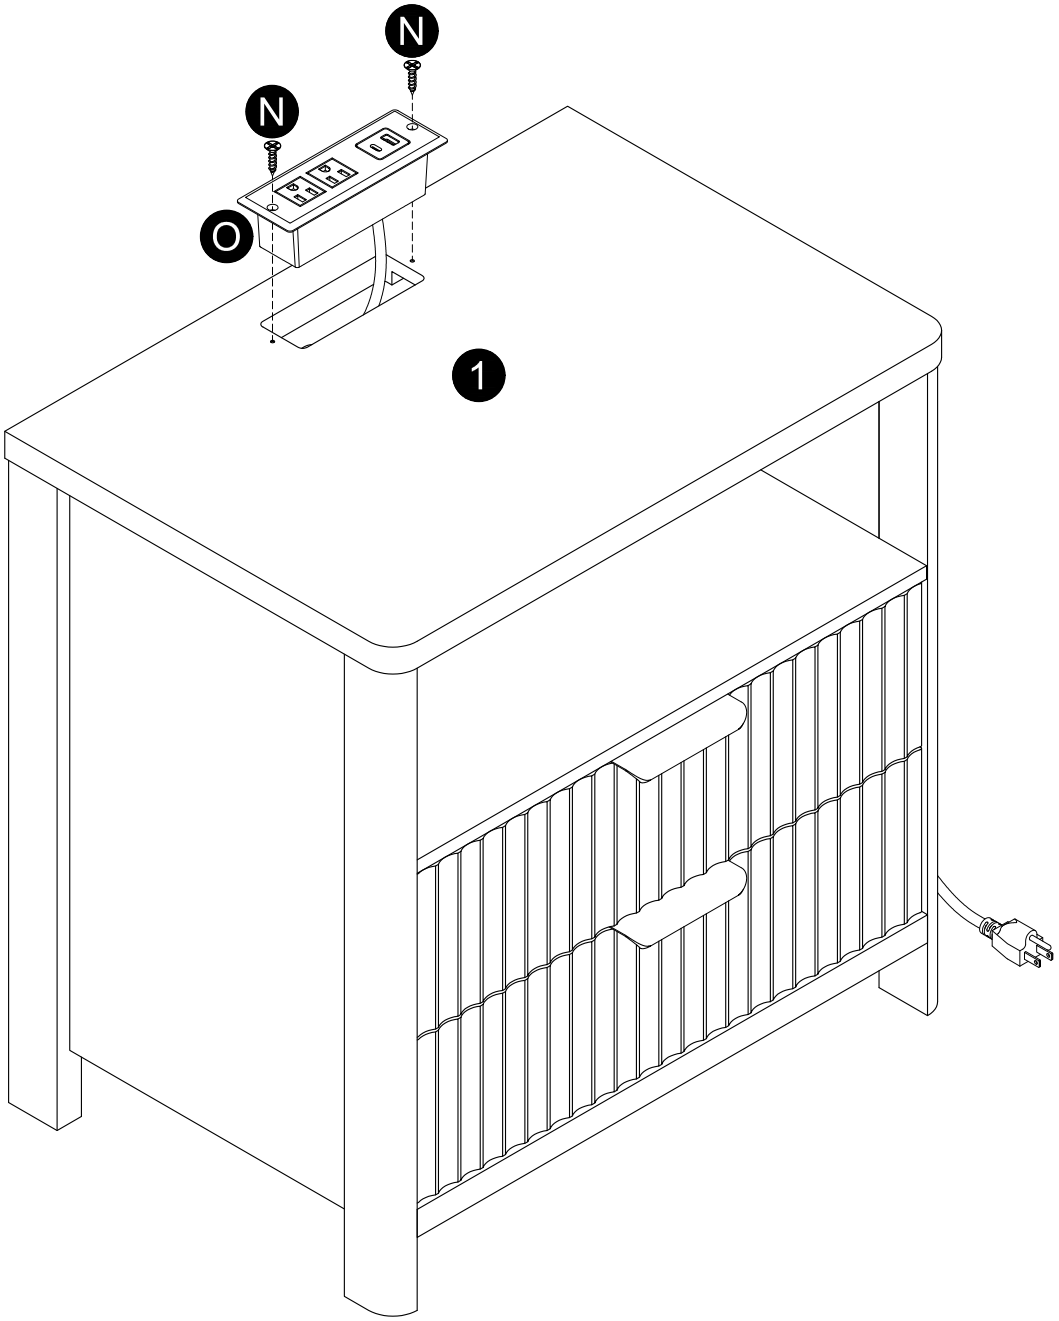

Step 19

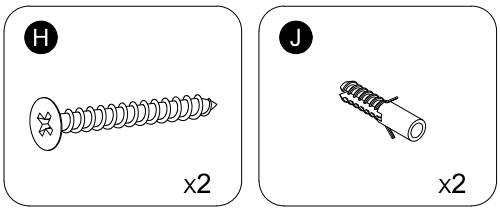

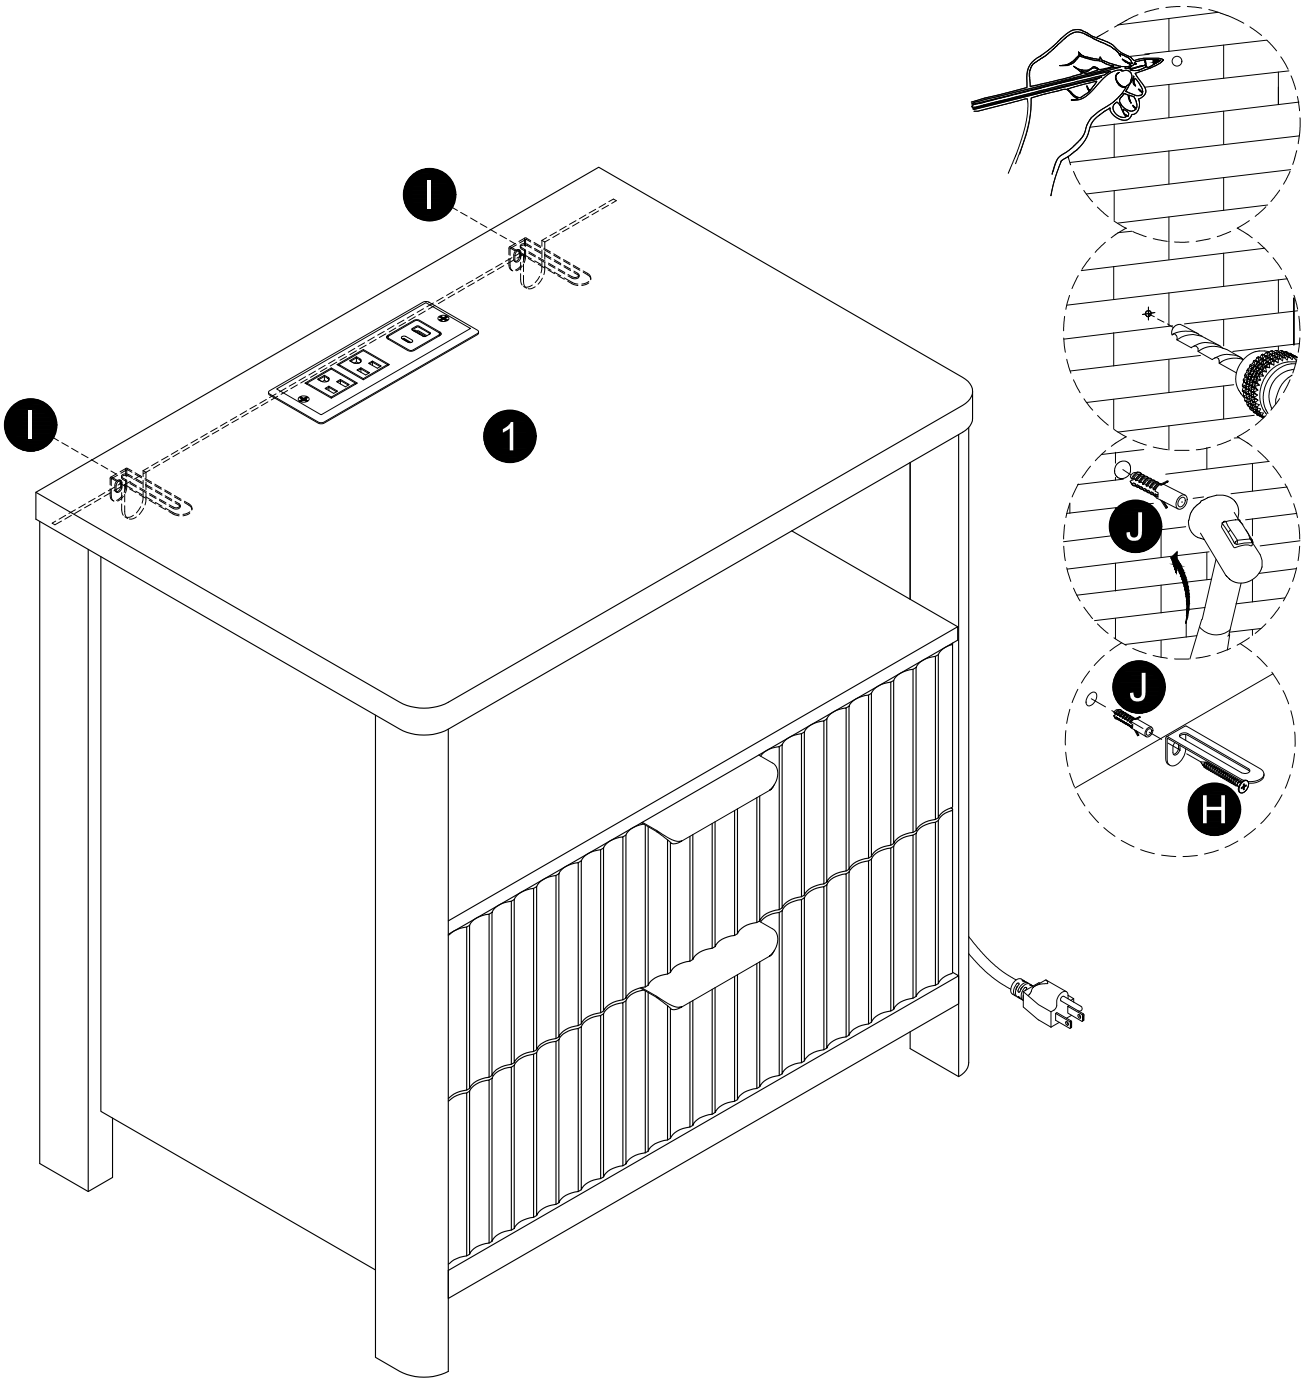

Step 20

