




K-97342

Mounting-block for Avid® bath filler

Features

- For use with the Avid freestanding bath filler
- Can be installed without required freestanding bath filler
- Mounting block provides a stable foundation for freestanding bath fillers

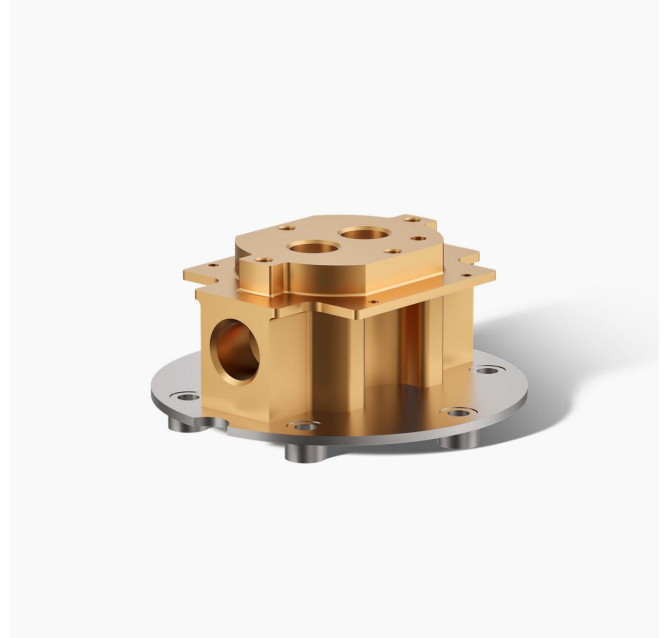

Available Colors/Finishes

Color tiles intended for reference only.

NA NA Not Applicable



1-800-4KOHLER (1-800-456-4537)
Kohler Co. reserves the right to make revisions without notice to product specifications.
For the most current specification sheet, go to www.kohler.com USA or www.kohler.ca Canada.
7-31-2026 19:01 - US-CA

THE BOLD LOOK
OF **KOHLER**

Codes/Standards

ASME A112.18.1/CSA B125.1

Recommended Products/Accessories

K-23723 Faucet cleaner

Required Products/Accessories


- K-T97367-4 Floor-mount bath filler trim
-

Warranty

See website for detailed warranty information.

KOHLER® Faucet Lifetime Limited Warranty



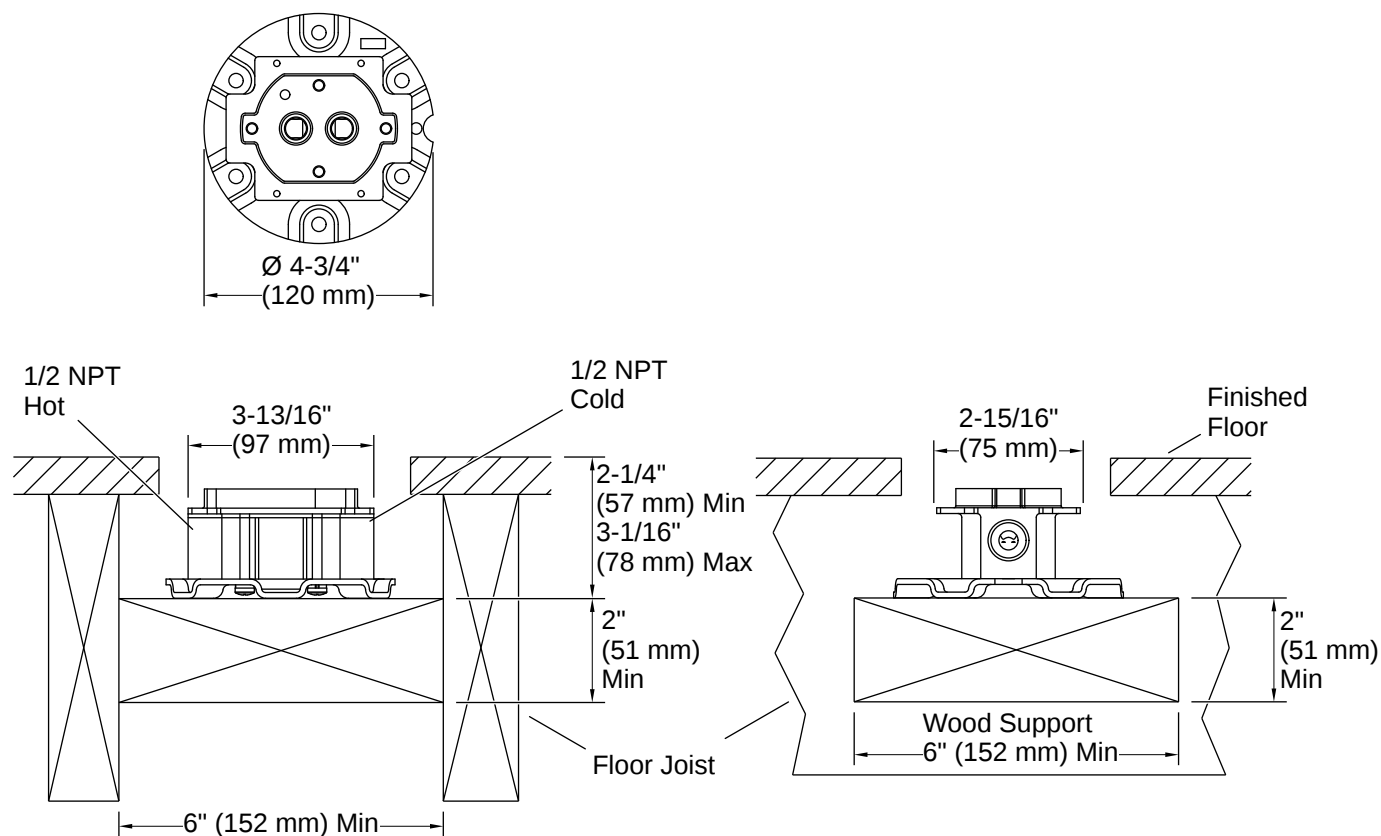

Installation

- Secures Avid bath filler installation in wood or concrete subfloors

Installation Notes

Install this product according to the installation instructions.

Adequate floor support is required. The wood support must be a minimum of 2" (51 mm) thick by 6" (152 mm) wide. 2x6 lumber is NOT adequate for this application.

Concrete can be used as the floor support. Requires 3/16" masonry drill bit and six 1/4" x 1-3/4" concrete screws, not included.



1-800-4KOHLER (1-800-456-4537)

Kohler Co. reserves the right to make revisions without notice to product specifications.

For the most current specification sheet, go to www.kohler.com USA or www.kohler.ca Canada.

7-31-2026 19:01 - US-CA