


ASSEMBLY INSTRUCTION

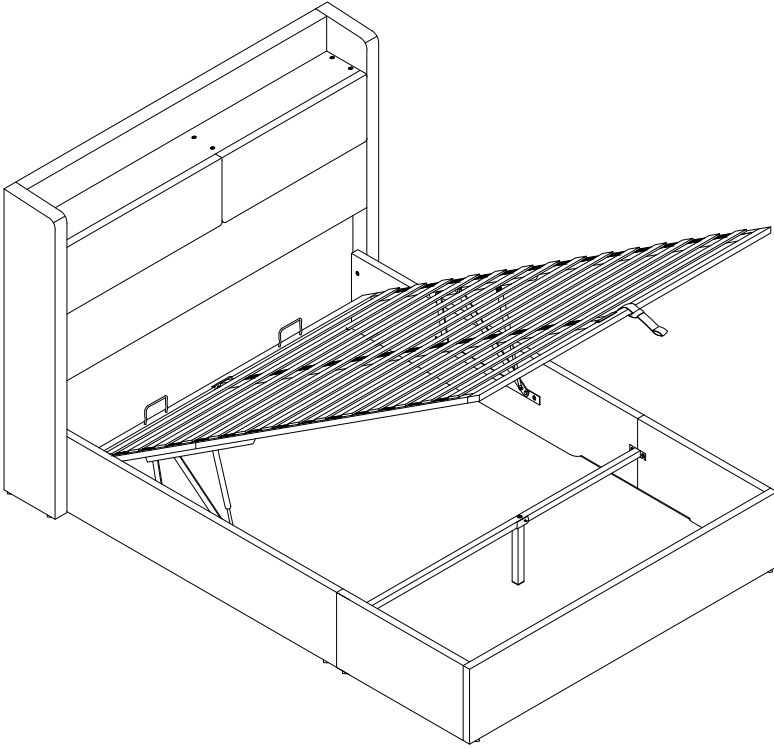


Please **TEAR OFF** this shrink film from side!
DO NOT USE CUTTER!


ITEM NUMBER:M147

IMPORTANT NOTE


1. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
2. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
3. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
4. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.
5. NEED PARTS OR ASSISTANCE? EMAIL US AT fuwubumen@outlook.com
6. YOU CAN ASSEMBLE IT WITH OUR PACKAGING TOOLS OR WITH A.

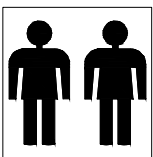









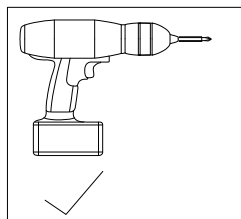







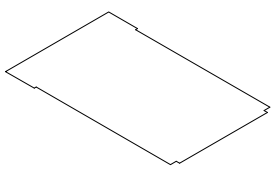
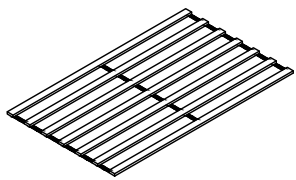


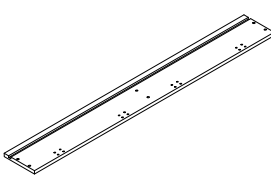
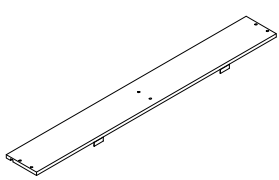



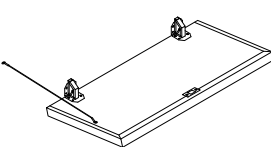
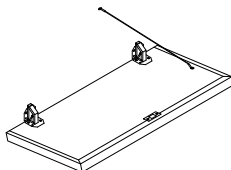
Minimum two
person assembly

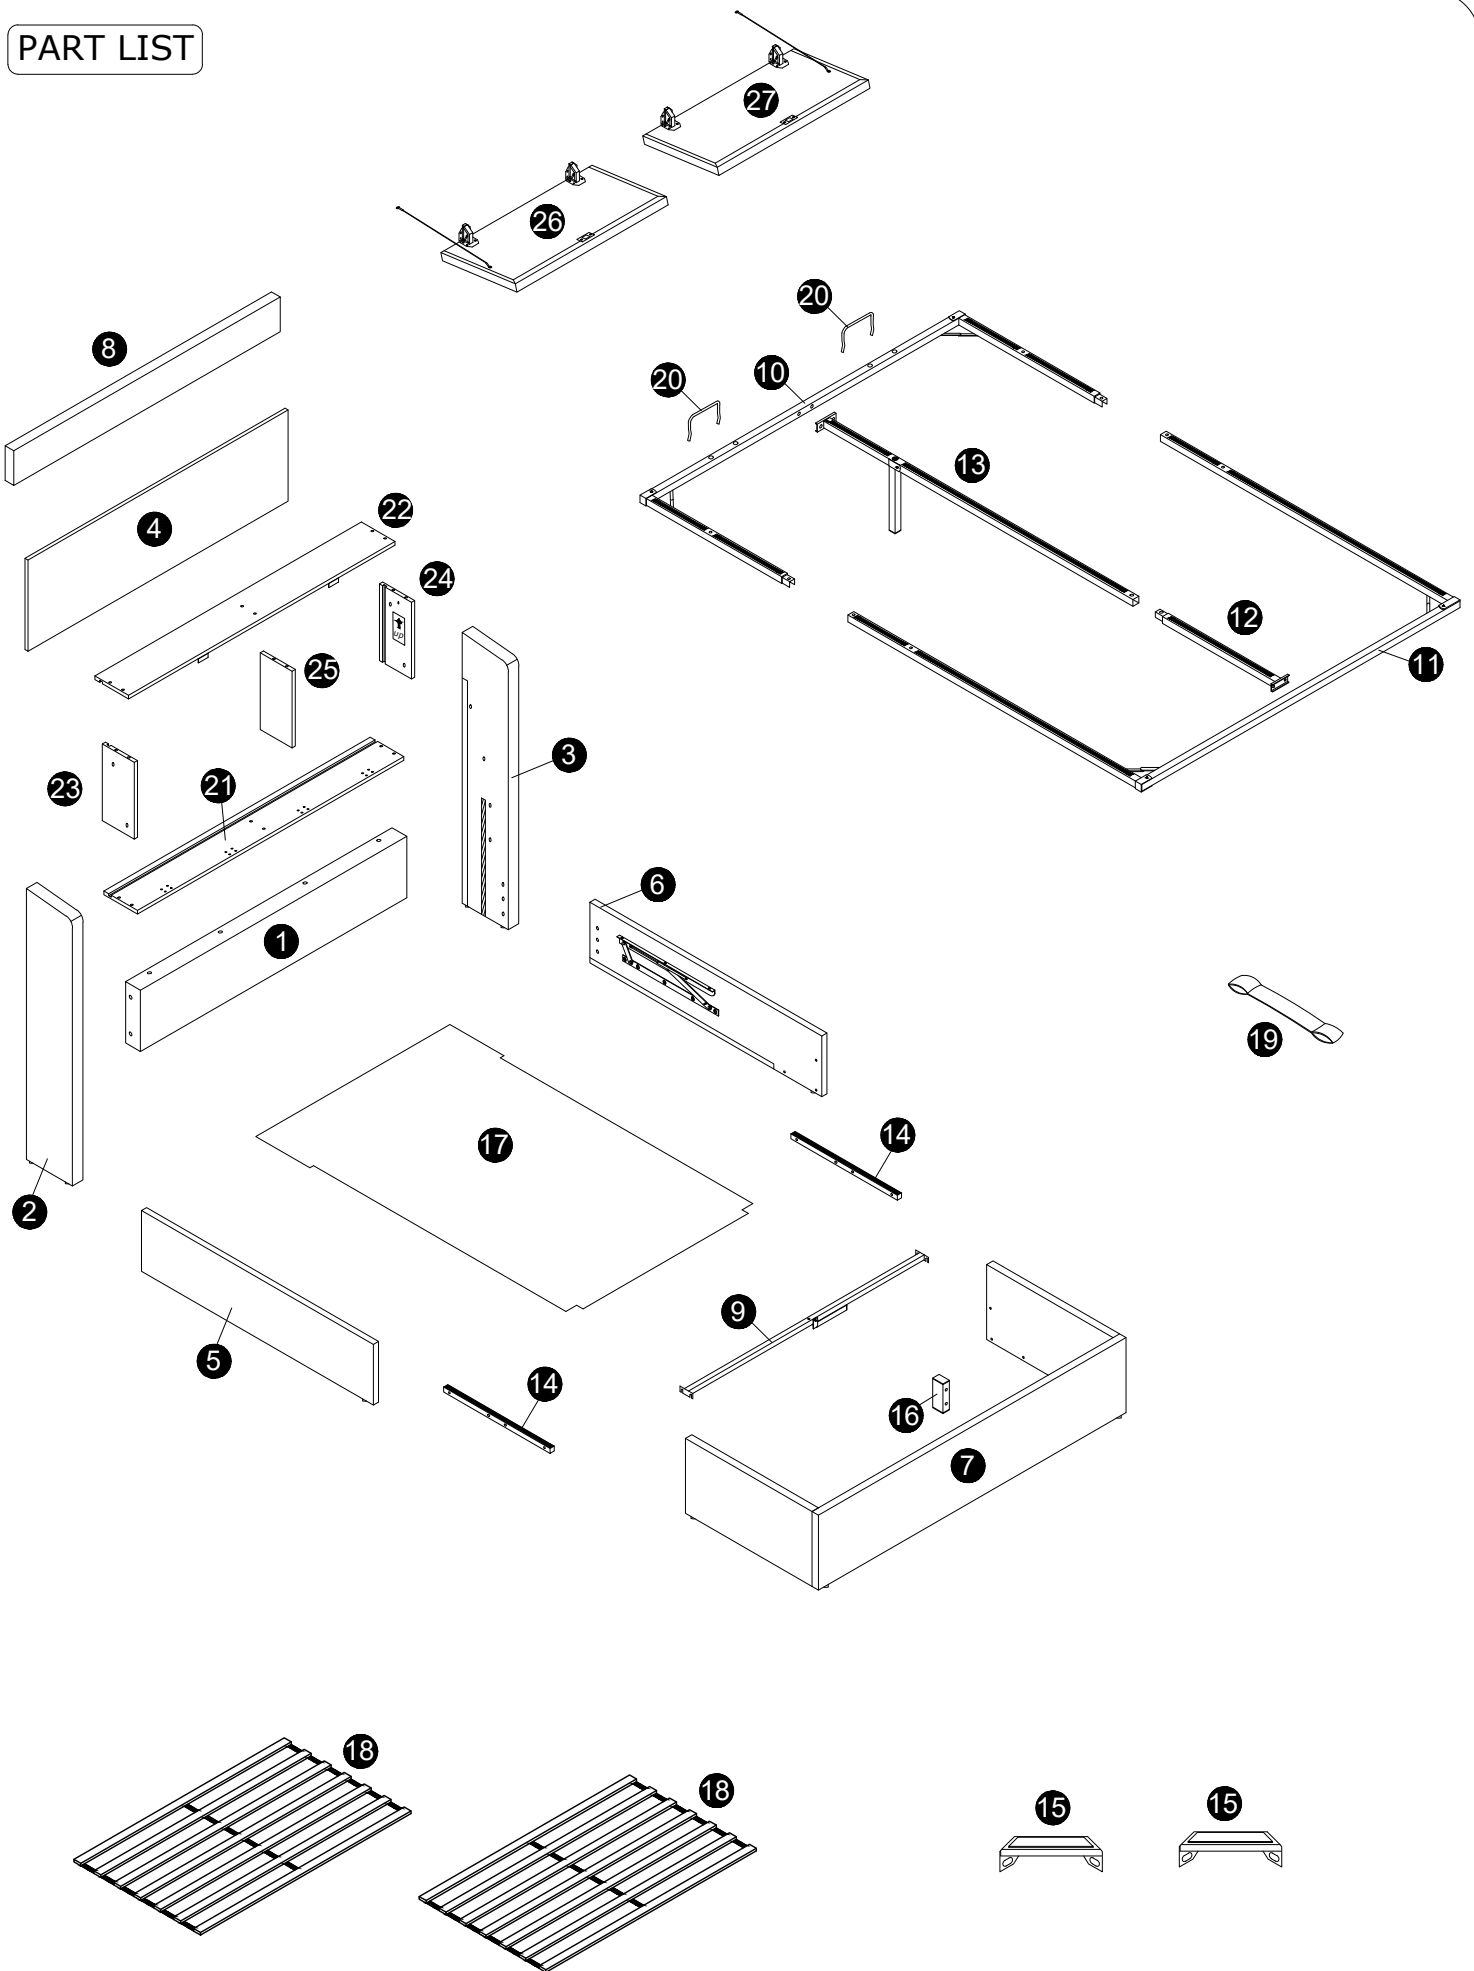




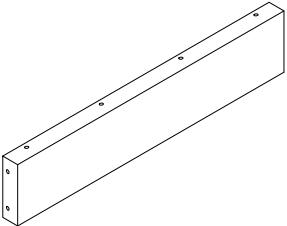

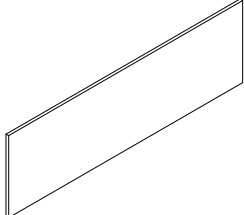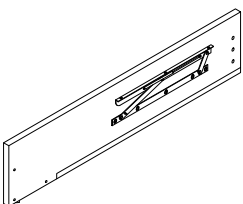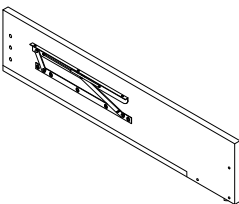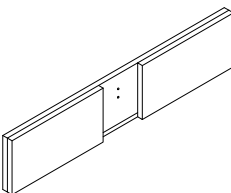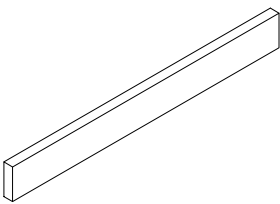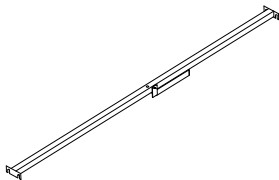

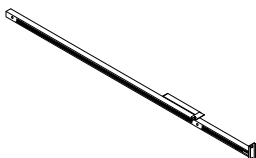



PART LIST




PART LIST

1 x 1pc 	2 x 1pc 	3 x 1pc 	4 x 1pc 	5 x 1pc 
6 x 1pc 	7 x 1pc 	8 x 1pc 	9 x 1pc 	10 x 1pc 
11 x 1pc 	12 x 1pc 	13 x 1pc 	14 x 2pcs 	15 x 2pcs 
16 x 1pc 	17 x 1pc 	18 x 2pcs 	19 x 1pc 	20 x 2pcs 
21 x 1pc 	22 x 1pc 	23 x 1pc 	24 x 1pc 	25 x 1pc 
26 x 1pc 	27 x 1pc 			


HARDWARE LIST

 H1 M5 x 1pc	 H2 M8x30mm x 17pcs	 H3 M8x38mm x 12pcs	 H4 M8x60mm x 2pcs
 H5 M8 x 33pcs	 H6 M8x17mm x 31pcs	 H7 M8 x 6pcs	 H8 M14 x 1pc
 H9 M8x50mm x 18pcs	 H10 M8x22mm x 14pcs	 H11 M4x16mm x 18pcs	 H12 M4 x 1pc
 H13 M6x35mm x 5pcs	 H14 M6x45mm x 12pcs		


1

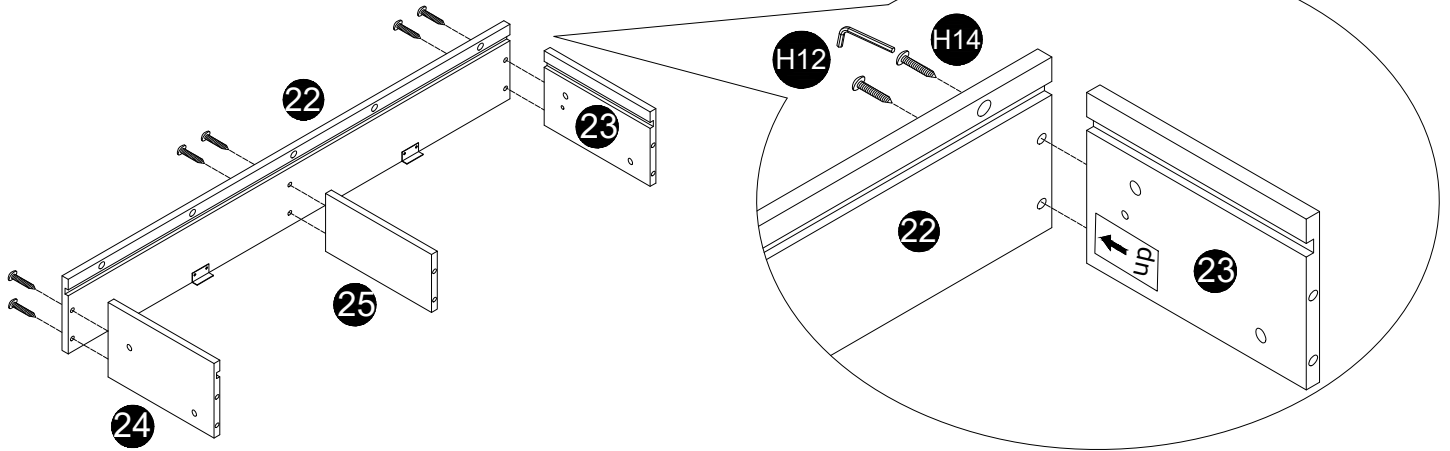


2

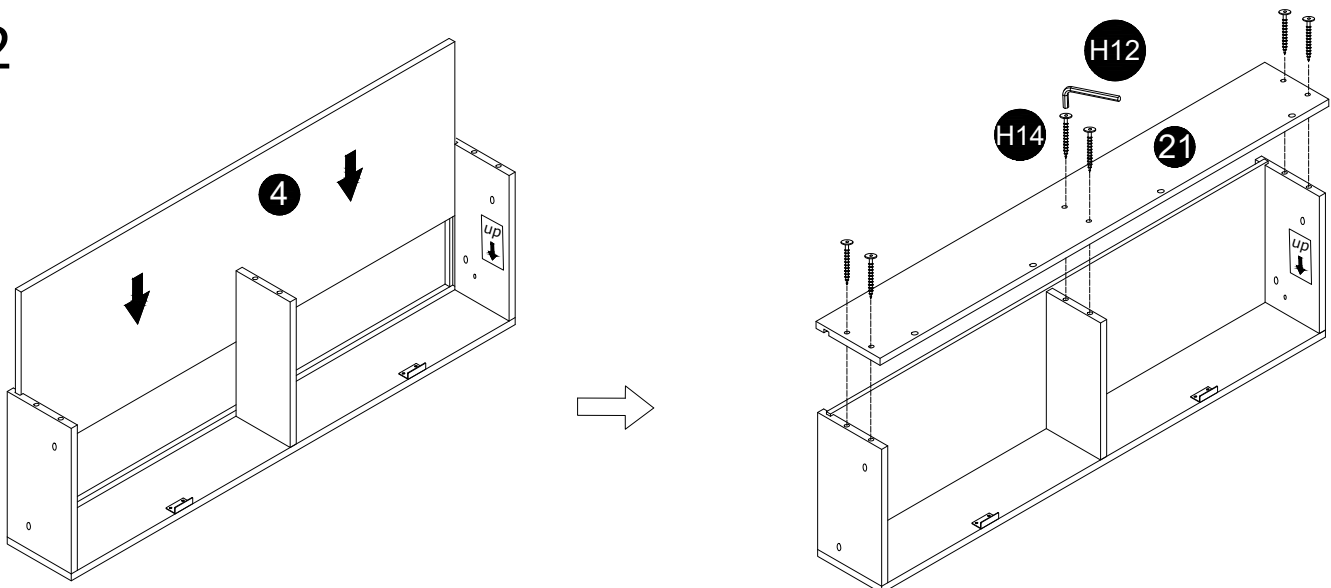


3

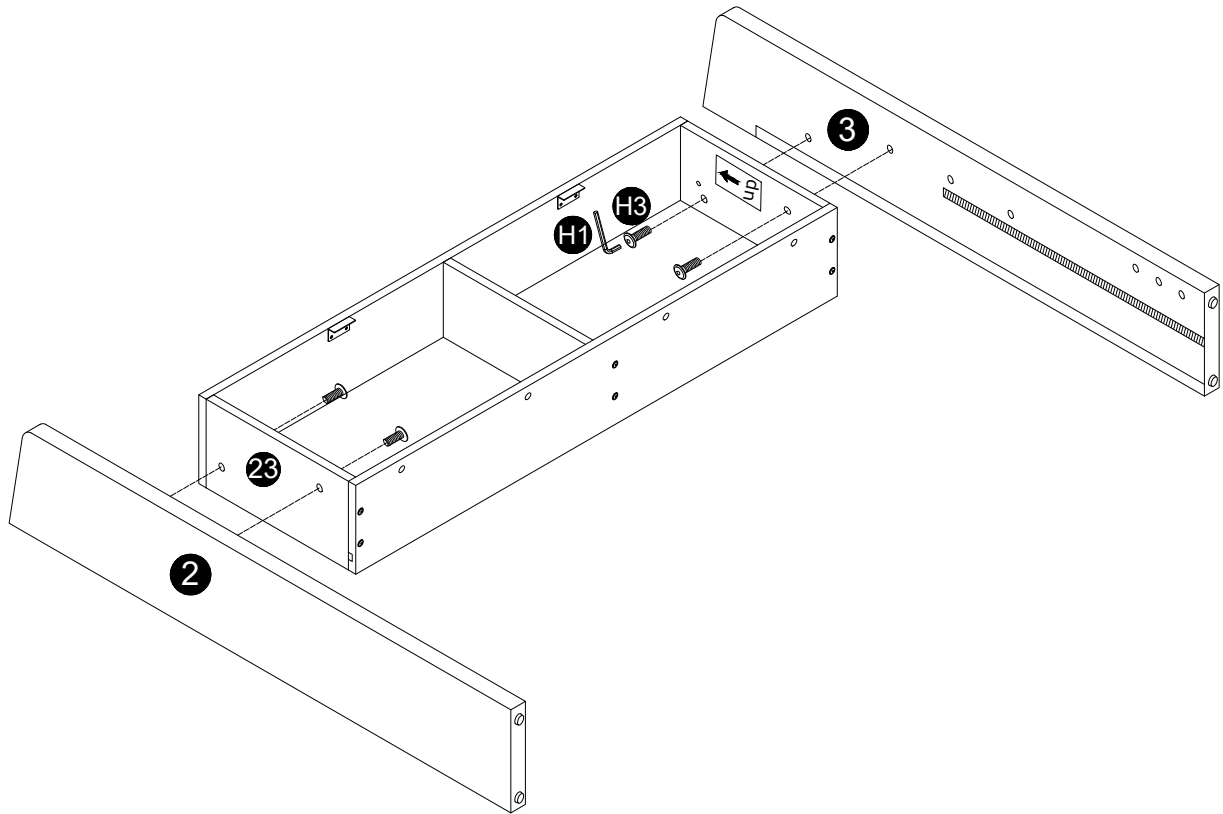

4

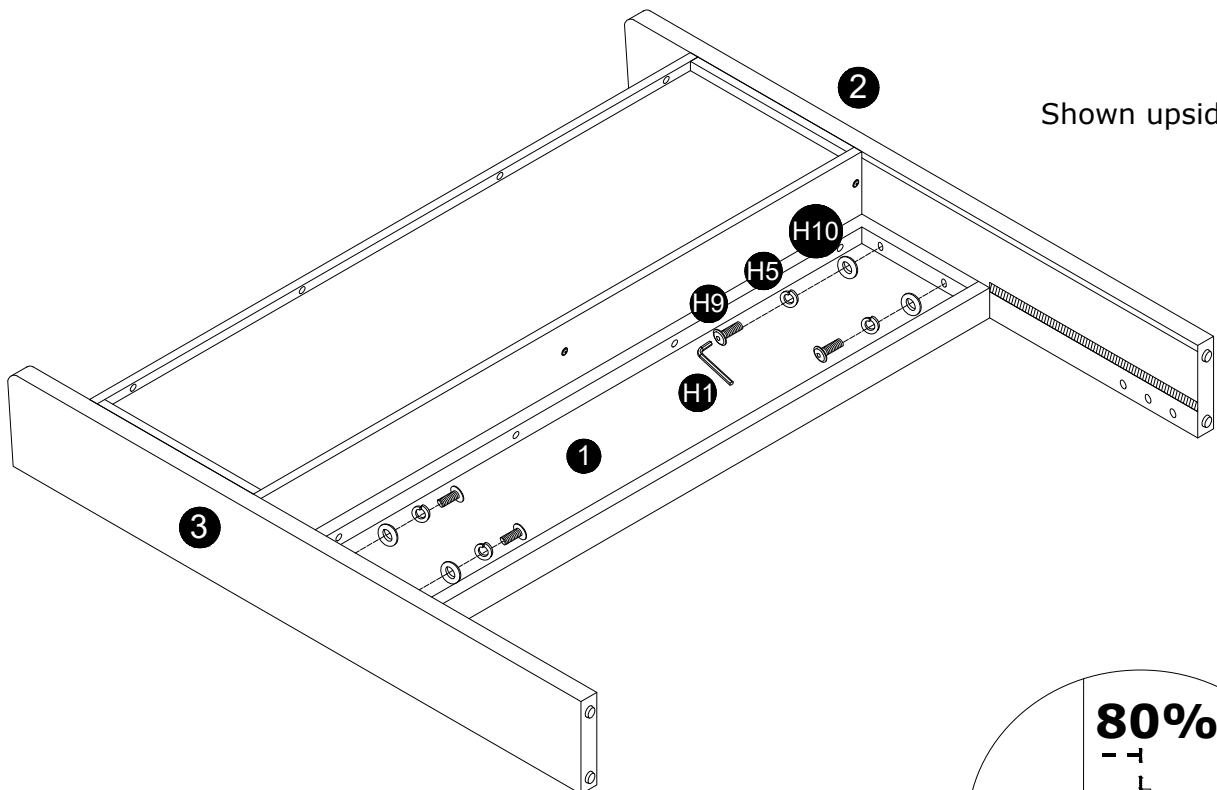


Shown upside down

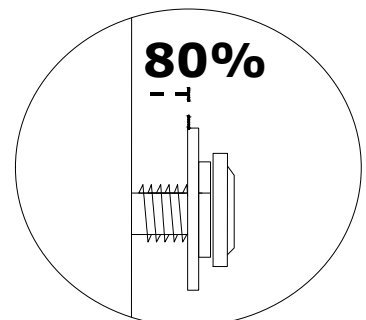


Do not fully tighten fixings!

5

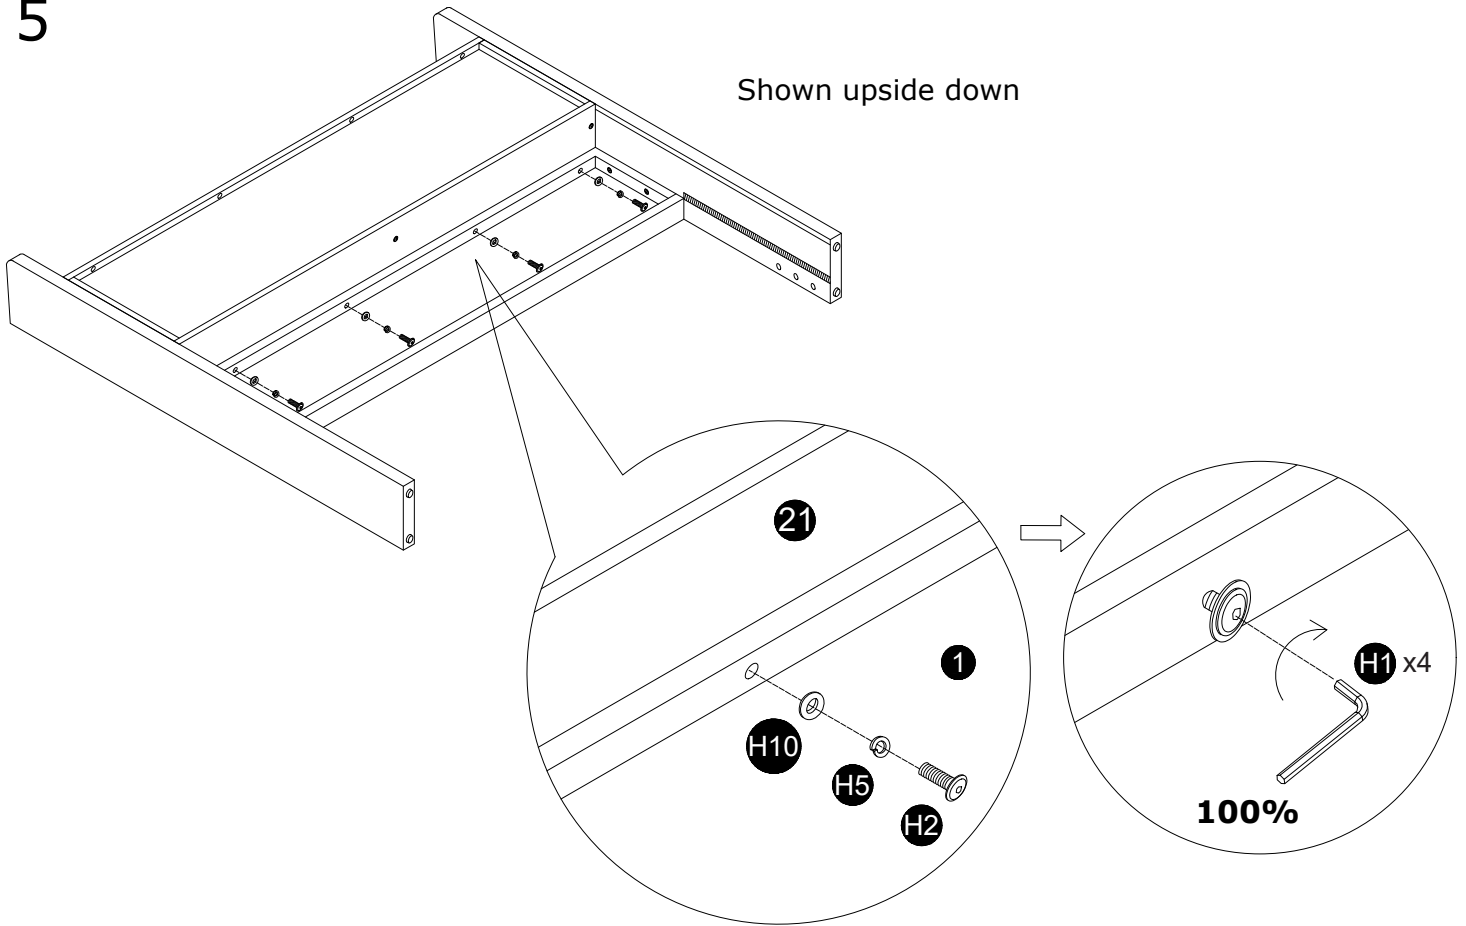


After assembly is complete, 100% the screw from step 4.


6

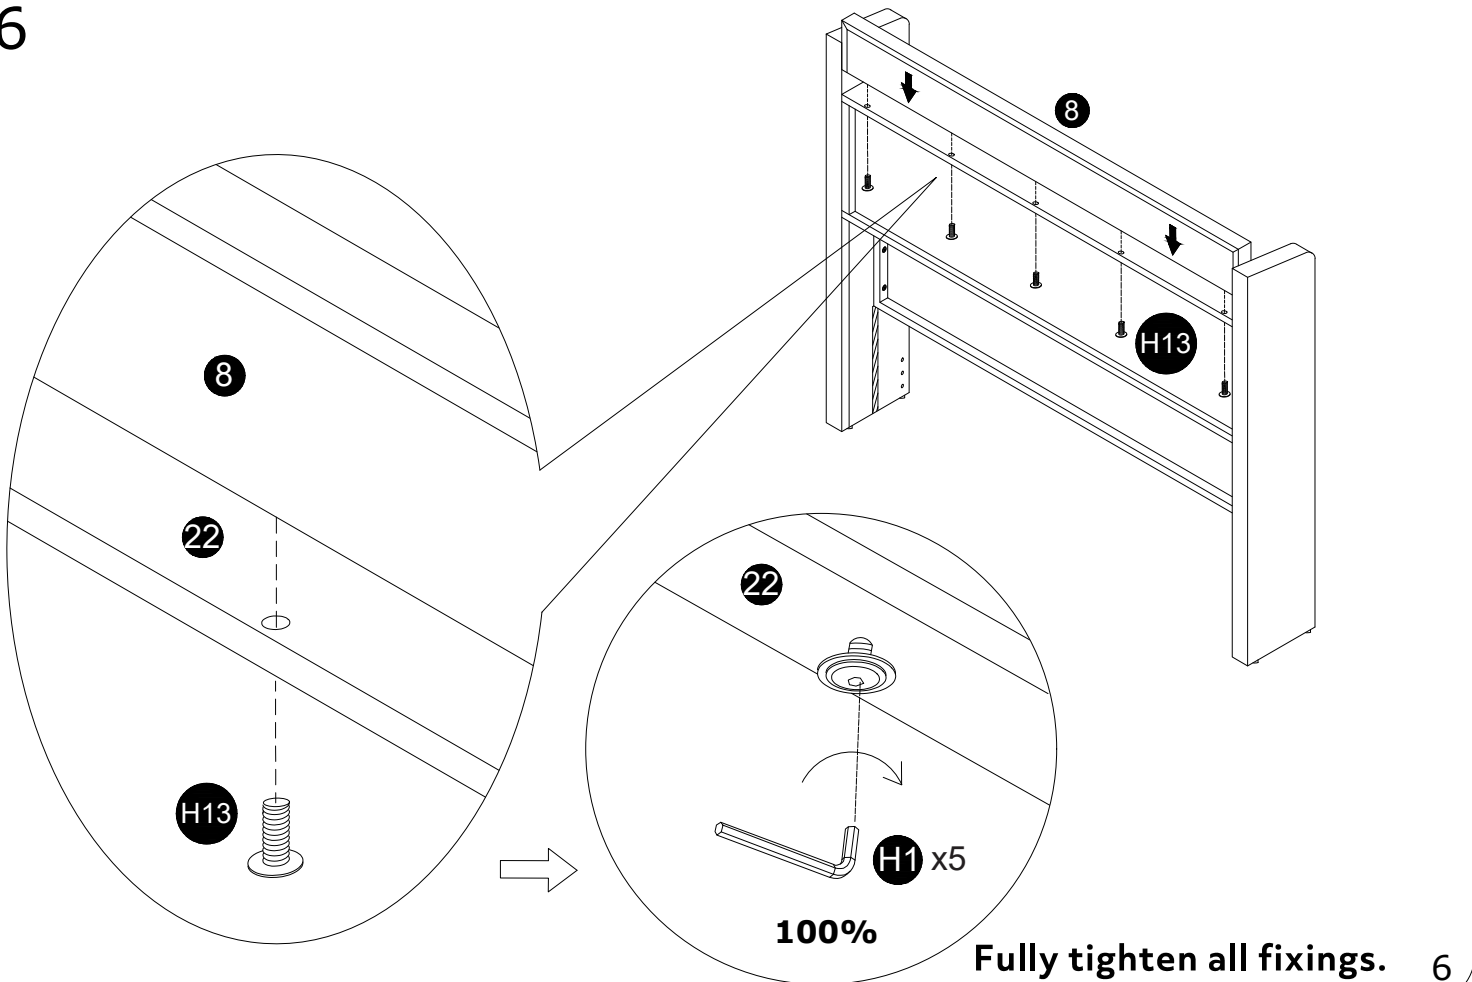


7

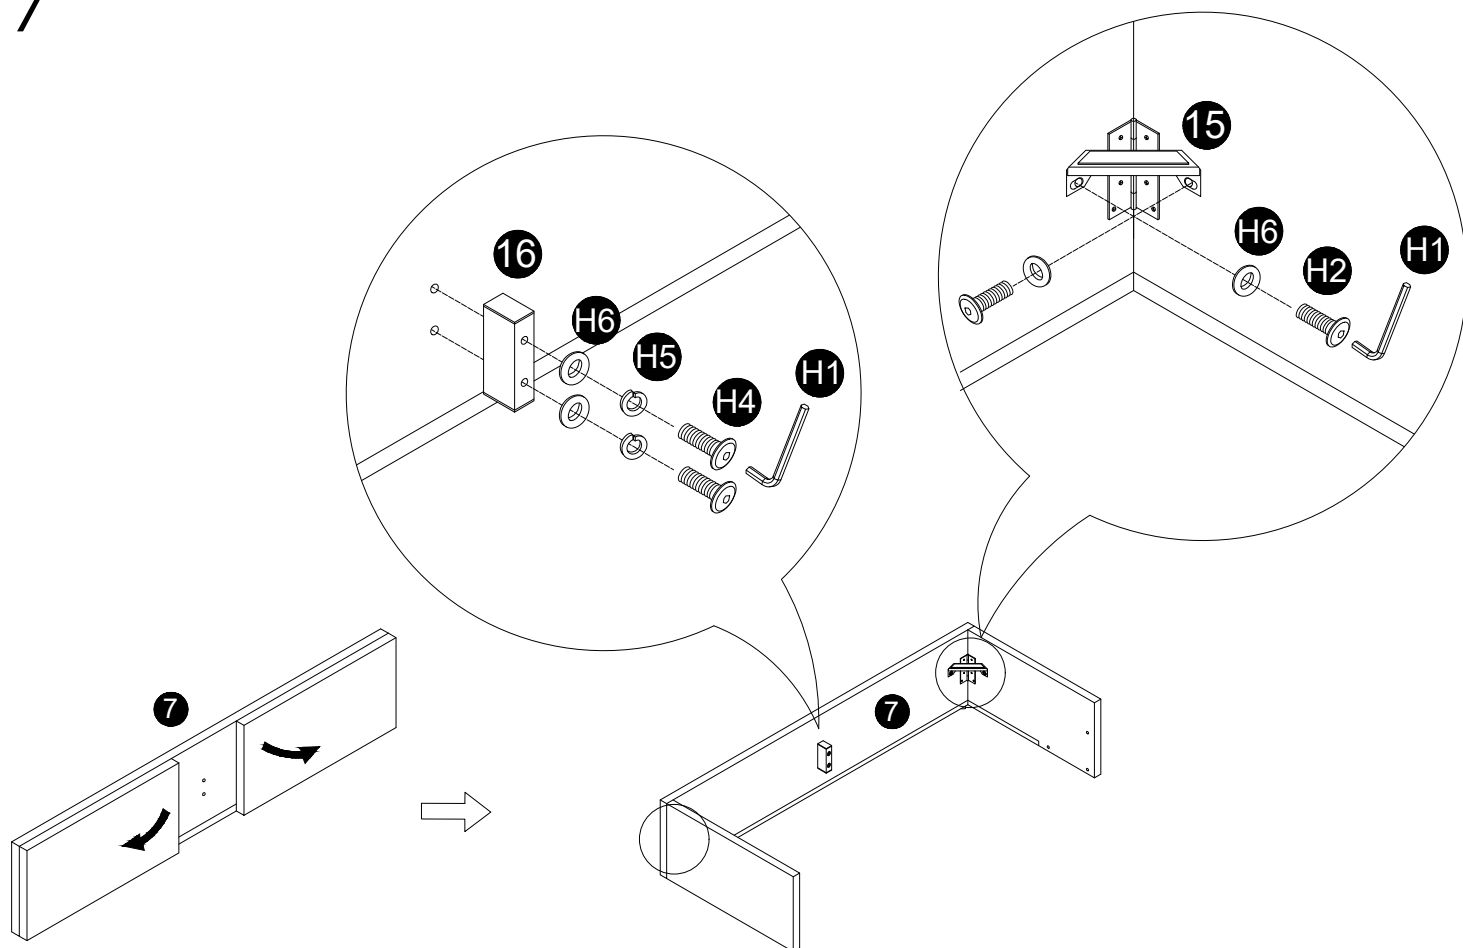

8

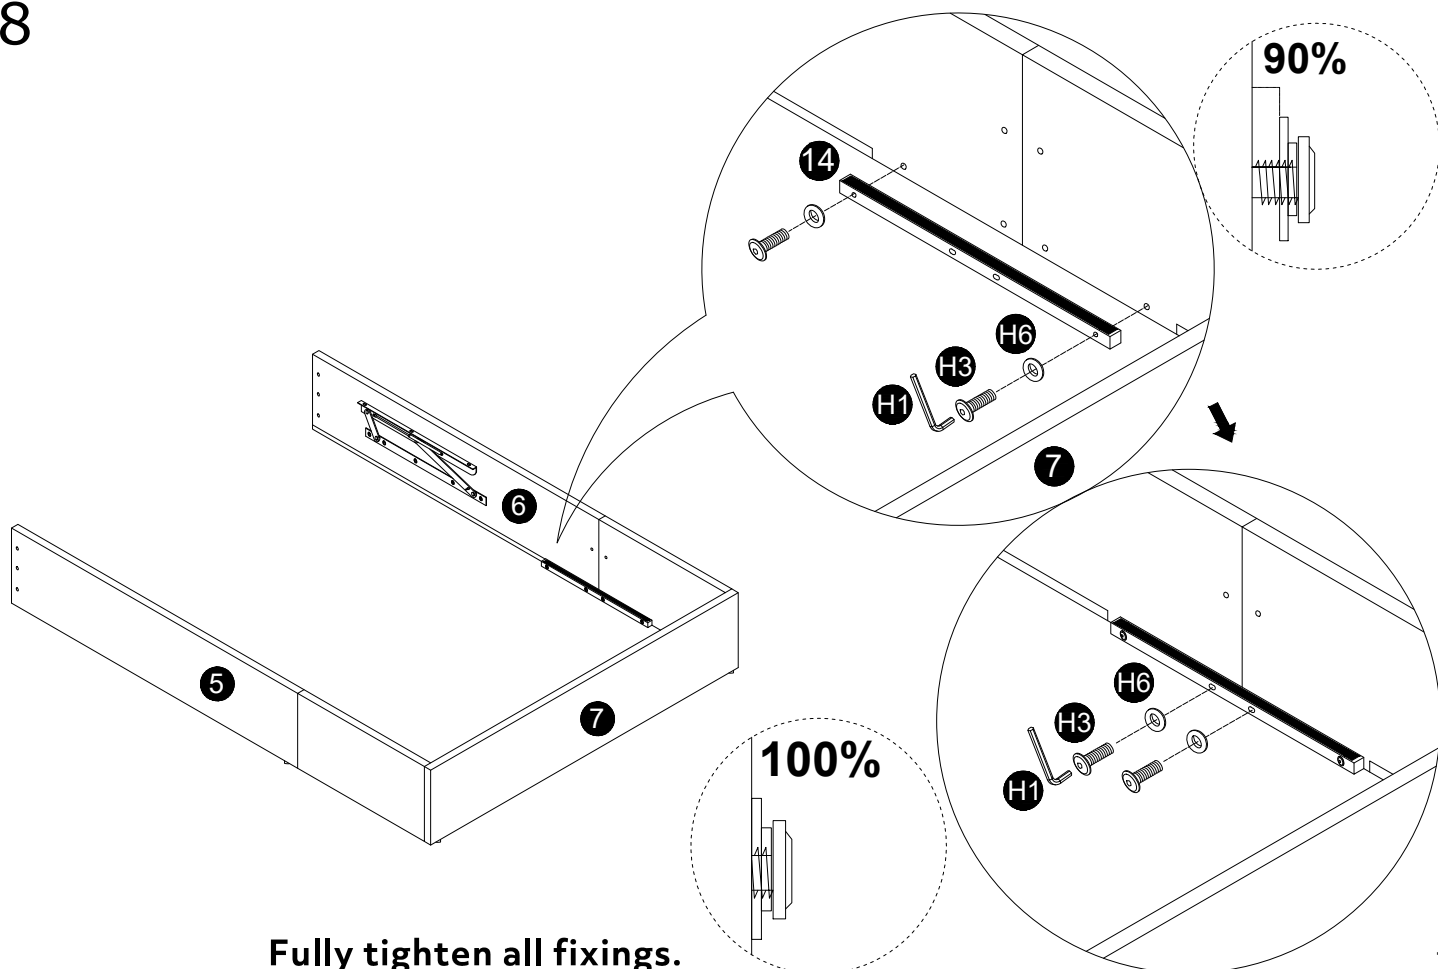


9

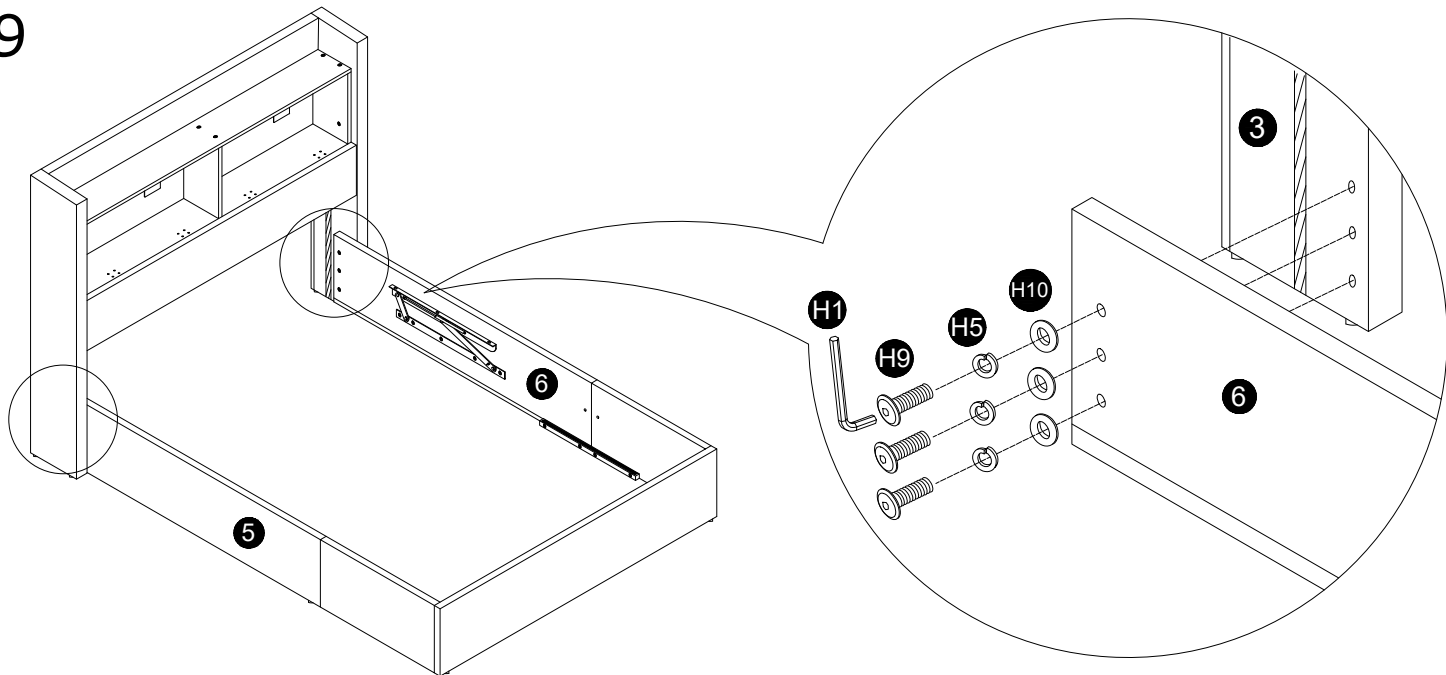


10


Beware of hand

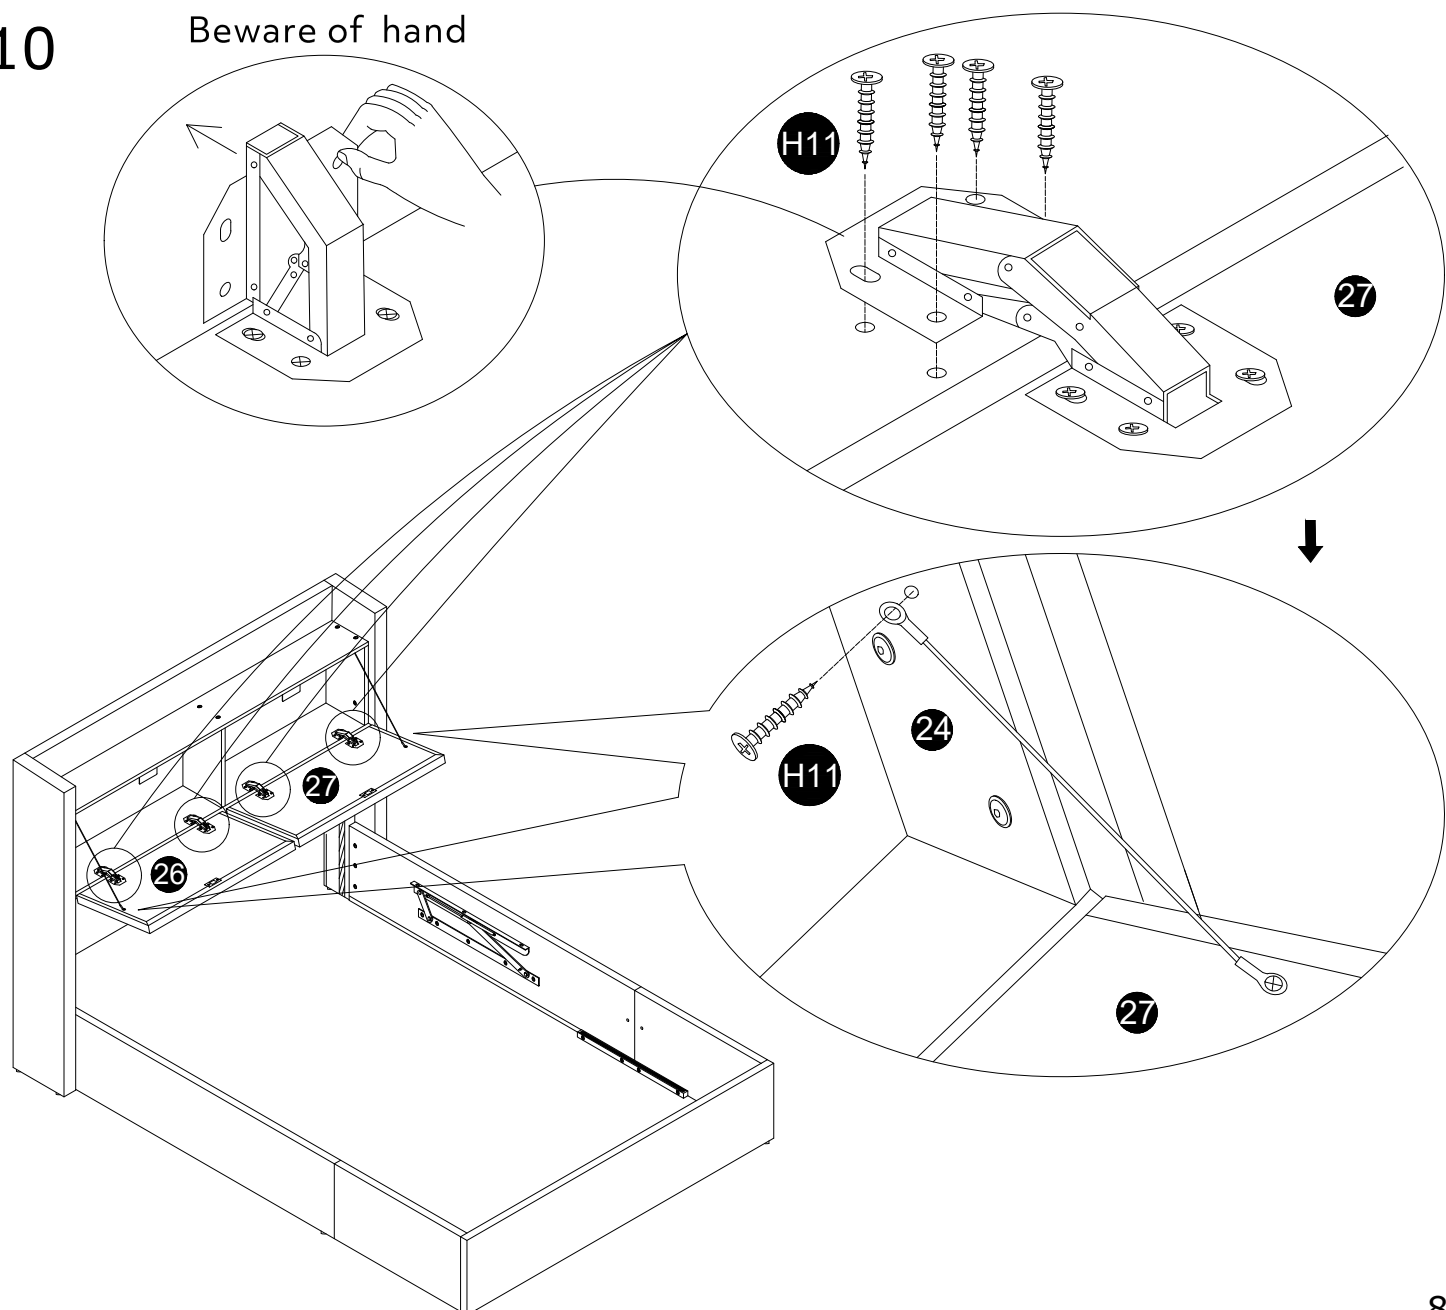


11

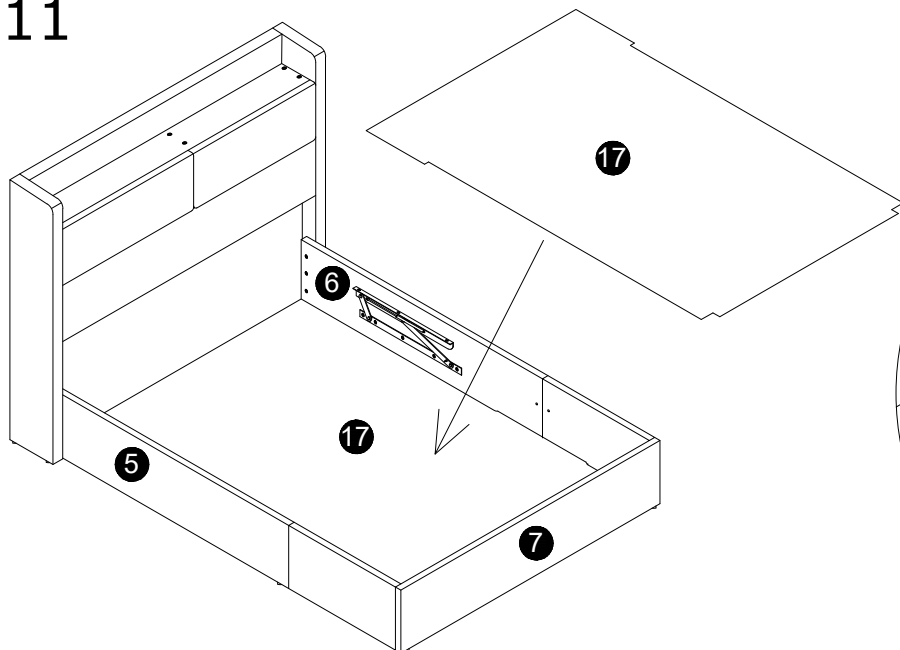


12

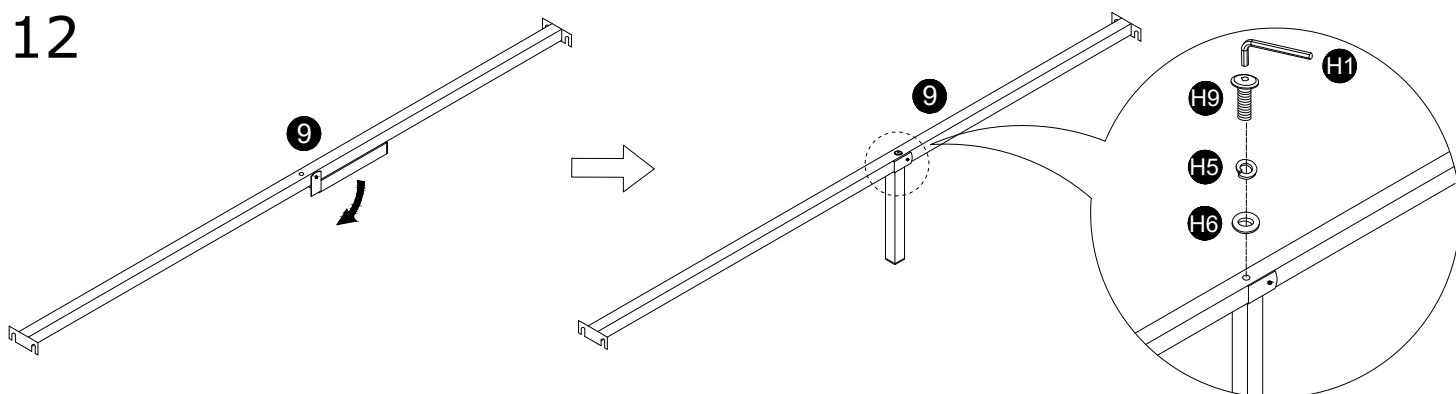


13

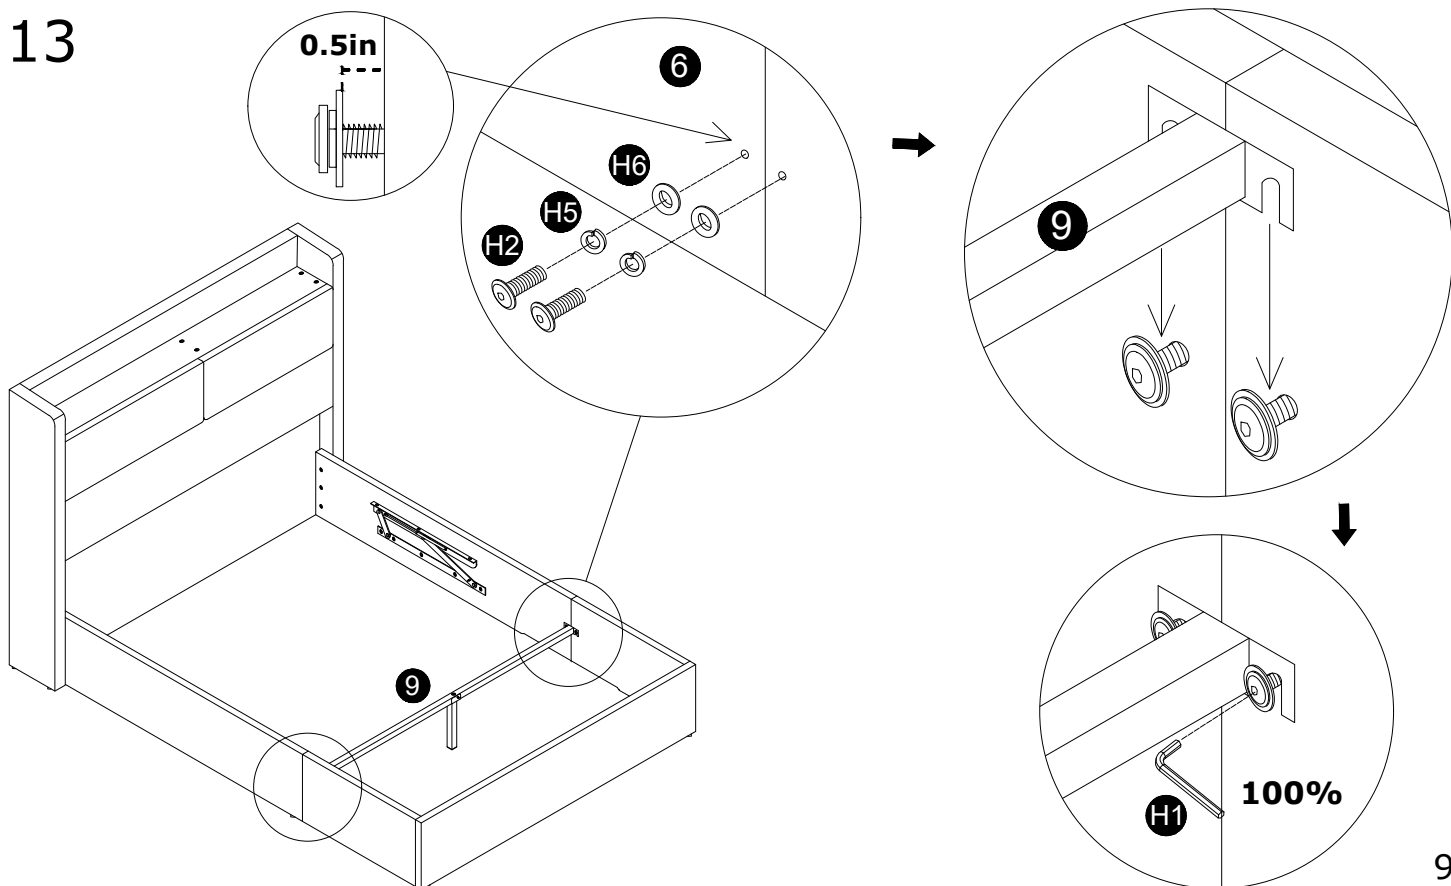


14

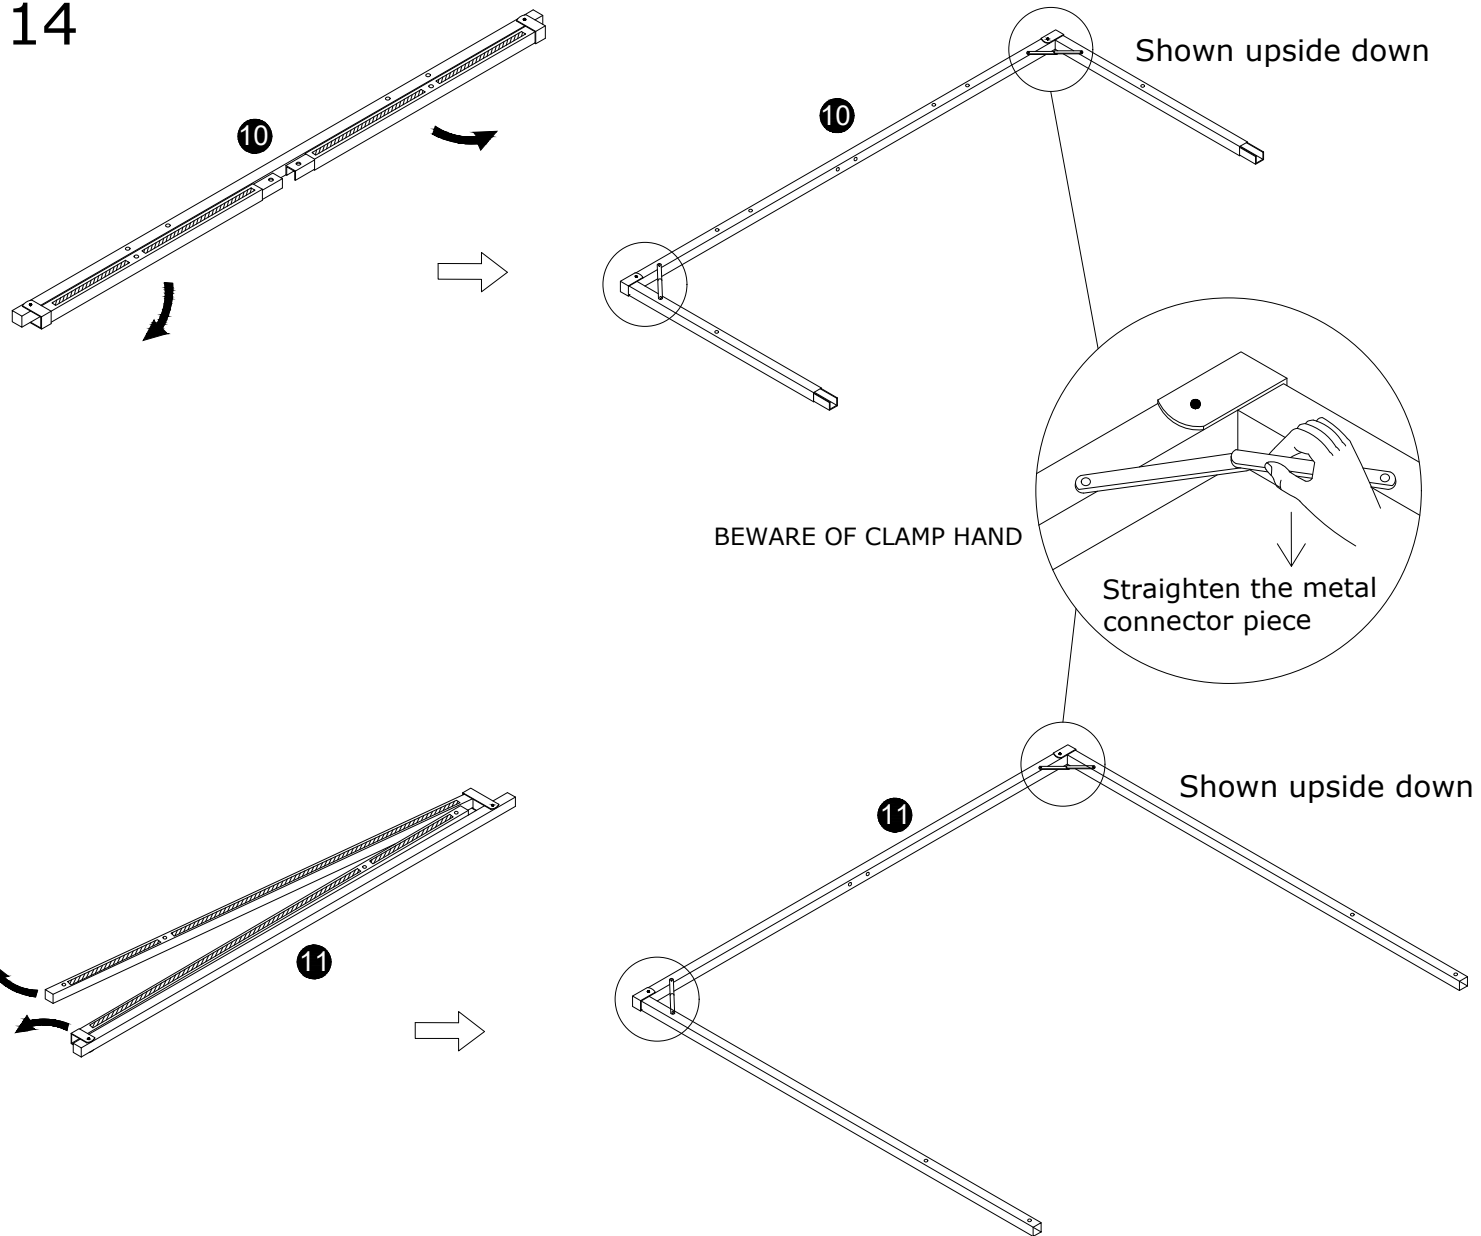


15

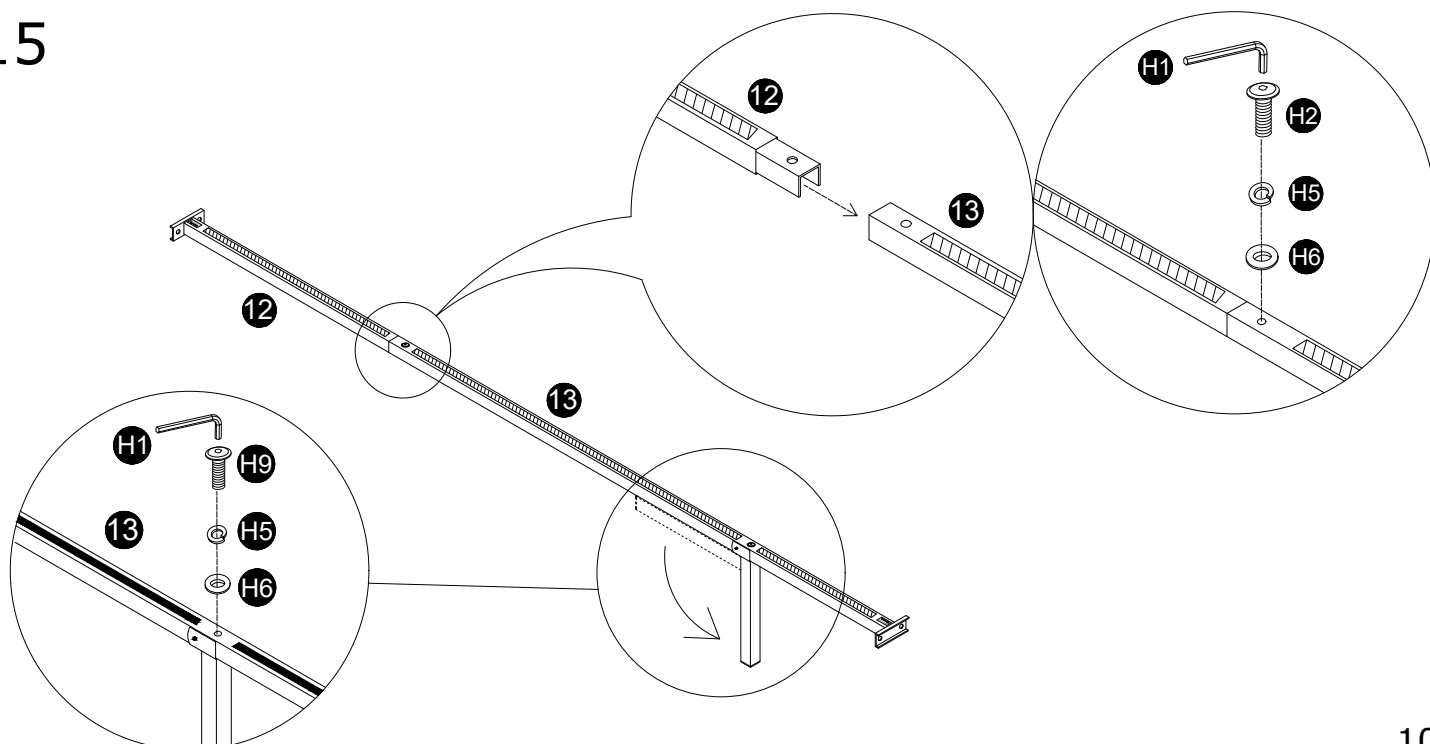

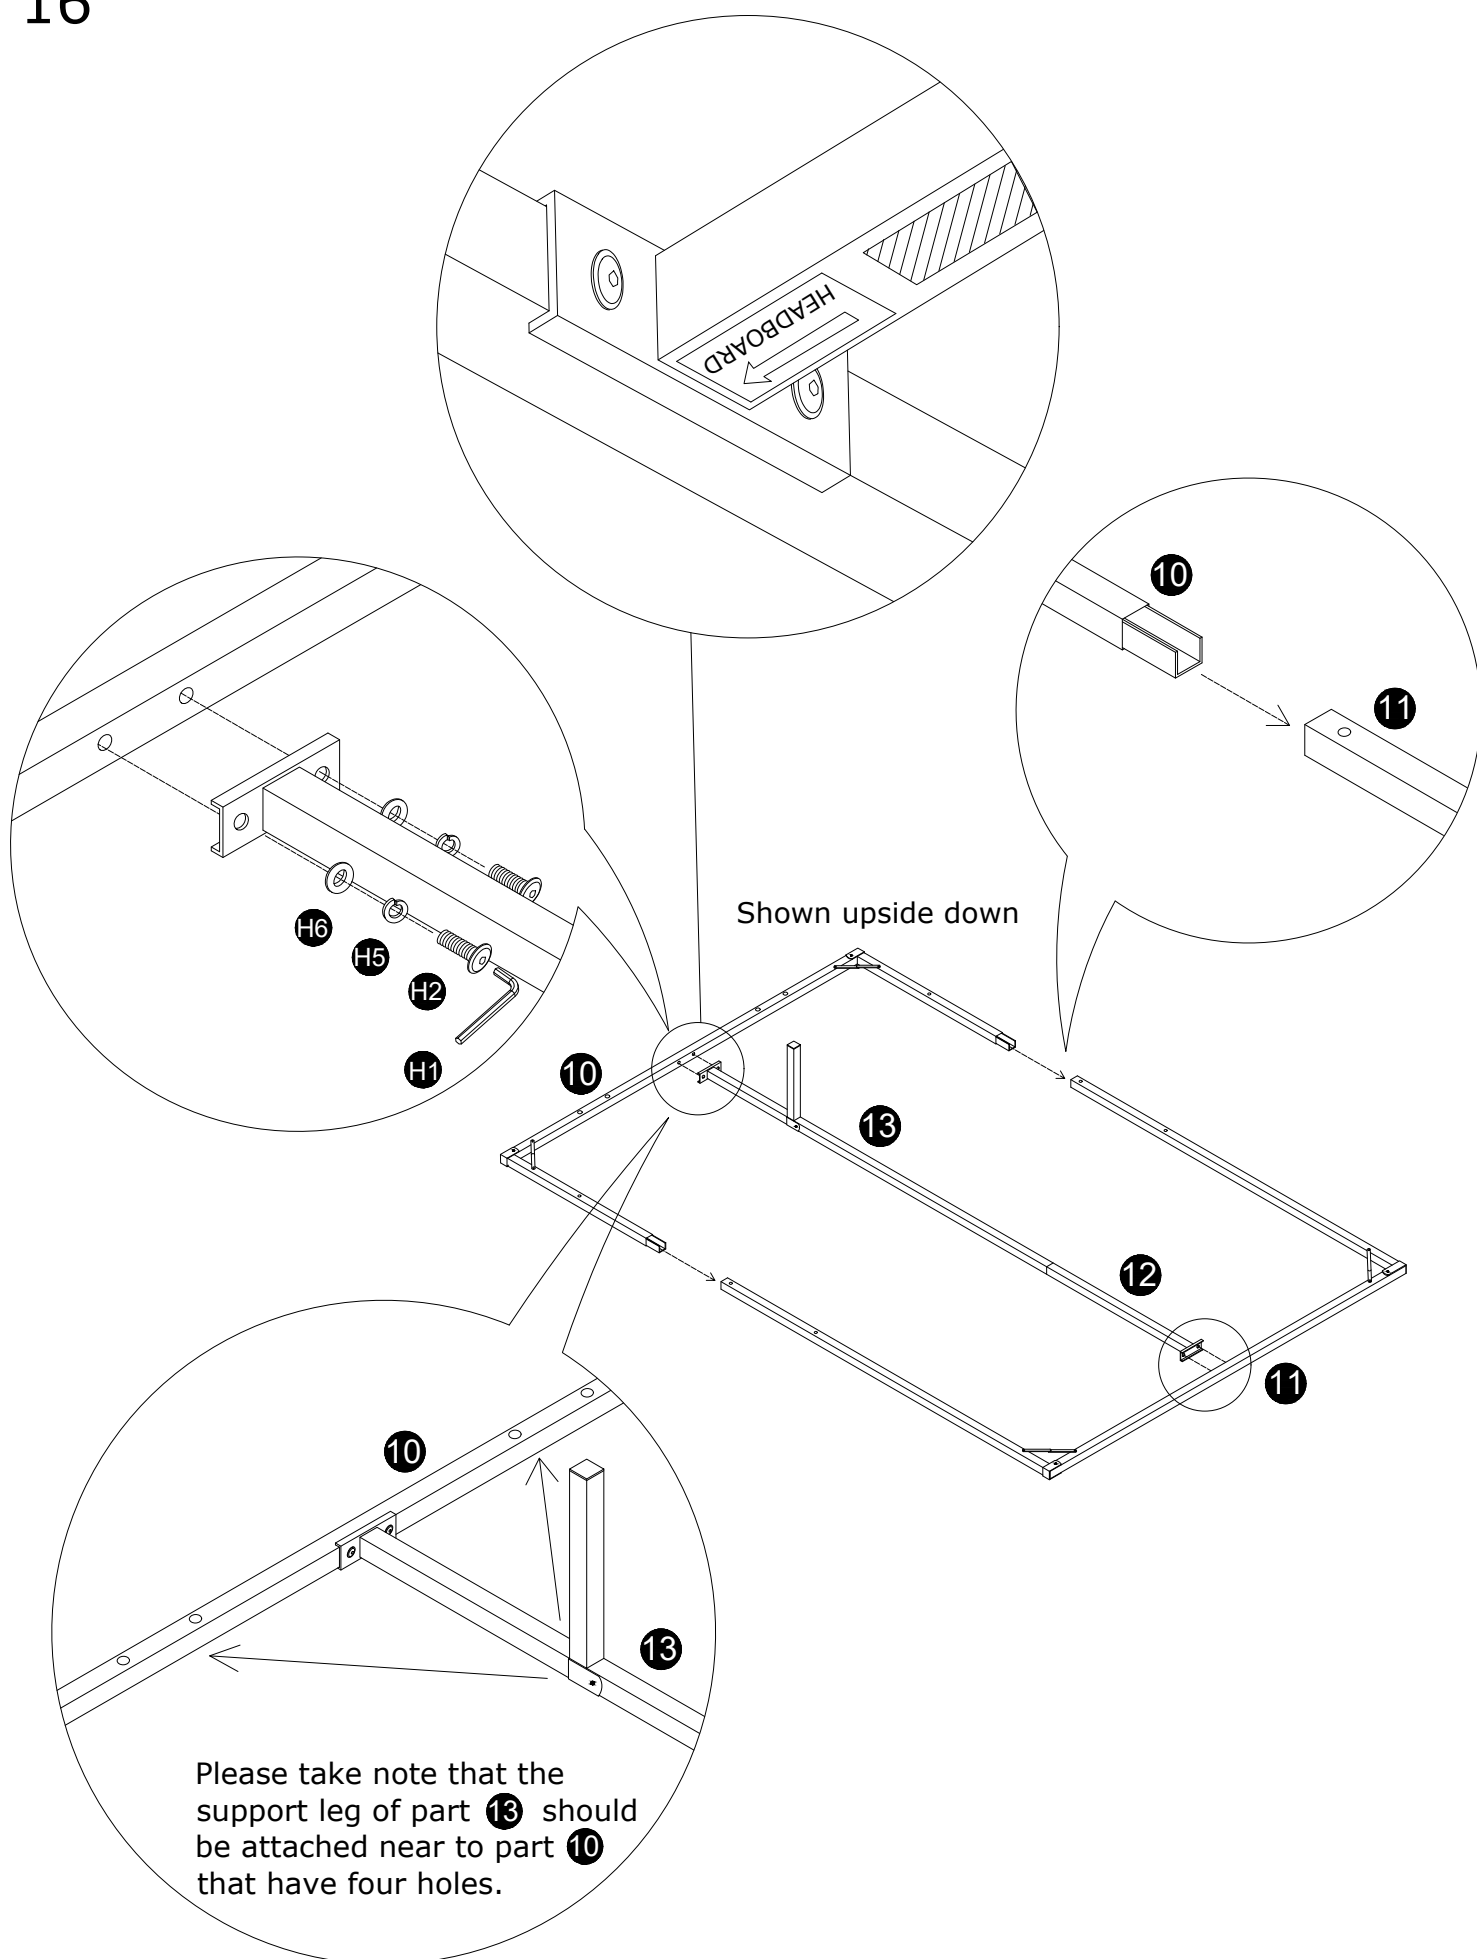


17

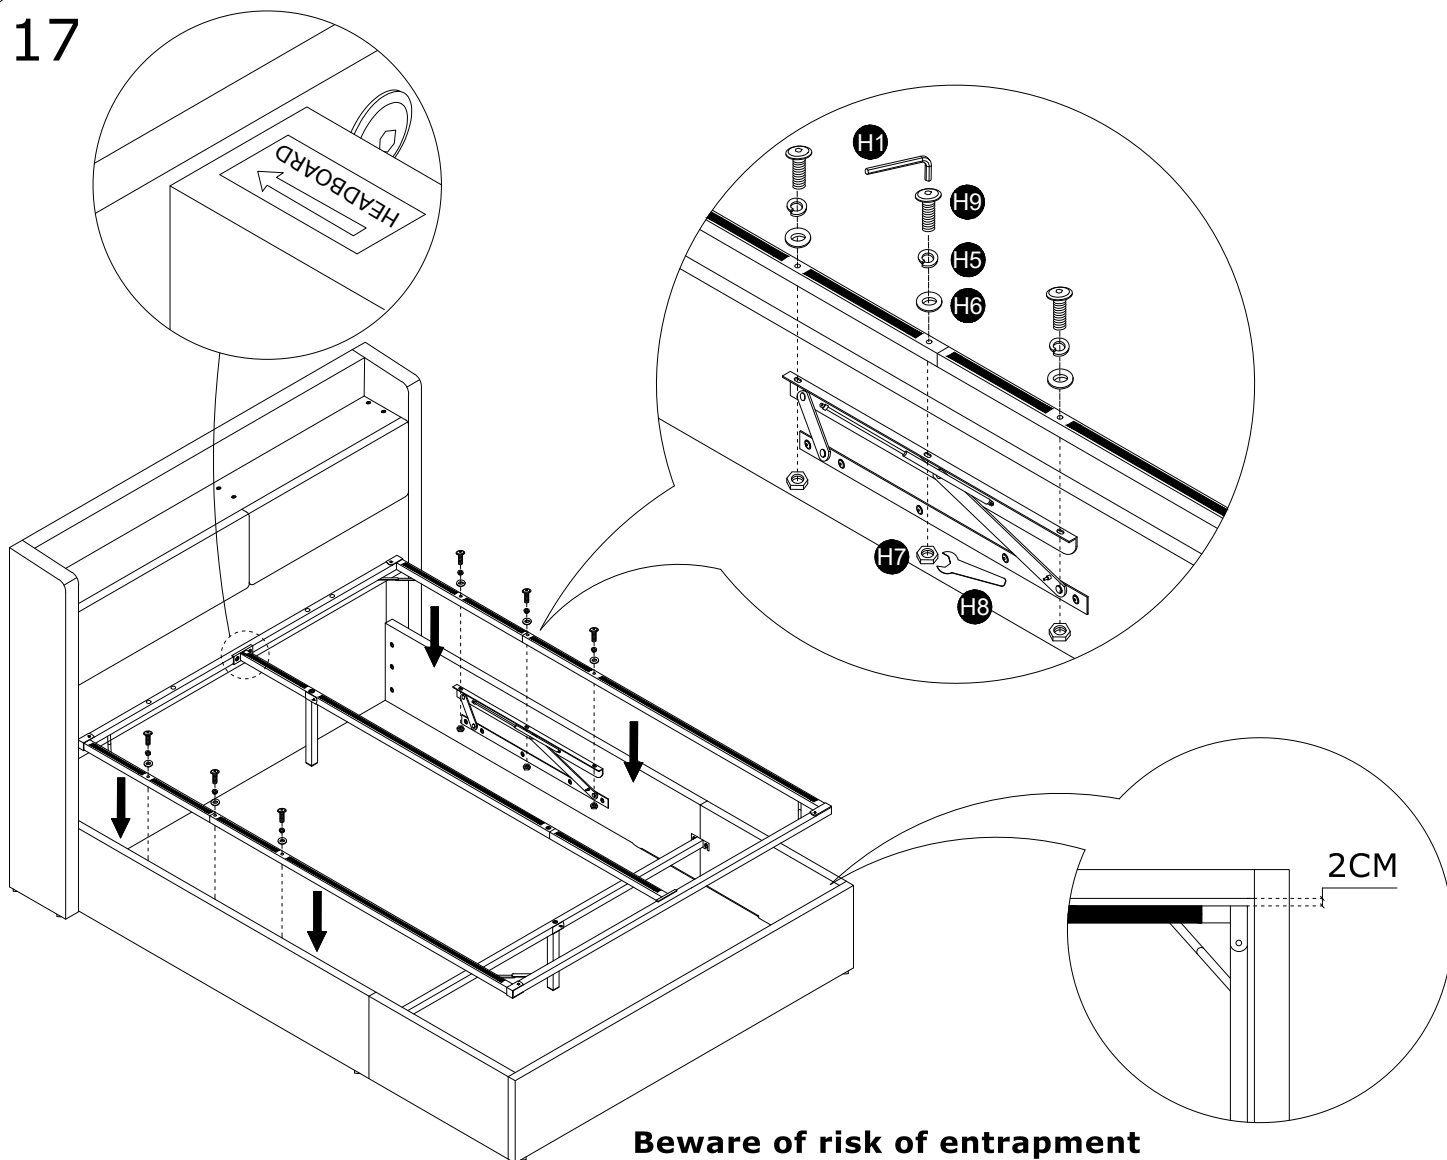


Beware of risk of entrapment from folding hinges!

18

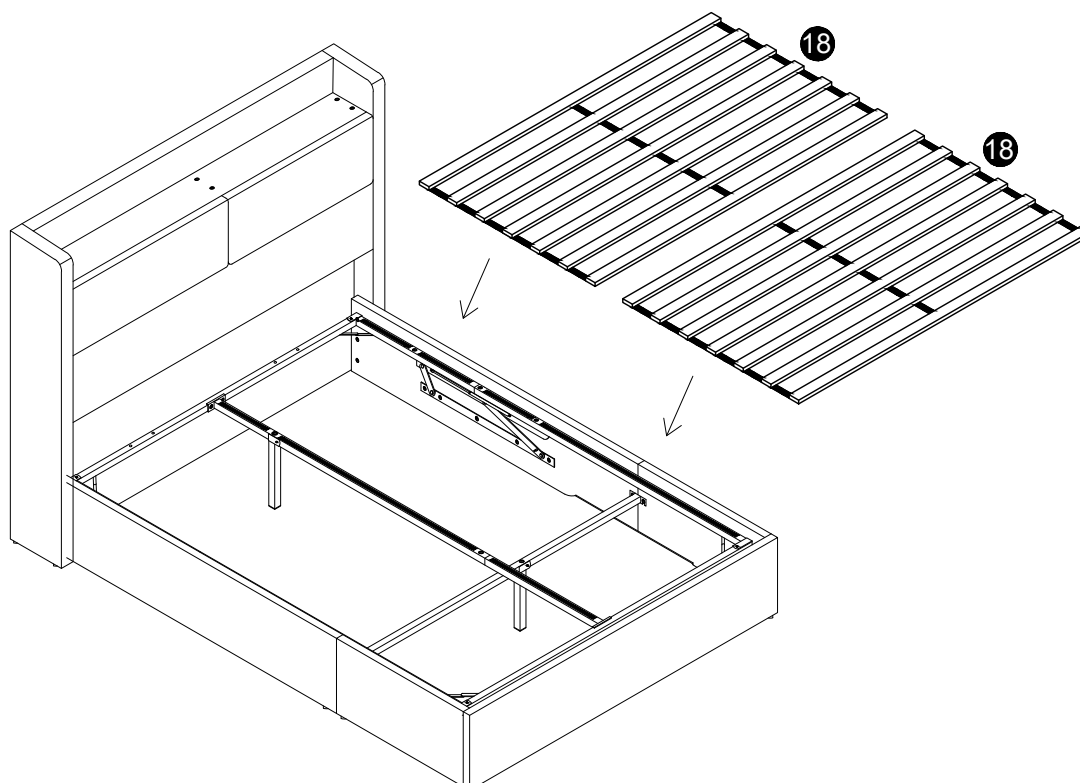


19

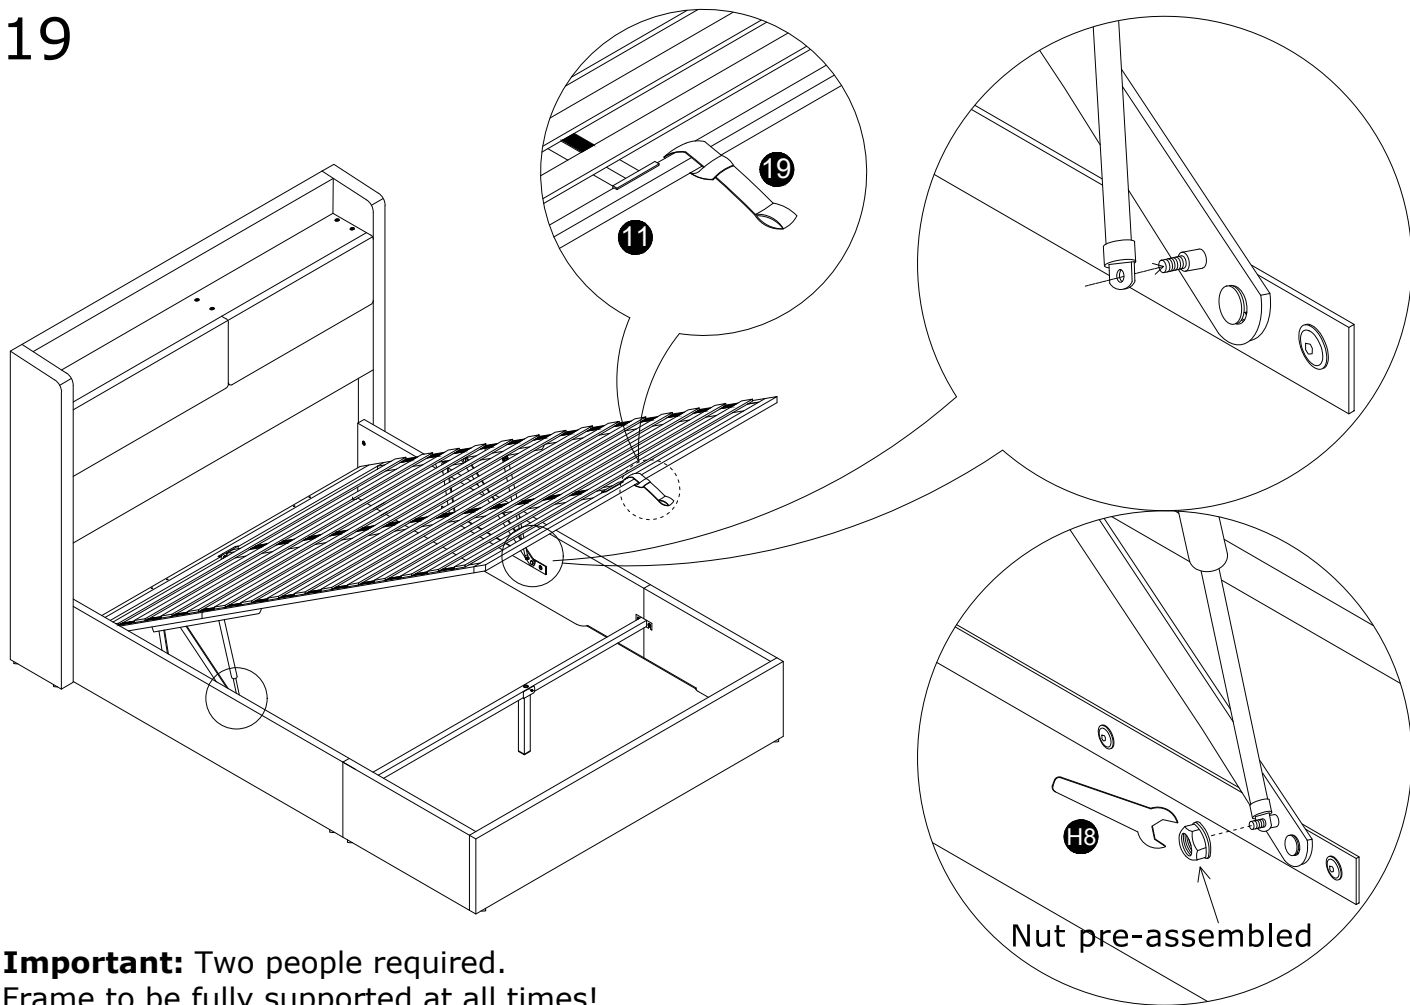


Important: Two people required.
Frame to be fully supported at all times!

20

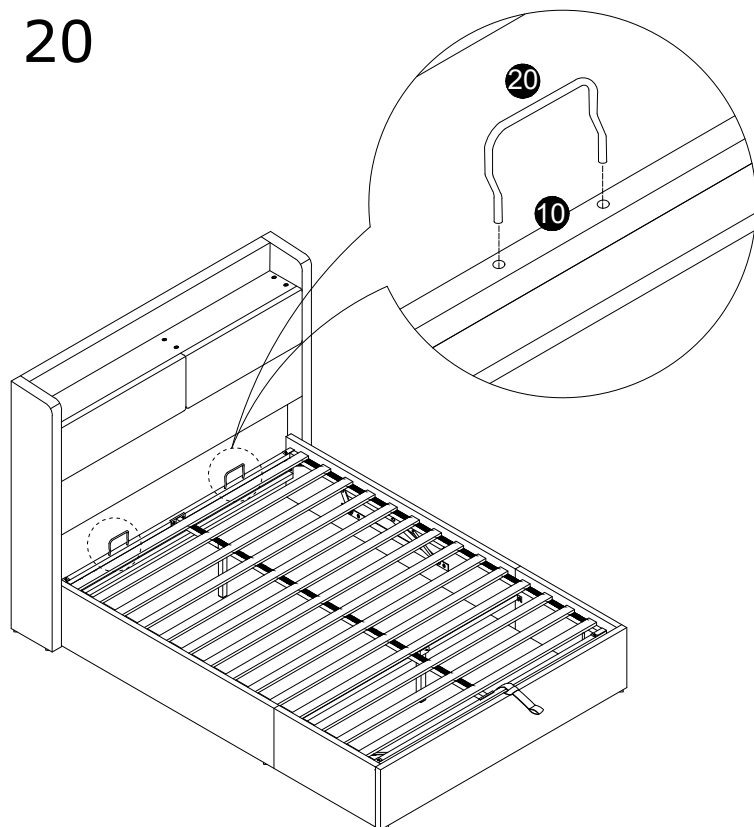

After placing the mattress on frame, push down the frame with 30lbs force.

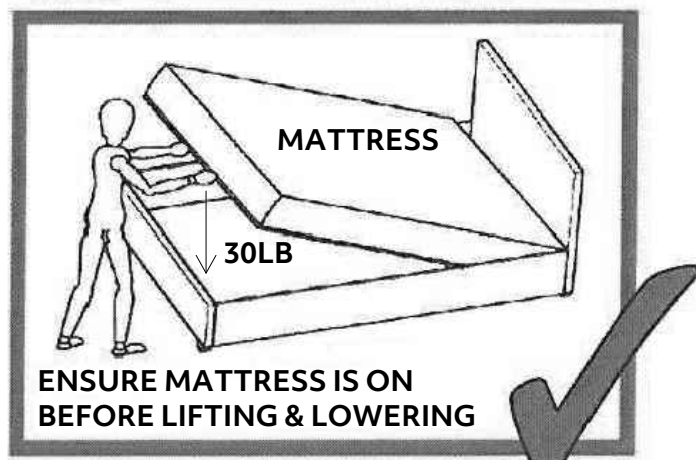

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.