


Assembly Instruction

Tile Top Table






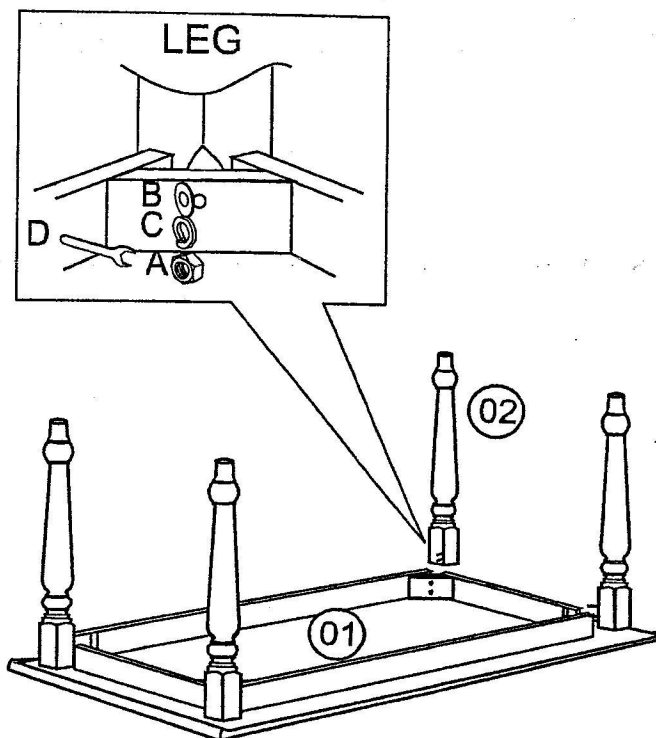


1. Turn The Underside Of The Table Over And Place It On A Piece Of Cloth On The Floor

2. Fix The Turned Leg To The Corner Of The Apron With Flat Washer, Spring Washer And Hex Nut Using The Wrench Provided To Tighten.

3. Repeat The Same Of The Other Three Leg.

4. Turn The Assemble Table Over Carefully.

PART LIST			
1	Table Top		1 Pc
2	Table Legs		4 Pcs
HARDWARE LIST			
A	5/16 Hex Nut		8 Pcs
B	5/16 Flat Washer		8 Pcs
C	Spring Washer		8 Pcs
D	Wrench		1 Pc

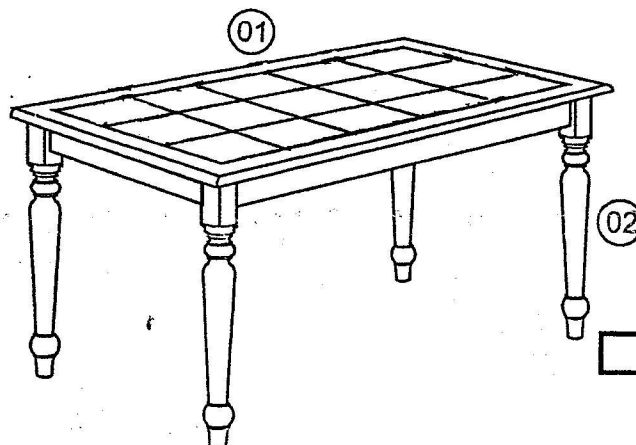


MADE IN MALAYSIA




WINDSOR CHAIR






ASSEMBLY INSTRUCTIONS

Page 1 of 1

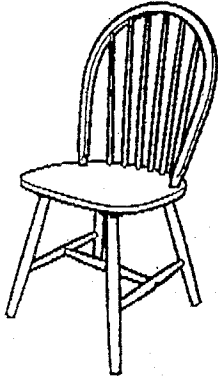
Model : Spindleback Windsor
Chair (RTA)




No.	Parts List (1 Chair)	Qty.
P1.	 Seat	1 pc.
P2.	 Side Frame	2 pcs.
P3.	 Stretcher	1 pc.

No.	Hardware List (1 Chair)	Qty.
H1.	 Allen Key	1 pc.
H2.	 M6 x 50 JCBC Screw	2 pcs.
H3.	 M7 x 40 JCBC-W Screw	8 pcs.
H4.	 Barrel Nut	2 pcs.
H5.	 Wood Button	2 pcs.


Step 1

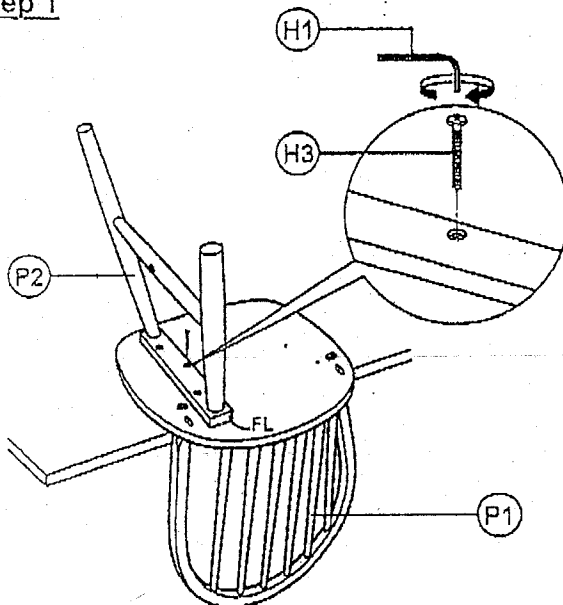


Step 2

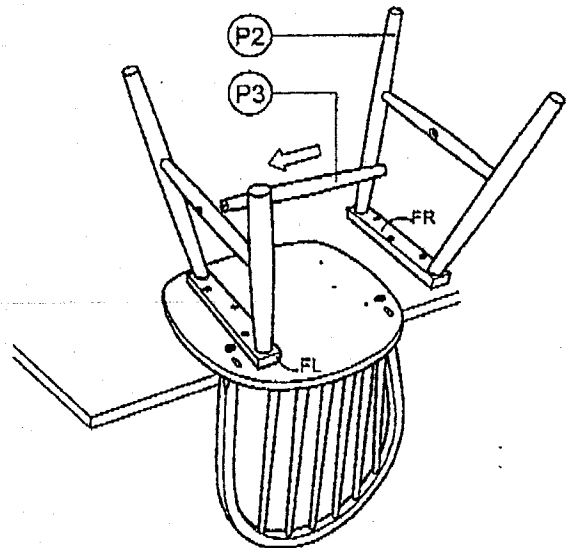

Step 3

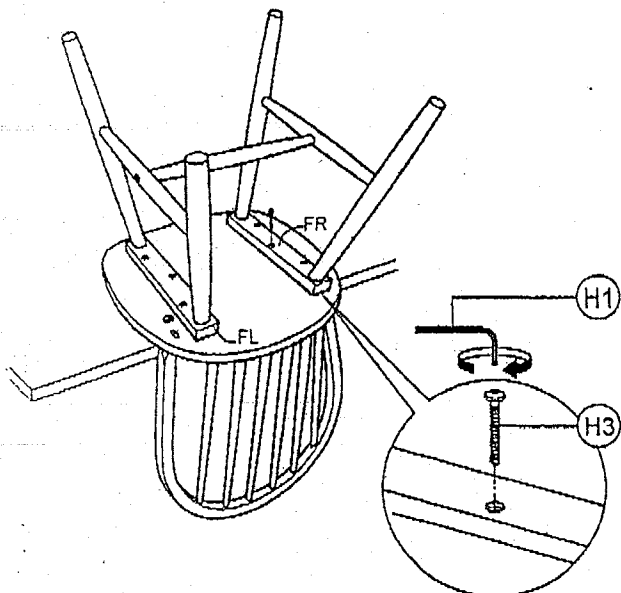

Step 4

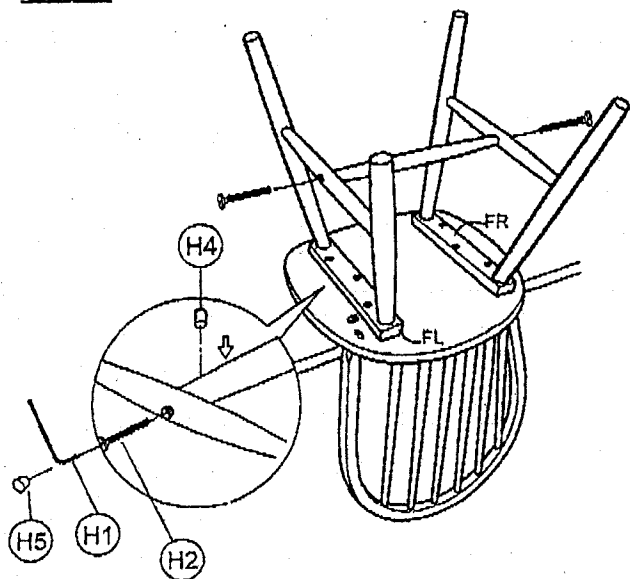

AFTER A FEW DAYS OF INITIAL ASSEMBLY AND CHAIR HAVE ACCLIMATED TO NEW ENVIRONMENT, RETIGHTEN ALL HARDWARE.