
SE-4.28A

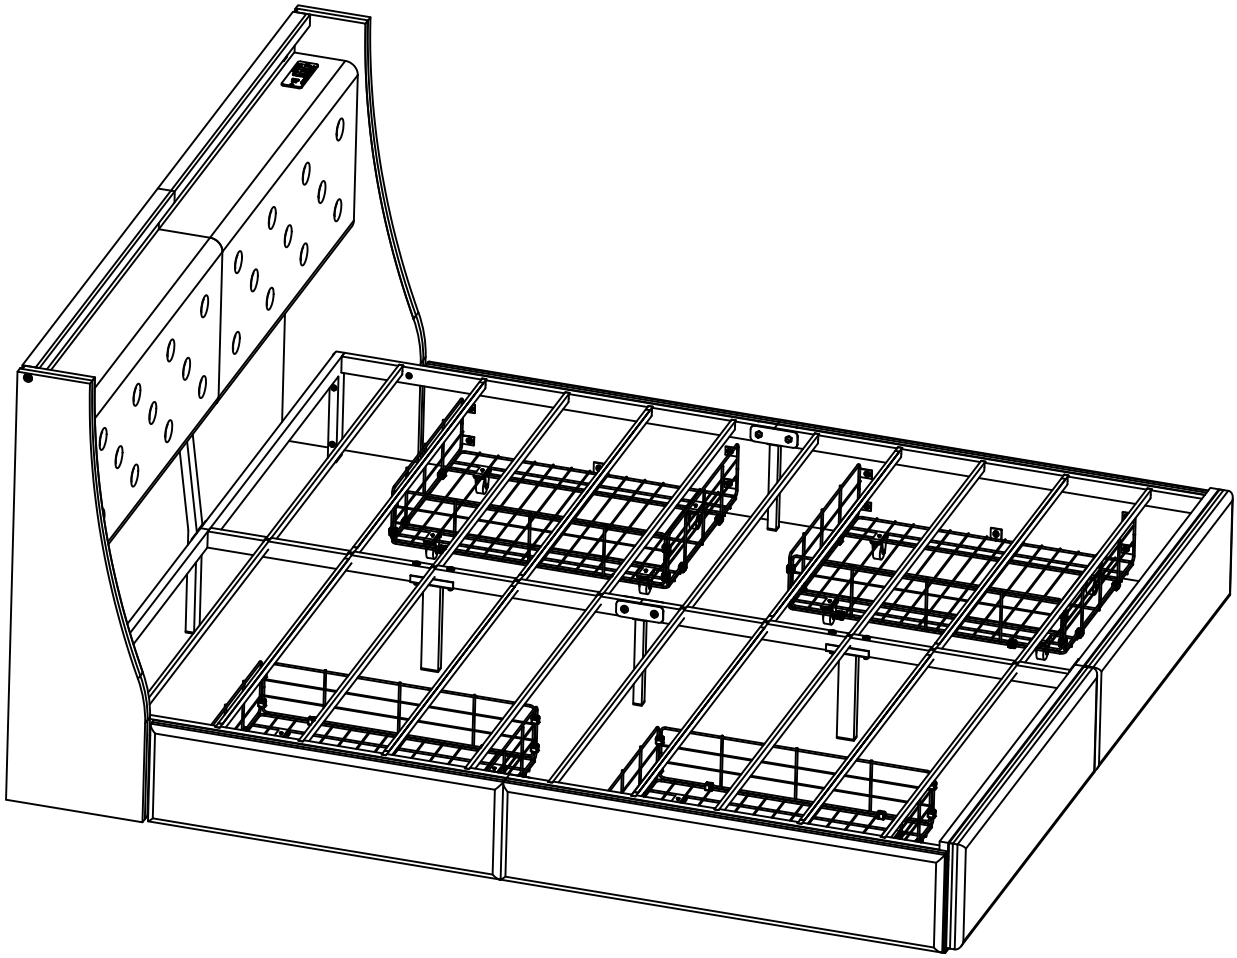


# Model: C336C-KC-FH


## PRODUCT GUIDE AND INSTALLATION MANUAL

**Scan the QR code to watch the installation video**


# Parts List:

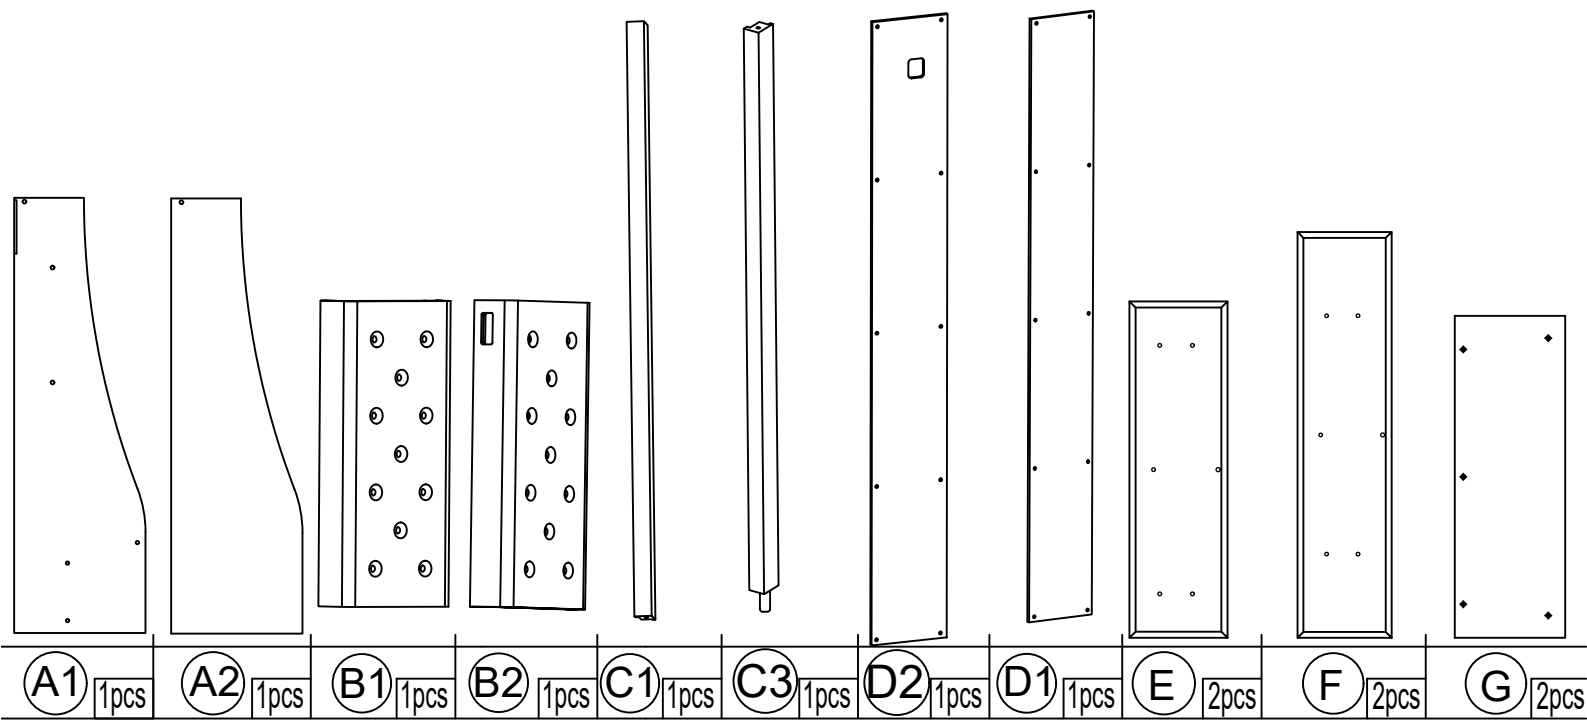

| A1 | A2 | B1 | B2 | C1 | C3 | D2 | D1 | E | F | G |
|---|---|---|---|---|---|---|---|---|---|---|
| 1pcs | 1pcs | 1pcs | 1pcs | 1pcs | 1pcs | 1pcs | 1pcs | 2pcs | 2pcs | 2pcs |

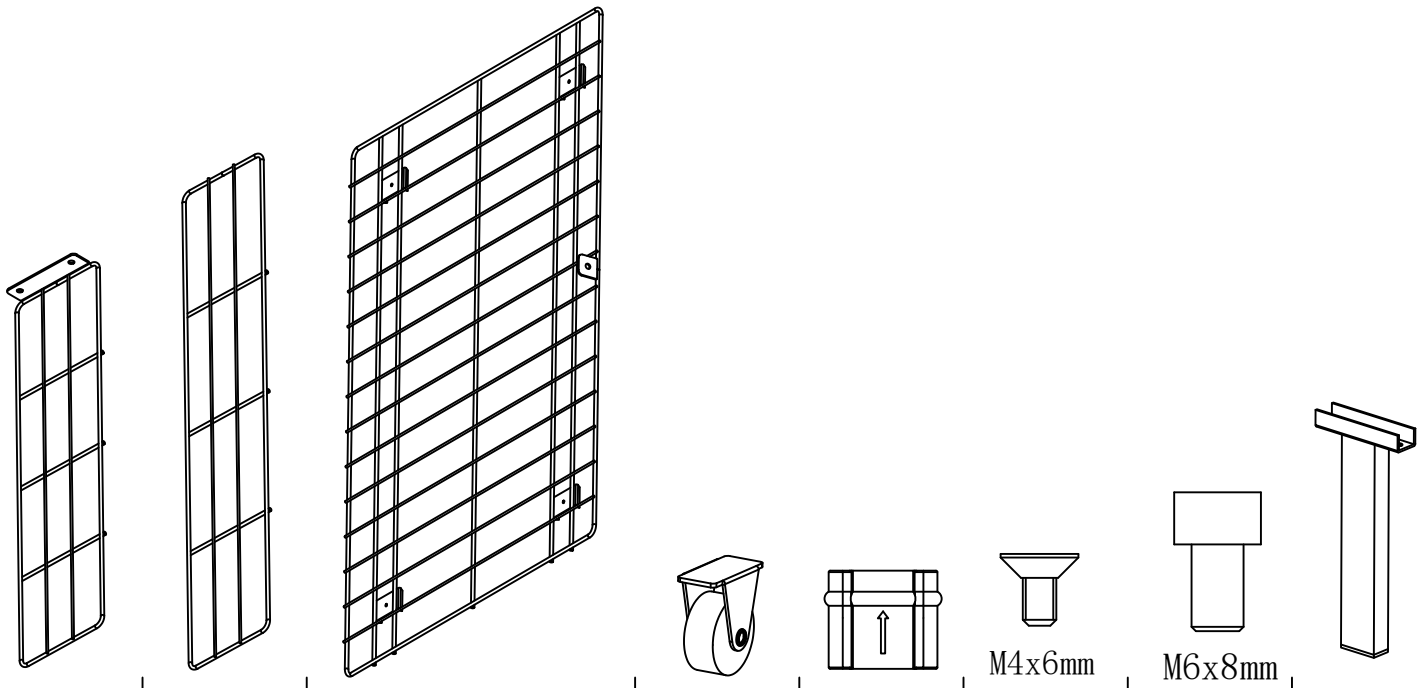



| Z2 | Z3 | Z4 | Z5 | Q1 | Z6 | Z8 | P |
|---|---|---|---|---|---|---|---|
| 8pcs | 4pcs | 4pcs | 16pcs | x42 | x16 | 4pcs | 2pcs |

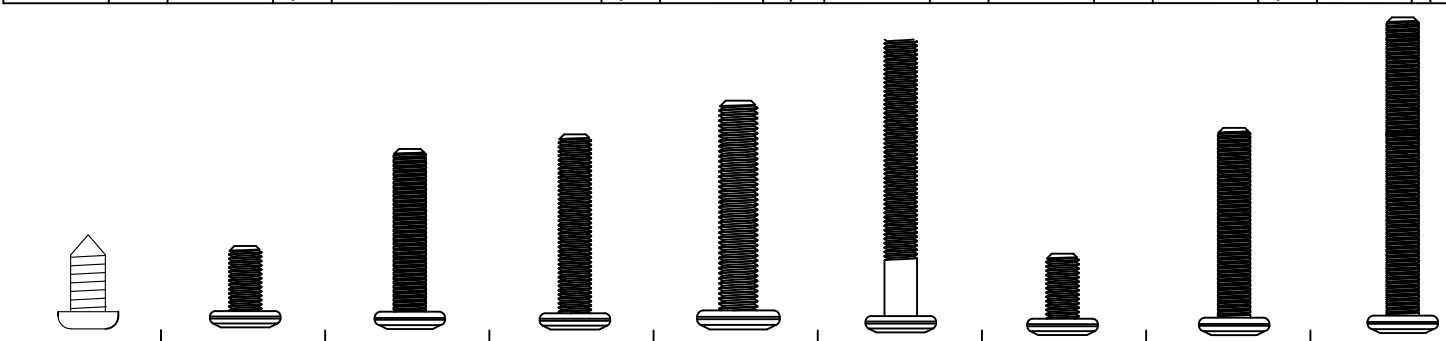


| M4x15mm | M6x15mm | M6x30mm | M6x40mm | M6x45mm | M6x55mm | M8x15mm | M8x35mm | M8x55mm |
|---|---|---|---|---|---|---|---|---|
| V 24pcs | T1 24pcs | T2 8pcs | T3 4pcs | T4 6pcs | T5 4pcs | Y3 2pcs | Y1 10pcs | Z9 6pcs |

# Parts List:

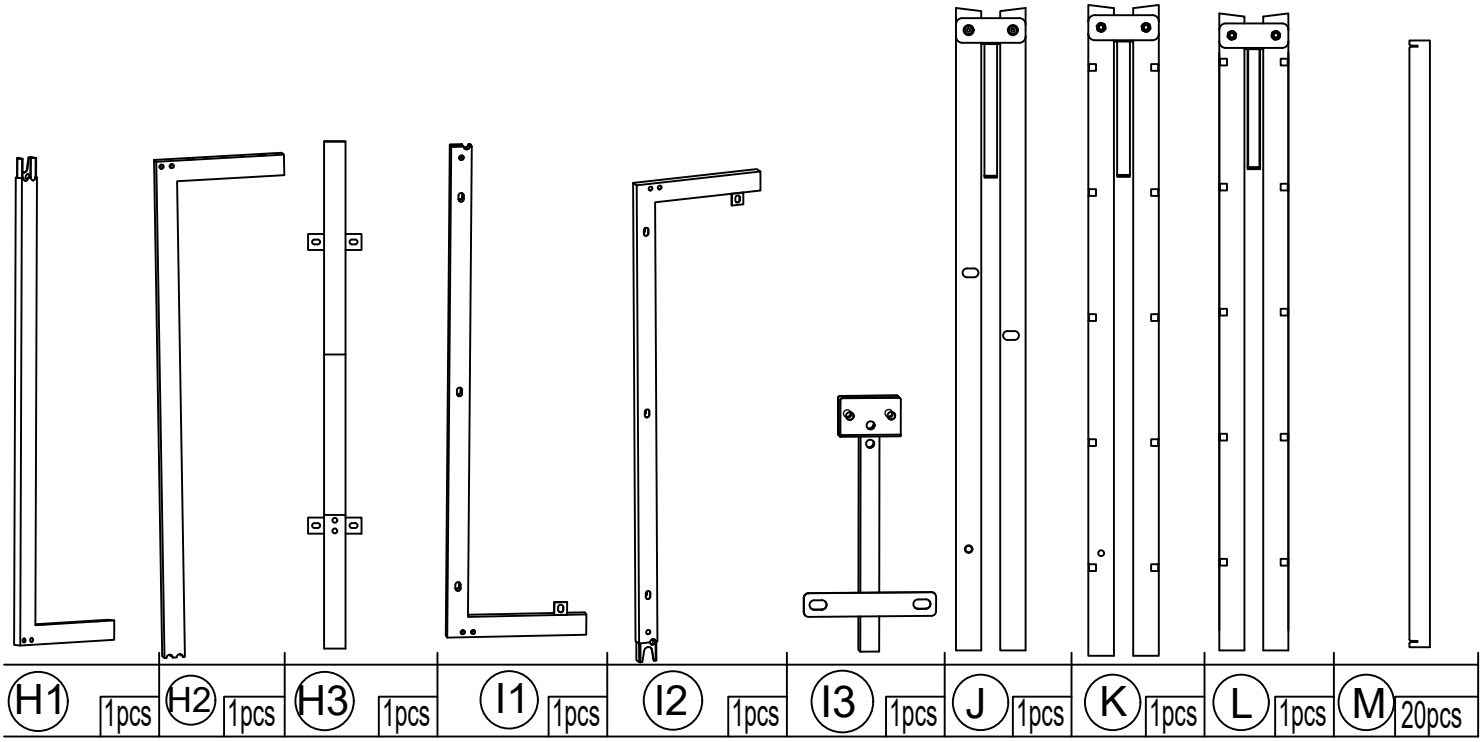


| H1 | H2 | H3 | I1 | I2 | I3 | J | K | L | M |
|---|---|---|---|---|---|---|---|---|---|
| 1pcs | 1pcs | 1pcs | 1pcs | 1pcs | 1pcs | 1pcs | 1pcs | 1pcs | 20pcs |

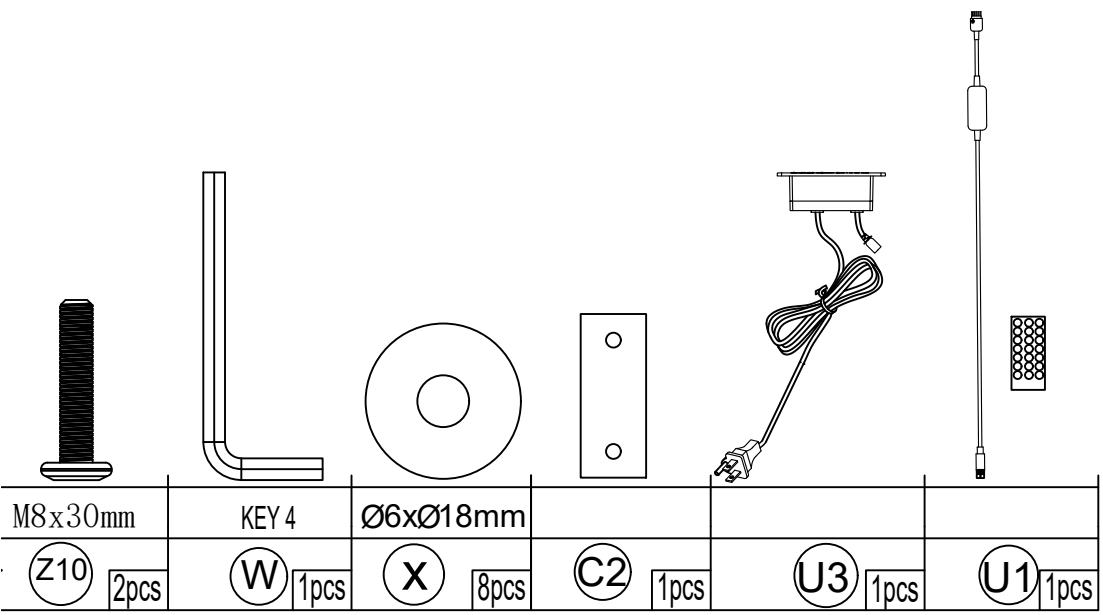


| M8x30mm | KEY 4 | Ø6xØ18mm | | | |
|---|---|---|---|---|---|
| Z10 | W | X | C2 | U3 | U1 |
| 2pcs | 1pcs | 8pcs | 1pcs | 1pcs | 1pcs |


# Step 1

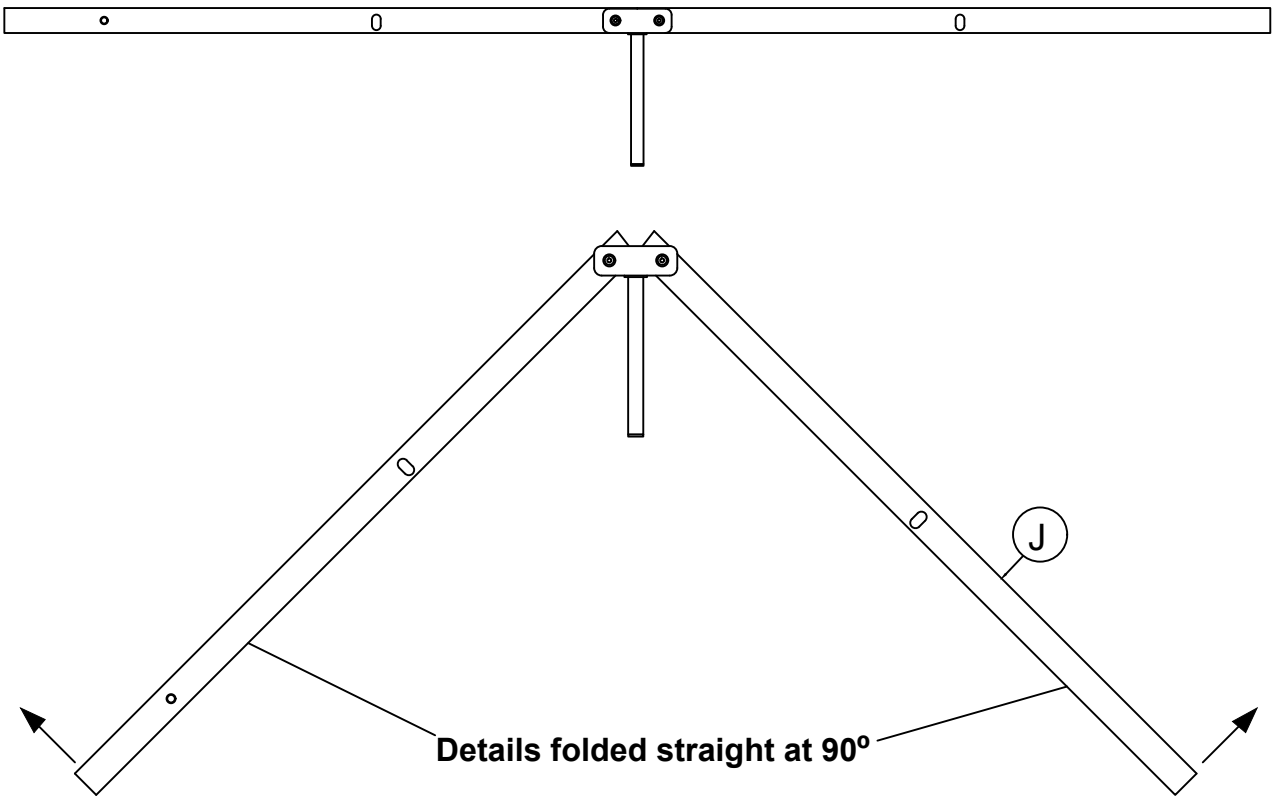
J
Details folded straight at 90º


# Step 2

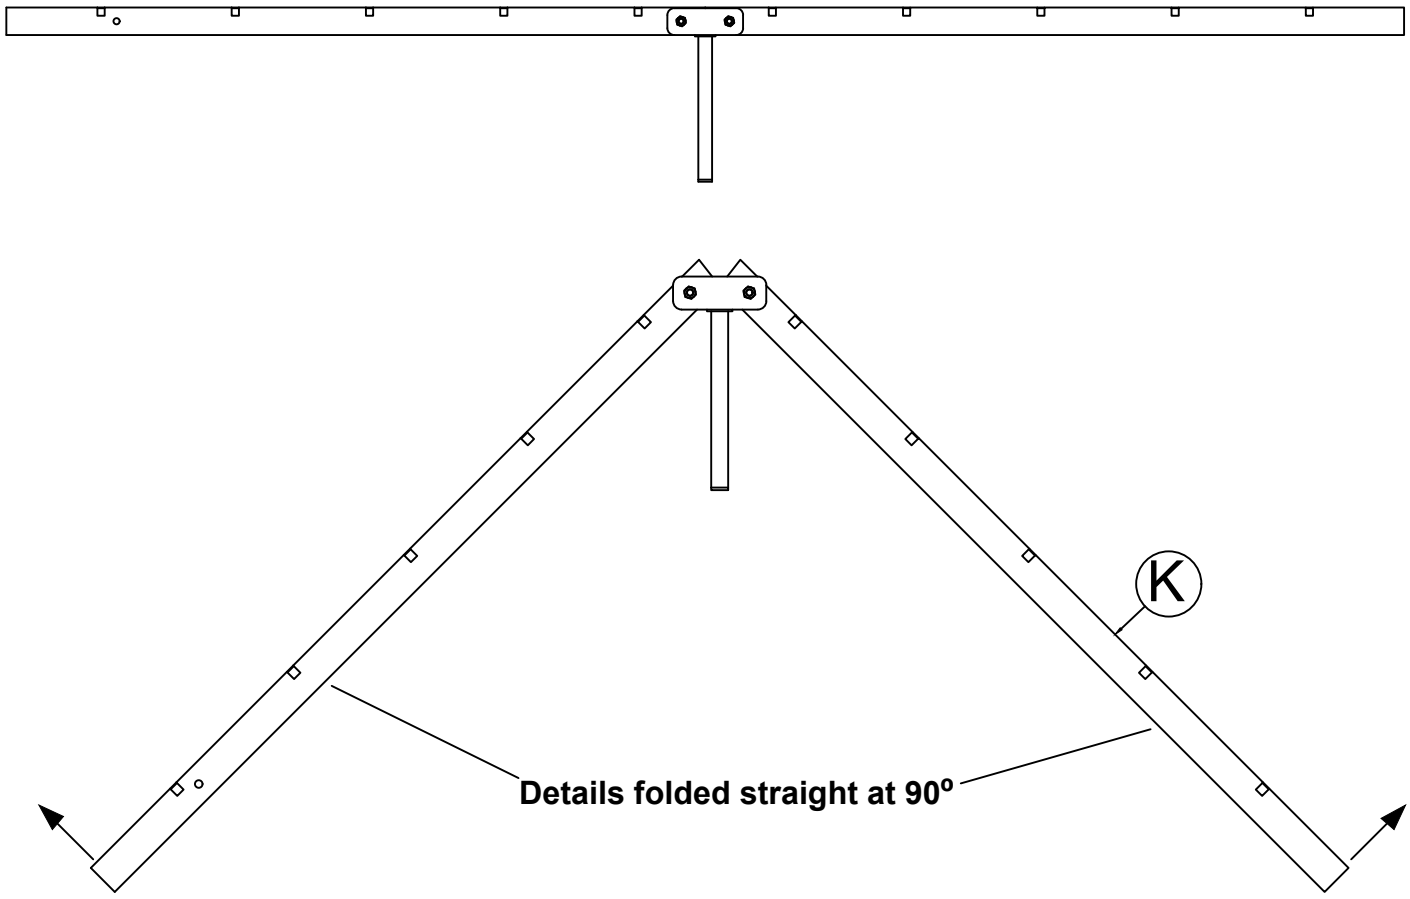
K
Details folded straight at 90º


# Step 3

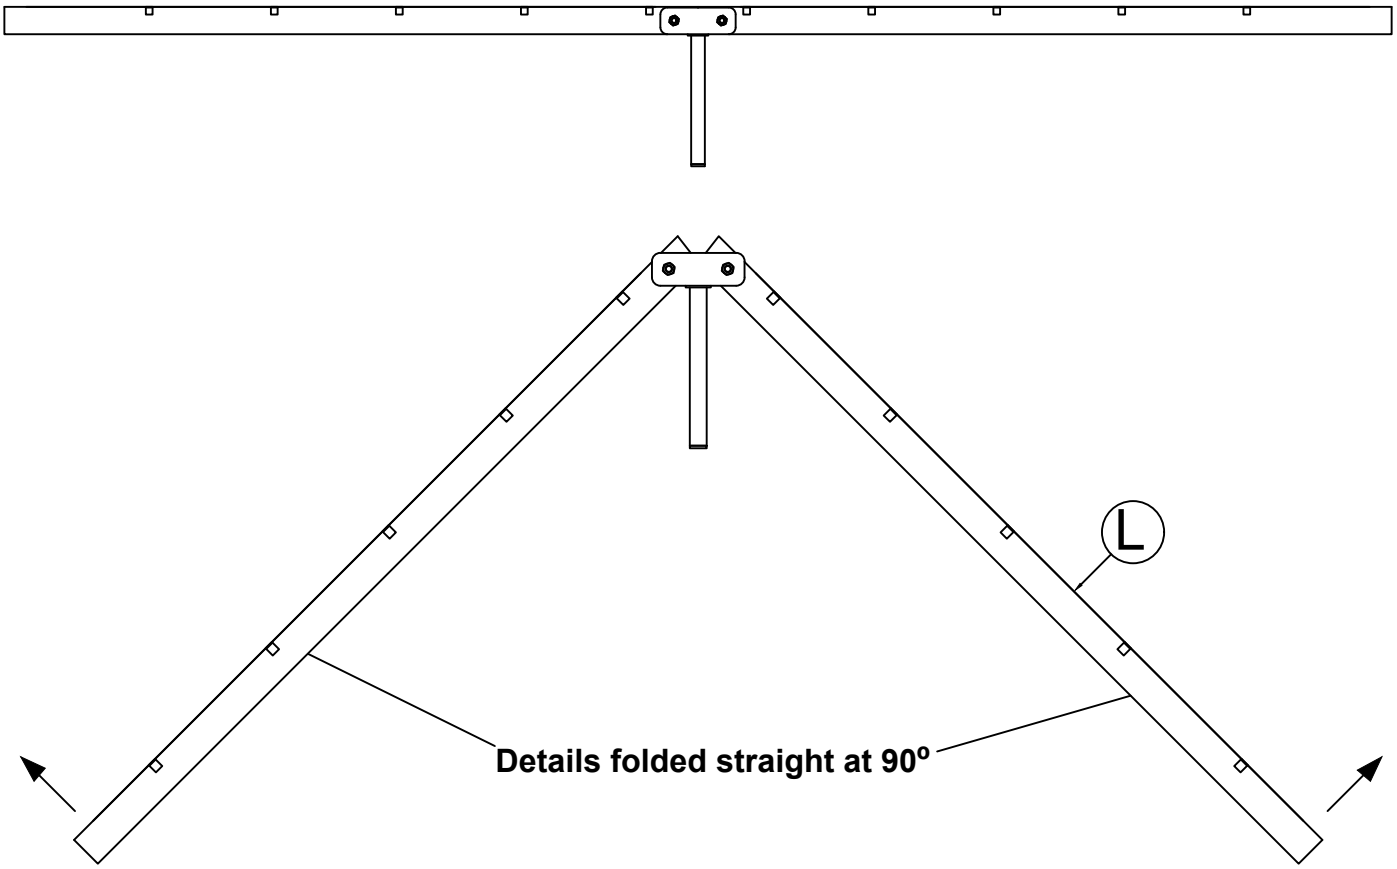



# Step 4

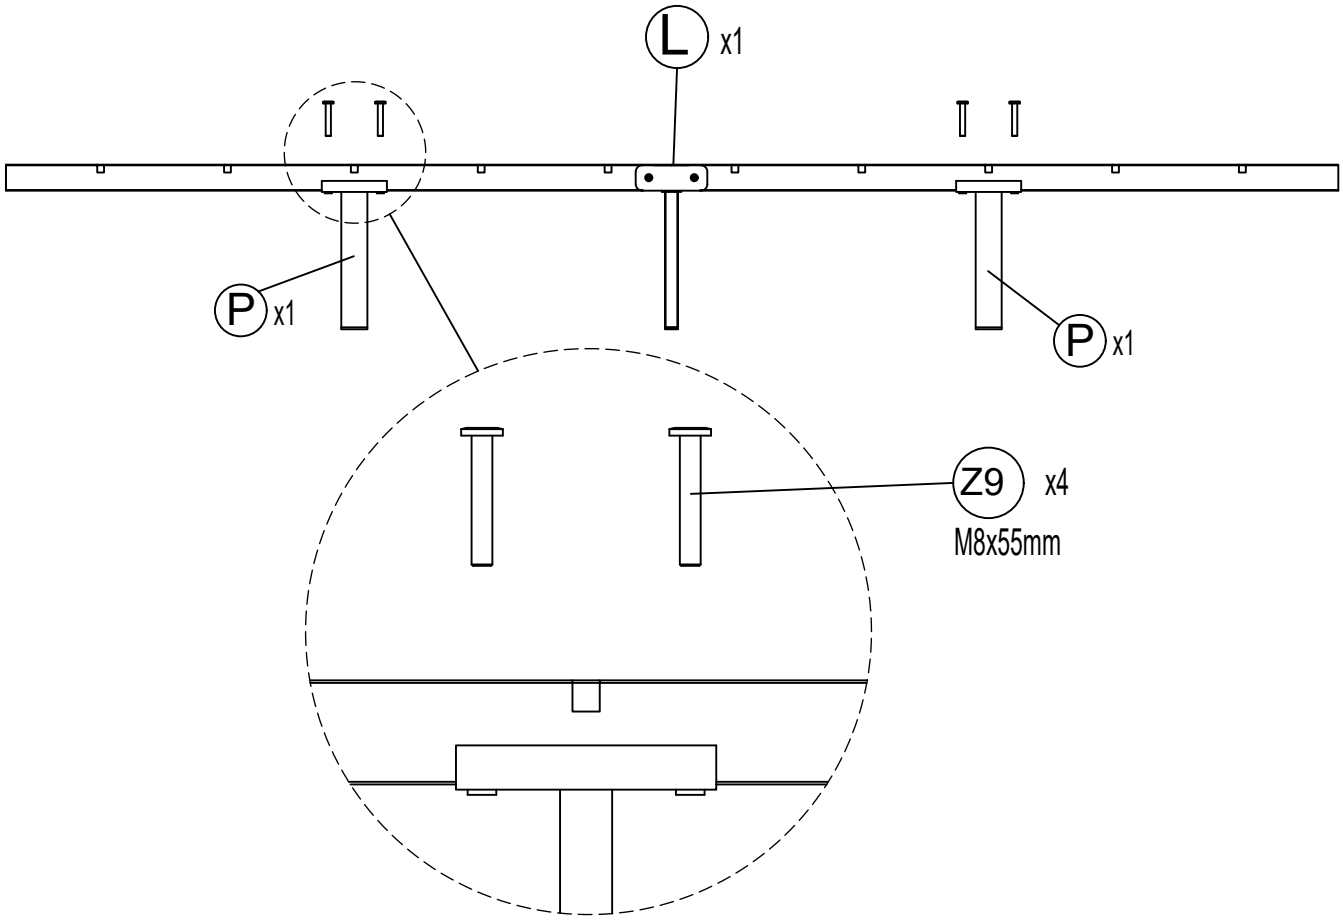


# Step 5

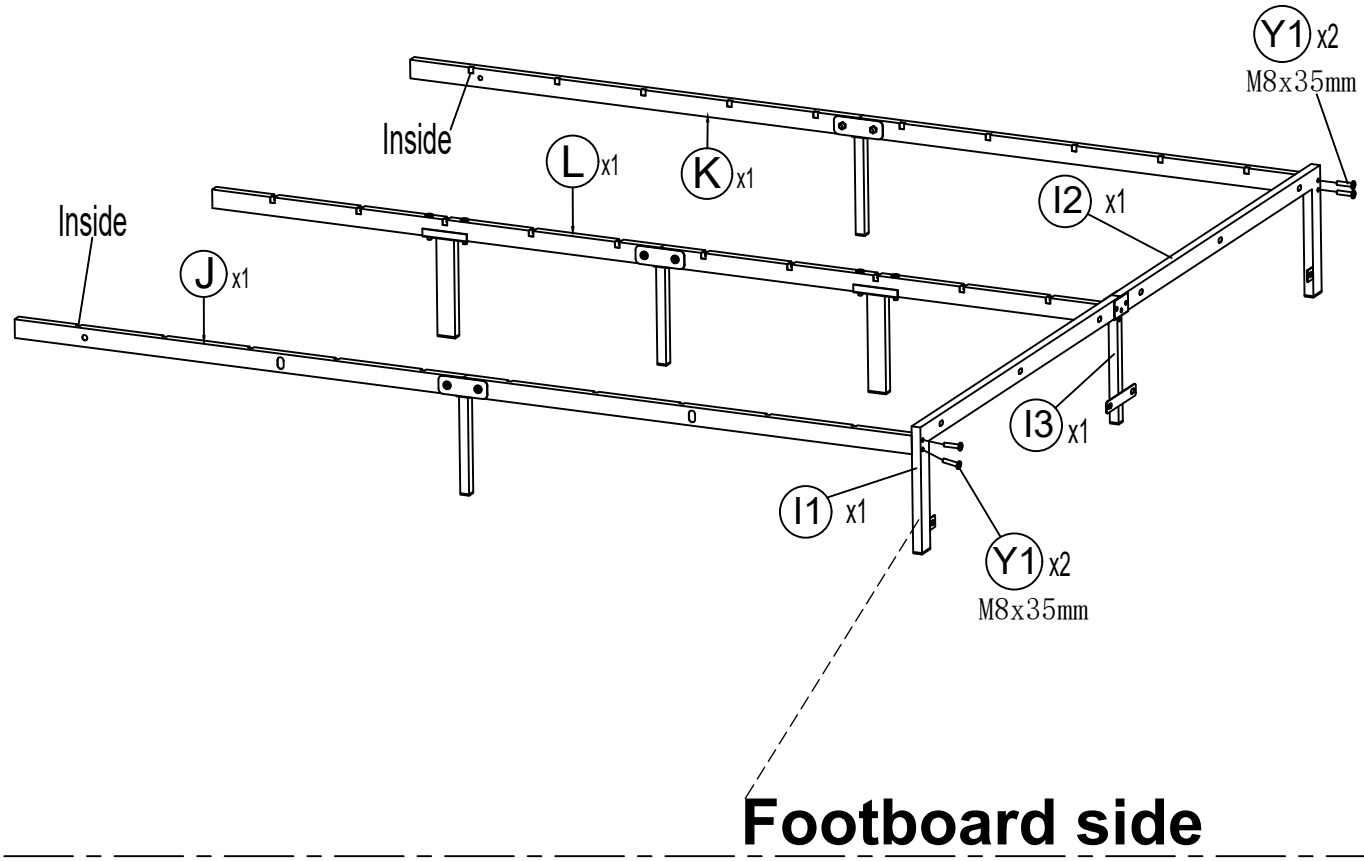
Y1 x2
M8x35mm
Inside
L x1
K x1
I2 x1
Inside
J x1
I3 x1
I1 x1
Y1 x2
M8x35mm
Footboard side

# Step 6

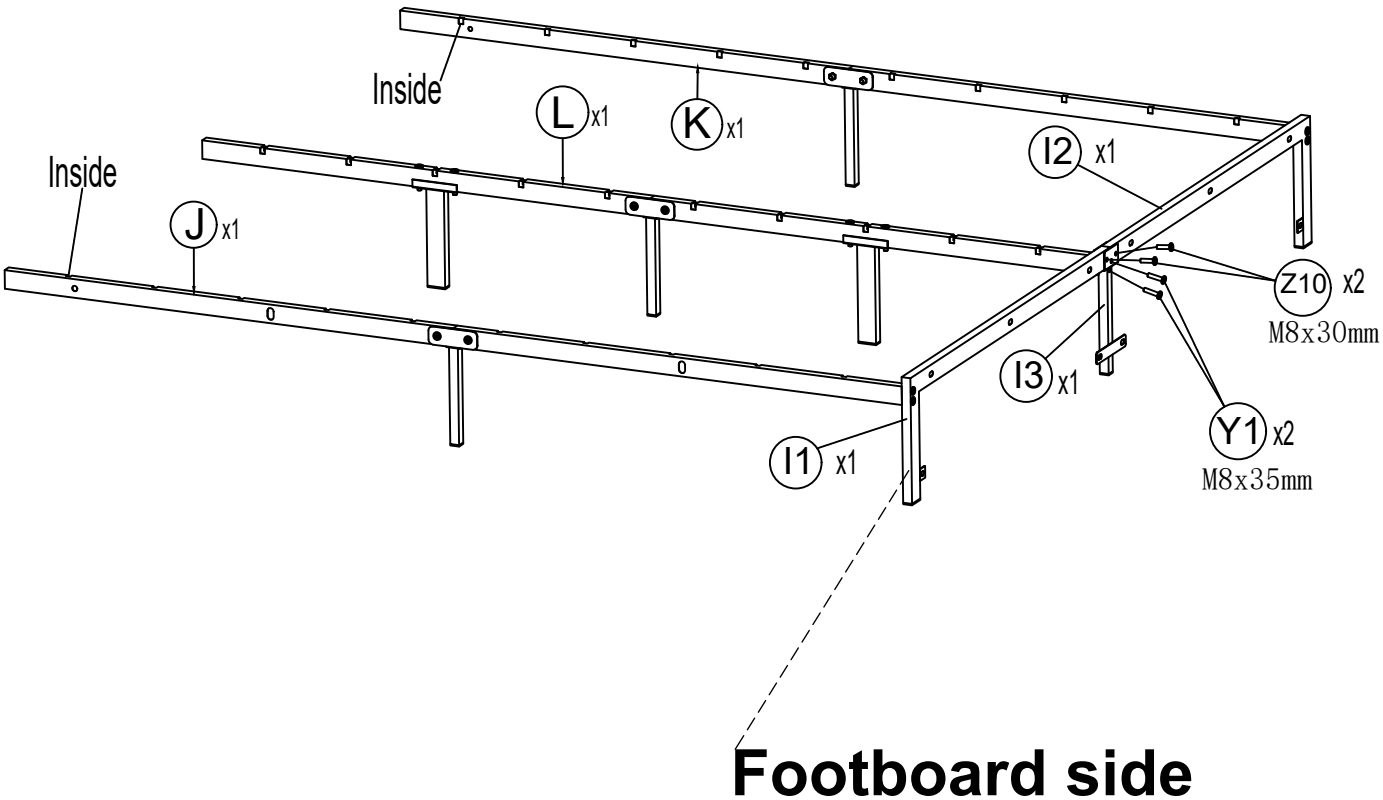

Inside
L x1
K x1
I2 x1
Inside
J x1
Z10 x2
M8x30mm
I3 x1
Y1 x2
M8x35mm
I1 x1
Footboard side

# Step 7

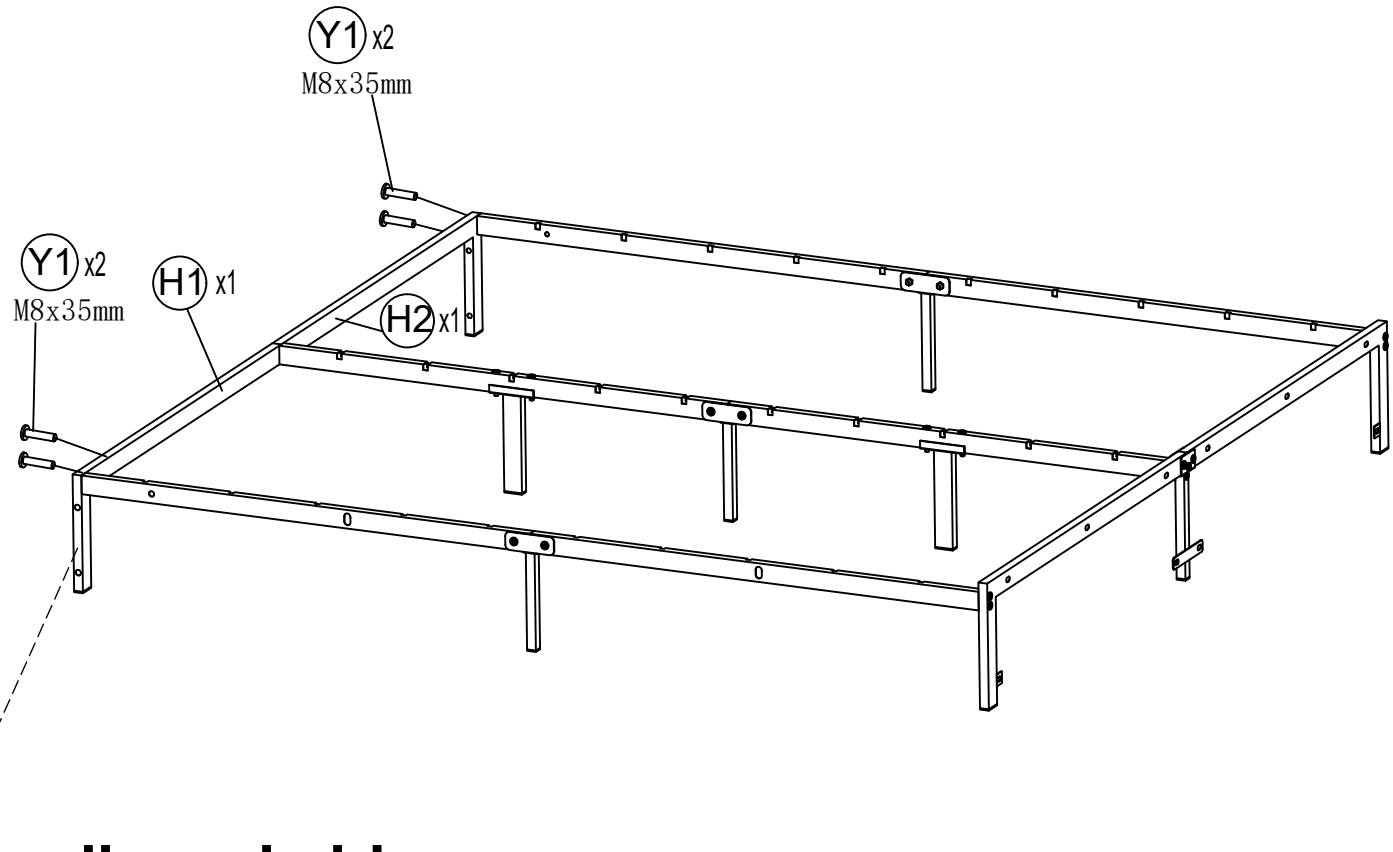



**Headboard side**


# Step 8

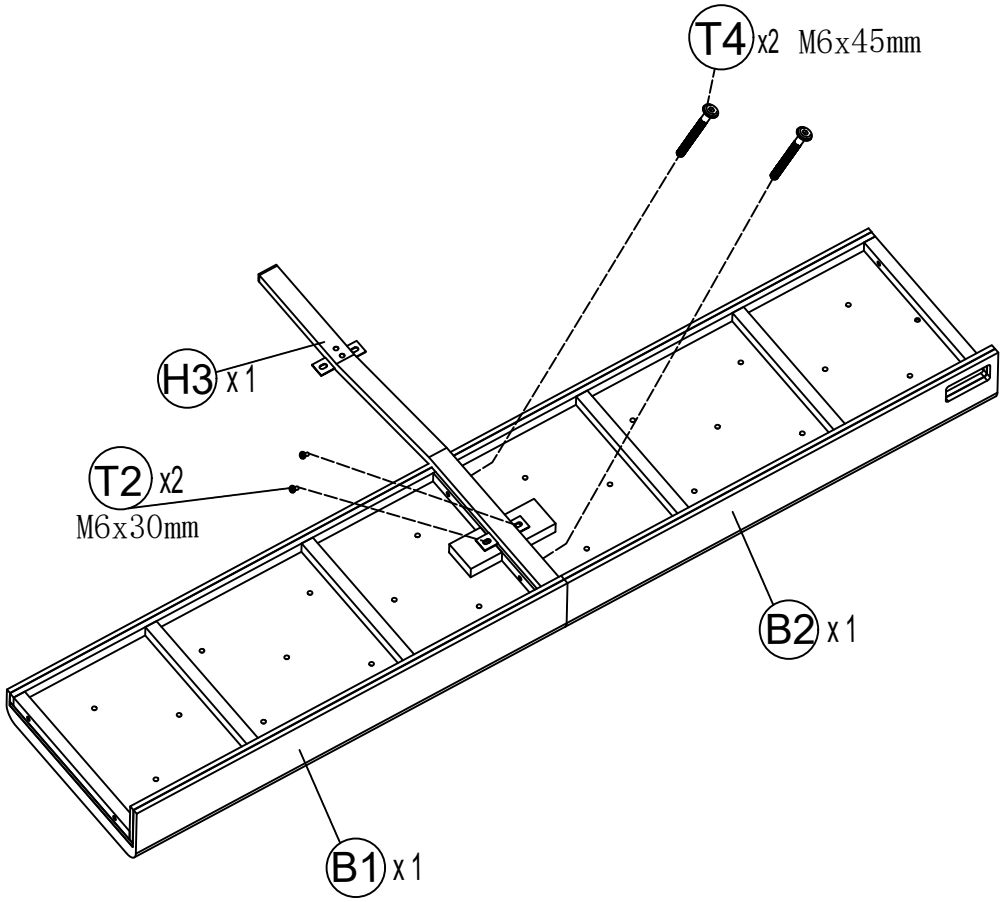


# Step 9

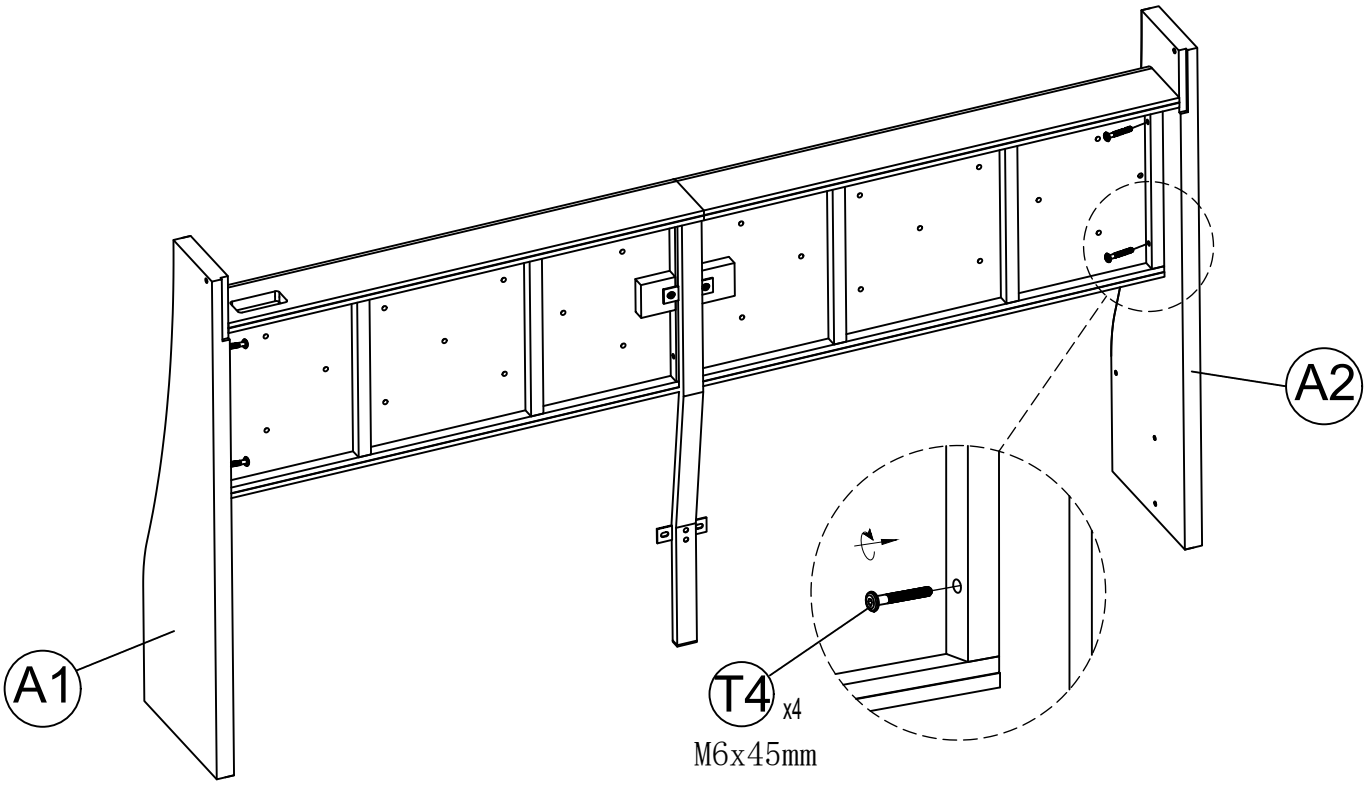



# Step 10

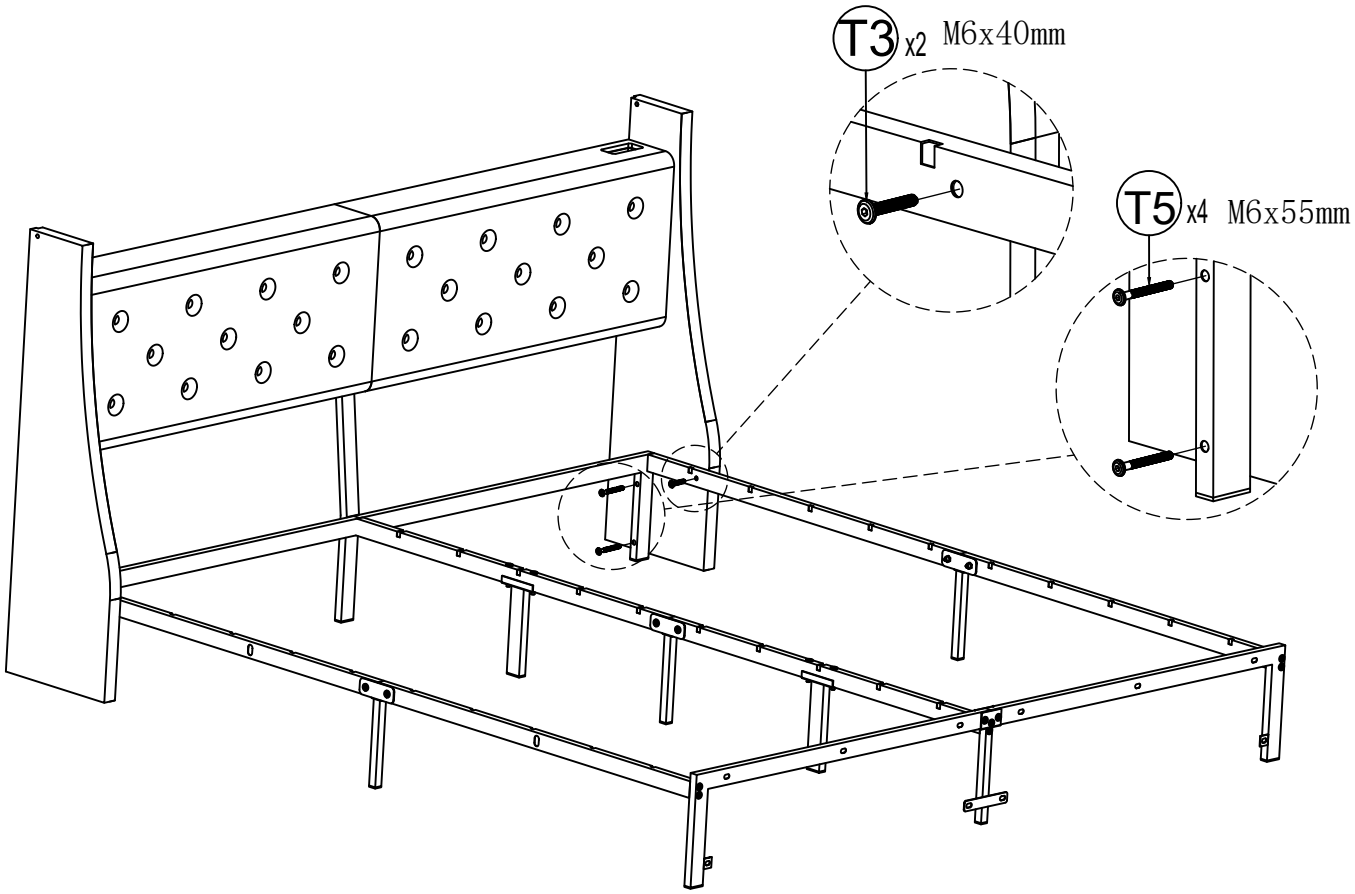


# Step 11

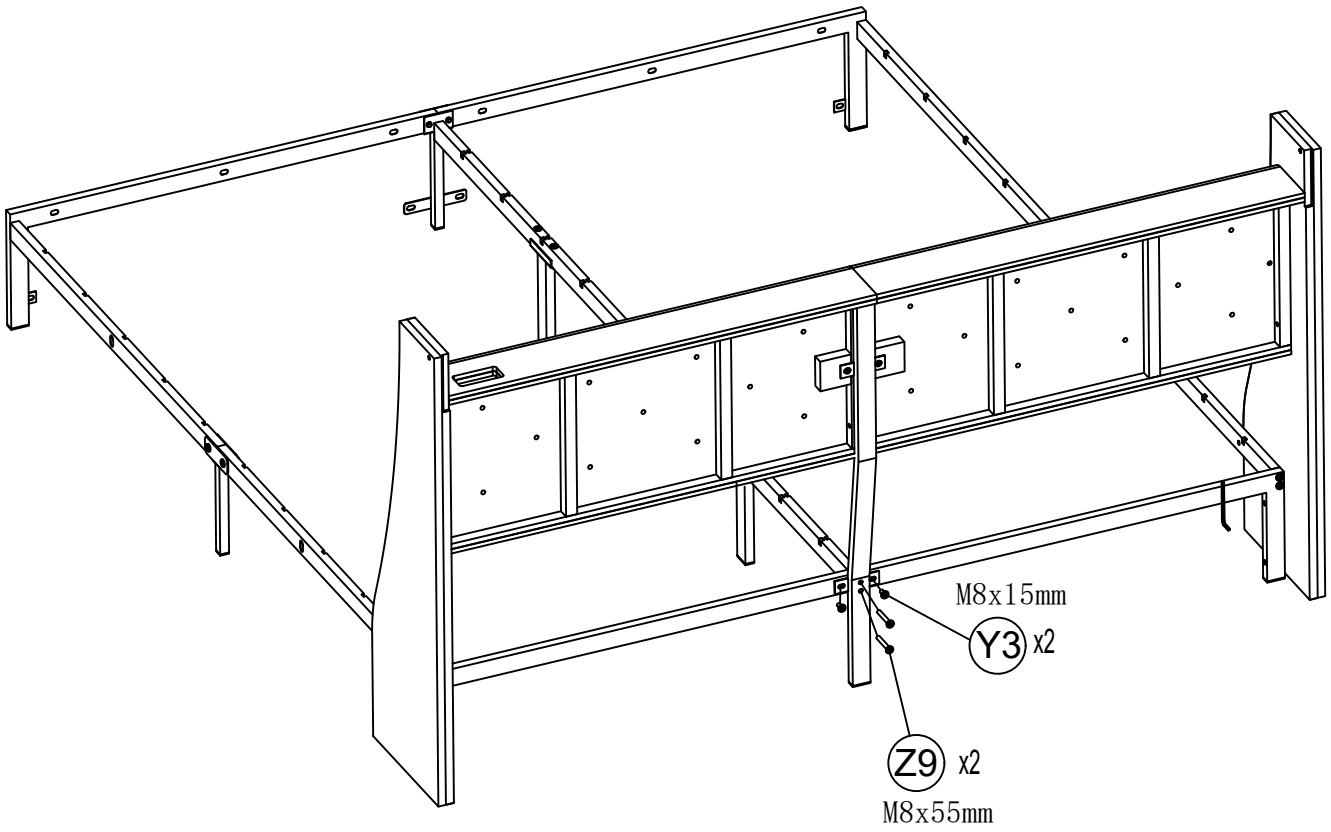



# Step 12

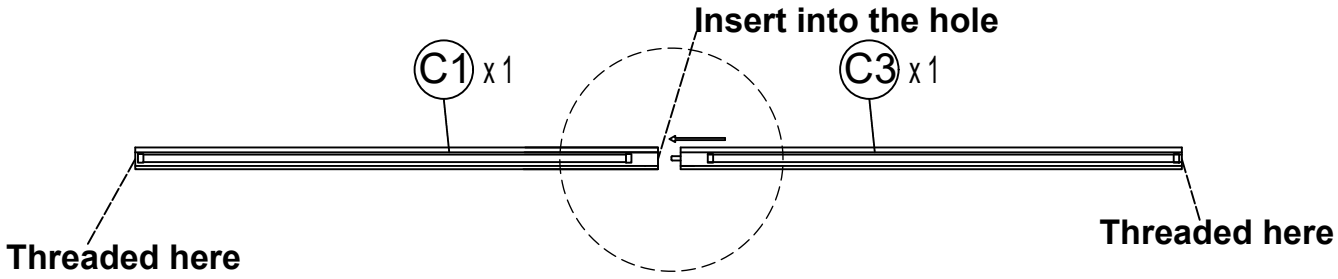


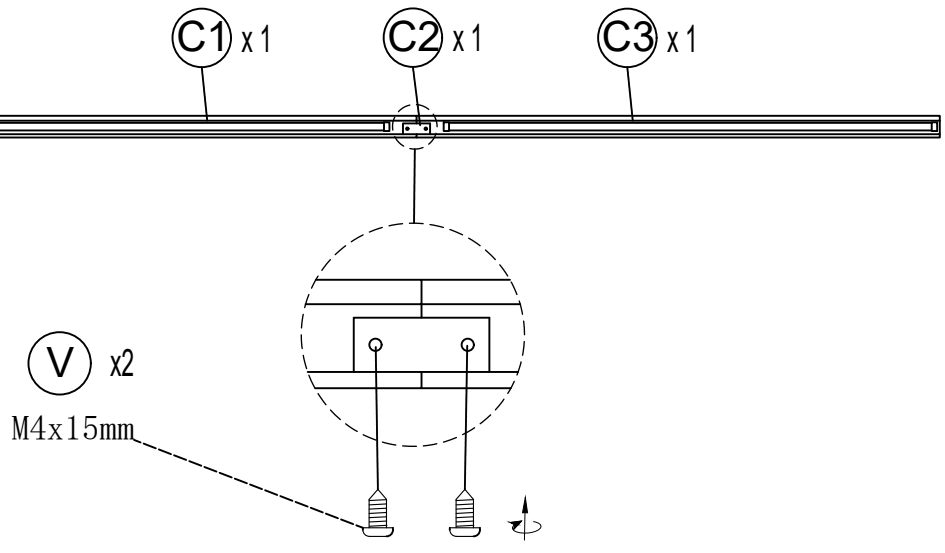
# Step 13

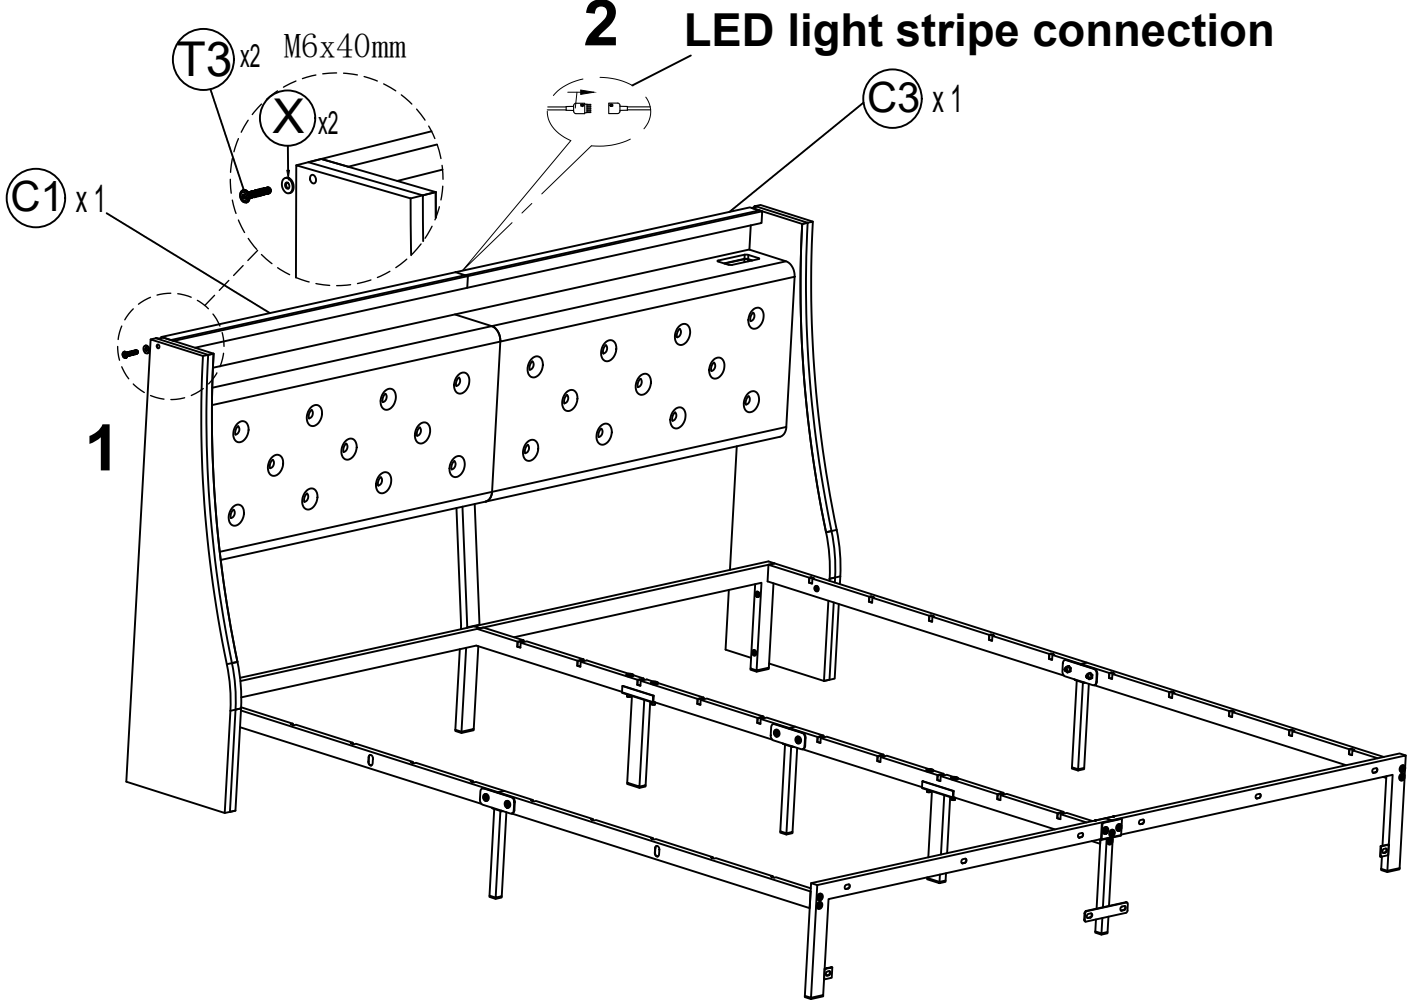


# Step 14
## We suggest using drill machine to install "V" screws

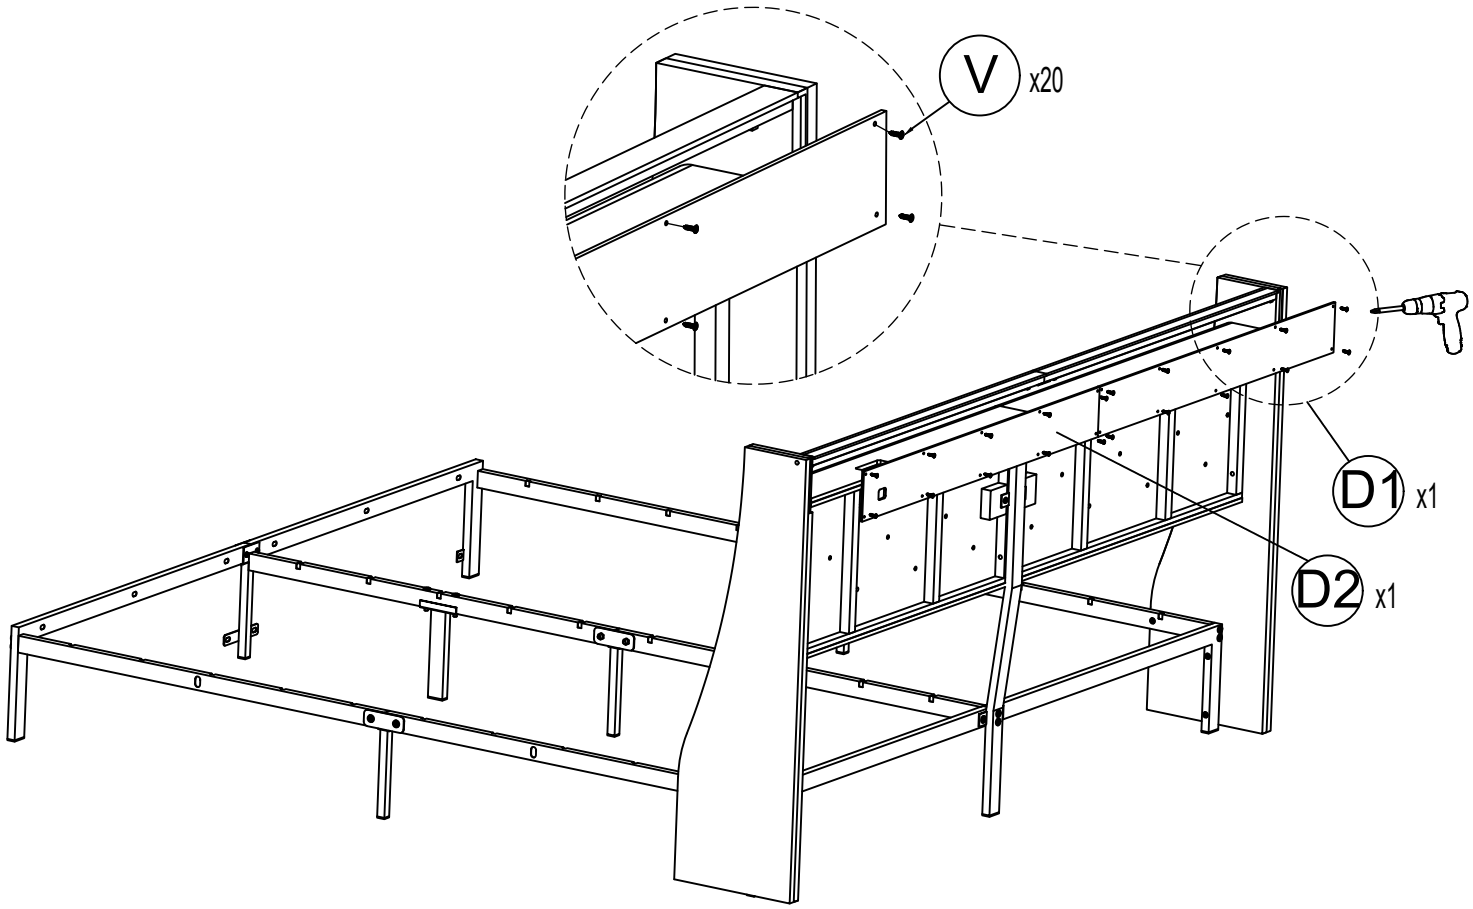


# Step 15

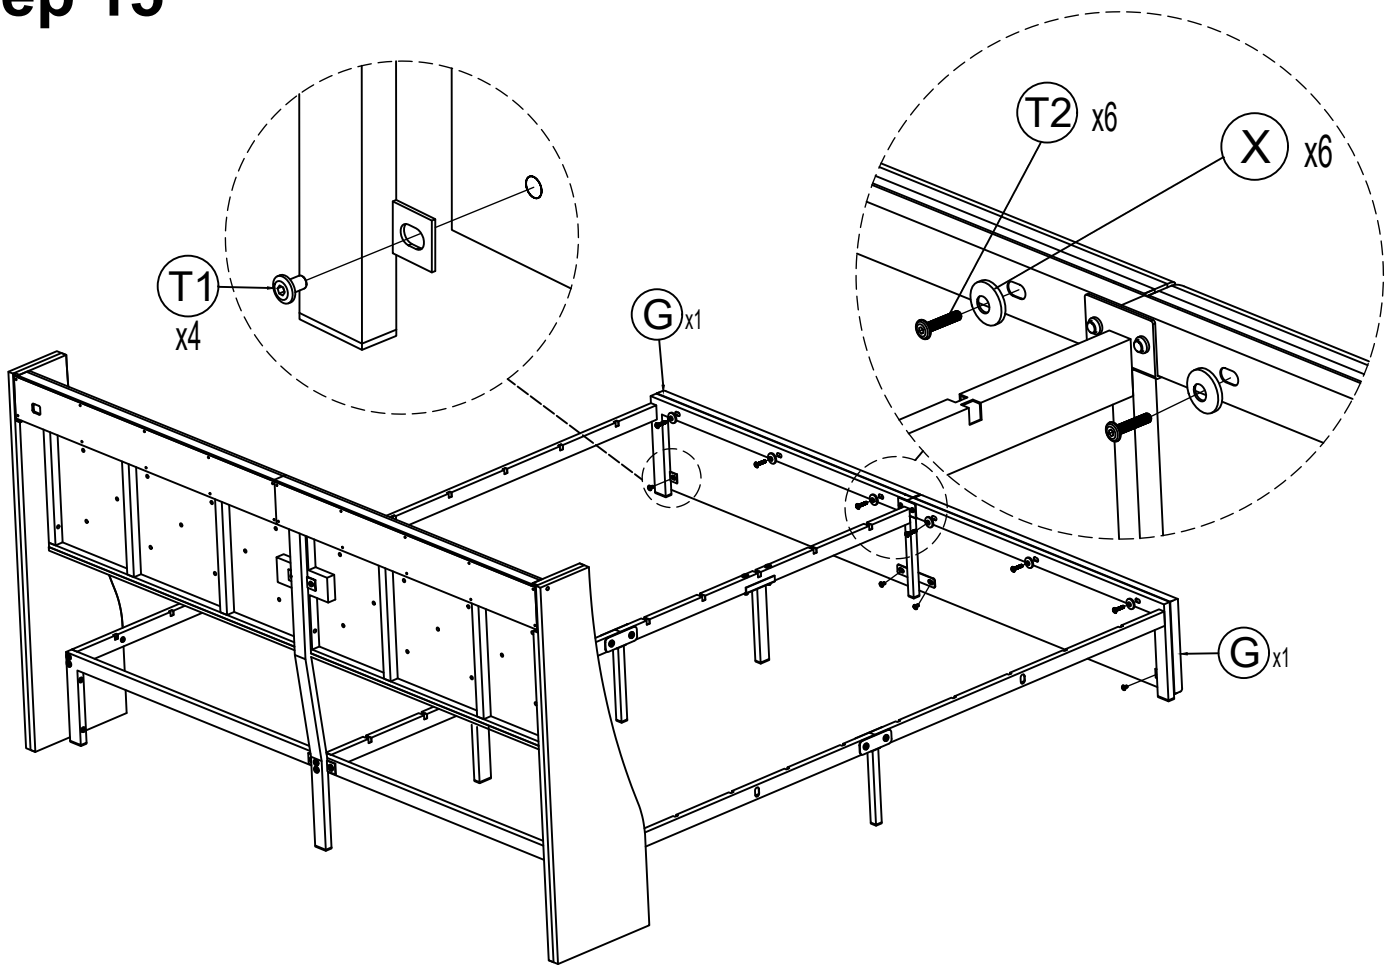



# Step 16

Tear off the double-sided adhesive tape before place the mattress.

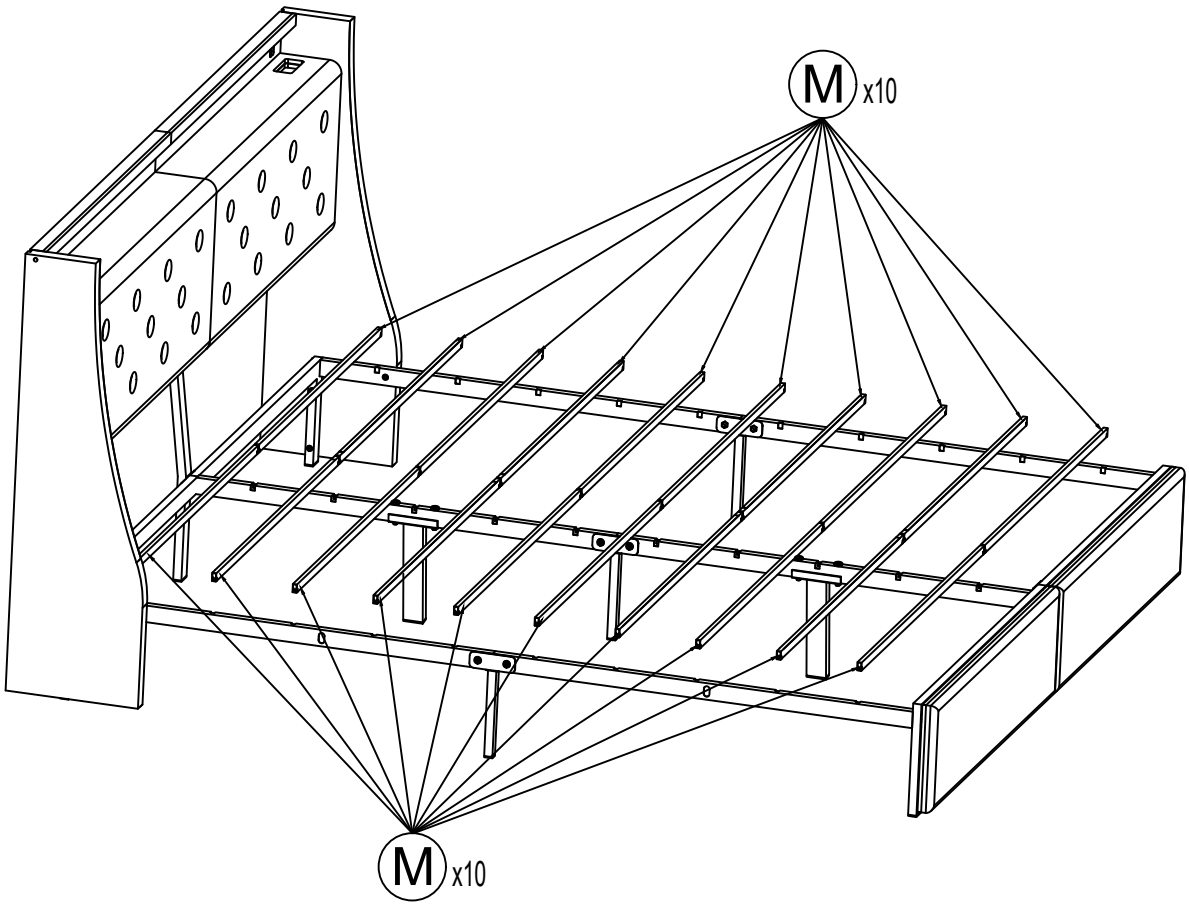


# Step 17


**We suggest using drill machine to install V screws**
***Note: no holes on the board "B2" is normal**

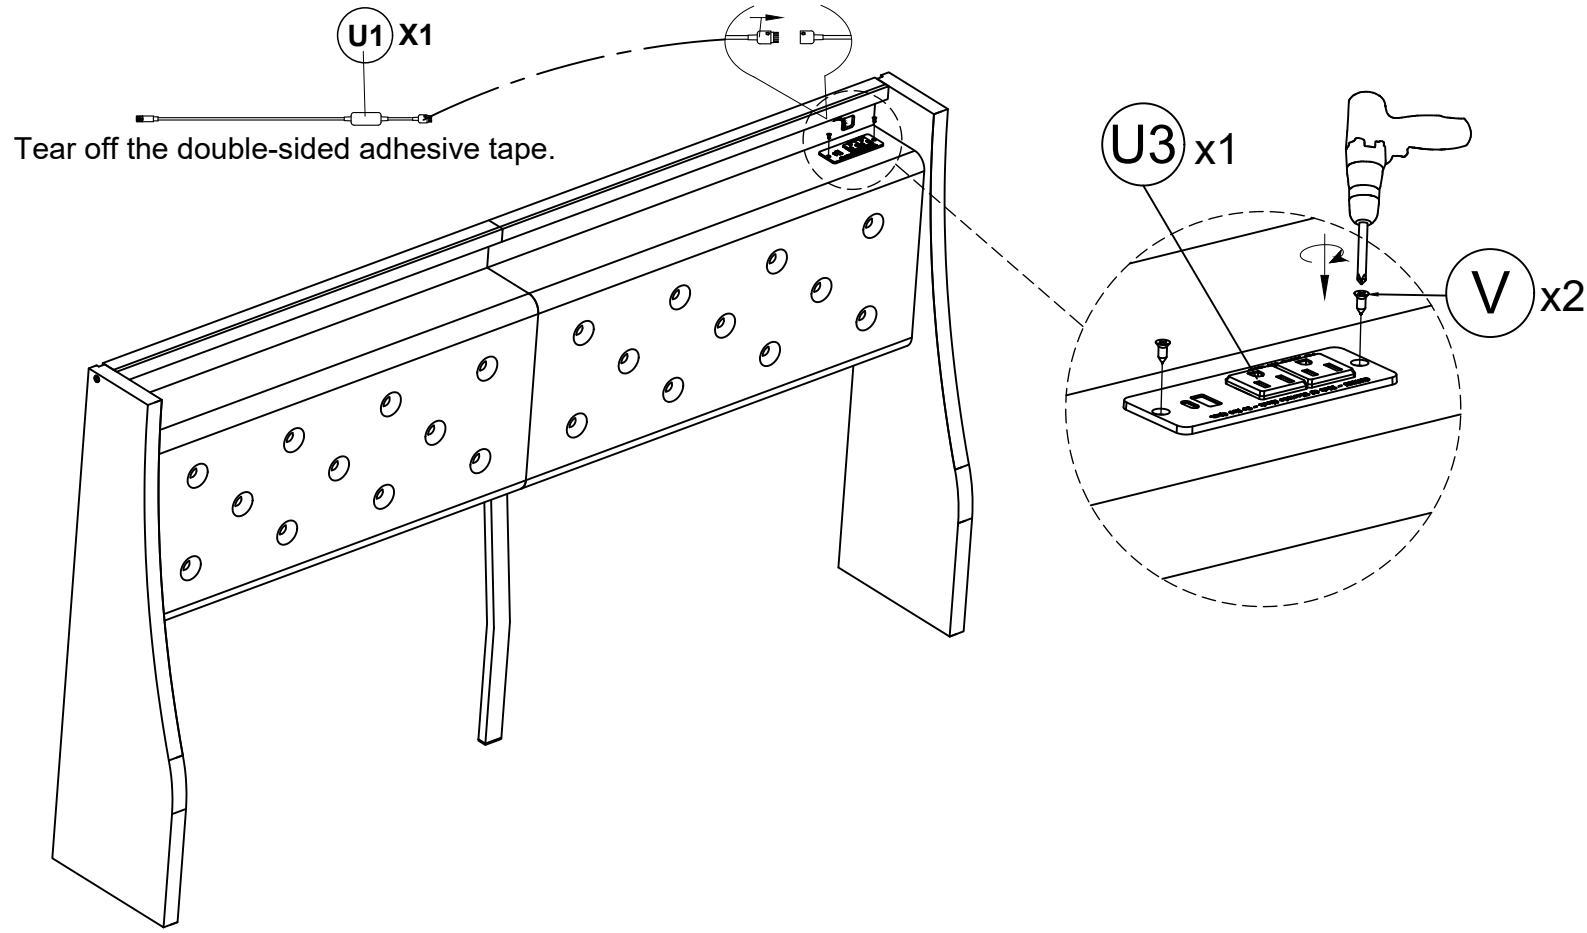


**Put all the screw in but not tighten, don't let the screws get through all the wheel's holder**

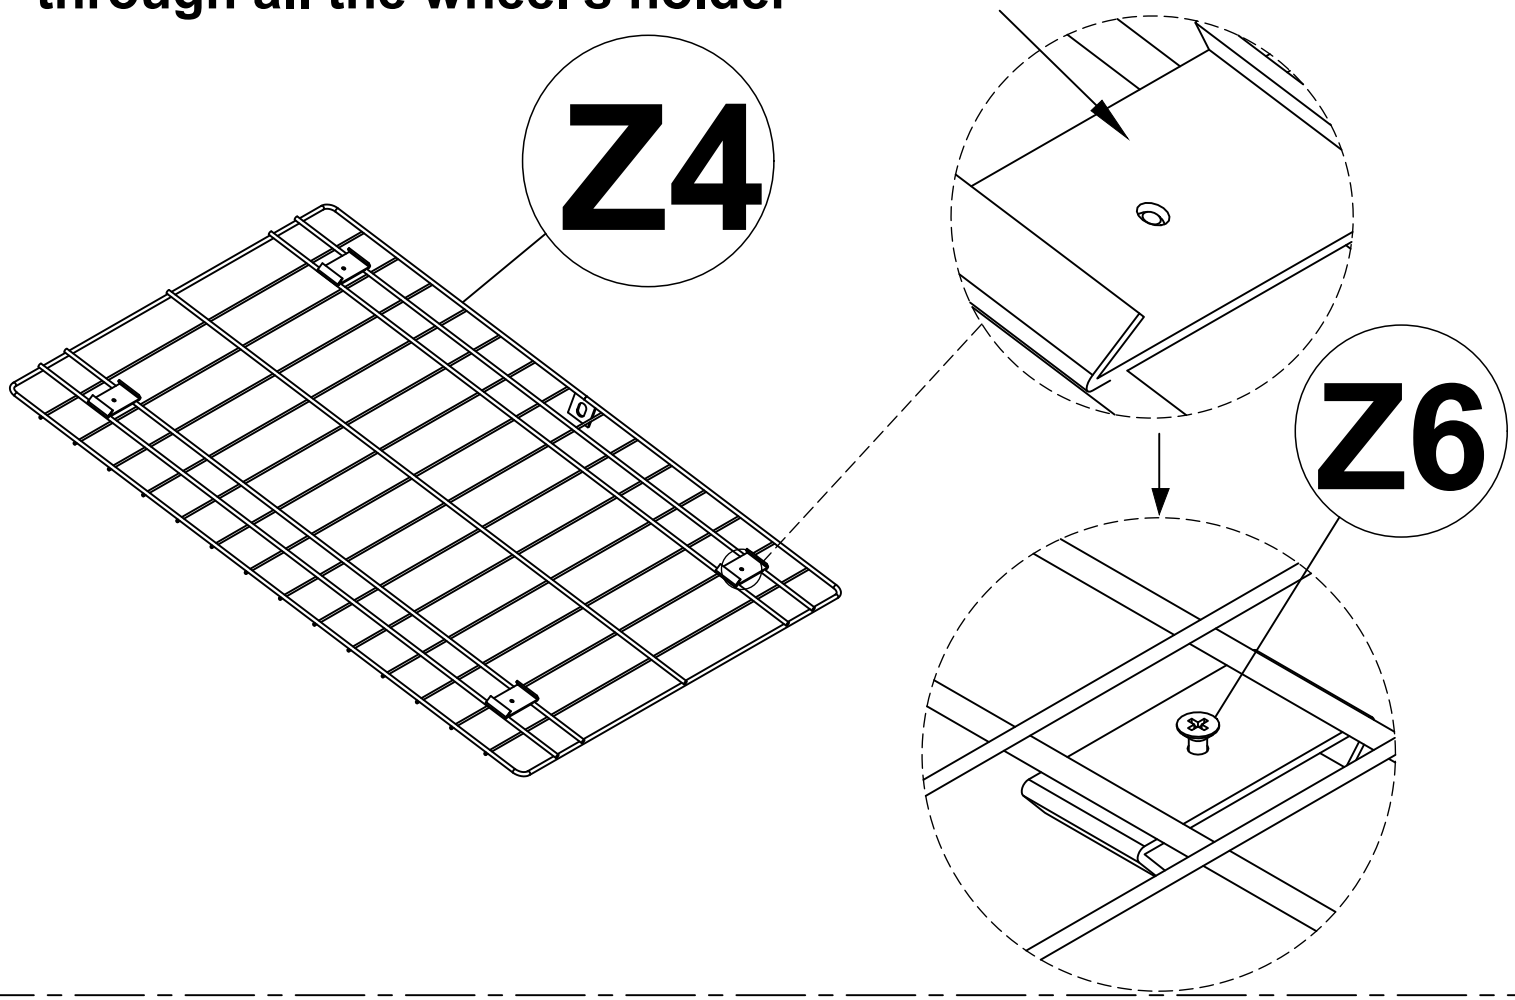


**Slide in**

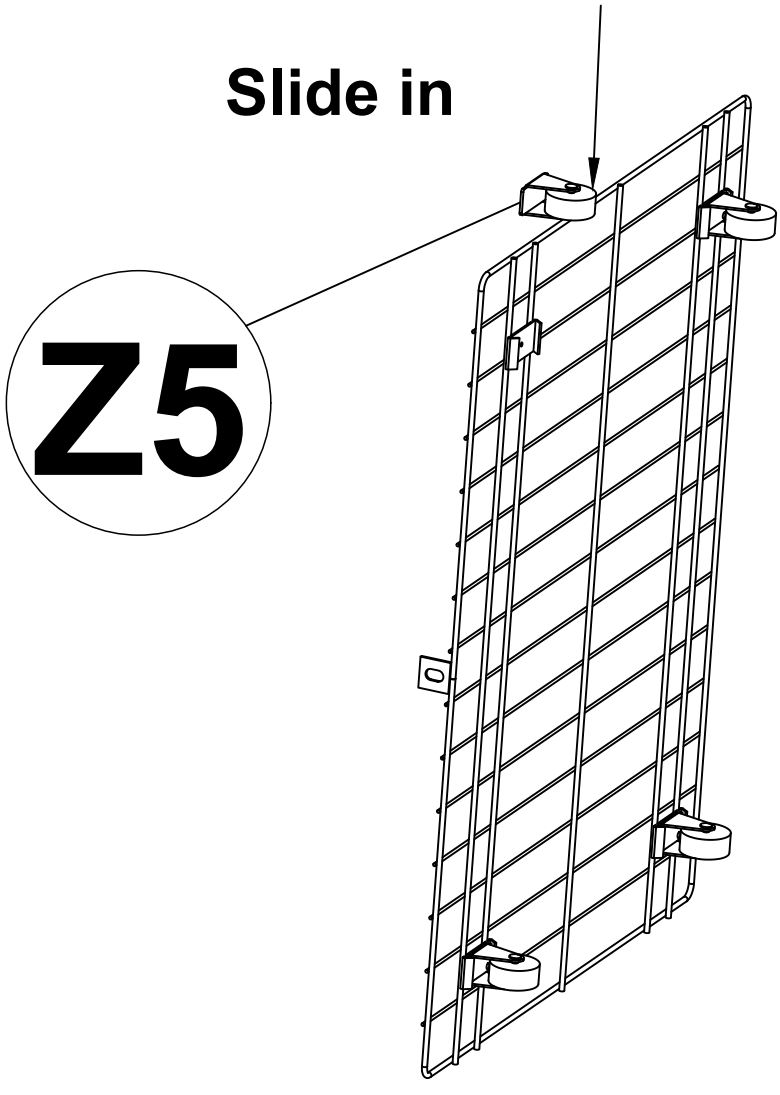

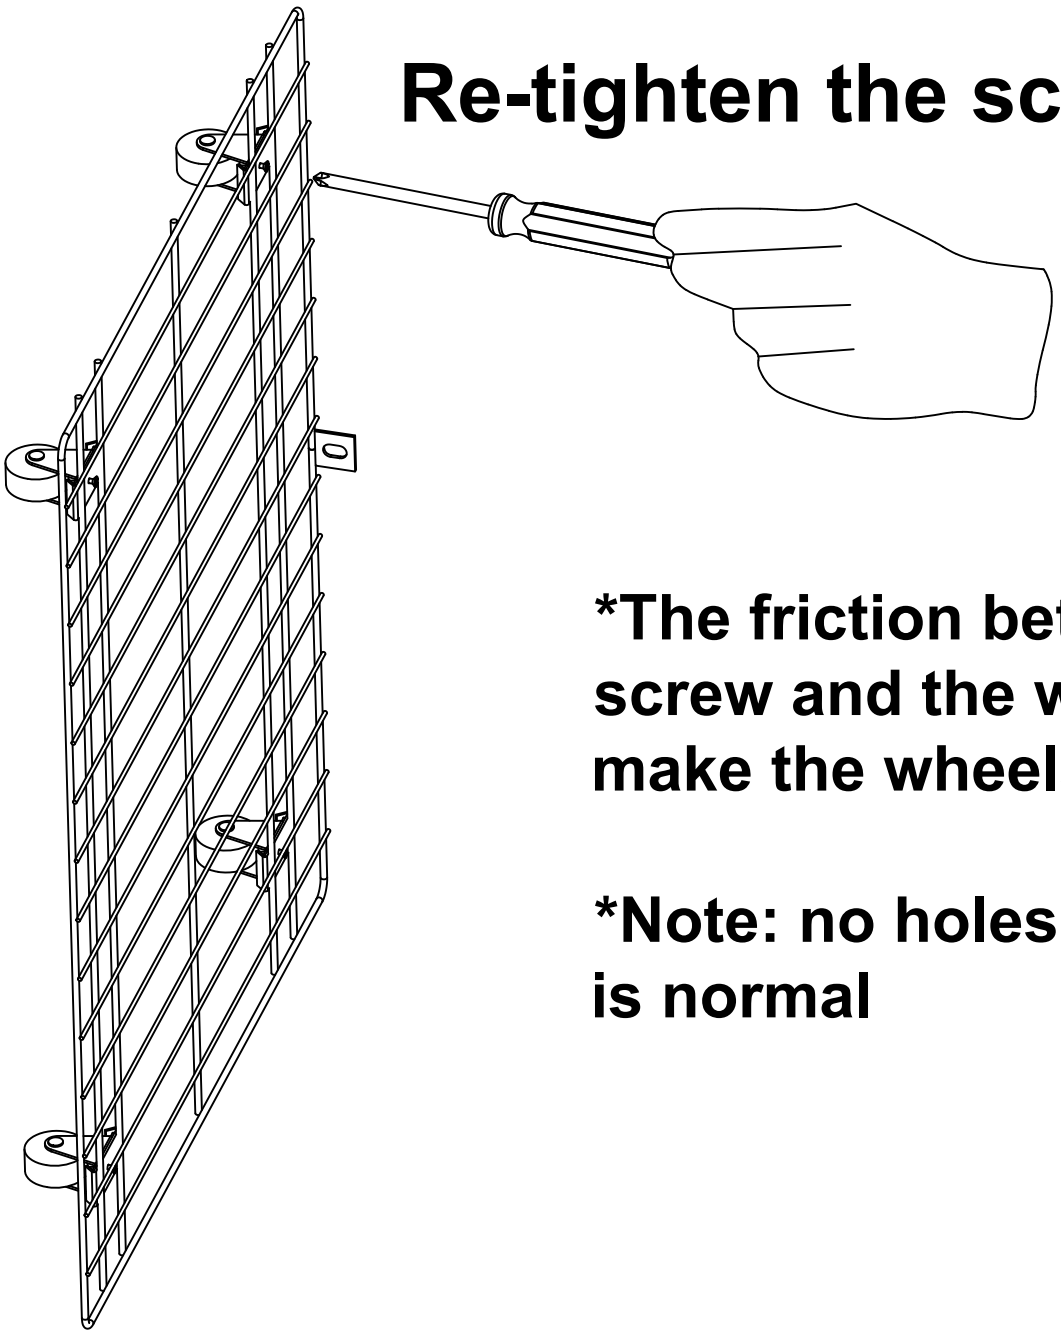


# Re-tighten the screws


***The friction between the screw and the wheels will make the wheels can be holded**

***Note: no holes on the wheels is normal**


# Detailed assembly instructions Q1

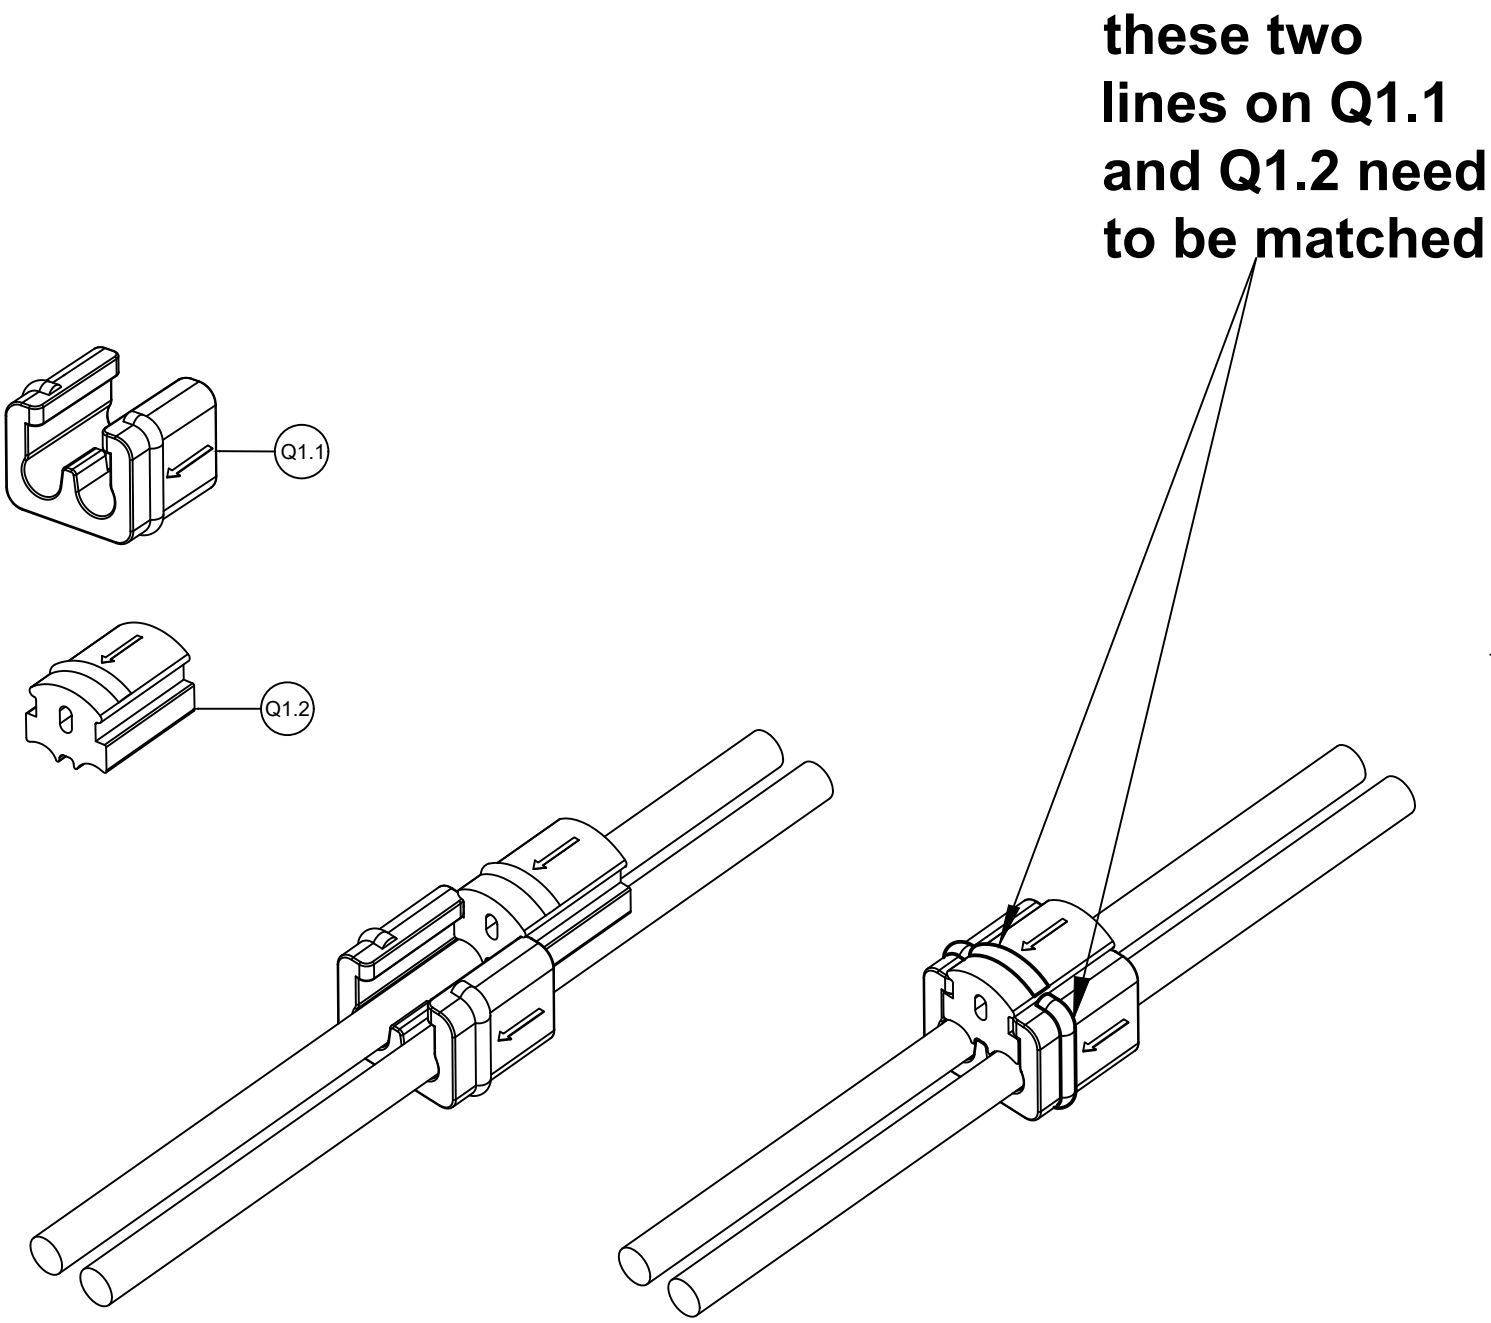


# Step 18

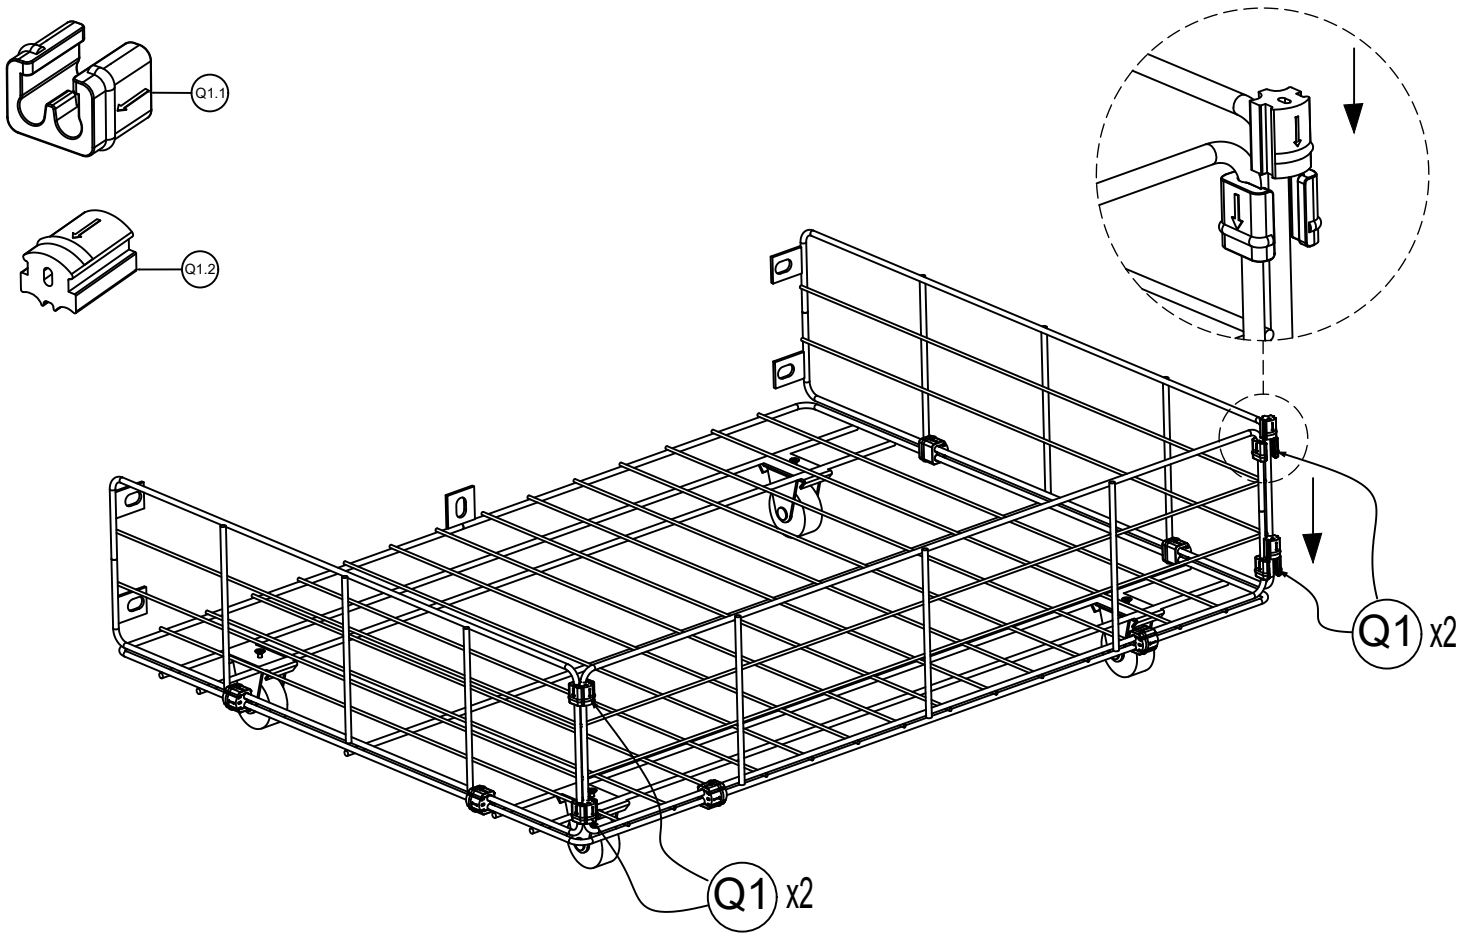


# Step 19

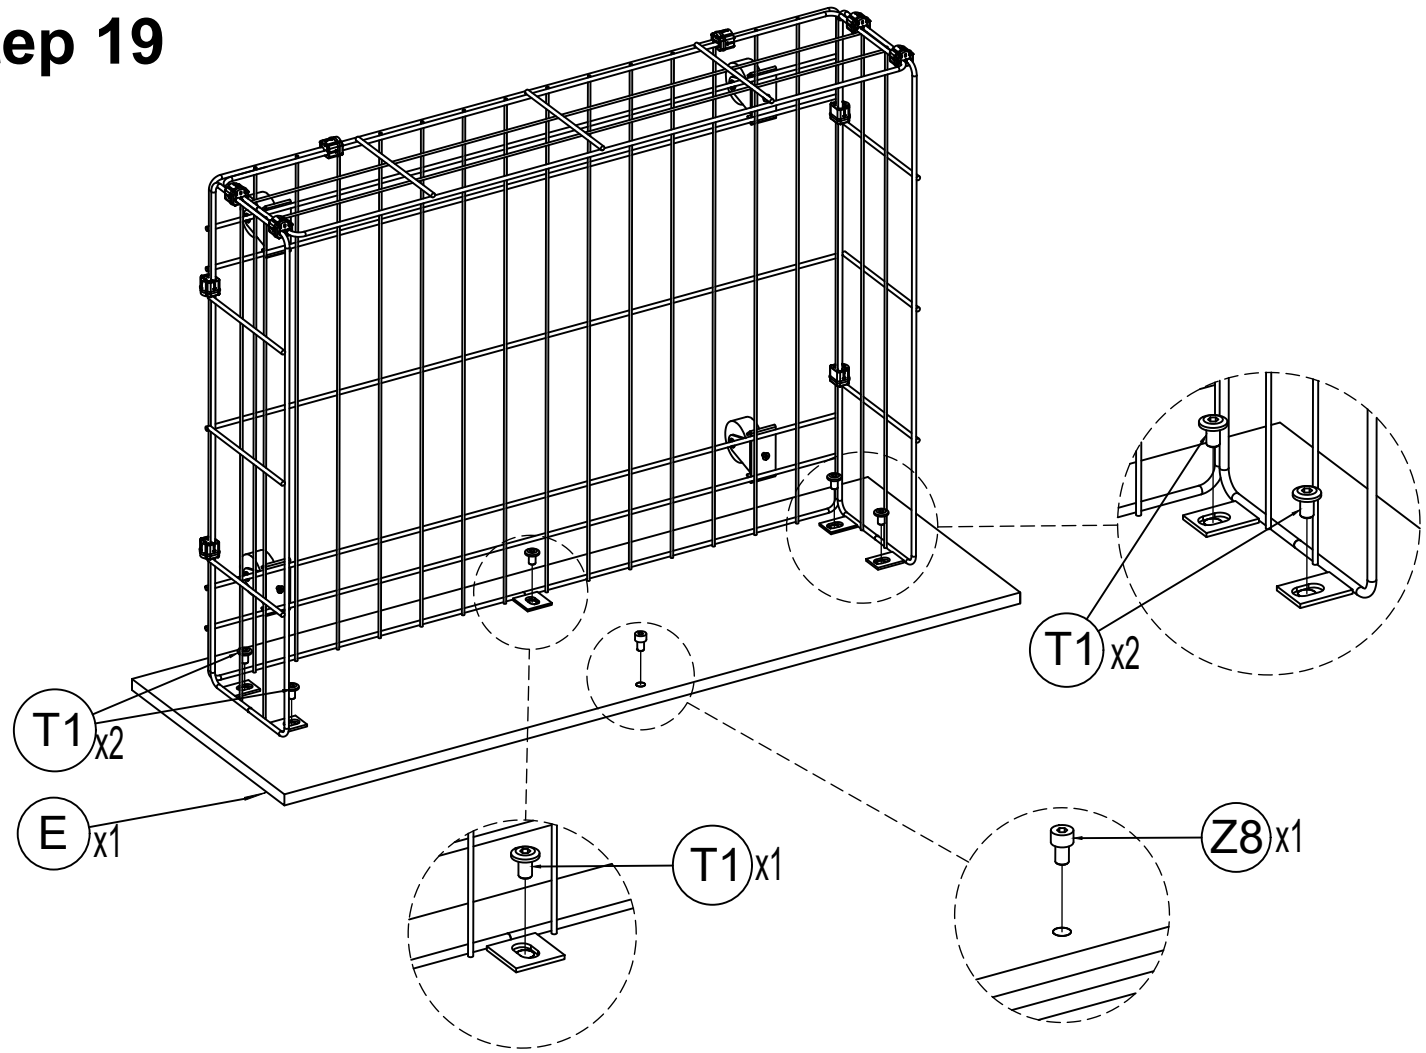


# Step 20

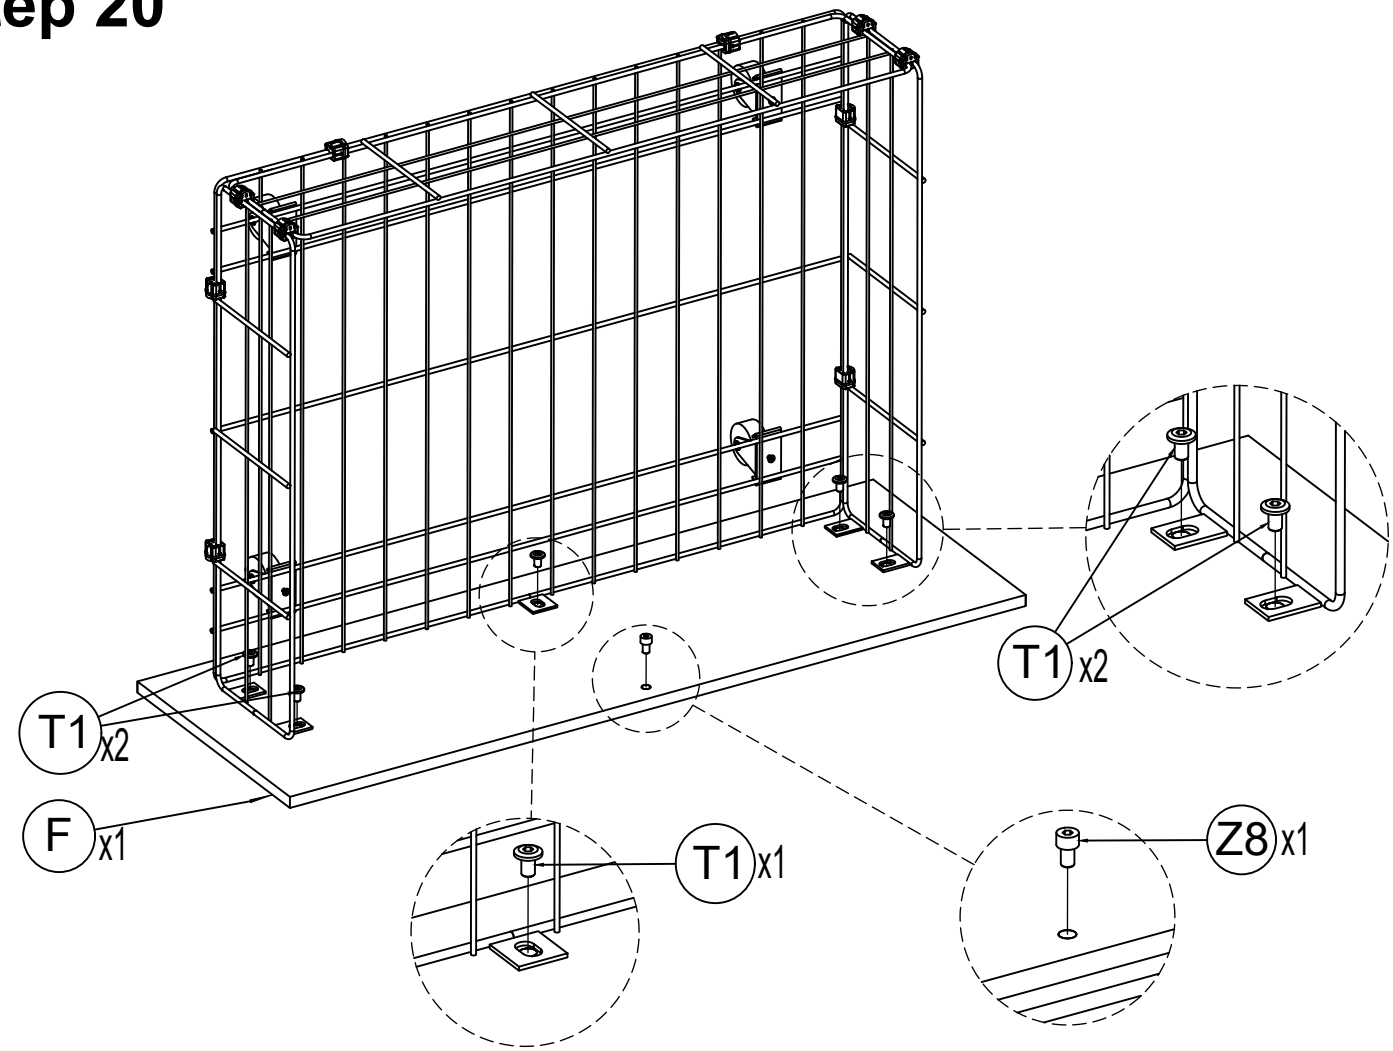



# Step 21


2pcs E

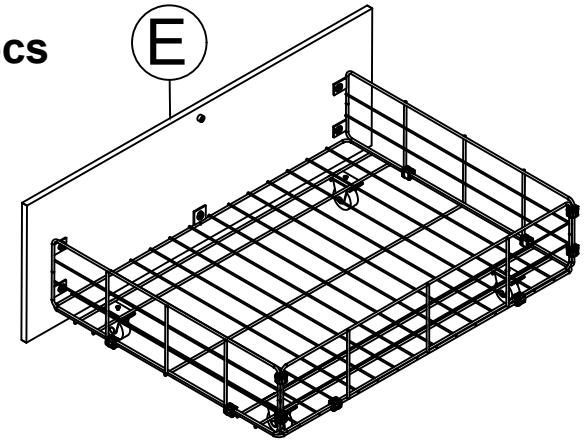


2pcs F

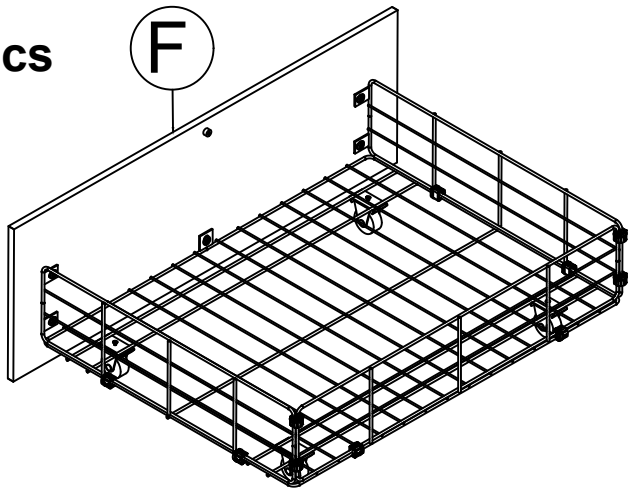

# Step 22

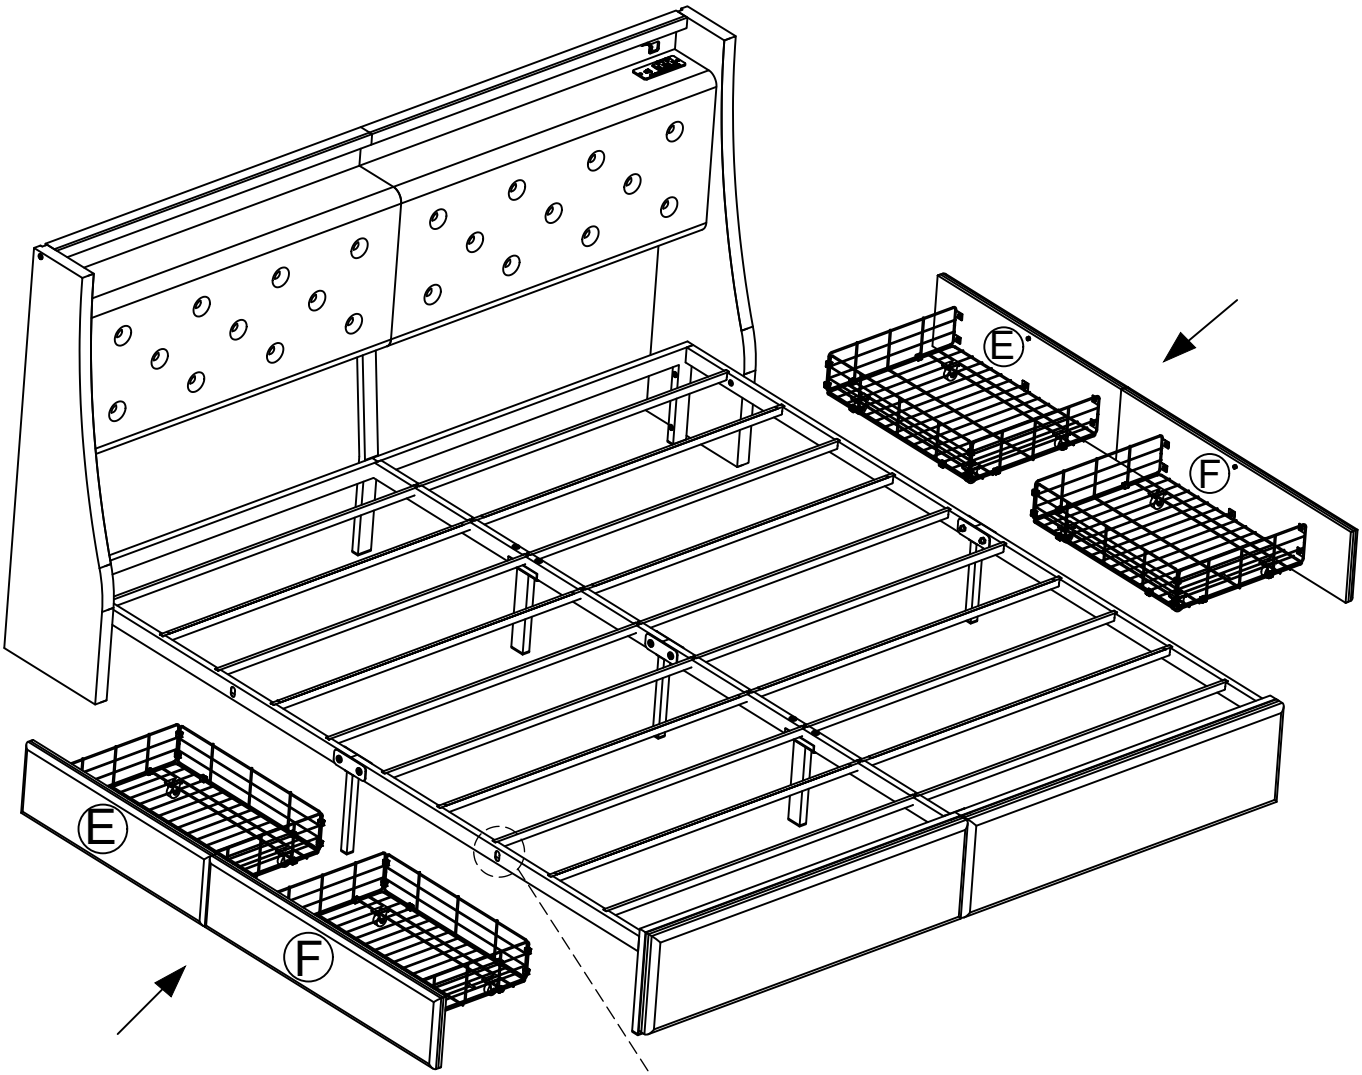

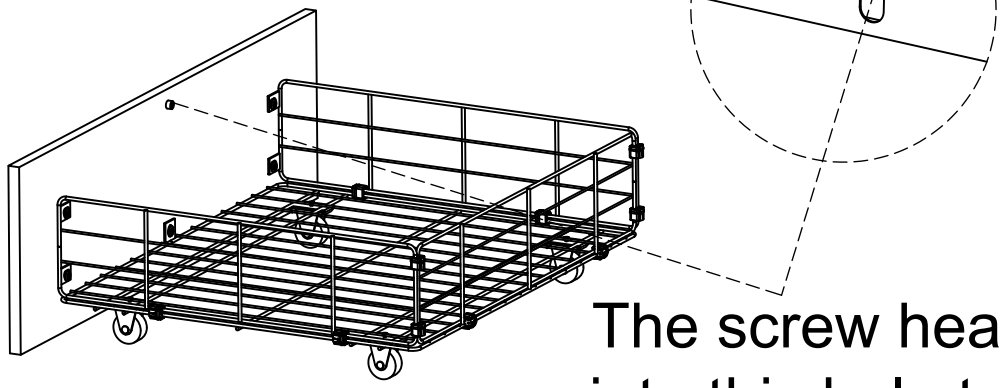The screw head is inserted into this hole to help the drawer can be in the fixed position.

# REMOTE CONTROL

