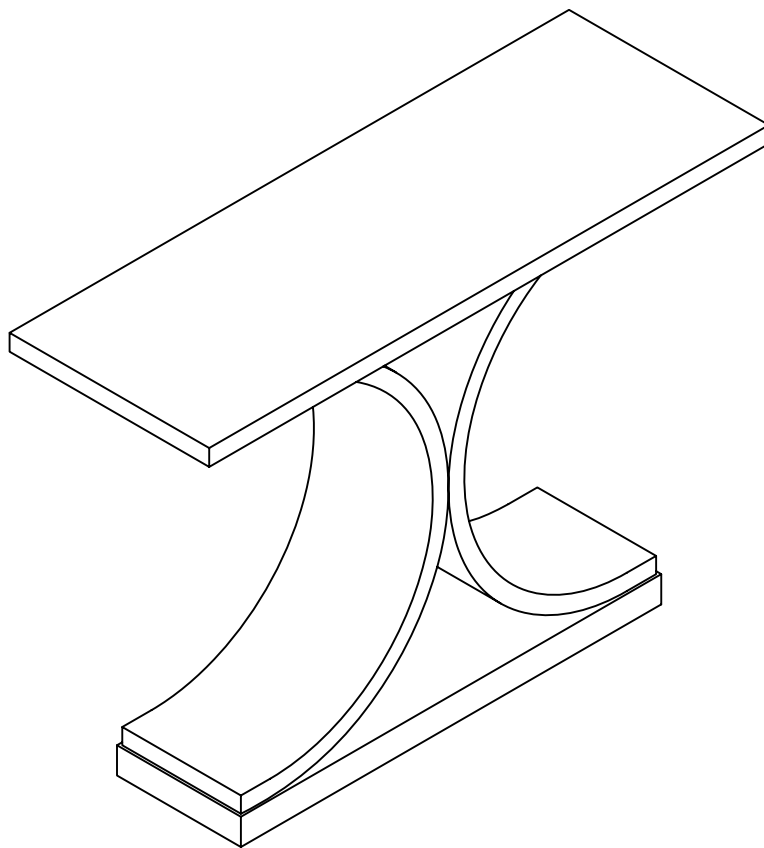


# console table



## Assembly instructions

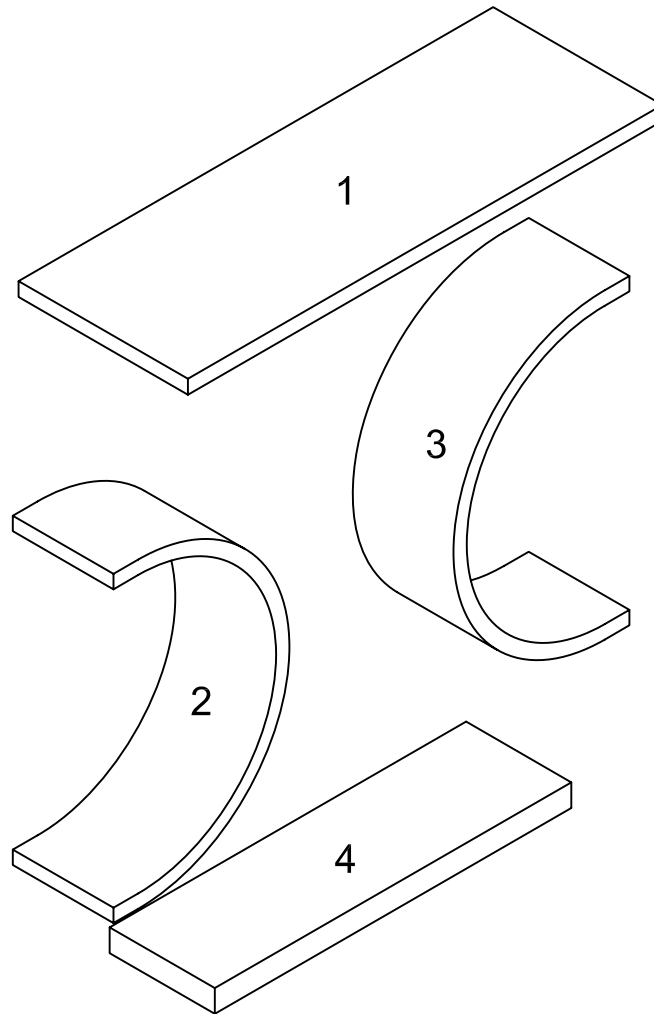
We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



Please do not return to the store

# PARTS IDENTIFICATION










---





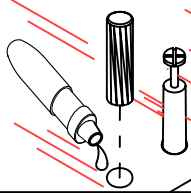
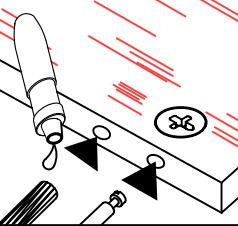
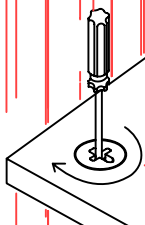
**Please count and verify all parts befort assembly**

1.Top panel	(1pc)
2.Bottom Panel	(1pc)
3.Left support	(1pc)
4.Right support	(1pc)

# HARDWARE IDENTIFICATION

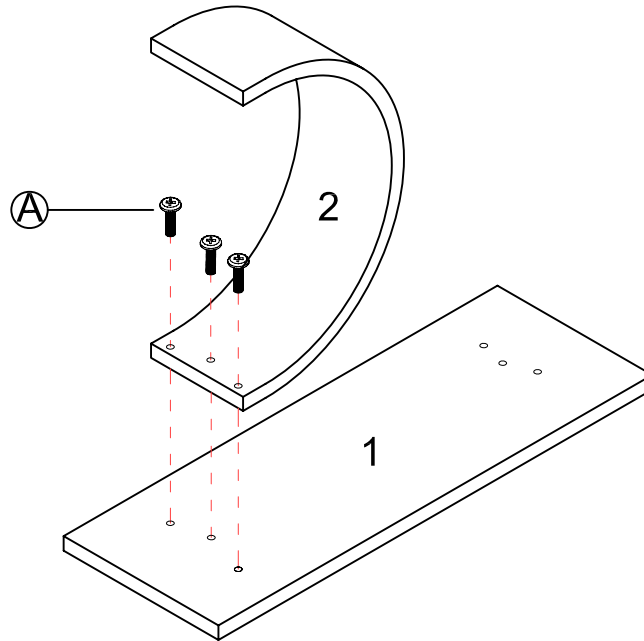
<b>A</b>		Large Bolt	M6×45	6pcs
<b>B</b>		Small Bolt	M6×30	6pcs
<b>C</b>		Dowel (BK)	Ø8×25	2pcs
<b>D</b>		Anti-tip bracket	40x20x15	1pc
<b>E</b>		Self tapping Screw	Ø4×25	1pc
<b>F</b>		Wall Screw	Ø5×40	1pc
<b>G</b>		Plastic Anchor	Ø8×40	1pc
<b>H</b>		Foot Pin	Ø16	4pcs
<b>I</b>		Glue	Glue: For securing please apply to wood dowel first before inserting into panel.	1pc

## Assembling the unit with camlocks and wood dowels.

				
Insert camlock, camlock must face bolt hole	Gently screw cam dowel into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently turn the cam clockwise into locked position. Do not overtighten.

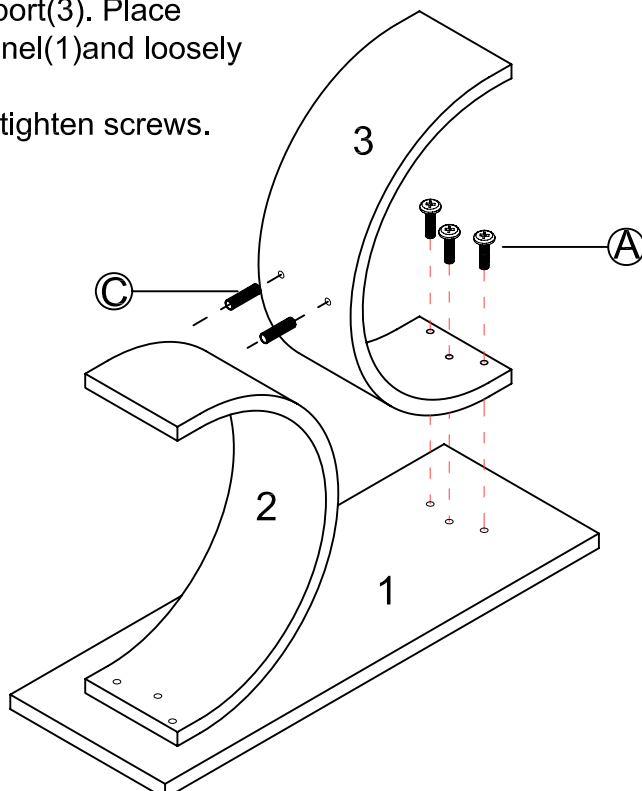
# Step1

1. Insert large bolts(A) into support(2).  
Place support assembly into top panel(1) and loosely tighten screws.



# Step2

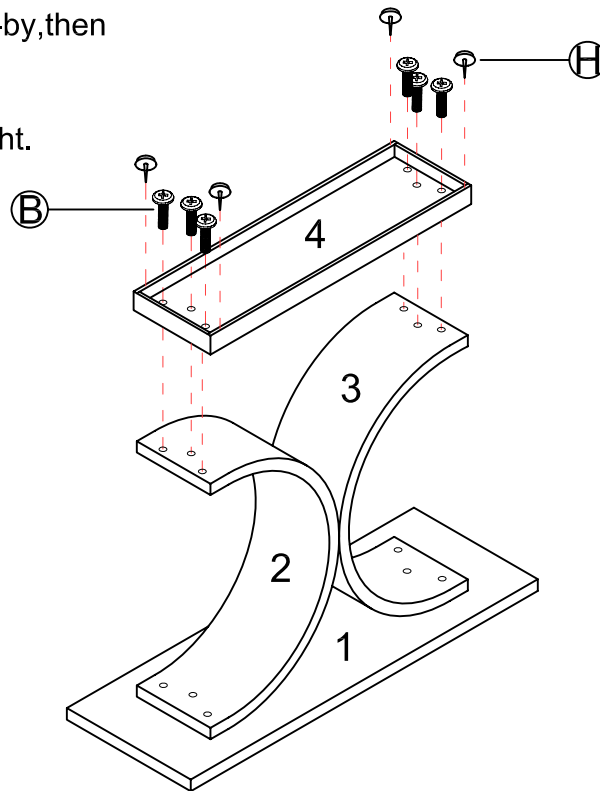
1. Insert dowels(C) into right support(3). Connect left and right support(2,3).
2. Insert large bolts(A) into support(3). Place support assembly into top panel(1) and loosely tighten screws.
3. After all screws are in place, tighten screws.



# Step3

PAGE: 5 of 5

1. Insert small bolts(B) through bottom panel(4) into assembly and screw down. Loosely until all screws are stand-by, then tighten all screws
2. Nail the foot pins into the bottom panel(4), using care to keep straight.



# Step4

Optional but recommended!

1. Place table against wall and temporarily hold anti-tip bracket(D) under table top and against wall.
2. Mark bracket holes with pencil.
3. Drill hole into wall and tap in plastic anchor(G).
4. Attach bracket to table with self tapping screw(E) and fasten table to wall with wall screw(F).

