
ASSEMBLY INSTRUCTION

STEP: 1

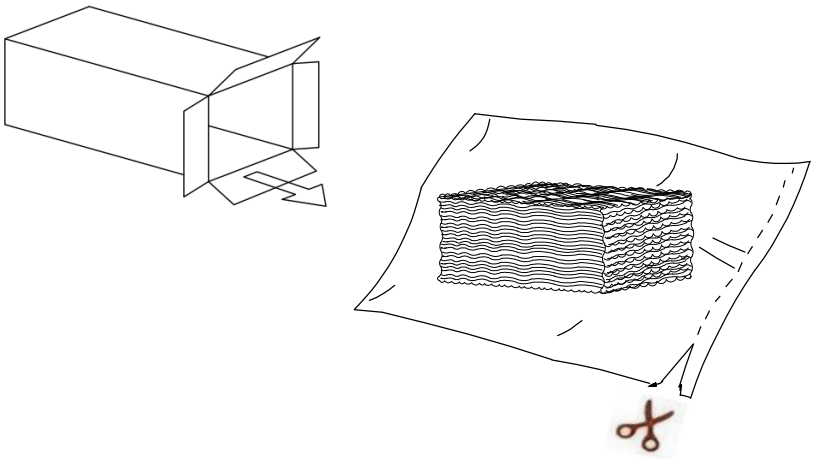

Carefully use a paper cutter or scissors to cut along the edges of the product for unsealing and decompression.

ASSEMBLY INSTRUCTION

STEP: 2

You can gently pat the product to make it more plump.

Wait for 48 hours until the chair is completely decompressed.

