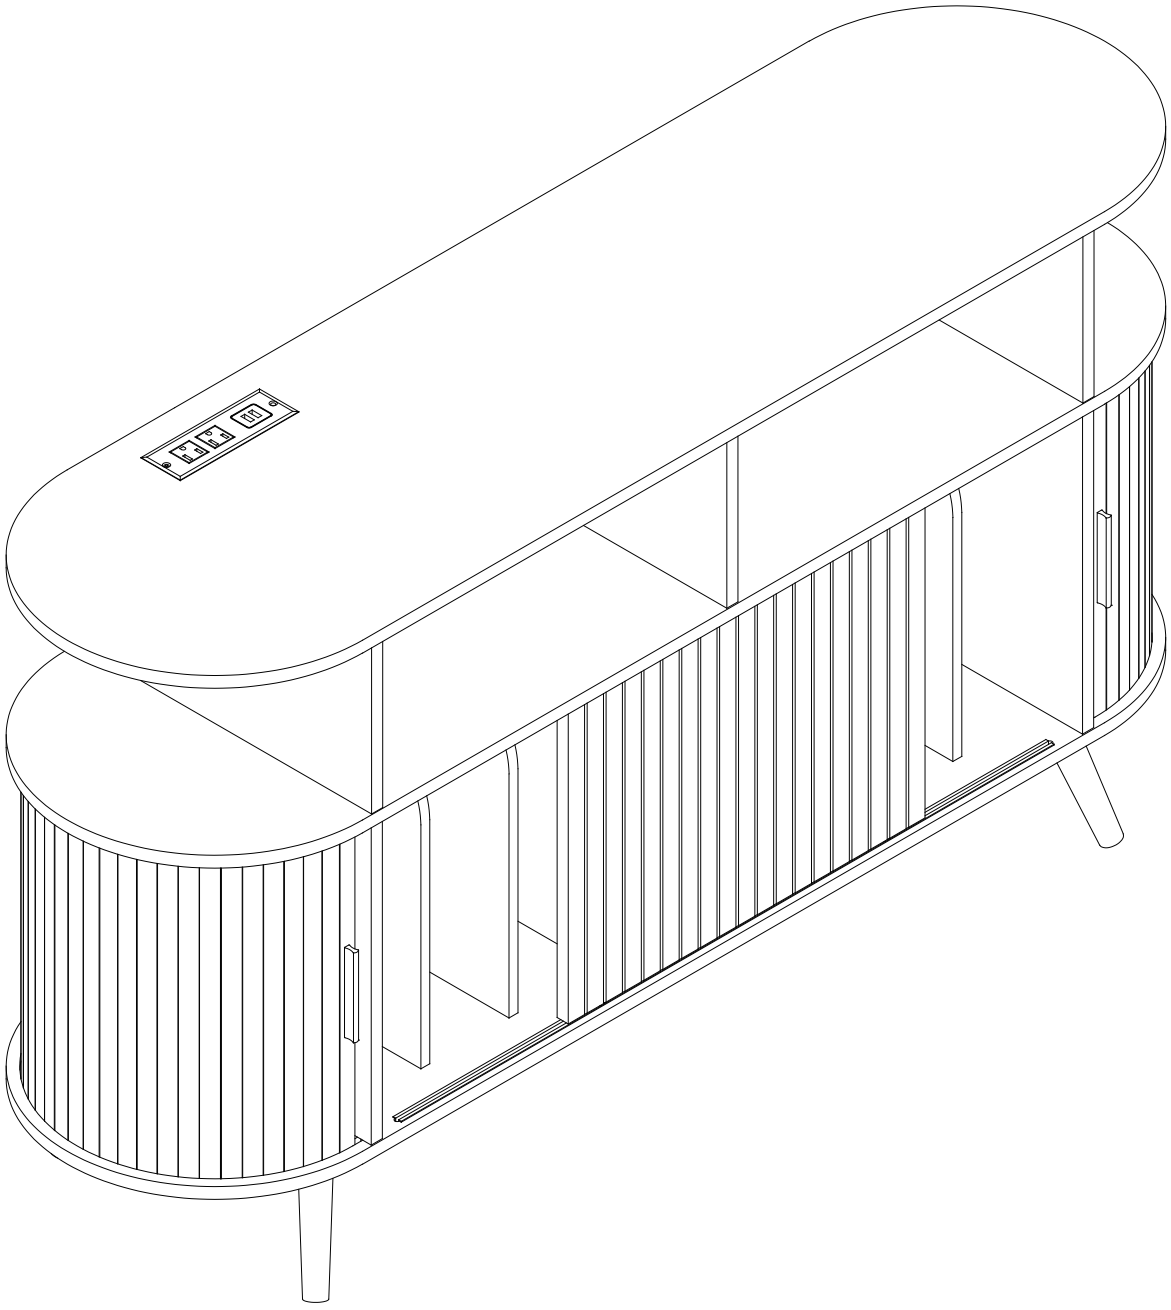



ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.


PART LIST

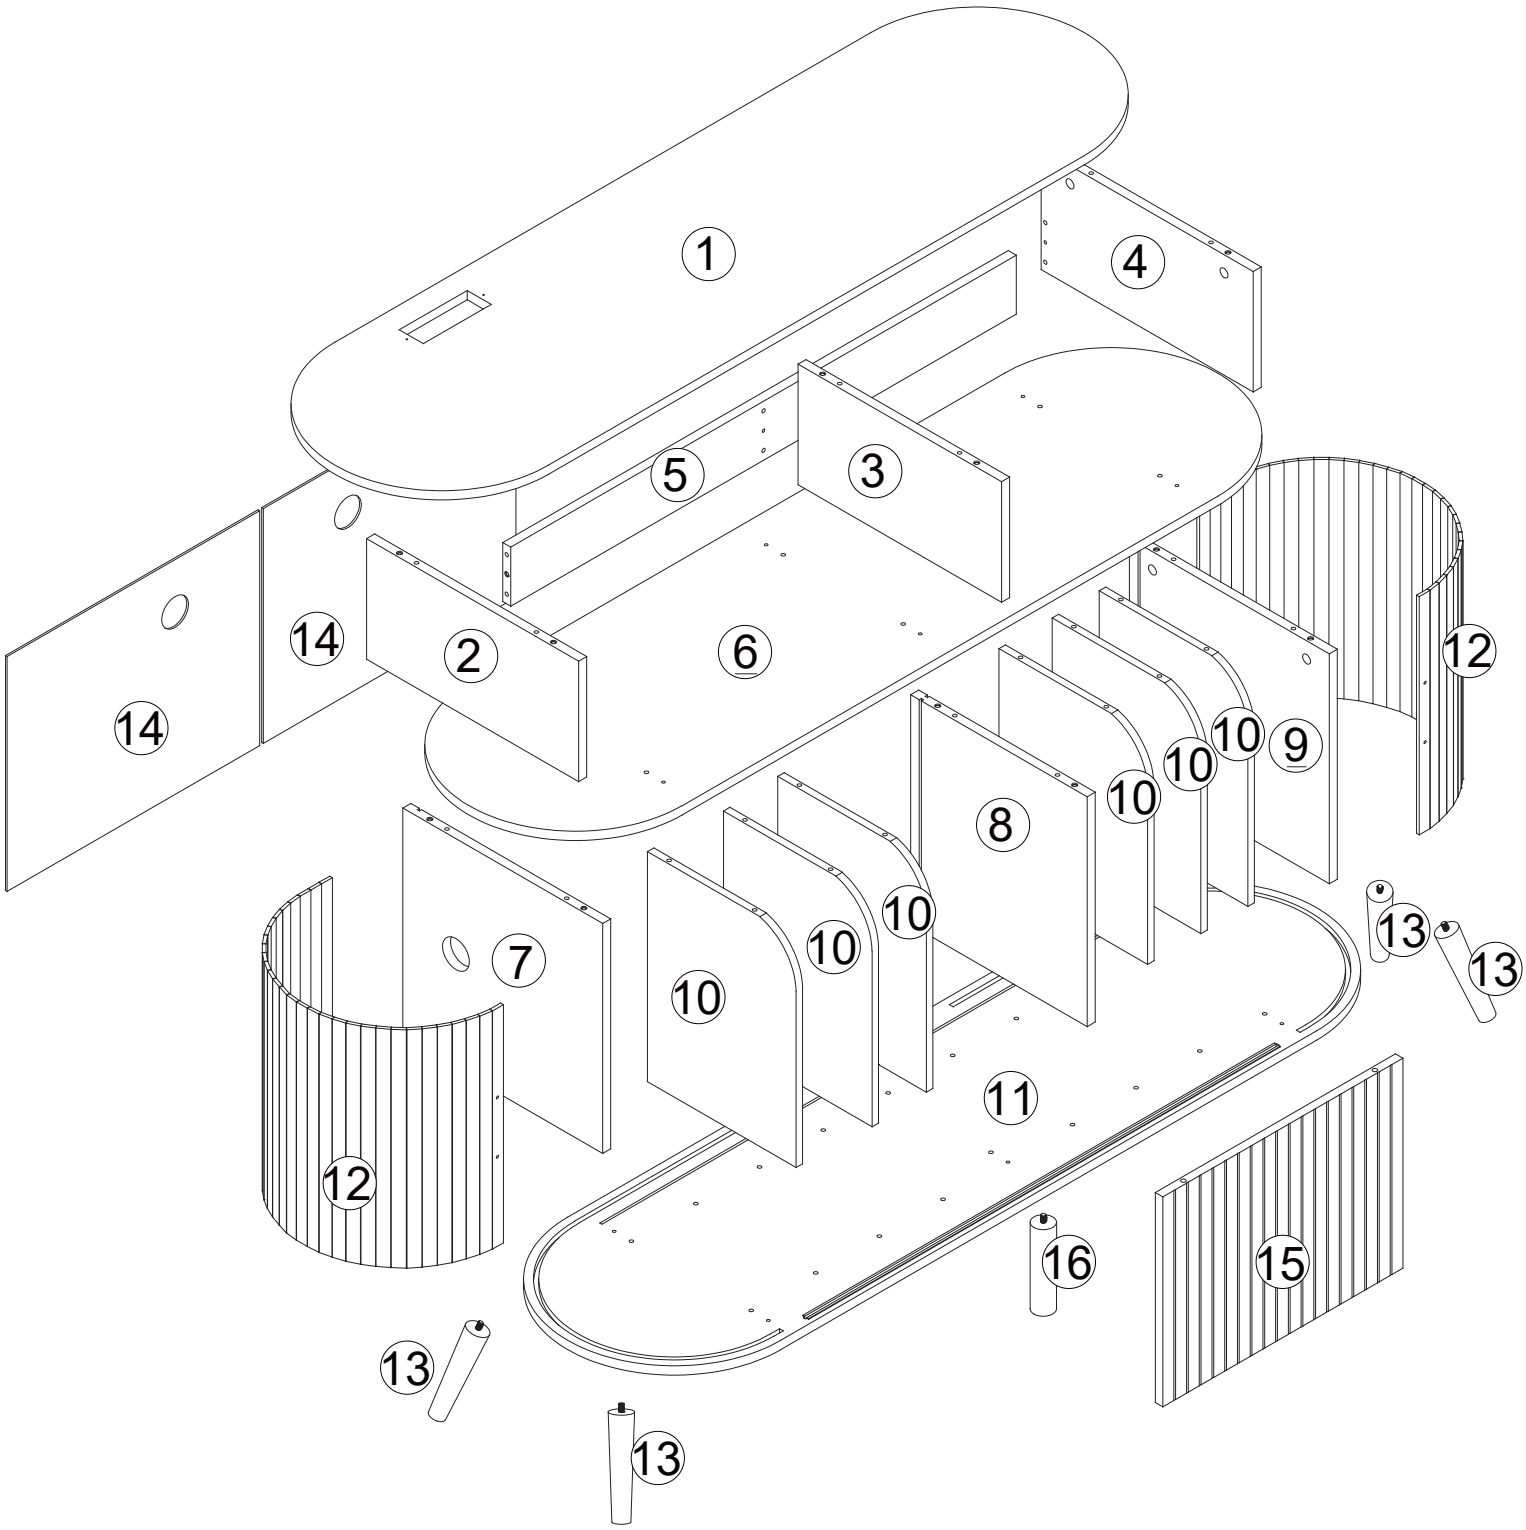


∅6x35MM
Ax14+1


∅15x10MM
Bx14+1


∅6x30MM
Cx54+4





M4x40mm M4x12mm
Dx2


M4x8mm
Ex4


96mm
Fx2


M4x12mm
Gx24+2



M65x70mm
Hx4



M49x49mm
Ix1


∅11x25MM
Jx4



M161x54x40mm
Kx1



M3x12mm
Lx2


M3x16mm
Mx8















M4x35mm
Nx13+1


∅21x20MM
0x1


∅20MM
Px4


∅21x100MM
x1

PART LIST

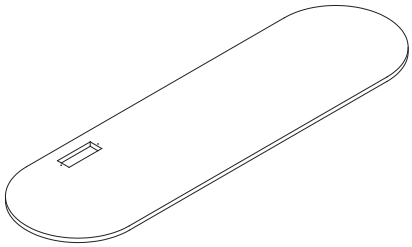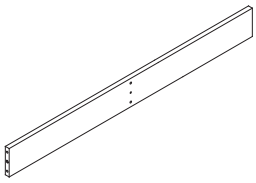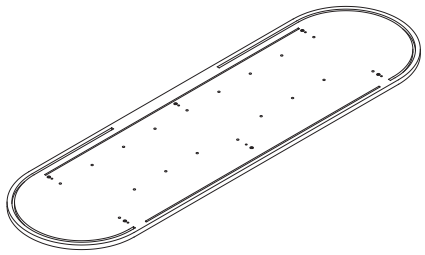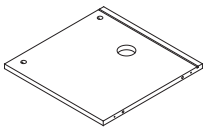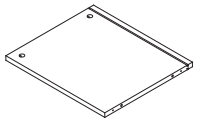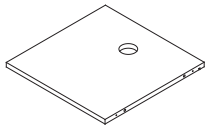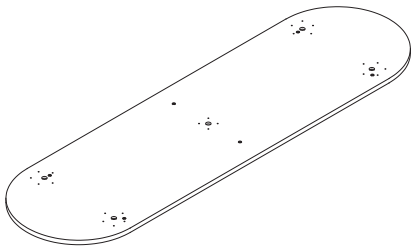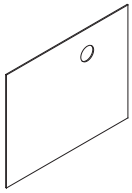1 x1 	2 x1 	3 x1 
4 x1 	5 x1 	6 x1 
7 x1 	8 x1 	9 x1 
10 x6 	11 x1 	12 x2 
13 x4 	14 x2 	15 x1 


PART LIST

16	x1







D=




1



2




3

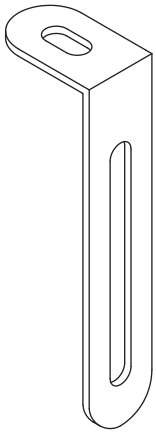


4


STEP1

Note: Put the anti-tip deviceD4 on the top, near thebackside, and fix it with a screw D3.

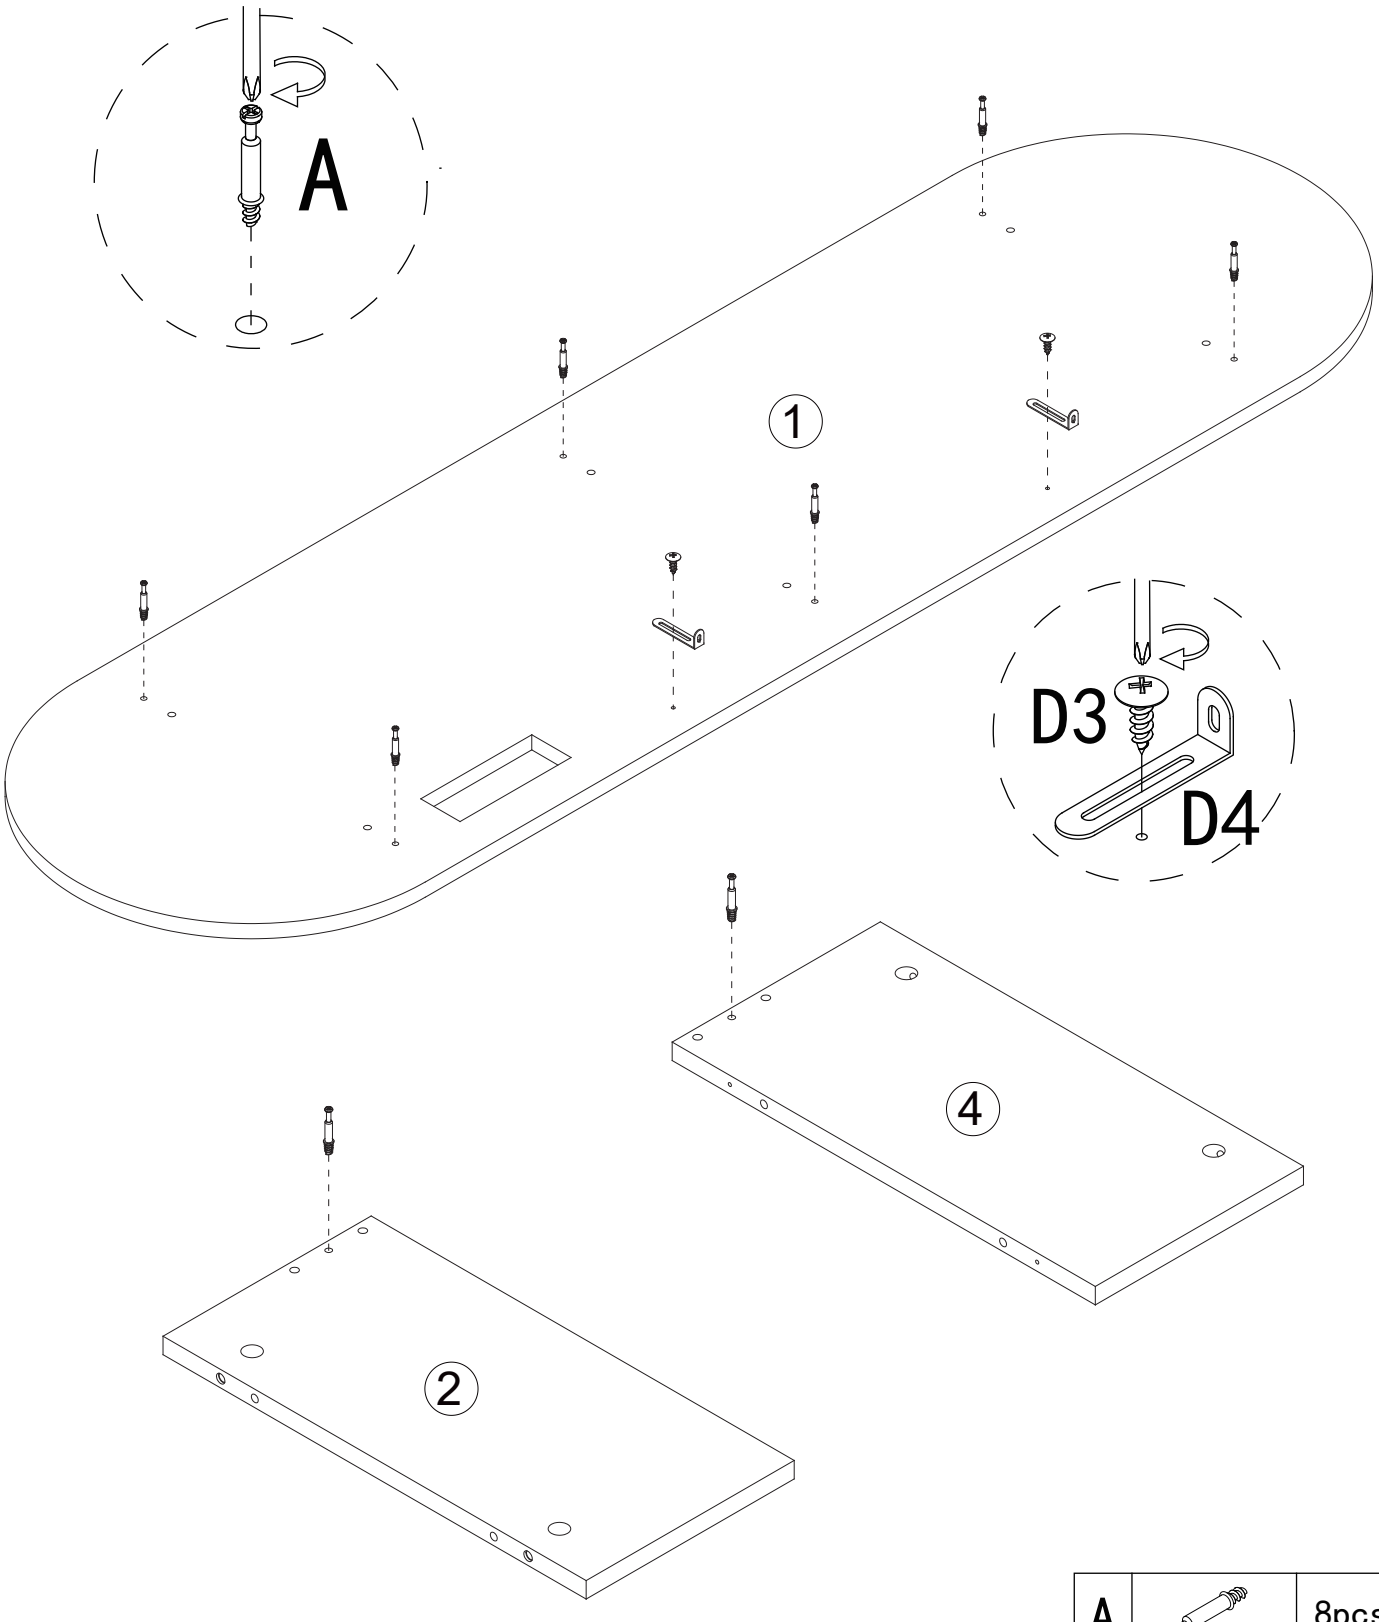


A		8pcs
D		2pcs

STEP2

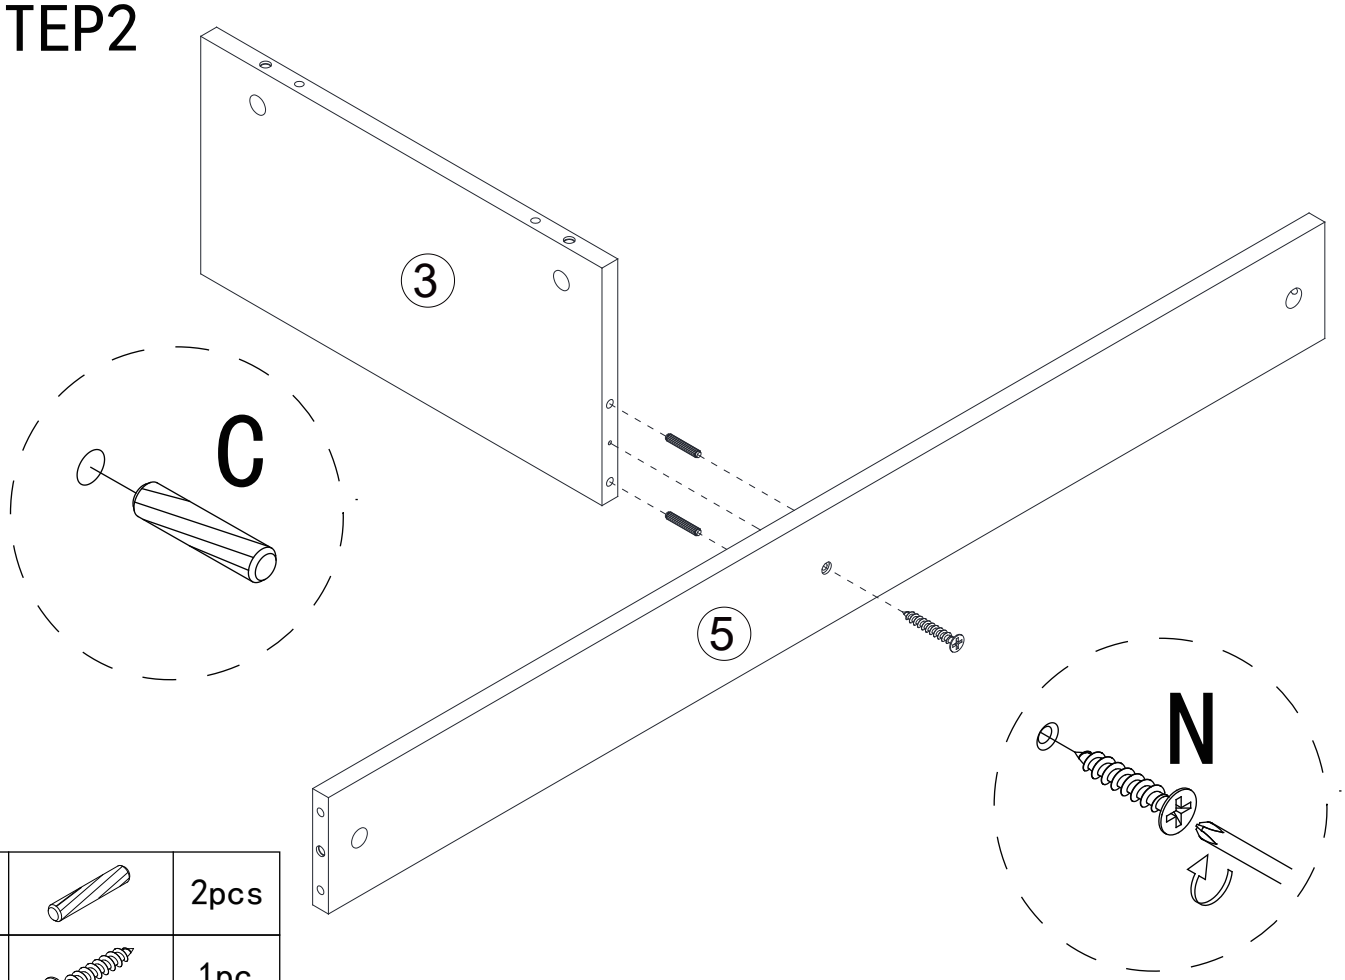


C		2pcs
N		1pc


STEP3

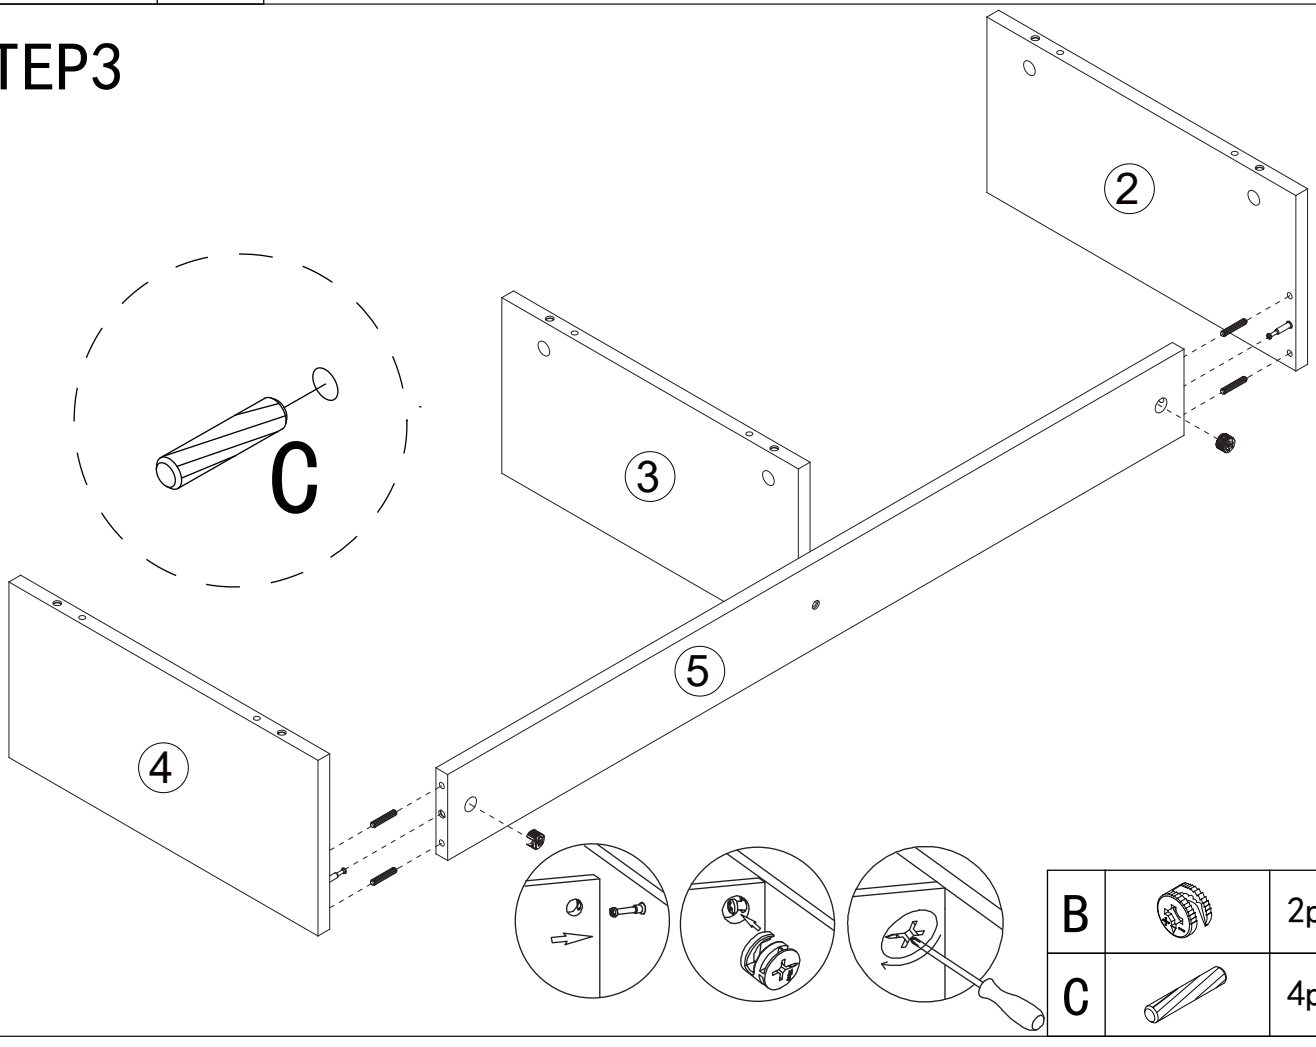


B		2pcs
C		4pcs


STEP4

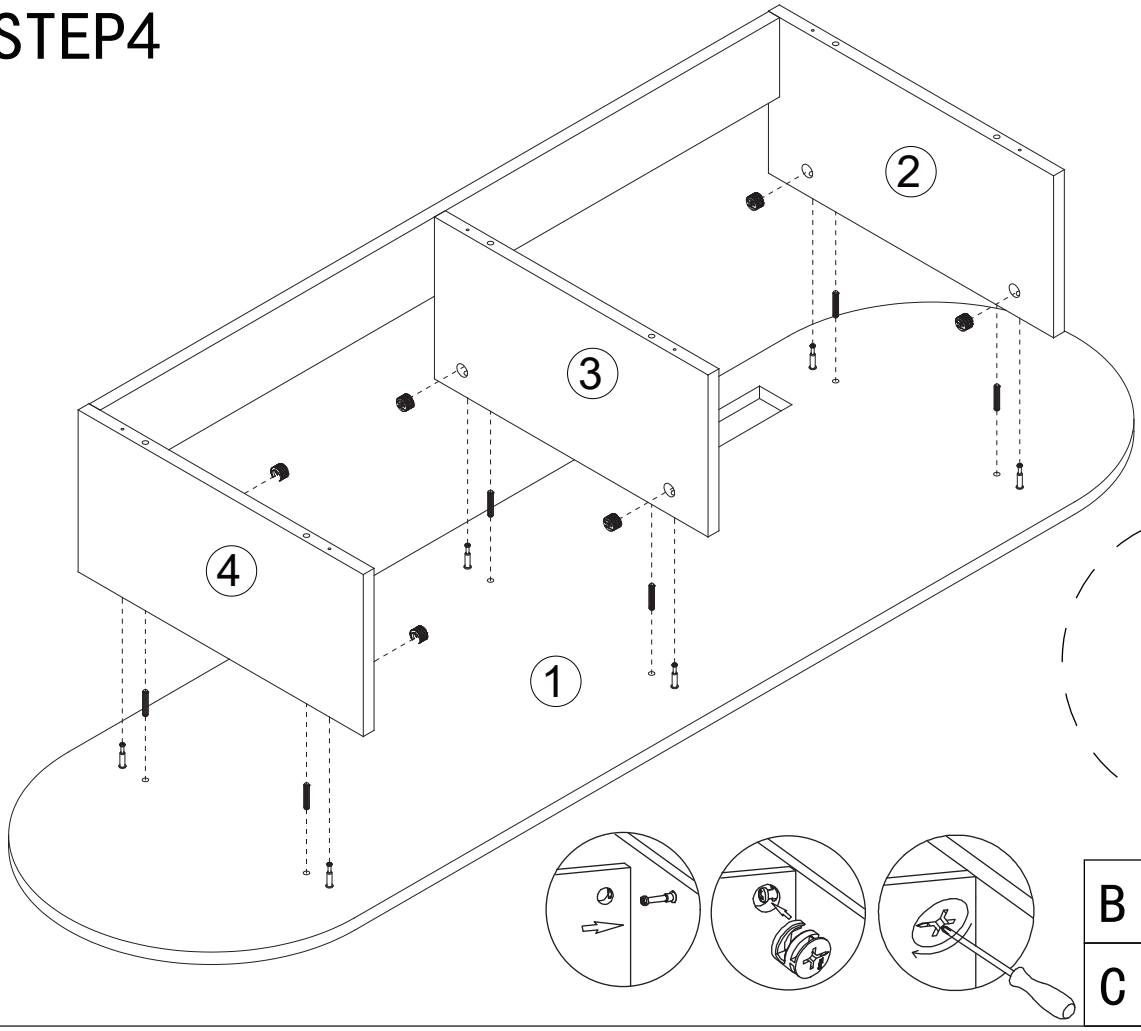

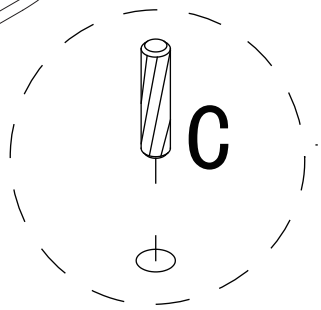


B		6pcs
C		6pcs


STEP5

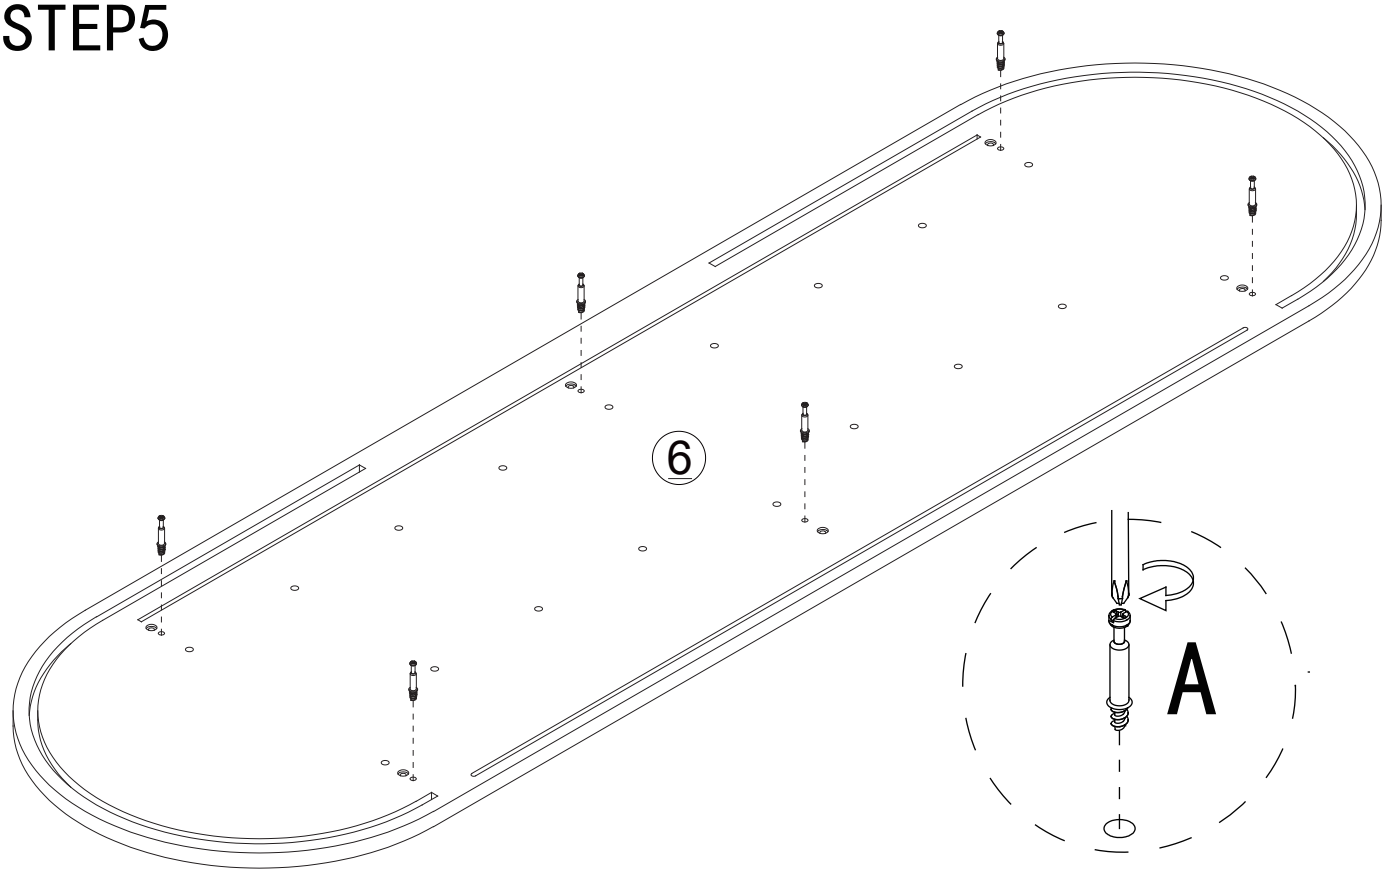


A		6pcs

STEP6

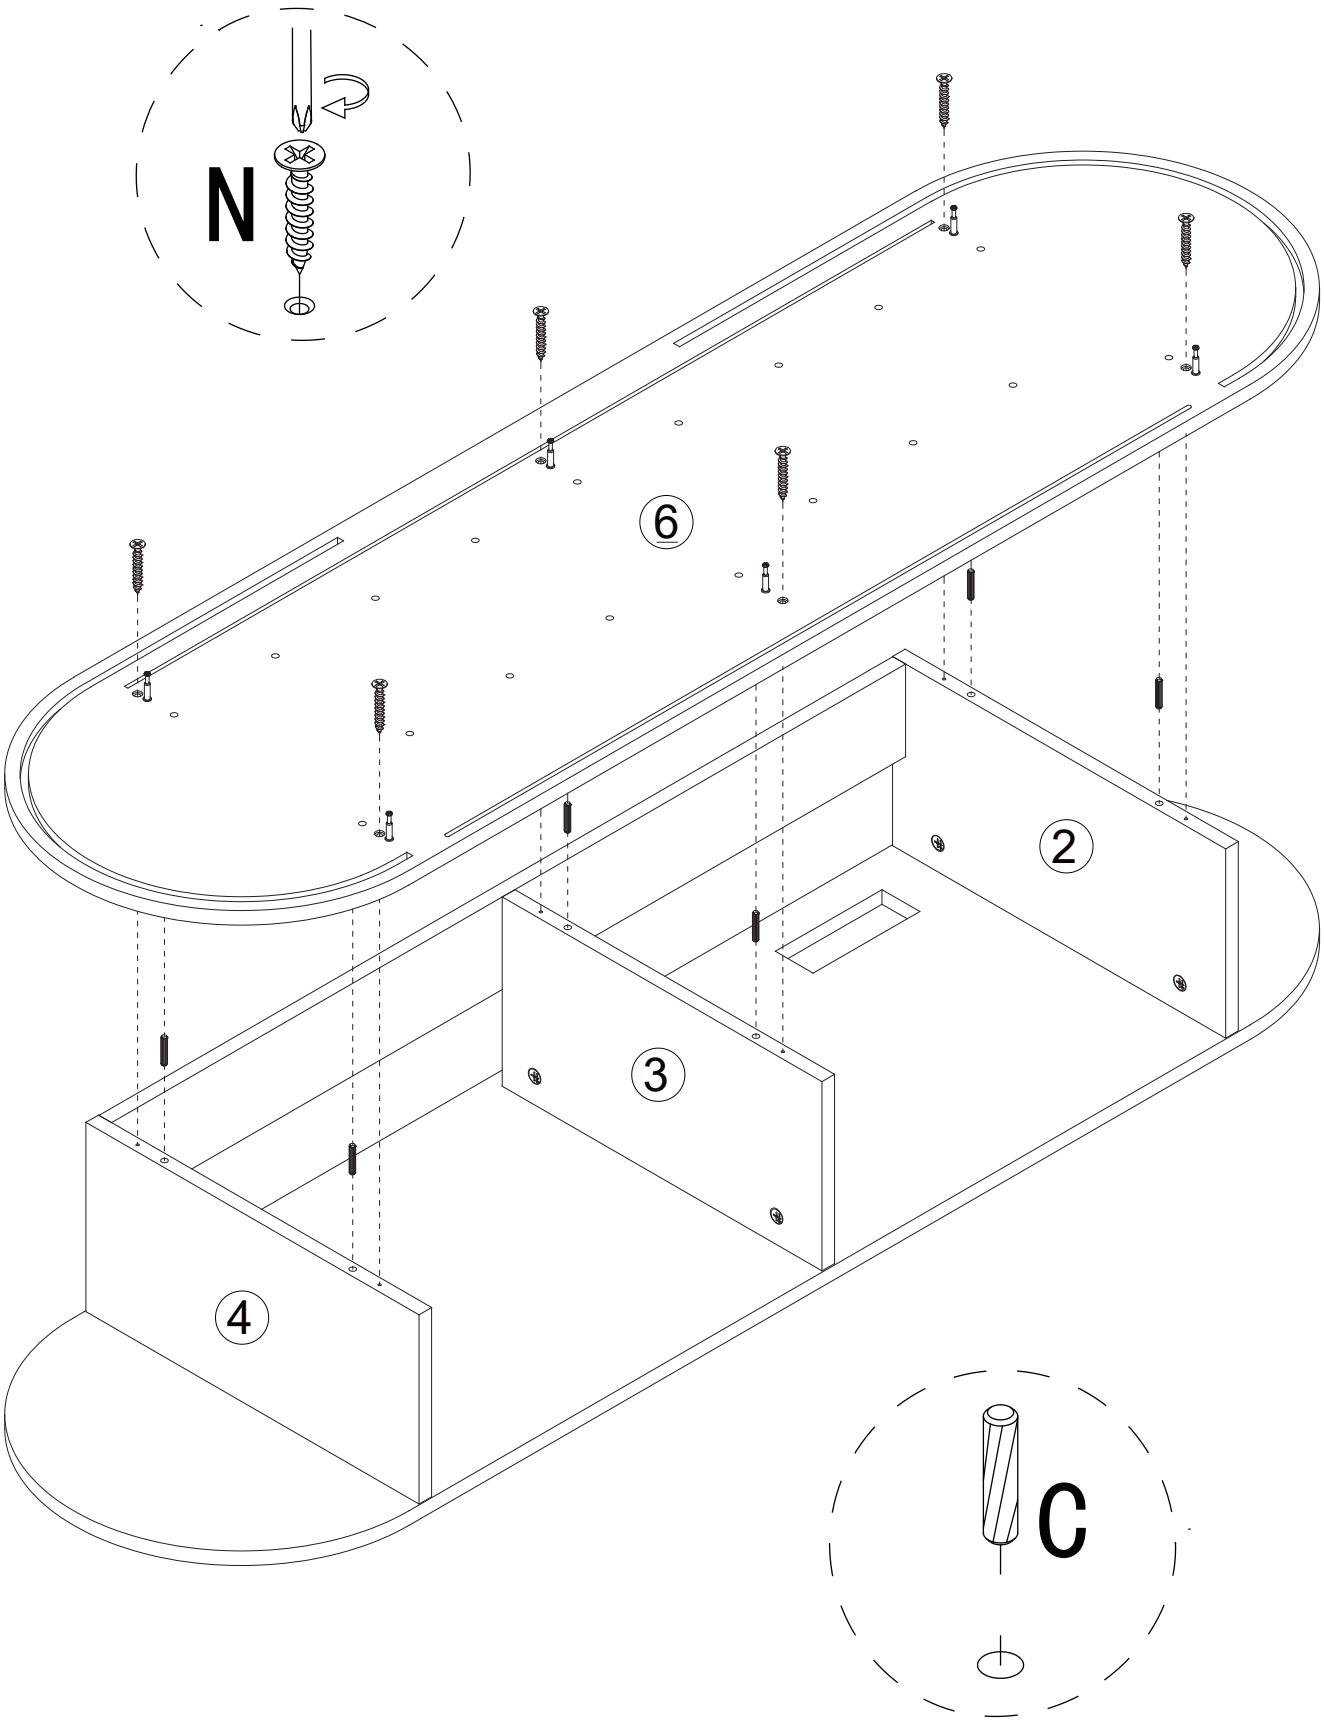


C		6pcs
N		6pcs


STEP7

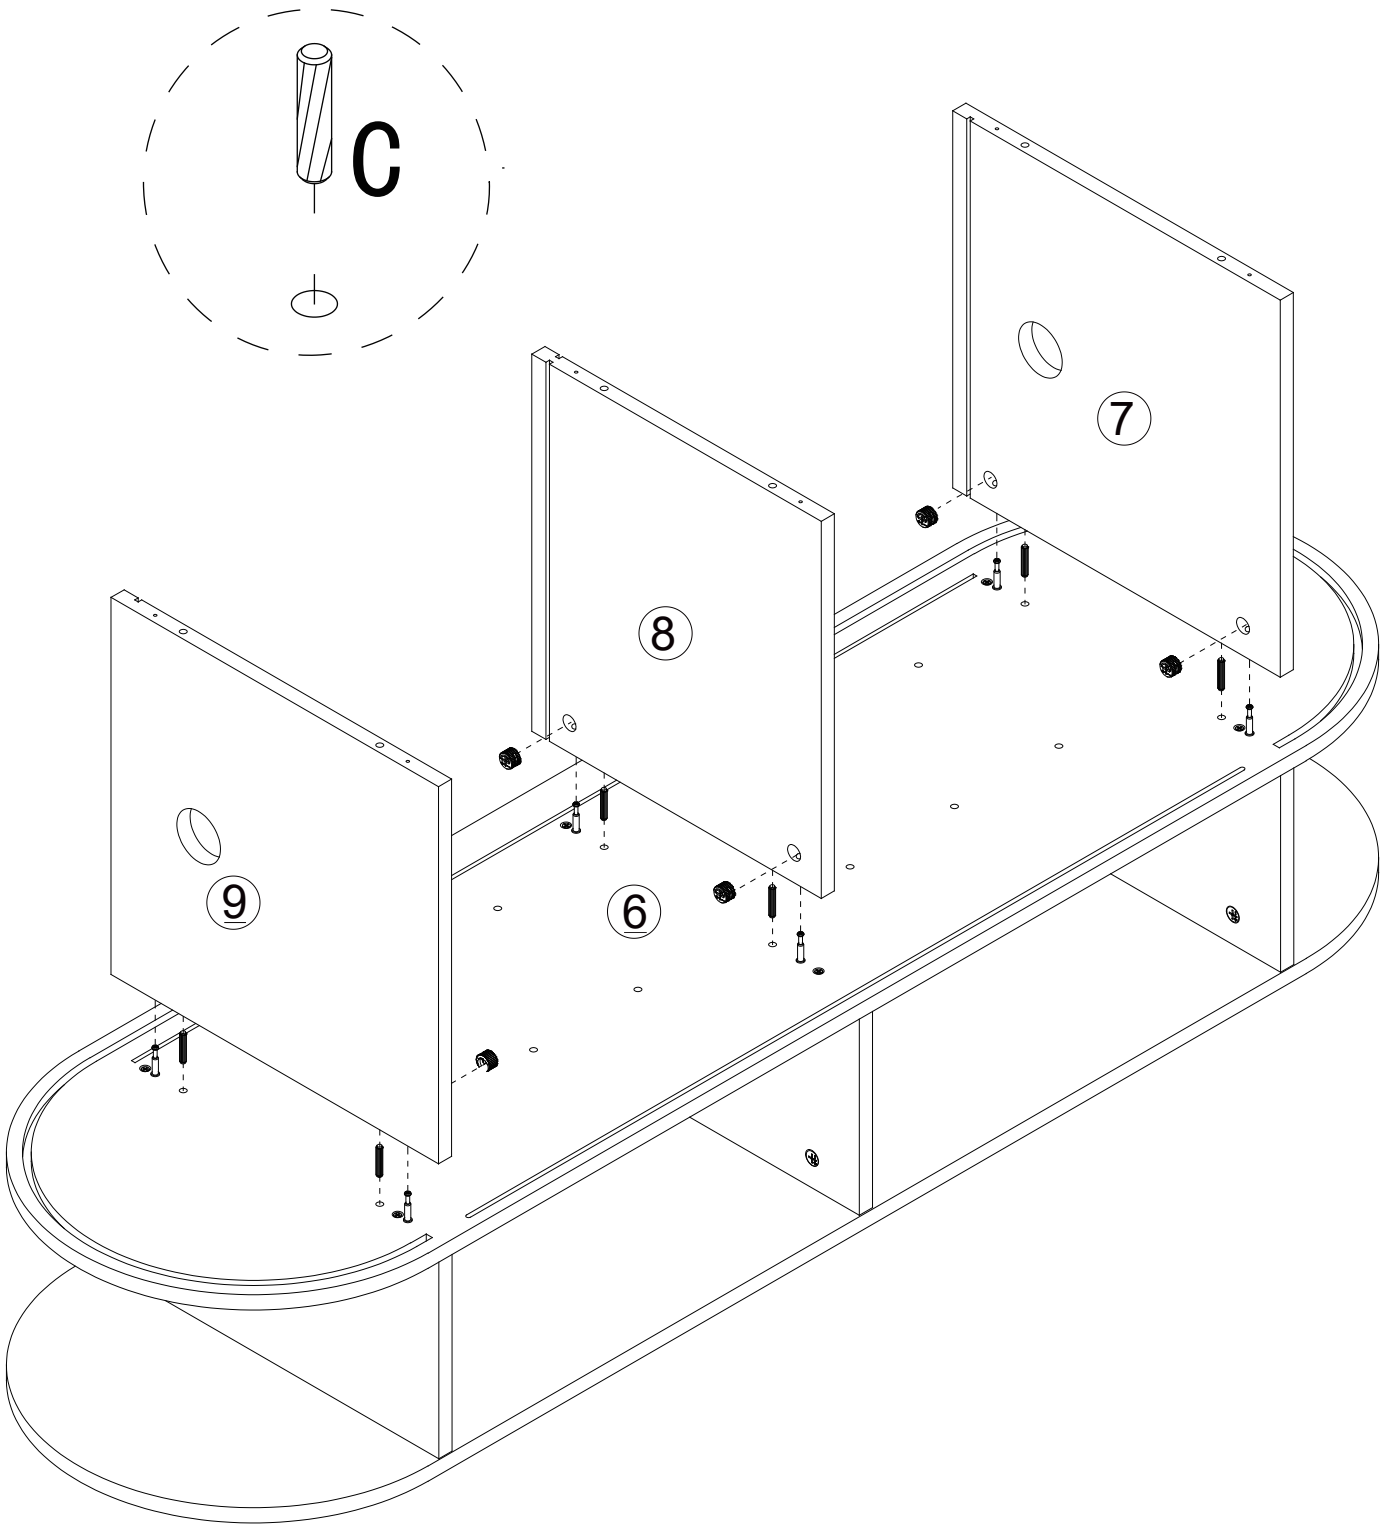

B		6pcs
C		6pcs

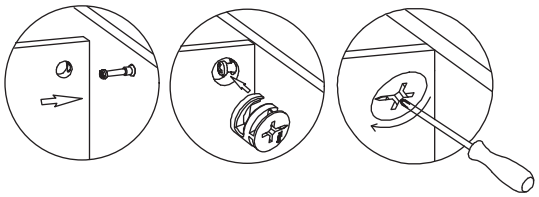


STEP8

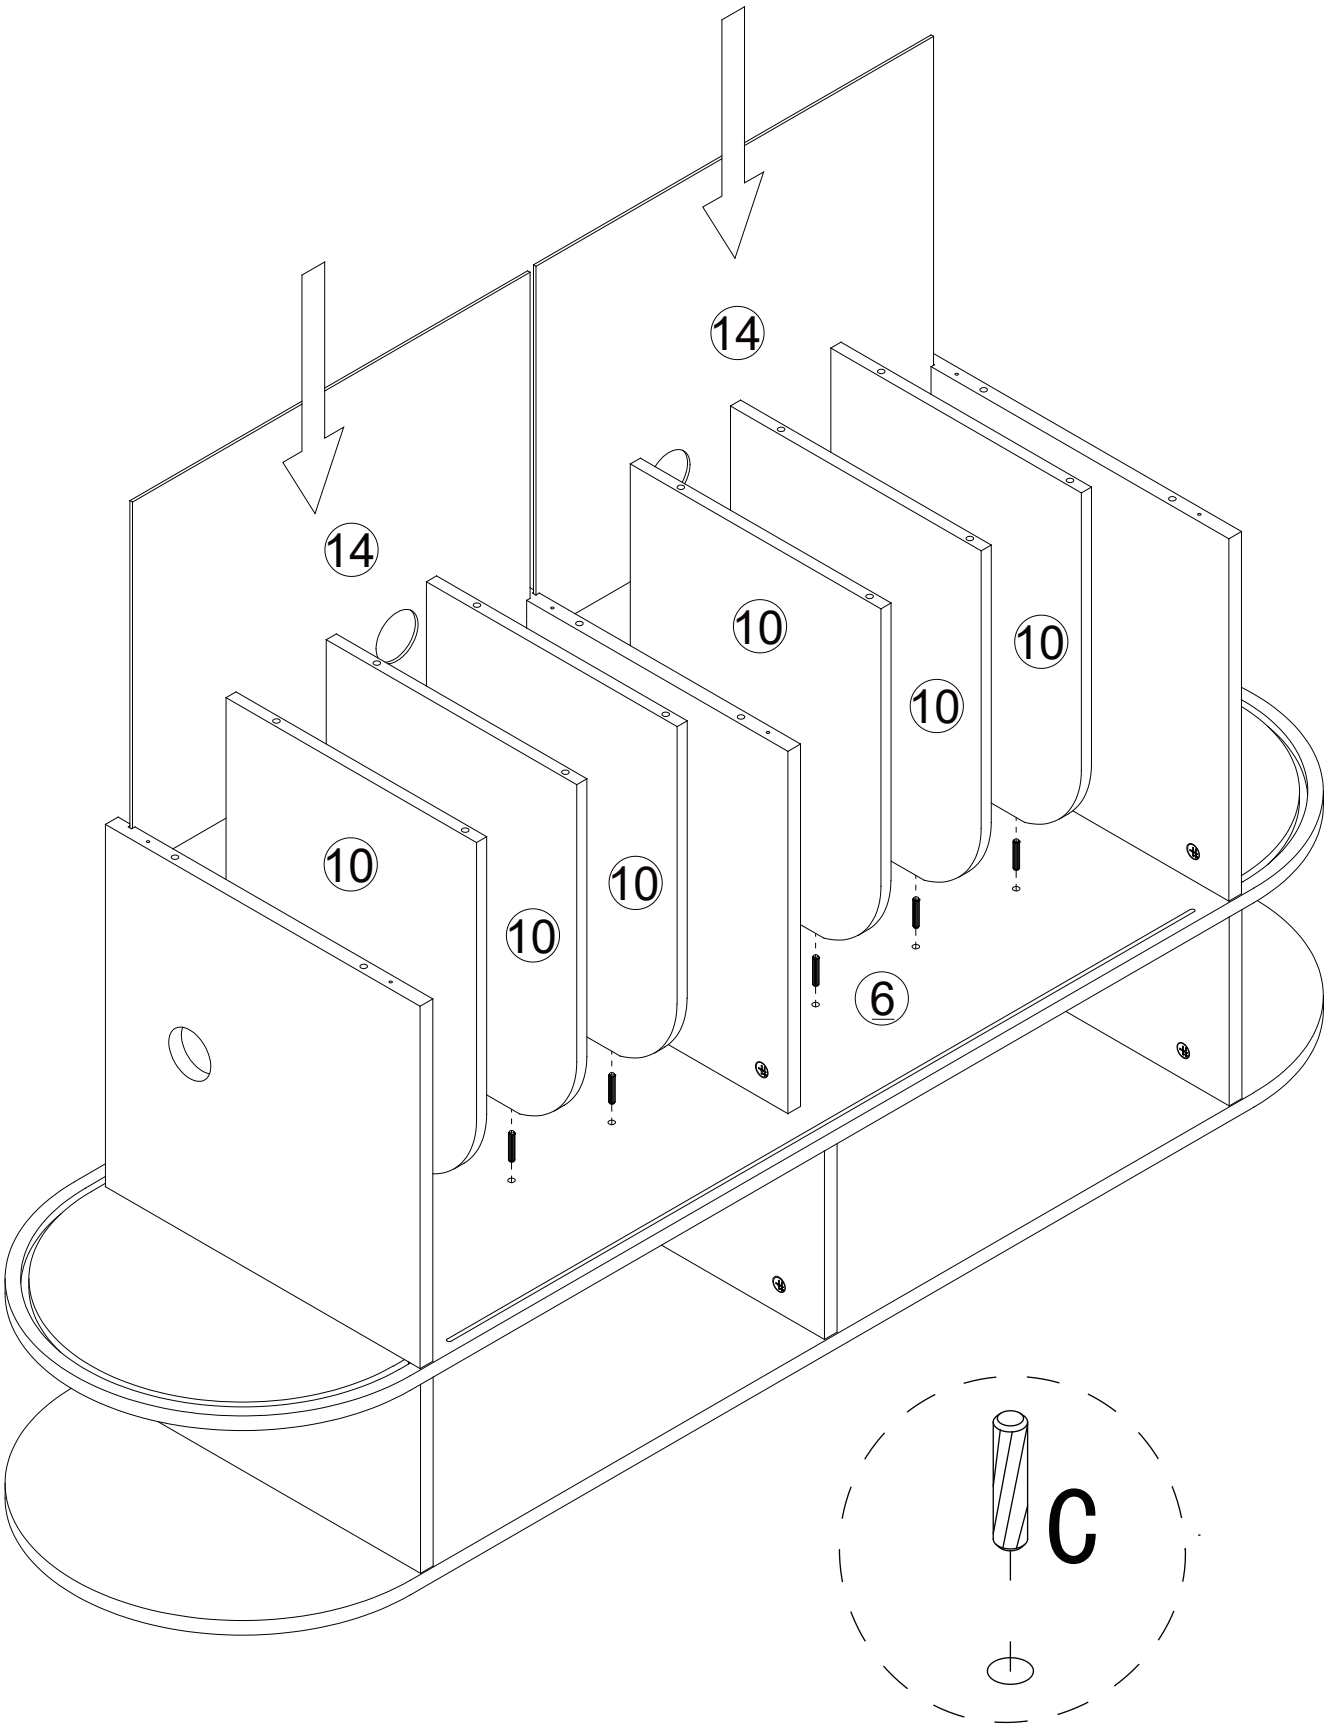


C		12pcs

STEP9

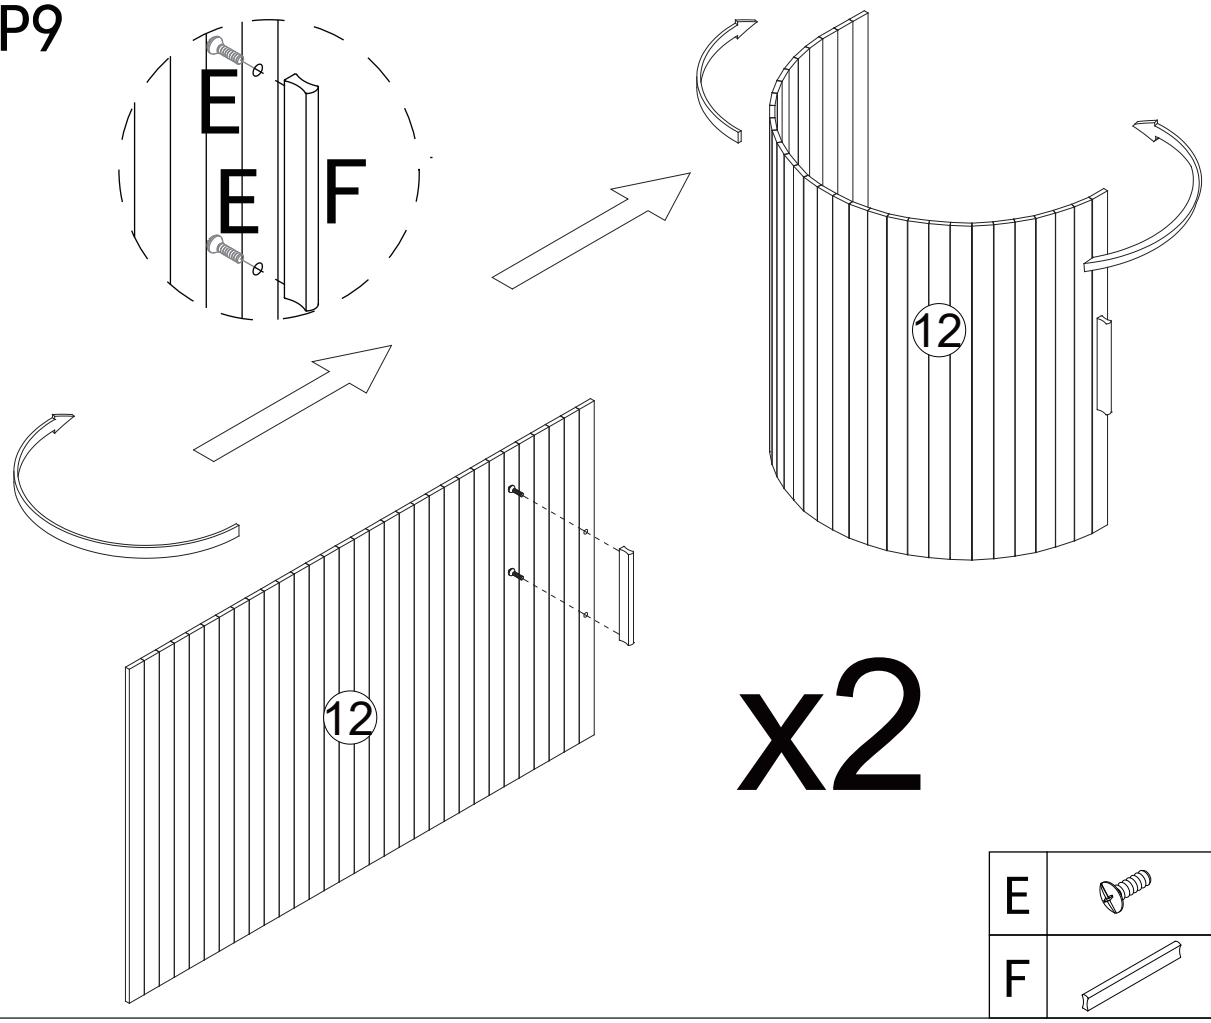

E		4pcs
F		2pcs


STEP10

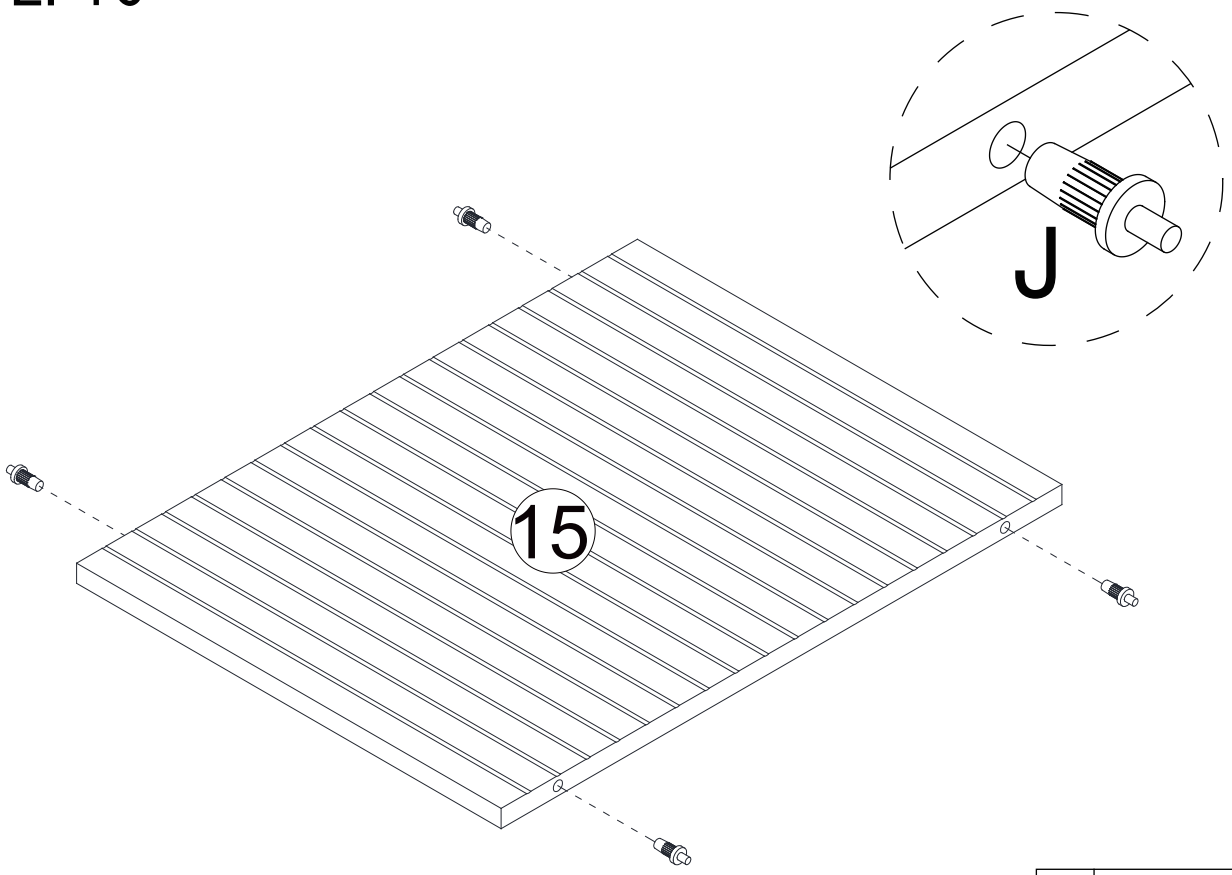

J		4pcs


STEP11

Apply vertical downward force to make sure the curtain slides into the track to prevent pinching.

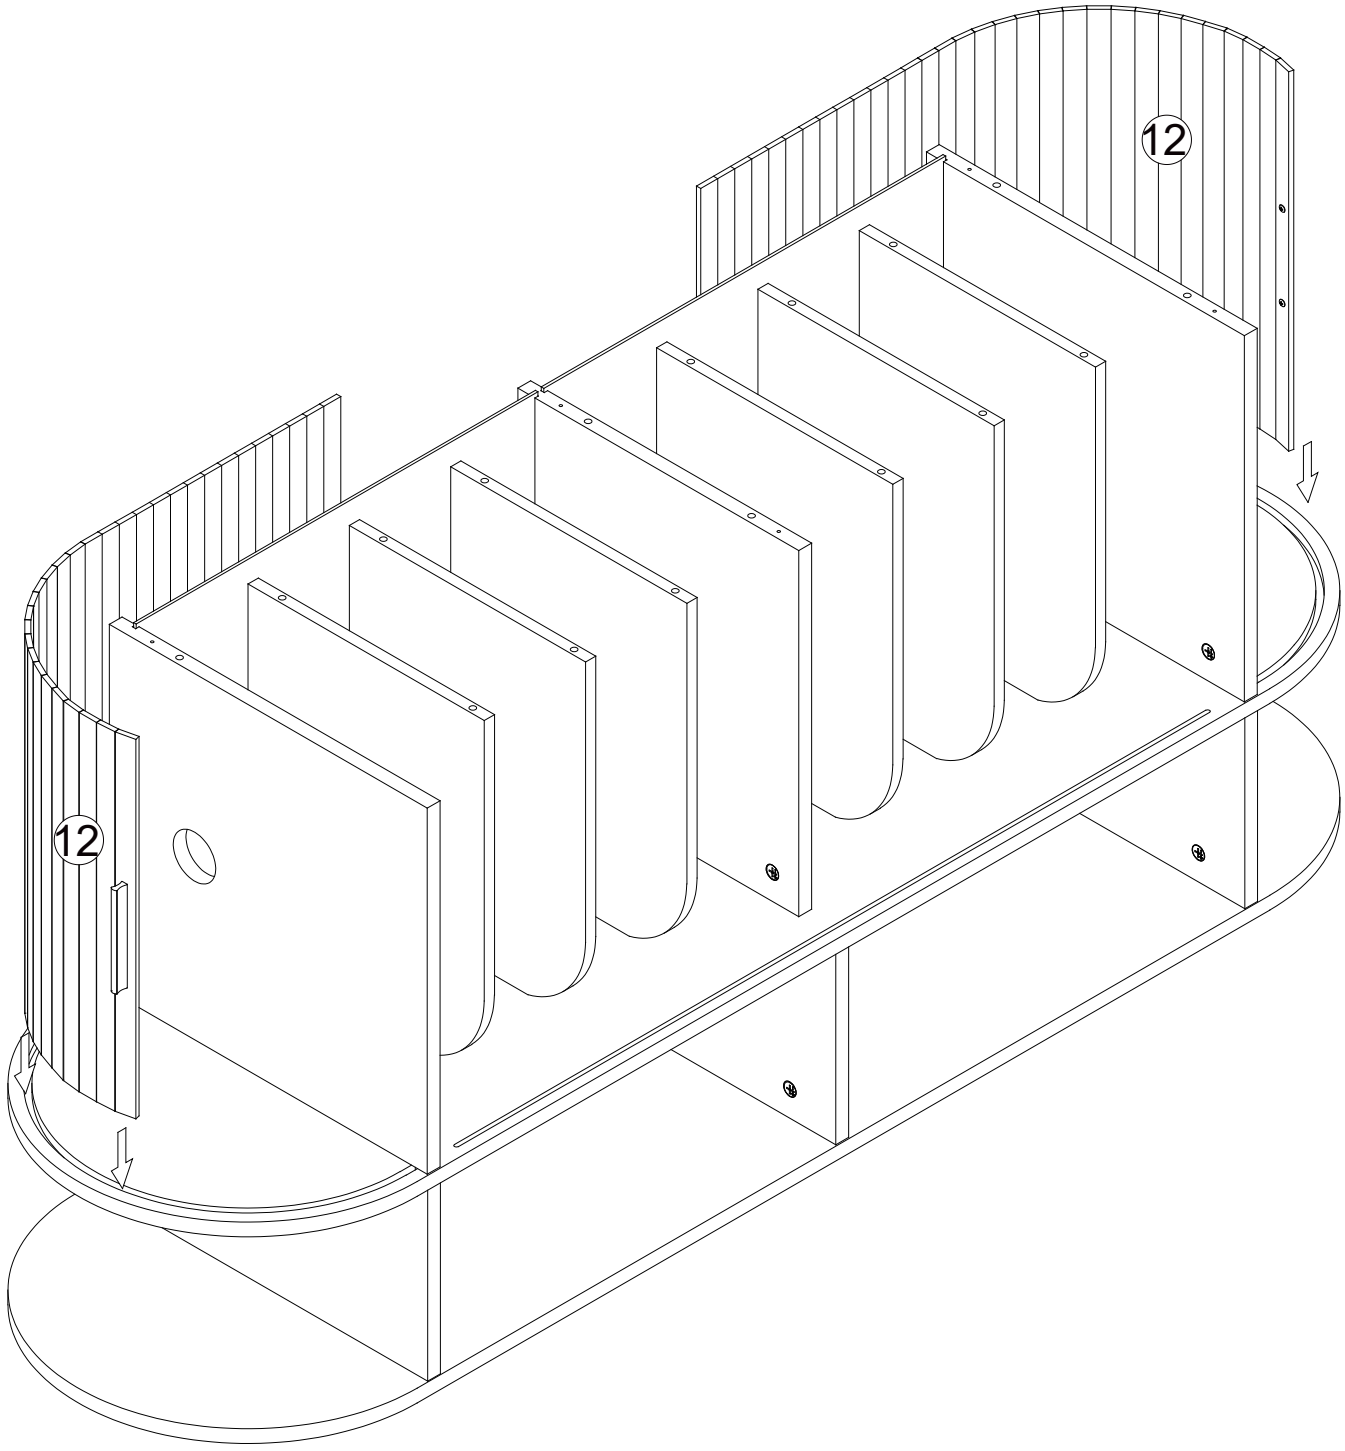


STEP12



This step requires two people to work together to install.

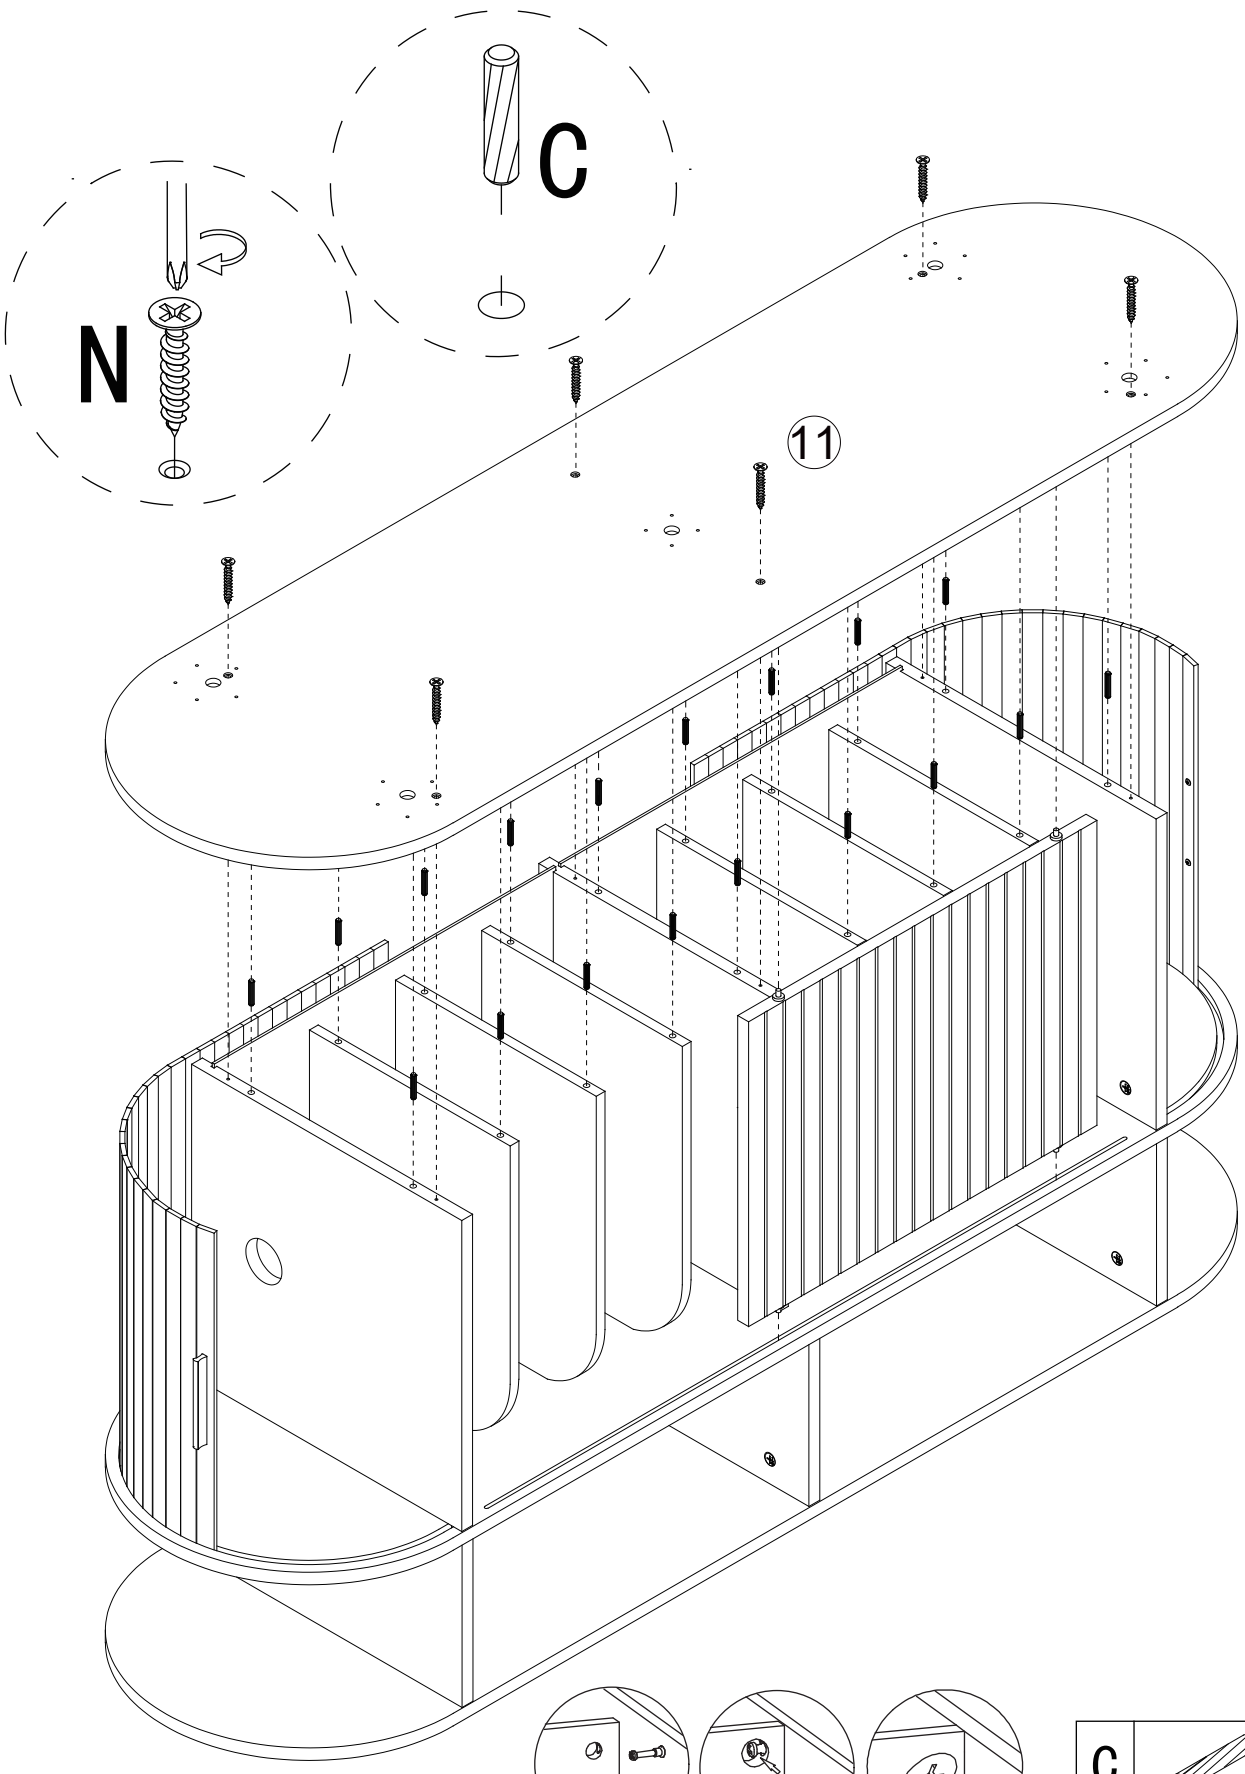

C		18pcs
N		6pcs

STEP13

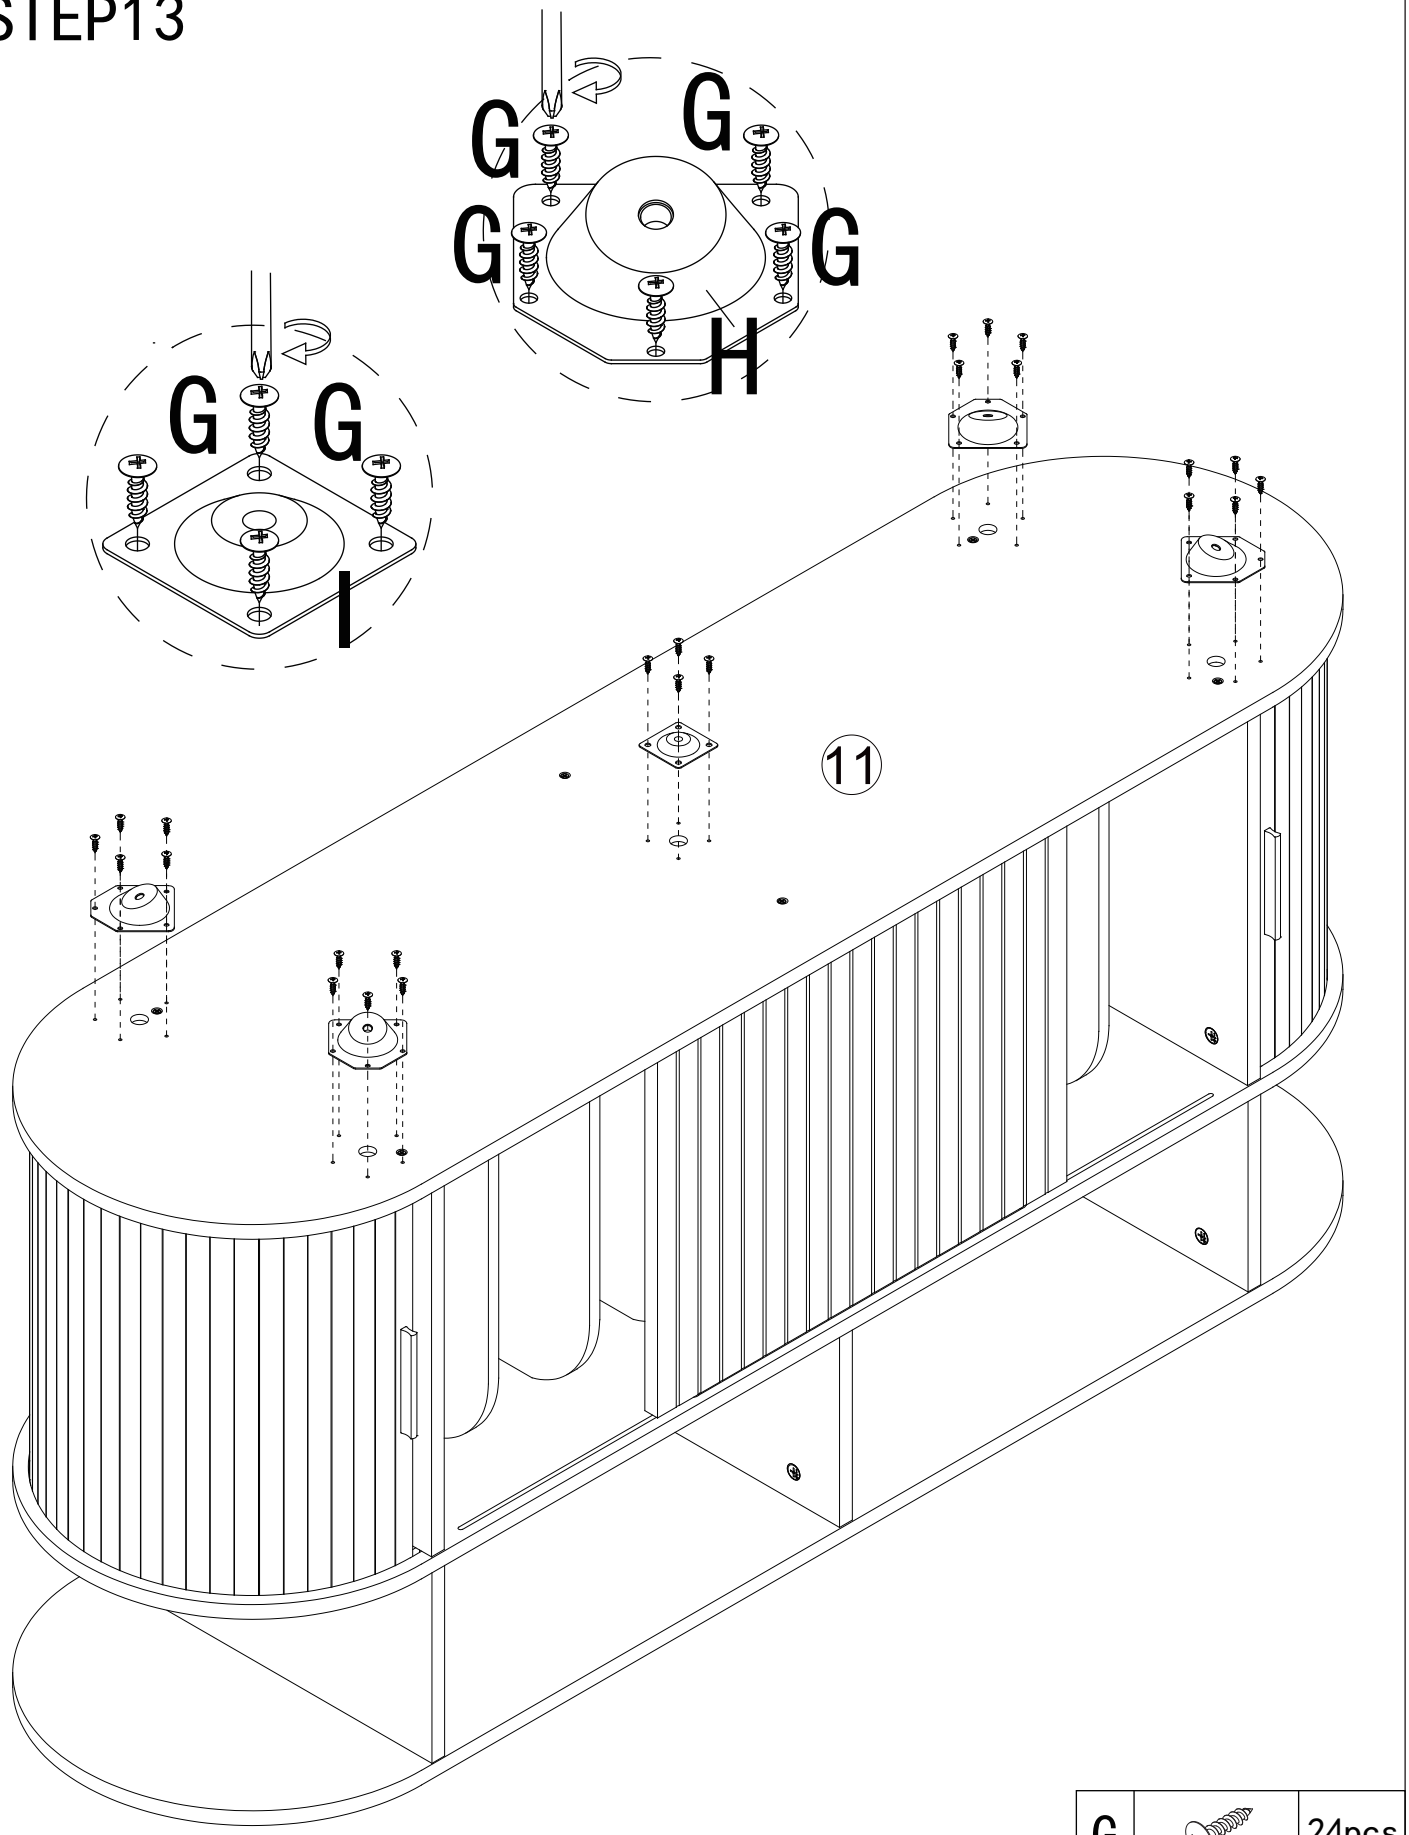


G		24pcs
H		4pcs
I		1pc

STEP14


Take care to distinguish between plate pieces 13 and 16.


If you screw it in place, you can't screw it anymore.

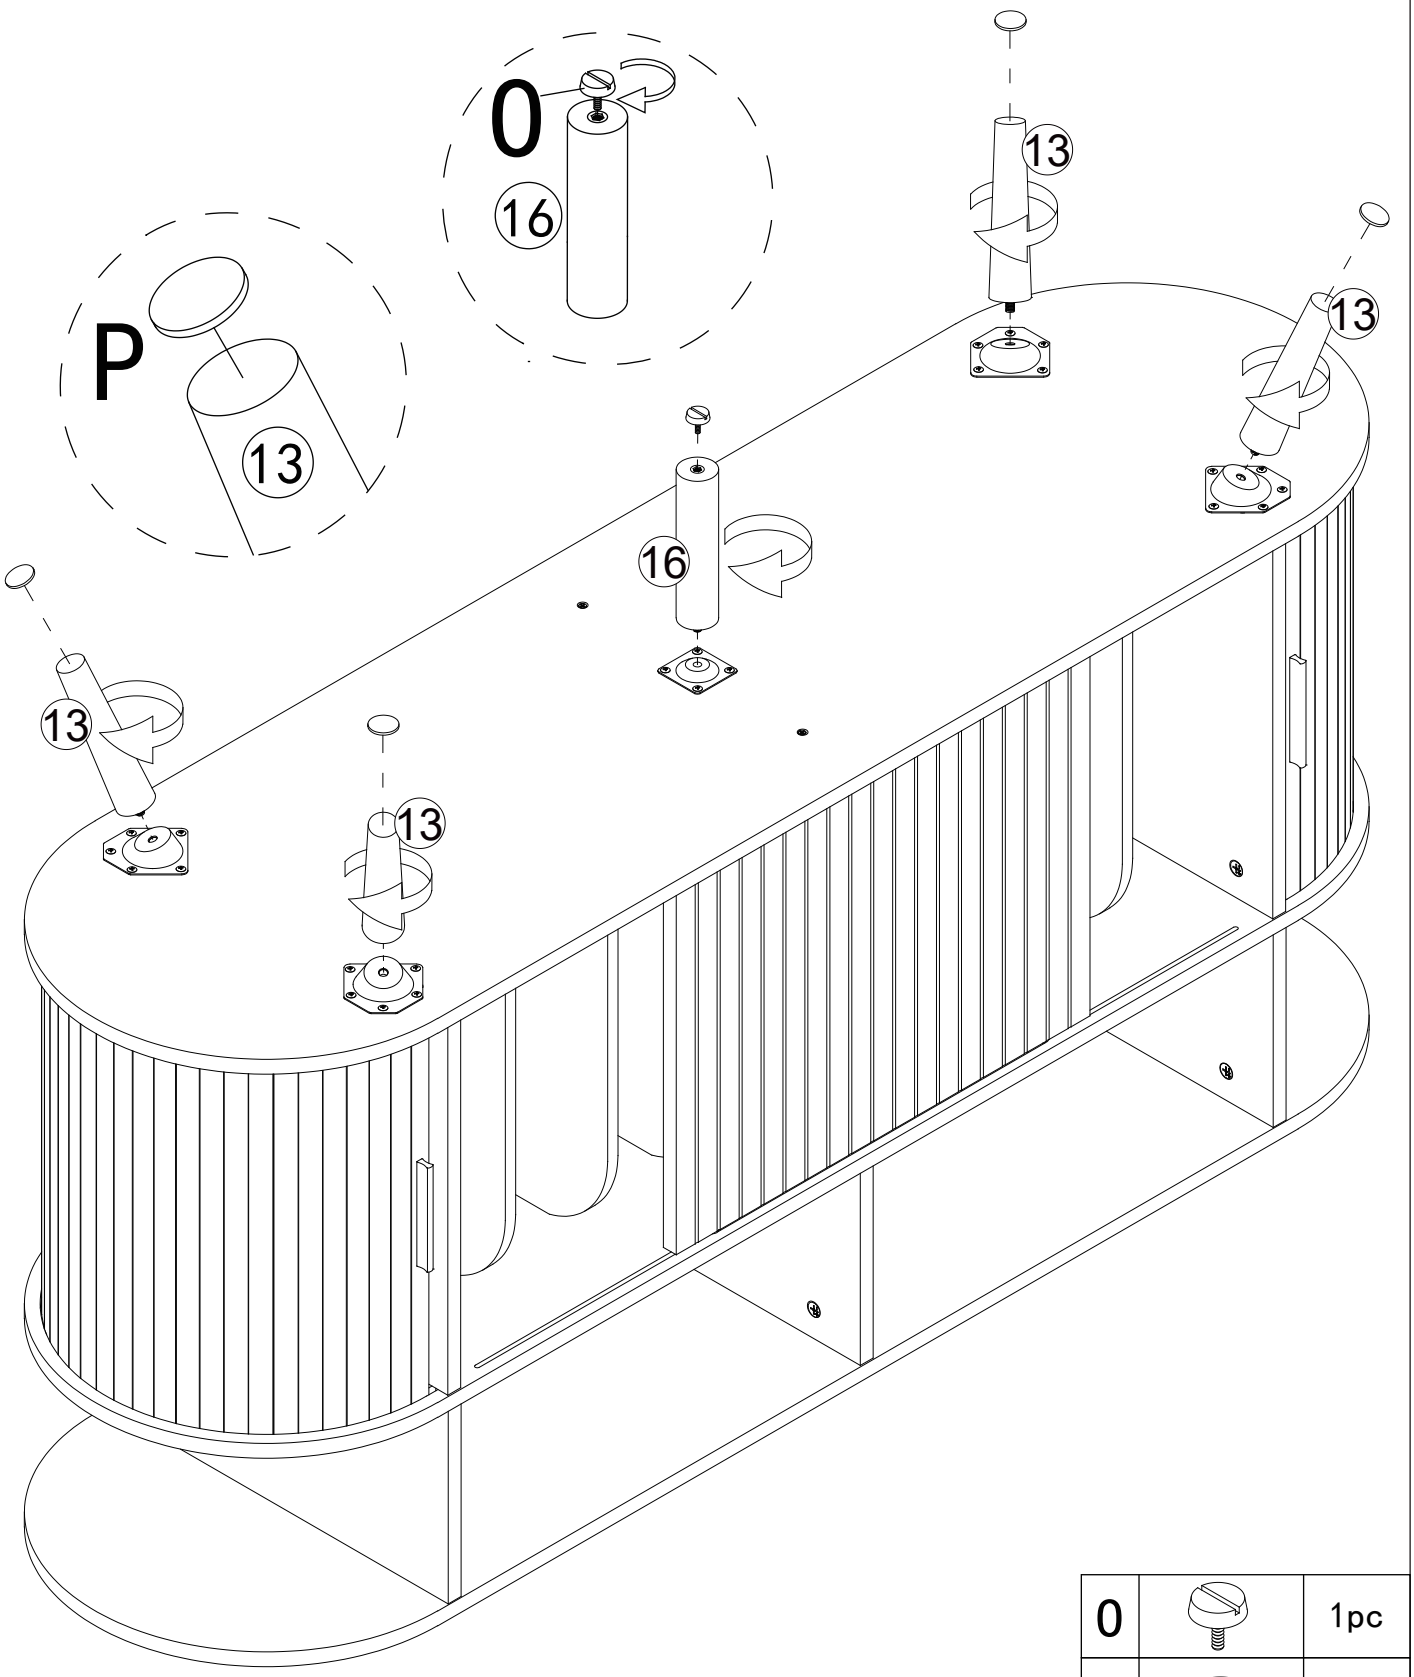

0		1pc
P		4pcs

STEP15

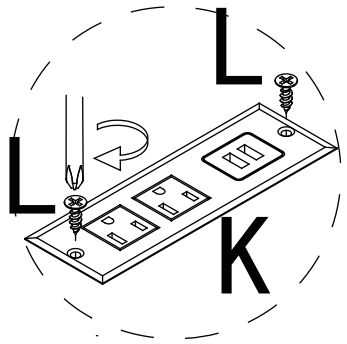


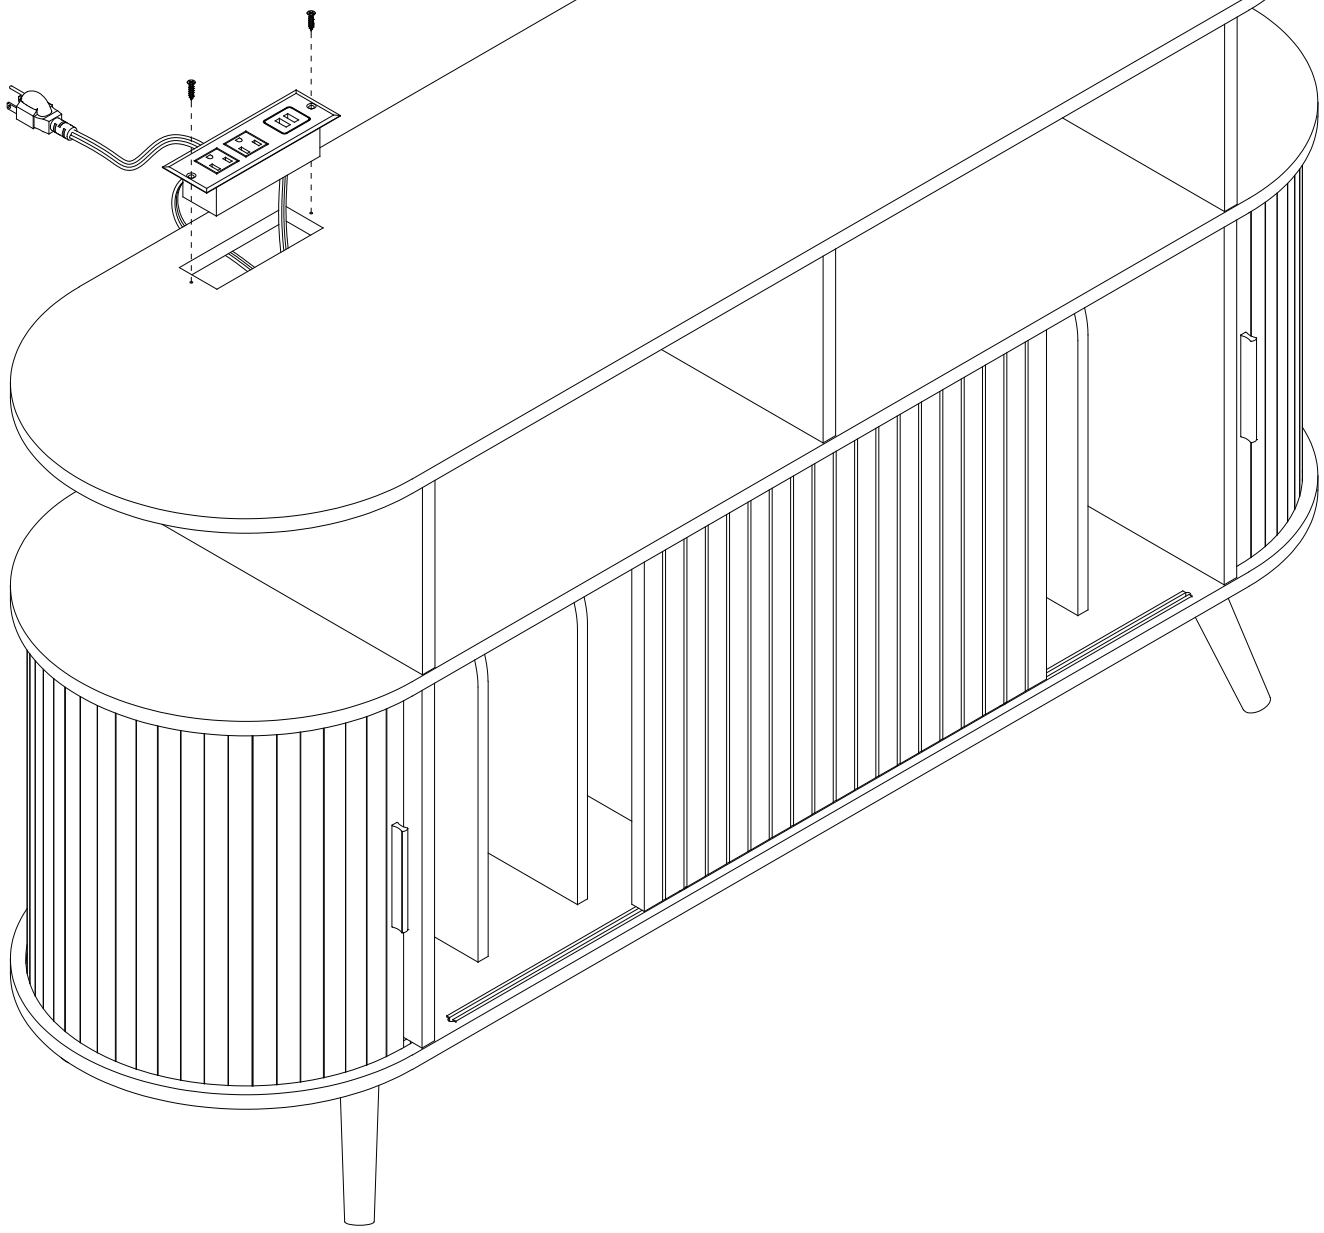


K		1pc
L		2pcs

STEP16


Be sure to install back plate buckle to prevent the cabinet from shaking.

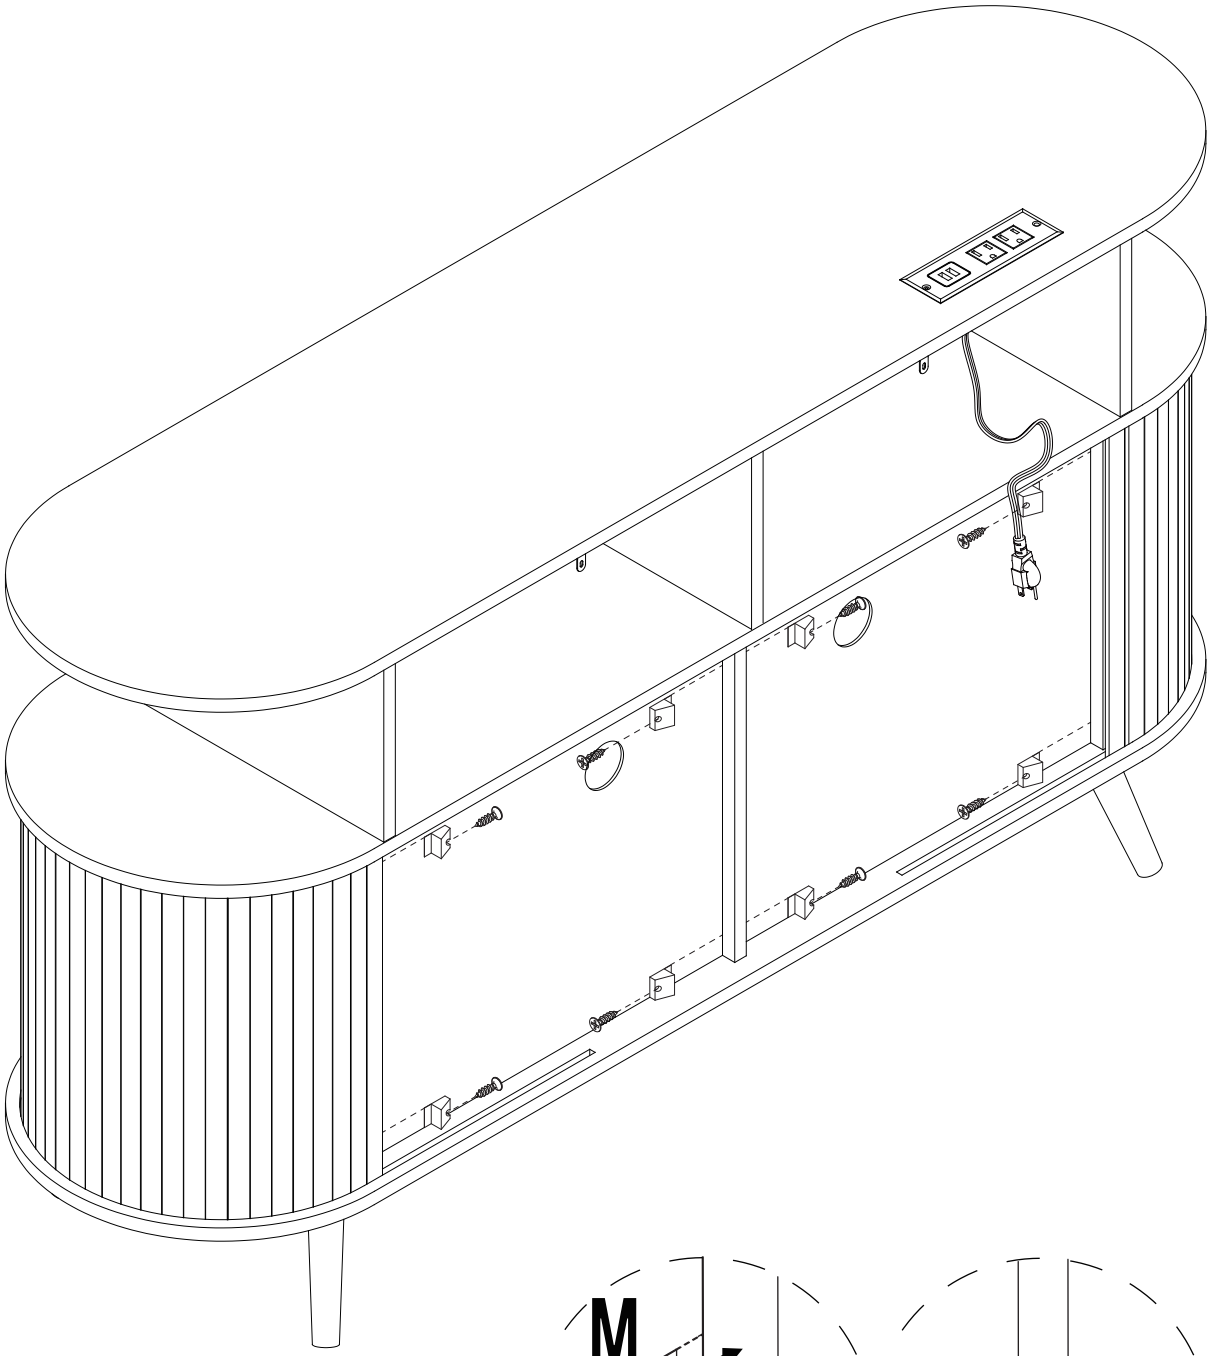


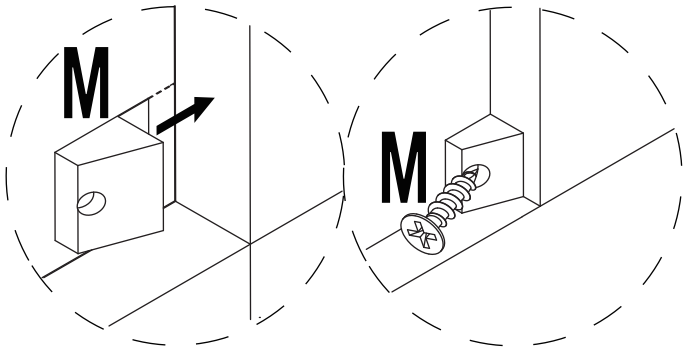

M		8pcs

STEP17

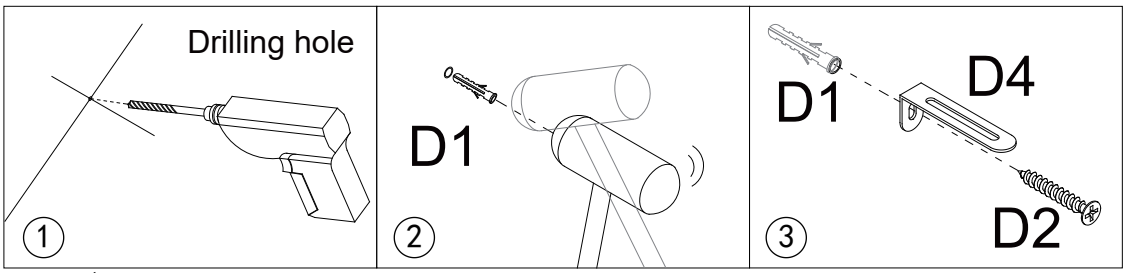

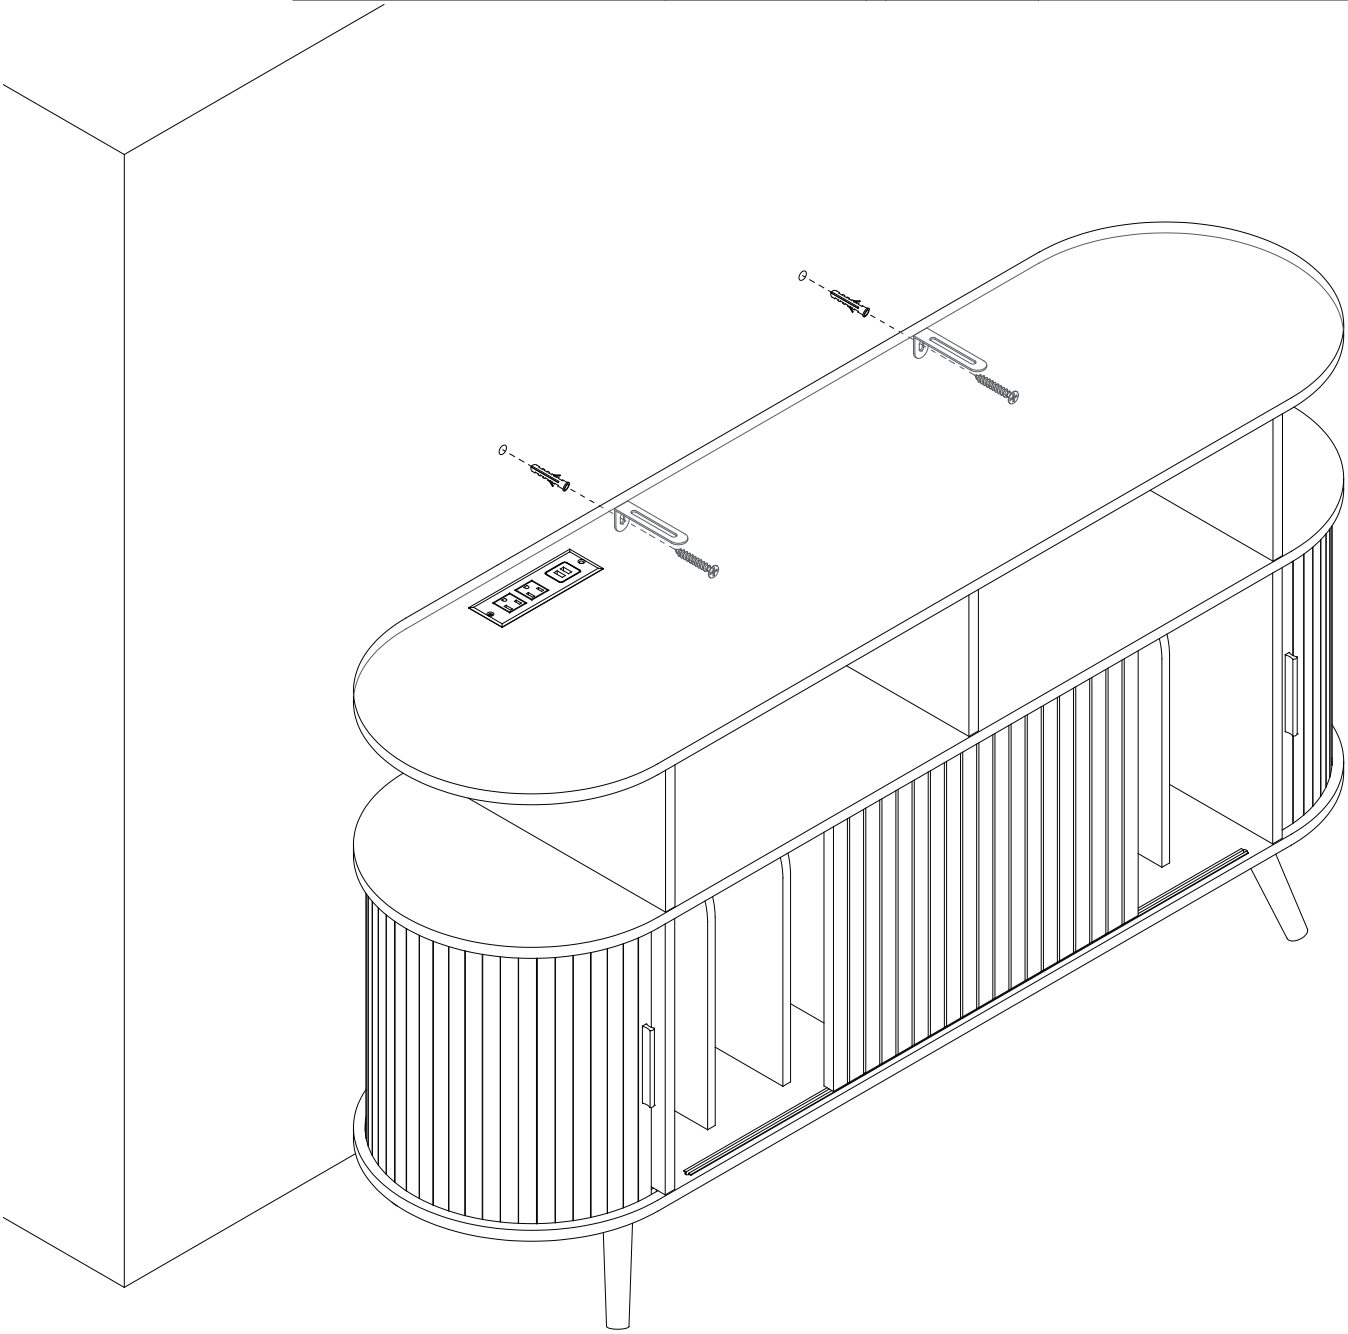

Drill a hole in the wall, then hammer the D1 into the wall with a hammer.

Note: Follow step
link D4 and D1 with a D2 using a screwdriver,and assembly it tightly.

Instructions for use: The cabinet legs should be designed to avoid lateral stress.
When moving, please lift vertically off the ground.
Dragging may cause loose connectors, affecting stability and service life.

D		2pcs