


ASSEMBLY INSTRUCTIONS

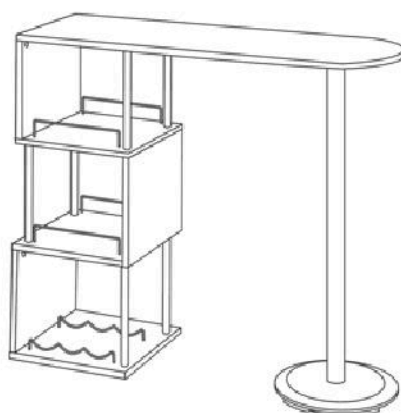

IMPORTANT

FOR DOMESTIC USE ONLY

PLEASE READ BEFORE YOU CONTINUE FURTHER

THE PRODUCT YOU HAVE PURCHASED WILL GIVE YOU MANY YEARS OF SERVICE IF YOU FOLLOW THE GUIDELINES FOR ITS SAFE ASSEMBLY AND PERIODIC MAINTENANCE AND CLEANING.

ASSEMBLE ON A SOFT CLEAN SURFACE.

DO NOT USE ANY TOOLS OTHER THAN THOSE SHOWN.

ANY SPANNERS OR ALLEN KEYS REQUIRED ARE INCLUDED WITH THE FITTINGS KIT.

DO NOT FOR ANY REASON USE A POWER TOOL TO ASSEMBLE THIS PRODUCT. ITS USE WILL INVALIDATE ANY CLAIM YOU MAY HAVE AND COULD MAKE THIS PRODUCT UNSAFE.


DEPENDING ON THE AMOUNT OF USE THIS PRODUCT RECEIVES IT MAY BE NECESSARY TO TIGHTEN UP THE FIXINGS FROM TIME TO TIME. THIS IS COMPLETELY NORMAL FOR ANY FLAT PACK FURNITURE.
DO NOT OVERTIGHTEN FIXINGS.

FOR CLEANING, YOU MAY USE A DAMP CLOTH (NOT WET) **DO NOT USE POLISH, DETERGENT OR CHEMICAL CLEANERS.**

THE SURFACE OF THIS ITEM IS NOT HEAT RESISTANT. ALWAYS USE A PLACE MAT UNDER HOT OR COLD ITEMS TO PREVENT MARKING.

THE GLASS USED IN THIS PRODUCT IS TOUGHENED AND CONFORMS TO BS 6206 : 1981


PARTS LIST

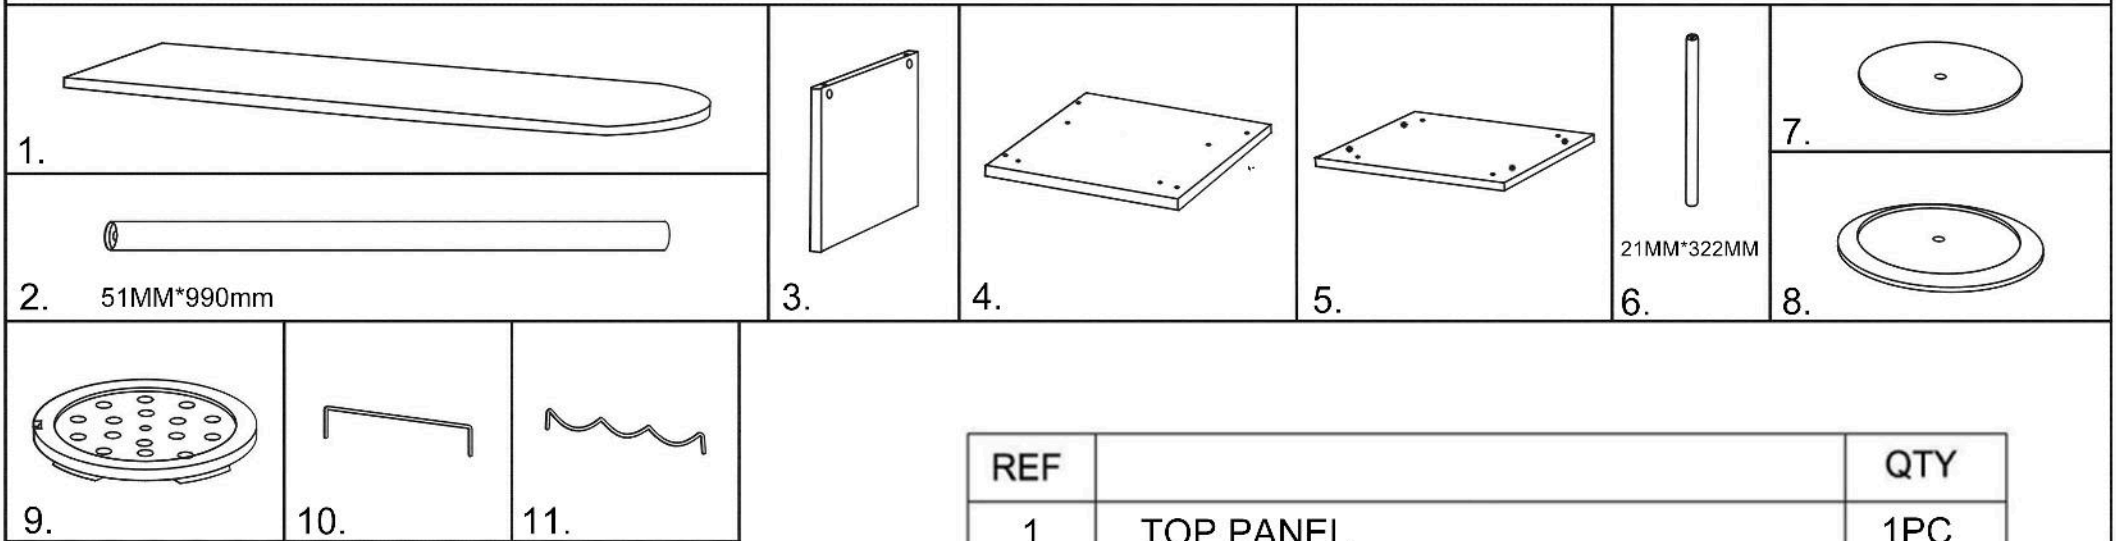















REF		QTY
1	TOP PANEL	1PC
2	LARGE METAL TUBE	1PC
3	SIDE PANEL	3PCS
4	SIDE PANEL	1PC
5	SIDE PANEL	2PCS
6	SMALL METAL TUBE	6PCS
7	TEMPERED GLASS	1PC
8	METAL BASE	1PC
9	COUNTER WEIGHT BLOCK	1PC
10	METAL WIRE	4PCS
11	METAL WIRE	2PCS

PLEASE CHECK THAT YOU HAVE ALL THE PARTS LISTED BEFORE YOU START ASSEMBLING. IF YOU DO FIND THAT SOMETHING IS MISSING, DO NOT CONTINUE ASSEMBLY. PLEASE CONTACT YOUR SUPPLIER IMMEDIATELY.

USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




HARDWARE LIST

A.  M8*50MM	C.  M6*44MM	E.  M8*50MM	G.  M8*23MM	I. 	K. 	M. 
B.  M6*38MM	D.  M6*38MM	F.  M8*38MM	H.  M8*30MM	J. 	L. 	N. 


PLEASE CHECK THAT YOU HAVE ALL THE PARTS LISTED BEFORE YOU START ASSEMBLING. IF YOU DO FIND THAT SOMETHING IS MISSING, DO NOT CONTINUE ASSEMBLY. PLEASE CONTACT YOUR SUPPLIER IMMEDIATELY.

REF		QTY
A	M8 DOUBLE ENDED STUDS	1 PC
B	M6 DOUBLE ENDED STUDS	6 PCS
C	M6 WOOD SCREW (USED BY "N")	6 PCS
D	M6 SCREW (USED BY "M")	6 PCS
E	M8 SCREW (USED BY "L")	1 PC
F	M8 WASHER	1 PC
G	M8 WASHER	6 PCS
H	WOODEN DOWEL	3 PCS
I	CAM BOLT	6 PCS
J	CAM NUT	6 PCS
K	FOAM PAD	4 PCS
L	LARGE ALLEN KEY	1 PC
M	SMALL ALLEN KEY	1 PC
N	SCREWDRIVER	1 PC


USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.




STEP 1

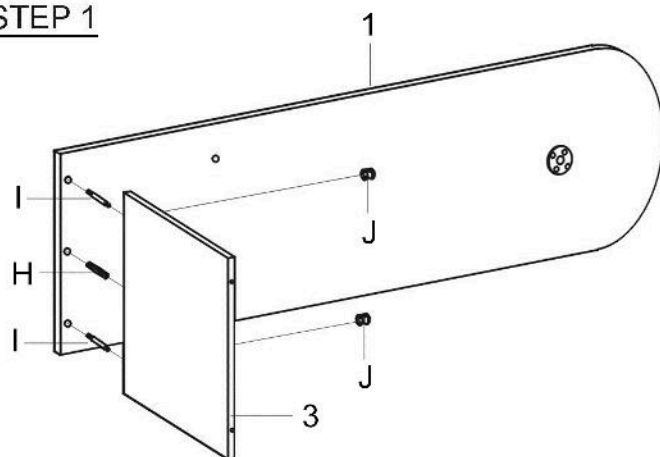


STEP 3

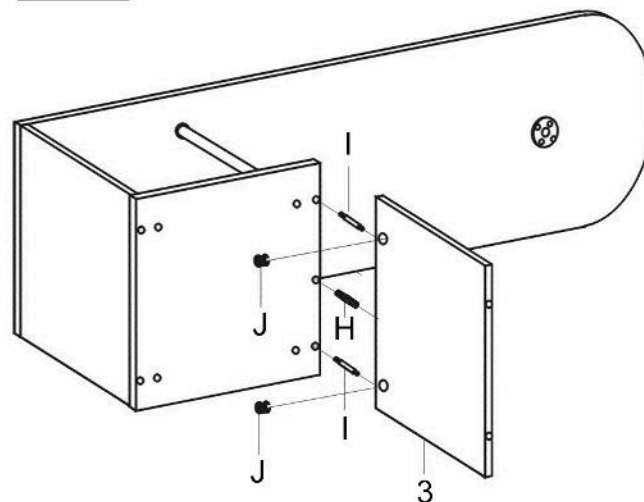


STEP 5

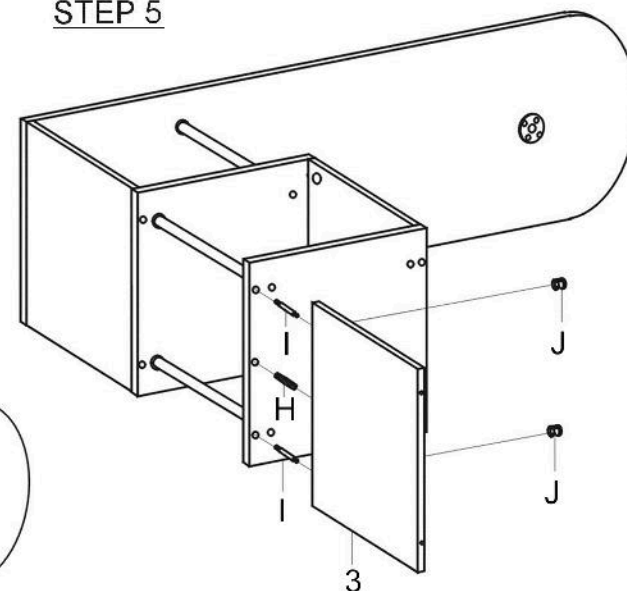


STEP 2

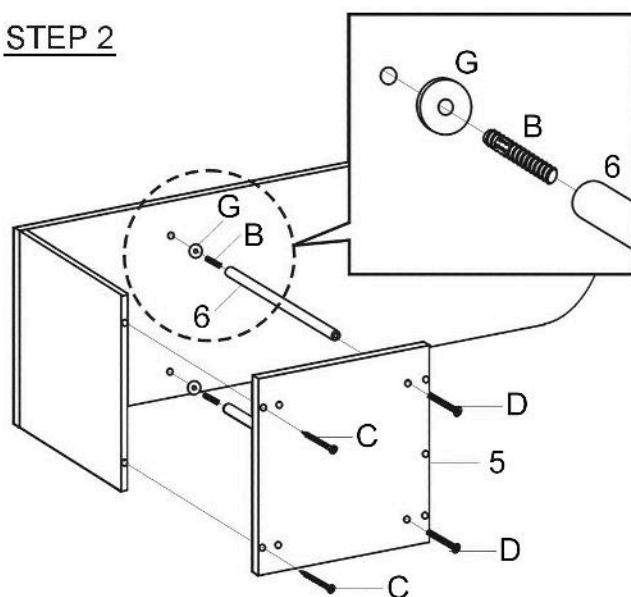


STEP 4

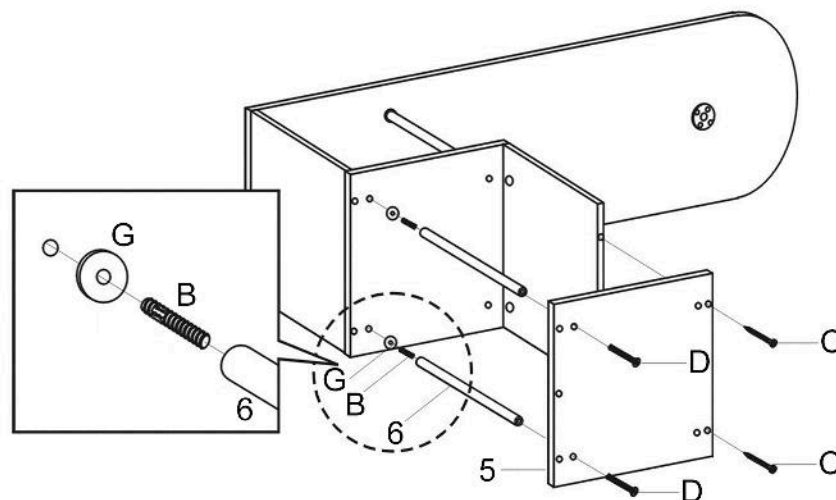


USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.





STEP 6

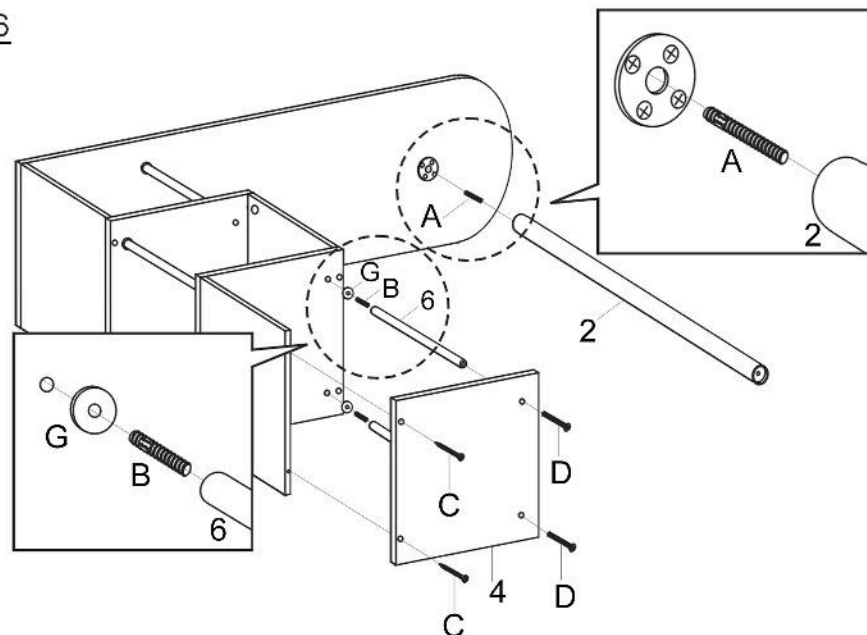

STEP 7

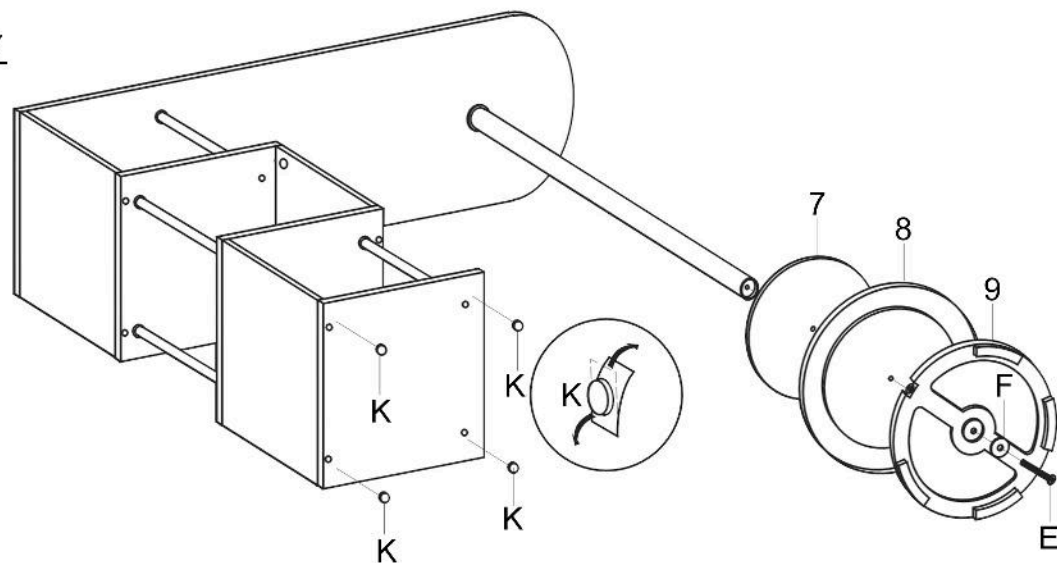

STEP 8

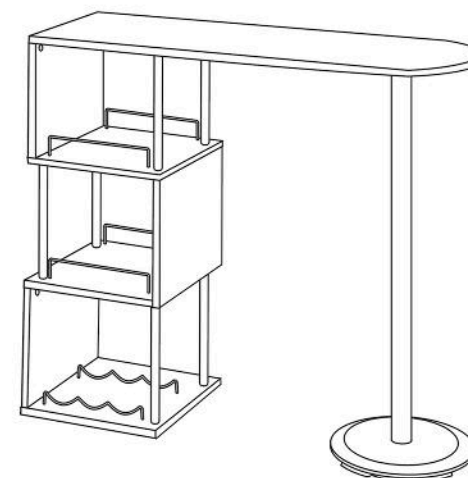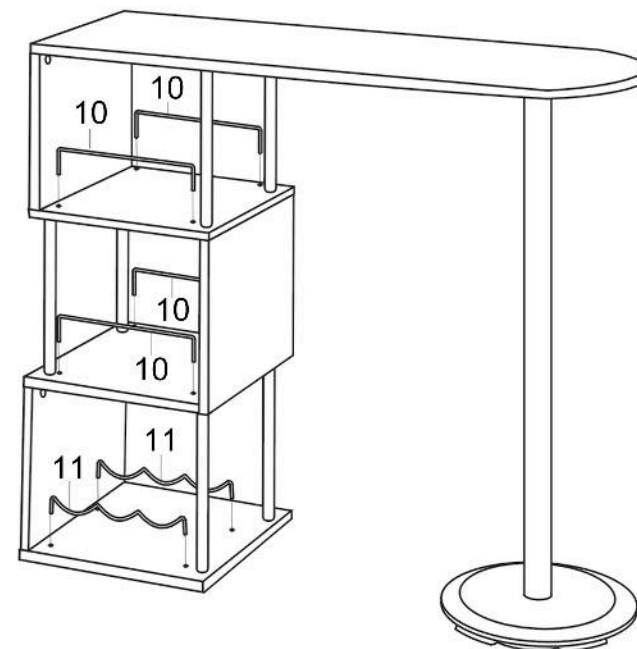

USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

