


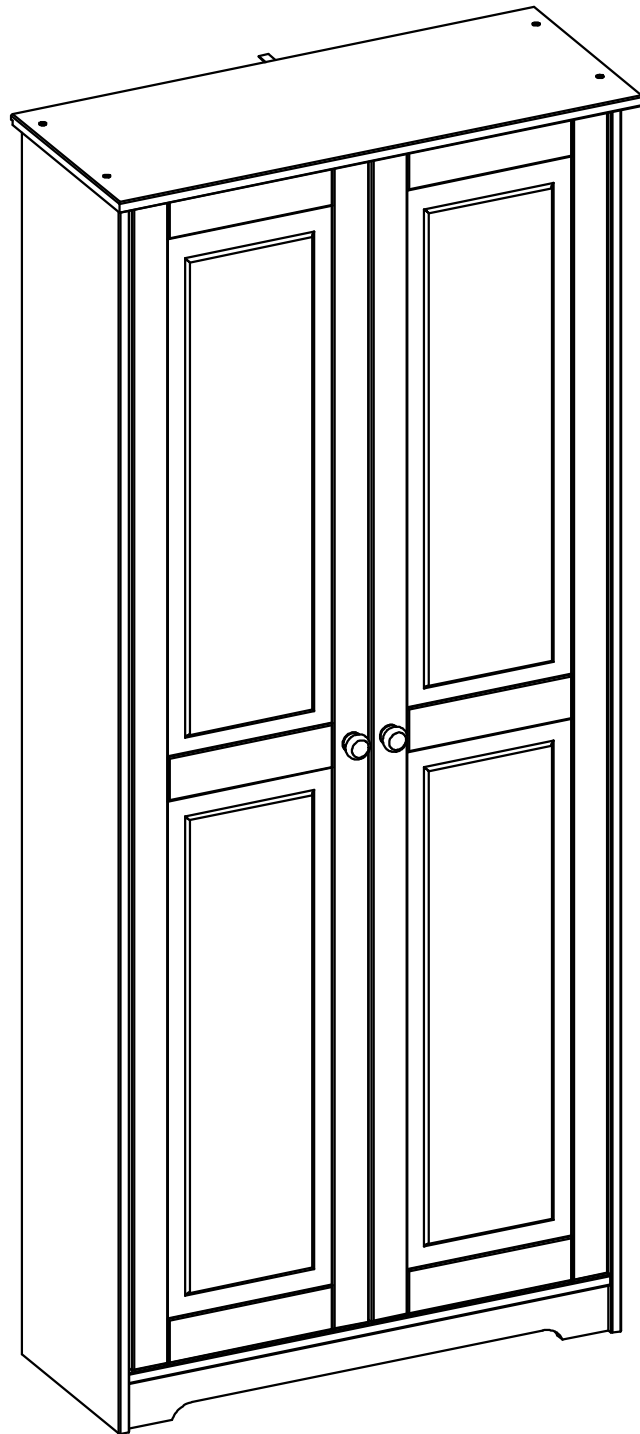
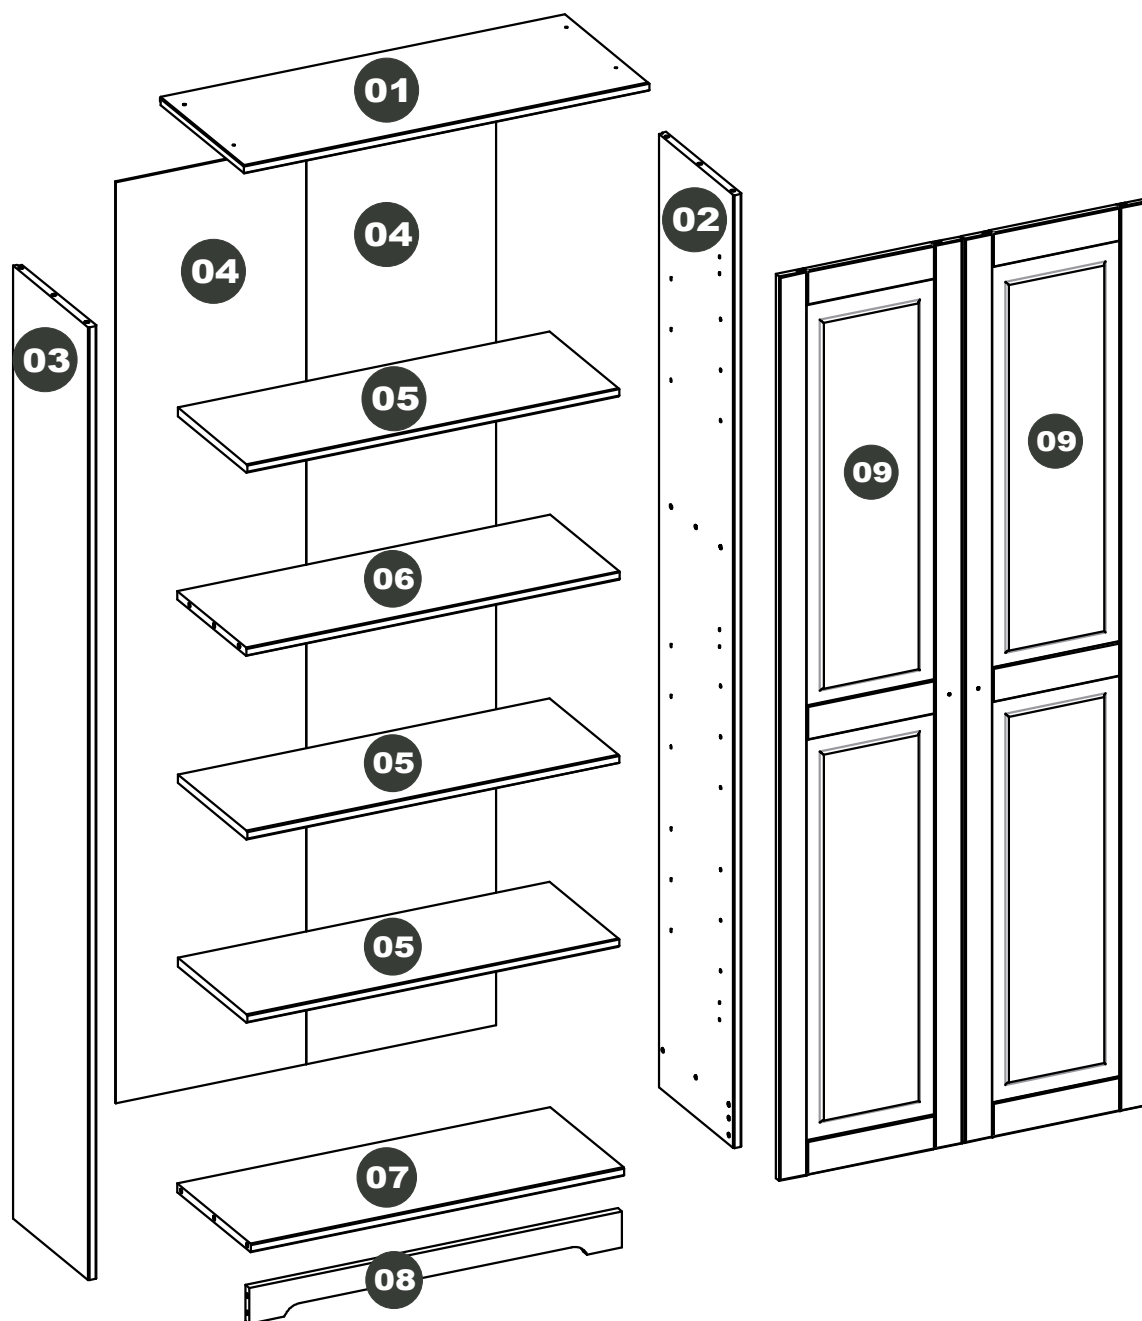



## 2 DOORS CABINET

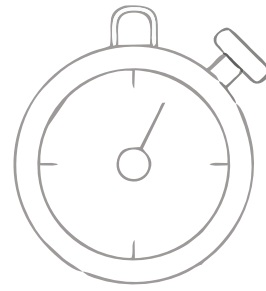


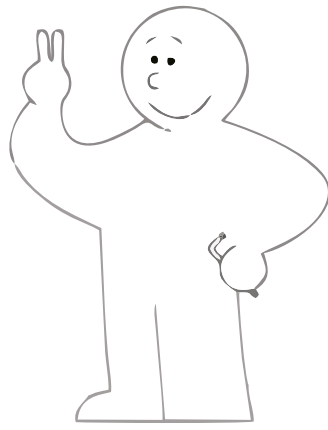


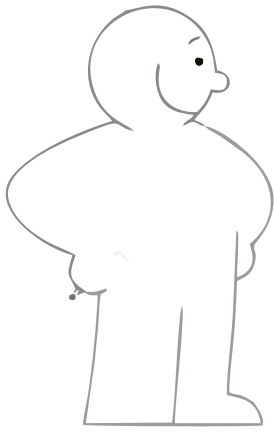


**35 Min**

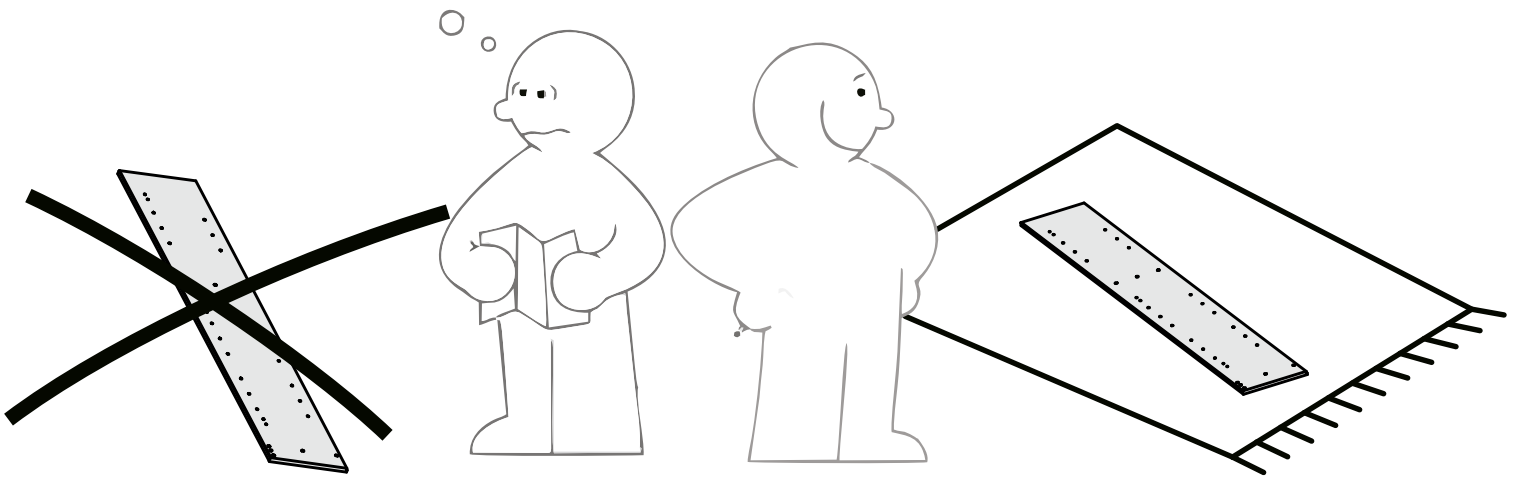

### Tools required

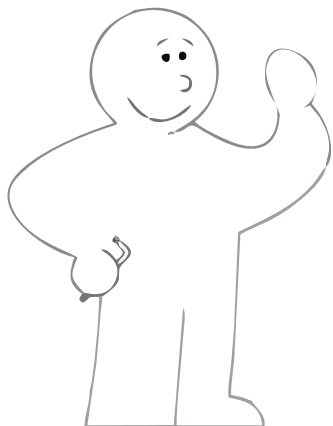


Phillips screwdriver  
(medium & large)

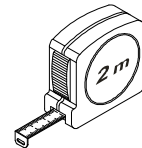













Ruler/tape  
measure



Small  
hammer




Eye protection  
(when using a  
hammer or glue)

|   |   |    |   |   |    |
|---|---|----|---|---|----|
| A | <br>8x30mm   | 22 | B | <br>3,5x30mm | 11 |
| C | <br>4,0x40mm | 04 | D | <br>4,0x40mm | 02 |
| E | <br>4,0x16mm | 25 | F |              | 28 |
| G |              | 12 | H |              | 02 |
| I |             | 06 | J |             | 06 |
| L |            | 01 | K |            | 02 |


Ruler - Use this ruler to help correctly identify the screws




01

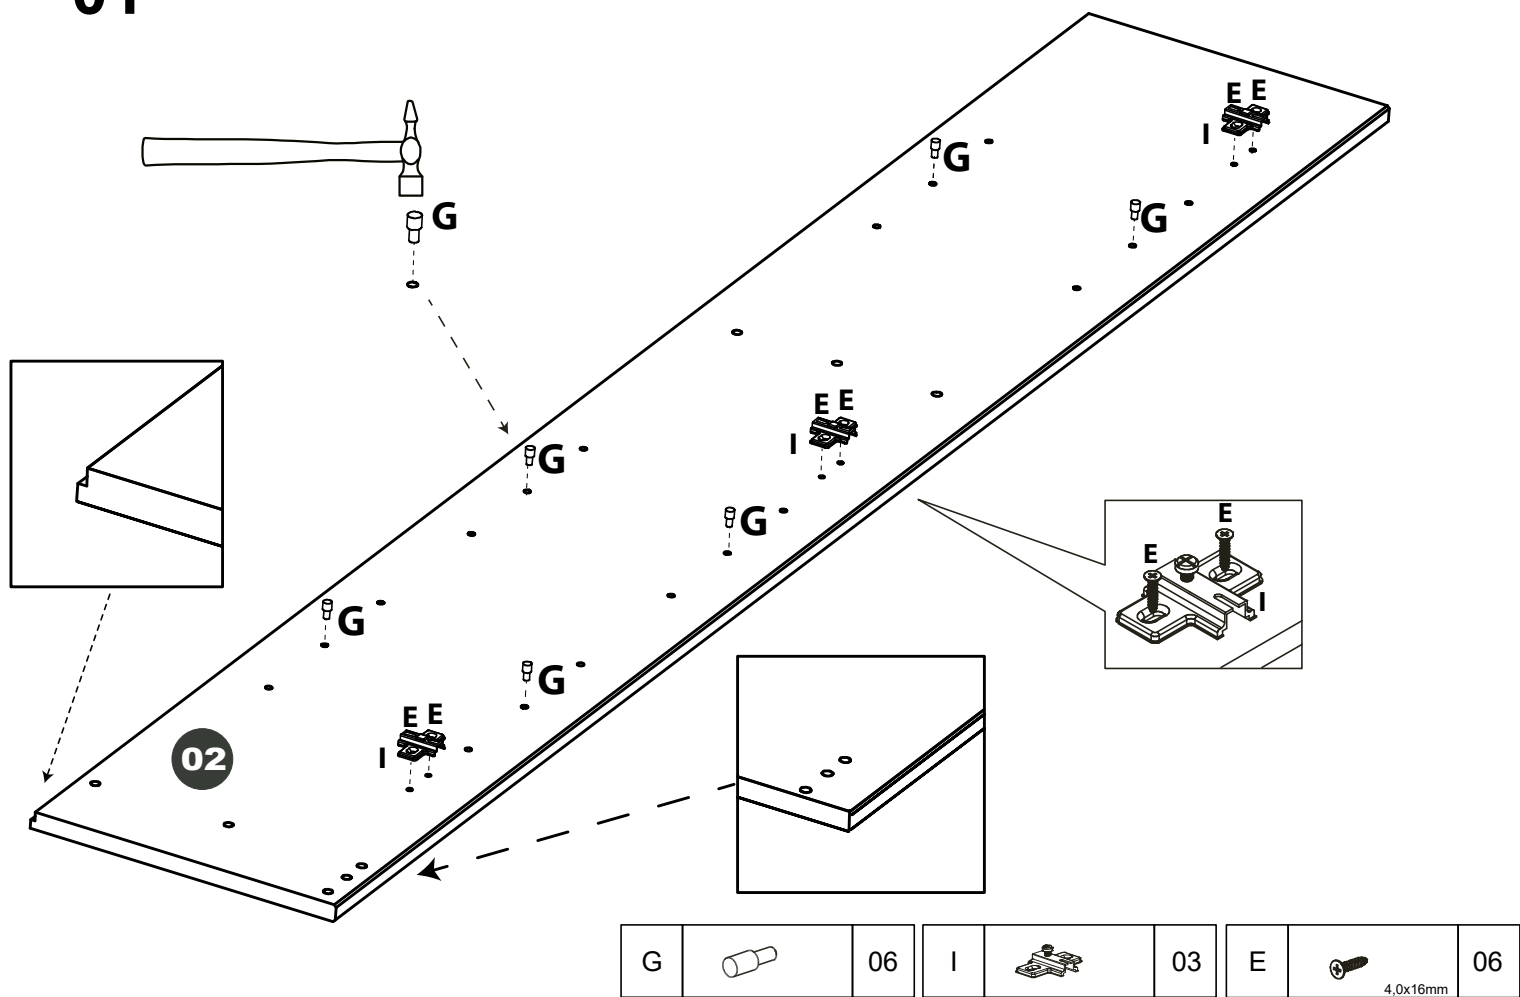

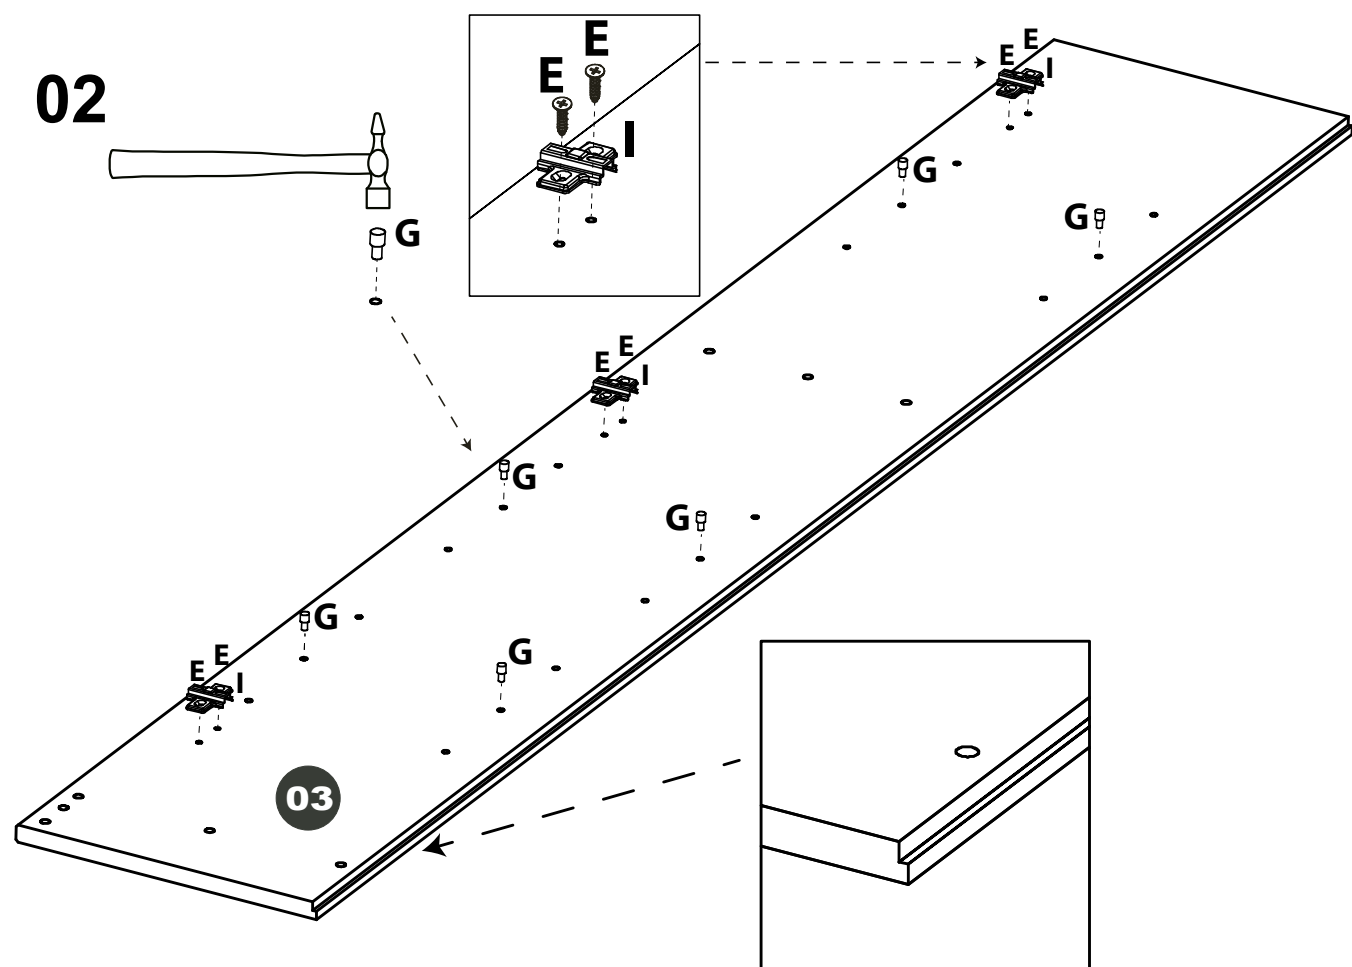





02



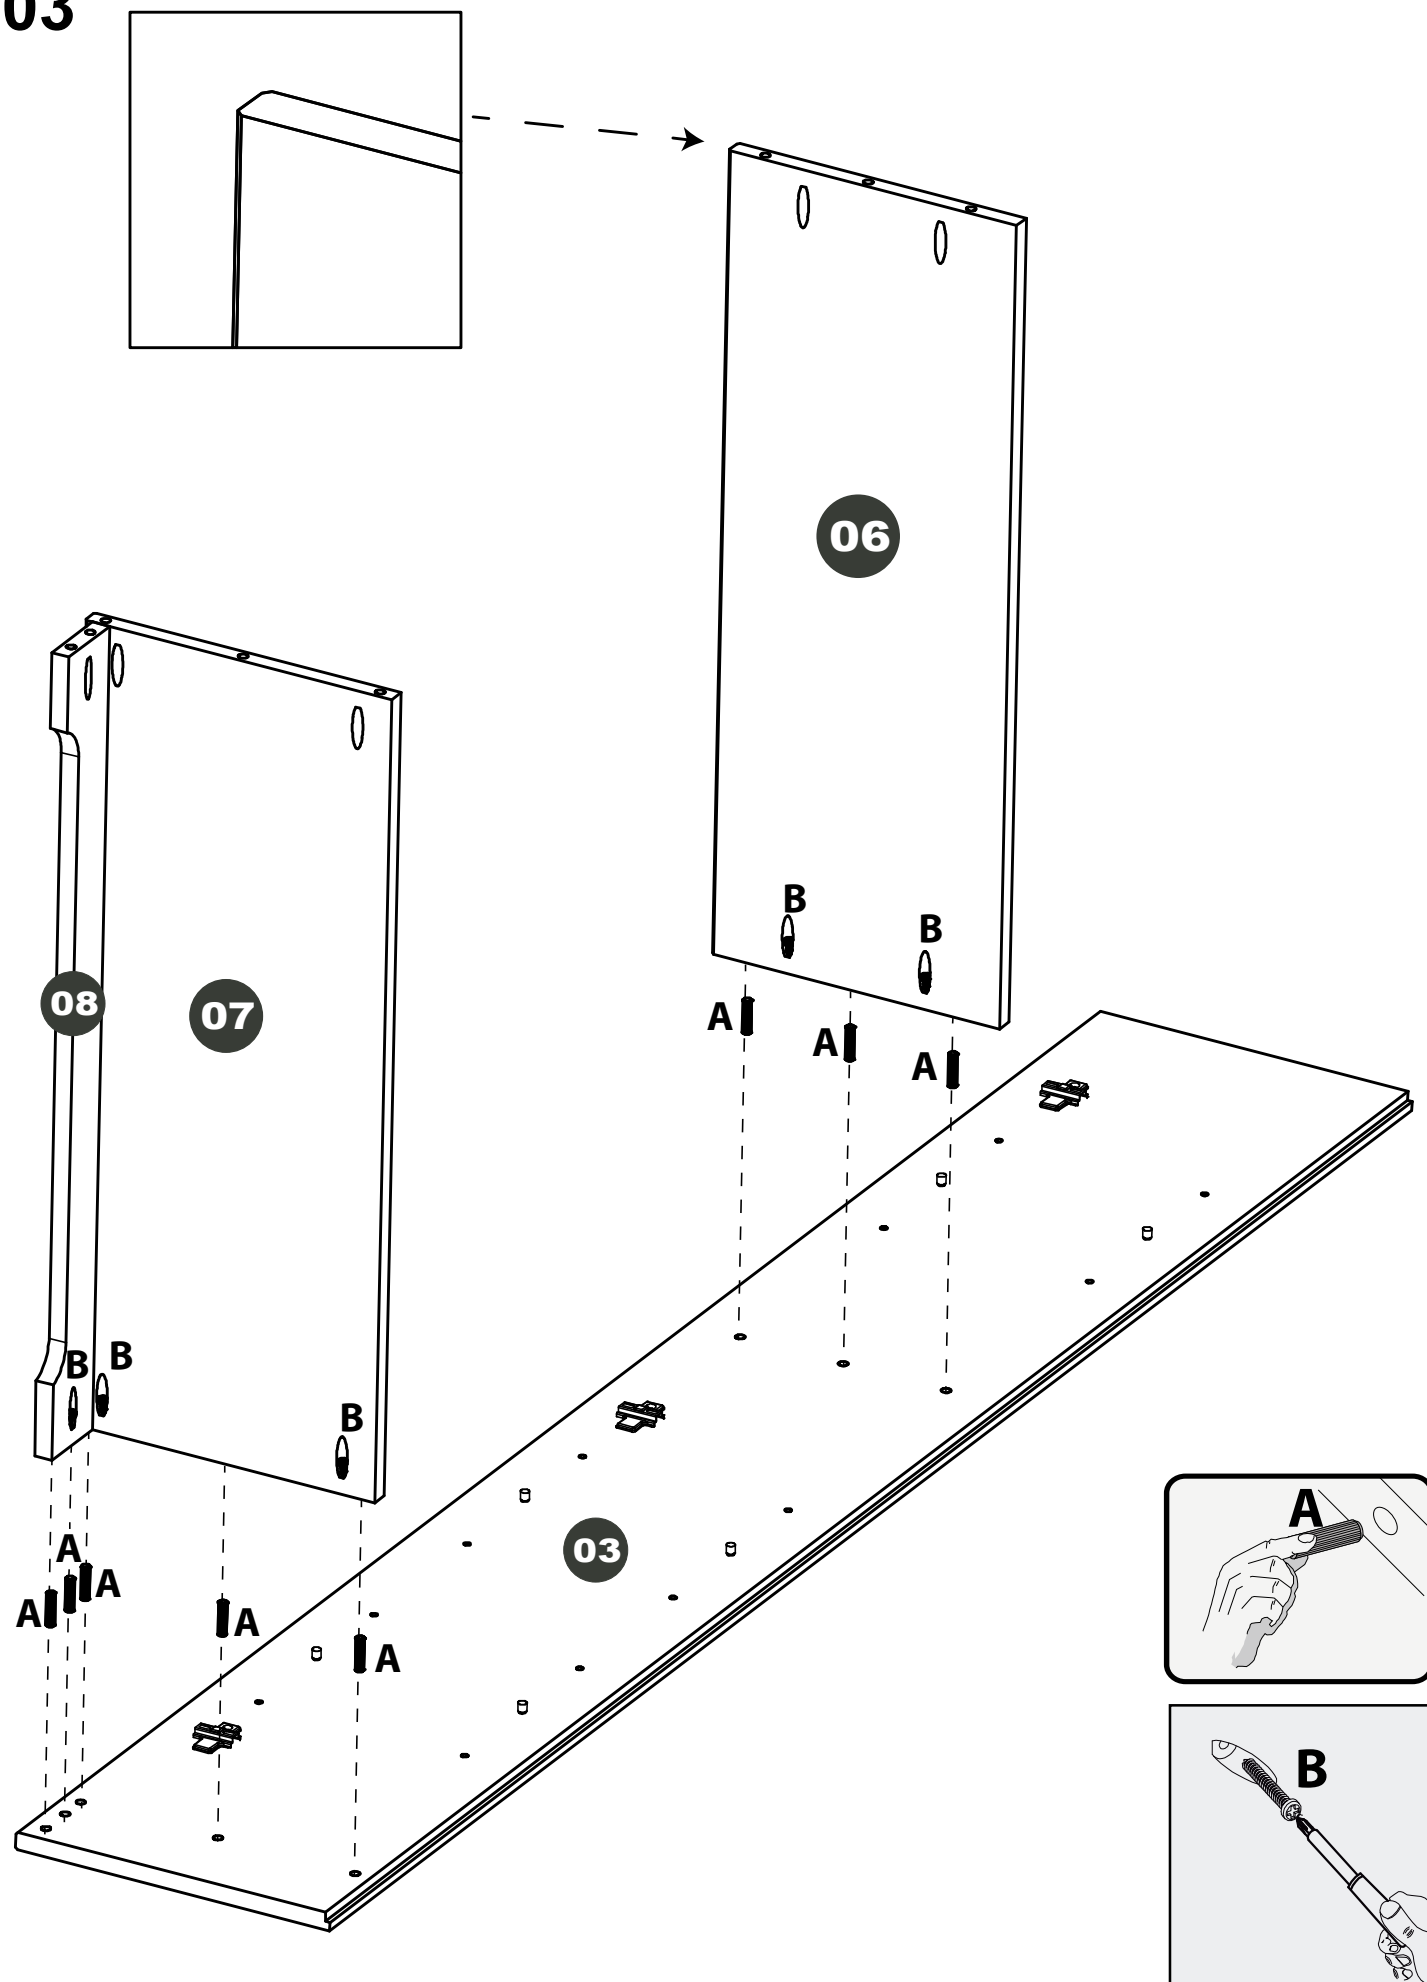

# 03


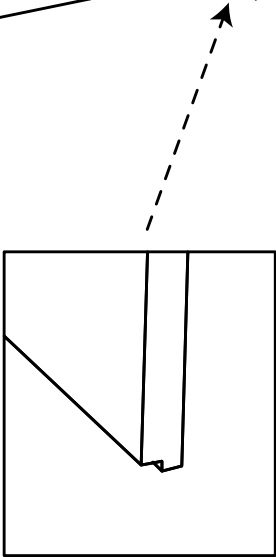
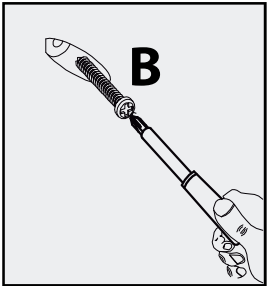
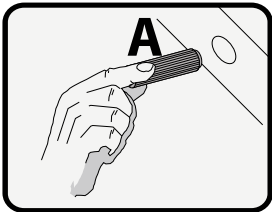
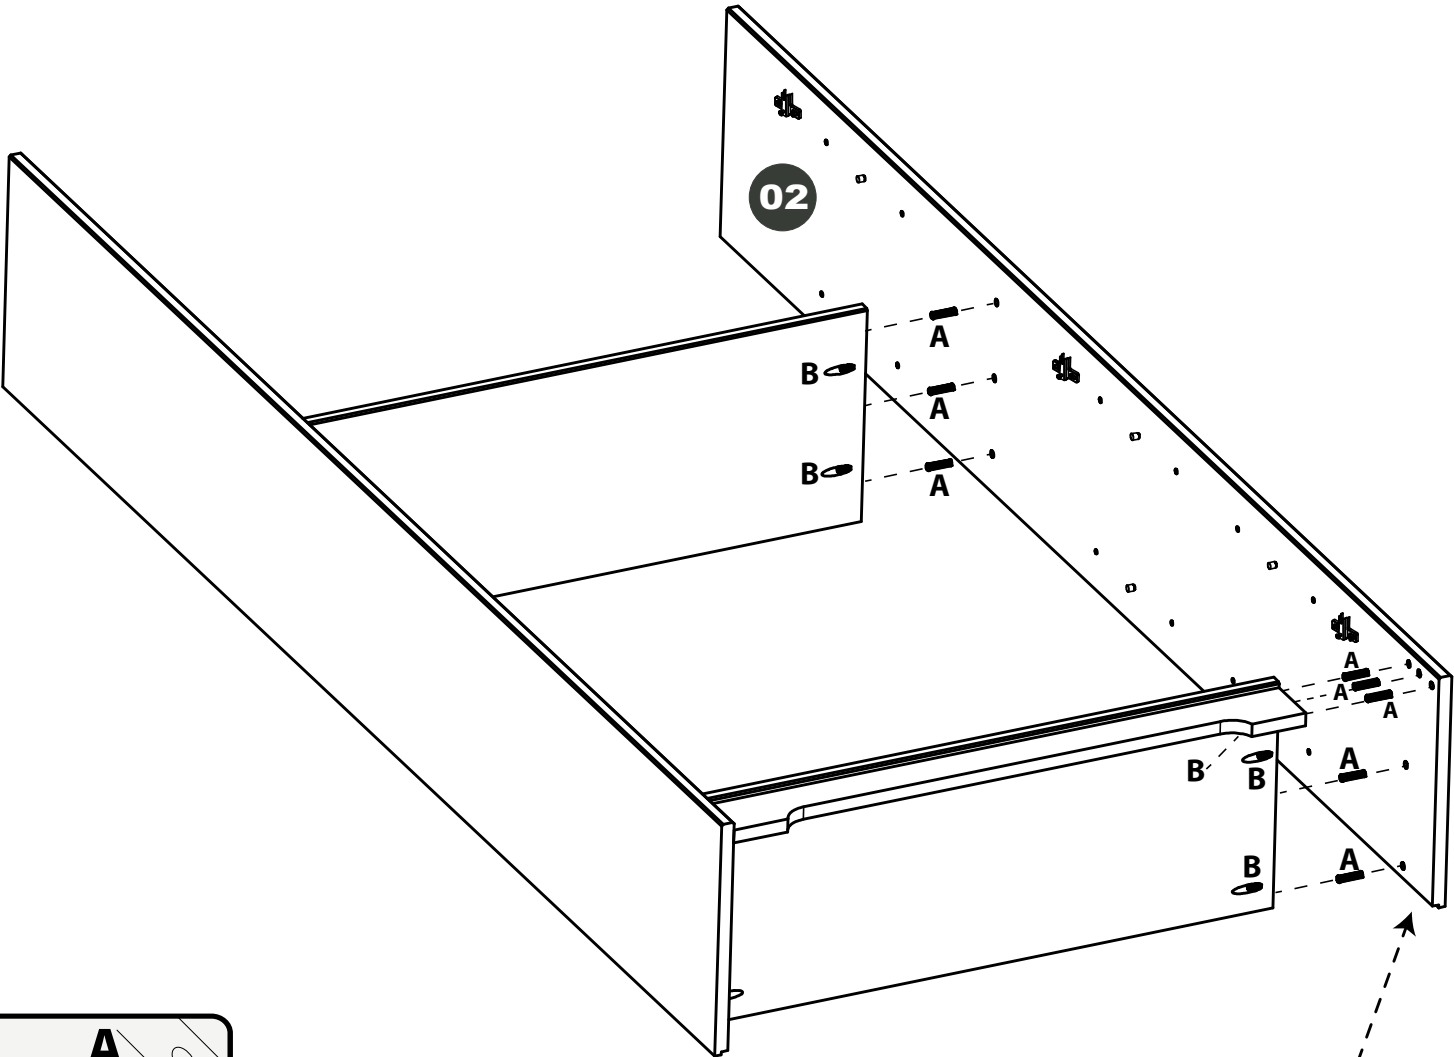



|   |   |    |   |   |    |
|---|---|----|---|---|----|
| A |  | 08 | B |  | 05 |
|   | 8x30mm  |    |   | 3.5x30mm  |    |




|        |   |    |          |   |    |
|--------|---|----|----------|---|----|
| A      |  | 08 | B        |  | 05 |
| 8x30mm |   |    | 3,5x30mm |   |    |

# 05

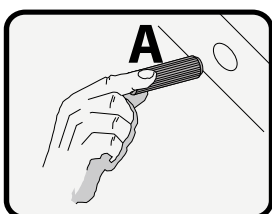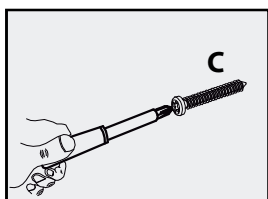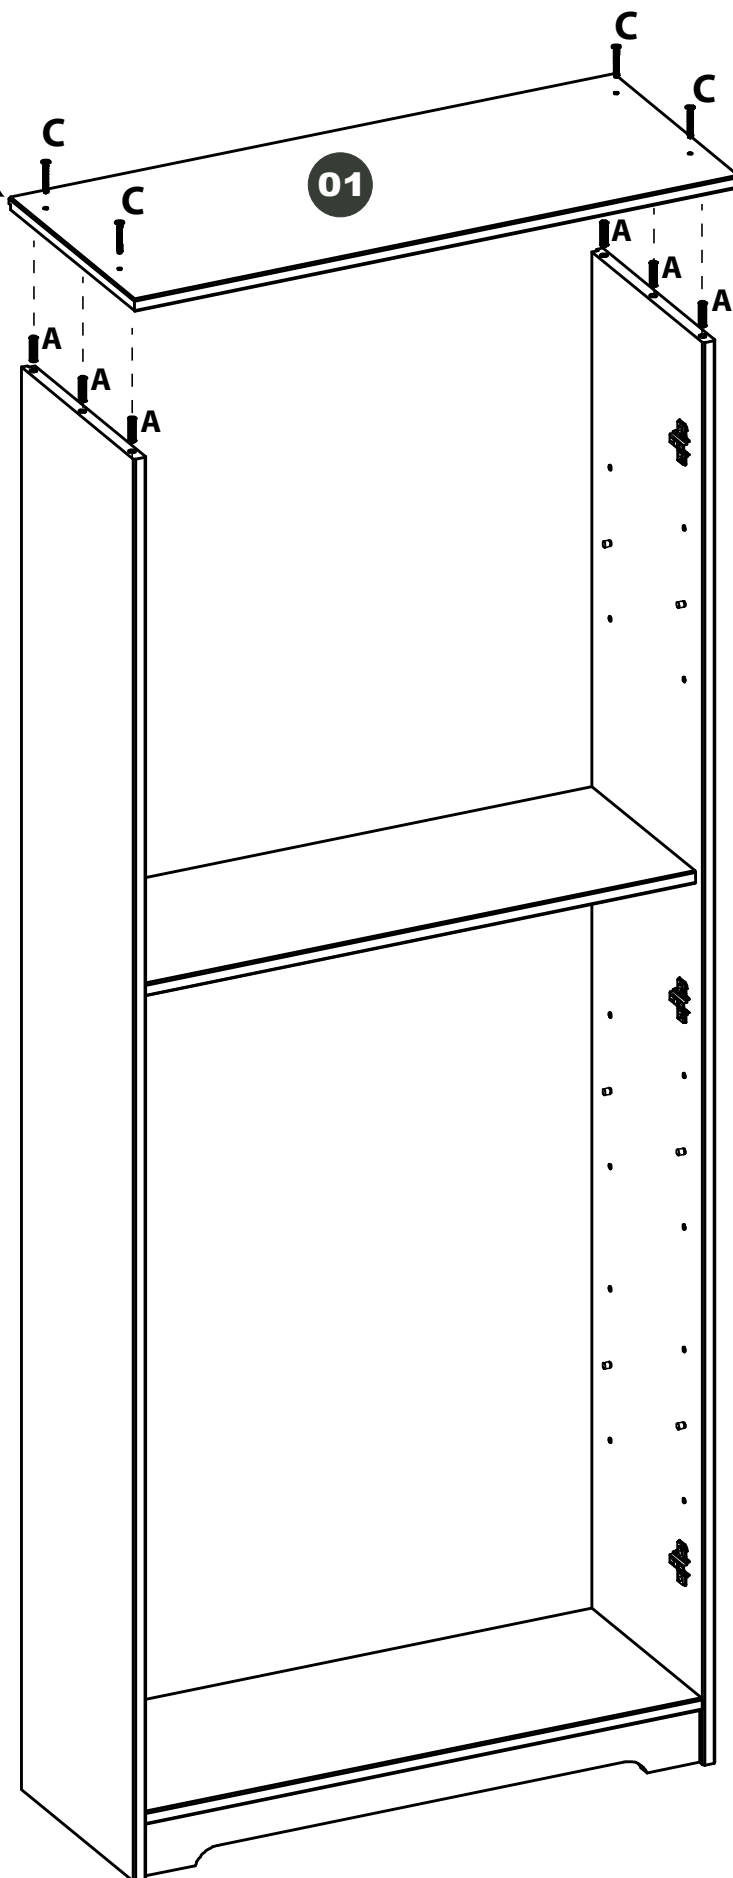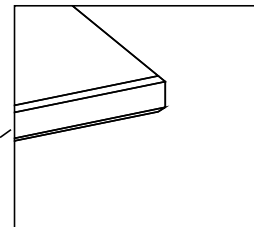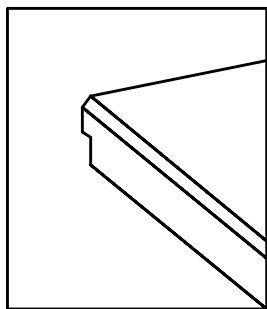

|   |   |    |
|---|---|----|
| C |  | 04 |
|---|---|----|

4,0x40mm

|   |   |    |
|---|---|----|
| A |  | 06 |
|---|---|----|




8x30mm




# 06



Use all back panels nails.  
Evenly spaced, they help  
make the unit strong.

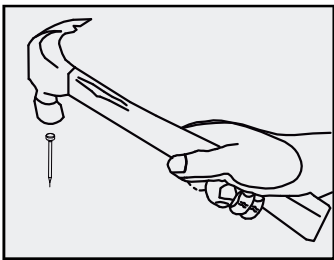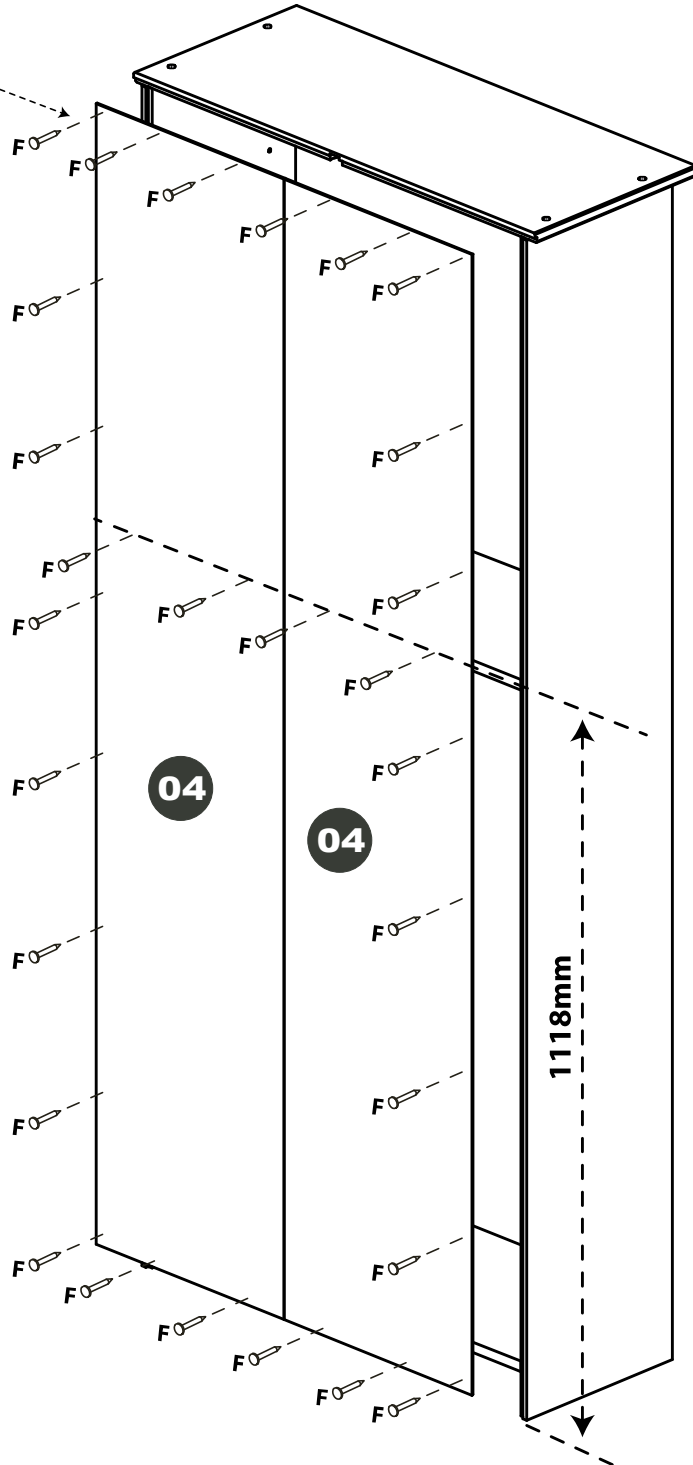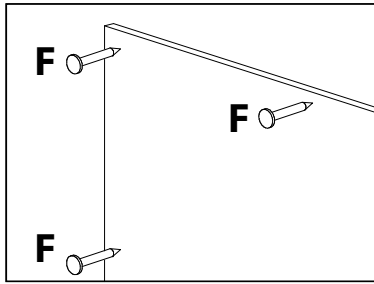


# 07

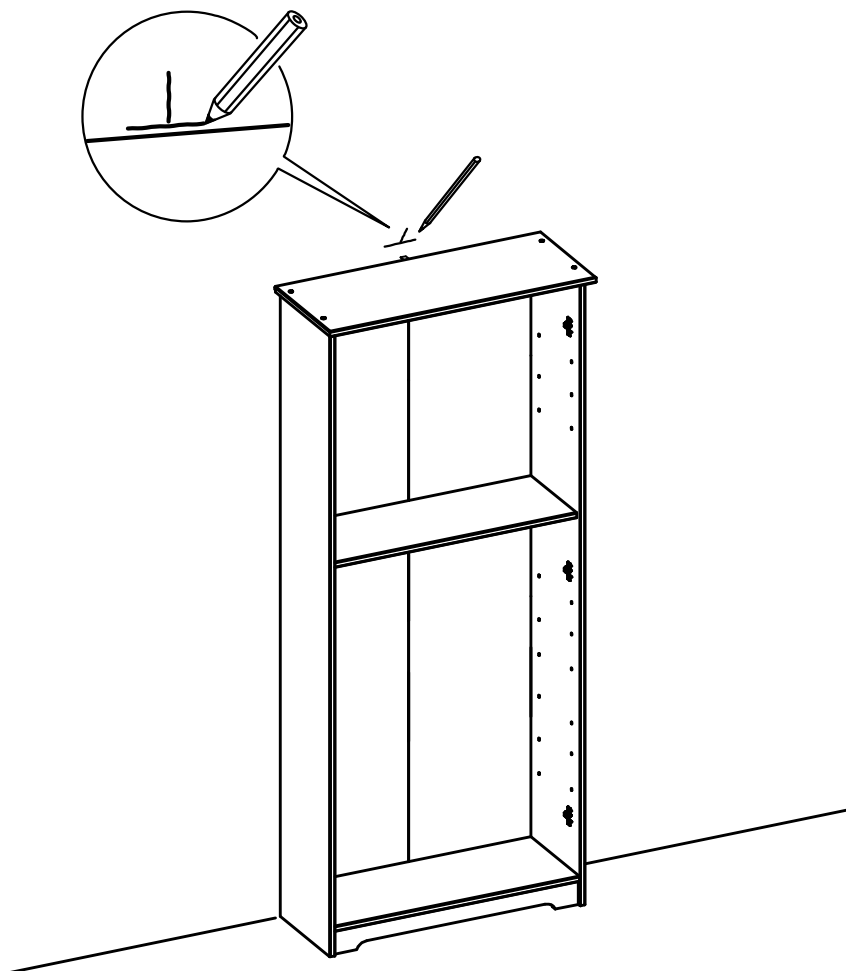

Position the furniture into place and make a mark to the wall, as shown.

# 08

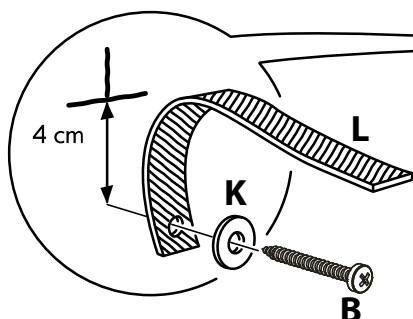





With help, carefully move the furniture away to access the mark in the wall.

Drill hole on wall 4cm below the mark, as shown in the diagram.

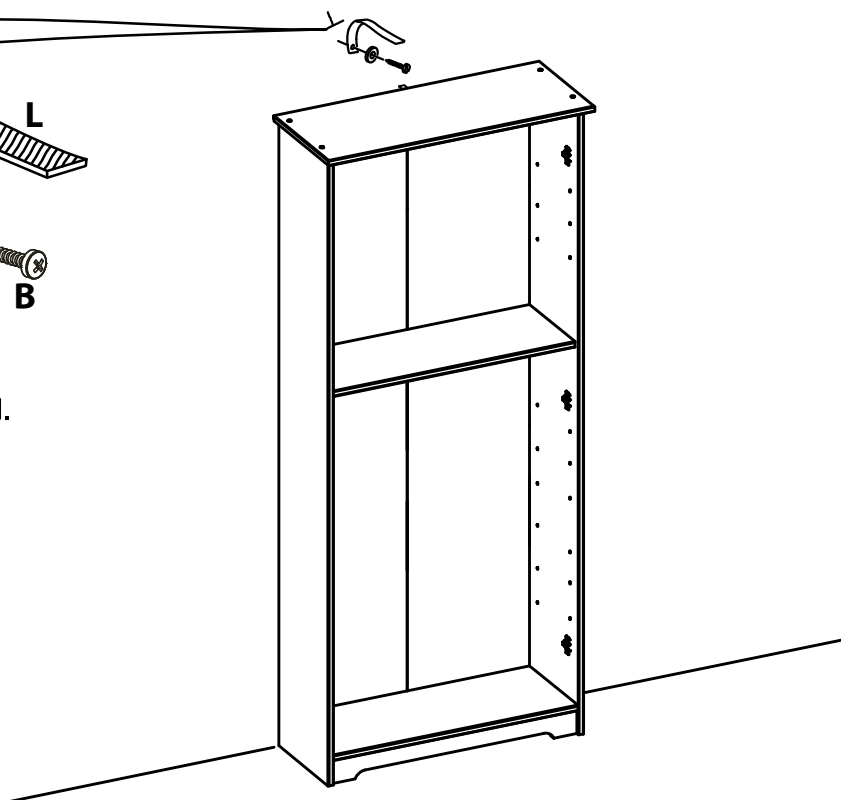

Before drilling, check wall for hidden pipes and cables.





|   |   |    |   |   |    |   |   |    |
|---|---|----|---|---|----|---|---|----|
| K |  | 01 | L |  | 01 | B |  | 01 |
|---|---|----|---|---|----|---|---|----|

3.5x30mm

# 09





With help, carefully move the furniture back to position and insert wall strap into slot on top panel, as shown.

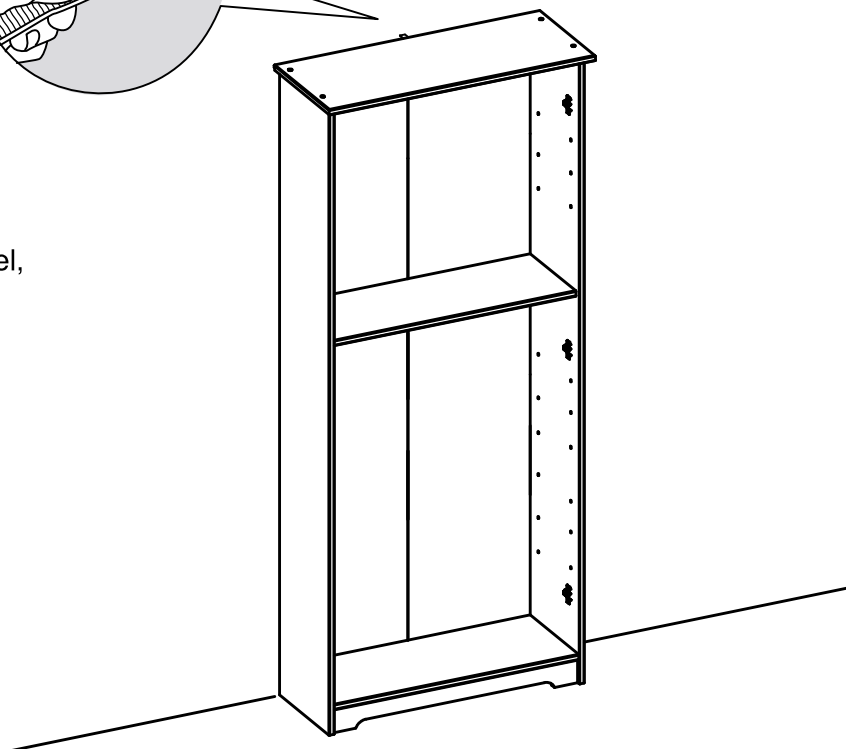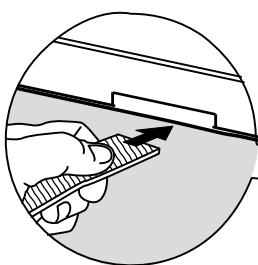


# 10




Inside the cabinet, hold wall strap in position and fix it using washer and screw , as shown.

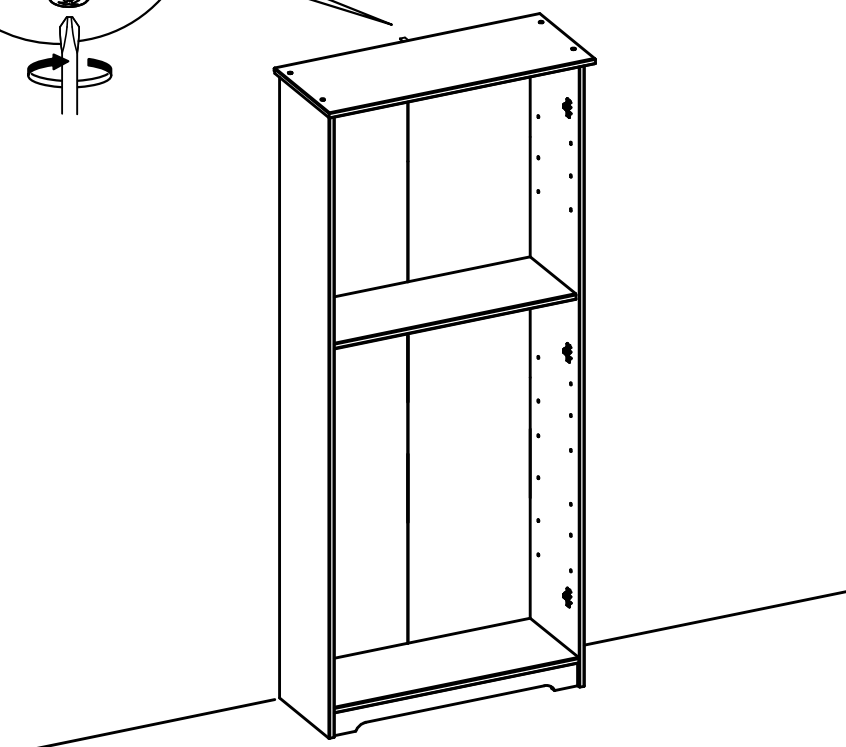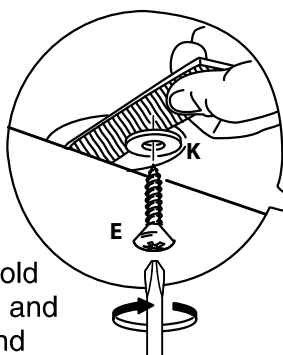

|   |   |    |
|---|---|----|
| K |  | 01 |
|---|---|----|


|   |   |    |
|---|---|----|
| E | <br>4,0x16mm | 01 |
|---|---|----|

11

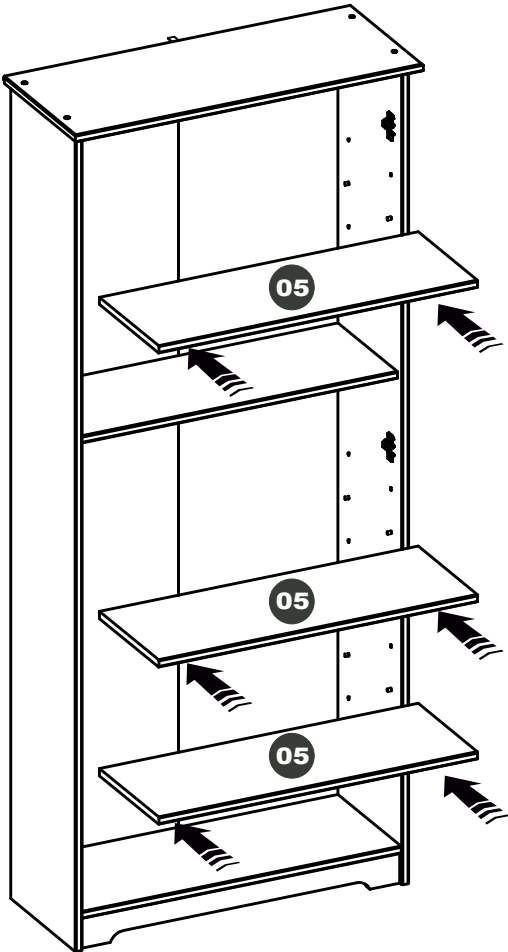

12

2x

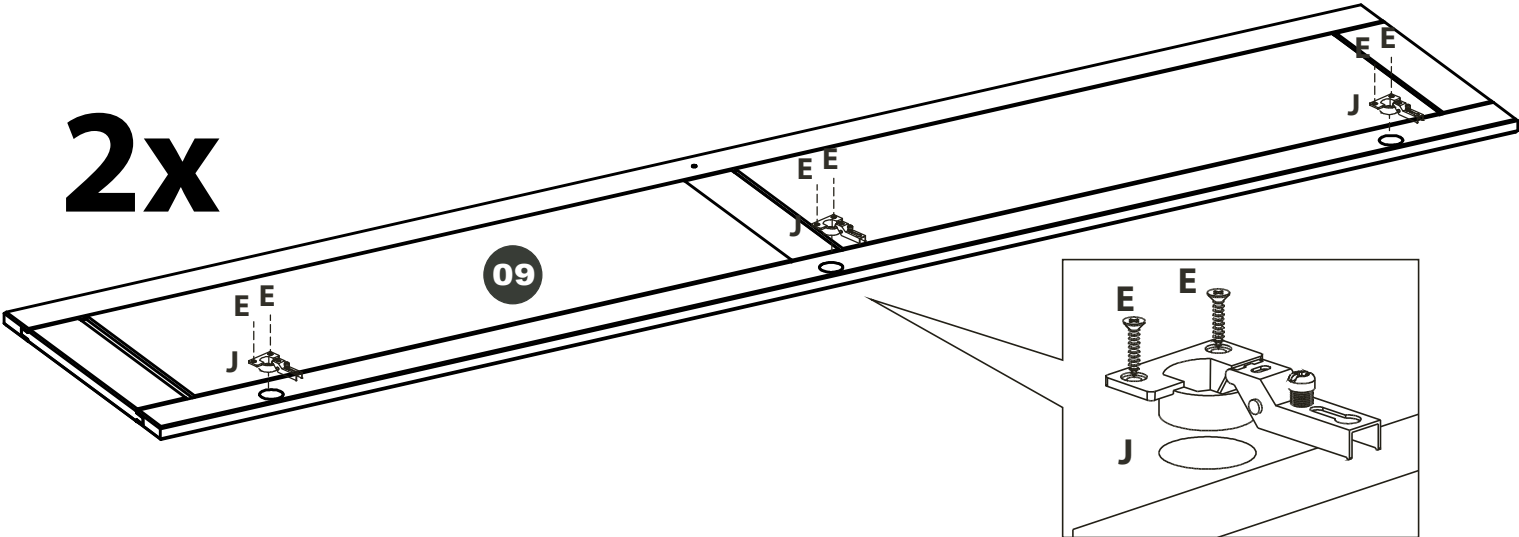

|          |   |    |   |   |    |
|----------|---|----|---|---|----|
| J        |  | 06 | E |  | 12 |
| 4,0x16mm |   |    |   |   |    |

