



Assembling Instruction

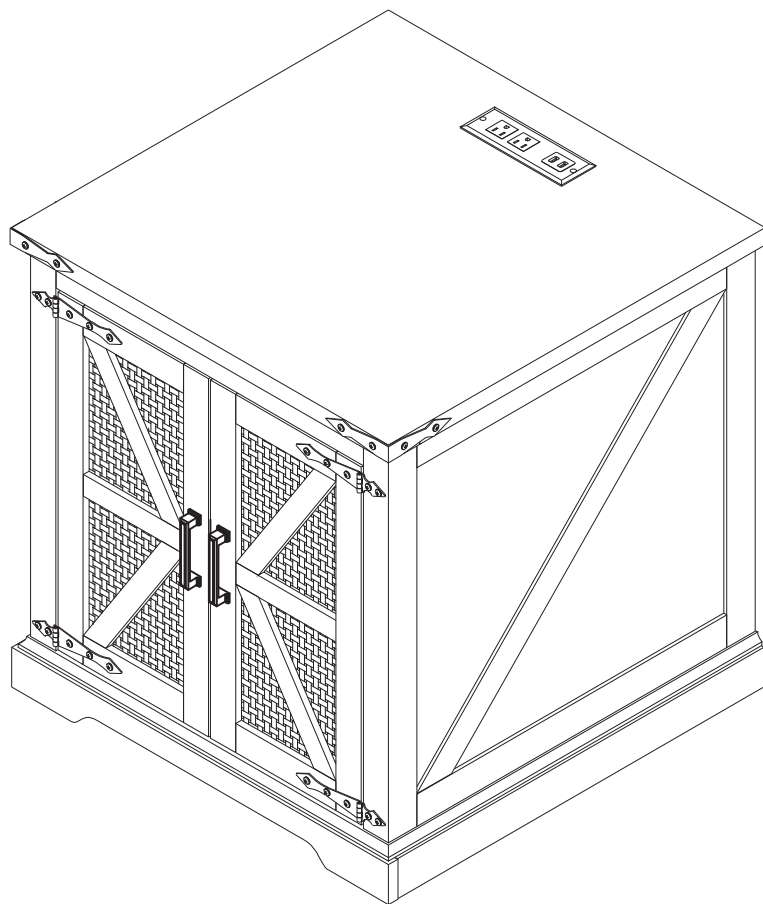


General Assembly Guidelines

- I. Ensure that all Parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this Product.
- III. Two People are recommended for ease in the assembly of this Product.
- IV. The three main types of hardware used to assemble this Product are : wood dowels , screws and bolts.
- VI. A Phillips head screwdriver is required for the assembly of this Product .



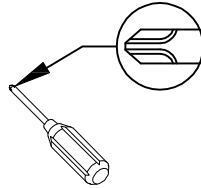


- VII. Power tools should not be used to assemble this Product .

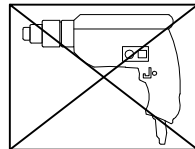


CAM LOCK/BOLT FASTENING INTRODUCTION

(You will use it during assembly)

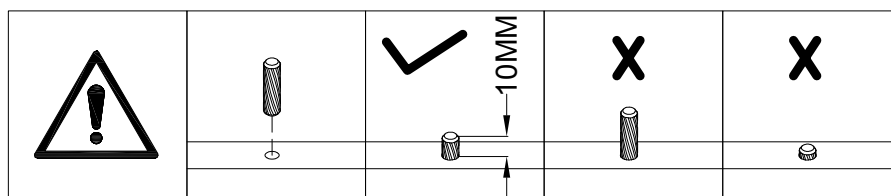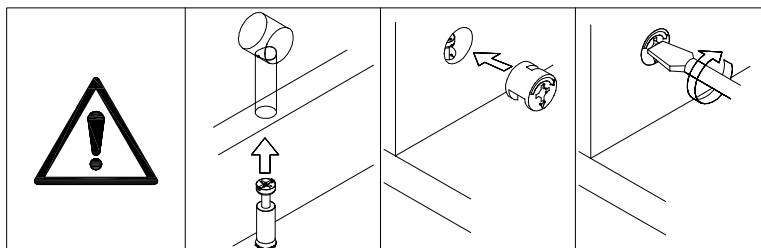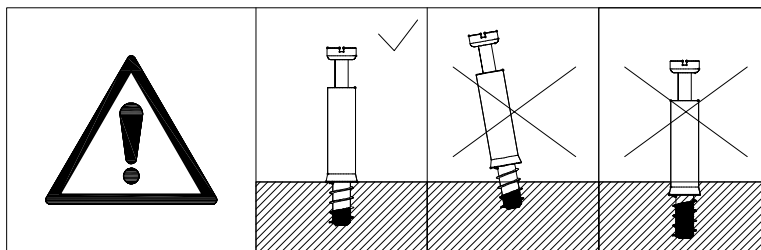

Parts List

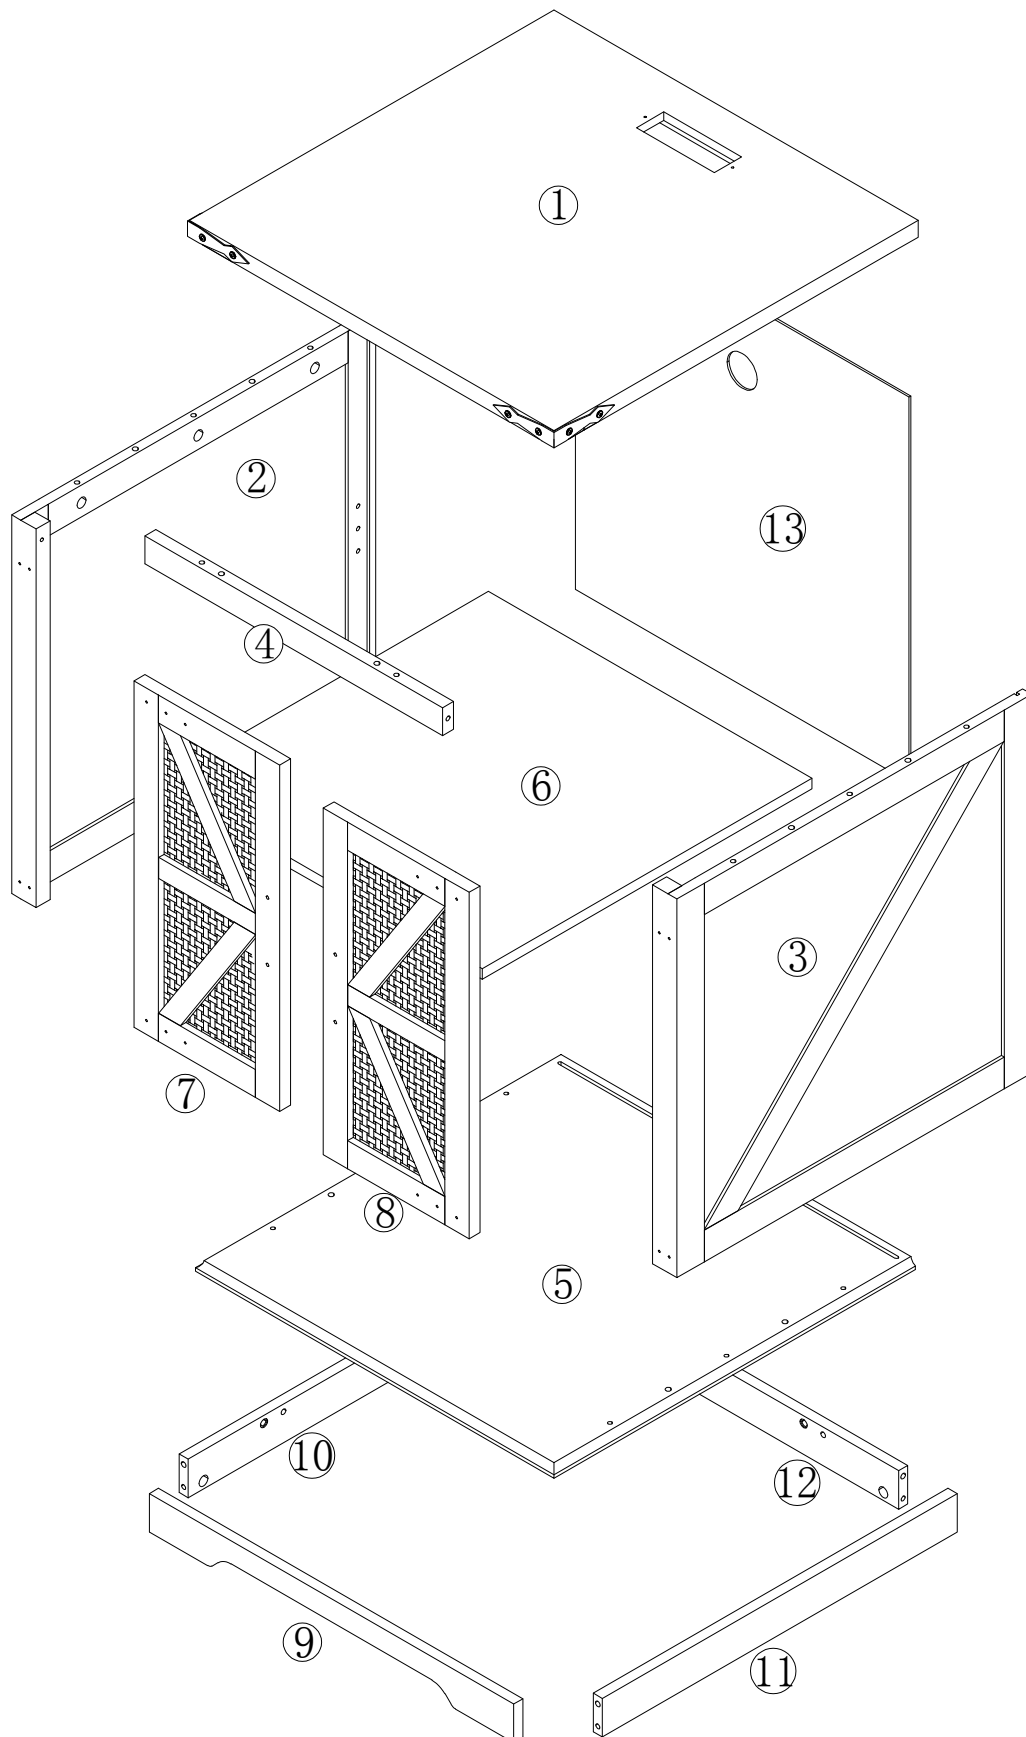

HARDWARE PACK CONTENT

A



φ6*35mm

14X + 1

B



φ15*11.5mm

14X + 1


C



φ8*30mm

14X + 1

D



φ5*40mm

6X + 1

E



4X


F



φ3*15mm

6X + 1

G

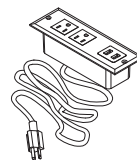


1X

H



4X


I



φ3.5*14mm


20X + 2

J




4X

K



1X

L

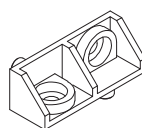

8X


M



M6*12mm

16X + 1

N



1X

O



φ3*12mm

2X

P



2X


Q




M4 * 22mm

4X



Step 1

A	L	M
		
X4	X8	X8

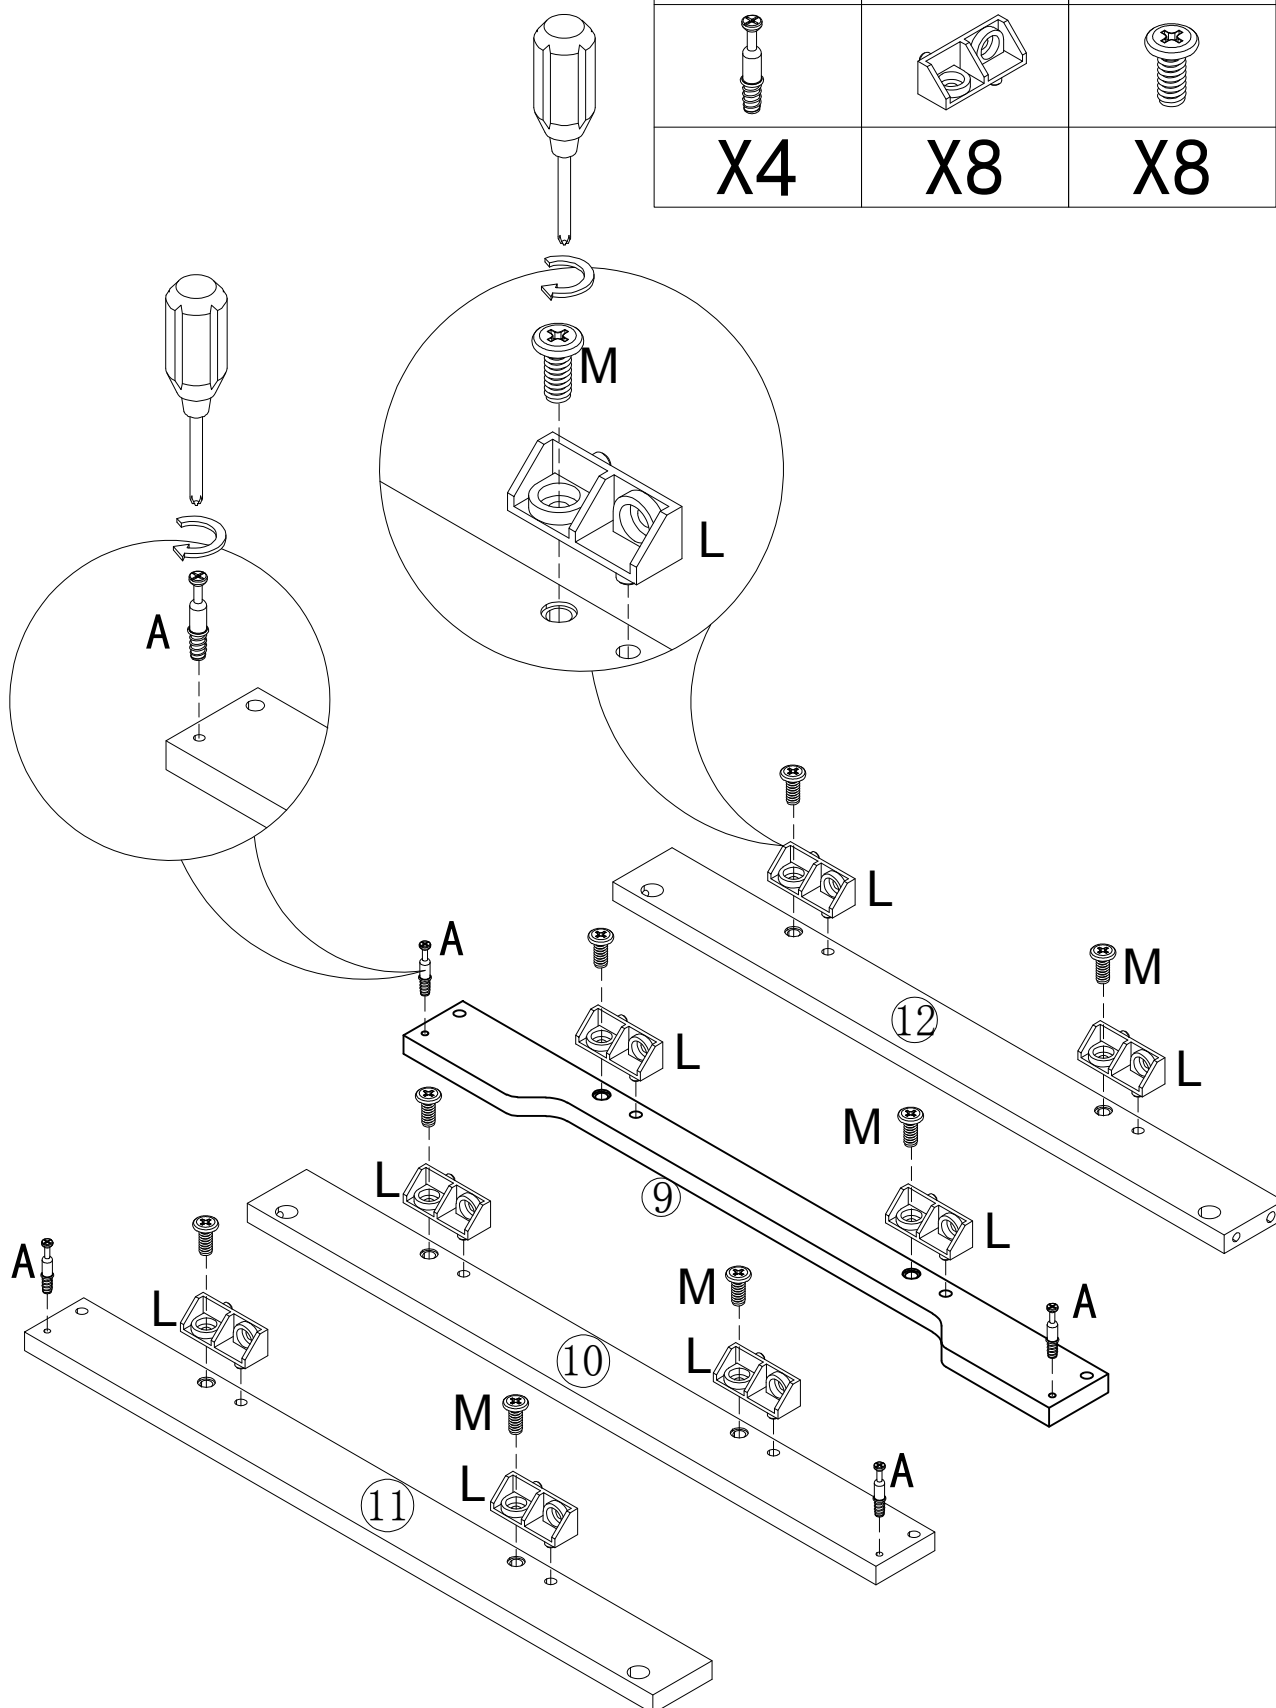




Step 2

B	C
	
X2	X2

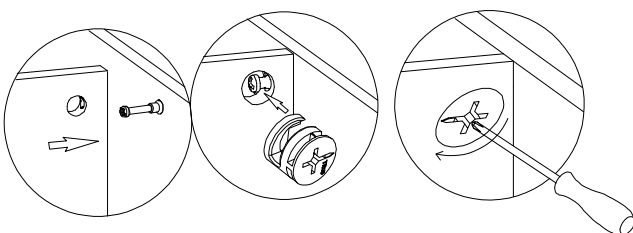
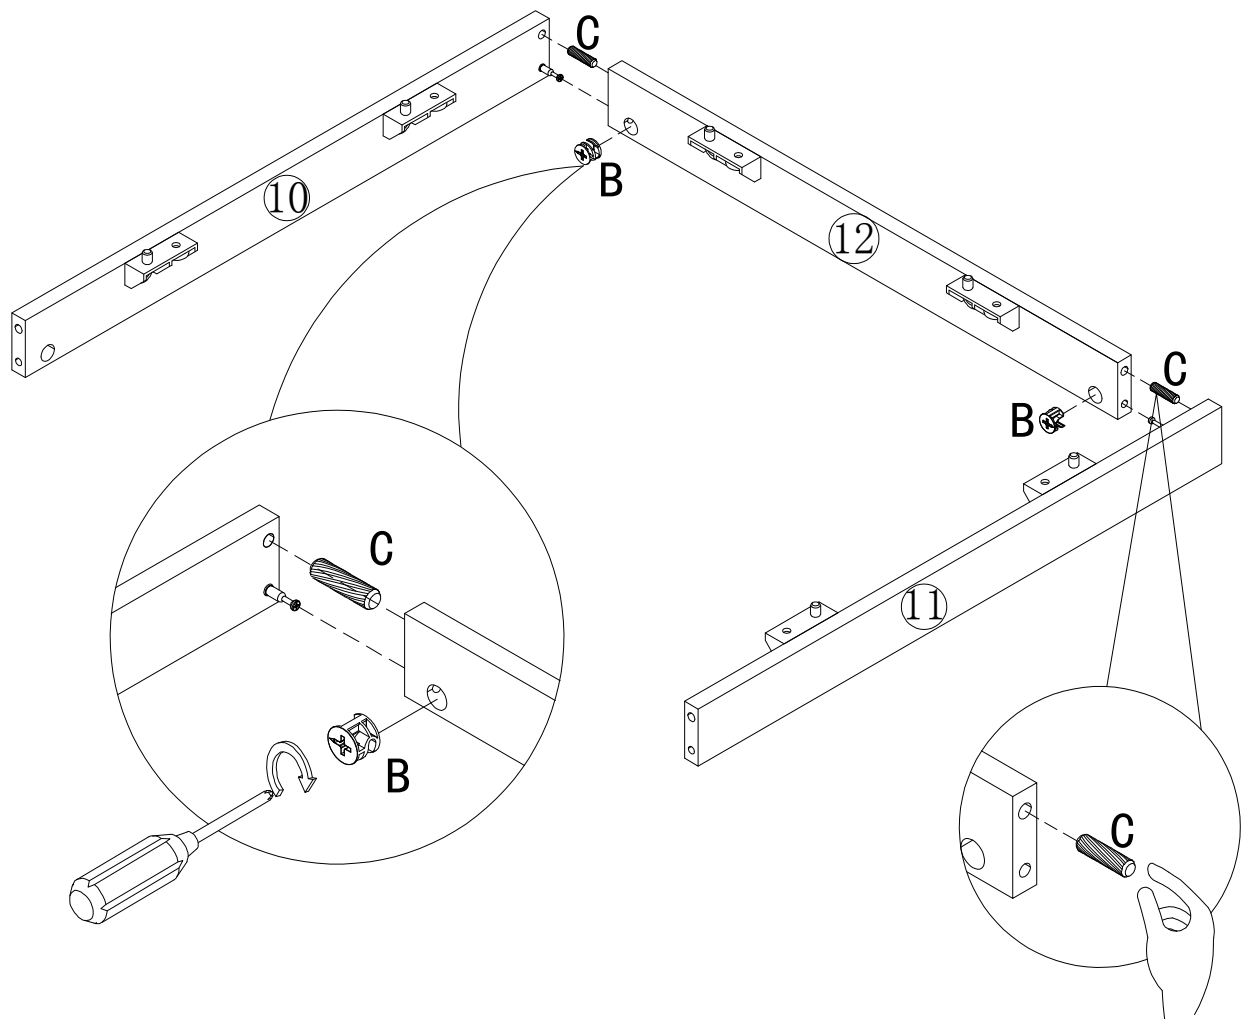



Step 3

B	C
	
X2	X2

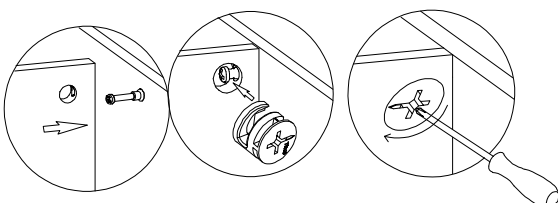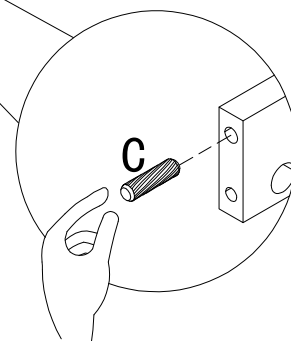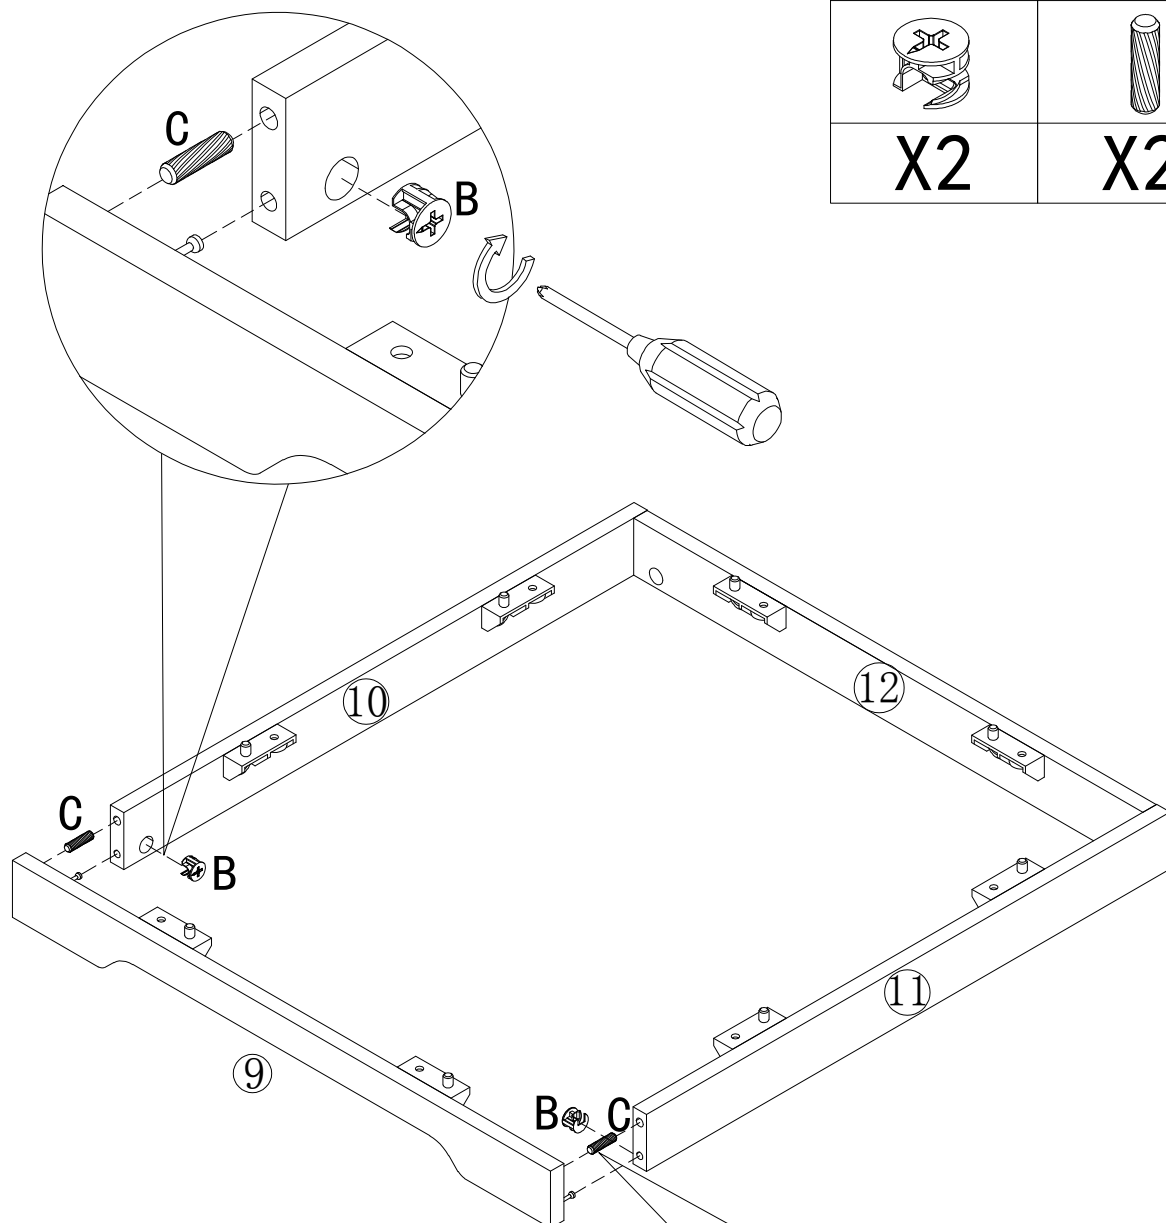


Step 4

A	N	O
		
X2	X1	X2


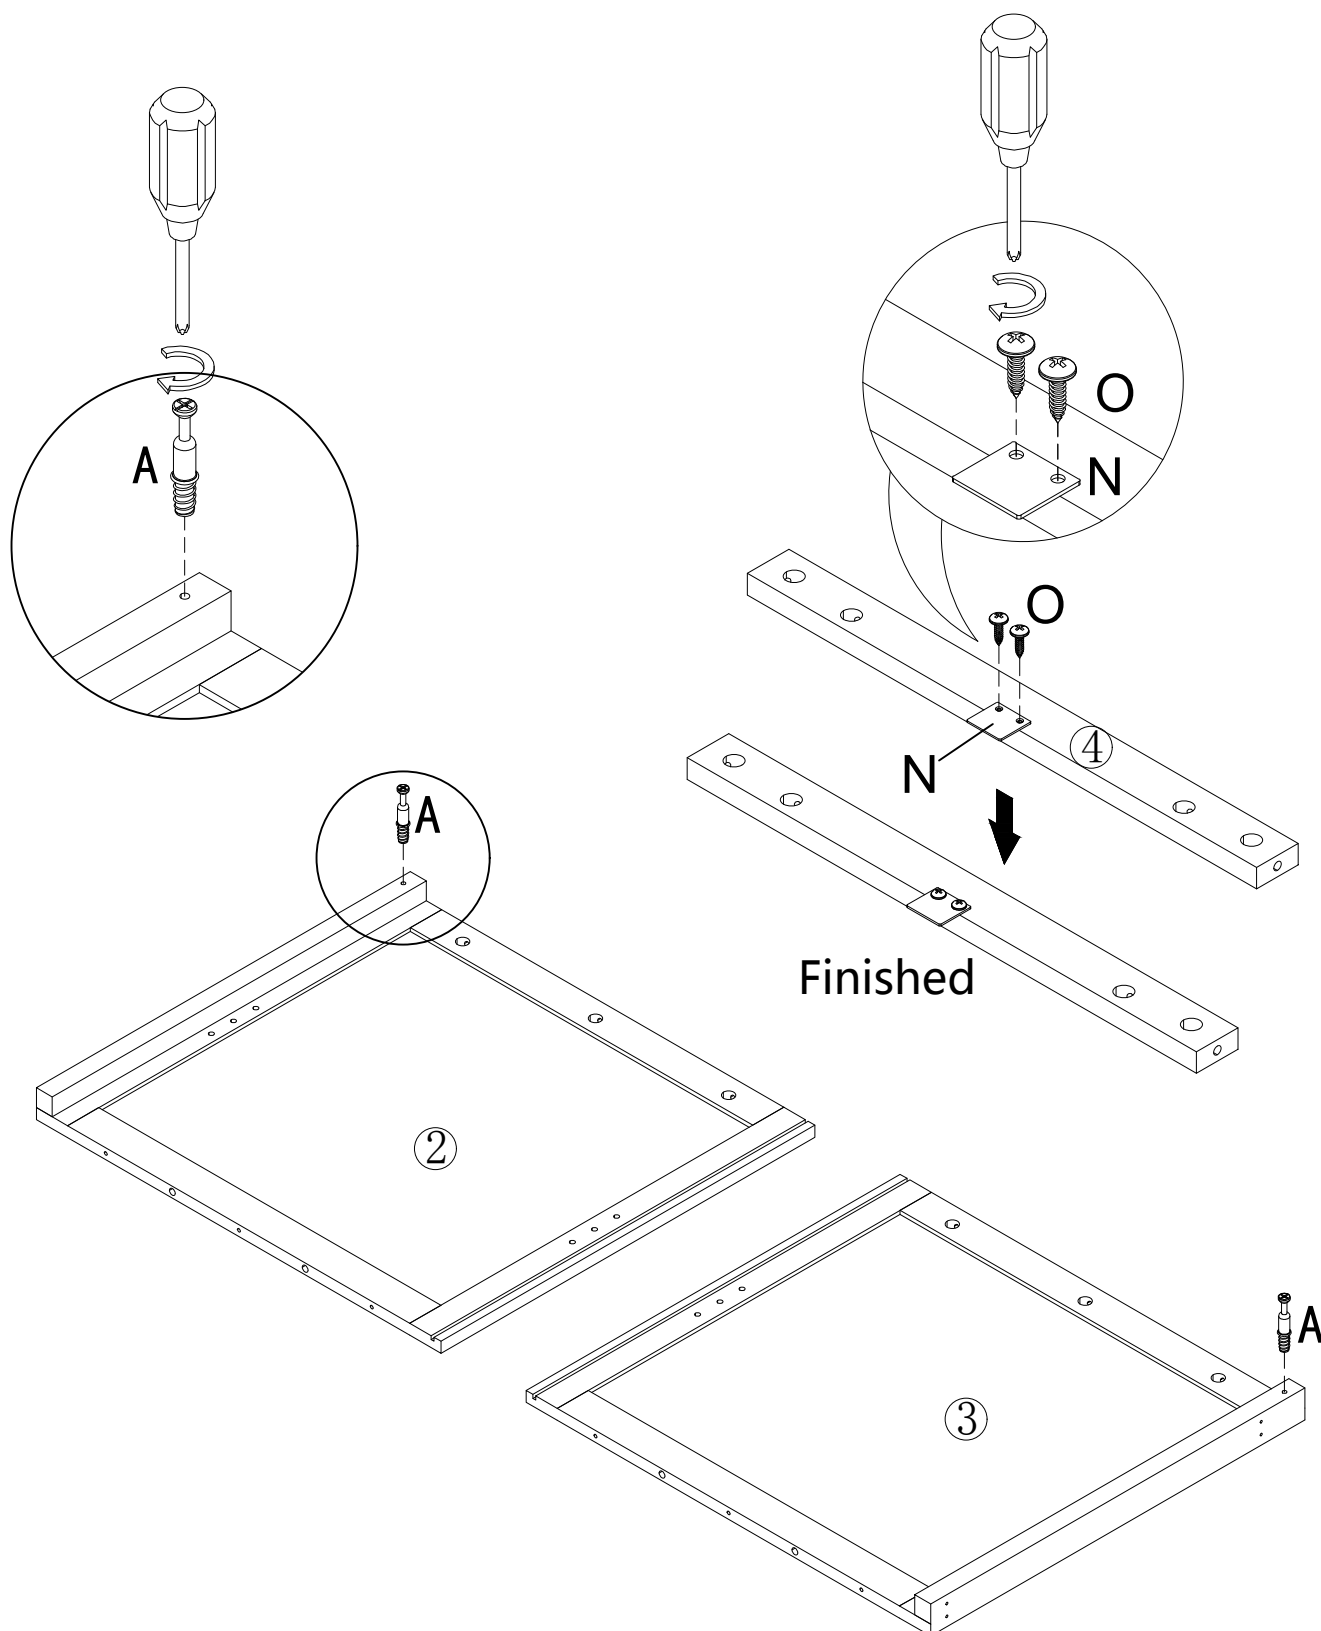


Step 5

B




X2

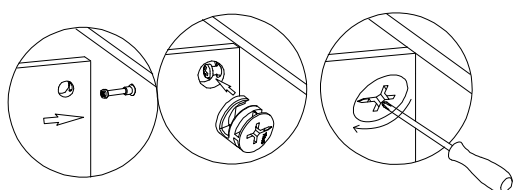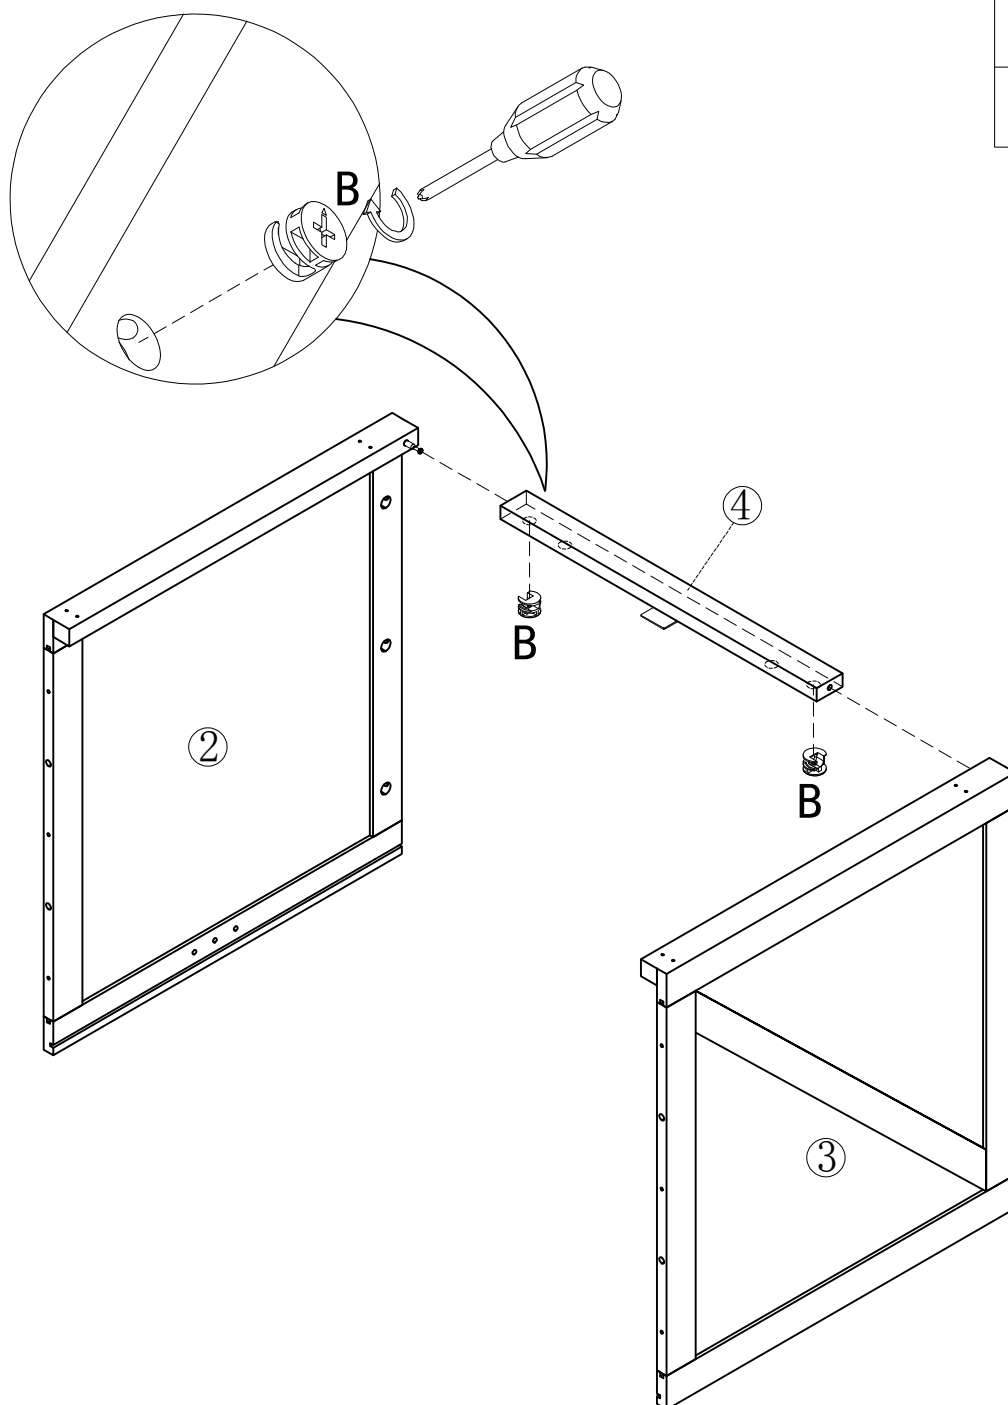

Step 6

D	C	K
		
X6	X4	X1


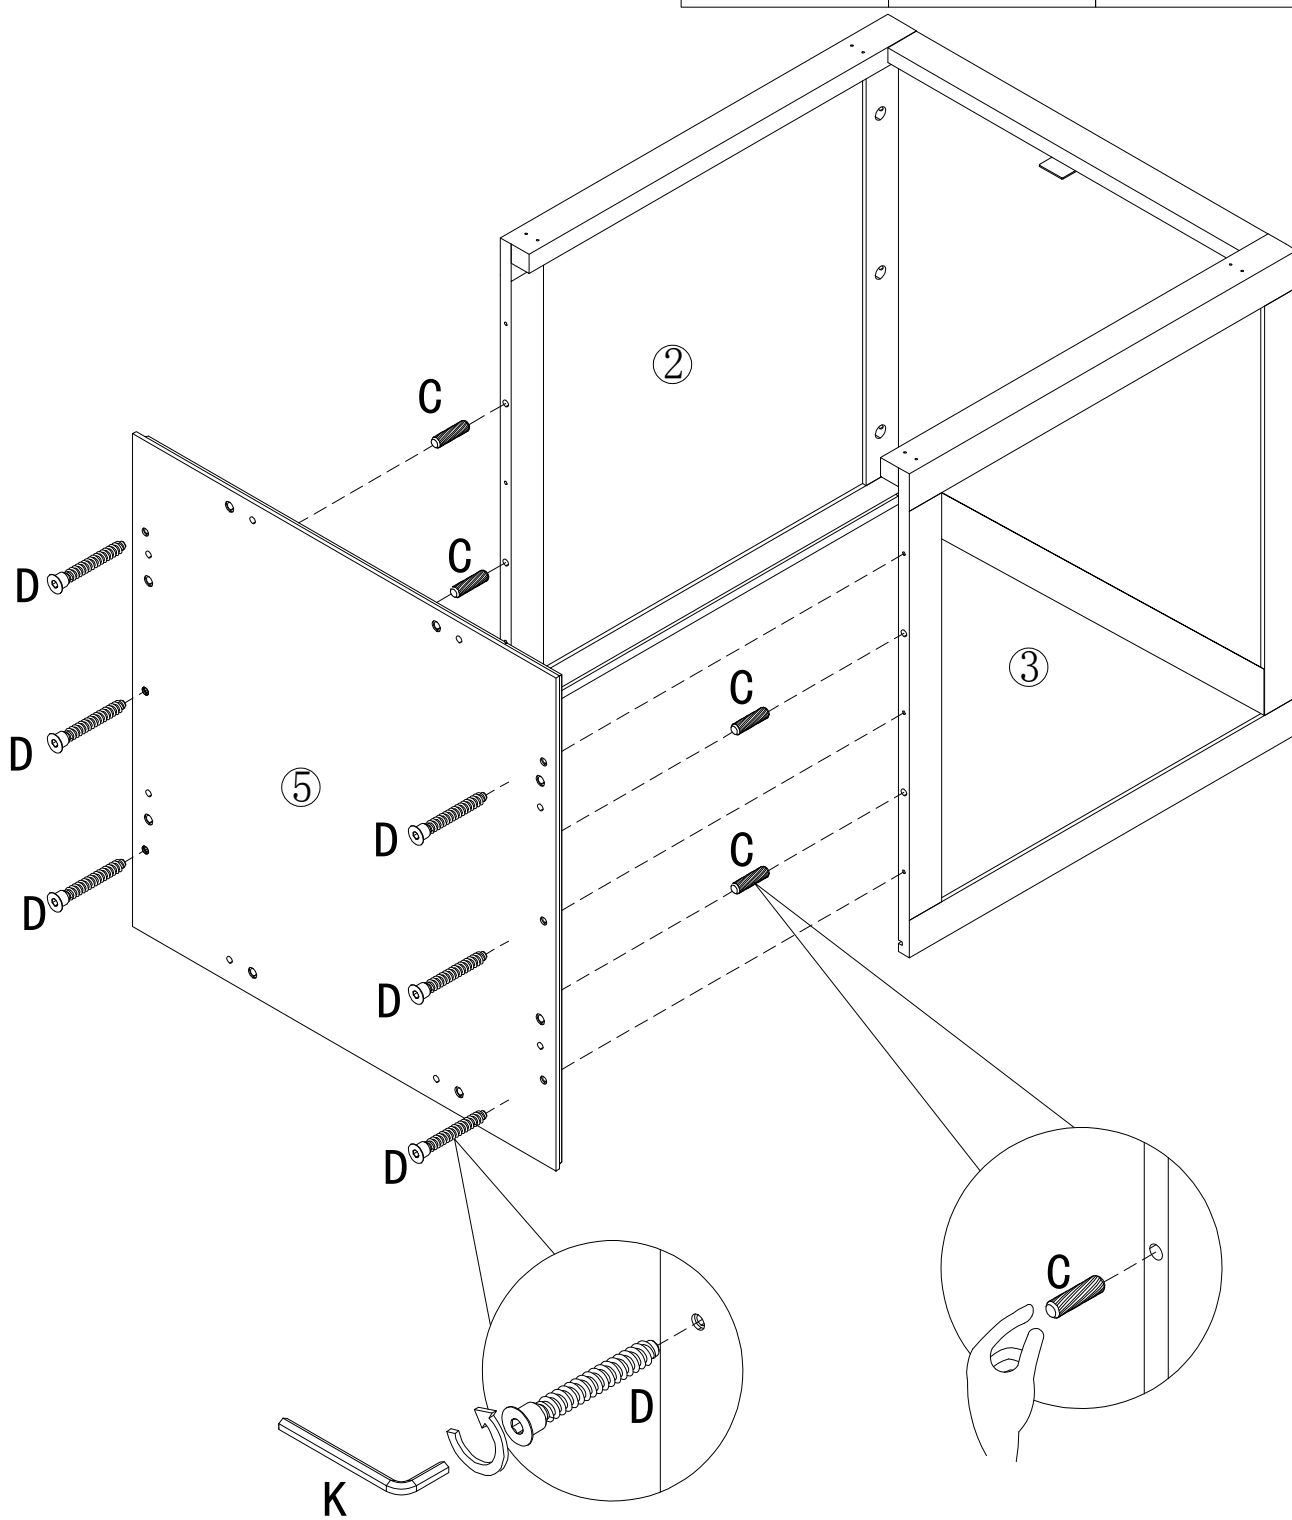


Step 7

M



X8

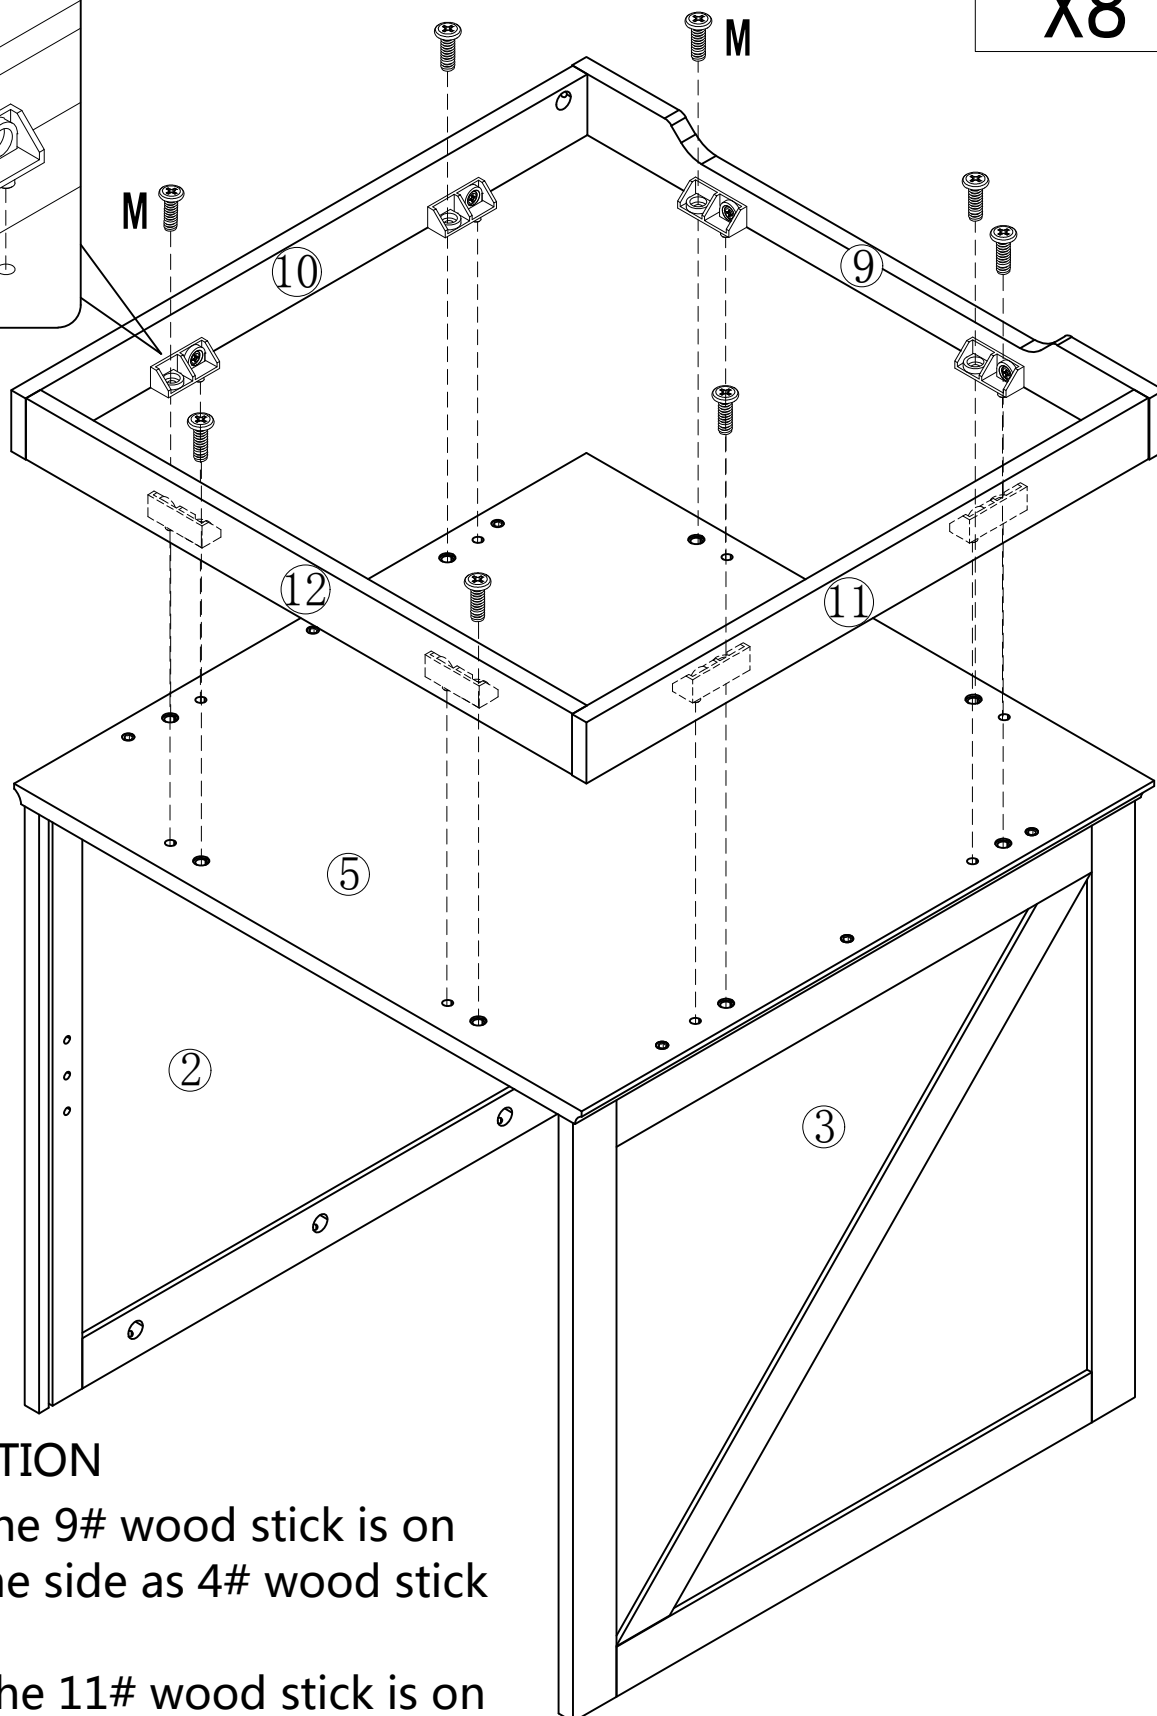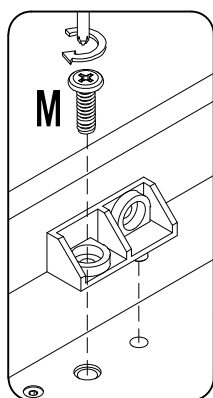

⚠ CAUTION


Note: The 9# wood stick is on the same side as 4# wood stick

Note: The 11# wood stick is on the same side as 3# BOARD

Step 8

⚠ CAUTION

Please be aware the wire hole is at the top

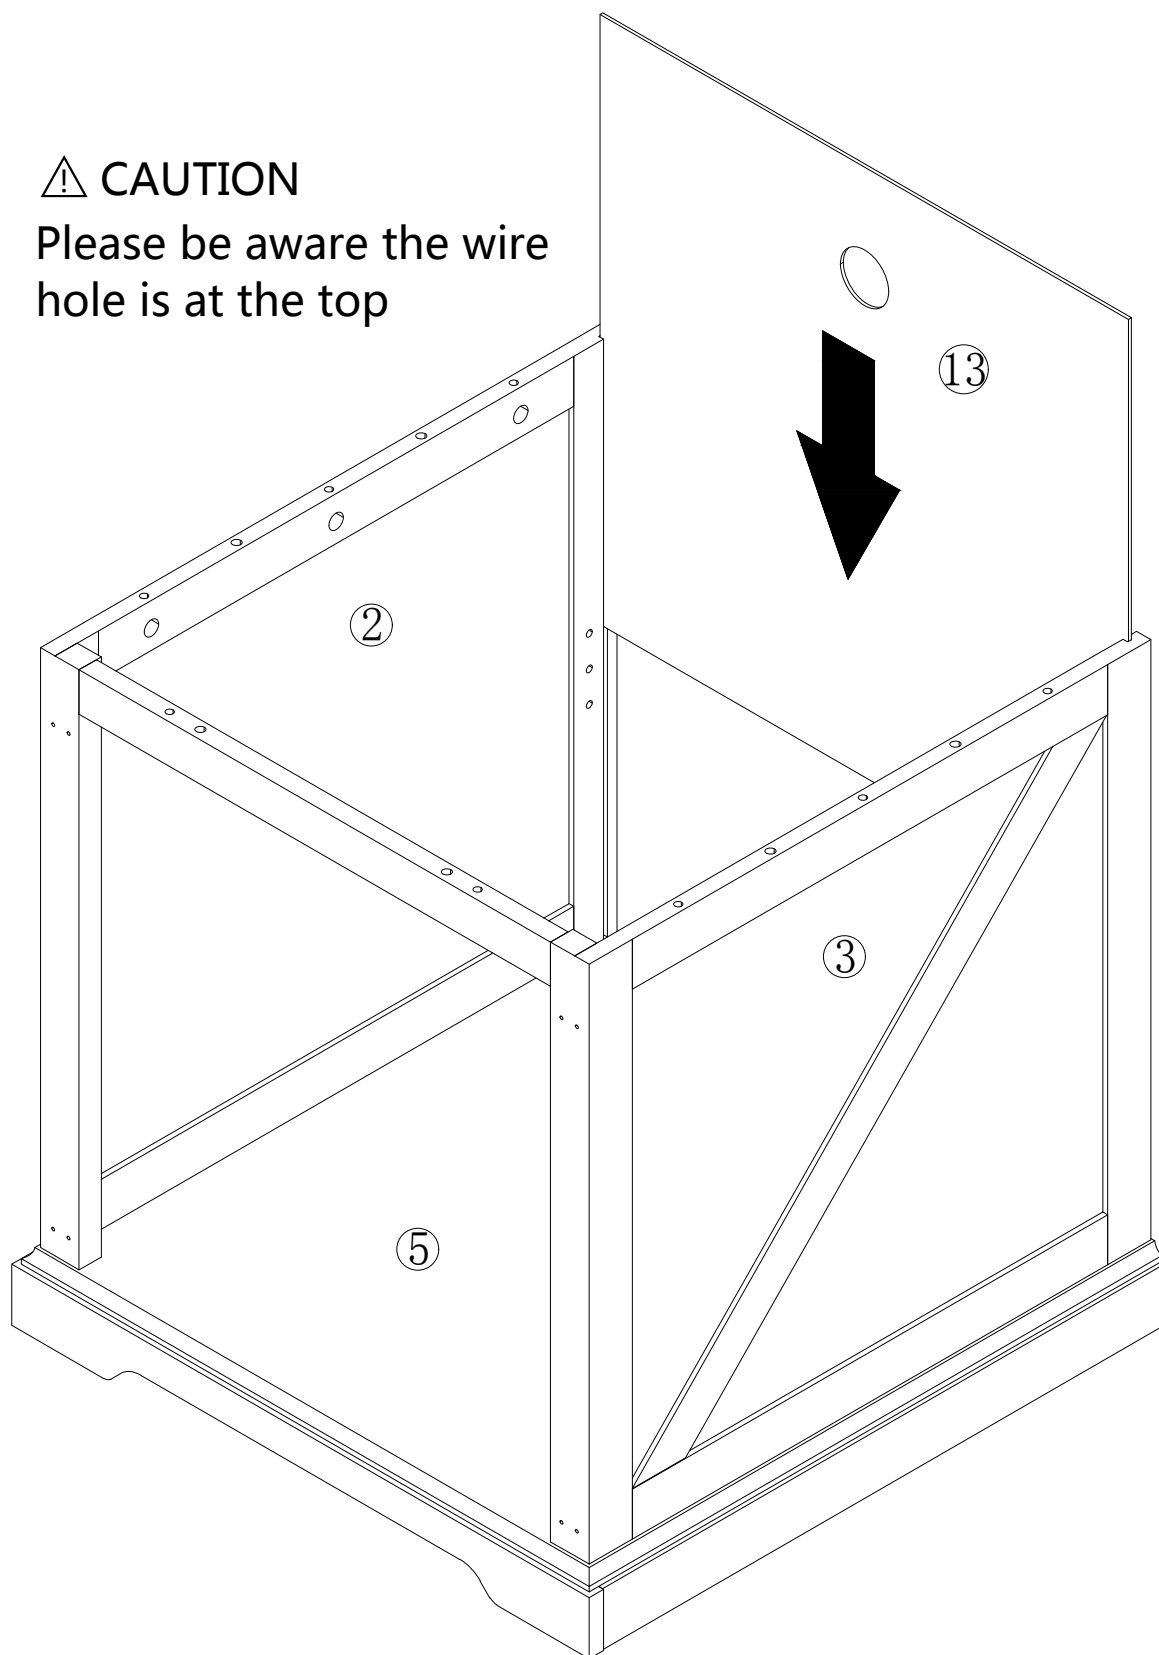


Step 9

A



X8




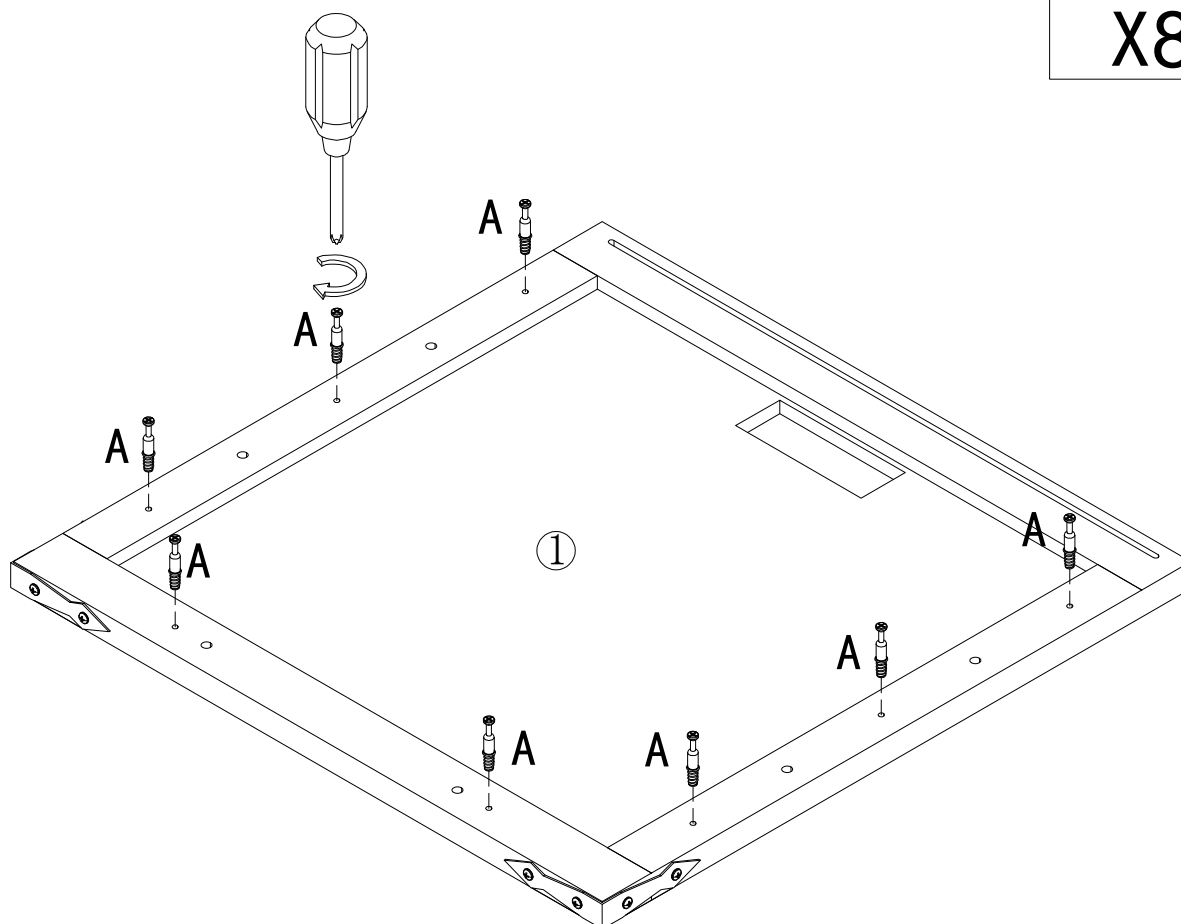


CAM LOCK/BOLT FASTENING INTRODUCTION (You will use it during assembly)

Screw cam bolt into the threaded anchor gently. (Attention: don't screw cam bolt too deep or too shallow.)	Keep cam bolts straight to the panels for alignment with screw holes.


Step 10

B	C
	
X8	X6

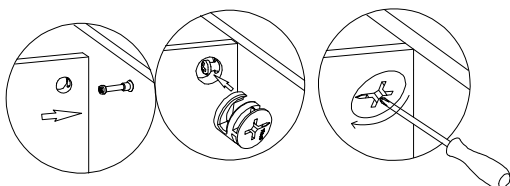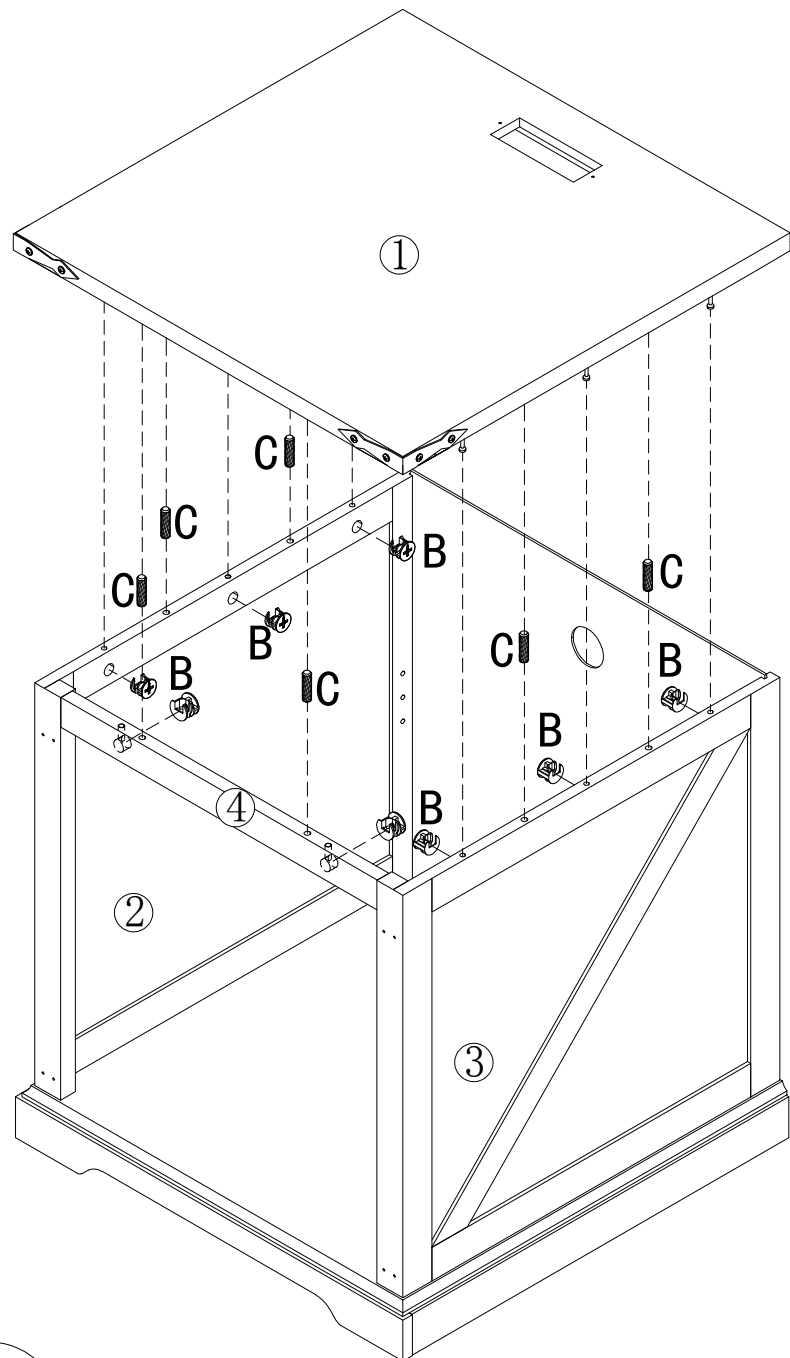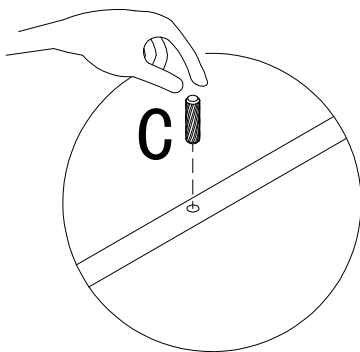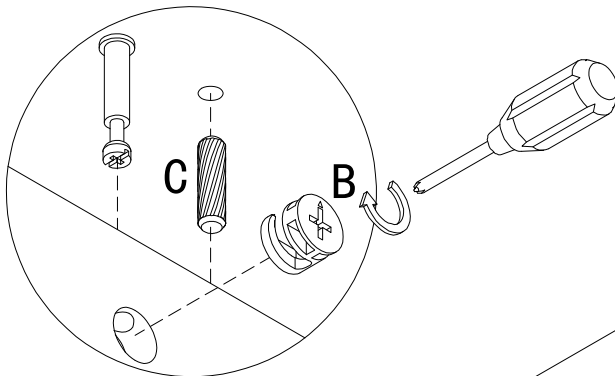

Step 11

E	F	G
		
X4	X6	X1


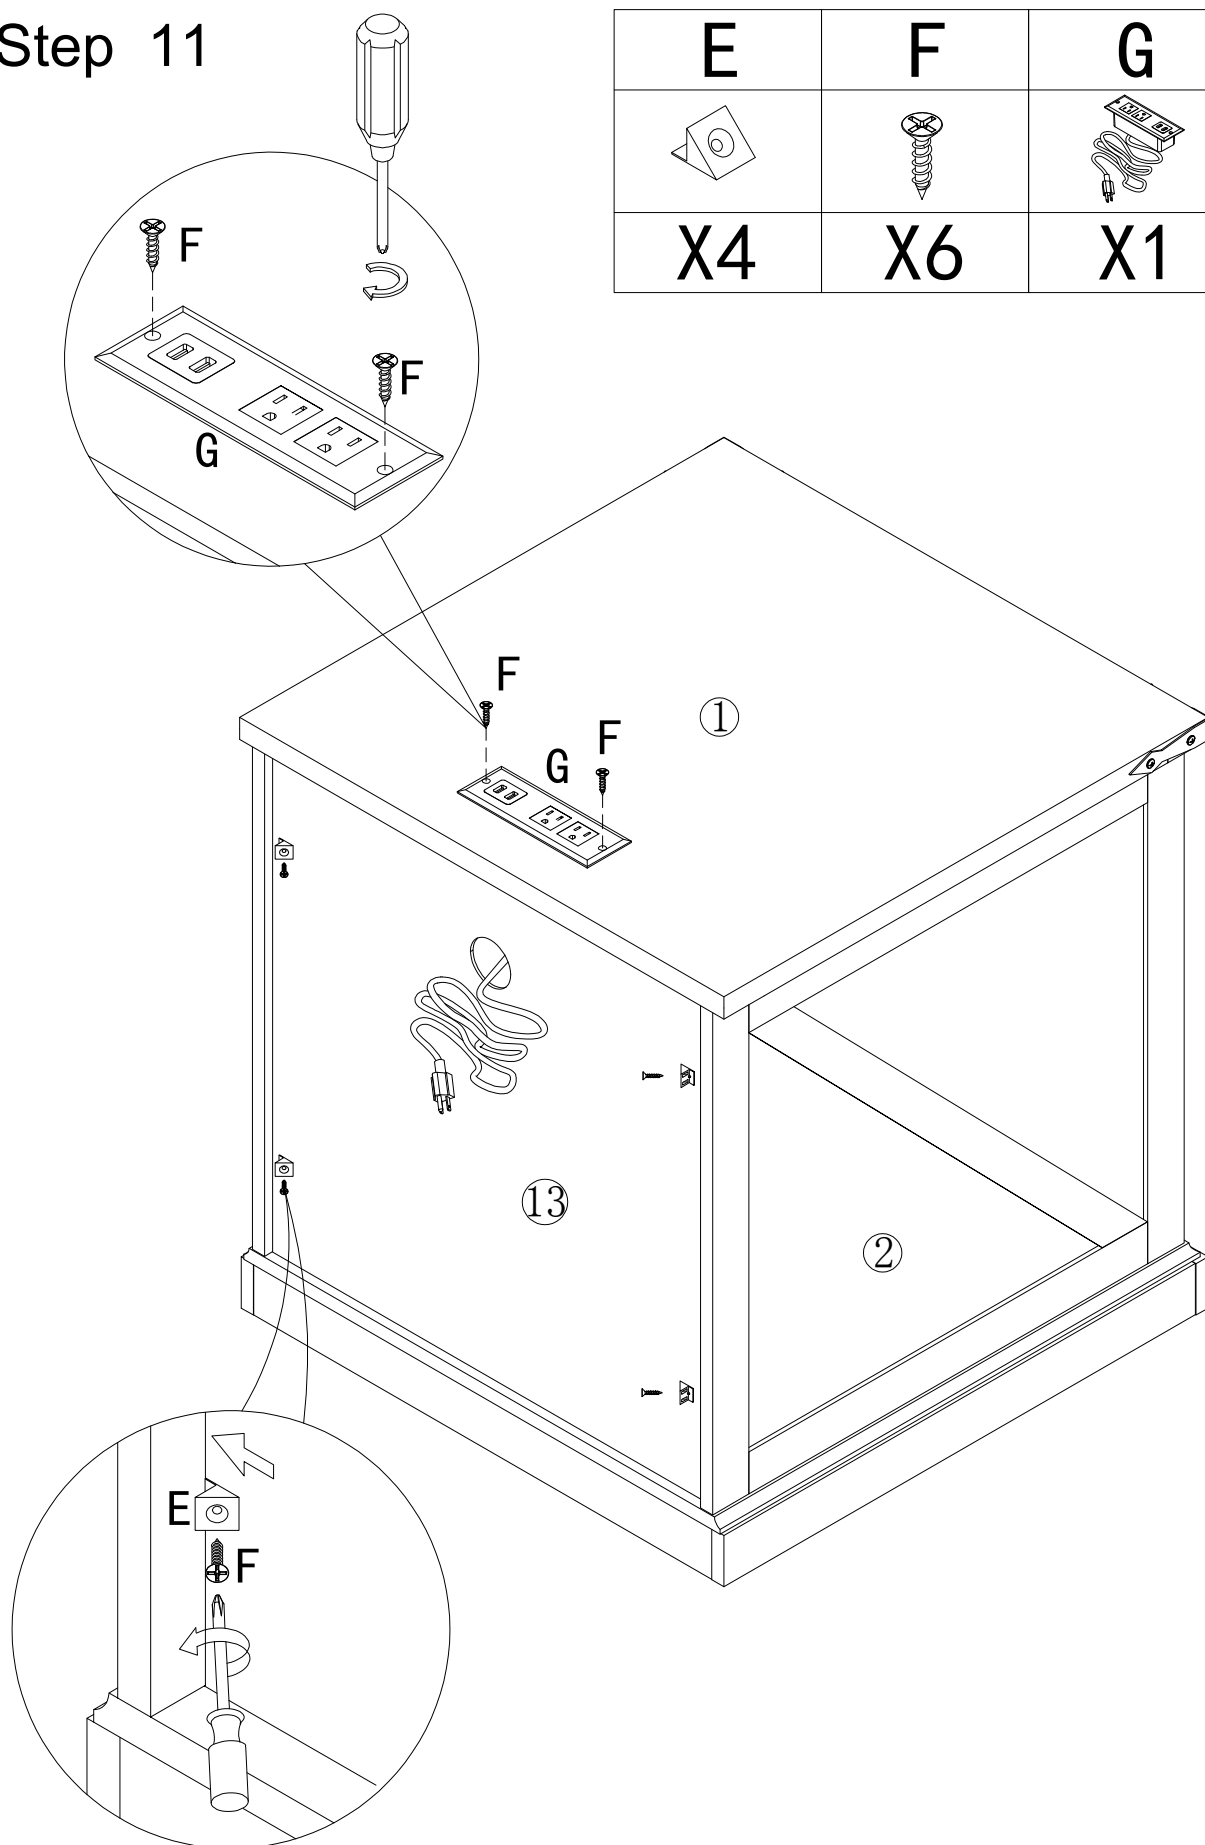


Step 12

J



X4

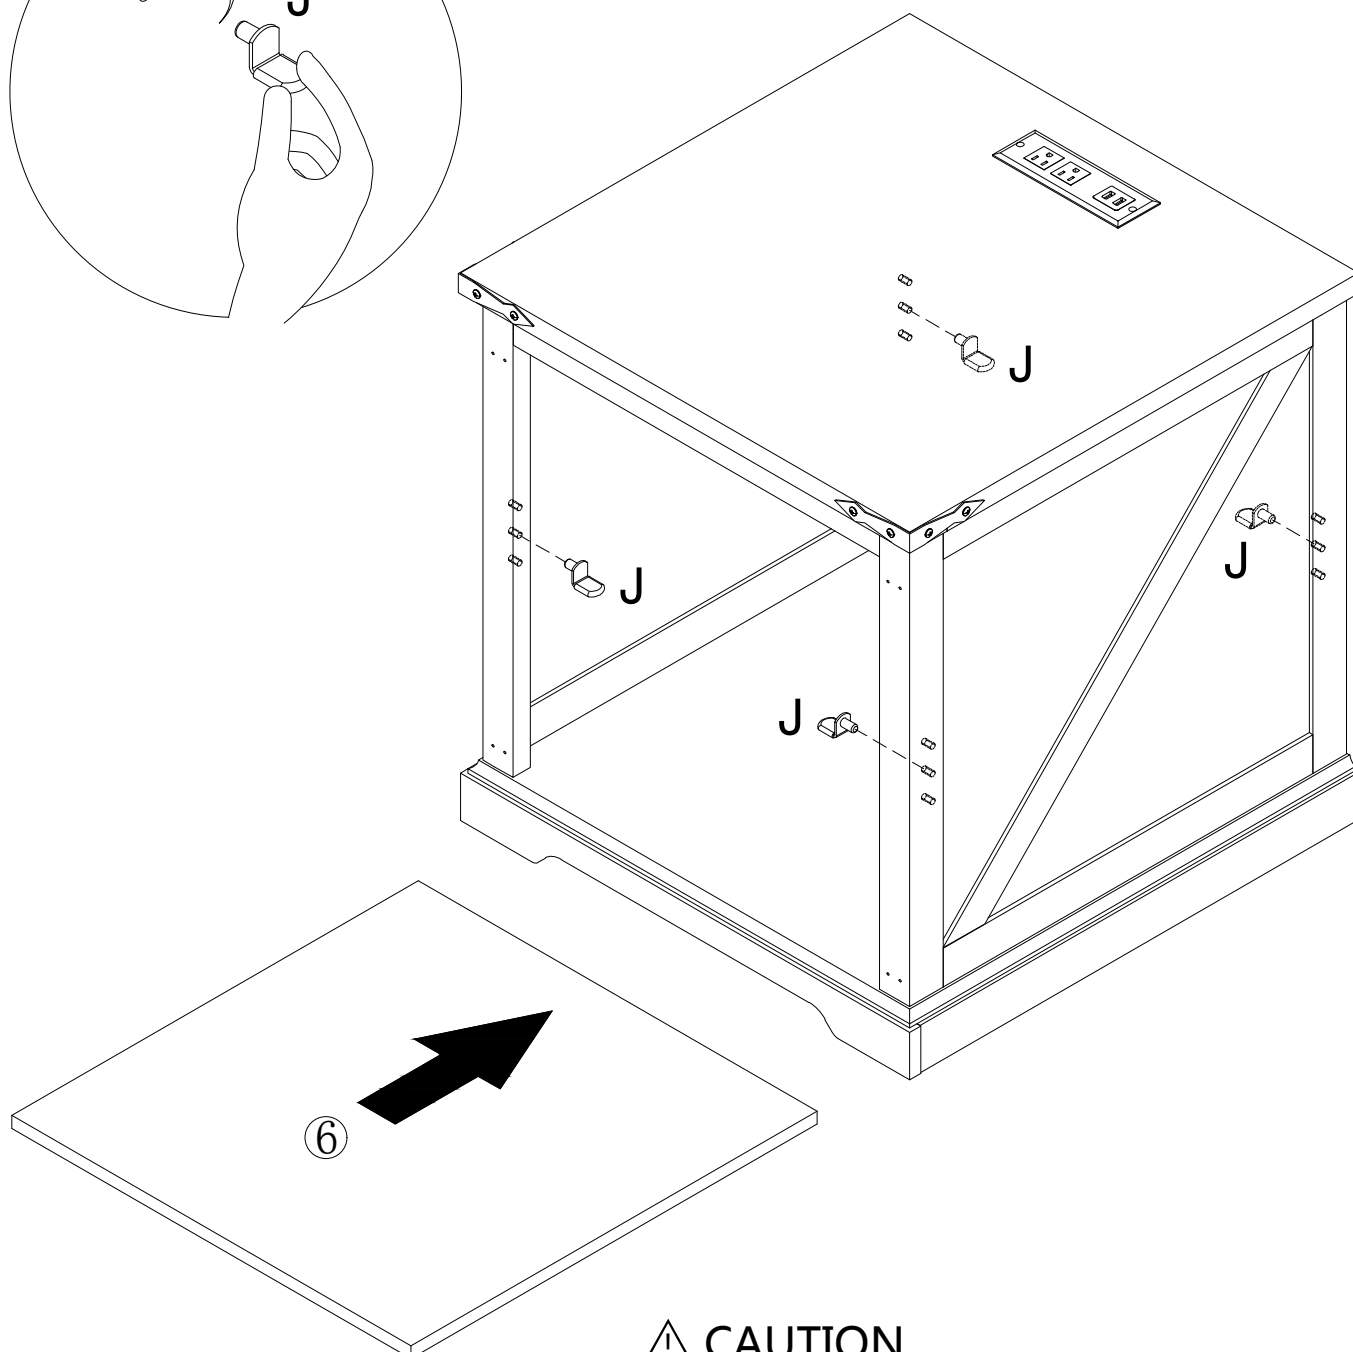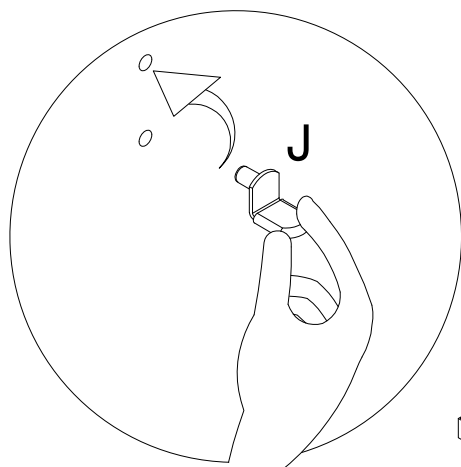


⚠ CAUTION

Note: the 6# plate needs to be inserted diagonally

Step 13


H	I
	
X4	X12

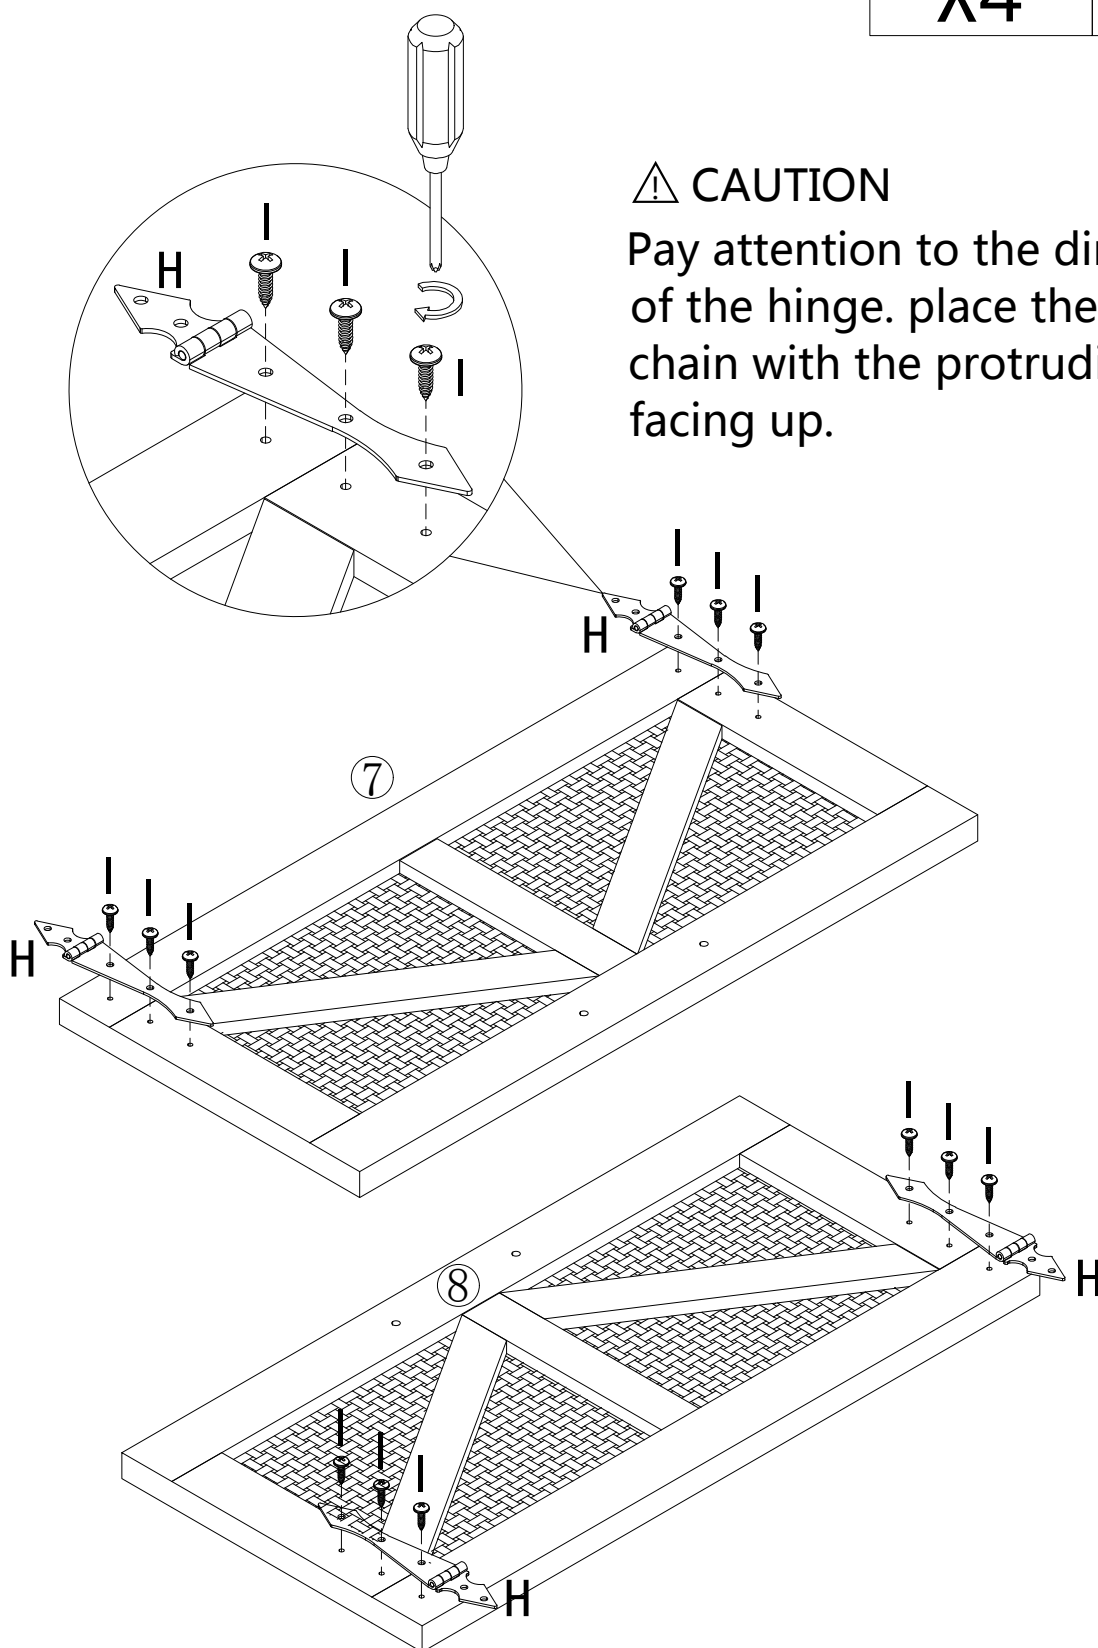


⚠ CAUTION

Pay attention to the direction of the hinge. place the hinge chain with the protruding side facing up.

Step 14

P	Q
	
X2	X4


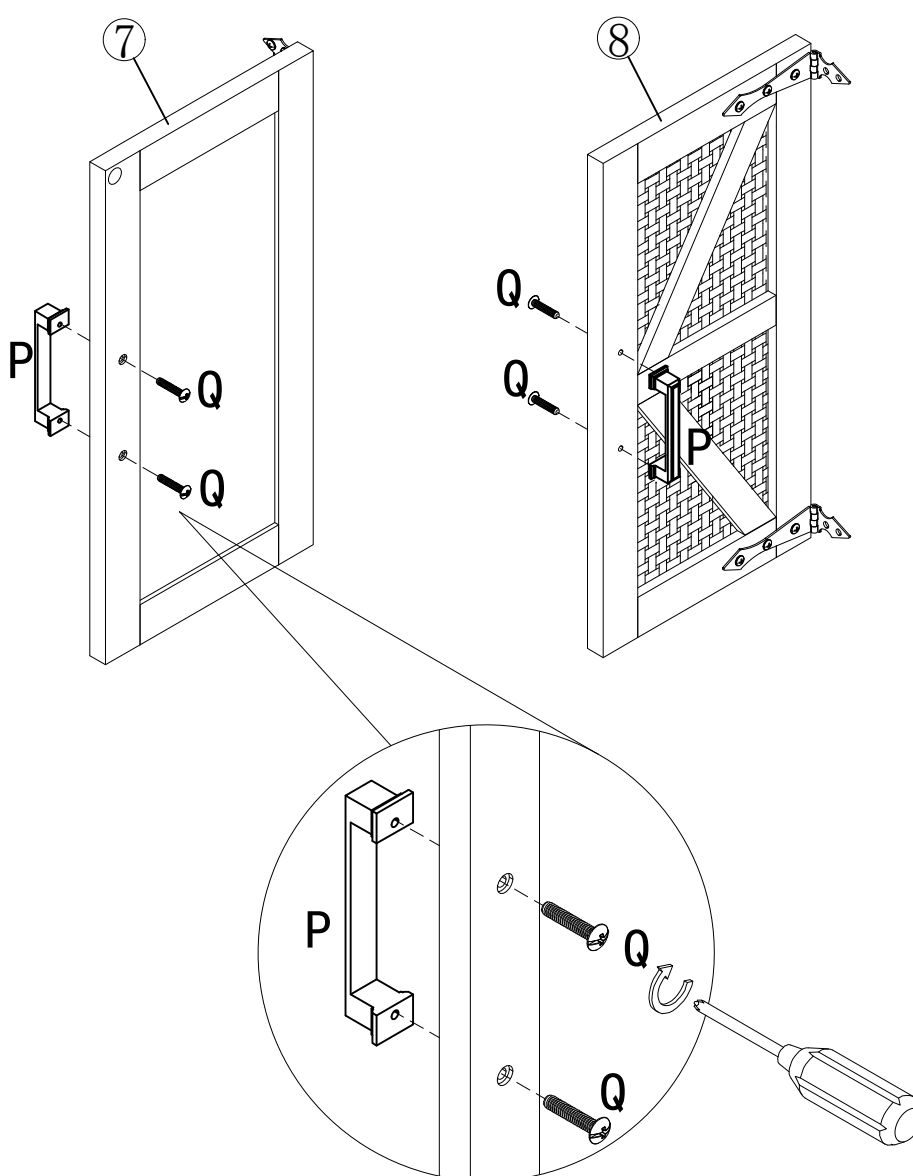


Step 15

I



X8

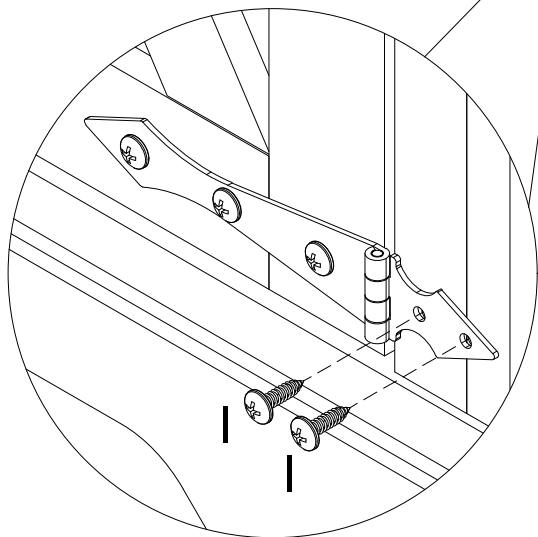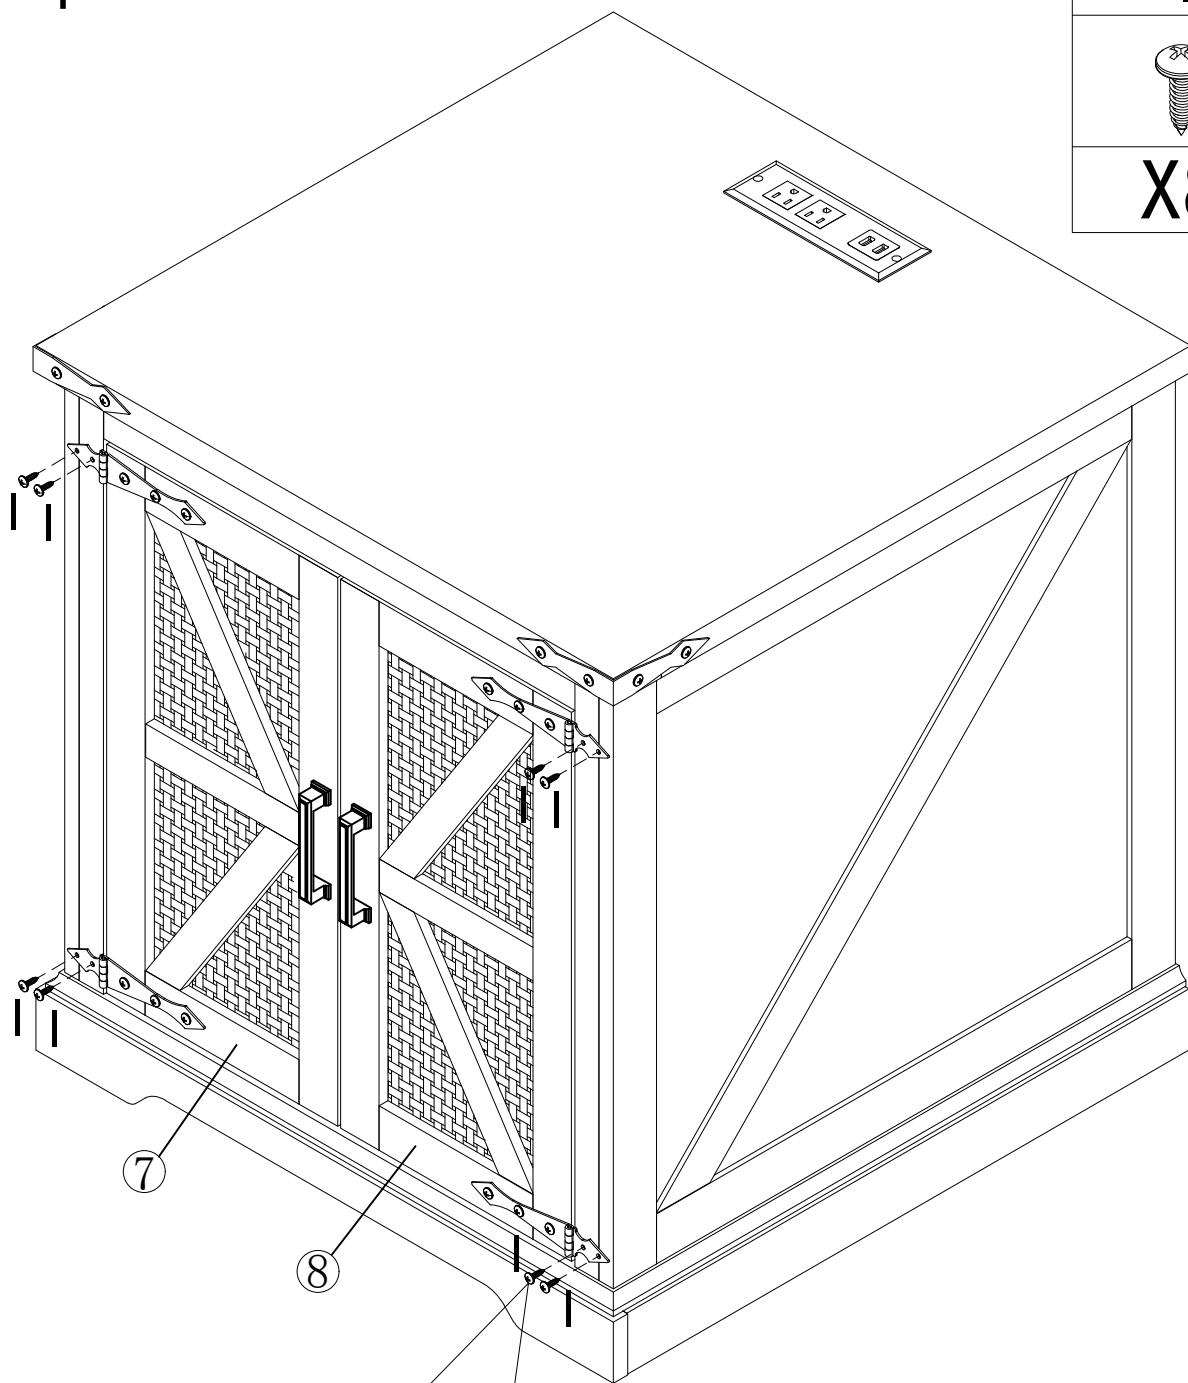

⚠ CAUTION

Note: Door #7 need to be installed on the left side, Door #8 need to be installed on the right side

The suction iron piece is located above the door.

Step 16

