


# BALI TALL CABINET WITH GLASS DOOR

## ASSEMBLY INSTRUCTIONS

SKU 7005AY - Black  
SKU 7001AY - Riviera  
SKU 7014AY - White

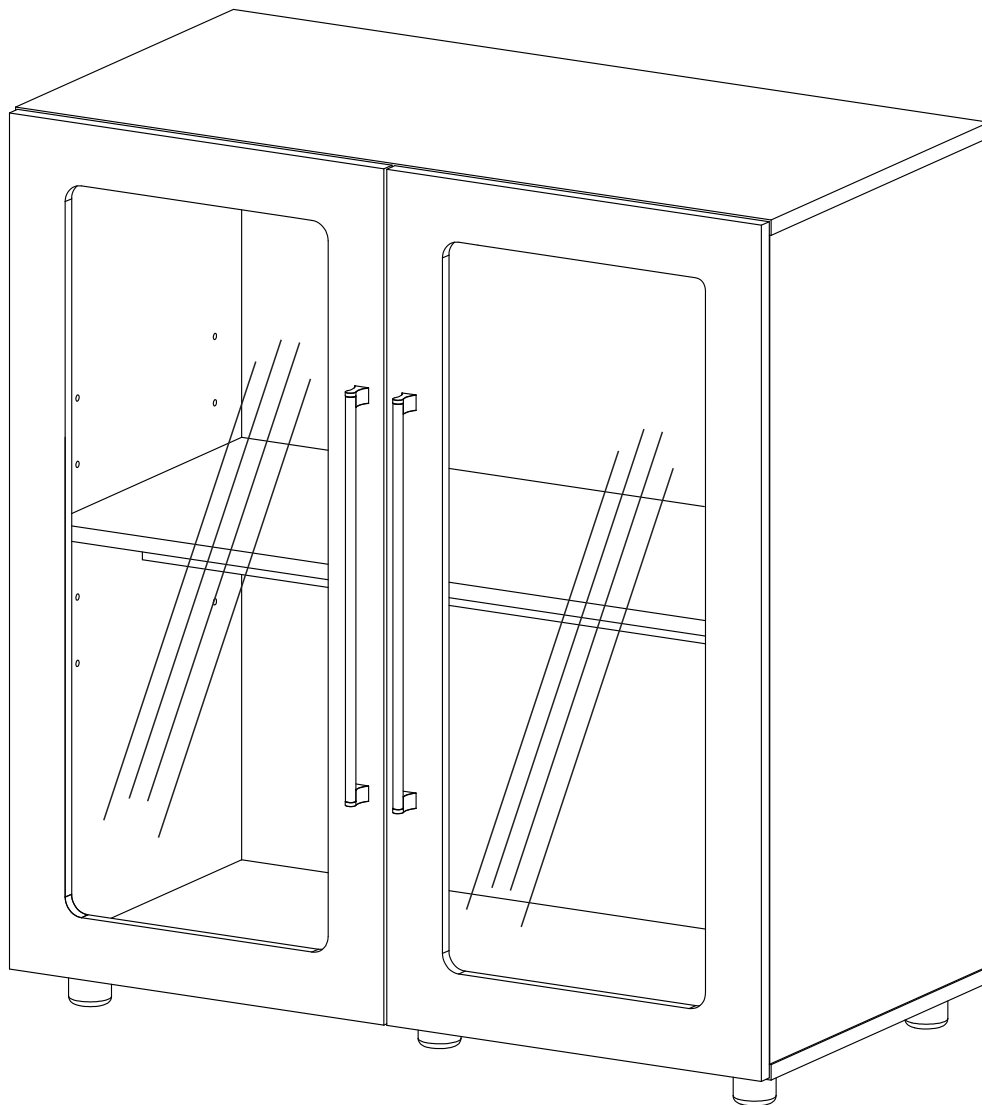

**IMPORTANT**  
**PLEASE READ BEFORE YOU CONTINUE FURTHER**  
**FOR DOMESTIC USE ONLY**  
**CARE AND MAINTENANCE**

**DO NOT USE AS BEDROOM FURNITURE!**

- After unpacking this product please keep the original packaging in case it needs to be returned for any reason.
- Please ensure all fittings and parts are present before commencing with assembly.
- We recommend that you lay a blanket or sheet on the floor to avoid damage to both your floor and the product.
- We strongly recommend that you keep children away from your work area.
- Assemble this product as close to its final position as possible
- Never drag or push products as this could cause damage to the joints making it inferior.
- Do not drag or push items across your furniture as this may cause the surface to scratch.
- Do not place this product next to radiator or in direct sunlight.
- Wood is a natural product and may expand if subjected to damp and may shrink or crack if subjected to heat. Therefore it is recommended that room temperature is maintained, with no sudden temperature fluctuations.
- Make sure any spillage is Wiped off immediately.
- Do not place hot or chilled items directly on to the surface, use a place mat or marking will occur.
- For general cleaning use soft cotton or micro fibre cloth and do not use detergents of any kind.
- Do not place on a wet or damp floor as staining may occur to your floor.
- From time to time it may be necessary to tighten fittings, regular inspections should be carried out.

---

**how to contact us:**

More details how to assemble your product at: [seconique-us.com](https://seconique-us.com) then follows:



[info@seconiqueus.com](mailto:info@seconiqueus.com)



[seconique-us.com](https://seconique-us.com)

---

[seconique-us.com](https://seconique-us.com)



[seconique-us.com](https://seconique-us.com)



[seconique US](#)



[@seconiqueus](#)

CERTIFICATION  
**FURNITURE  
MADE IN  
BRAZIL**

Your product is made from  
responsibly managed forests,  
verified recycled sources,  
and controlled wood!

**FURNITURE  
MADE IN  
BRAZIL**



  
JERRY A. SOUZA  
DIRECTOR

Seconique Brasil  
SB Solid Wood Furniture Group




[www.seconique-us.com](http://www.seconique-us.com)  
email: [feedback@seconique-us.com](mailto:feedback@seconique-us.com)

Create thousands of unique looks with this versatile range! Designed to complement every part of your home—living room, entrance hall, office, library, laundry, and beyond. Discover your perfect combination today!

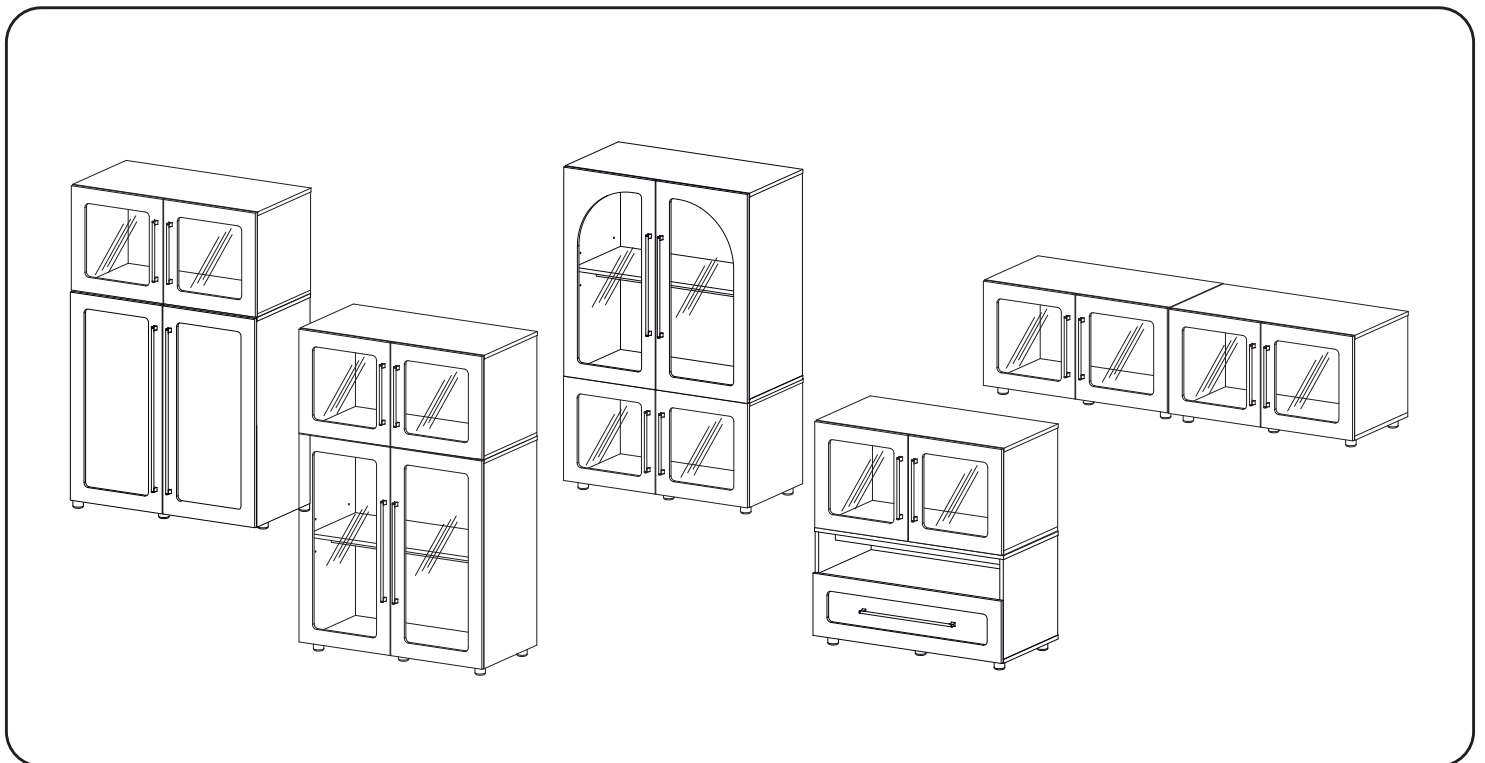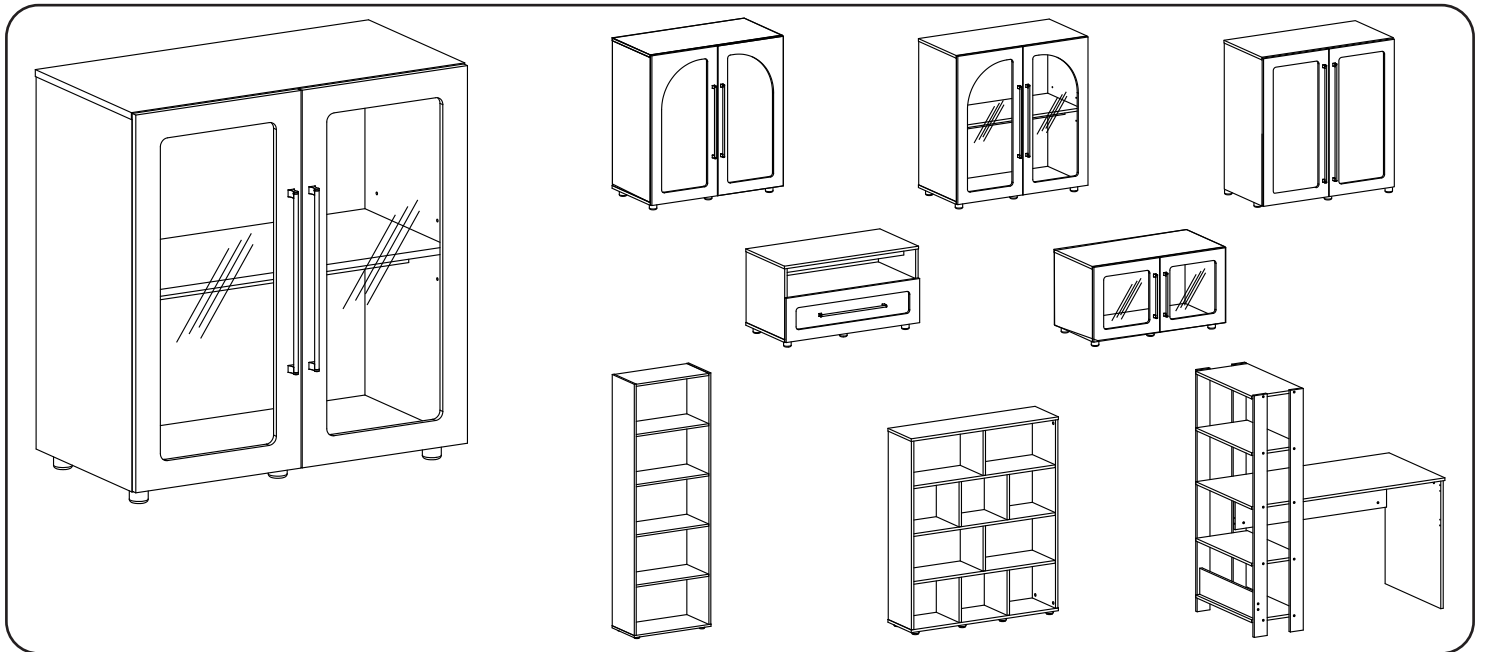


SCAN QR CODE



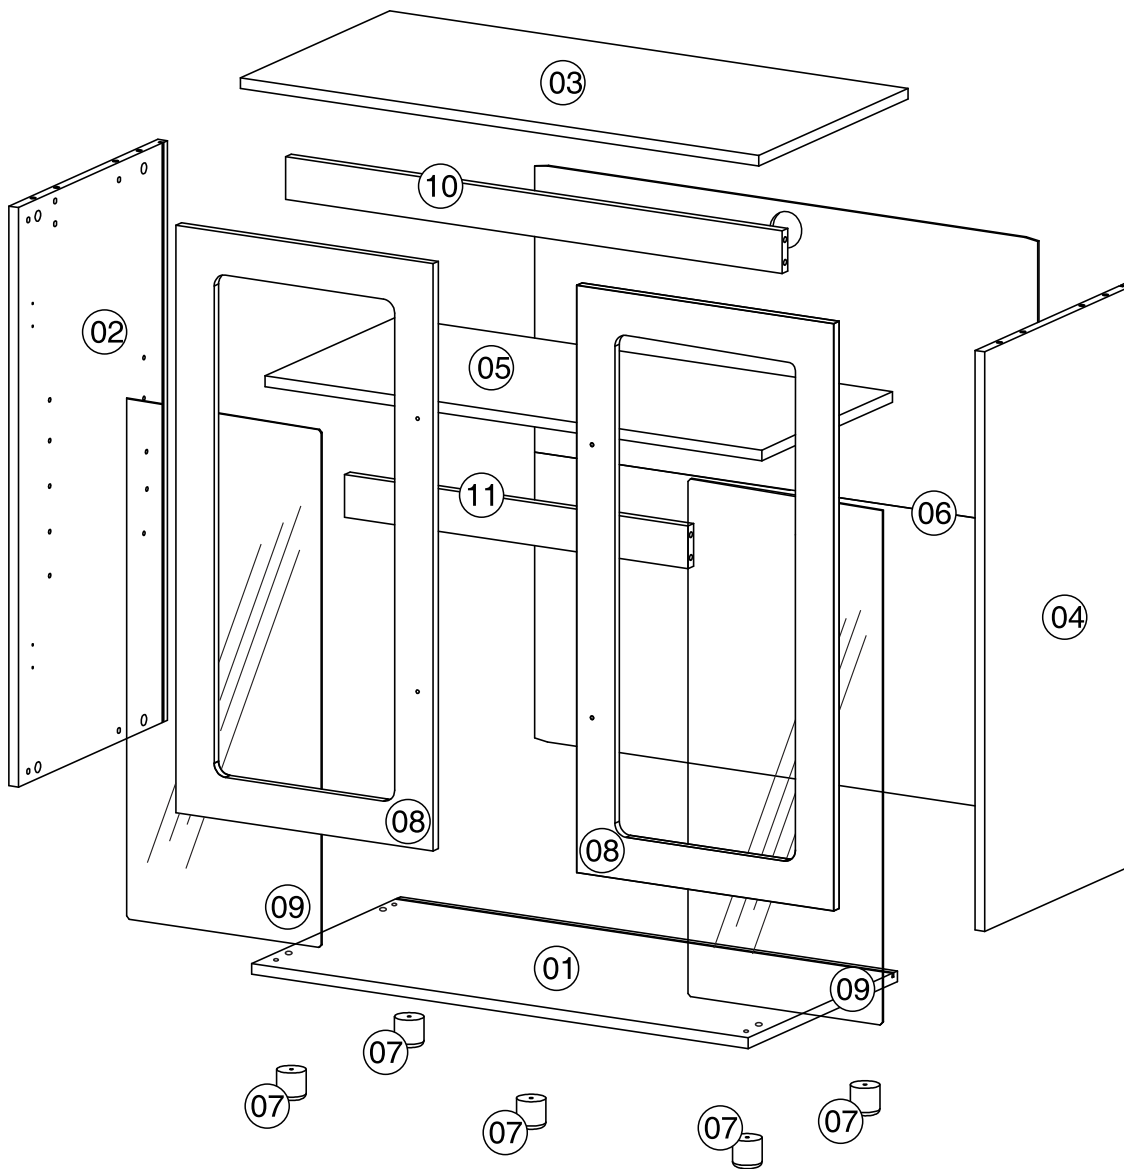

#### TOOLS REQUIRED

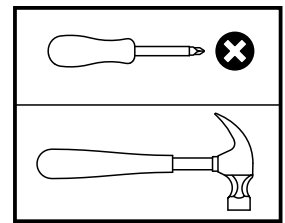

Back Crossbeam









### **PARTS LIST**

#### **Please Note:**

The below parts have all been stamped with the part number to help identify them during assembly.




| <b>Part Number</b> | <b>Part Description</b> | <b>Quantity</b> | <b>Carton</b> |
|--------------------|-------------------------|-----------------|---------------|
| 1                  | Base Panel              | 1               | 1/1           |
| 2                  | Left Panel              | 1               | 1/1           |
| 3                  | Top Panel               | 1               | 1/1           |
| 4                  | Right Panel             | 1               | 1/1           |
| 5                  | Shelf                   | 1               | 1/1           |
| 6                  | Back Panel              | 1               | 1/1           |
| 7                  | Foot                    | 5               | 1/1           |
| 8                  | Door Frame              | 2               | 1/1           |
| 9                  | Glass Panel             | 2               | 1/1           |
| 10                 | Top Rail                | 1               | 1/1           |
| 11                 | Shelf Rail              | 1               | 1/1           |

# Hardware List
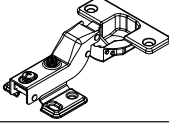
| Part                                                                                  | Size      | Name          | Quantity |
|---------------------------------------------------------------------------------------|-----------|---------------|----------|
| A    | 8x30mm    | Wooden dowel  | 14       |
| B    | Ø7x30mm   | Cam Bolt      | 11       |
| C    | Ø15x10mm  | Cam Lock      | 11       |
| D    | Ø3.5x12mm | Screw         | 20       |
| E    | Ø3.5x25mm | Screw         | 4        |
| F    | Ø4x14mm   | Screw         | 24       |
| G    | Ø4x20mm   | Screw         | 5        |
| H    | Ø5x40mm   | Screw         | 5        |
| I    | Ø3x16mm   | Screw         | 8        |
| J    | Ø 19mm    | Sticker       | 19       |
| K    | 14.7x30mm | Support       | 8        |
| L   | 384mm     | Handle        | 2        |
| M  | Ø35mm     | Metal Hinge   | 4        |
| N  | 25x12mm   | Door Latch    | 20       |
| O  | 1/4x5/8   | Washer        | 2        |
| P  | 20x200mm  | Wall Anchor   | 1        |
| Q  | 6x18mm    | Shelf Support | 4        |


*The hardware quantities listed above are required for proper assembly.  
Extra hardware pieces may be included.*

## TIPS FOR FITTINGS CAM-LOCKS

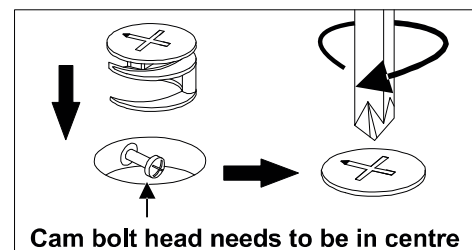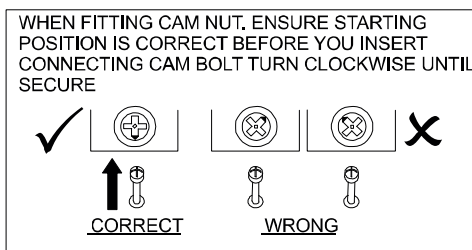

### CAMBOLT

Tighten until shoulder in flush with panel. Do not overtighten or undertighten (see example beside)

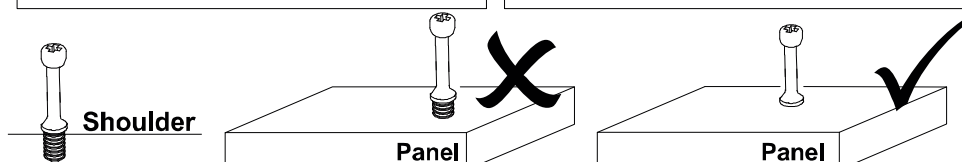

# STEP 1



## PARTS REQUIRED

1 - BASE PANEL x1

## HARDWARE REQUIRED

B  04

## TOOLS REQUIRED

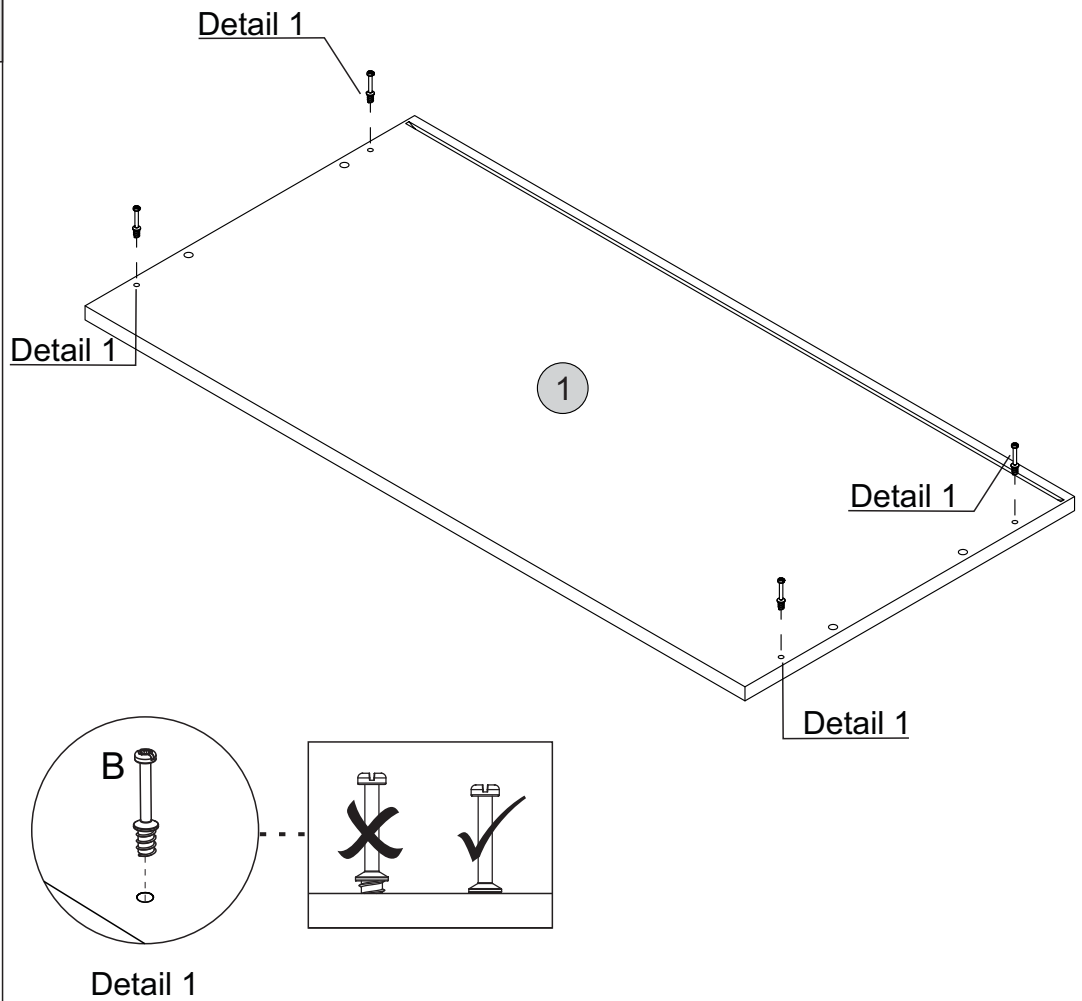

# STEP 2



## PARTS REQUIRED

3 - TOP PANEL x1

## HARDWARE REQUIRED

B  04

## TOOLS REQUIRED

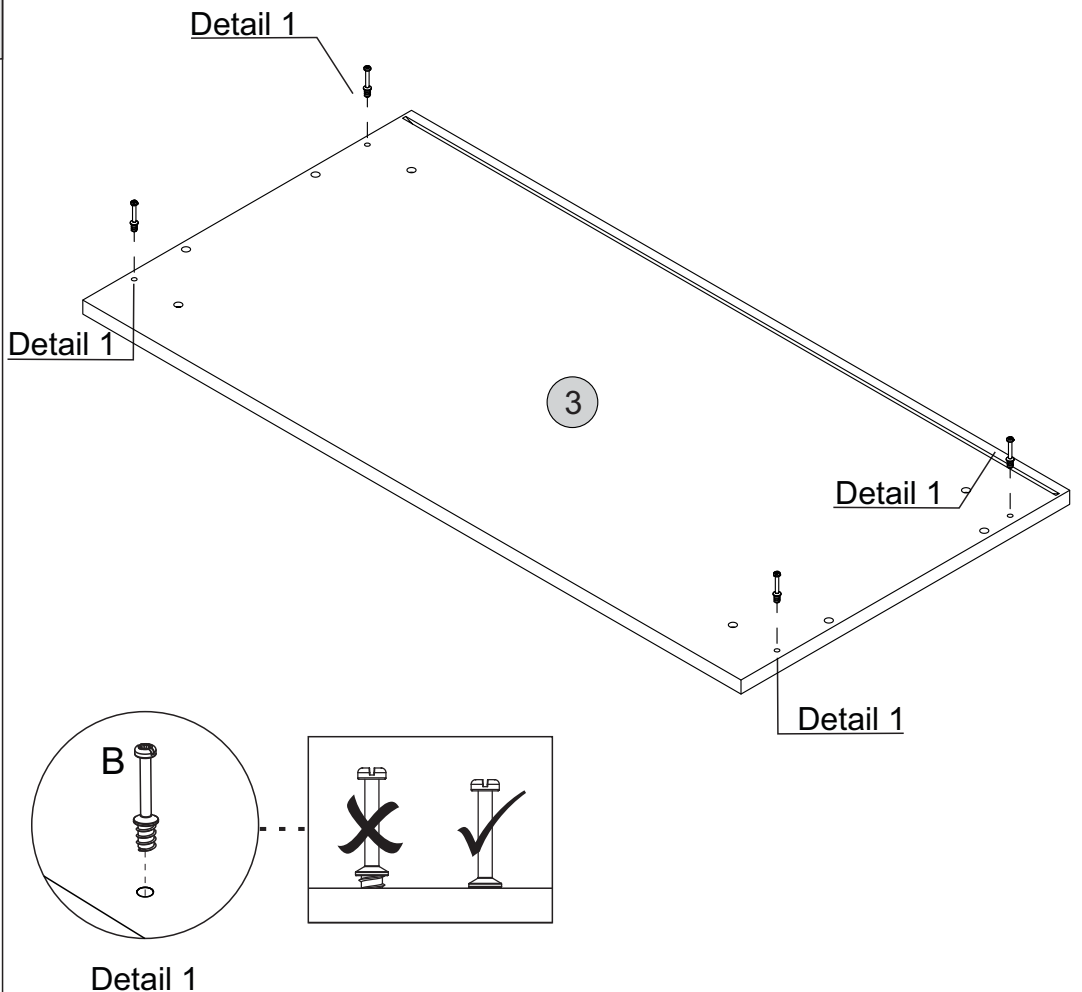


# STEP 3

## PARTS REQUIRED



2 - LEFT SIDE PANEL x1

4 - RIGHT SIDE PANEL x1

## HARDWARE REQUIRED

A  08

## TOOLS REQUIRED

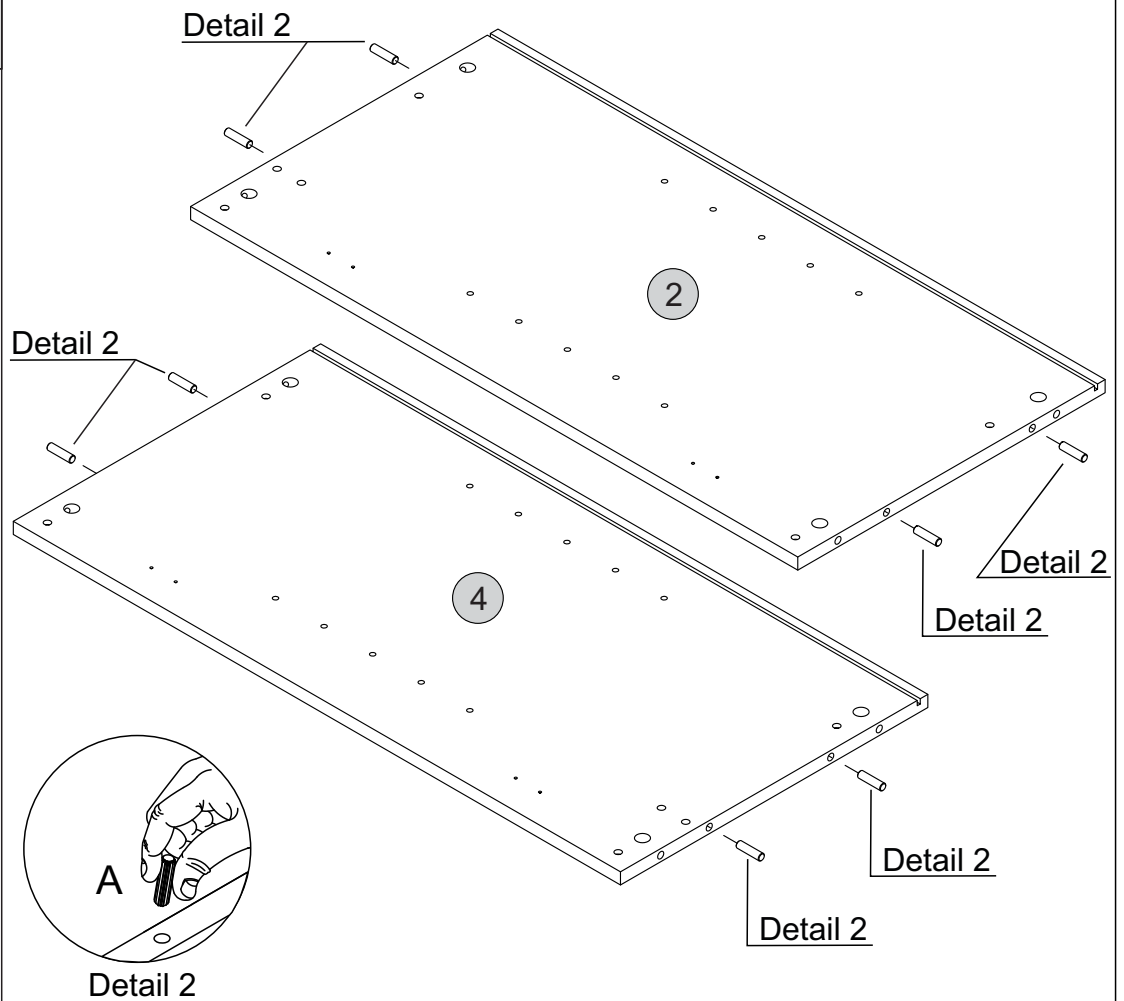

# STEP 4


## PARTS REQUIRED


5 - SHELF PANEL x1

10 - TOP RAIL x1




11 - SHELF RAIL x1

## HARDWARE REQUIRED

A  06

B  03

## TOOLS REQUIRED

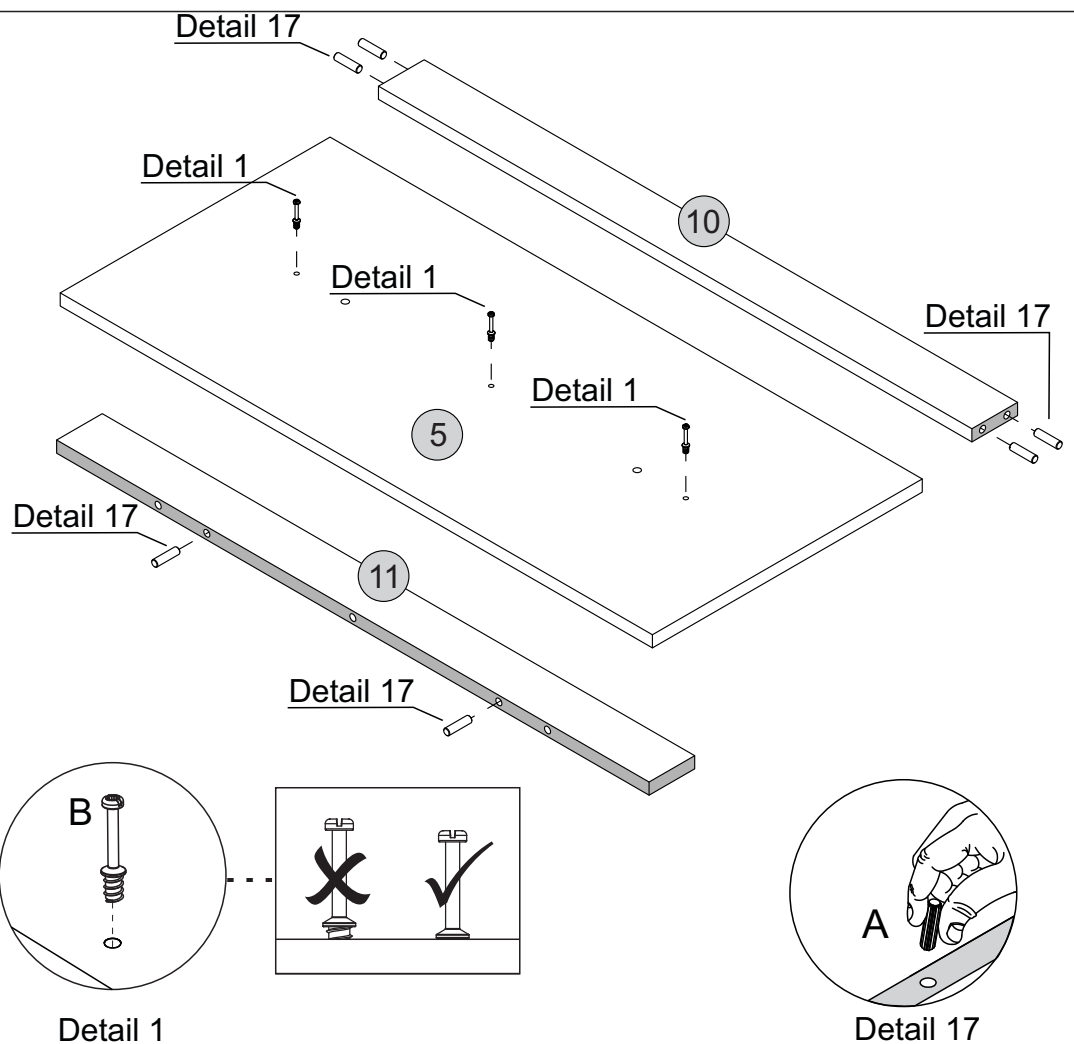

# STEP 5

## PARTS REQUIRED

1- BASE PANEL x1




2 - LEFT PANEL x1

## HARDWARE REQUIRED

C  02

J  Stiker 02

## TOOLS REQUIRED

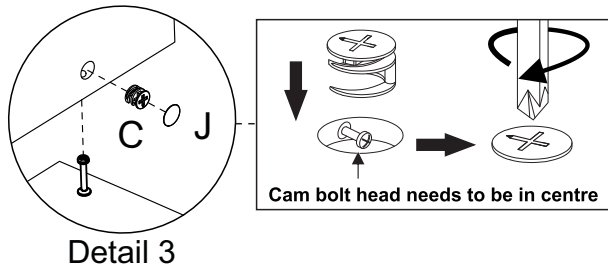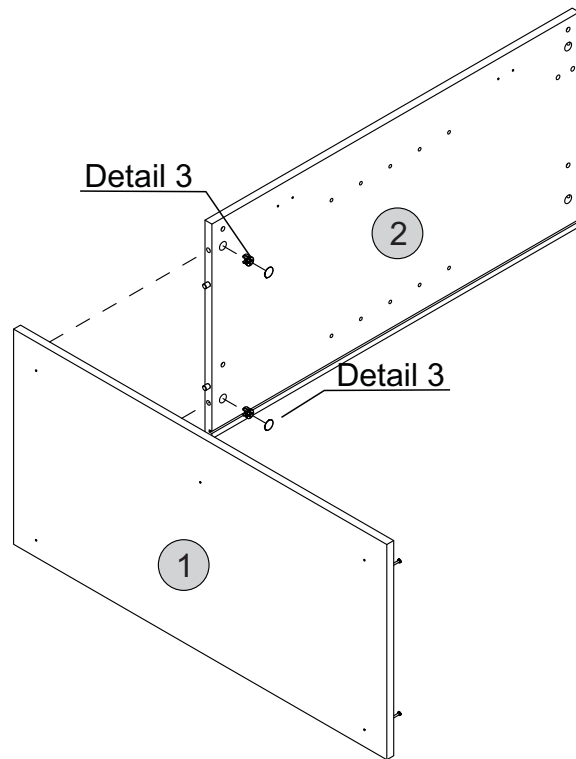


# STEP 6

## PARTS REQUIRED

4 - RIGHT PANEL x1

10 - TOP RAIL x1




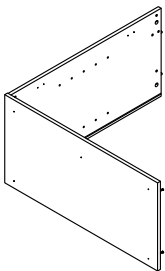


## HARDWARE REQUIRED

C  02

J  Stiker 02


## TOOLS REQUIRED

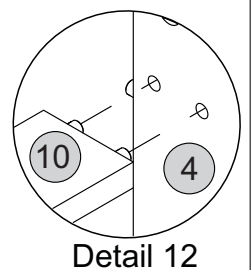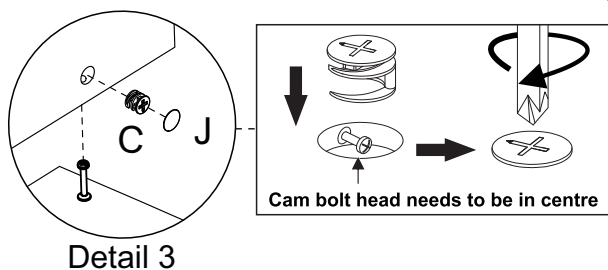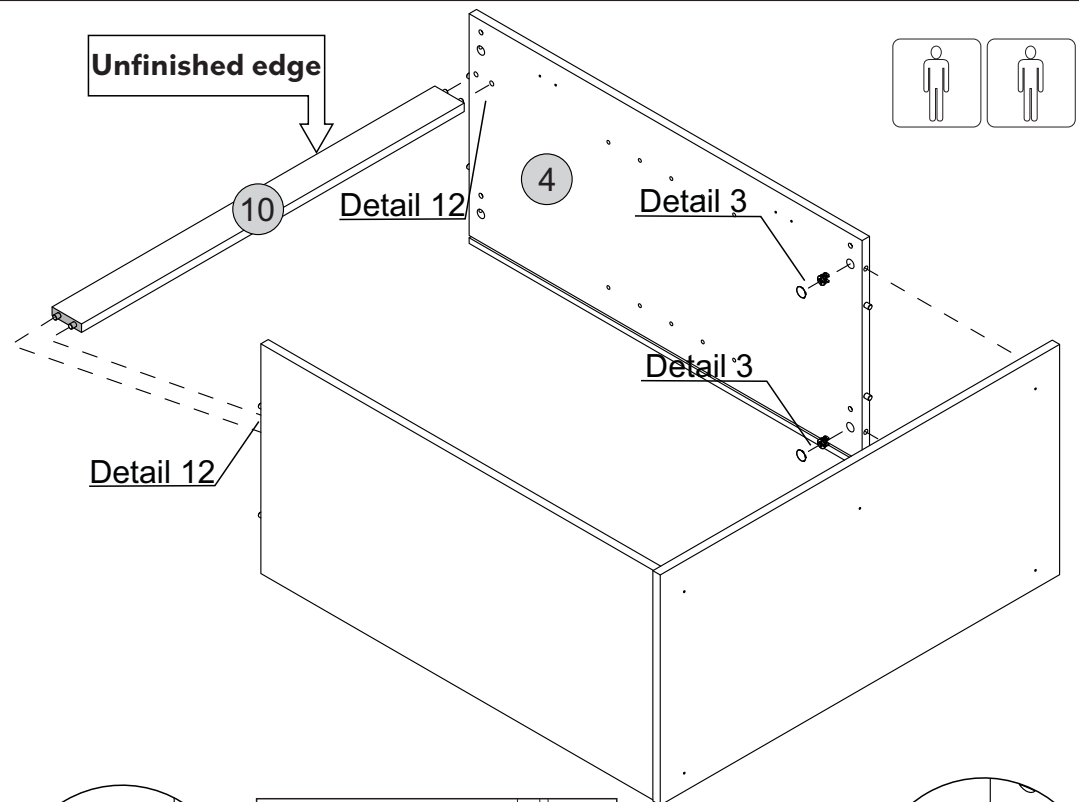

# STEP 7


## PARTS REQUIRED

6 - BACK PANEL x1

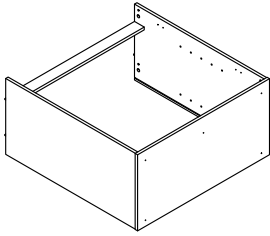

## HARDWARE REQUIRED


## TOOLS REQUIRED

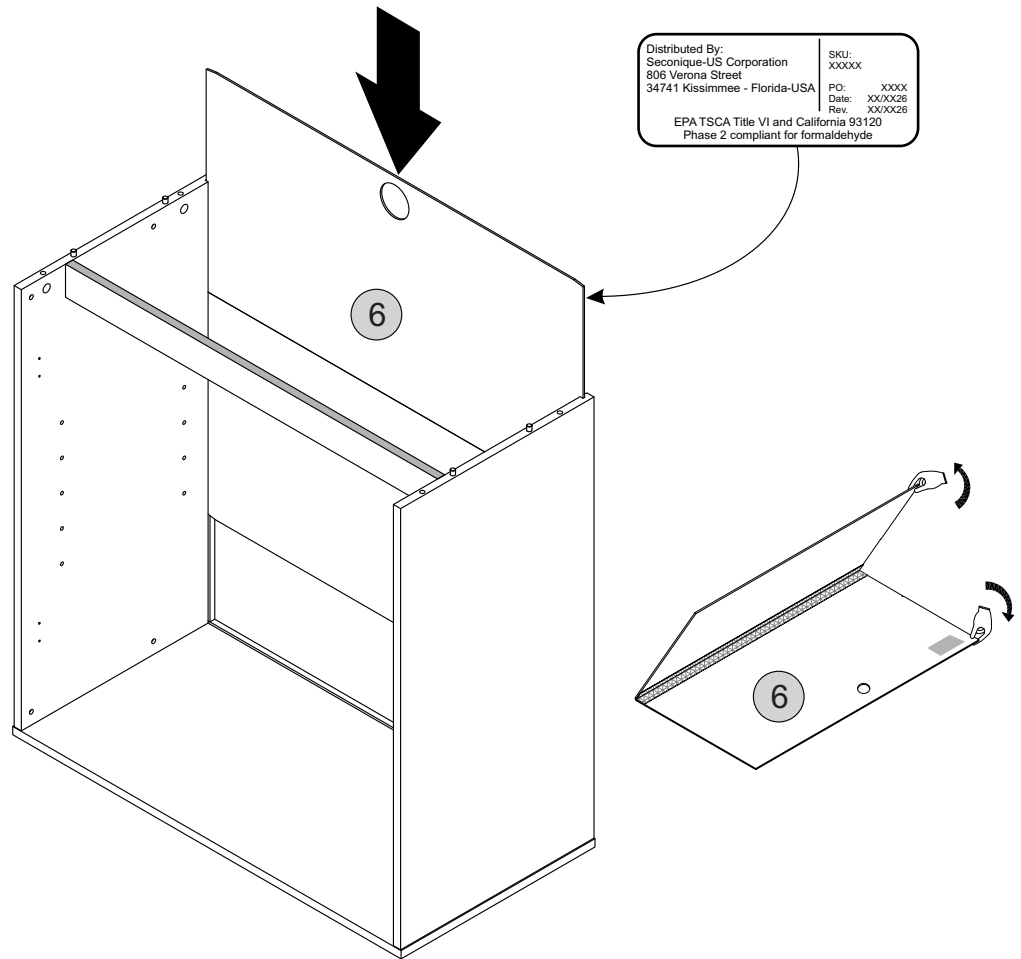

# STEP 8

## PARTS REQUIRED

3 - TOP PANEL x1



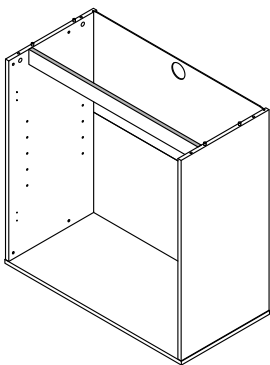


## HARDWARE REQUIRED

C   04

J  Stiker 04

## TOOLS REQUIRED

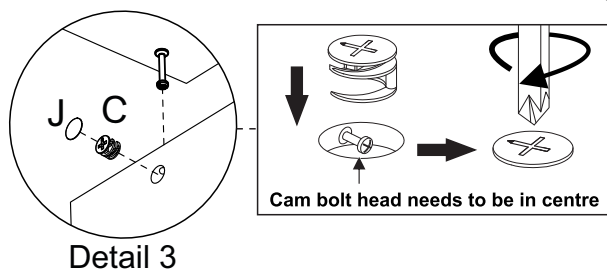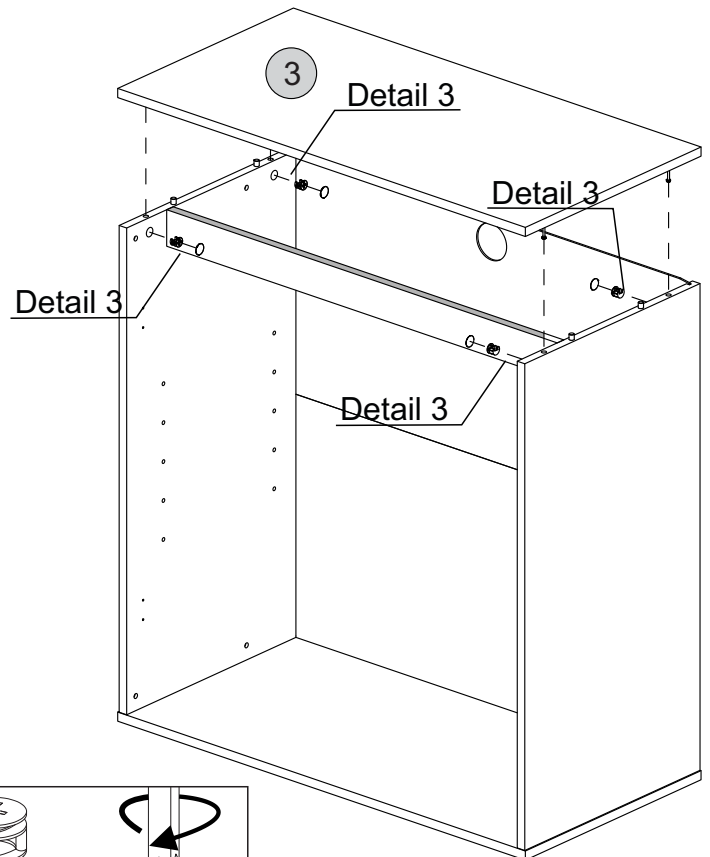

# STEP 9

## PARTS REQUIRED

5 - SHELF x1




11 - SHELF RAIL x1

## HARDWARE REQUIRED

C  03



J  Stiker 03

## TOOLS REQUIRED

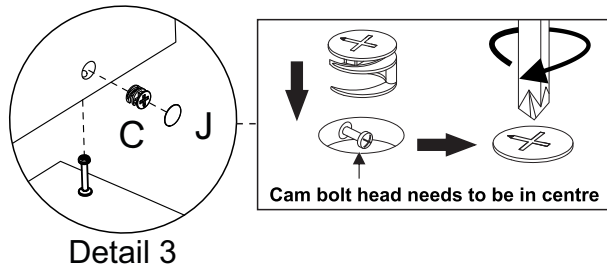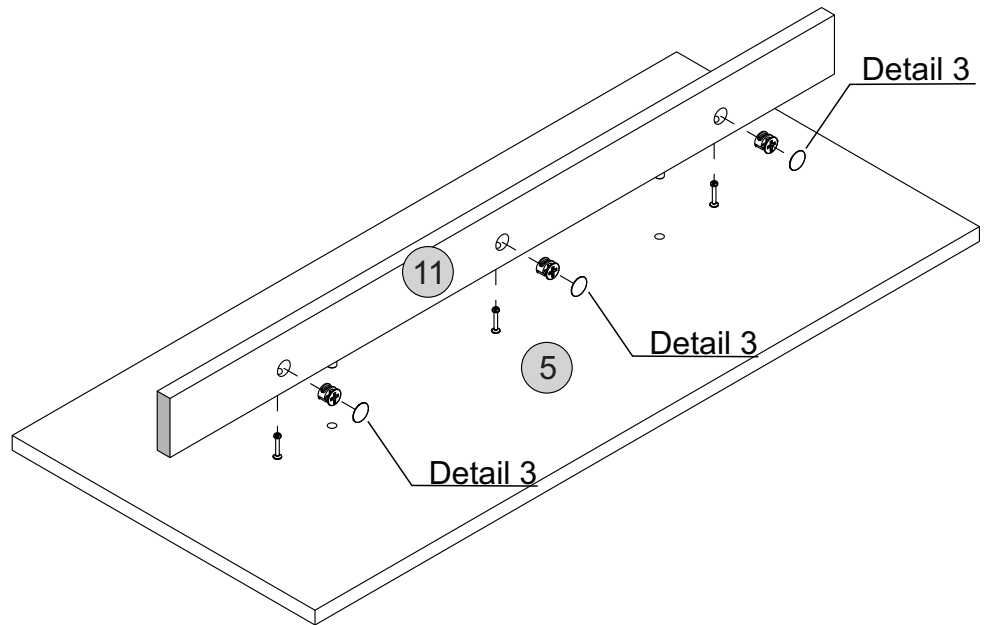

# STEP 10


## PARTS REQUIRED

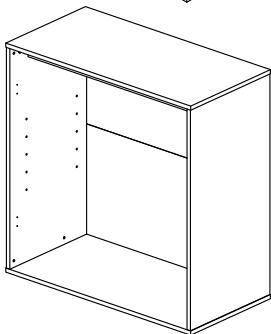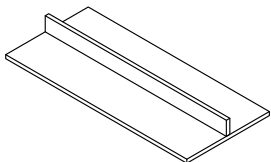

## HARDWARE REQUIRED

Q  04


## TOOLS REQUIRED

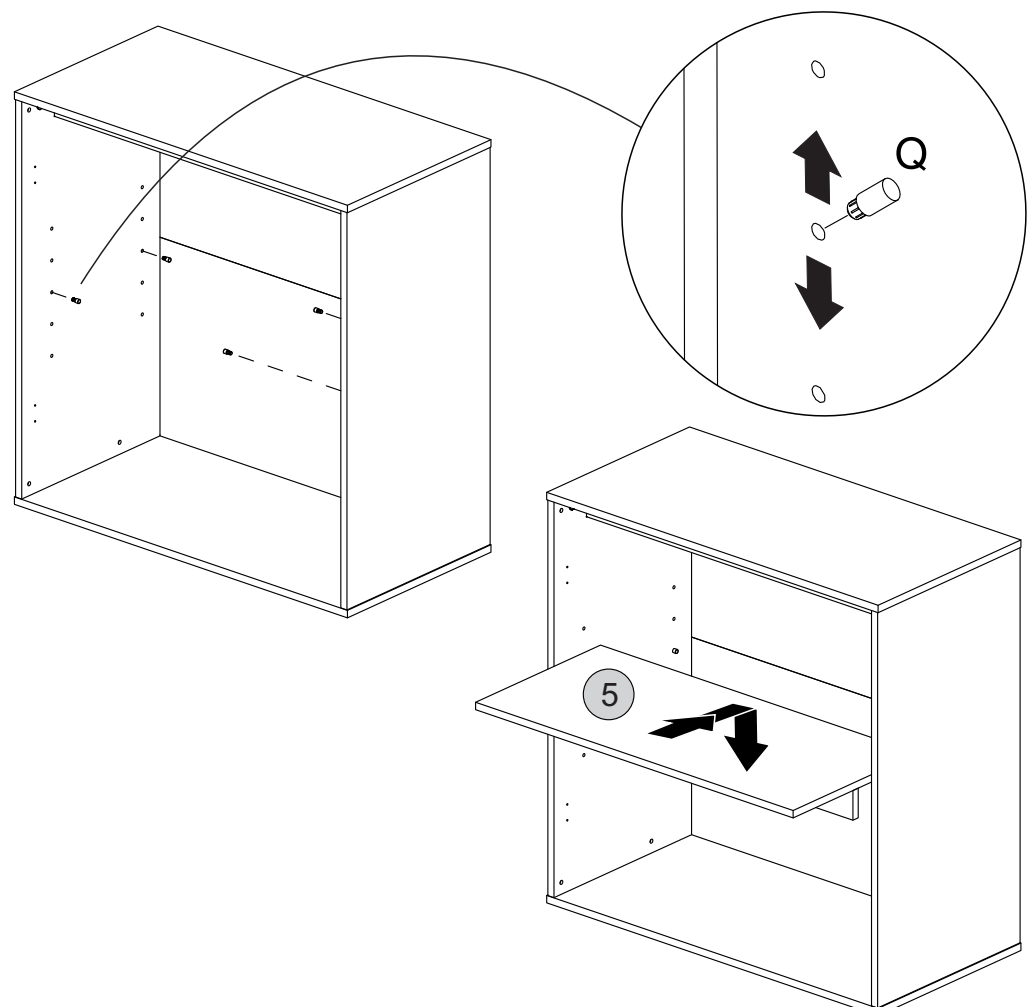


# STEP 11

SEC/SH/06/22/AY1







## PARTS REQUIRED

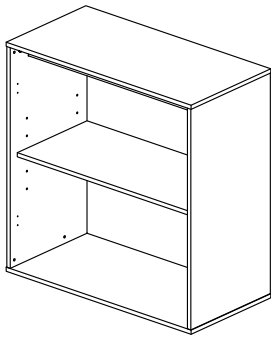

## HARDWARE REQUIRED



## TOOLS REQUIRED

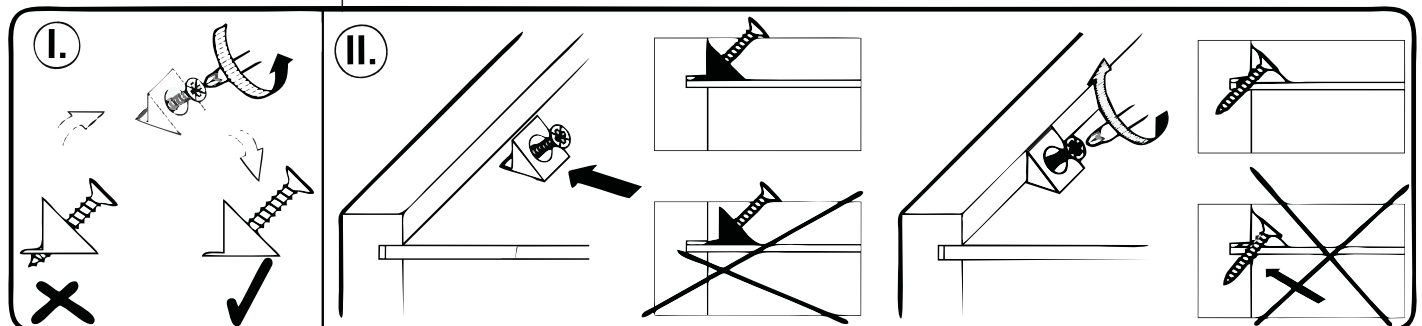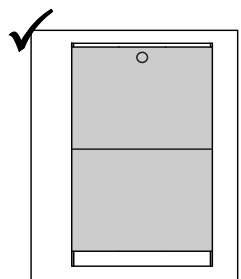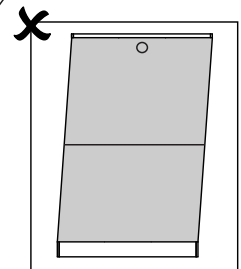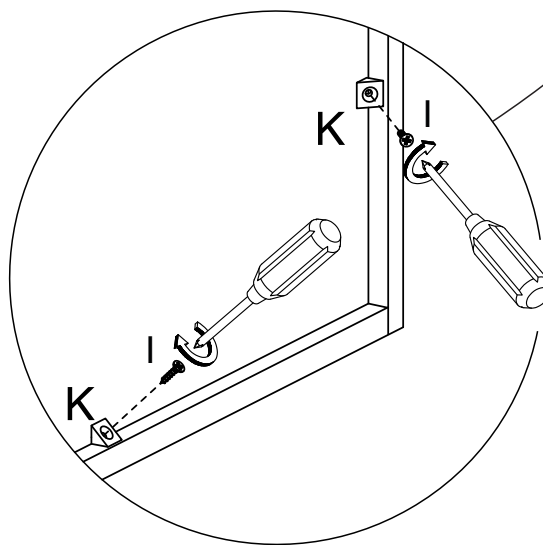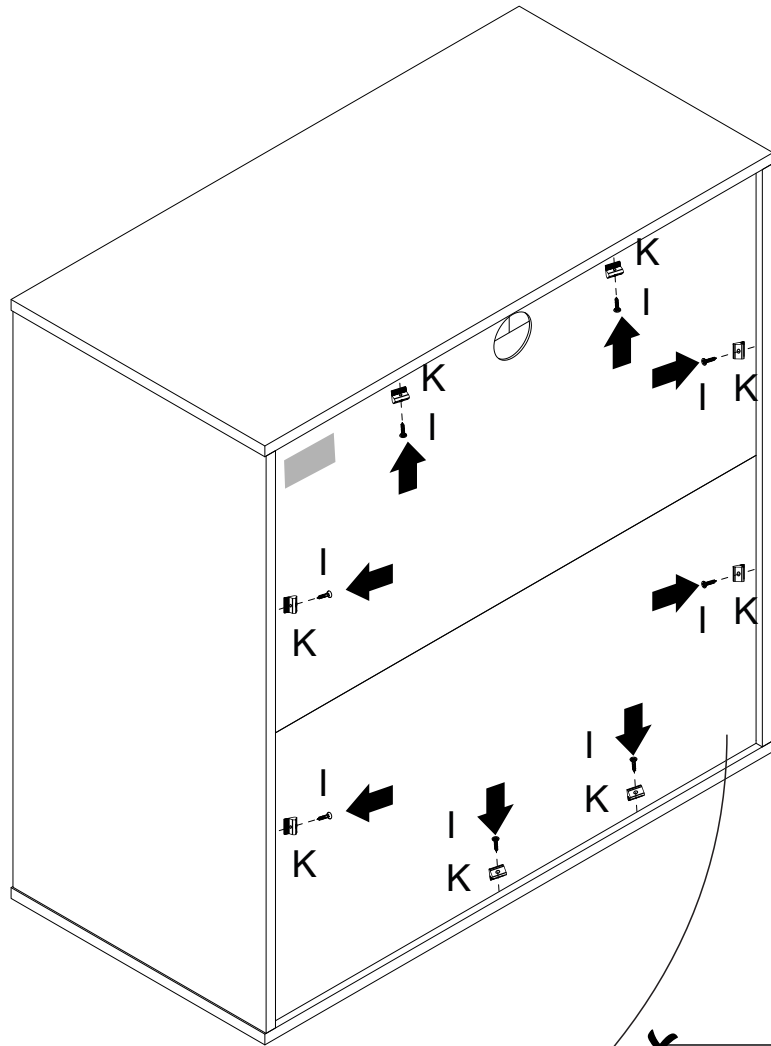

## STEP 12

### PARTS REQUIRED

8 - DOOR FRAME x2


9 - GLASS PANEL x2

### HARDWARE REQUIRED


D  20

N  20

### TOOLS REQUIRED



Carefully remove the safety tape securing the Glass Panel (9). Attach the Glass Panel (9) to the Door Frame (8) using Glass Retainers (N) and Screws (D). Tighten with a Phillips screwdriver.

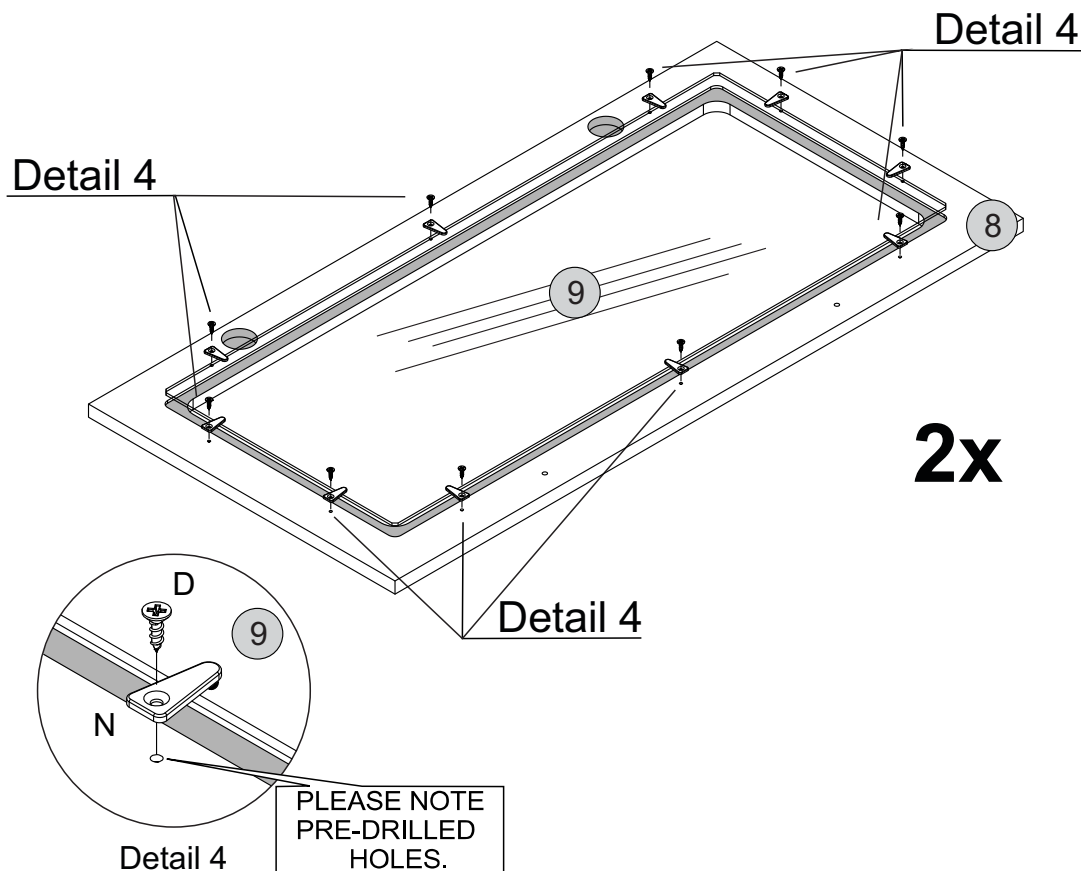

## STEP 13

### PARTS REQUIRED



8 - DOOR FRAME x2

### HARDWARE REQUIRED

F  08

M  04


### TOOLS REQUIRED

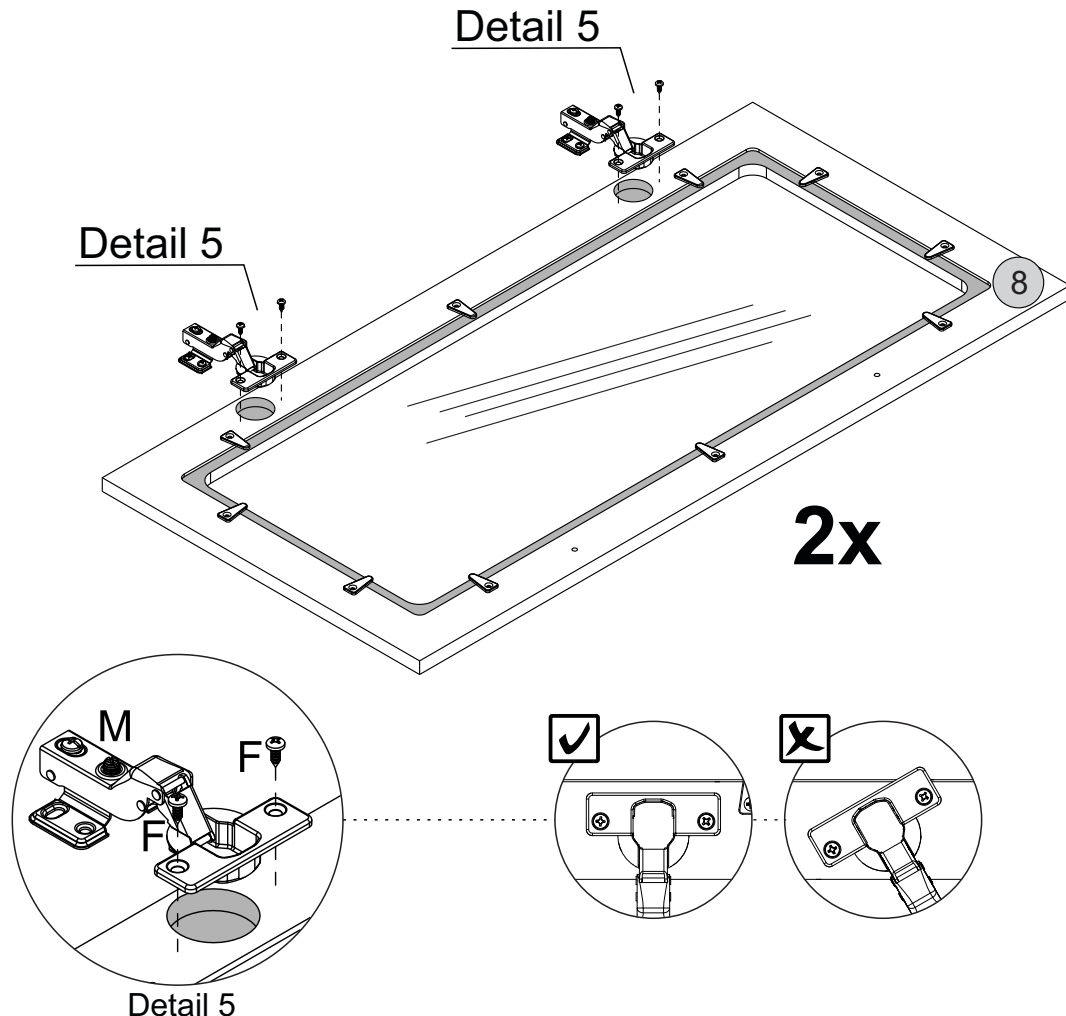

# STEP 14

## PARTS REQUIRED



8 - DOOR FRAME x1

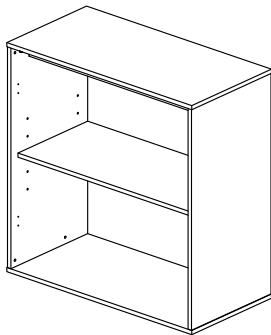

## HARDWARE REQUIRED

F  04


## TOOLS REQUIRED

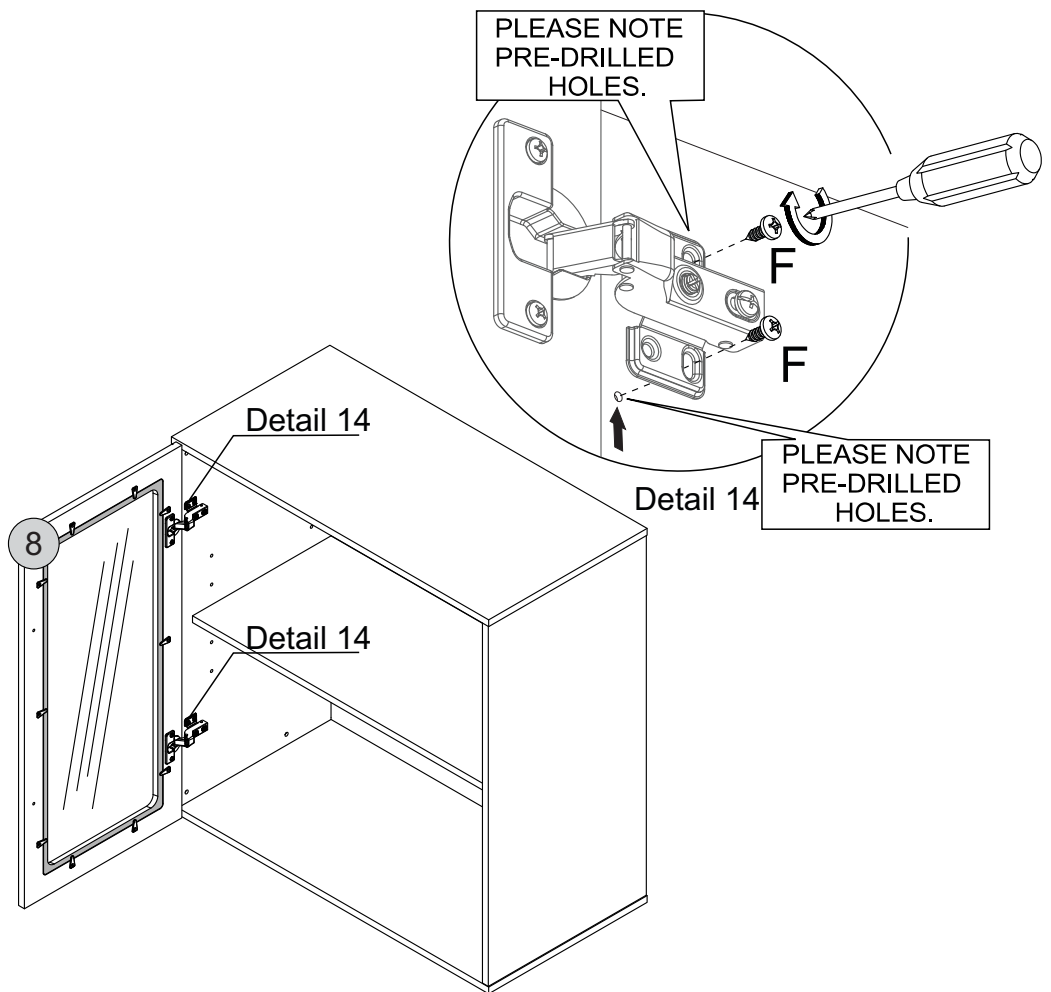

# STEP 15

## PARTS REQUIRED



8 - DOOR FRAME x1

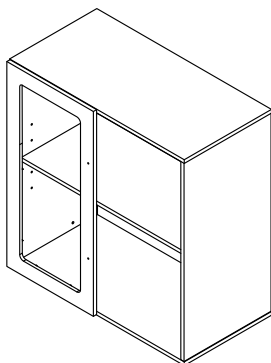

## HARDWARE REQUIRED


F  04

## TOOLS REQUIRED

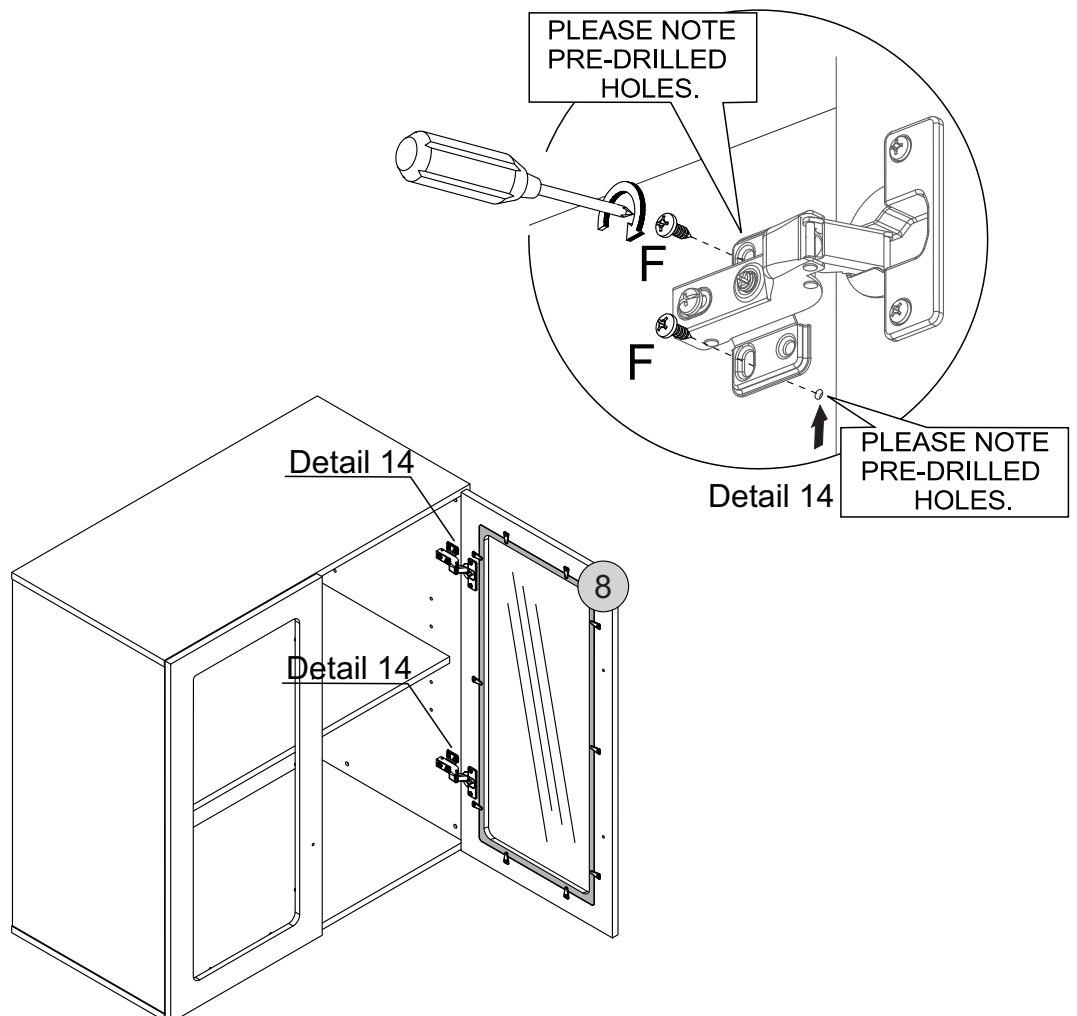


# STEP 16



## PARTS REQUIRED

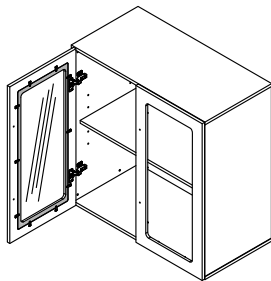

## HARDWARE REQUIRED




## TOOLS REQUIRED

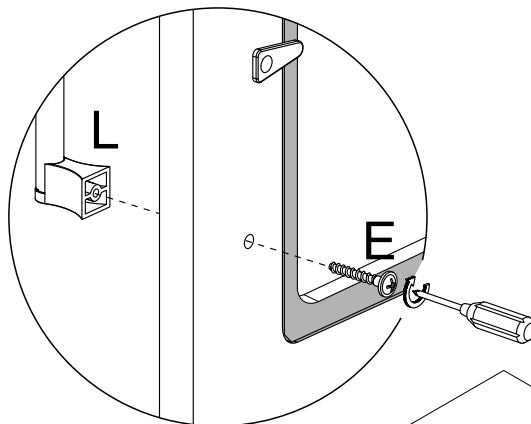


Detail 6

If the handle is disassembled,  
assemble the parts  
as shown below

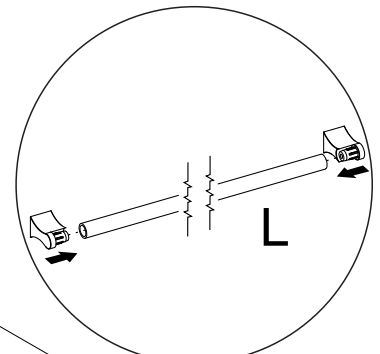


Detail 20

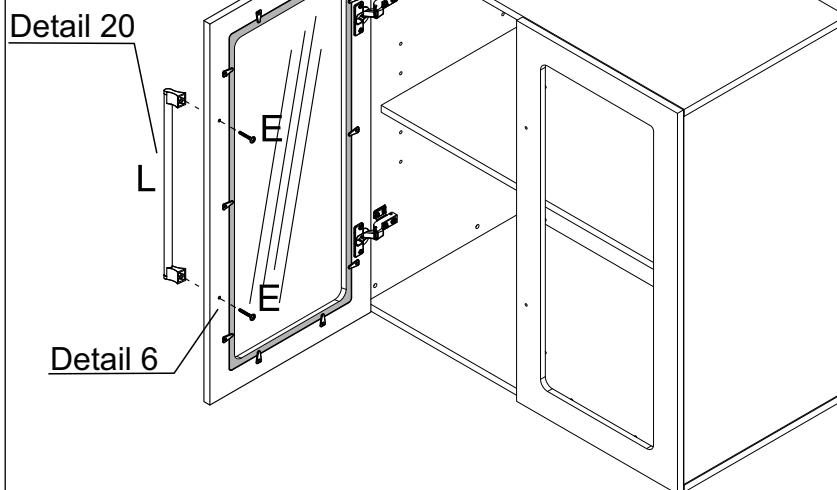


# STEP 17


## PARTS REQUIRED

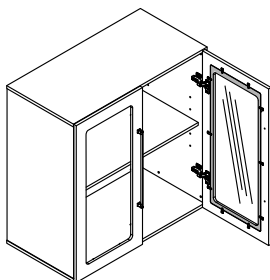


## HARDWARE REQUIRED




## TOOLS REQUIRED




If the handle is disassembled,  
assemble the parts  
as shown below

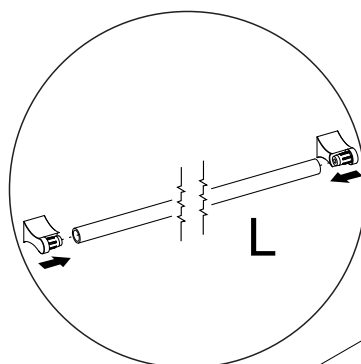


Detail 20

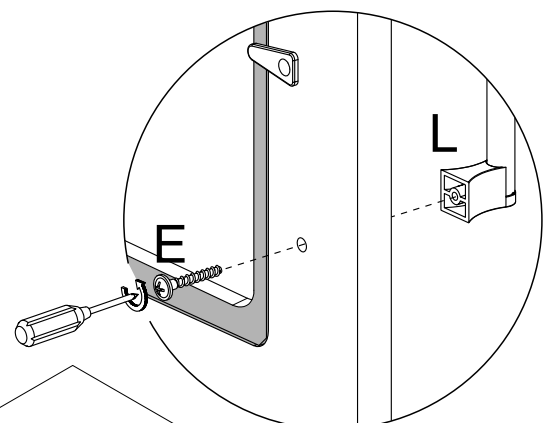


Detail 6

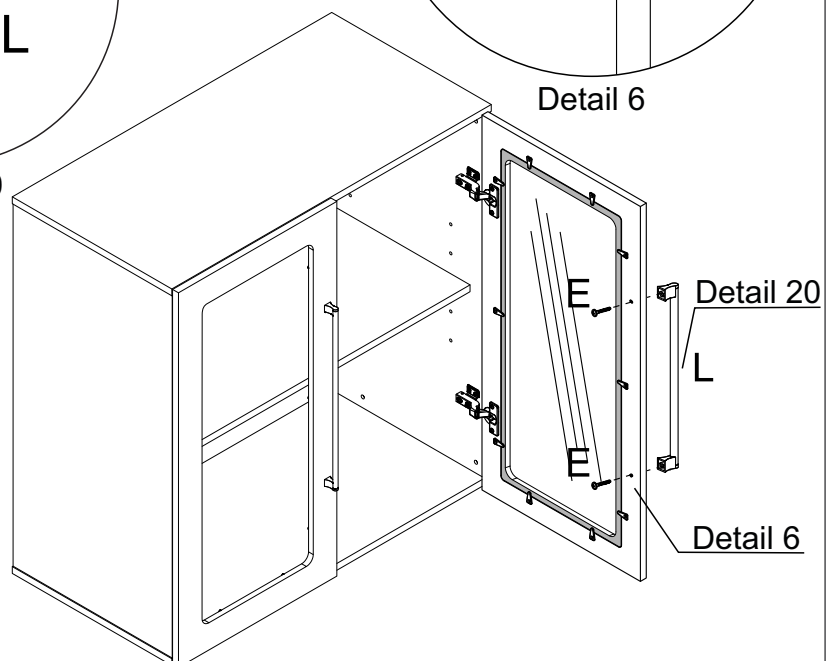


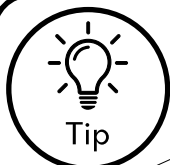


## Adjusting The Cabinet Doors

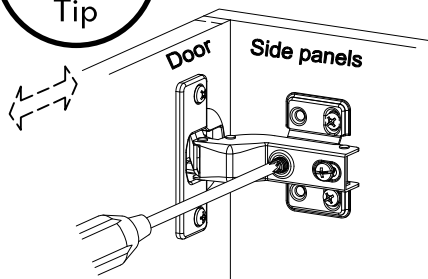

Adjust horizontal width  
with this screw

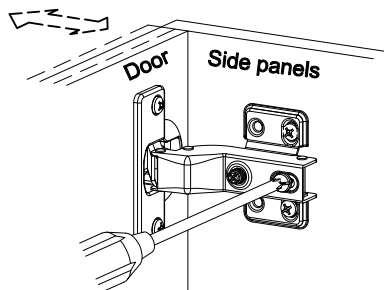


Adjust depth position  
by loosening the hinge  
arm mounting screw

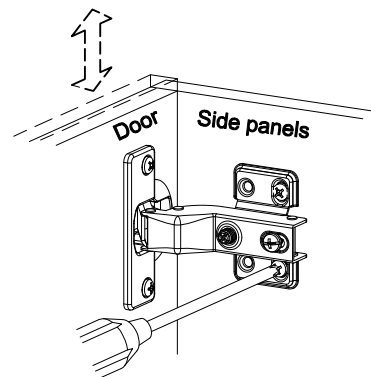

Adjust vertical height  
via the screws in the  
mounting plate

## STEP 18

### PARTS REQUIRED

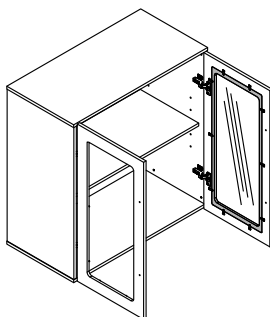






### HARDWARE REQUIRED

F



08

### TOOLS REQUIRED

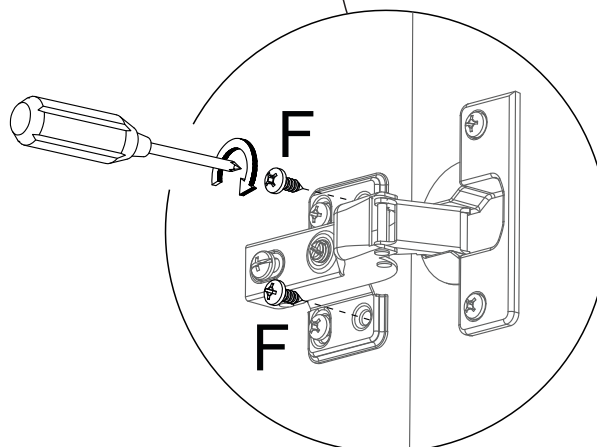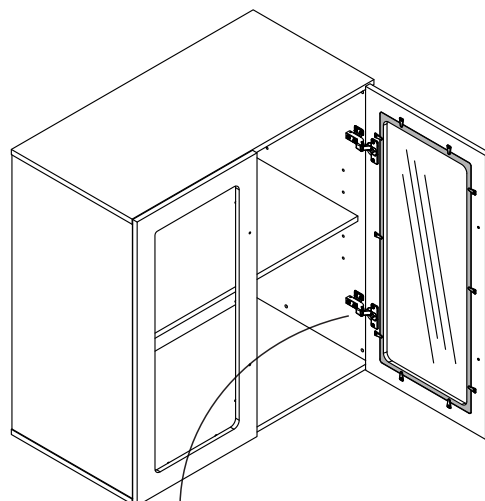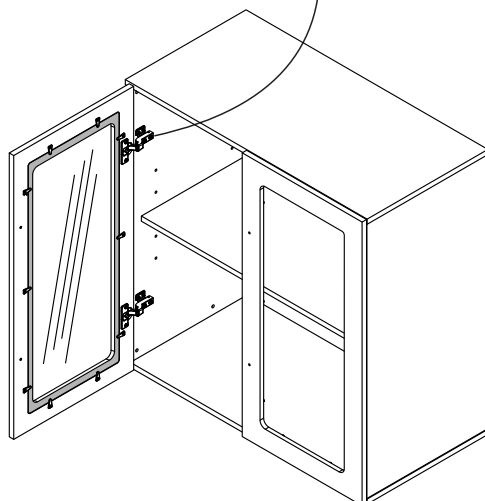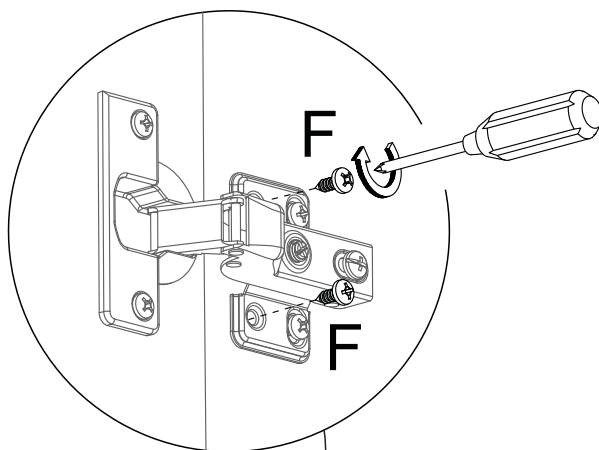

# STEP 19


PARTS REQUIRED

7 - FOOT x5


HARDWARE REQUIRED

H 05

TOOLS REQUIRED




If you are not using your new cabinet on top of other Modular Bali Cabinet, you can attach Feet (7) using Screw (H) and a Phillips screwdriver.

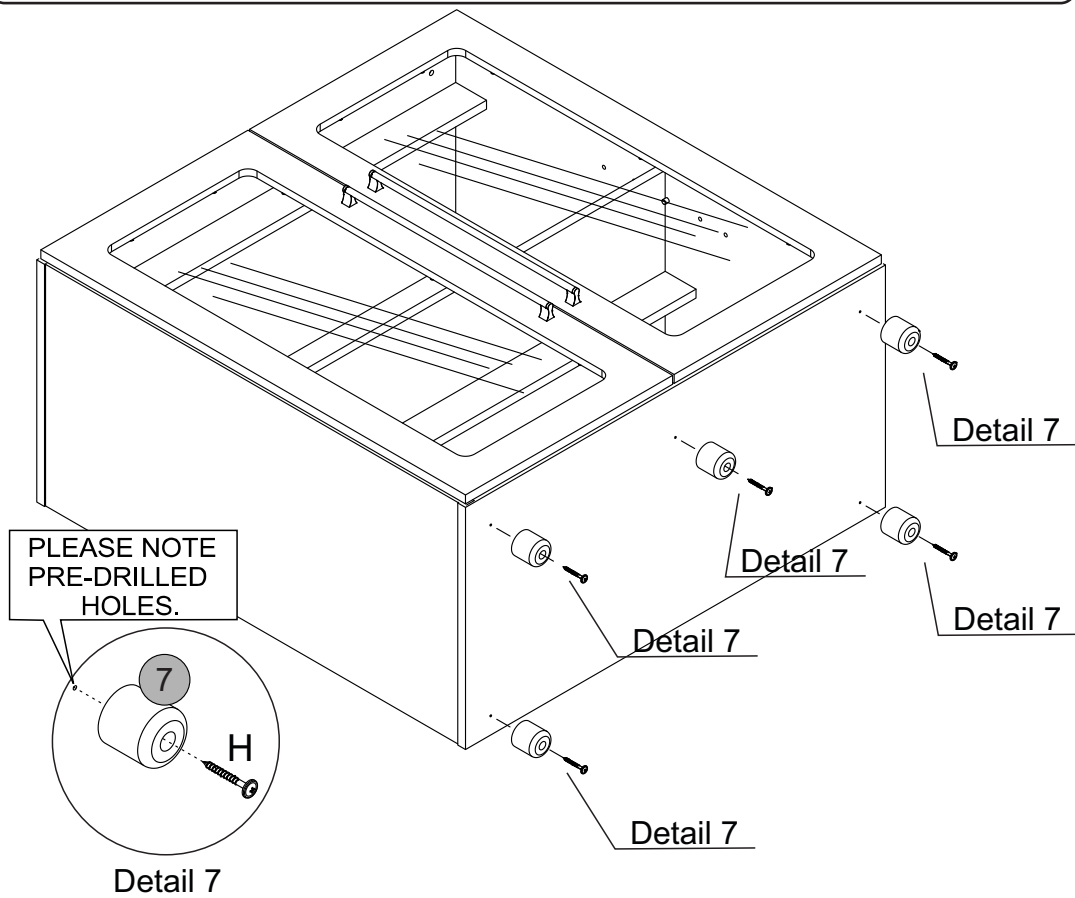


## Modular Assembly Options

### STEP 20

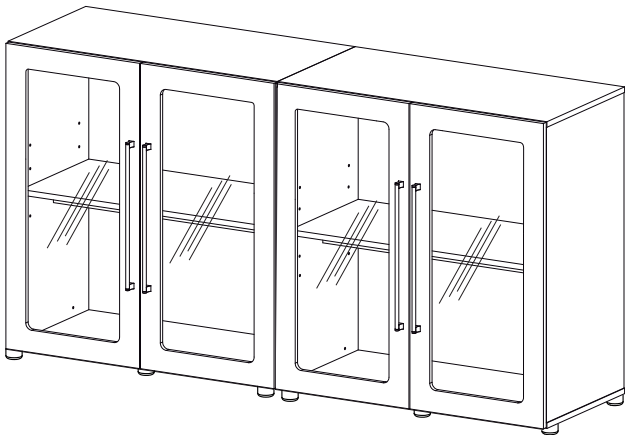

### STEP 21

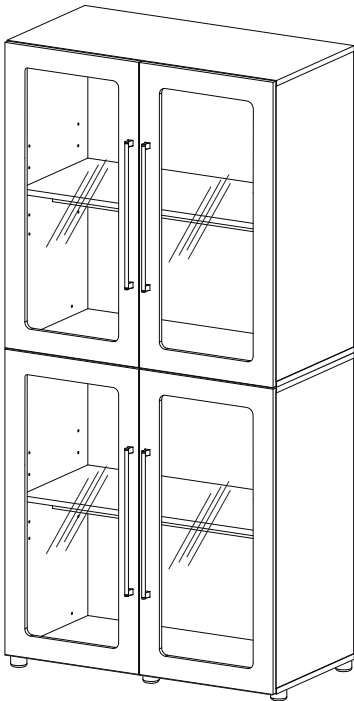


## STEP 20

### PARTS REQUIRED



### HARDWARE REQUIRED

G  04


### TOOLS REQUIRED



If attaching cabinets side by side, use Screws (G) and a Phillips screwdriver to join them through the side panels. The holes are predrilled.

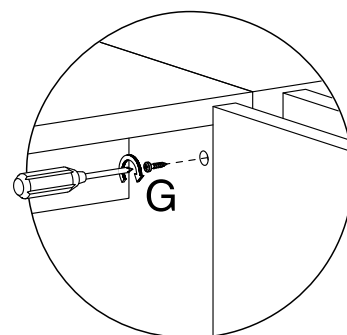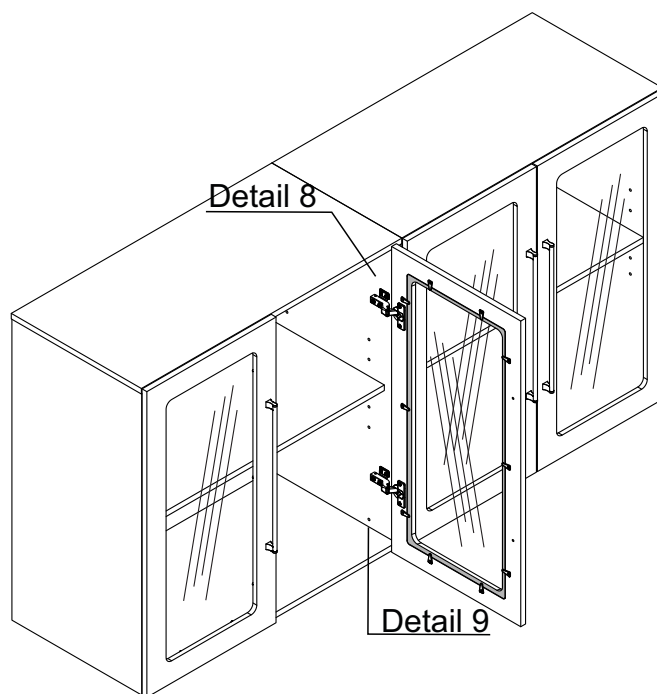

Detail 8

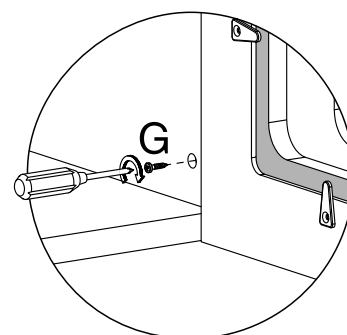

Detail 9


## STEP 21

### PARTS REQUIRED



### HARDWARE REQUIRED

G  04

### TOOLS REQUIRED



If assembling your cabinets on top of each other, use Screws (G) and a Phillips screwdriver to join them through the top and bottom panels. The holes are predrilled.

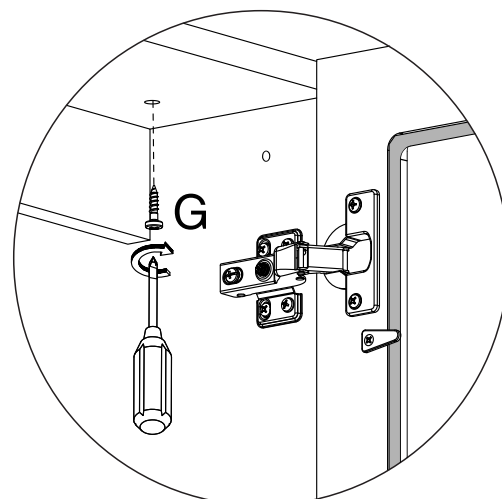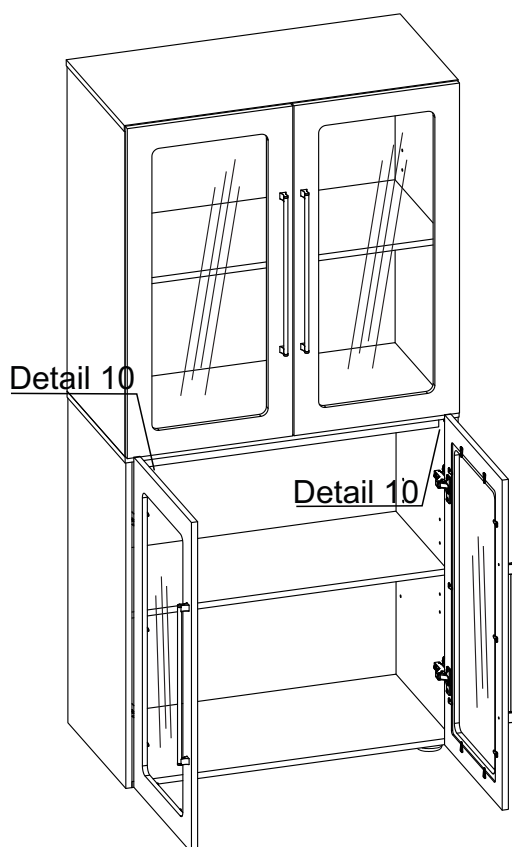

Detail 10


# STEP 22

## PARTS REQUIRED

## HARDWARE REQUIRED


J  Stiker 08

## TOOLS REQUIRED

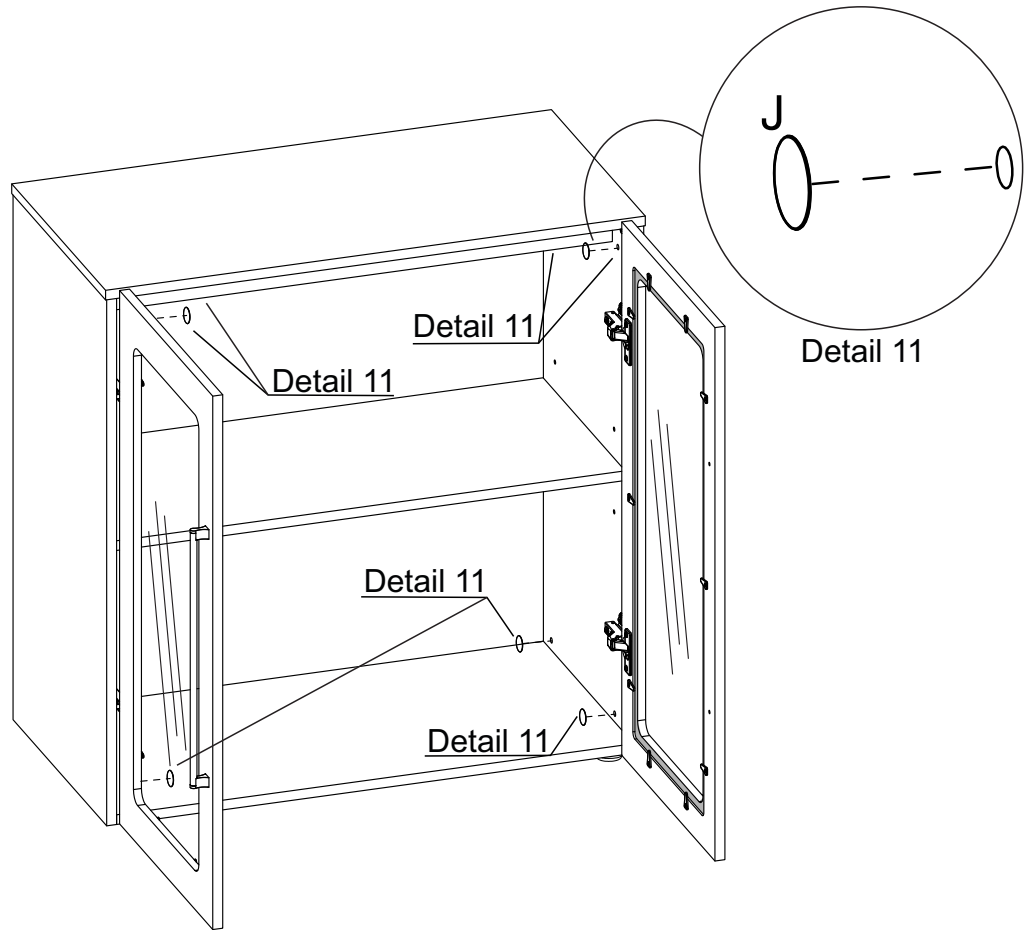



# STEP 23

## PARTS REQUIRED

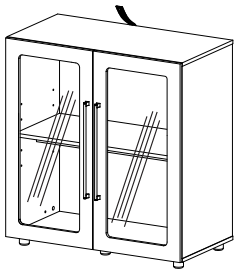

## HARDWARE REQUIRED

## TOOLS REQUIRED

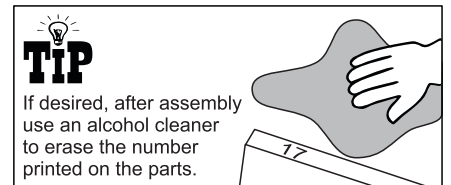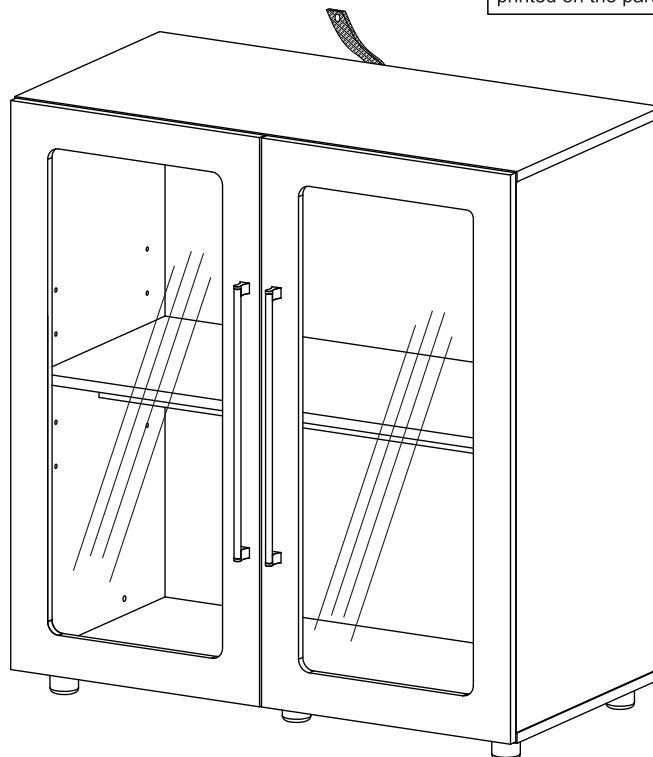




# WARNING

**Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.**

Wall fixings are not supplied with this product as different wall materials require different types of fixing devices.

Please make sure you use fixings suitable for the walls in your home.

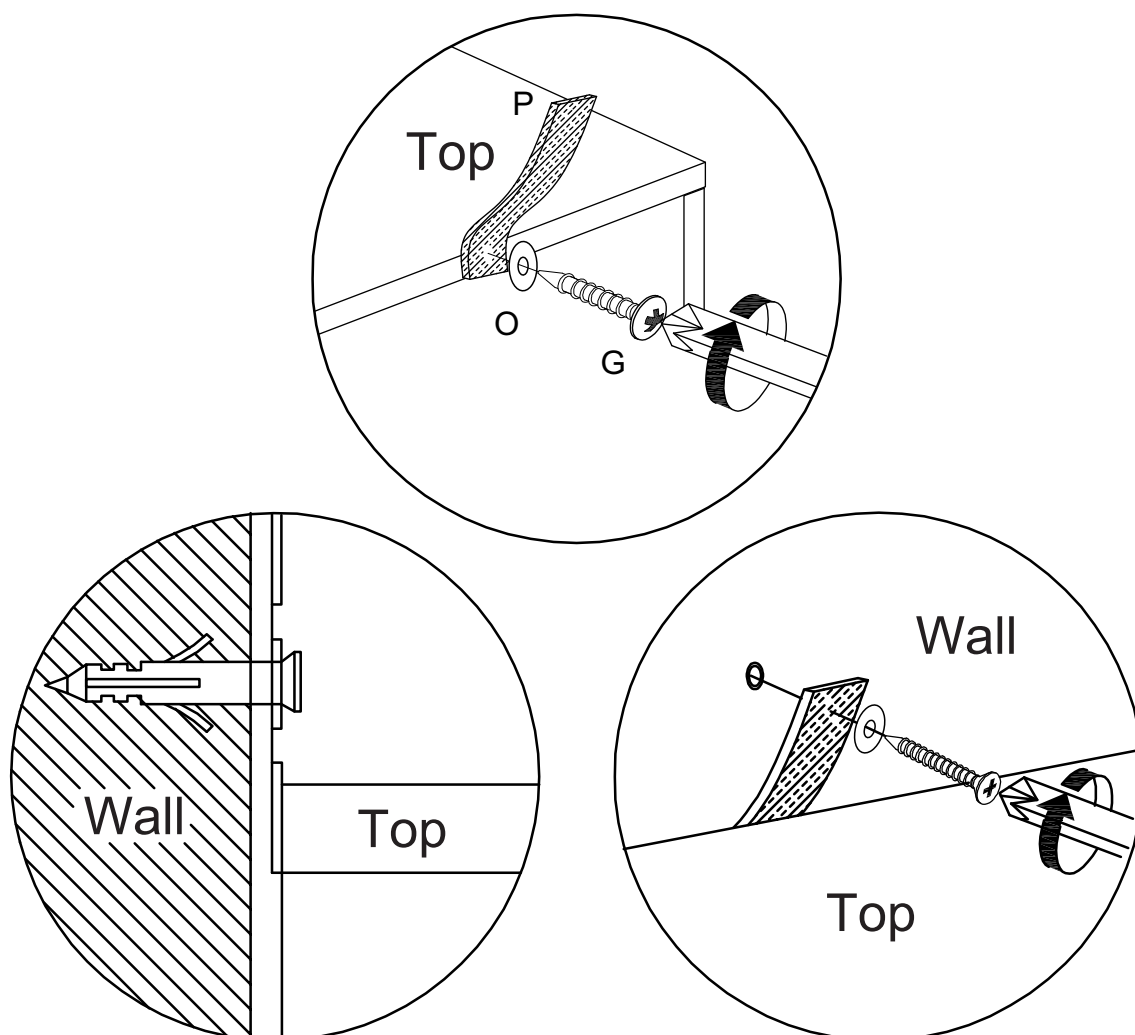
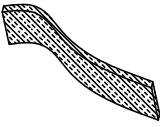
|                                                                                                                |                                                                                                               |                                                                                                                                       |
|----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| <b>O</b><br><br>Washer (2x) | <b>P</b><br><br>Strap (1x) | <b>G</b><br><br>Pan Head Screw<br>Ø4 x 20mm (1x) |
|----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|

