



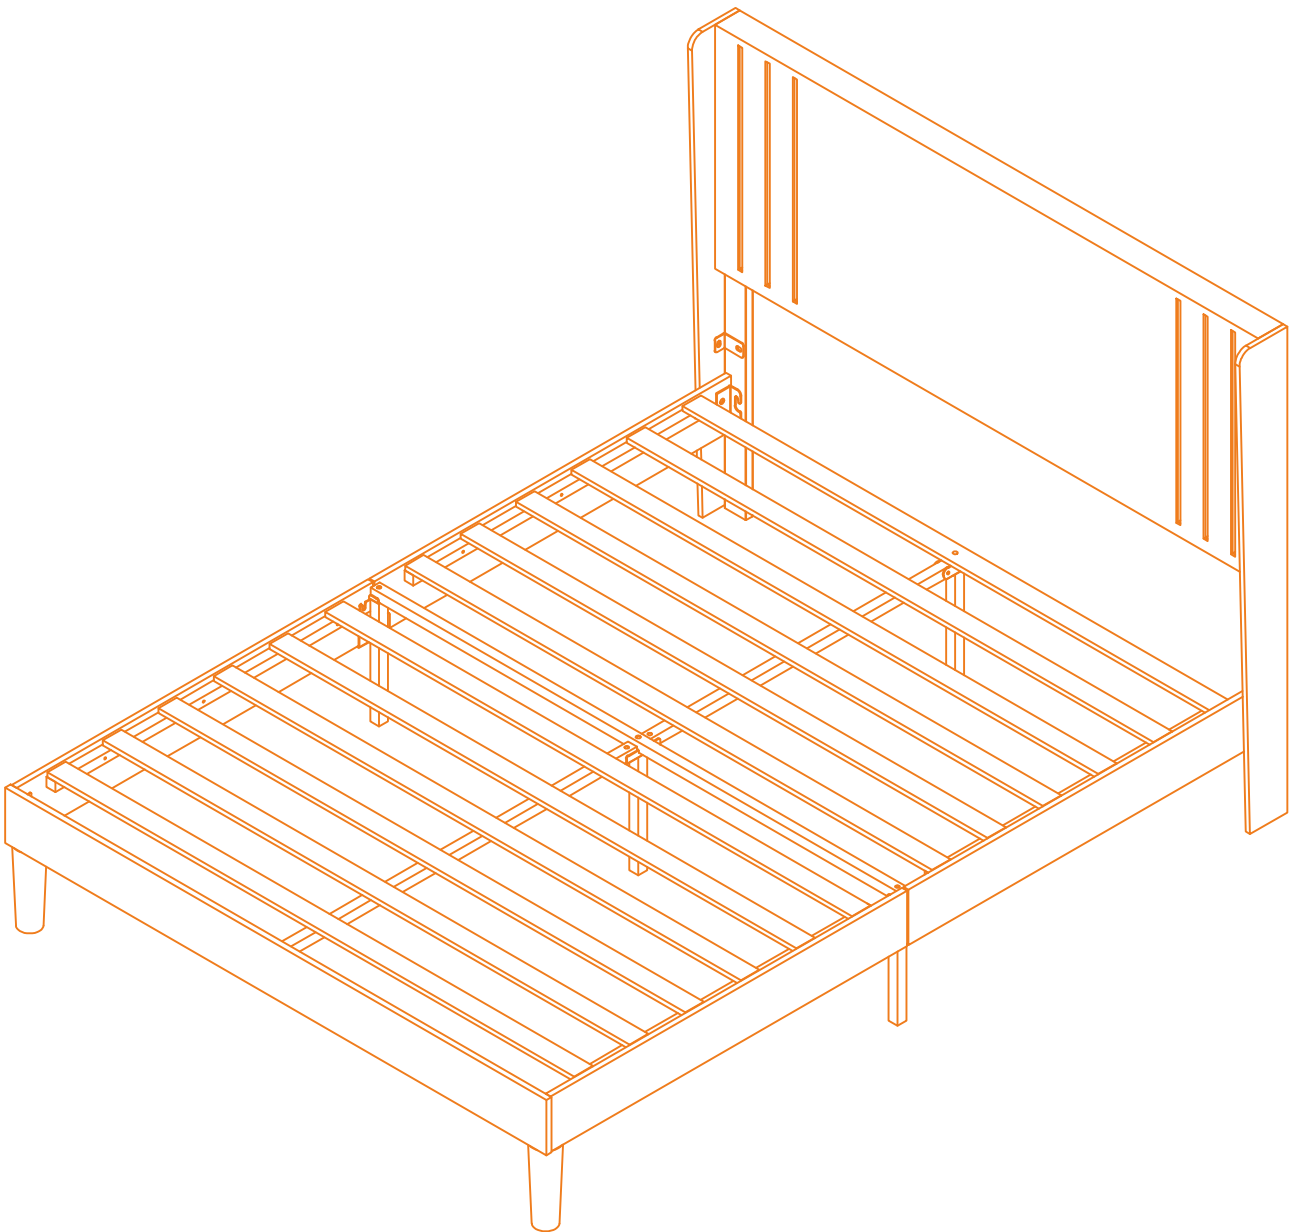


X 2

75X54 Upholstered Bed Frame
80X60 Upholstered Bed Frame

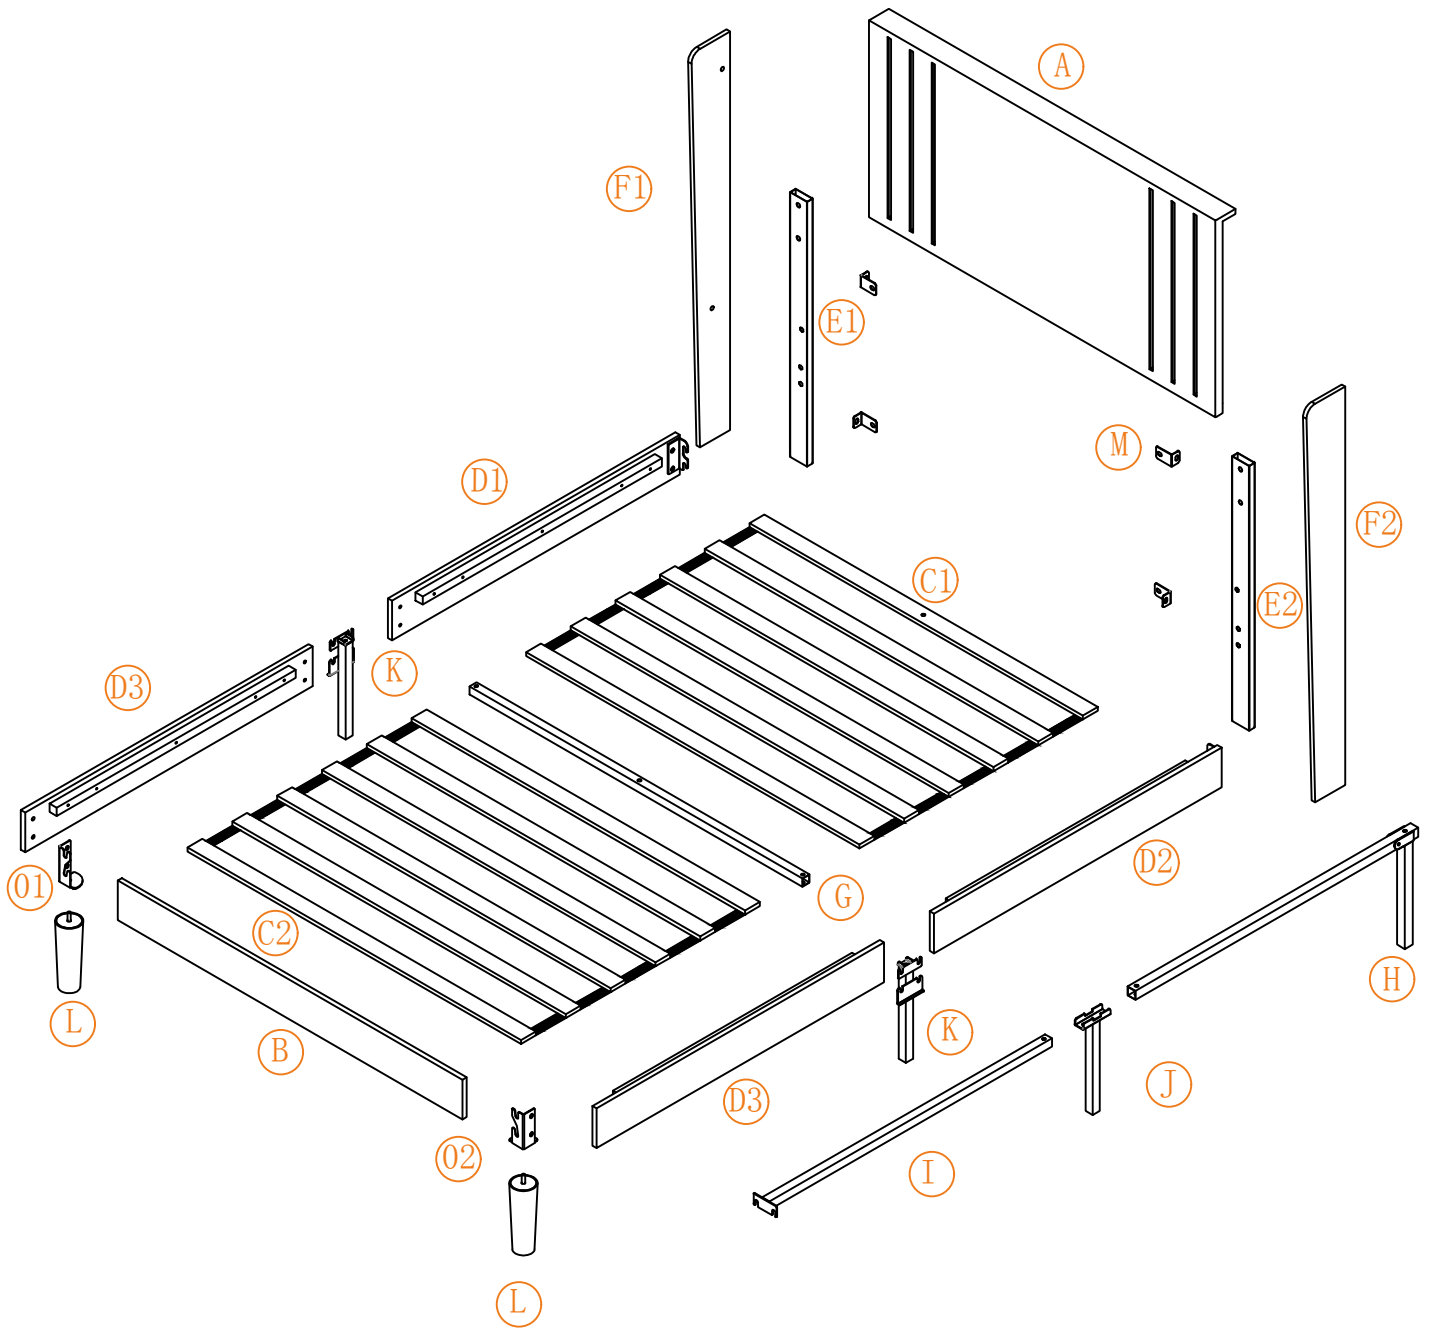





P x 1

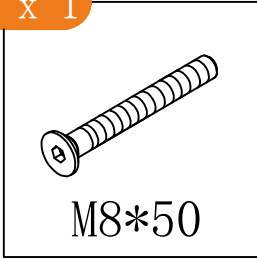


Q x 7

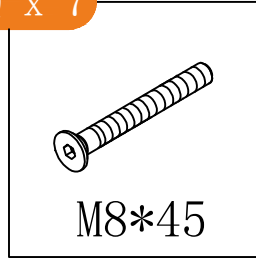


R x 2

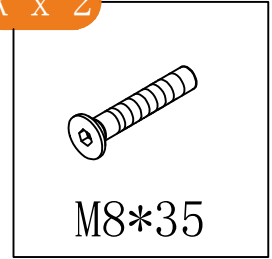

S x 4

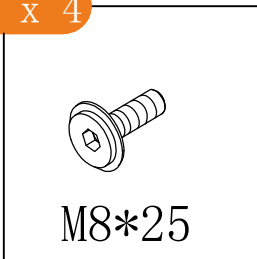


Ux16

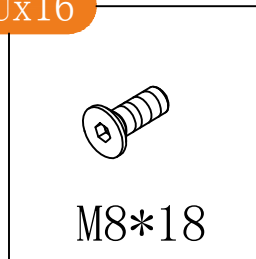


V x 4




W x 5

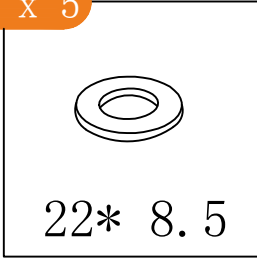


Y x 1

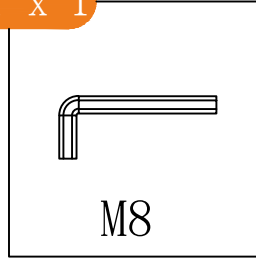


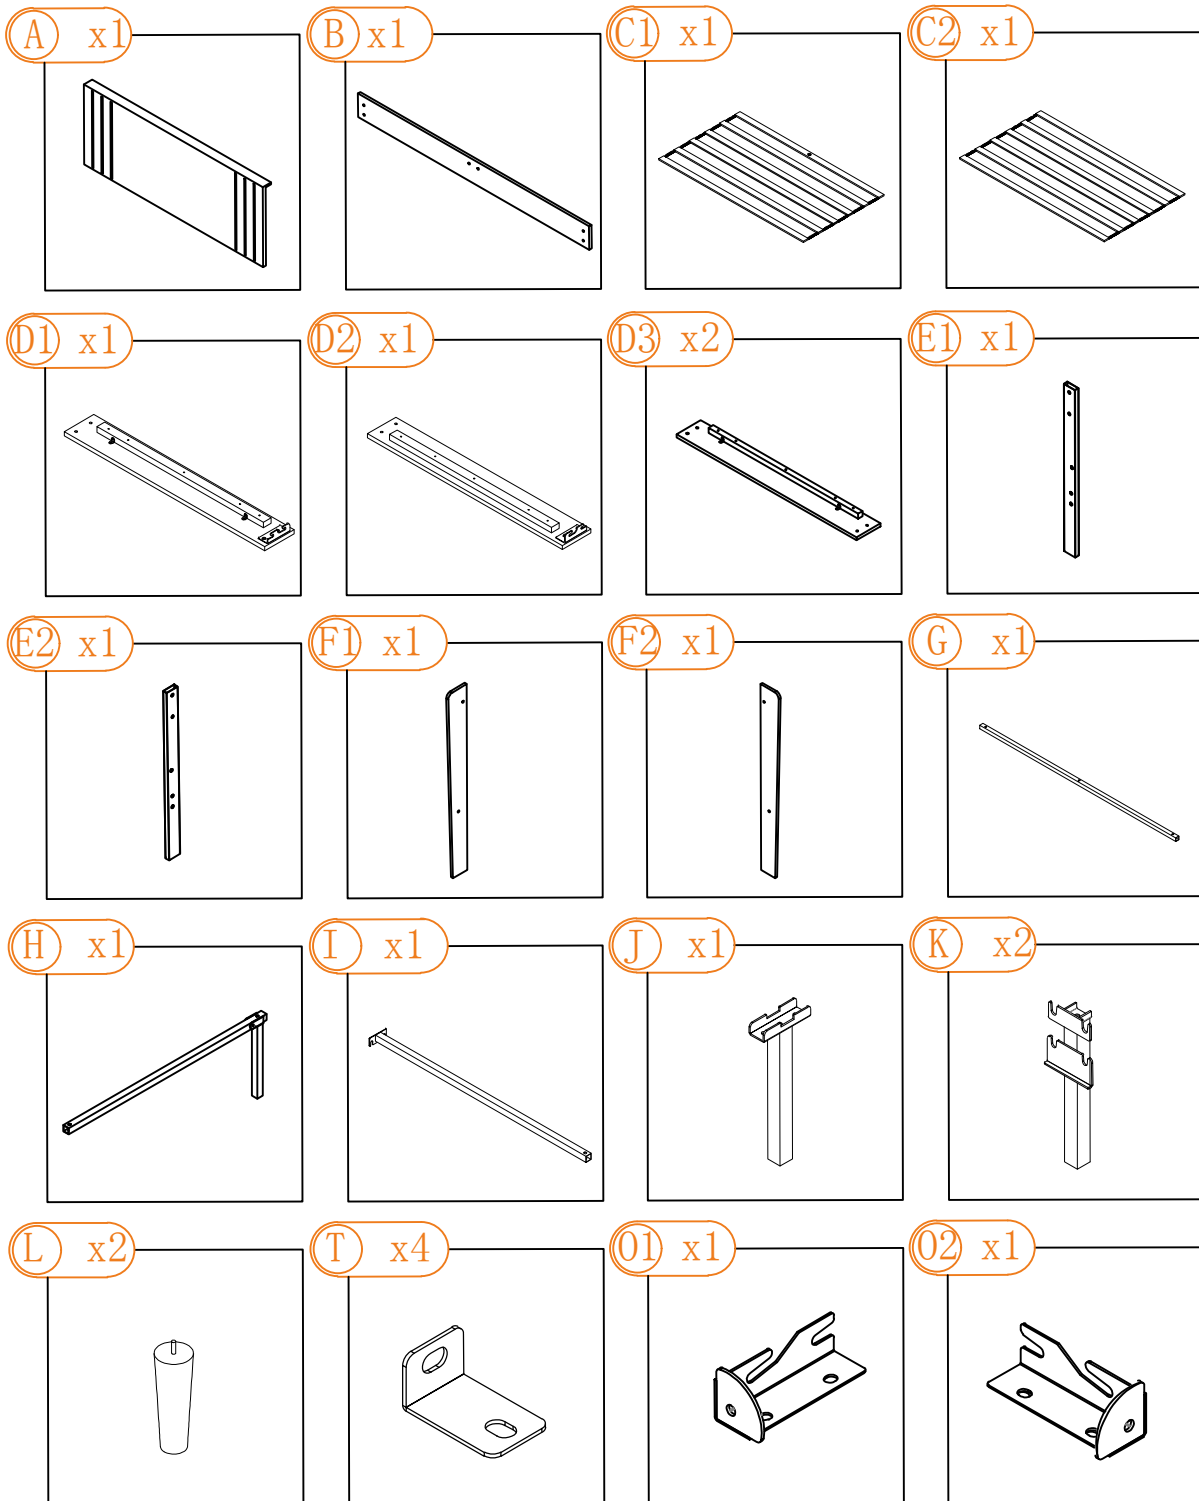

1






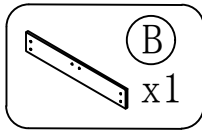


pre-installed screws.





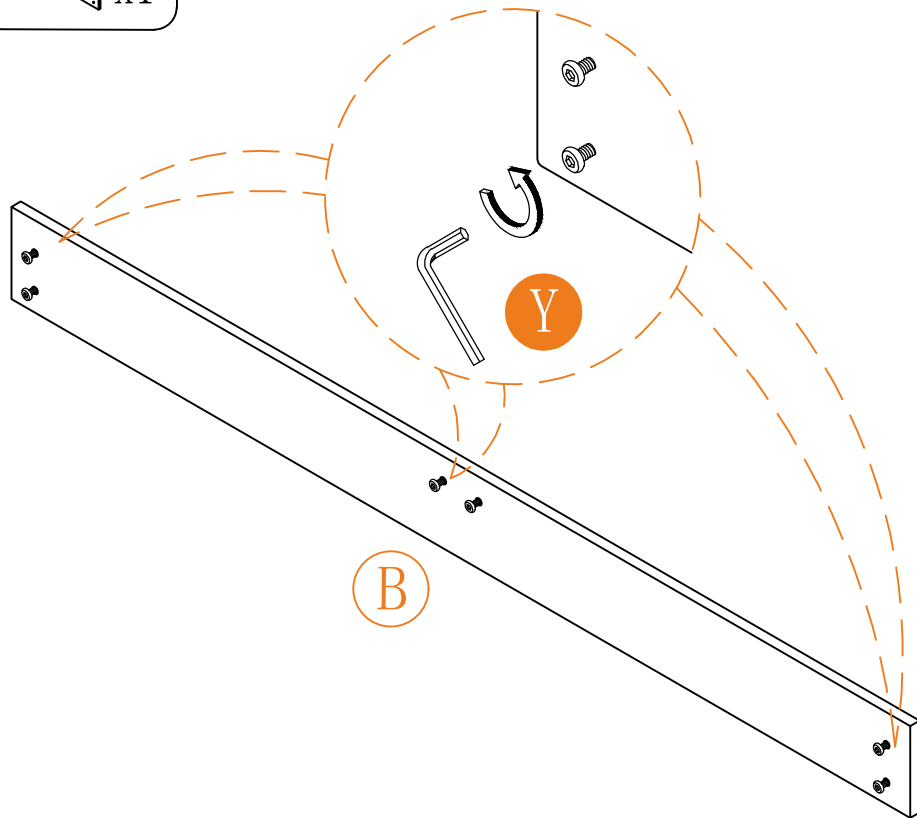


Loosen but don't remove the pre-installed screws.


2

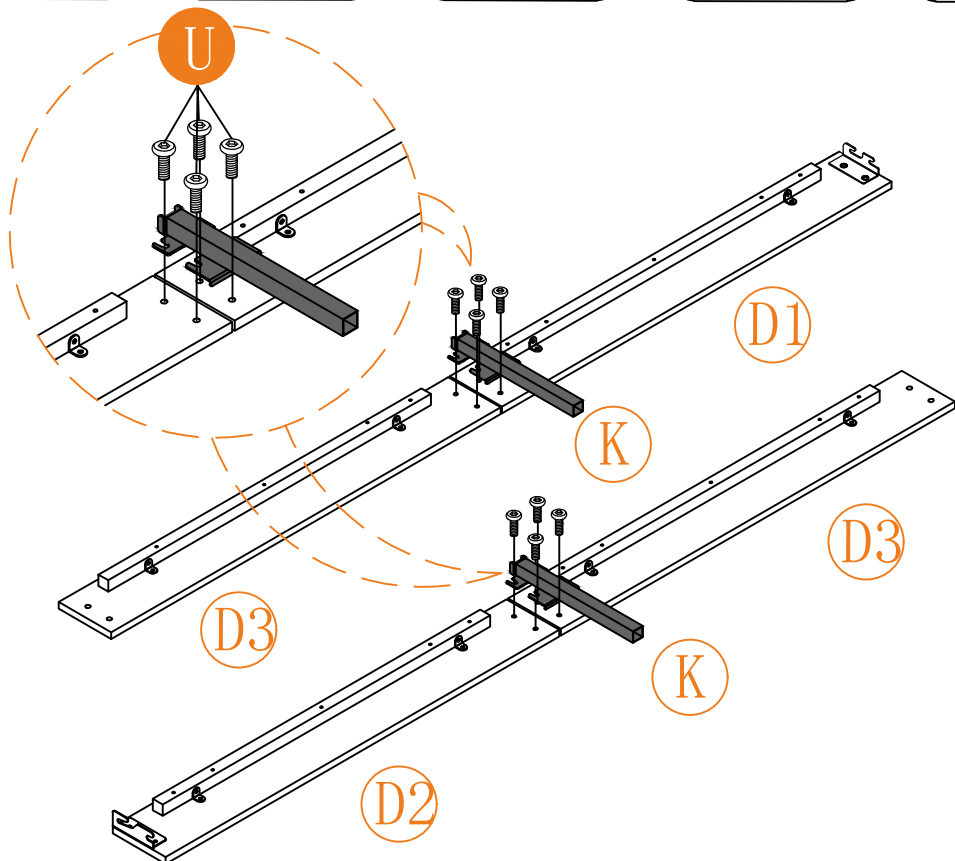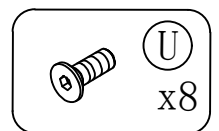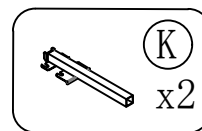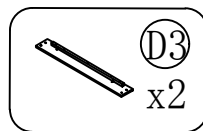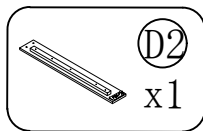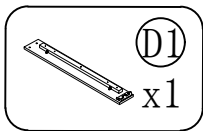






3

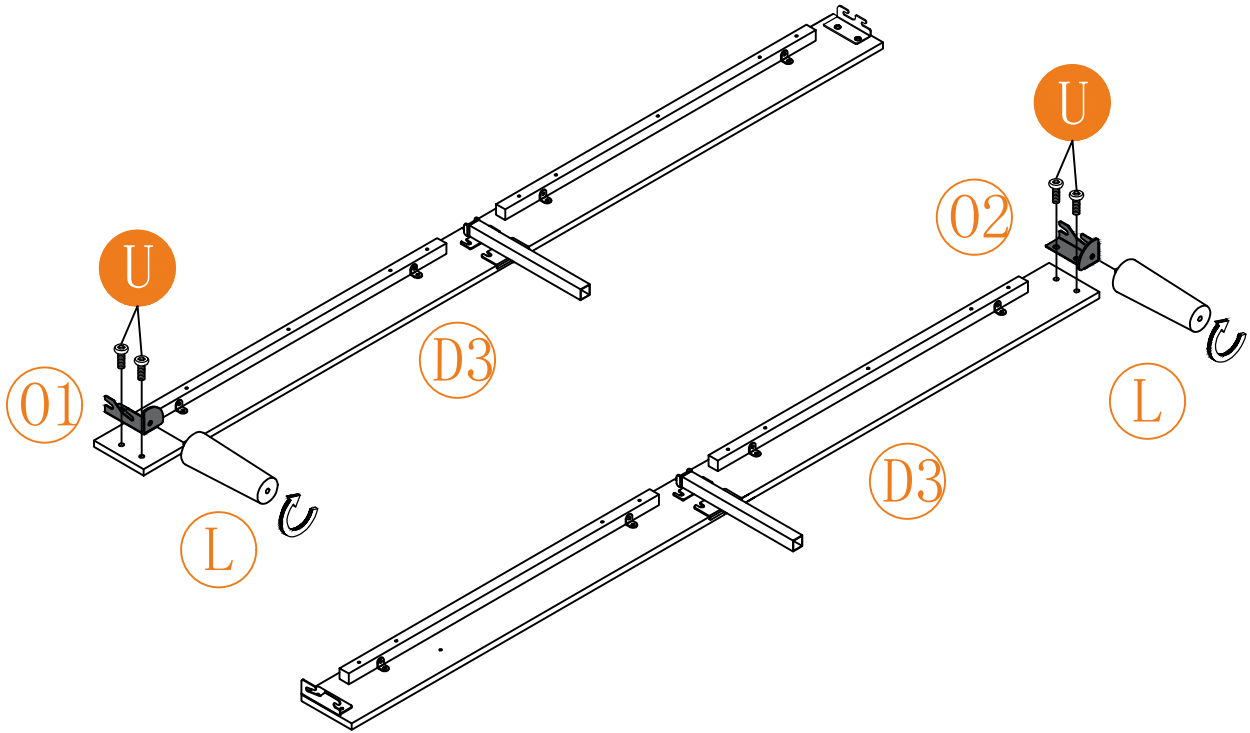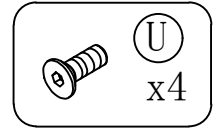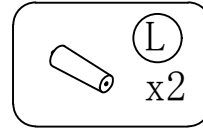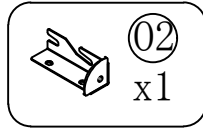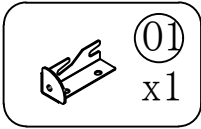



4

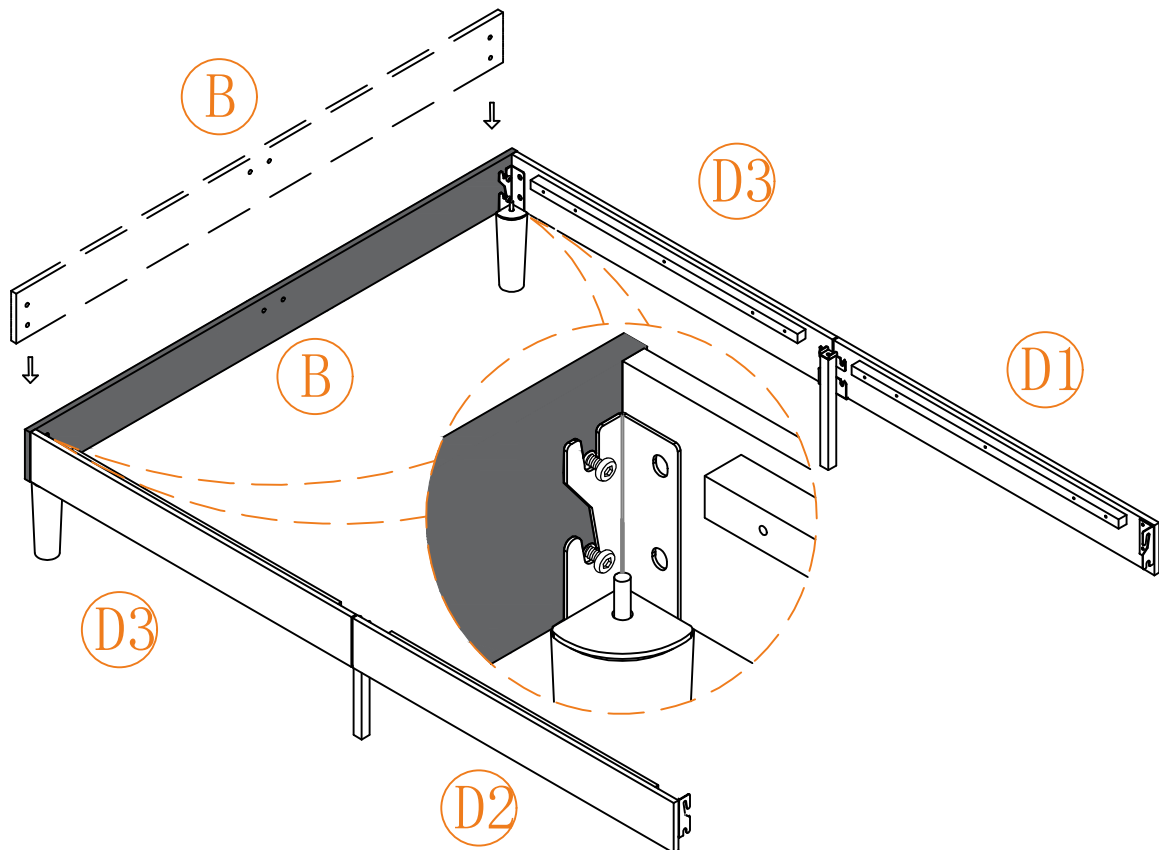





5

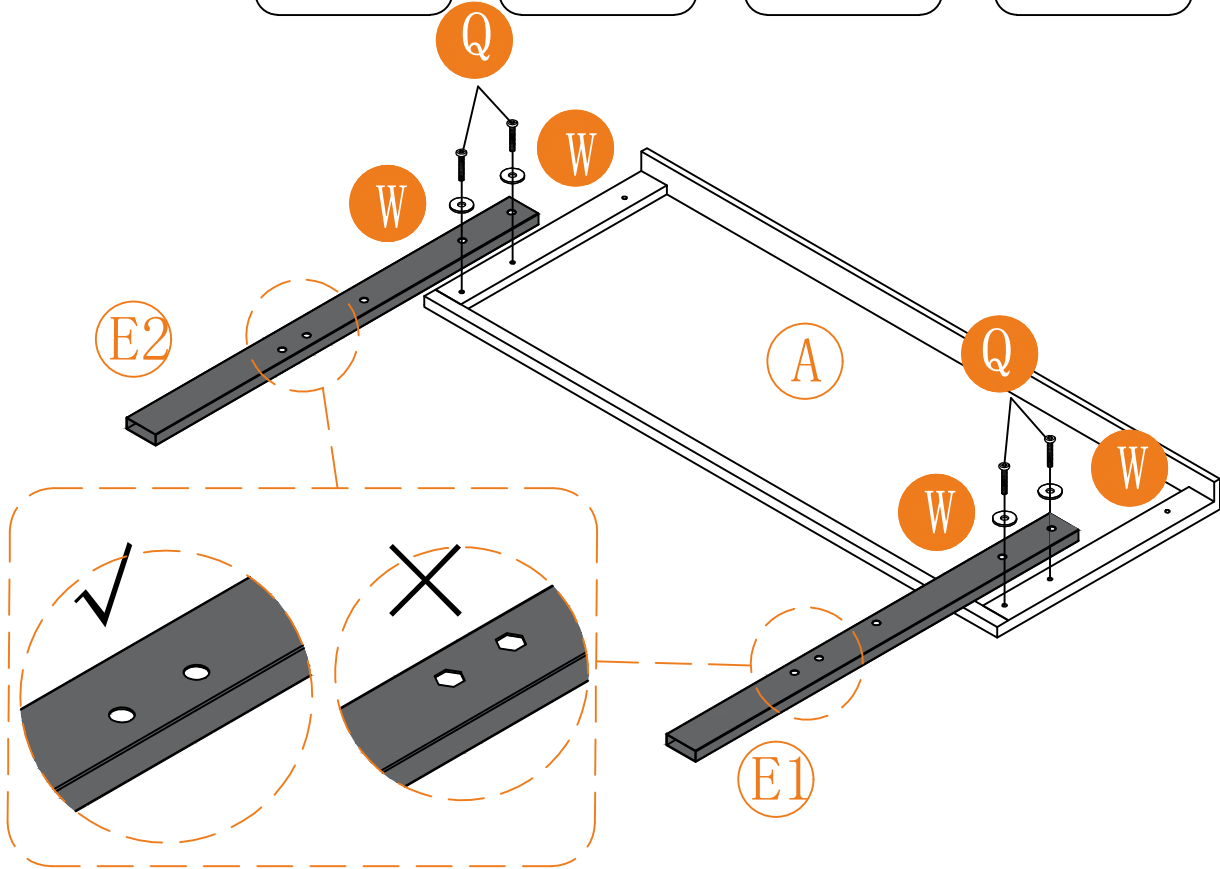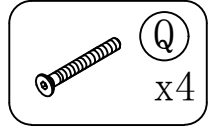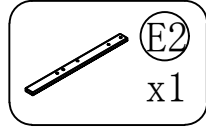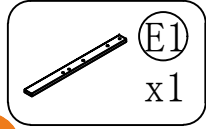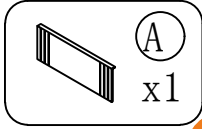





6

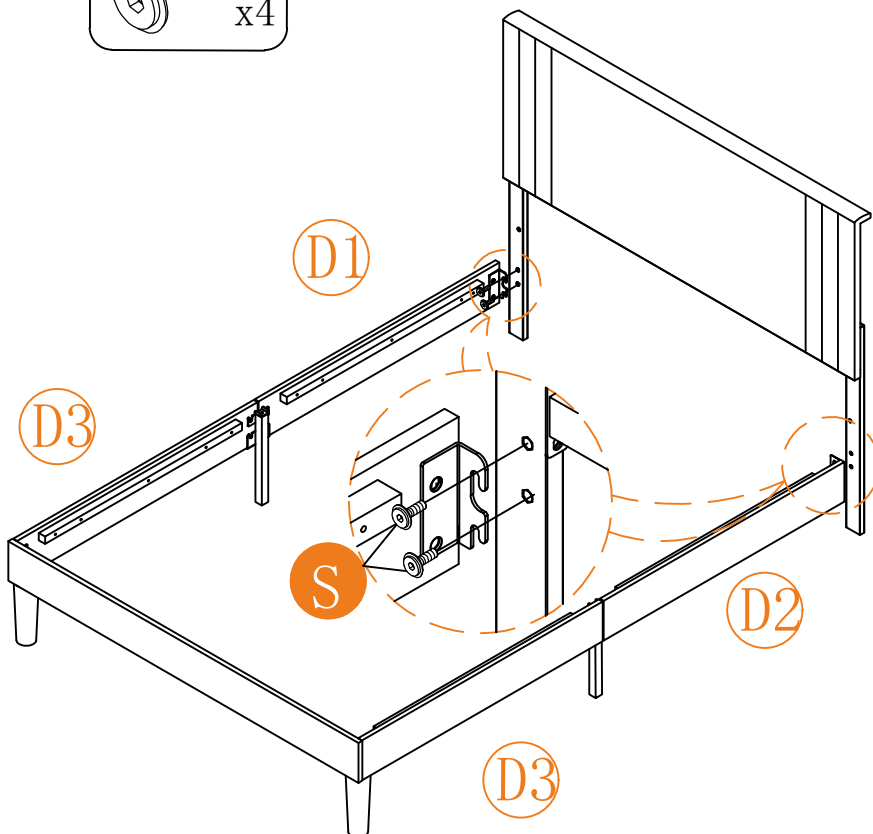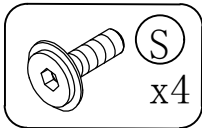


7



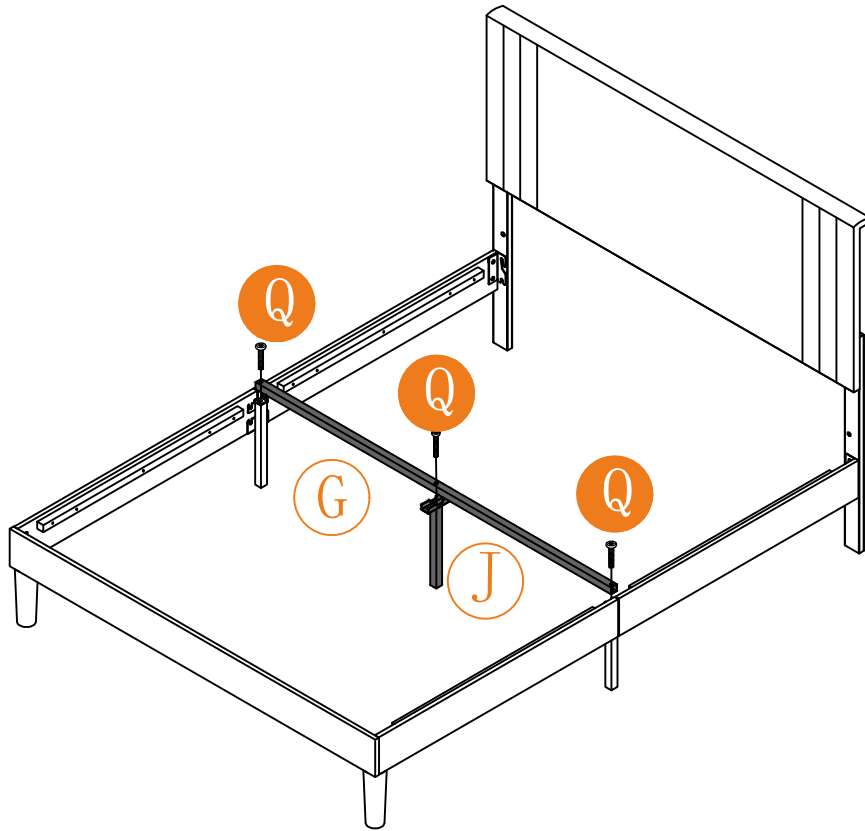
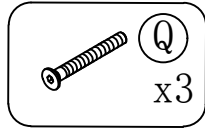
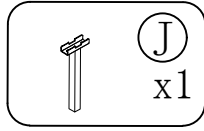
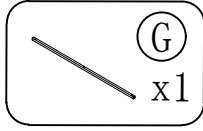


8

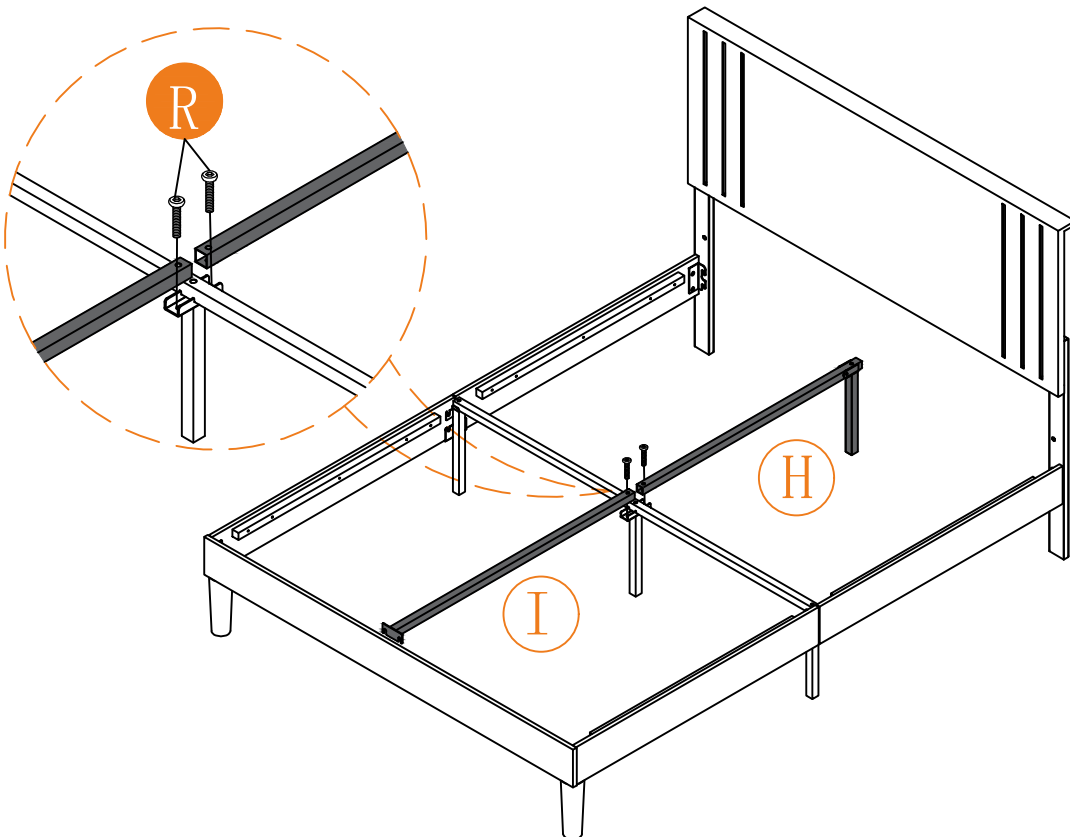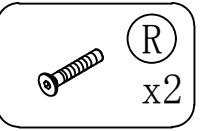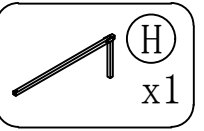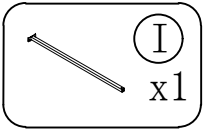

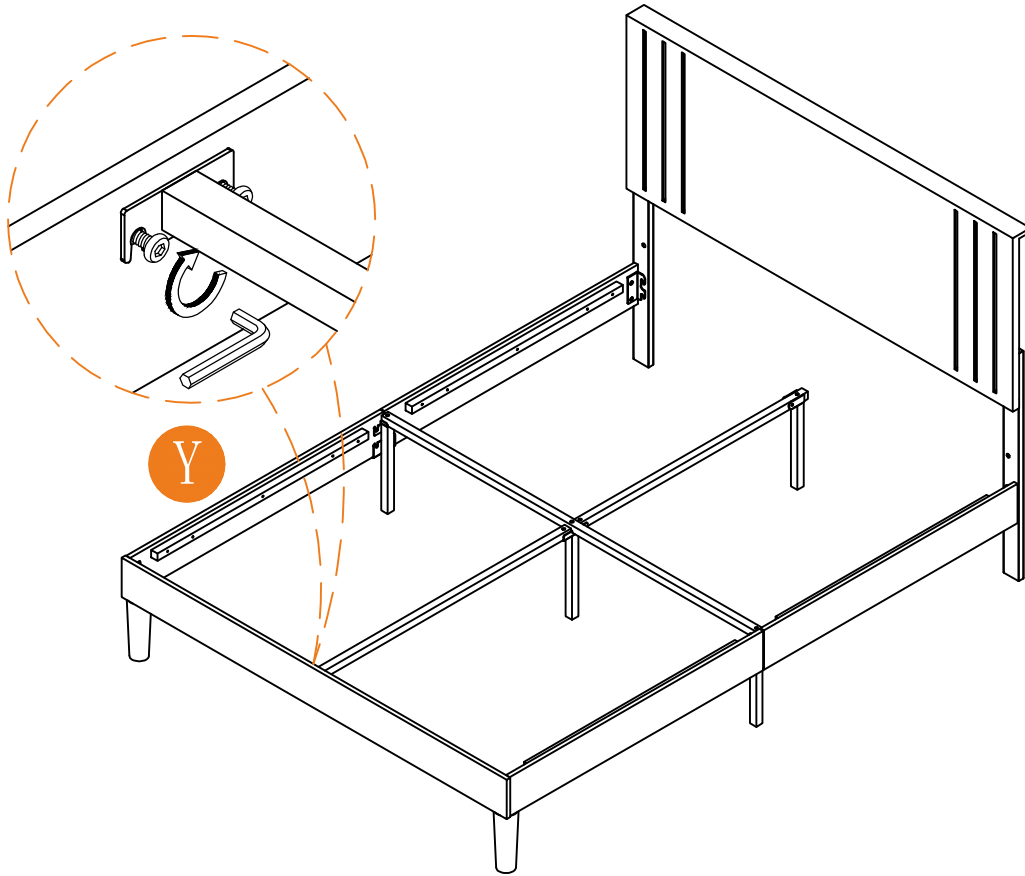

Y

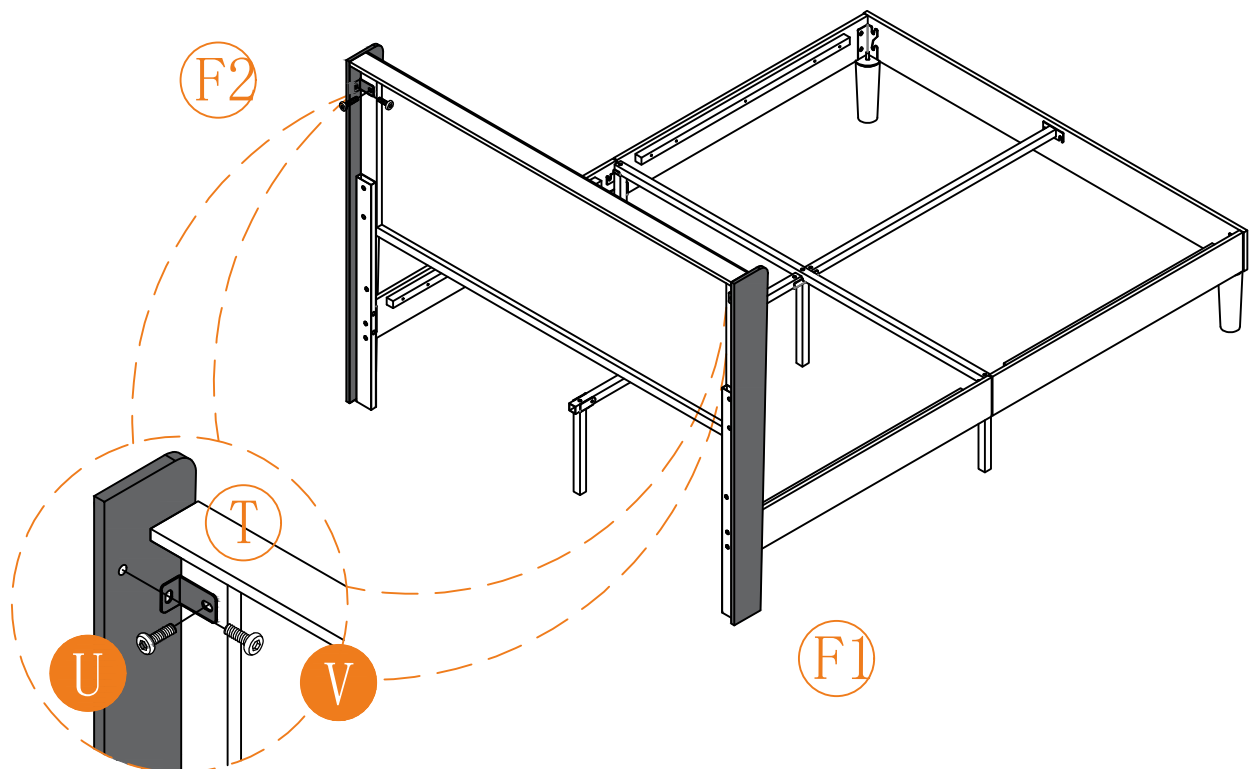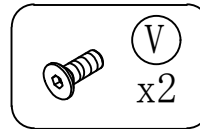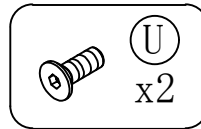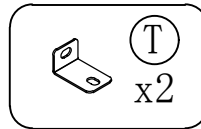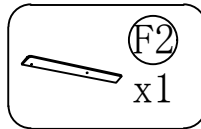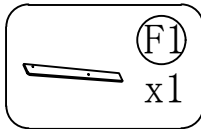

F2





U

T



V

F1




11

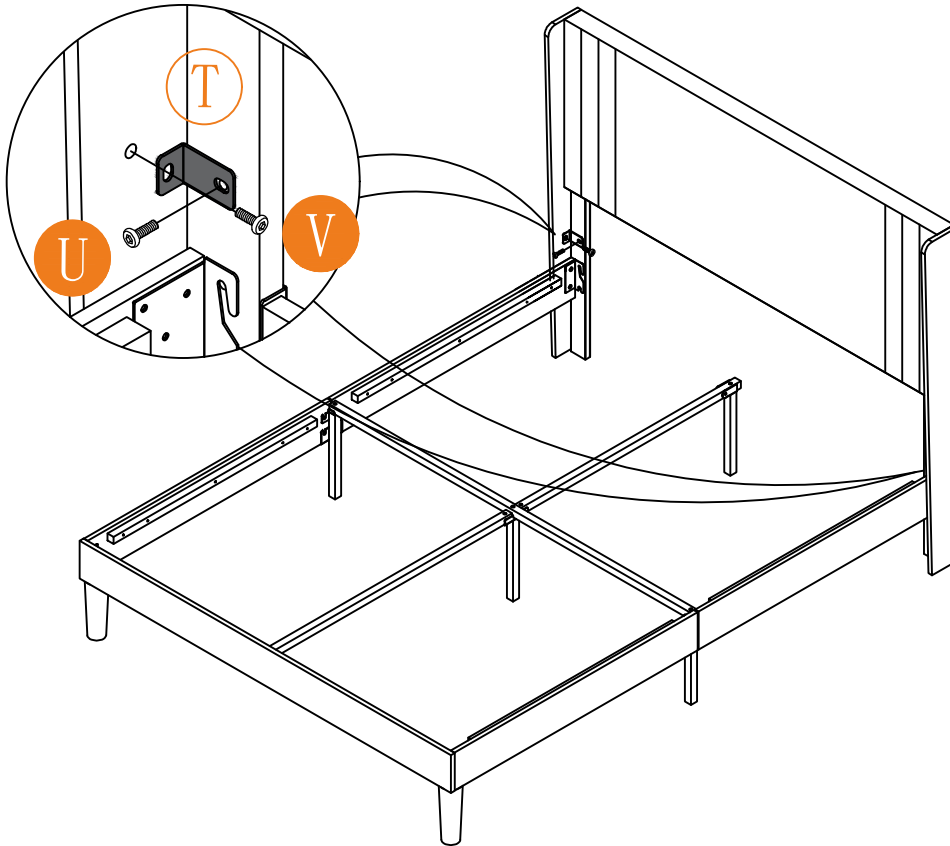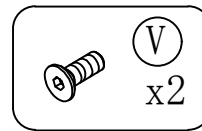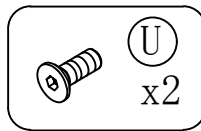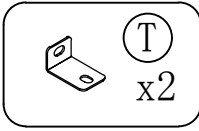

12

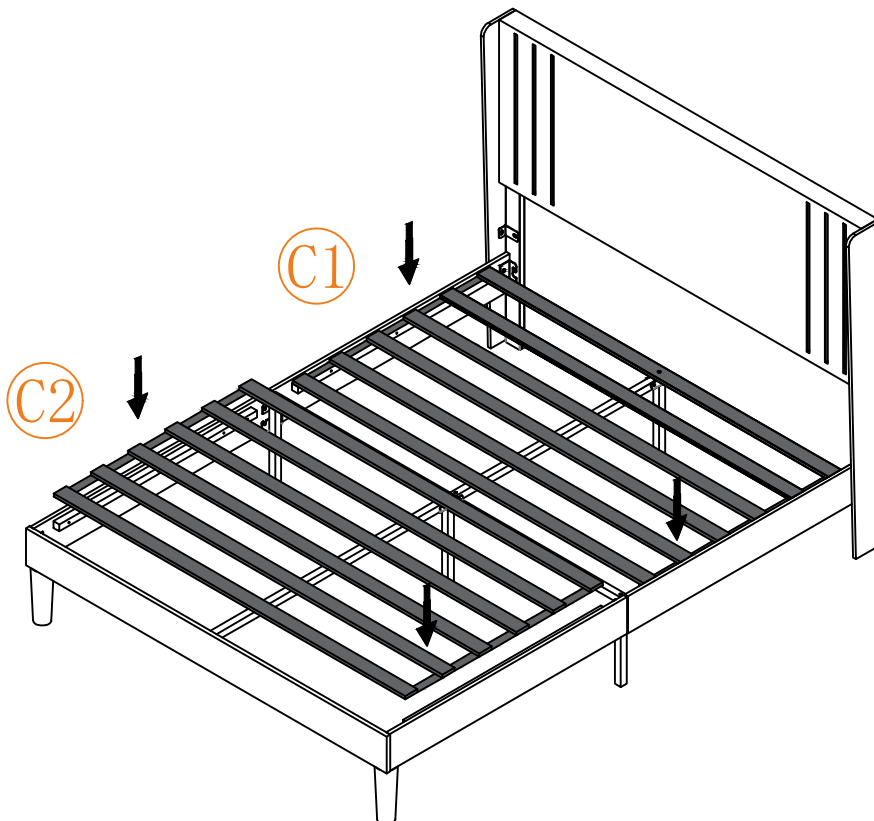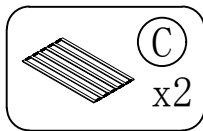

13

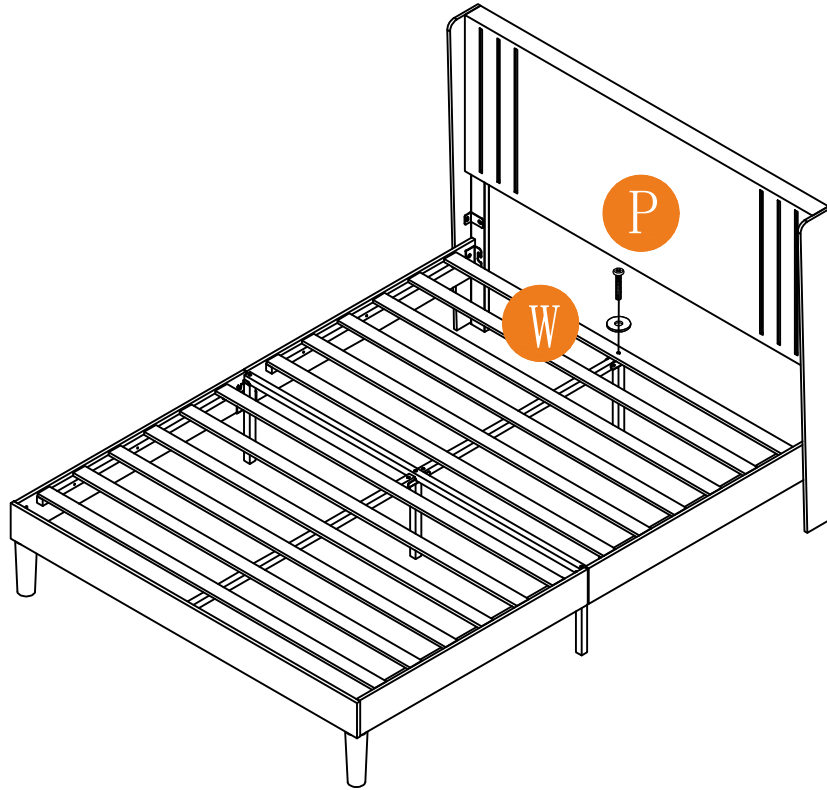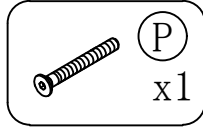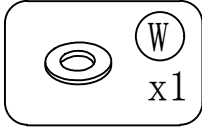

14

