


Polybird




EASY RIDER CHAIR

P-7


TOOLS

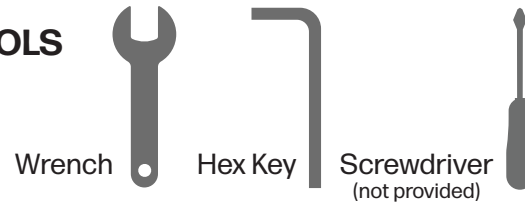

HARDWARE

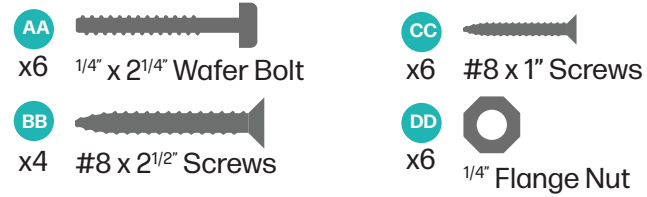


PARTS

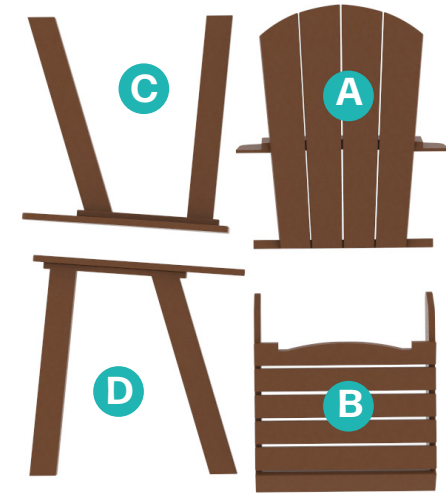

Note before starting: wait until the whole piece is assembled to tighten the bolts completely.

1

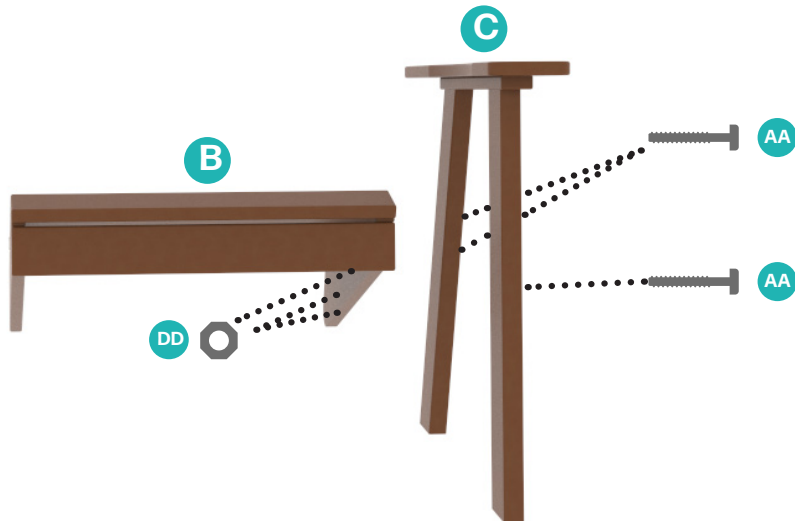


Attach leg C to seat B by inserting two $\frac{1}{4} \times 2\frac{1}{4}$ " wafer bolts (AA) through the back leg. Secure from underneath the seat with two $\frac{1}{4}$ " flange nuts (DD). Then insert one $\frac{1}{4} \times 2\frac{1}{4}$ " wafer bolts (AA) through each front leg and secure with one $\frac{1}{4}$ " flange nut (DD).

2




Repeat step 1 for leg D. Your chair assembly should look like this.

3

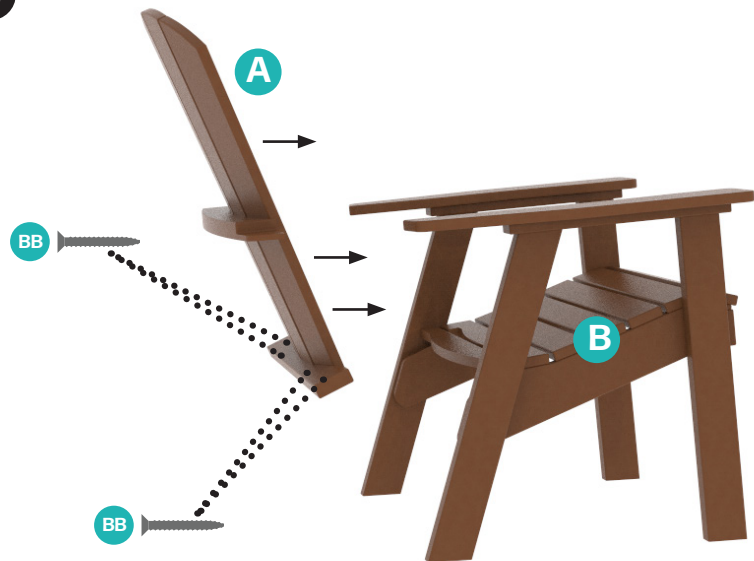

Attach seat back A to chair assembly from step 2. Using four 2^{1/2}" screws (BB), secure seat back to seat B as shown.

4

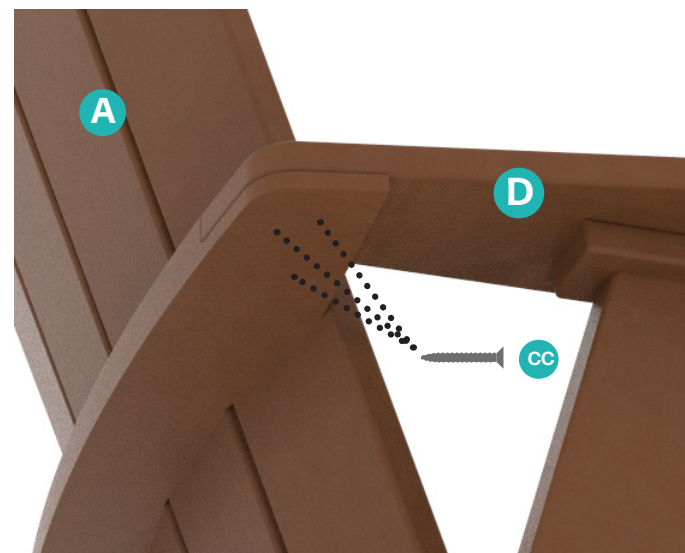

Using three 1" screws (CC) on each side of chair, attach seat back A to legs C & D on the underside of the arm rests, as shown.

5



Enjoy your new Polybird chair!

We hope you enjoy your new piece of furniture for years to come!