ASSEMBLY INSTRUCTION

PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Read manual before assembling, it helps!

ITEM#:88449 263505 263506

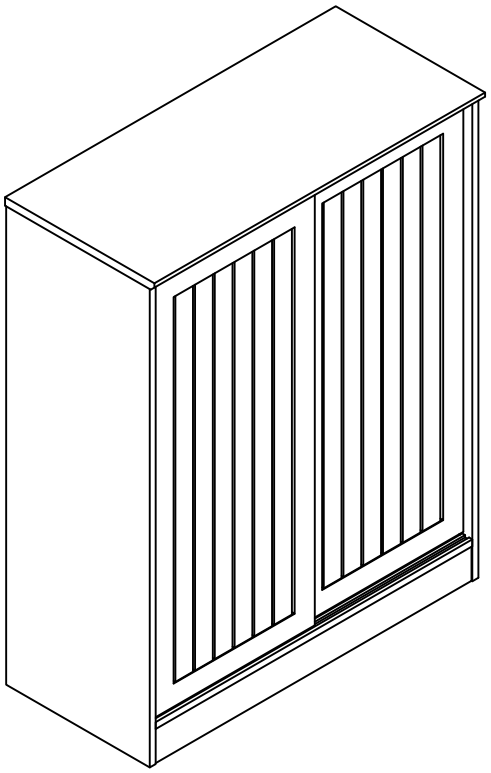

PARTS IDENTIFICATION

ITEM#:88449 263505 263506

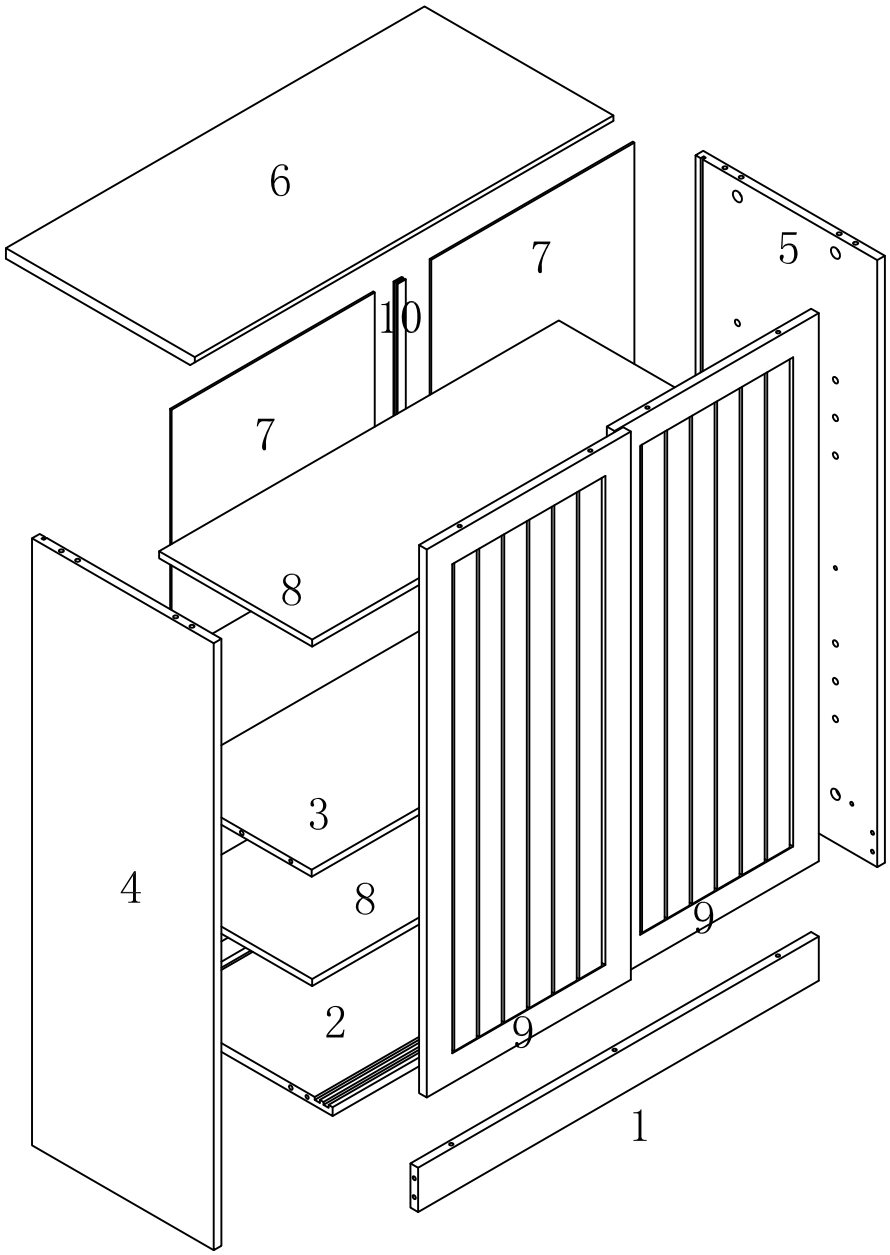

(1)	1pc	(6)	1pc
(2)	1pc	(7)	2pcs
(3)	1pc	(8)	3pcs
(4)	1pc	(9)	2pcs
(5)	1pc	(10)	1pc

HARDWARE IDENTIFICATION

ITEM#:88449 263505 263506

A		Φ15	10pcs
B		L29	10pcs
C		Φ16	6pcs
D		Φ6×30	23pcs
E		Φ5	8pcs
F		Φ22	4pcs
G			4pcs
H		Φ3×16	18pcs
I			10pcs
J		Φ8×40	1pc
K		197×5×1	1pc
L		12×12×1	2pcs
M		Φ4×25	1pc
N		Φ5×40	1pc

ASSEMBLY INSTRUCTION

ITEM#:88449 263505 263506

HOW TO	1	2	3	4
Cam Bolt  Cam Lock 	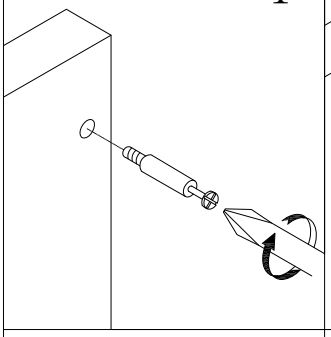	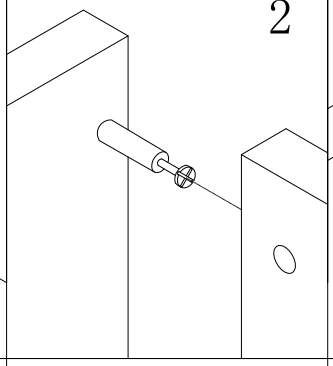	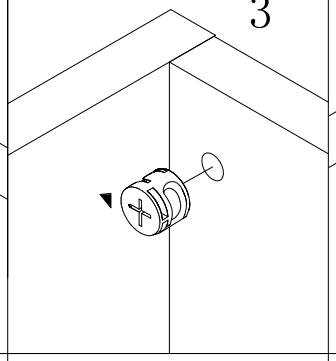	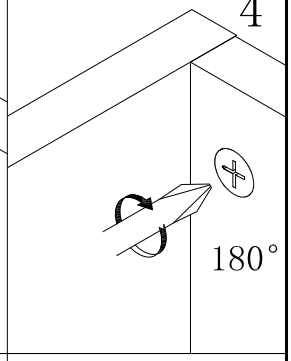
	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

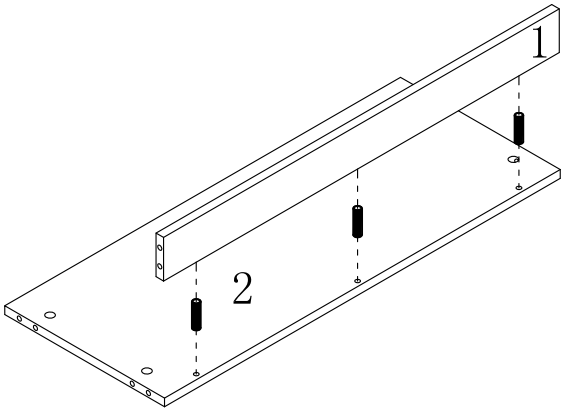

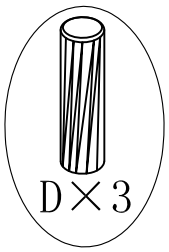

STEP1

STEP2

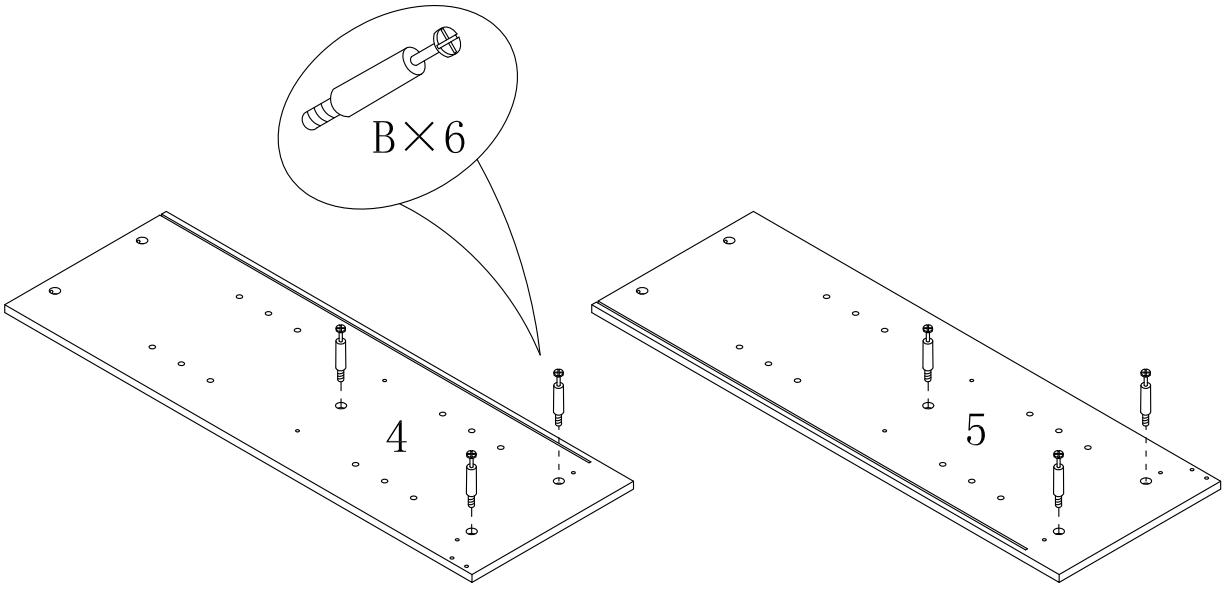

ASSEMBLY INSTRUCTION

ITEM#:88449 263505 263506

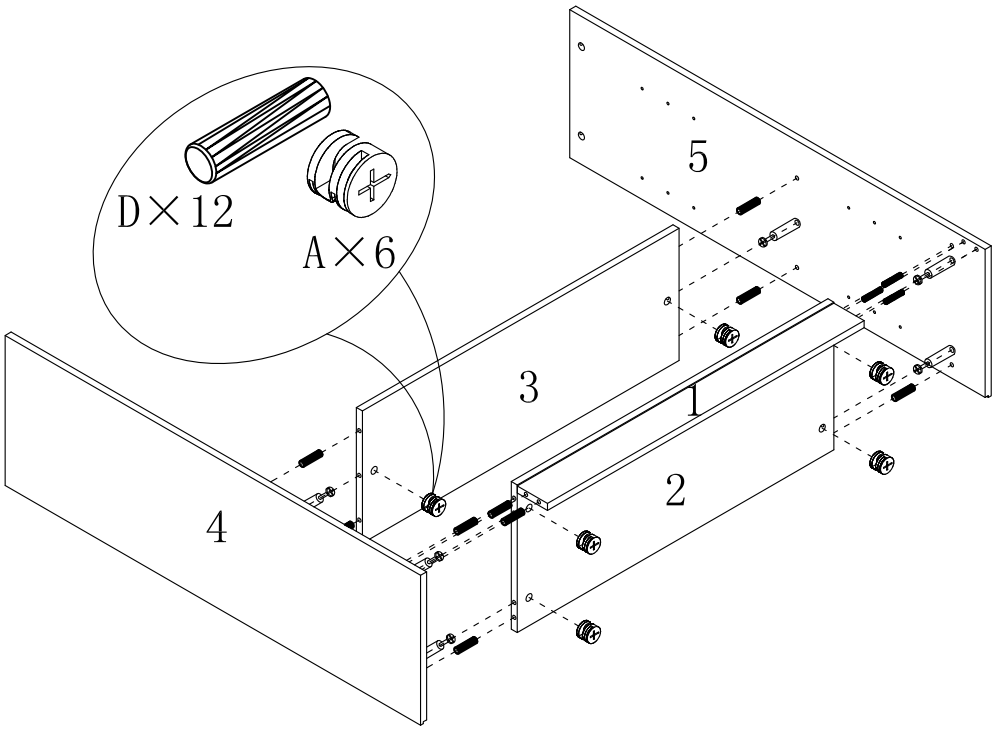

STEP3

STEP4

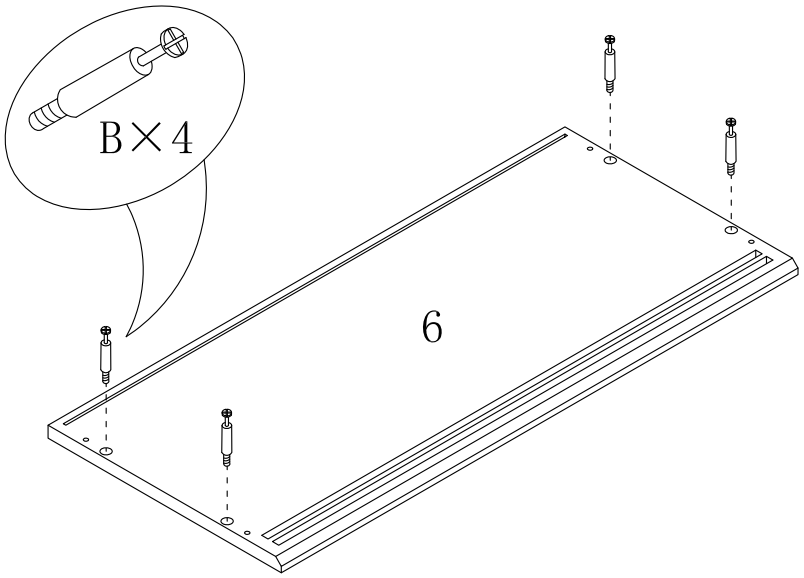

ASSEMBLY INSTRUCTION

ITEM#:88449 263505 263506

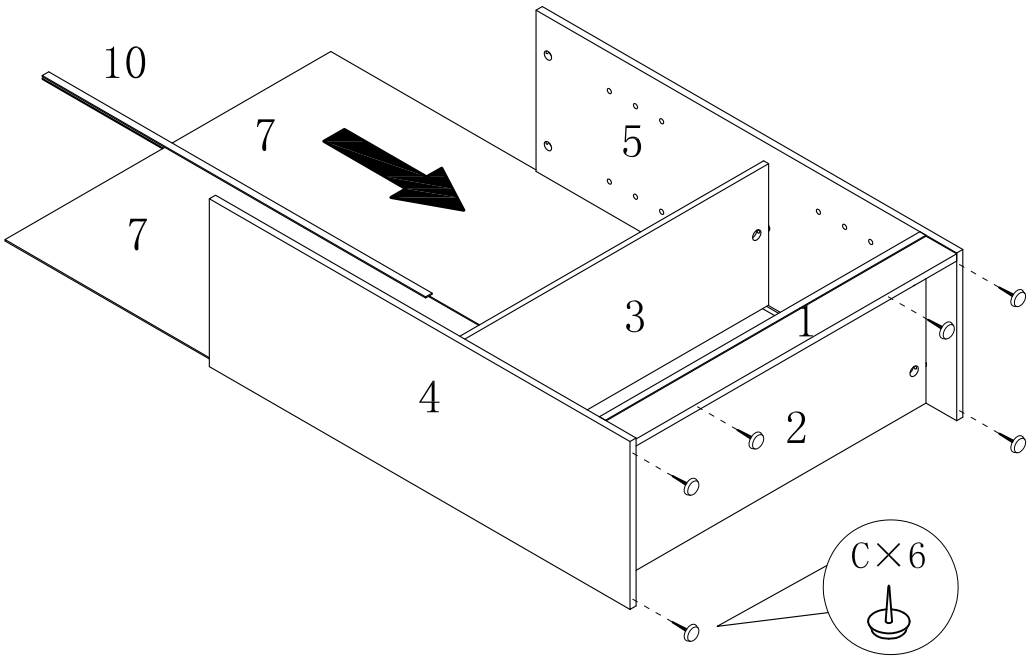

STEP5

STEP6

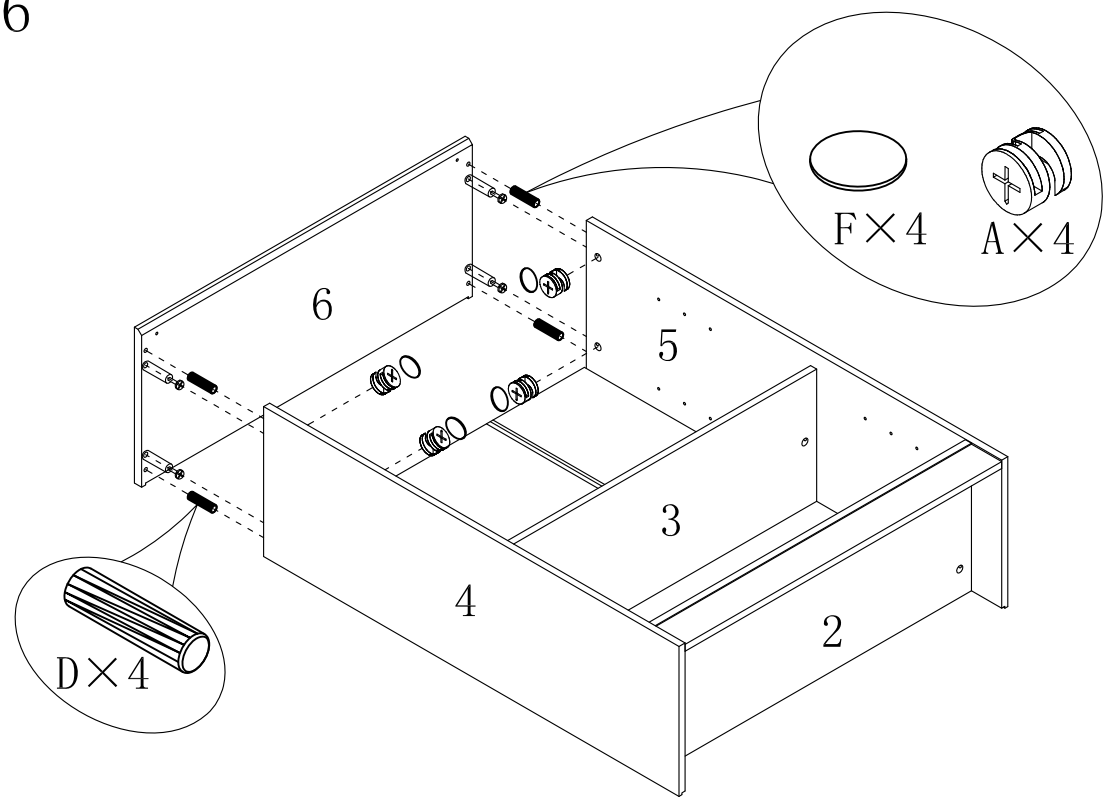

ASSEMBLY INSTRUCTION

ITEM#:88449 263505 263506

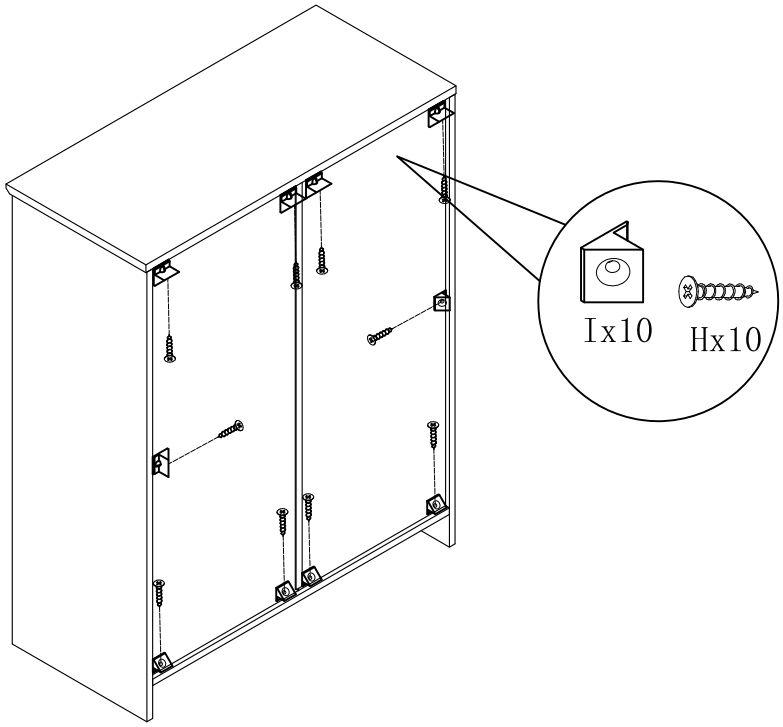

STEP7

STEP8

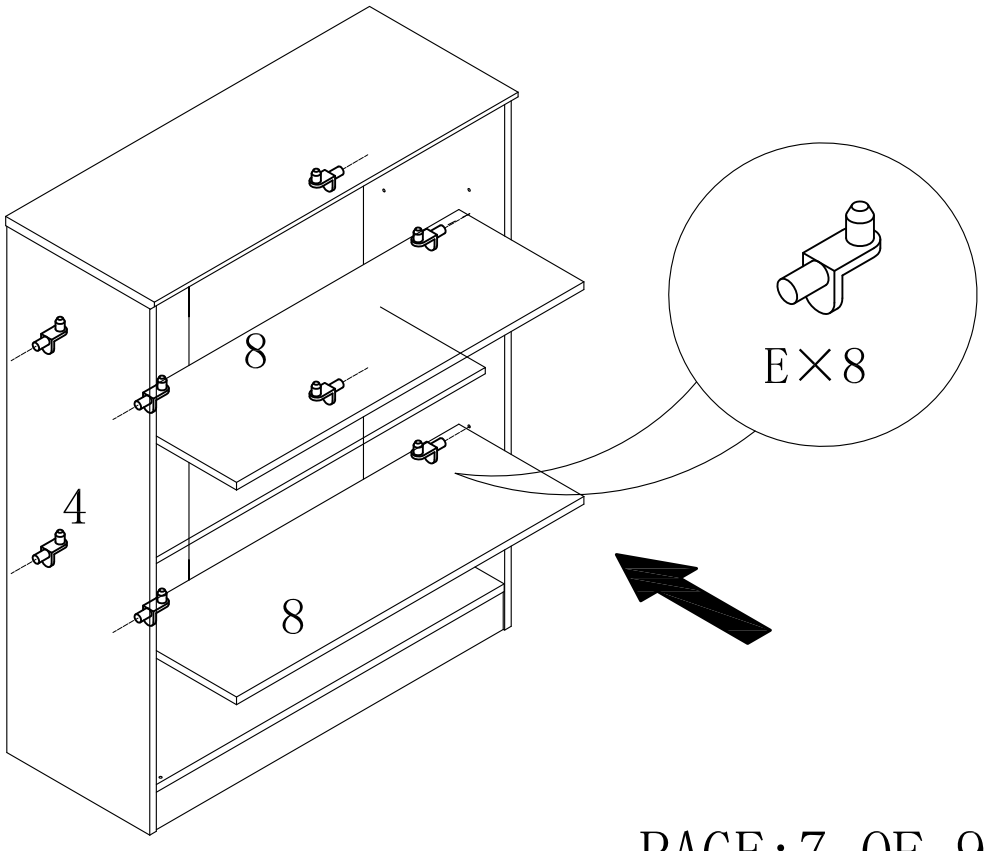

ASSEMBLY INSTRUCTION

ITEM#:88449 263505 263506

x2

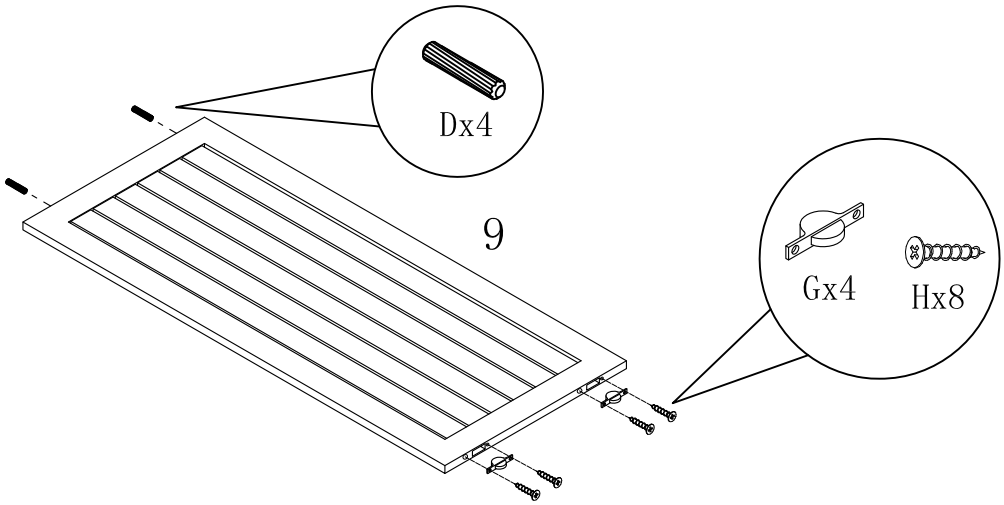

STEP9

STEP10

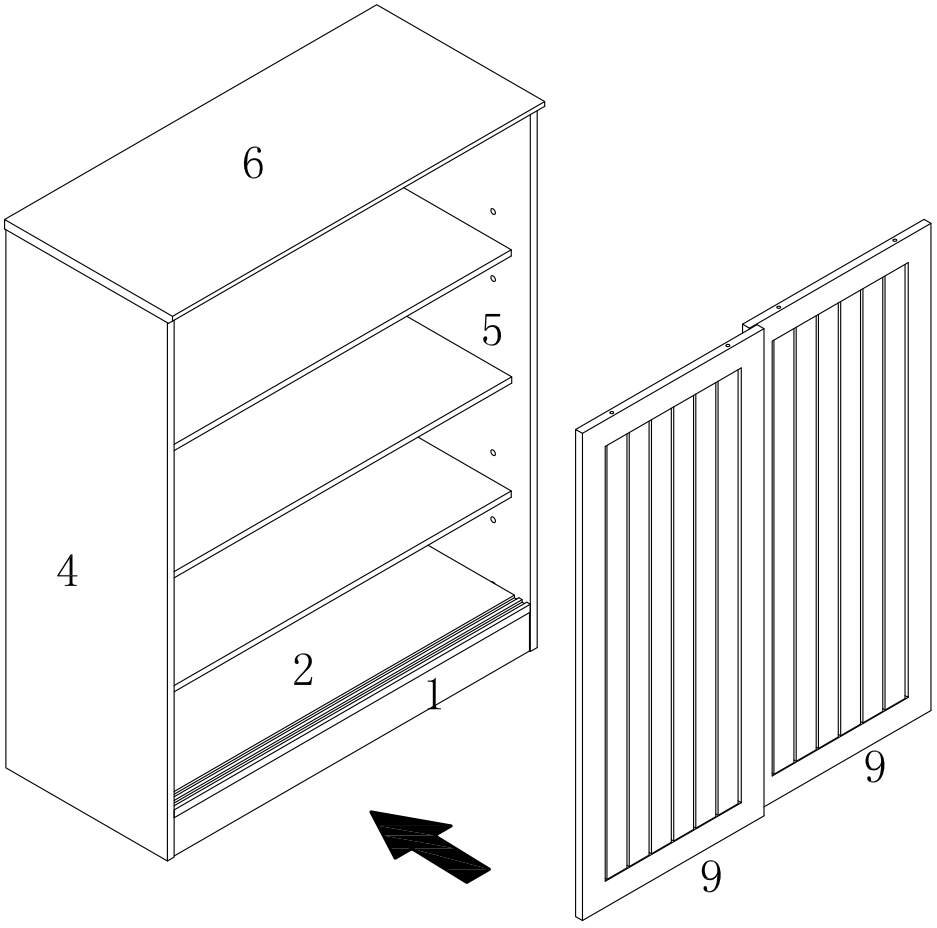

ASSEMBLY INSTRUCTION

ITEM#:88449 263505 263506

STEP11

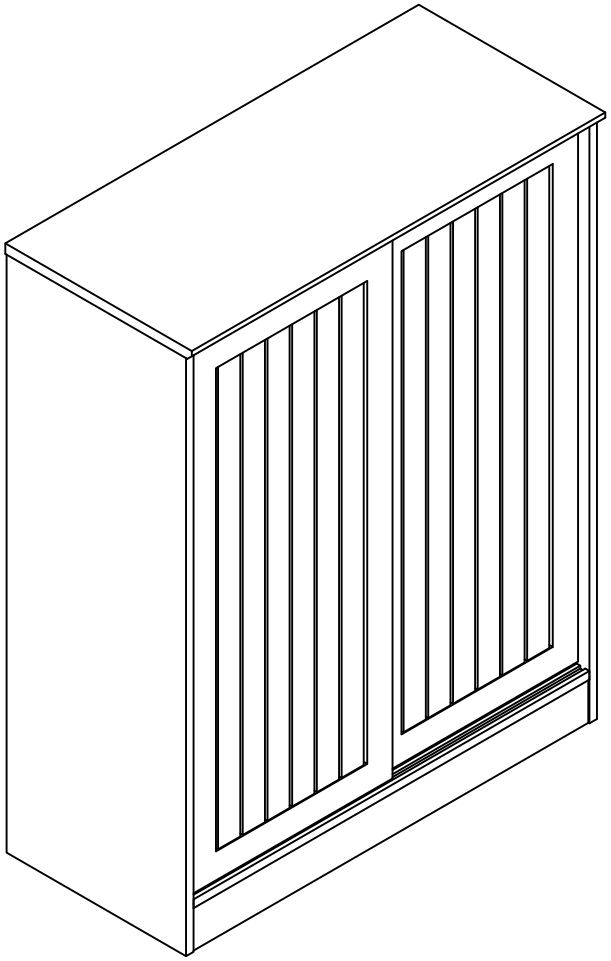

ANTI-TIPPING STRAP INSTRUCTION

HARDWARE(INCLUDED):



DRYWALL ANCHOR ϕ14×36 × 1PC



METAL BRACKETS 12×12×1 × 2PCS



DRYWALL SCREW ϕ5×40 × 1PC

STRAP ϕ4.5×ϕ1×254 × 1PC

FLATHEAD SCREW ϕ4X25 × 1PC

TOOLS NEEDED (NOT INCLUDED):

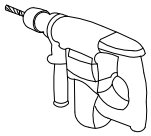

DRILL & DRILL BIT

LIGHT HAMMER

Note: Hardware included only compatible with standard drywalls.

STEP 1

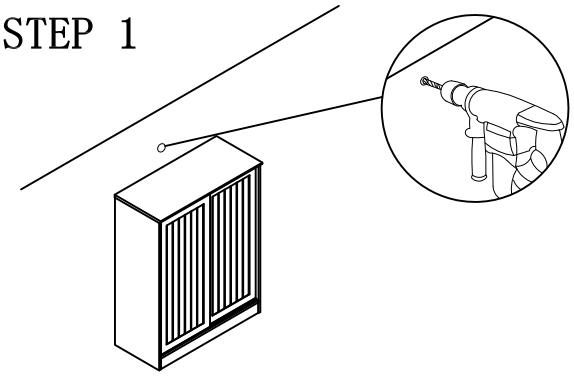

1.Find spot on wall 1″ below top of item.
2.Using a drill bit slightly thinner than anchor ,drill hole into drywall.

STEP 2

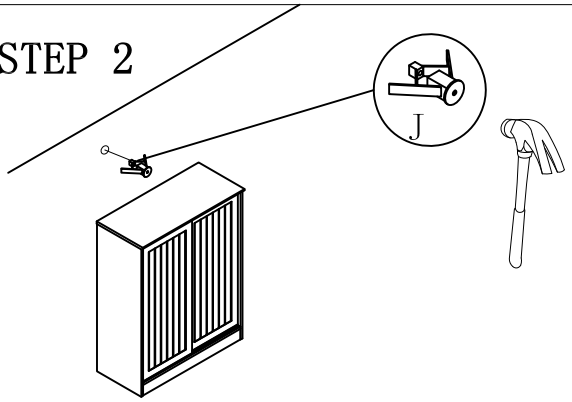

1.Use a light hammer to tap anchor into hole.
2.Anchor should fit snugly.lf hole is too small, drill again to increase hole size .Do not force anchor into wall.

STEP 3

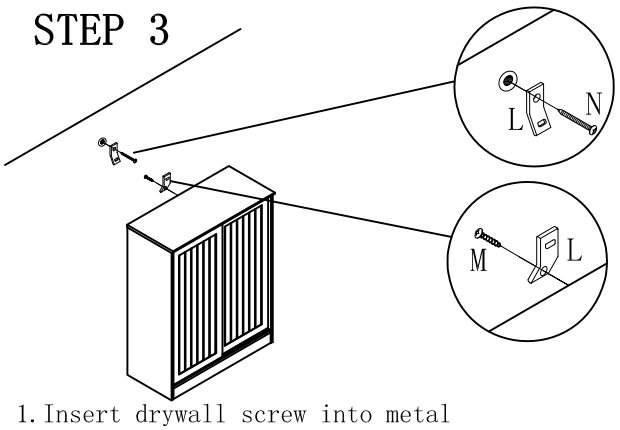

1.Insert drywall screw into metal bracket and into drywall anchor.
2.Insert flathead screw into second metal bracket and into back of item.along top edge.

STEP 4

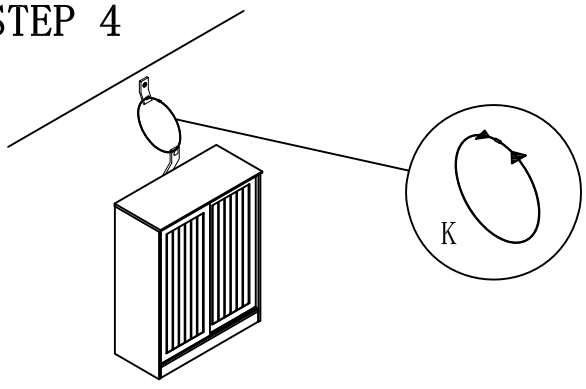

1.Insert strap thru bracket attached to wall. then thru bracket on item , and into head of strap.
2.pull lightly til strap stops.
Assembly is complete.