

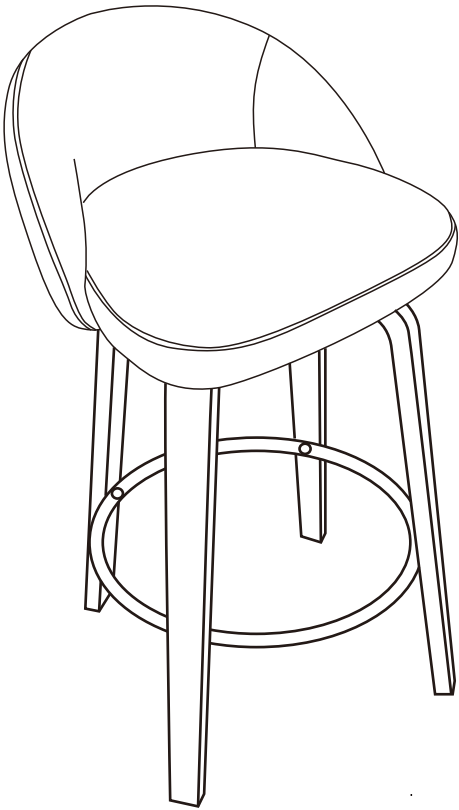
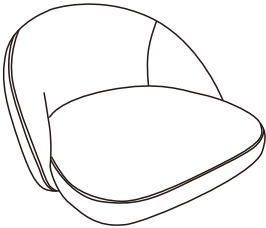
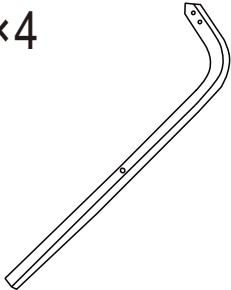


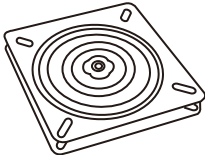



ITEM NO.:8651B




A×1 	B×4 	C×1 	D×1 	E×1 
F×4+1Ext  M6X30mm	G×12+1Ext  M6X20mm	H×1  M6	I×1  SPARE FOOTNAIL	

1

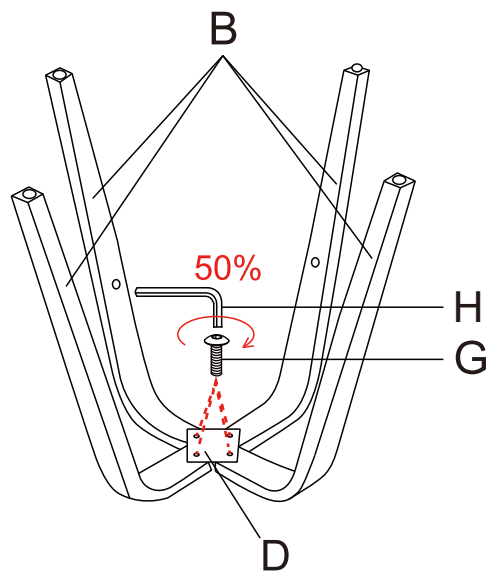


Note: Do NOT tighten the screws(G) in step 1

2

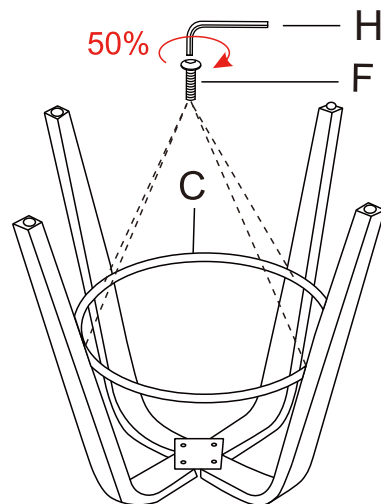


Note: Do NOT tighten the screws(F) in step 2

3

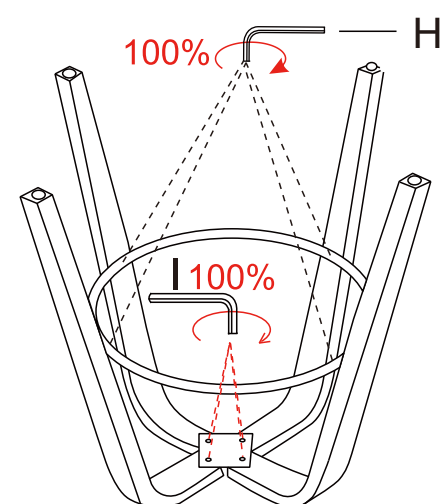


Note: Tighten the screws(G) and screws(F) in step 3


4

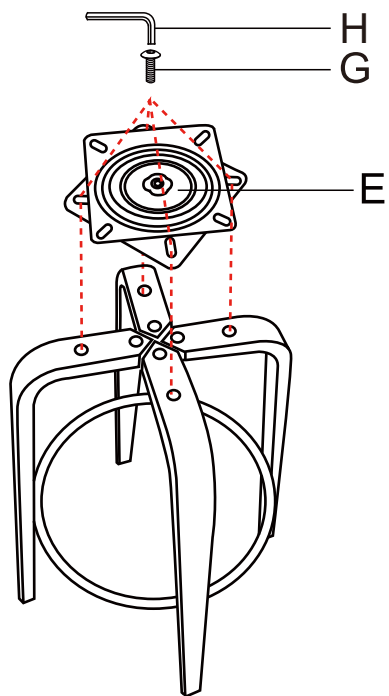

5

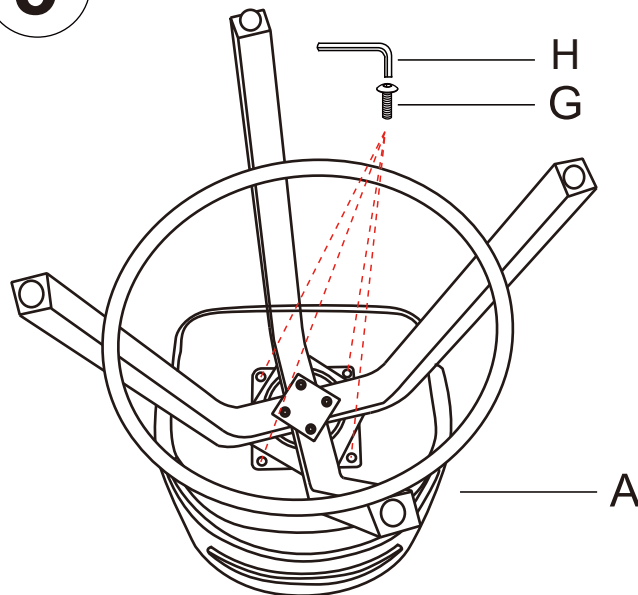

6

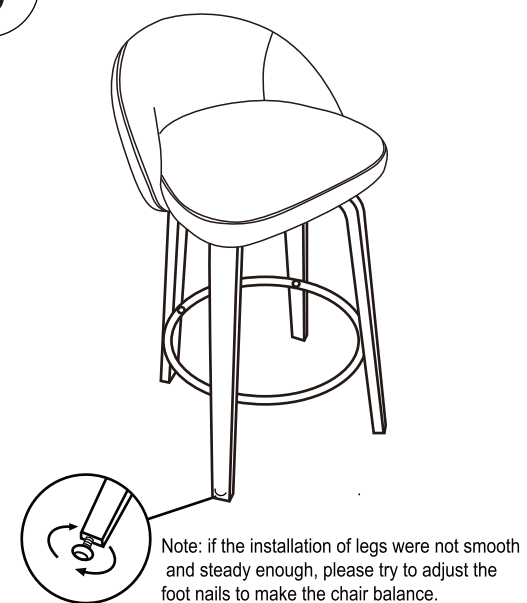

Note: if the installation of legs were not smooth and steady enough, please try to adjust the foot nails to make the chair balance.