






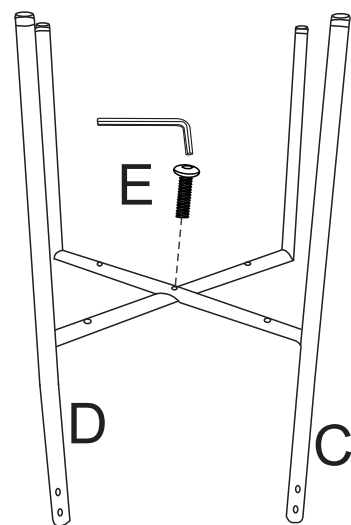


ASSEMBLY INSTRUCTIONS


| |
|---|
| Ax1 |
|  |
| Bx1 |
|  |
| Cx1 |
|  |
| Dx1 |
|  |
| Ex1 |
|  M6 x 20 mm |
| Fx8 |
|  M6 x 35 mm |
|  |

①

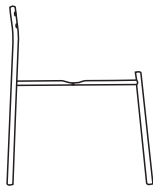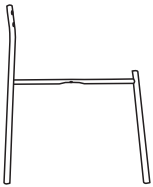


Place (C) on (D) as displayed, then twist Screw (E) to connect them. Only twist (E) into halfway in this step.

②

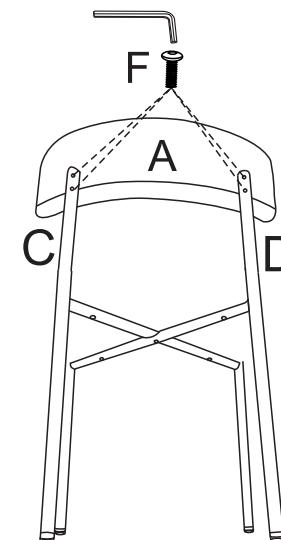


Twist Screw (F) to connect the (A) with (C) and (D). Only twist (F) into halfway in this step.

③

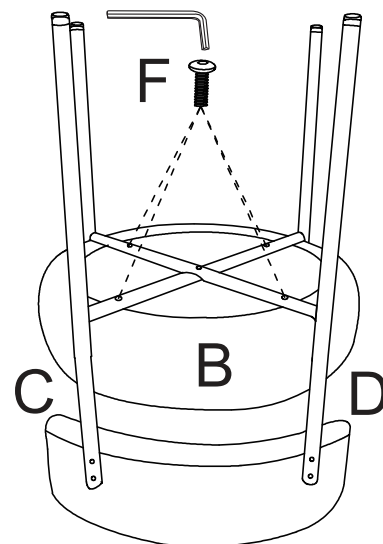

Twist Screw (F) to connect the (B) with (C) and (D). Tighten all the screws completely.

④

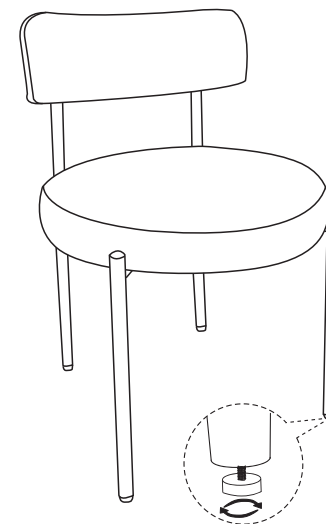

If you feel that the chair is leaning to one side due to an uneven ground, rotate the foot pads to adjust it.

If there are any questions during the assembly process, please contact us
An video and description about the step you were stuck will help us to understand the problem quickly.