




ASSEMBLY INSTRUCTION

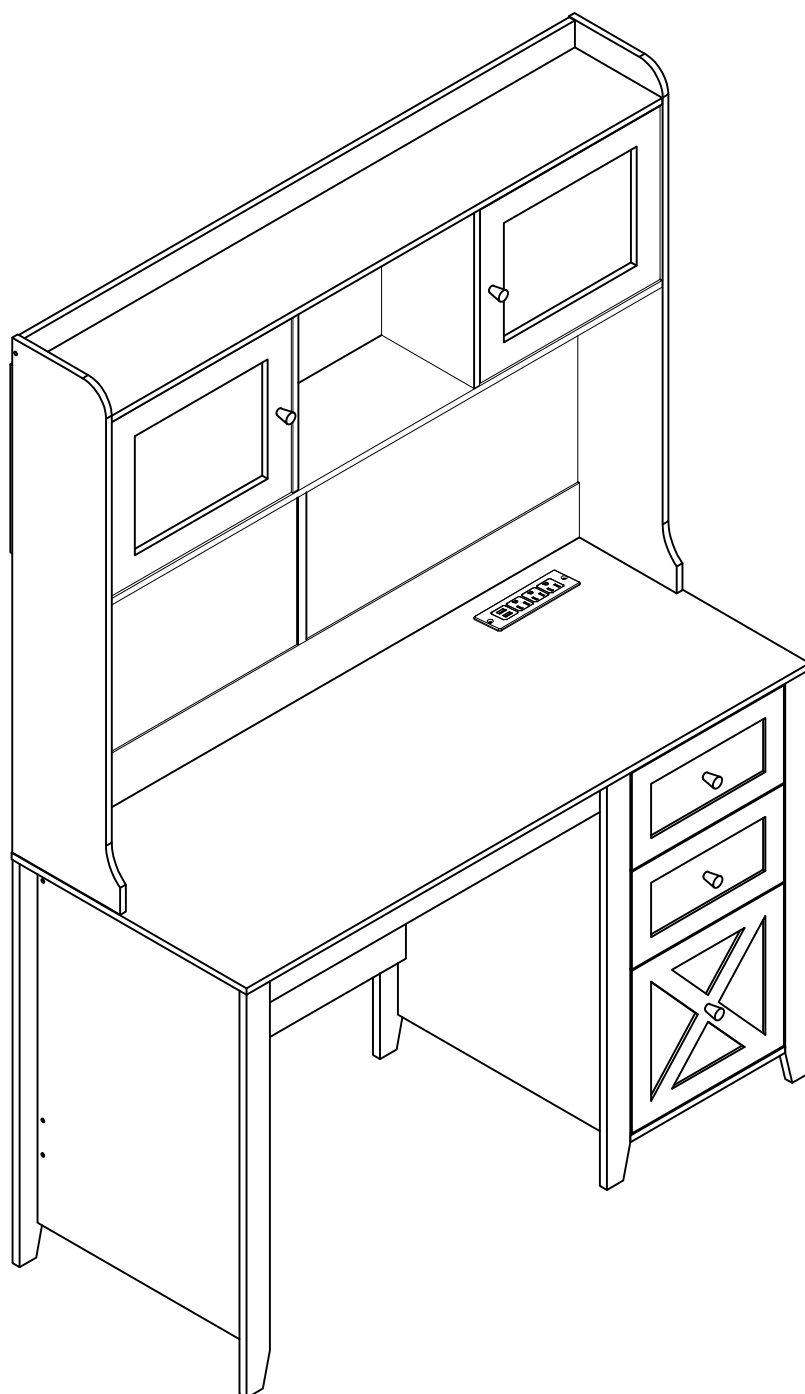

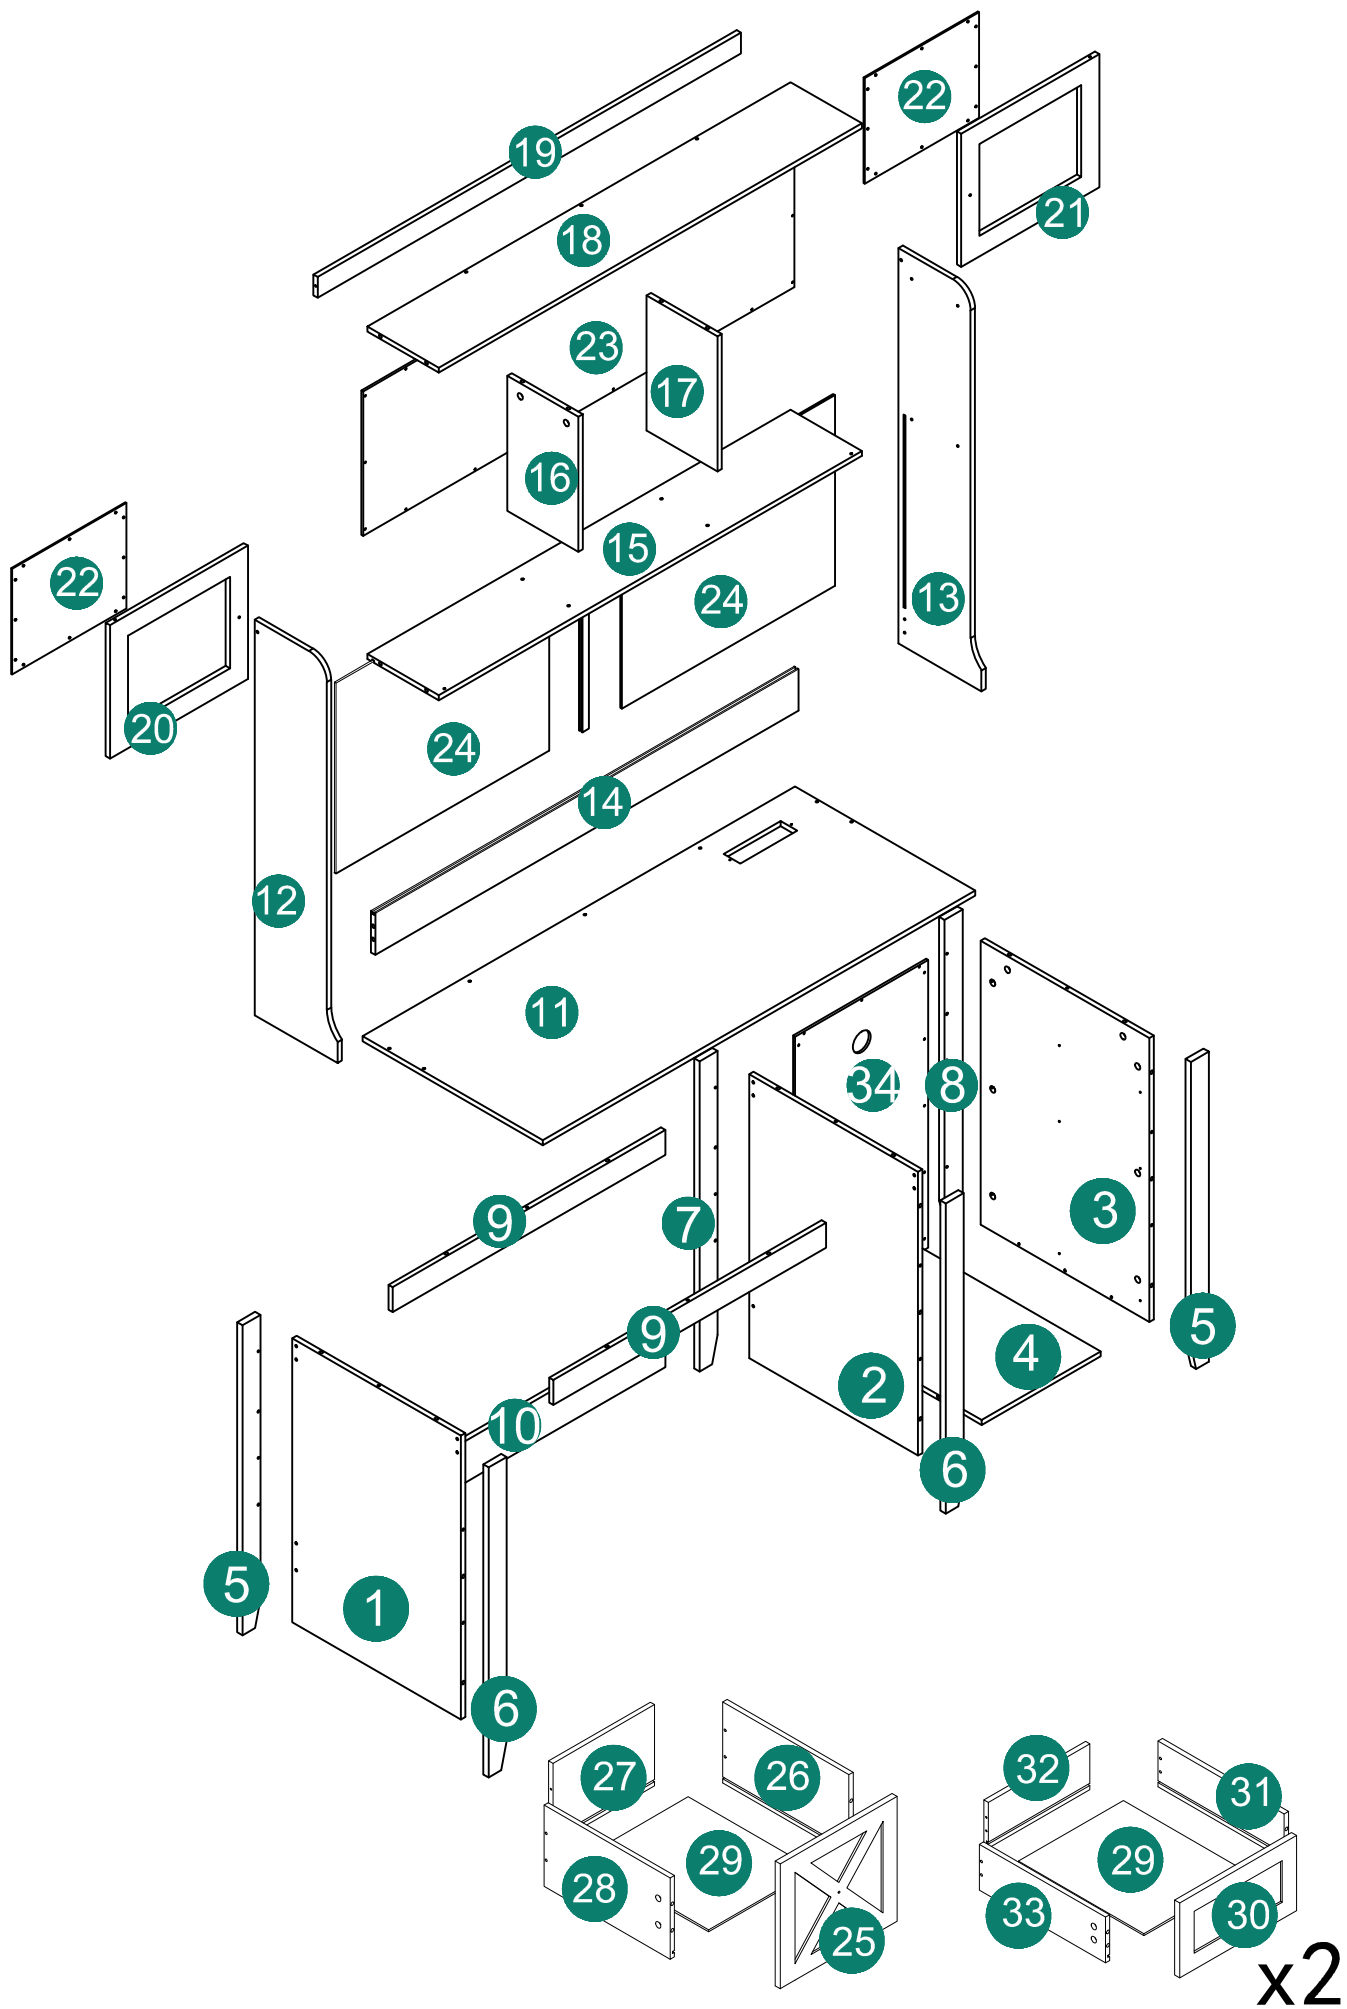


1

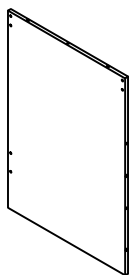


1PC

2

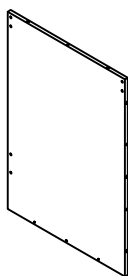


1PC

3

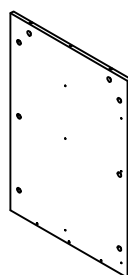

1PC

4

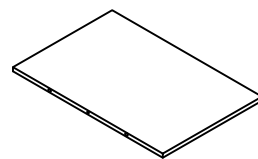


1PC

5




2PCS

6



2PCS

7




1PC

8




1PC

9

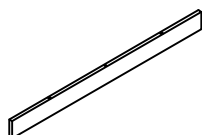


2PCS

10

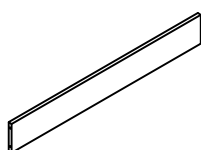

1PC

11

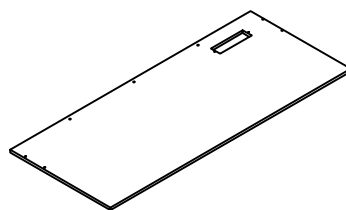


1PC

12




1PC

13




1PC

14

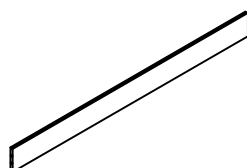


1PC

15

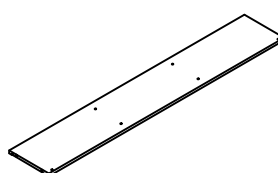


1PC

16




1PC

17




1PC

18

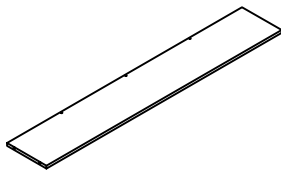


1PC

19

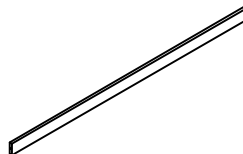


1PC

20

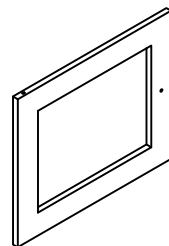


1PC

21

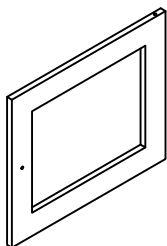


1PC

22

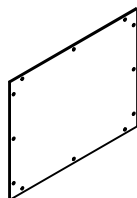


2PCS

23

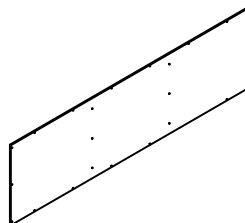


1PC

24

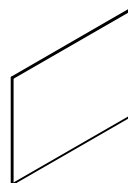


2PCS

25

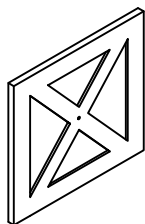


1PC

26

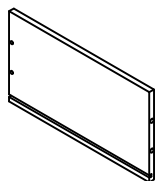


1PC

27

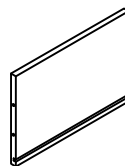


1PC

28

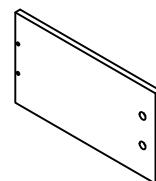


1PC

29

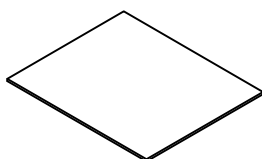


3PCS

30

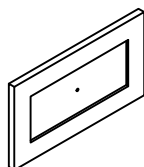


2PCS

31

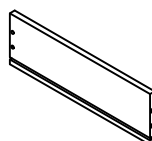


2PCS

32

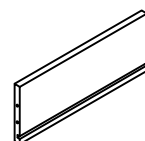


2PCS

33

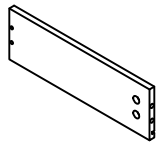


2PCS

34

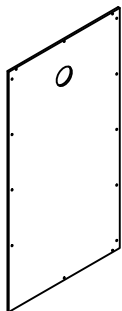

1PC


A



M6*40

60PCS


B



Ø15*9.3mm

60PCS


C



Ø6*30mm

19PCS


D

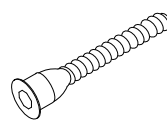

M5*38

40PCS


E



M3*12

98PCS


F

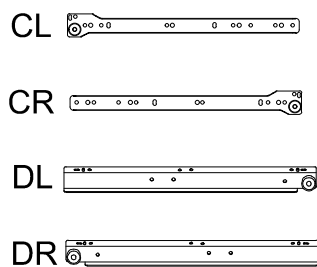

350mm

3PCS


G



5PCS

H

H1




H2




2PCS

I

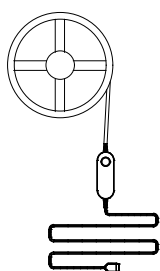

1PC


J



8PCS

K

M4*12

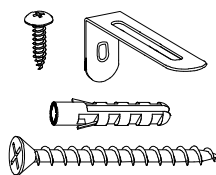


2PCS

L



22PCS


M

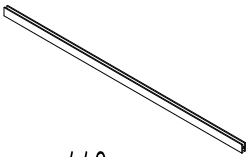

448mm


1PC

N




2PCS

O




2PCS

P

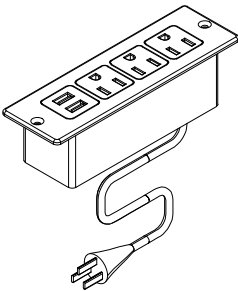


1PC

Q

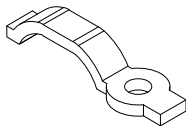

4PCS

S



M4*12


5PCS

T




M3*14


12PCS

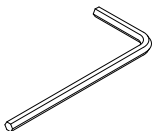


3MM

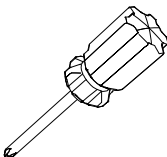

1



⑥1pc





⑤1pc



①A6pcs



②C4pcs

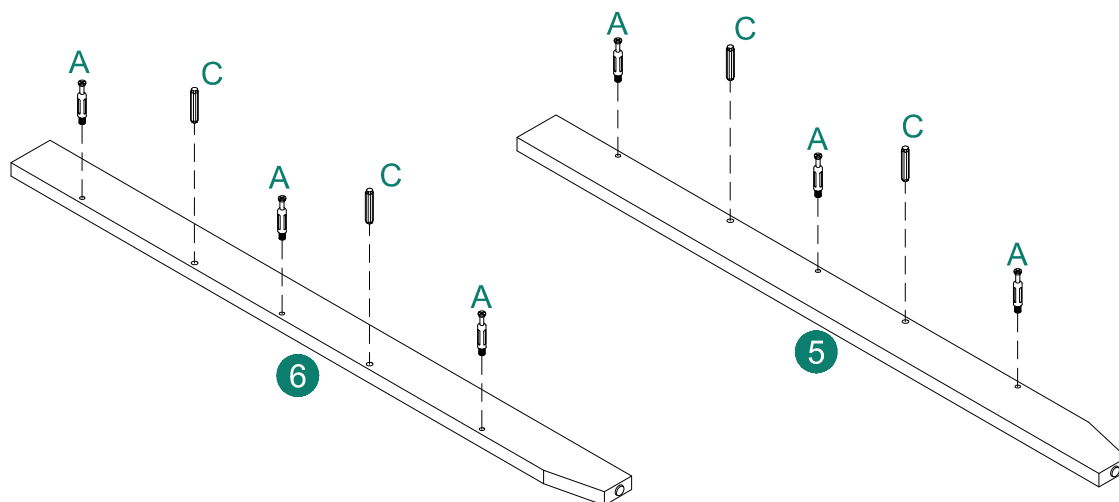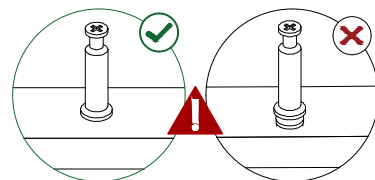


2




①1pc



③B6pcs

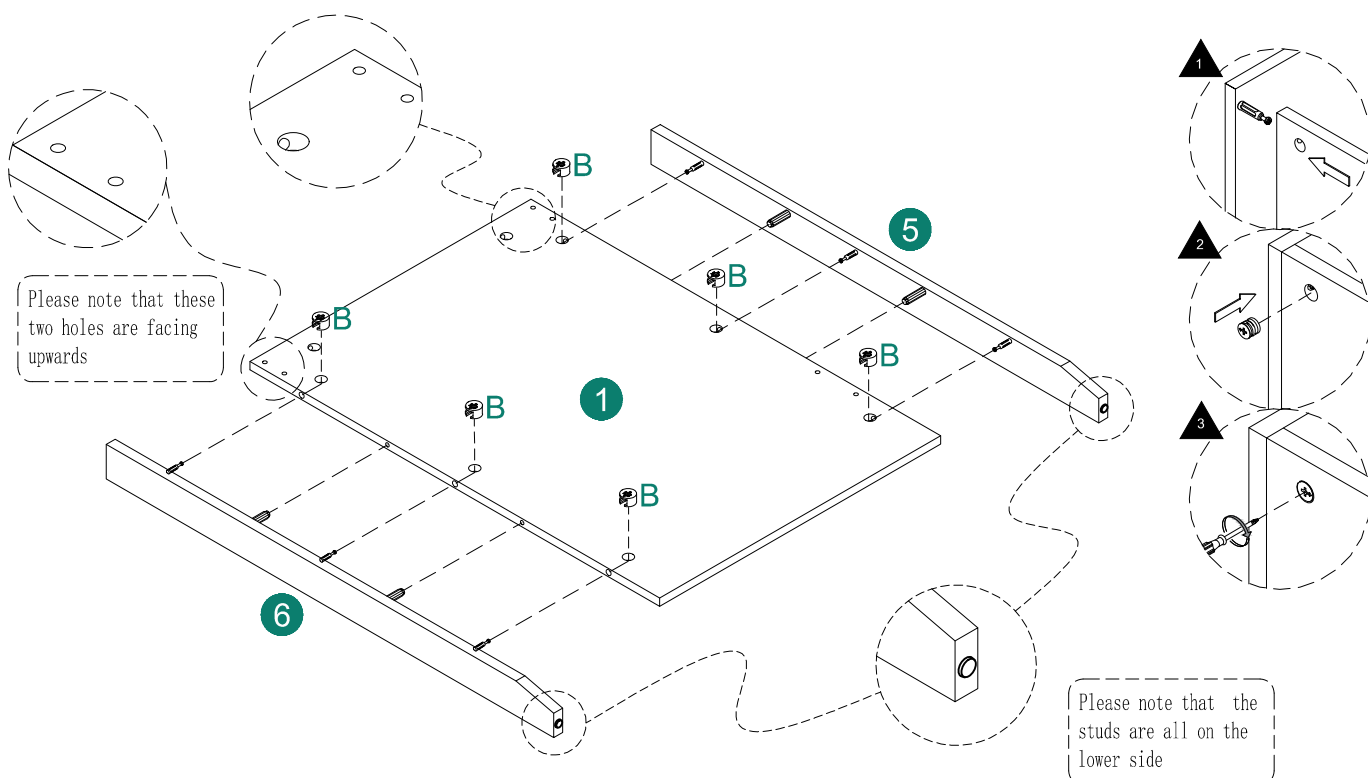

3



⑥1pc






⑦1pc




①6pcs



③4pcs

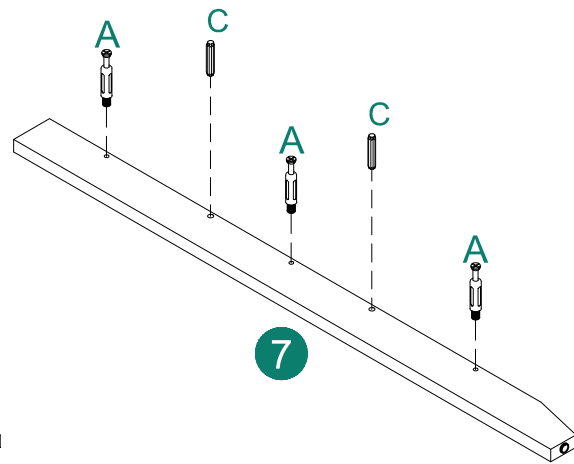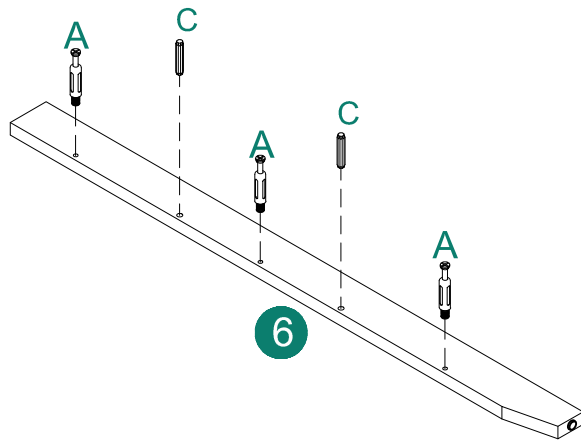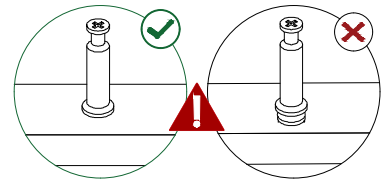

4





②1pc




⑧6pcs

Please note that these two holes are facing upwards




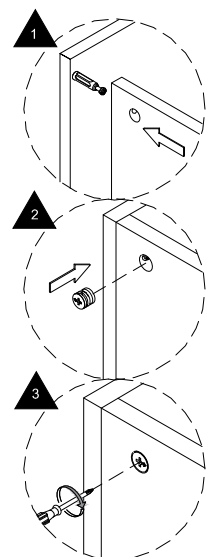
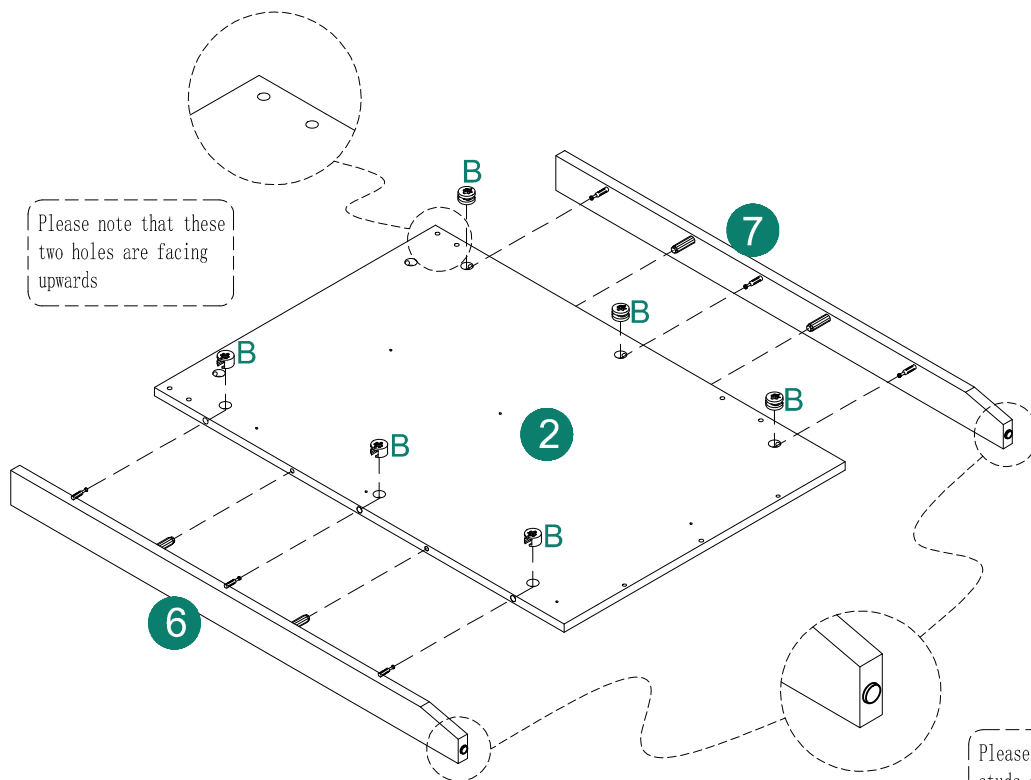


Please note that the studs are all on the lower side





5




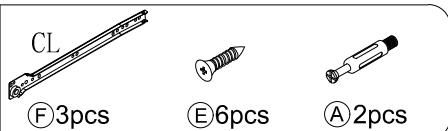


CL

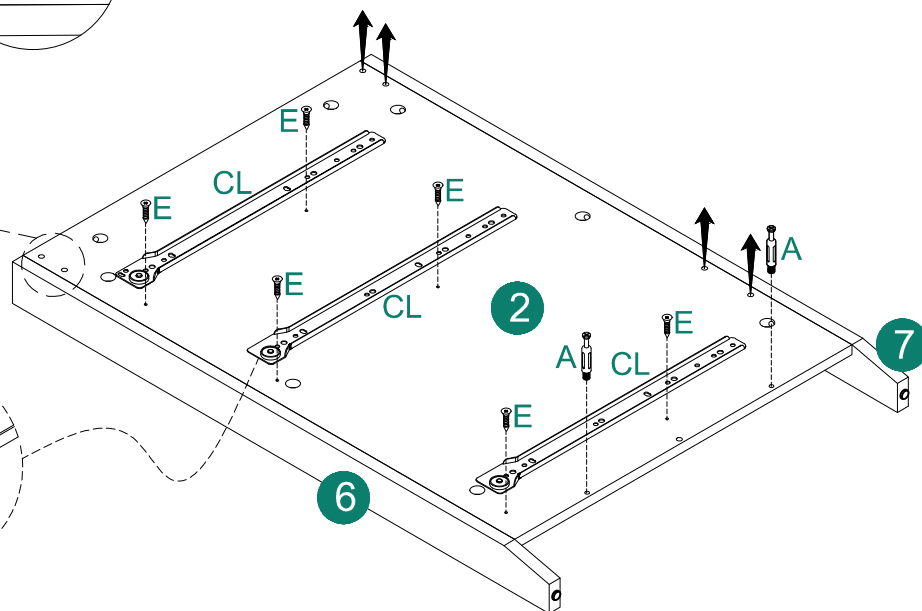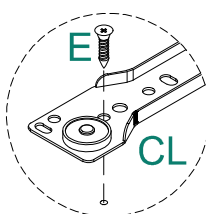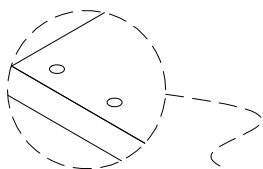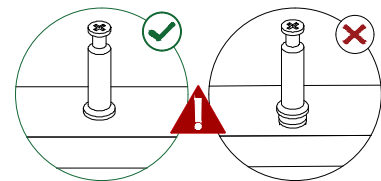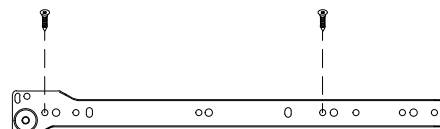


6

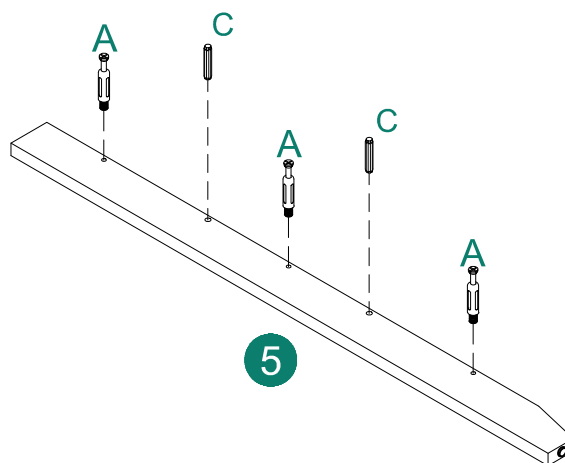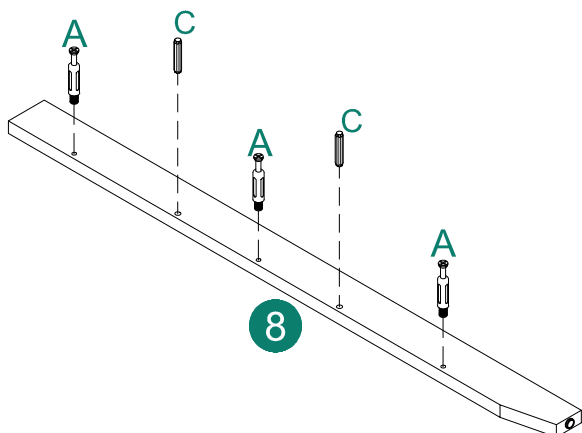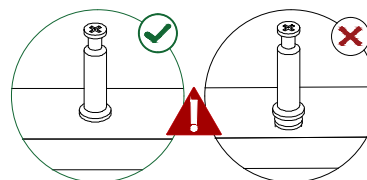

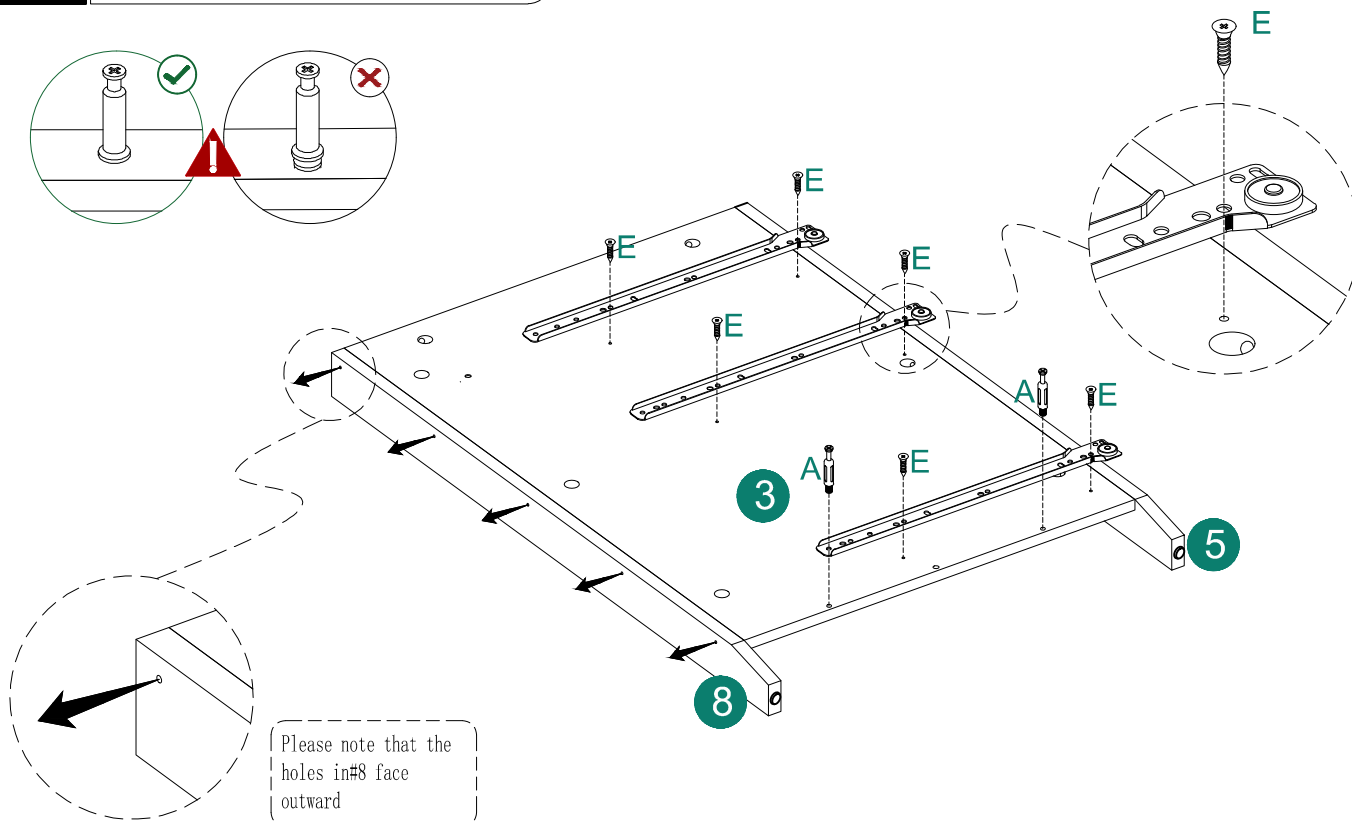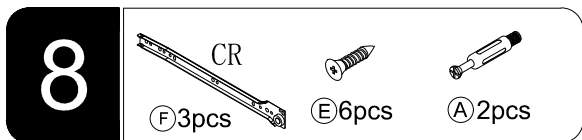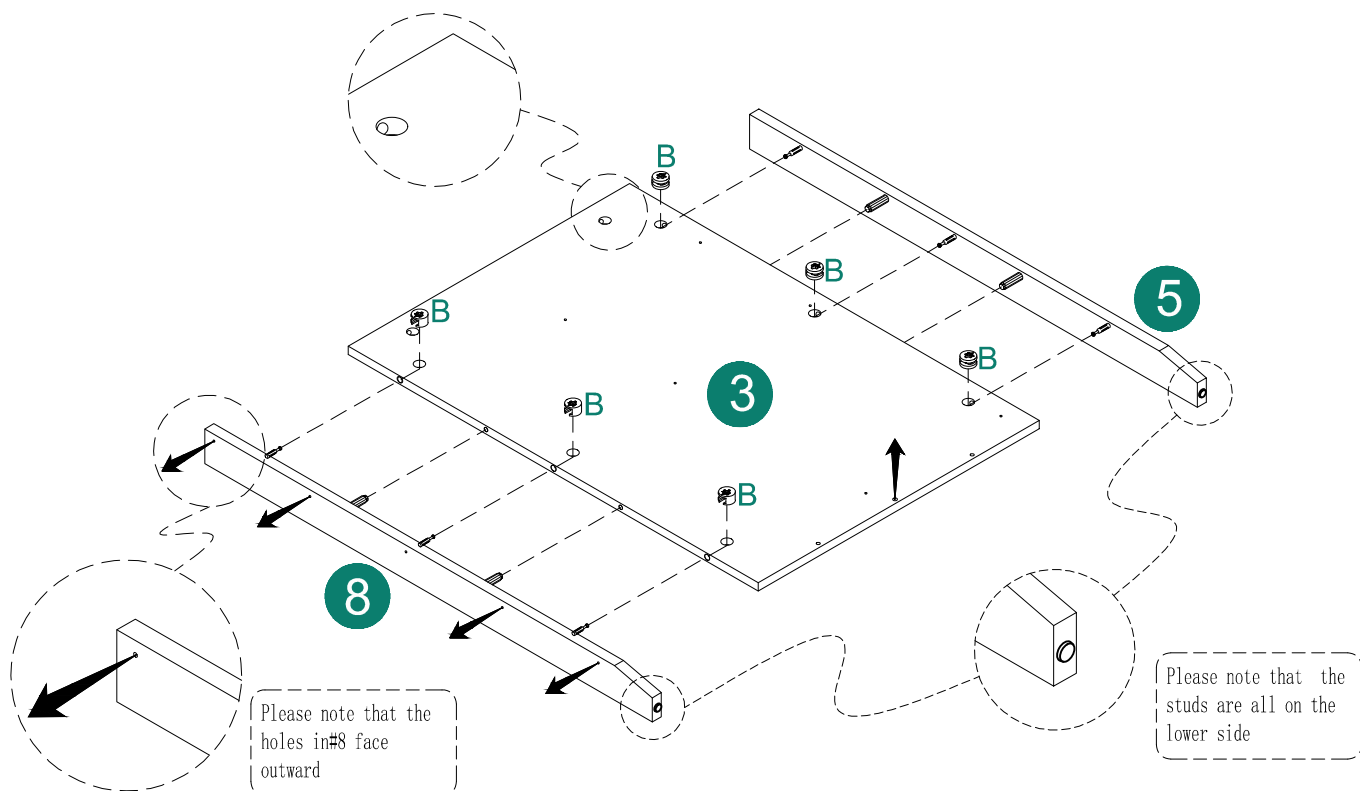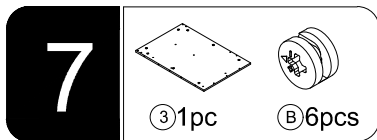

9










④ 1pc



Ⓑ 4pcs



Ⓒ 2pcs

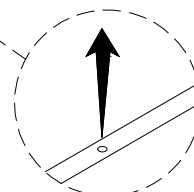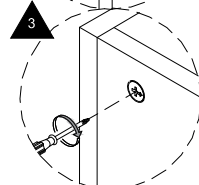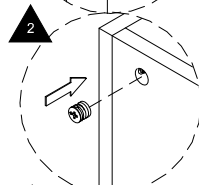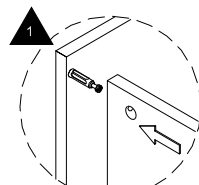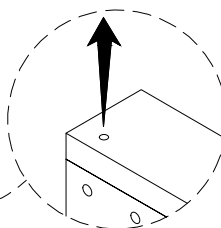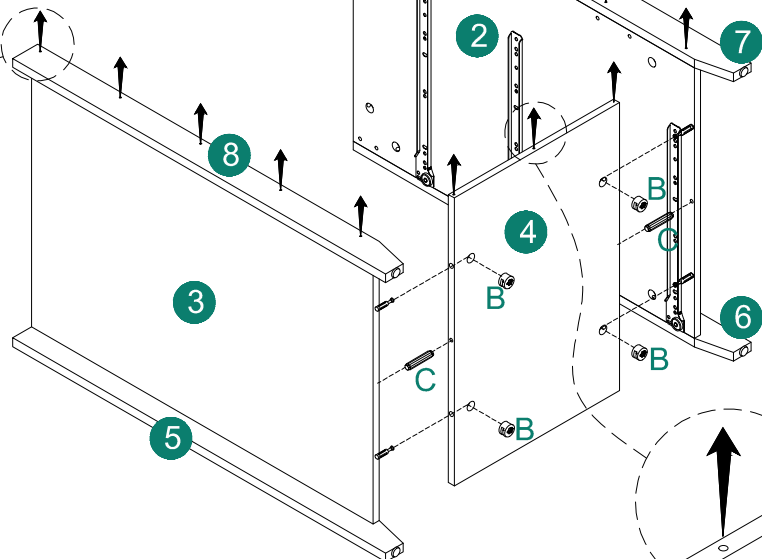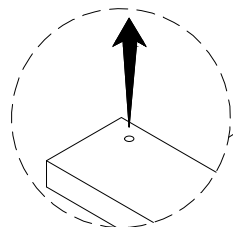

10






⑨ 2pcs



⑩ 1pc



Ⓓ 6pcs

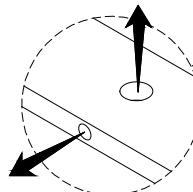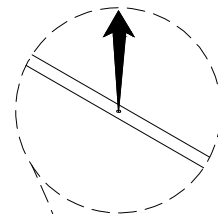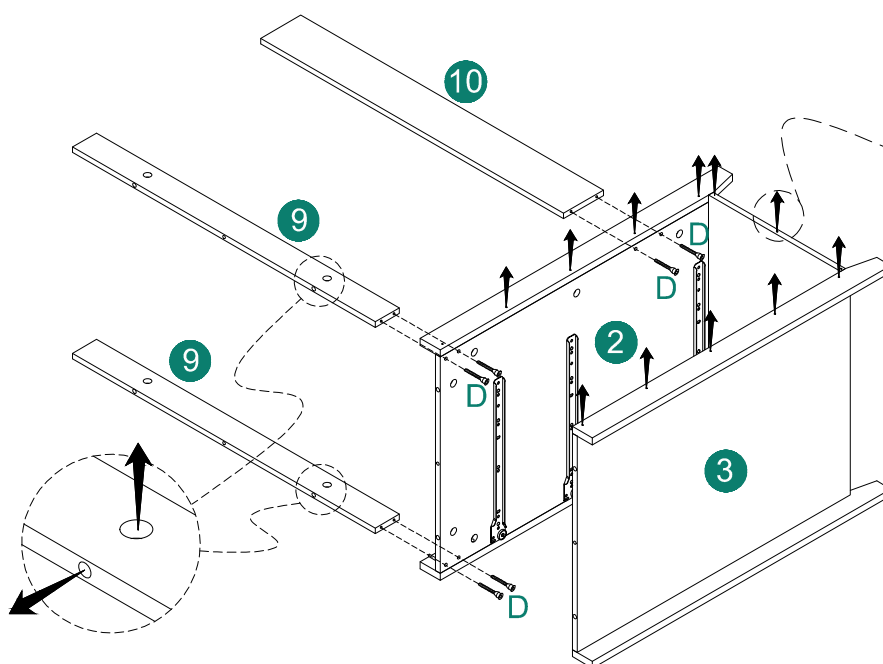


11



① 6pcs

Please note that all these holes are facing up wards

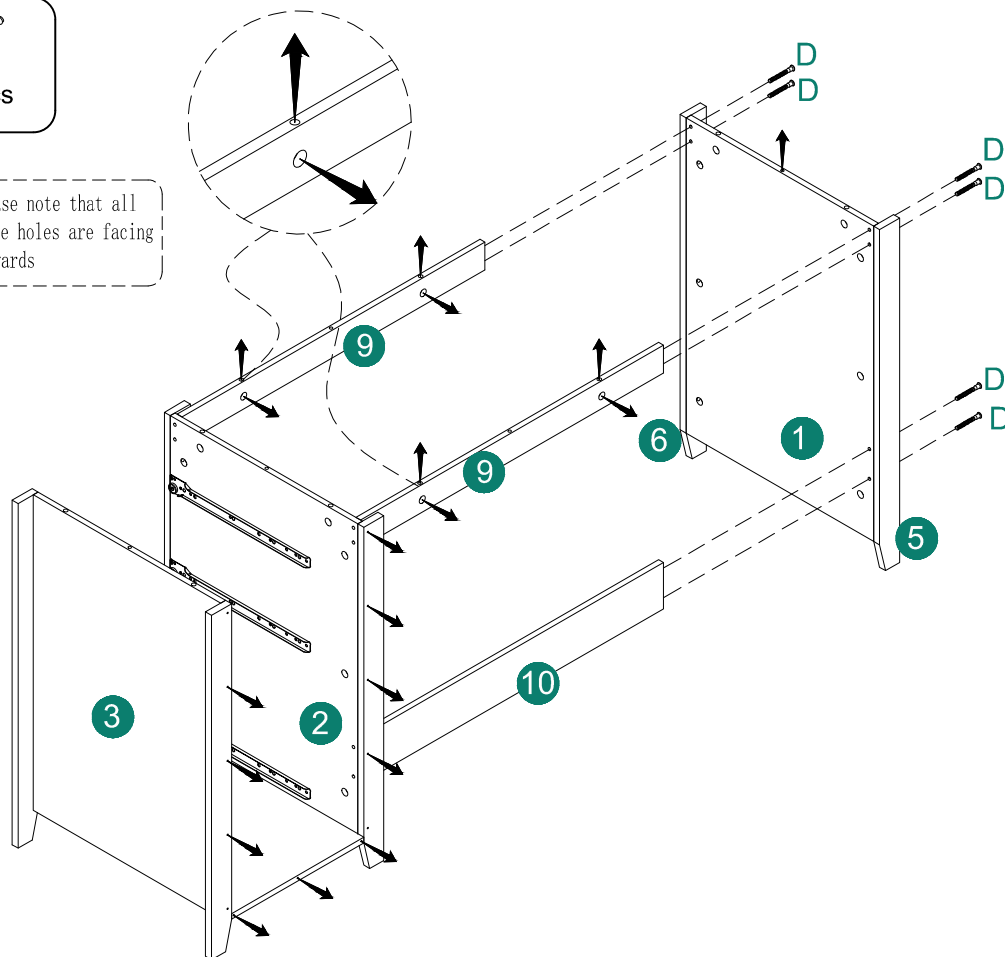

12



① 1pc





④ 4pcs



④ 4pcs



② 2pcs

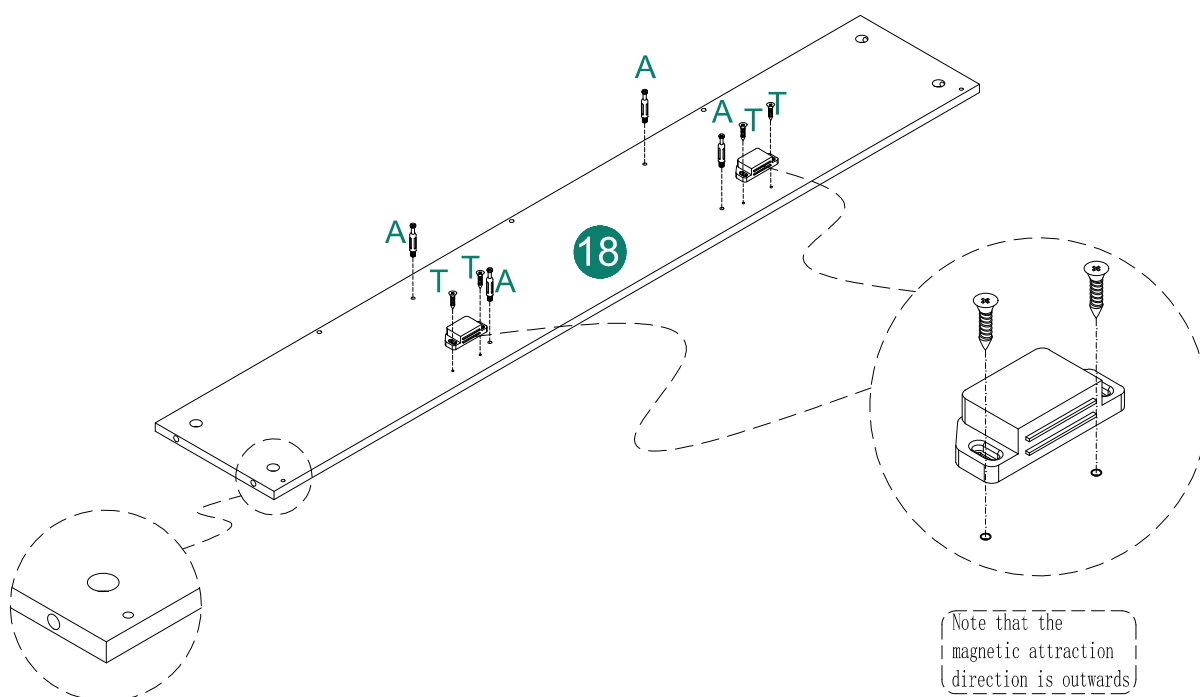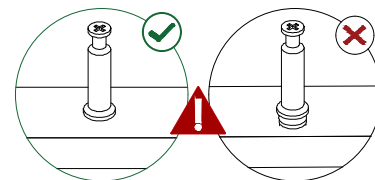

Note that the magnetic attraction direction is outwards

13





①6 1pc



①7 1pc



Ⓑ 4pcs

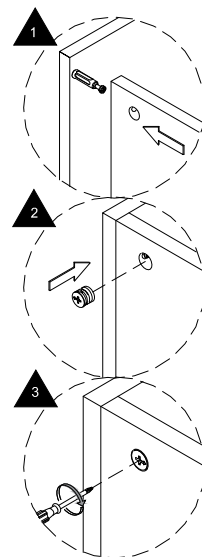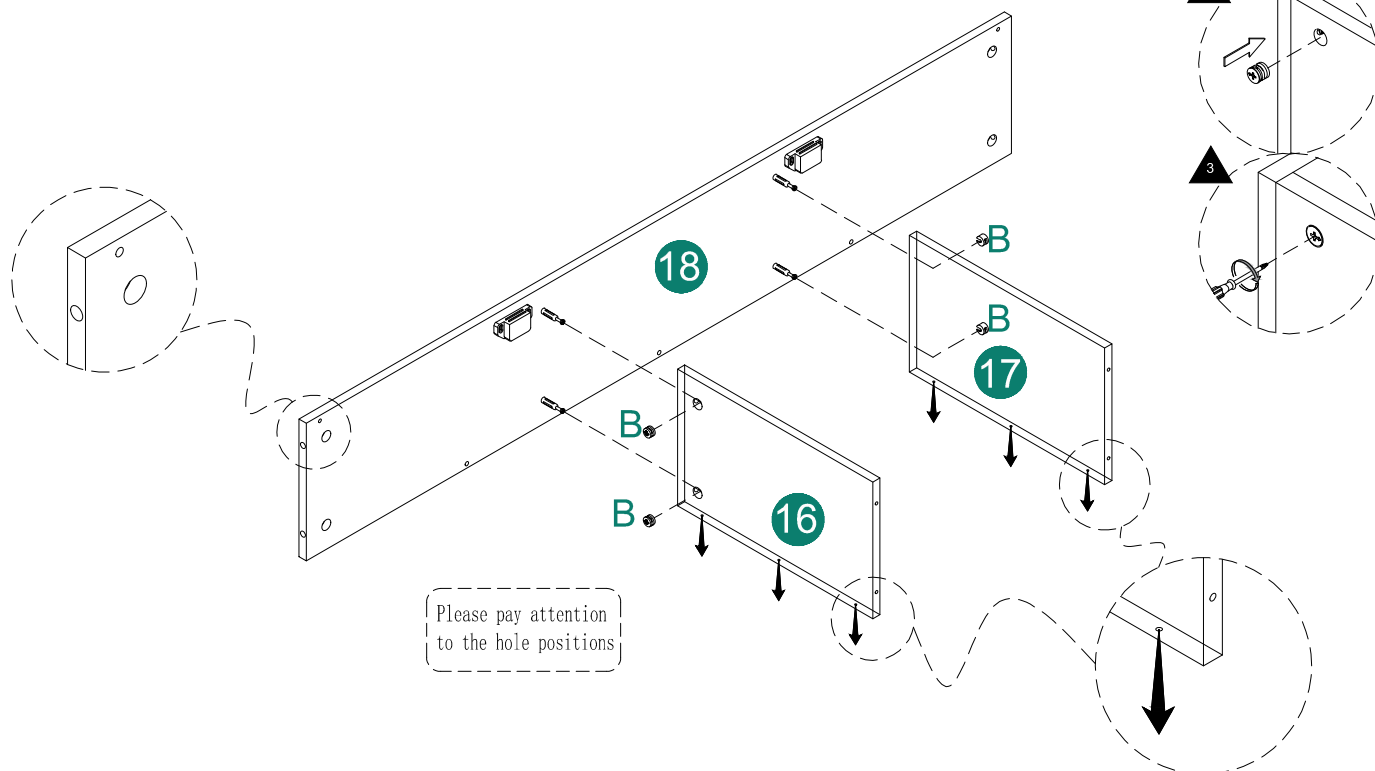


14




①9 1pc



Ⓓ 3pcs

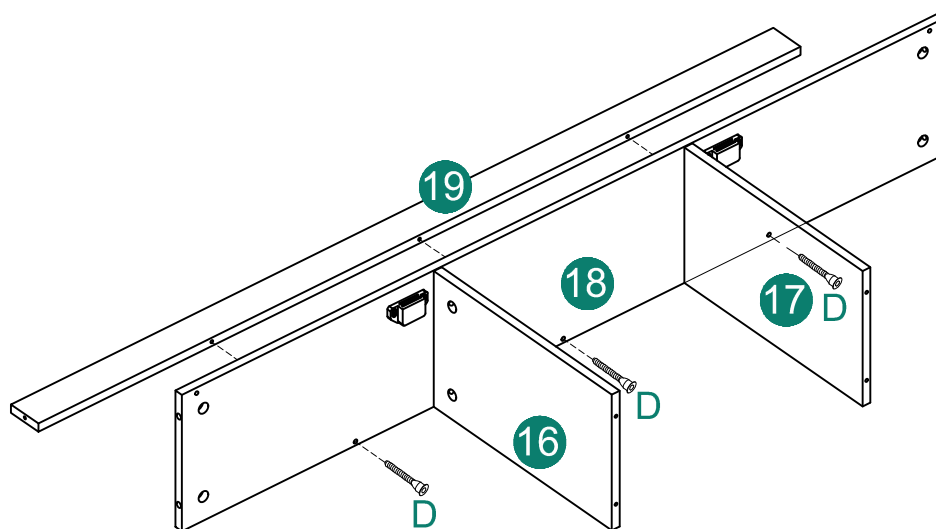


15

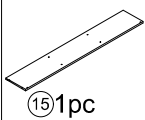

⑮1pc




ⓓ4pcs

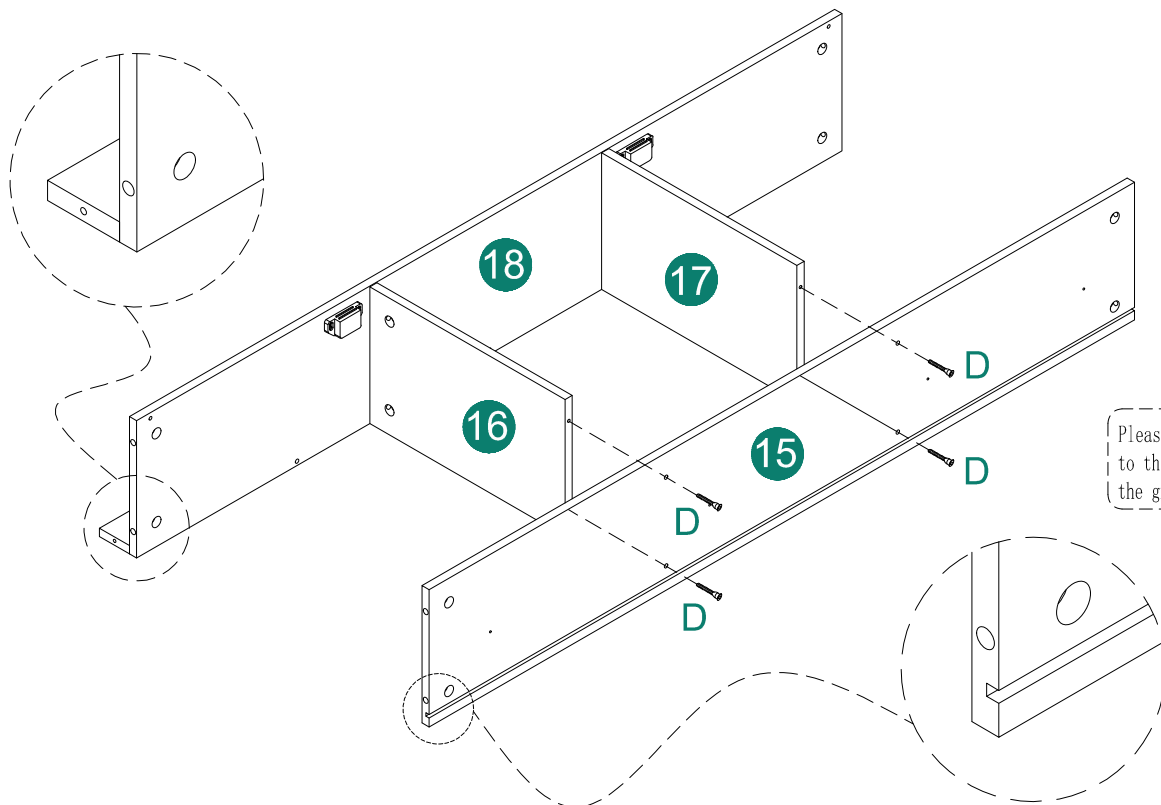


Please pay attention to the direction of the groove

16





⑬1pc



⑫1pc



Ⓐ12pcs

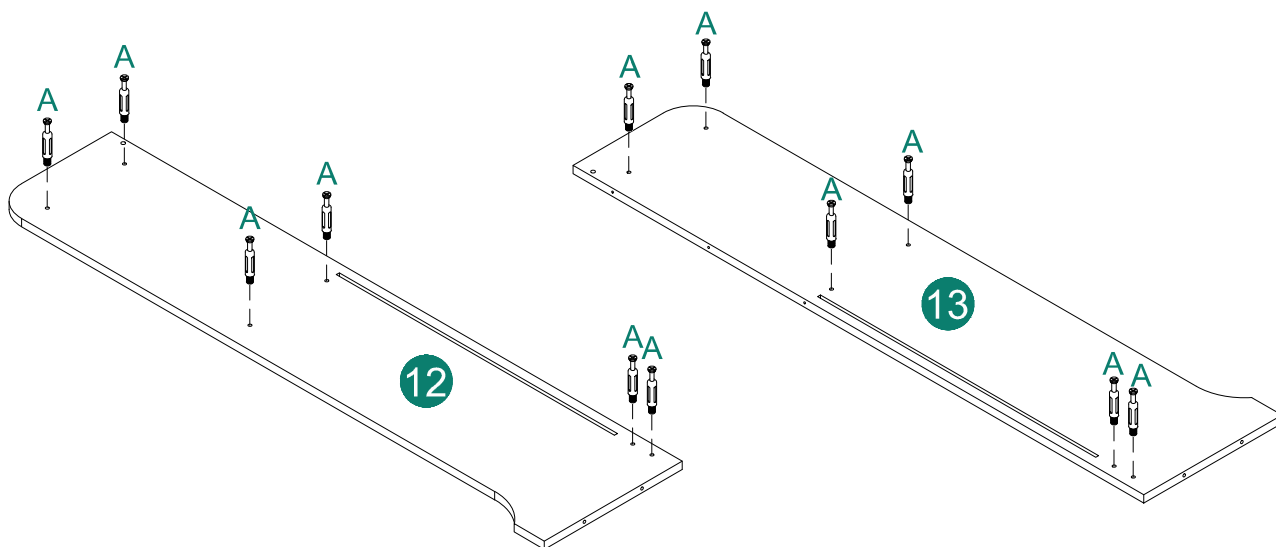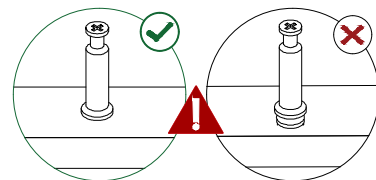



17




Ⓑ 4pcs



Ⓓ 1pc

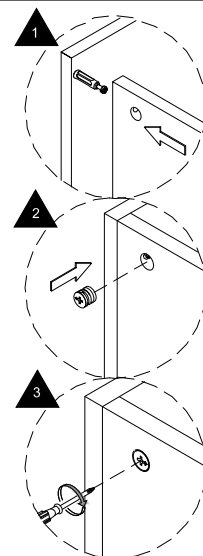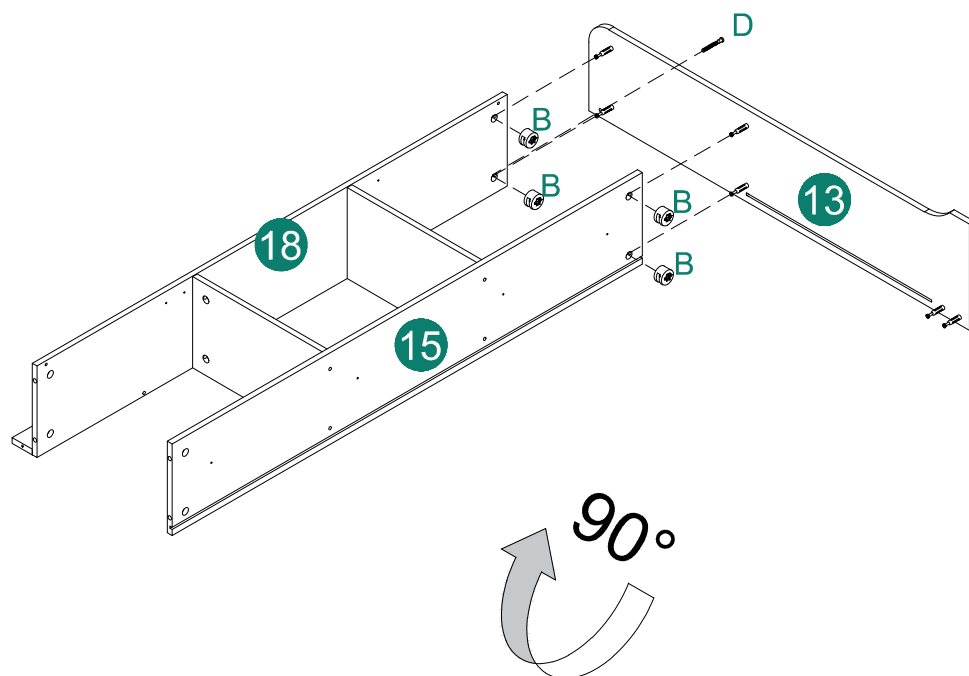



18





Ⓐ 1pc






Ⓑ 2pcs




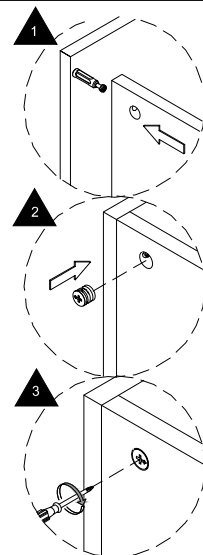
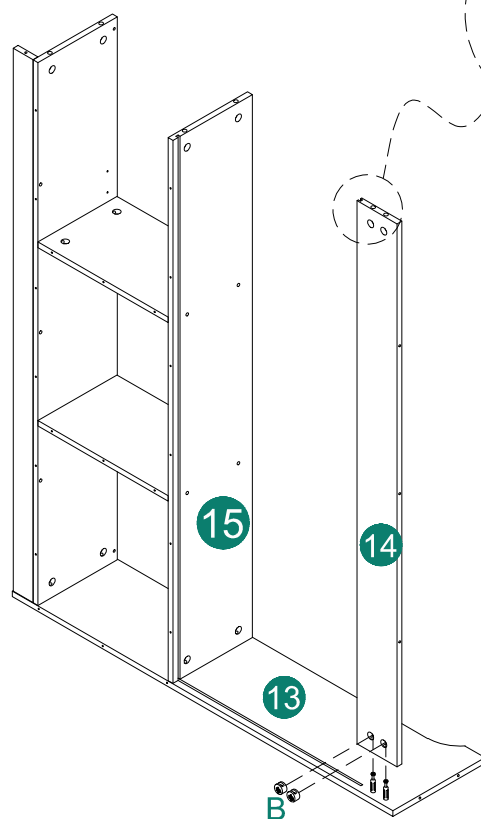


19

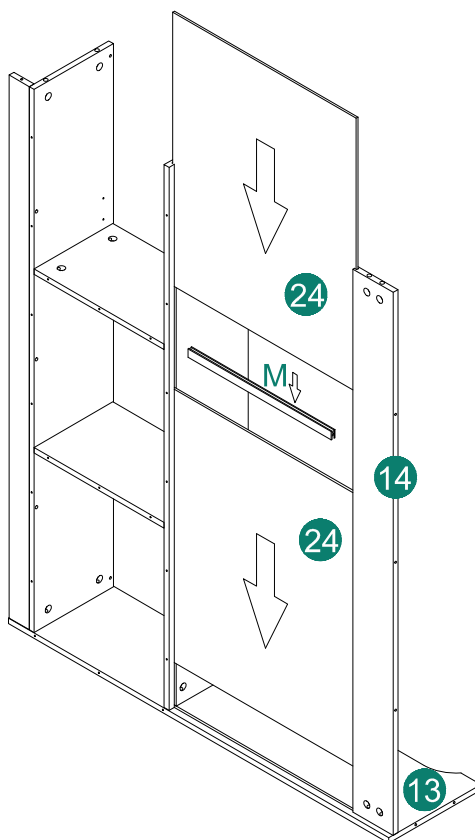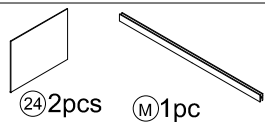

20

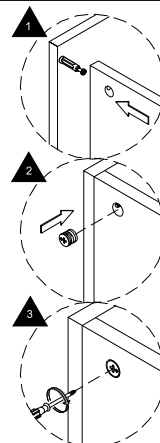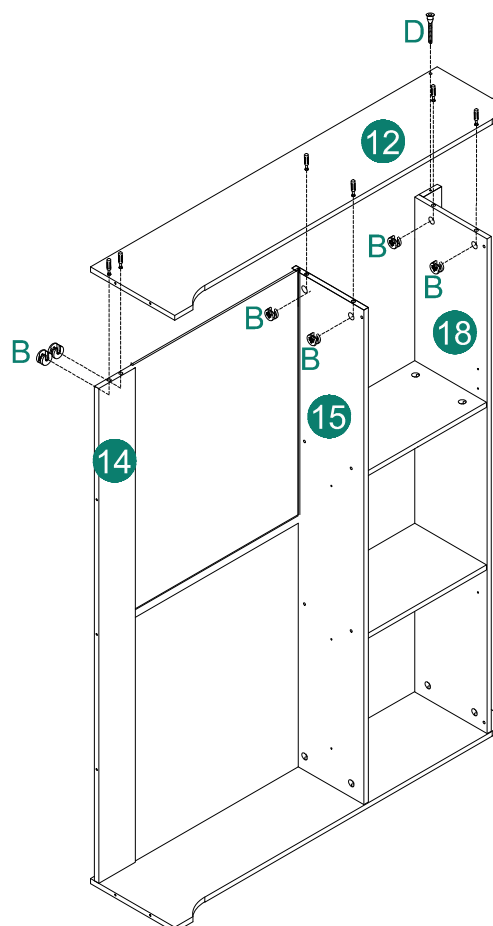



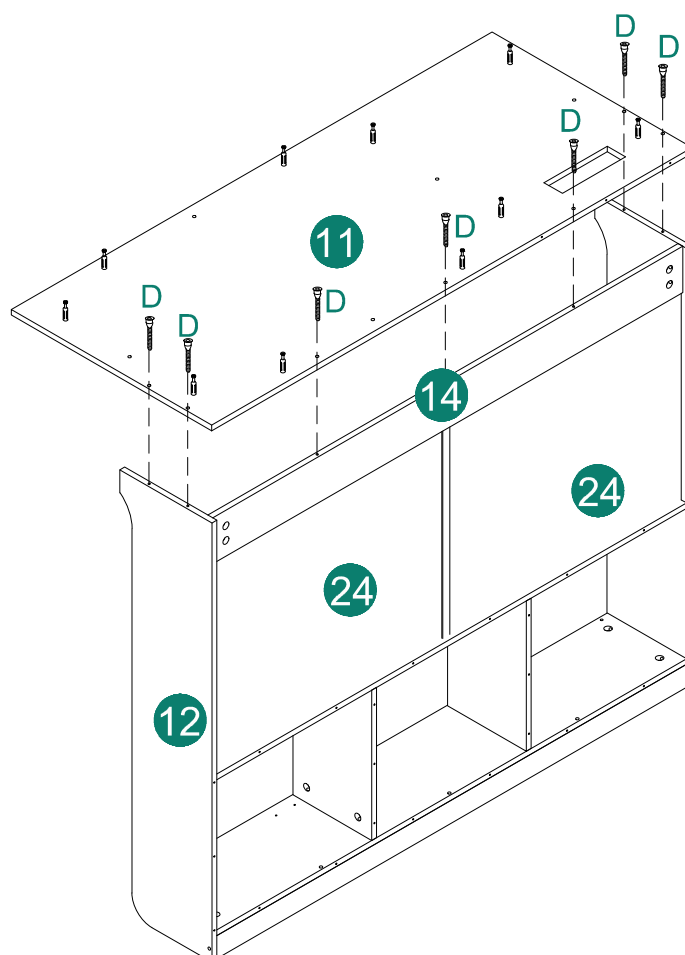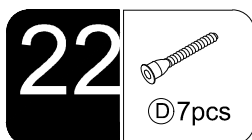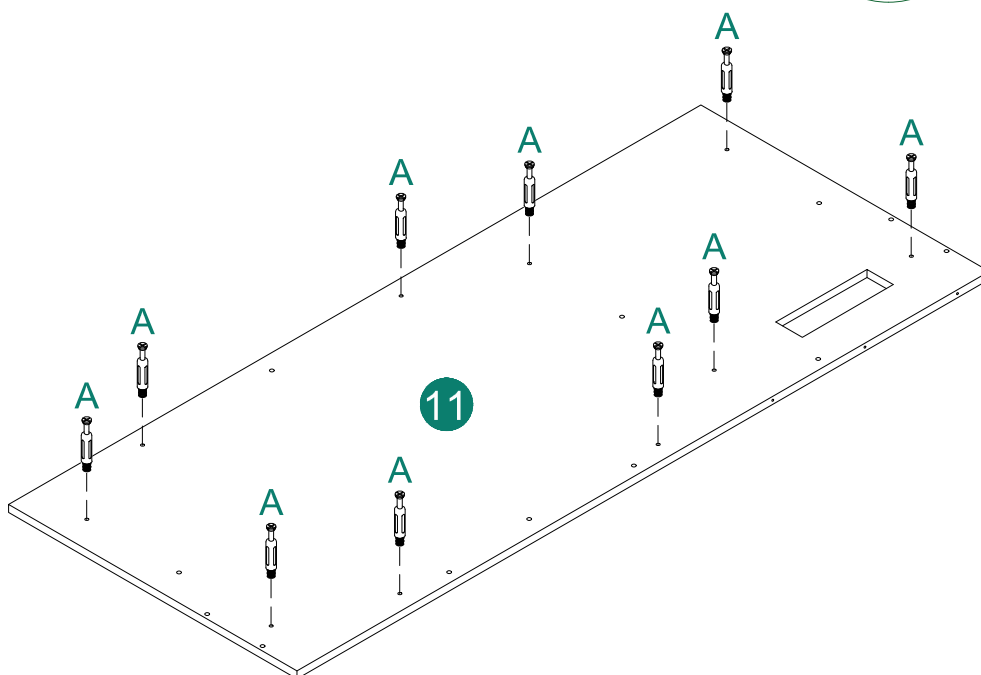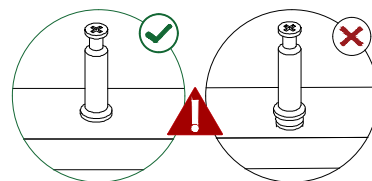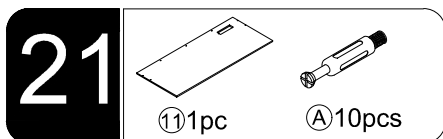


23


Ⓑ10pcs


Ⓒ5pcs

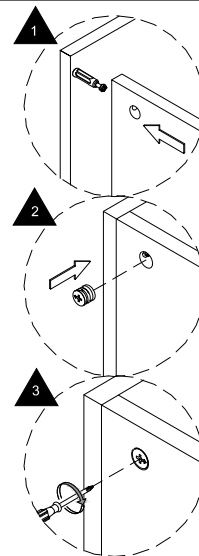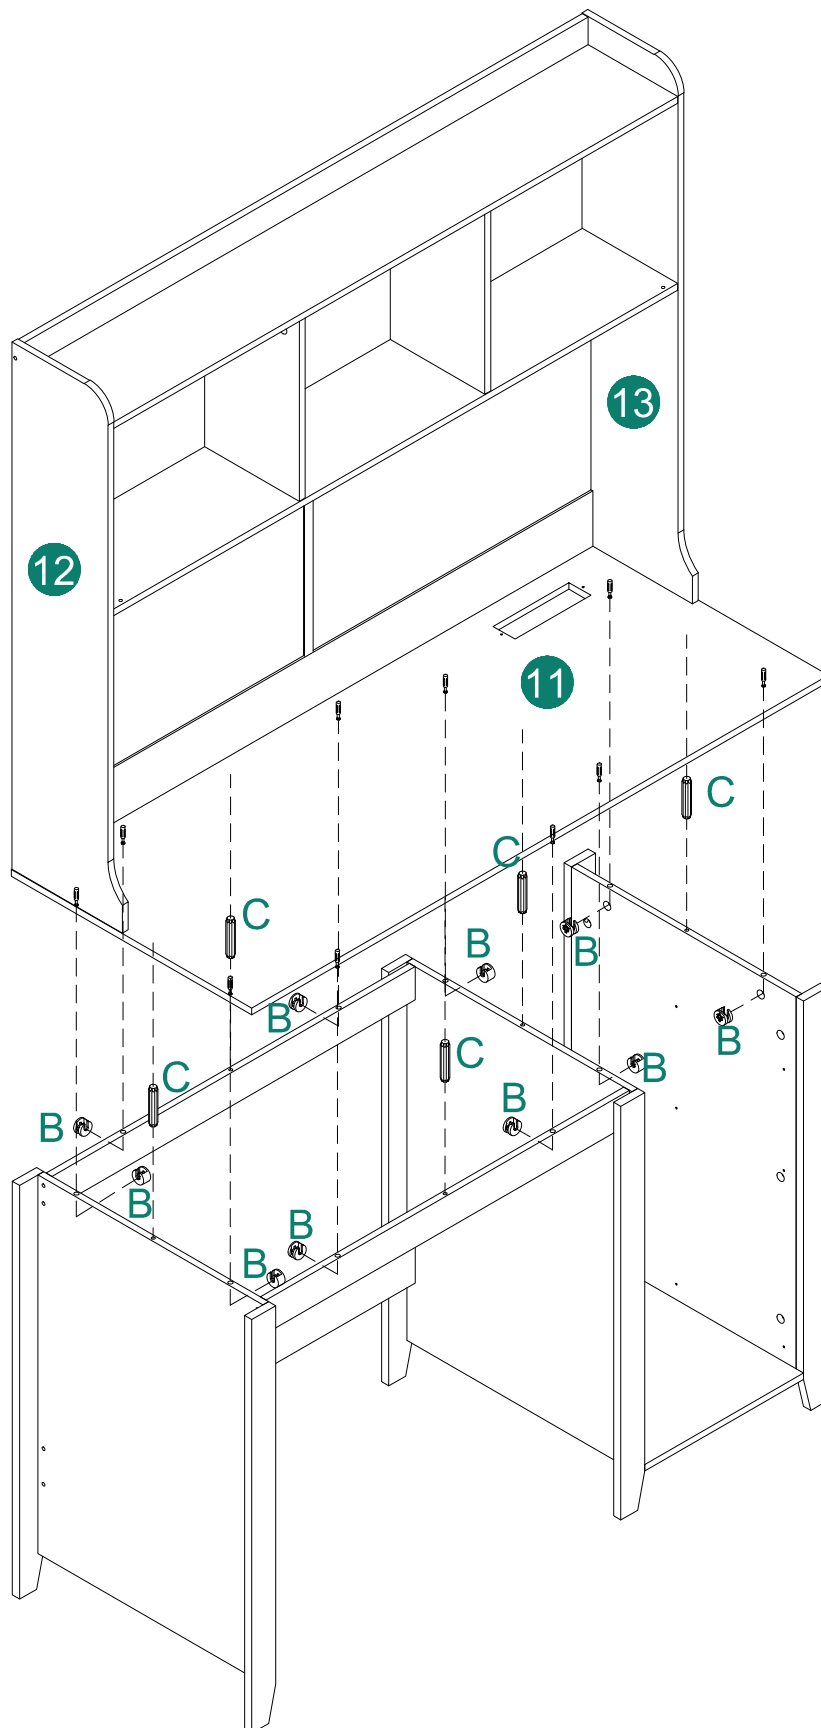

24




②3 1pc



③4 1pc




Ⓔ 40pcs

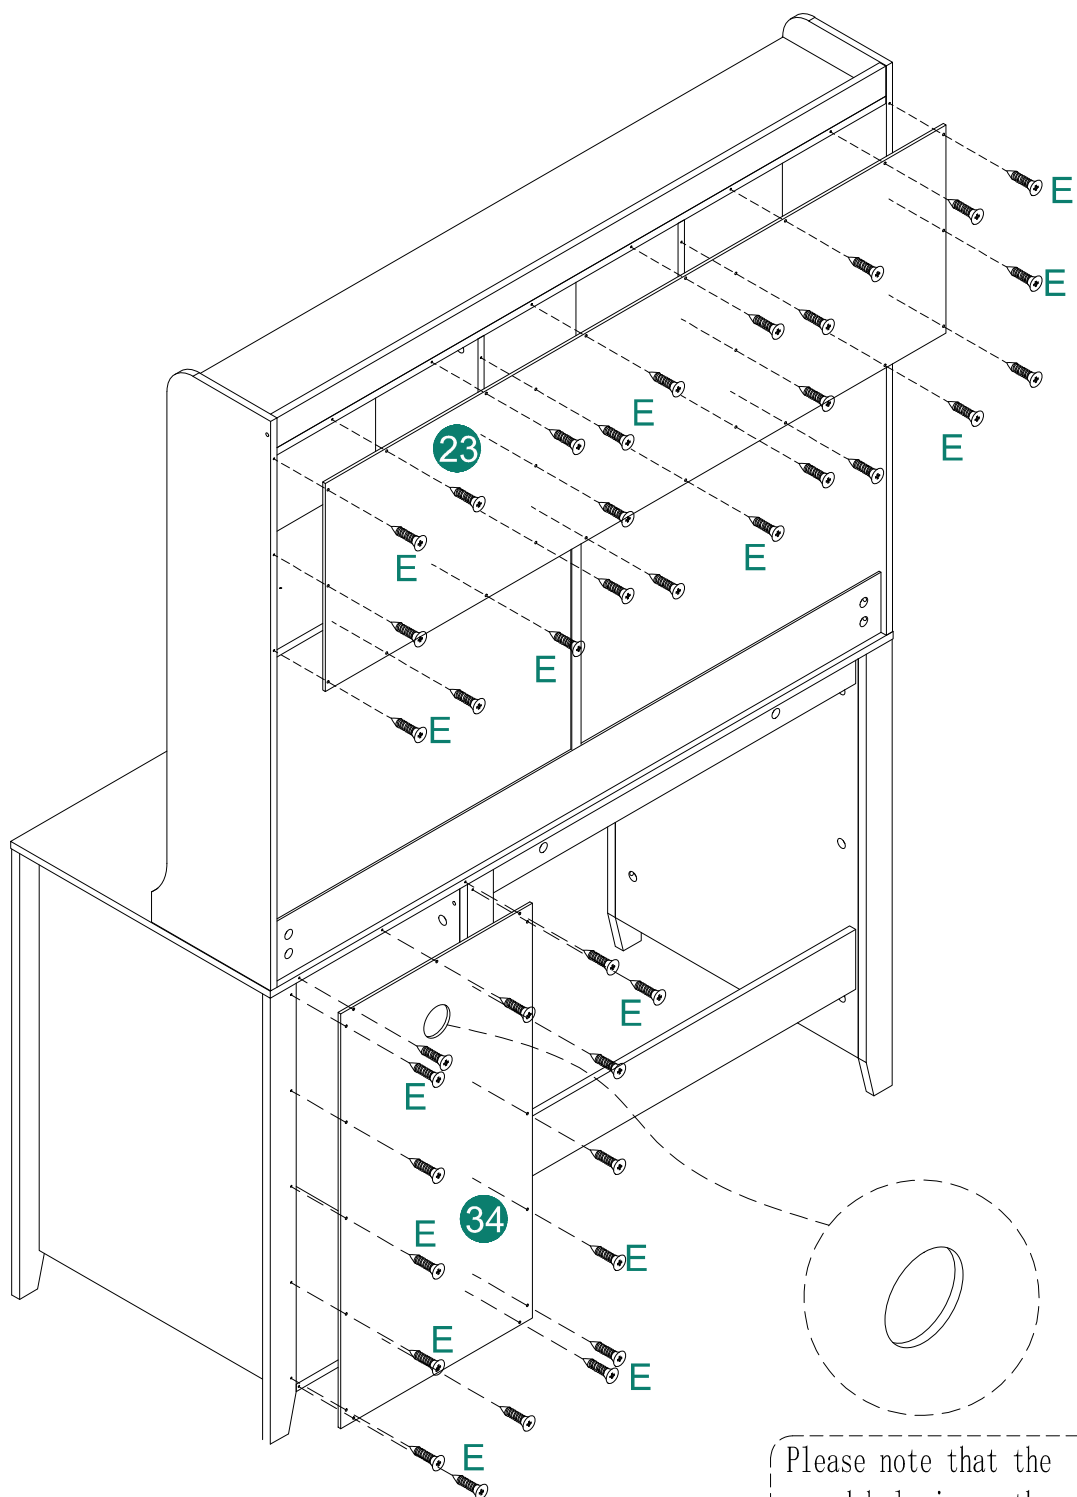

Please note that the round hole is on the upper side.

25




Ⓟ 1pc



















ⓔ 2pcs





Ⓛ 10pcs

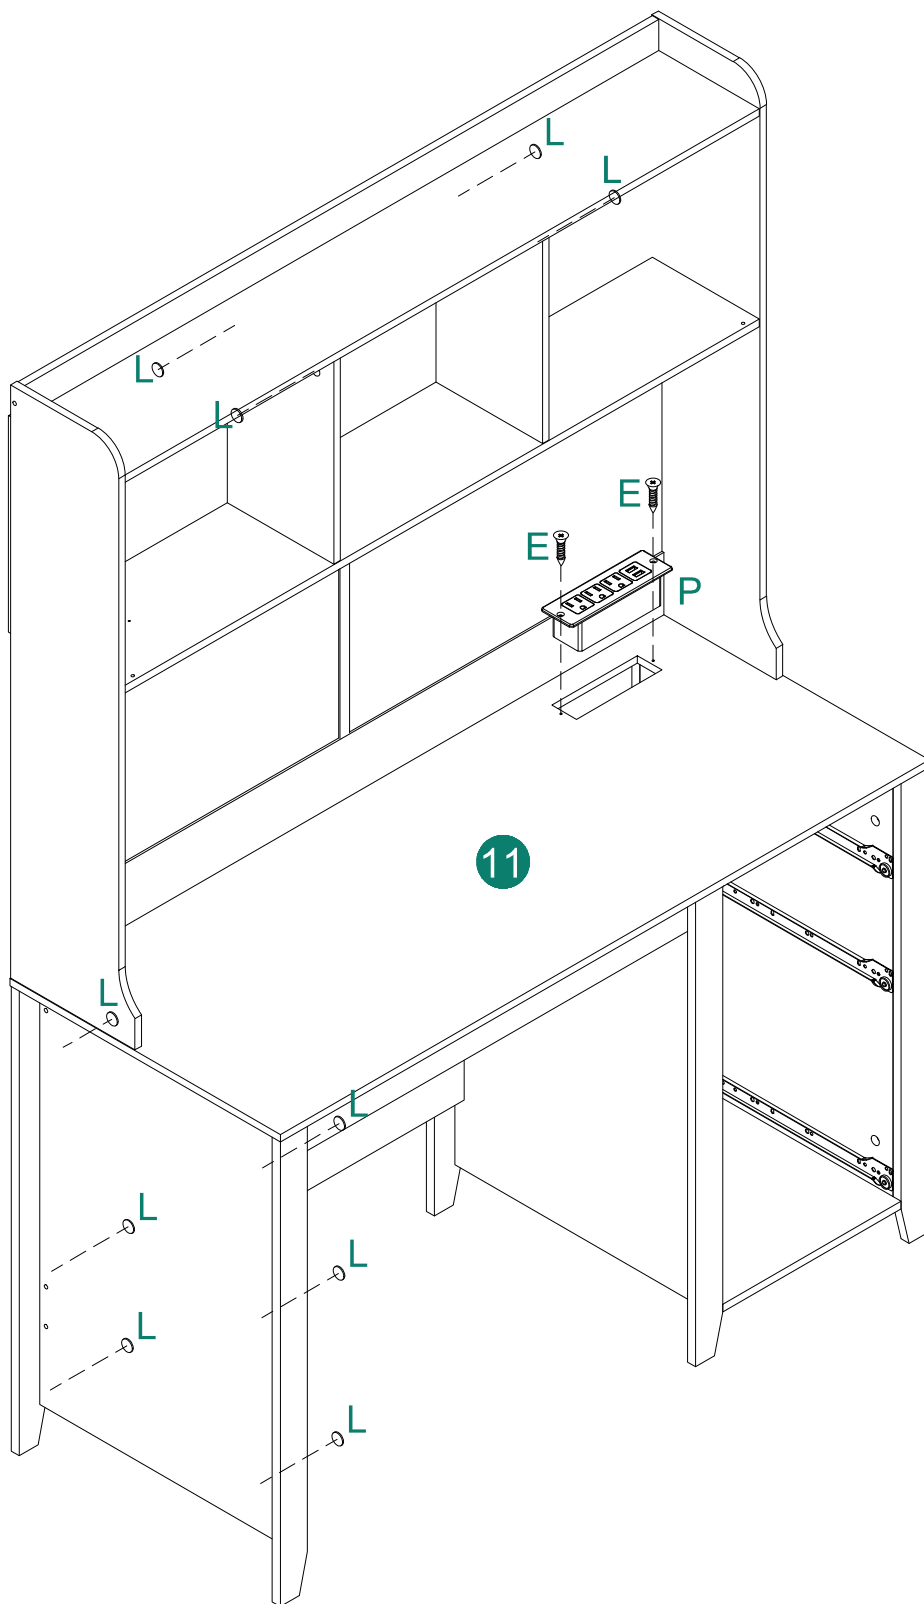

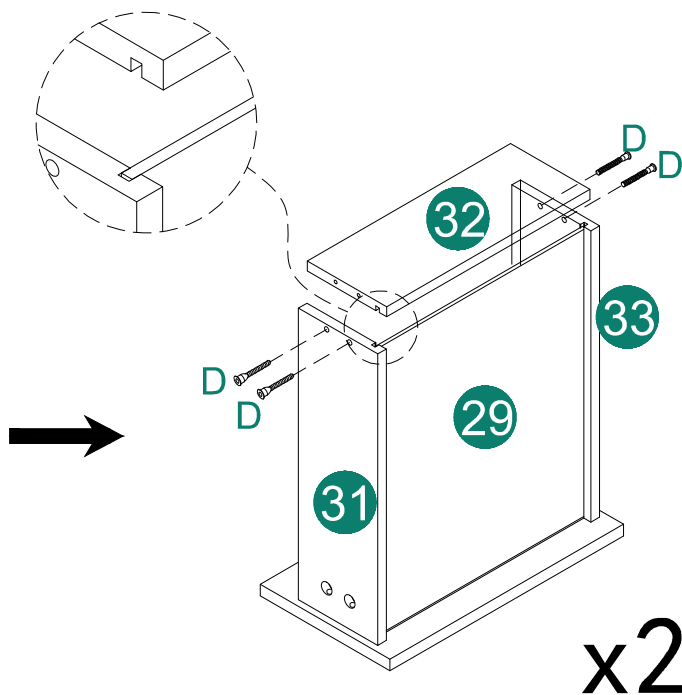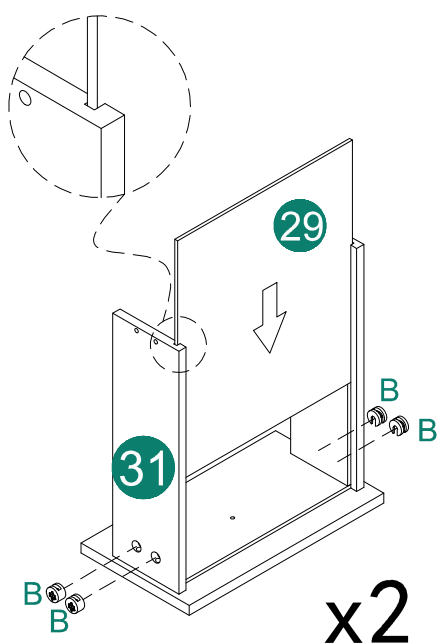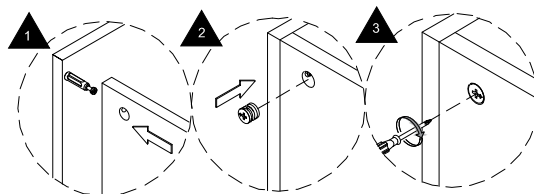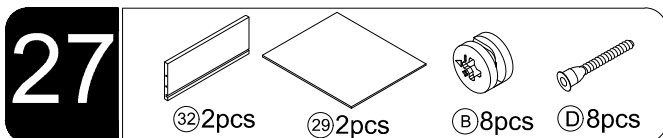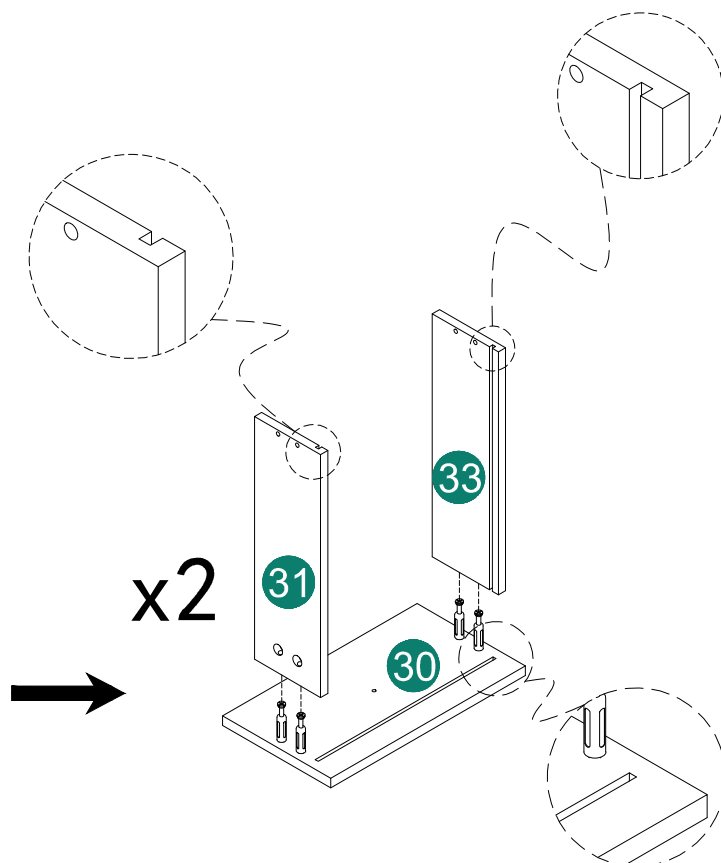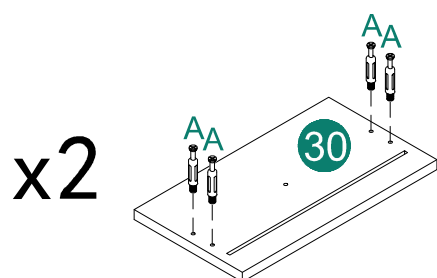
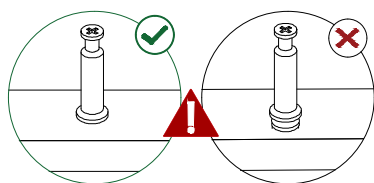
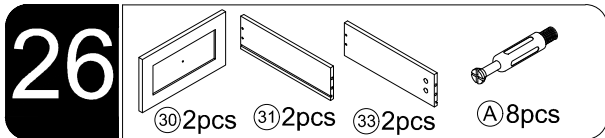


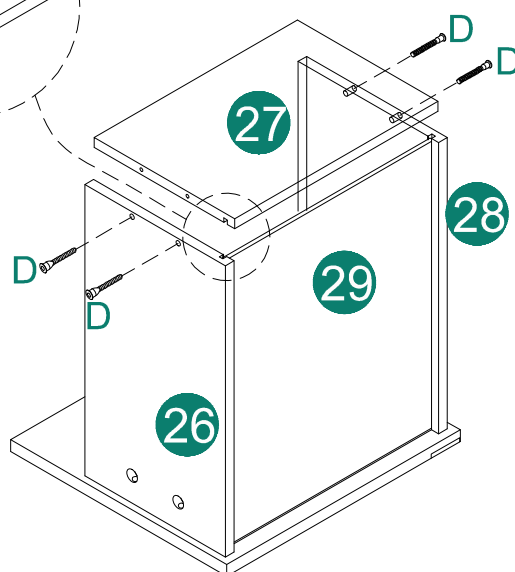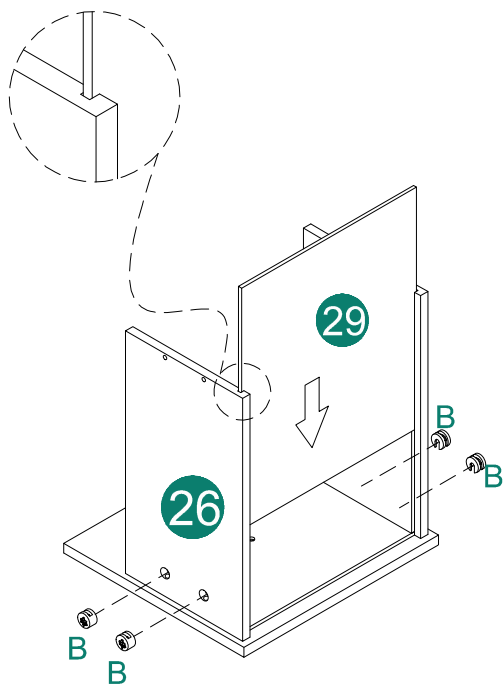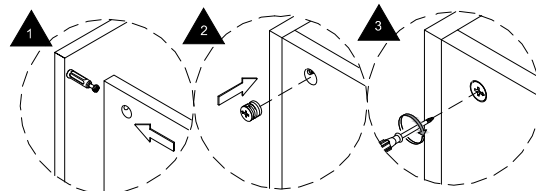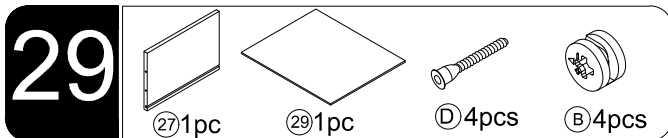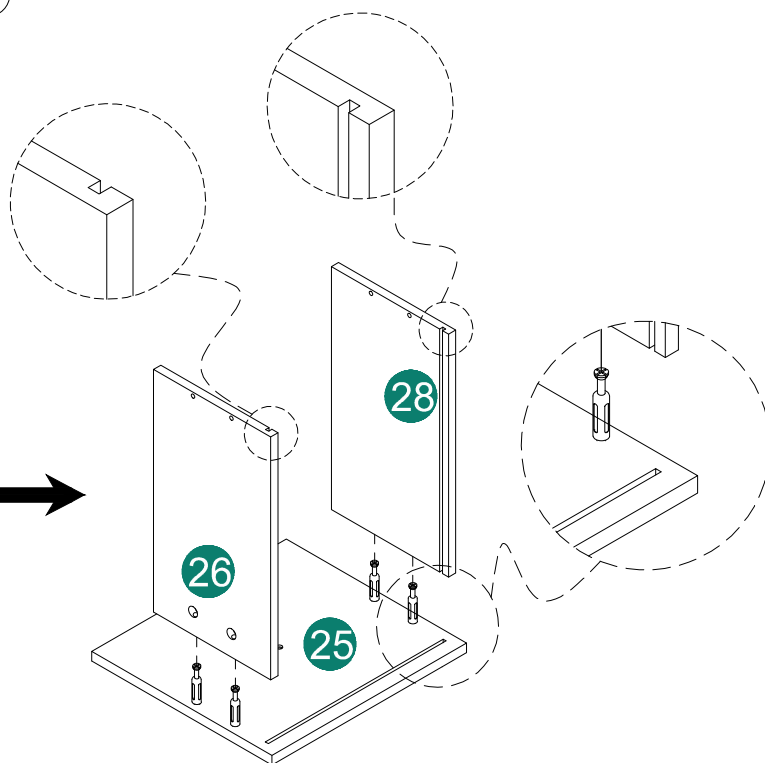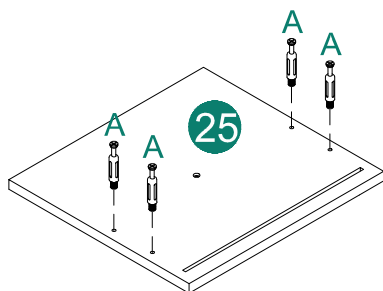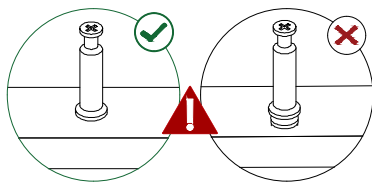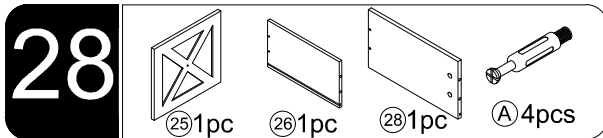



30

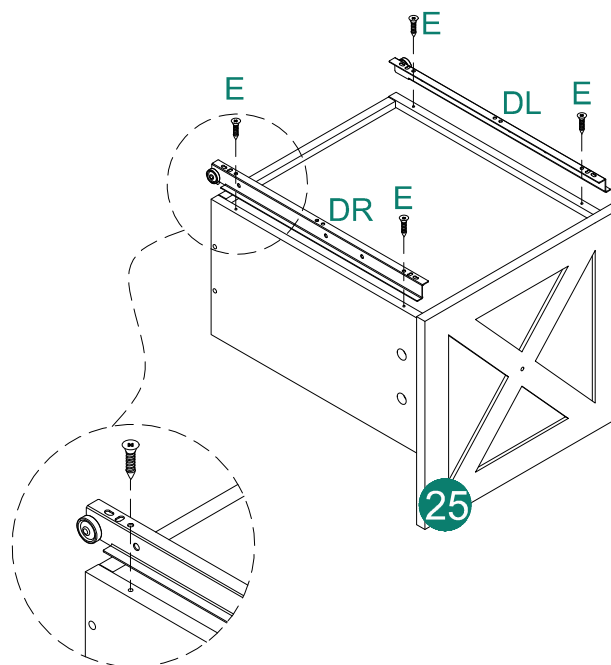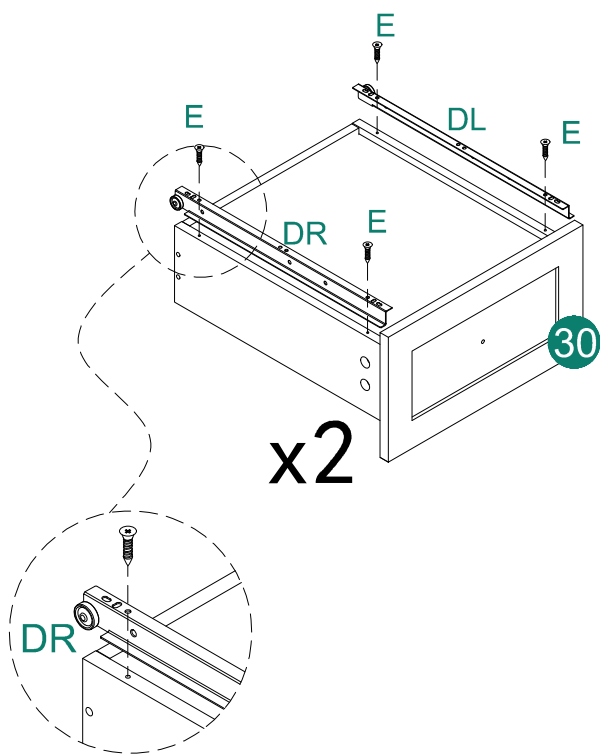

31

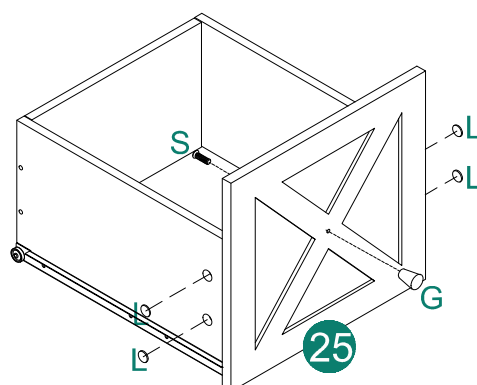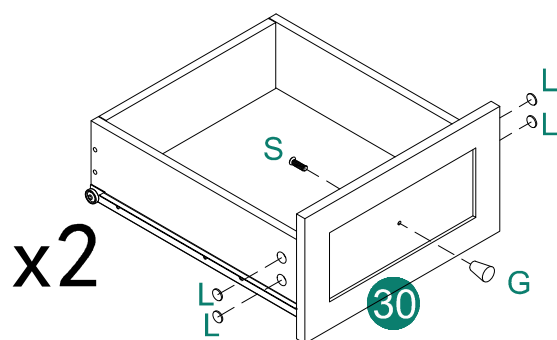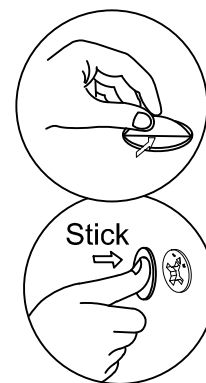





32

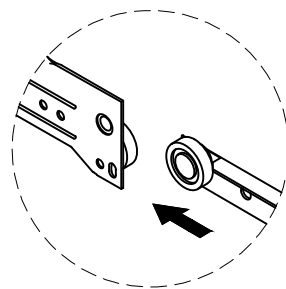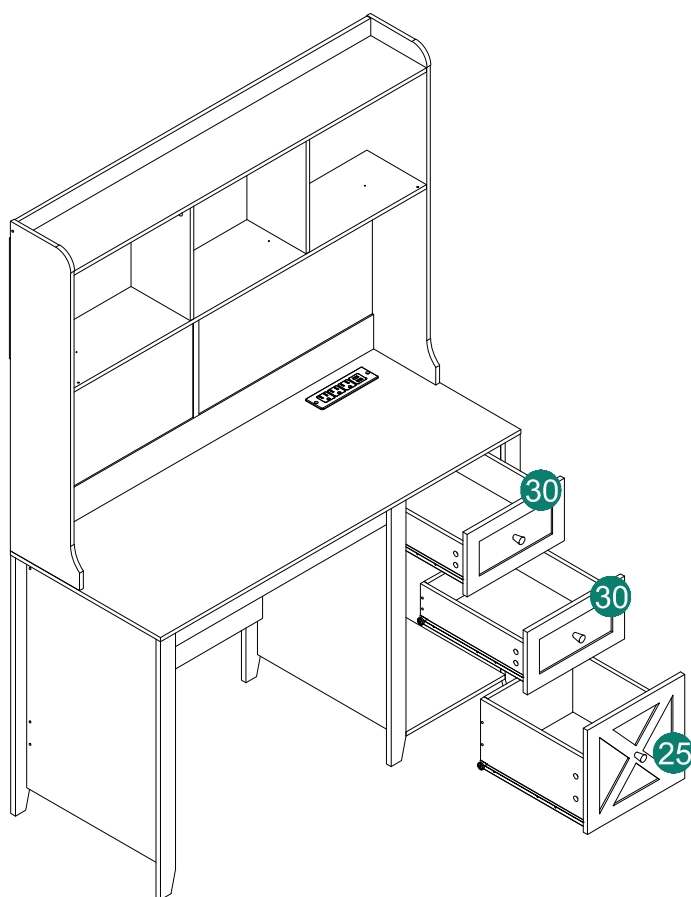

33

- 20 1pc
- 22 1pc
- E 14pcs
- H2
- H1 1pcs

(EN: Remove the protective film before installation)

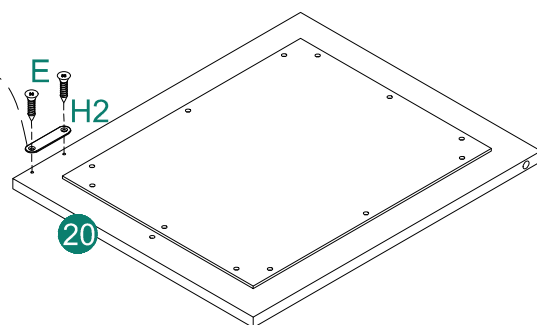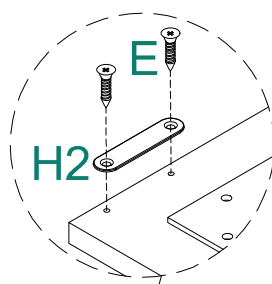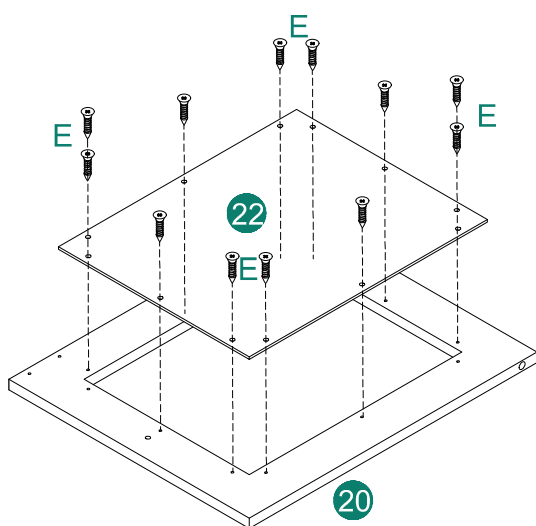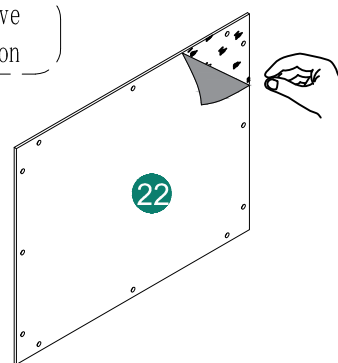

34



21 1pc



22 1pc





E 14pcs



H2 1pc

(EN: Remove the protective film before installation)

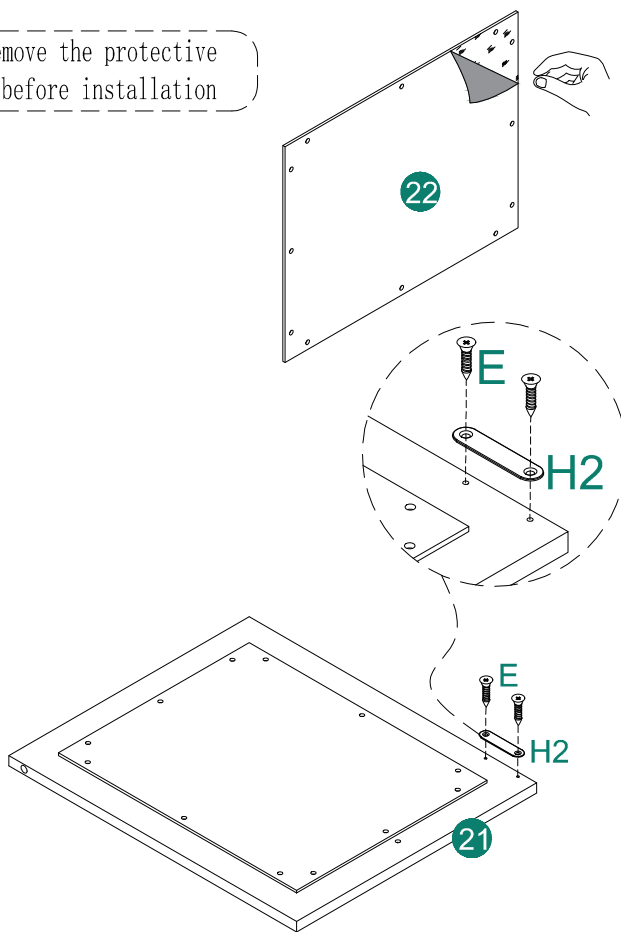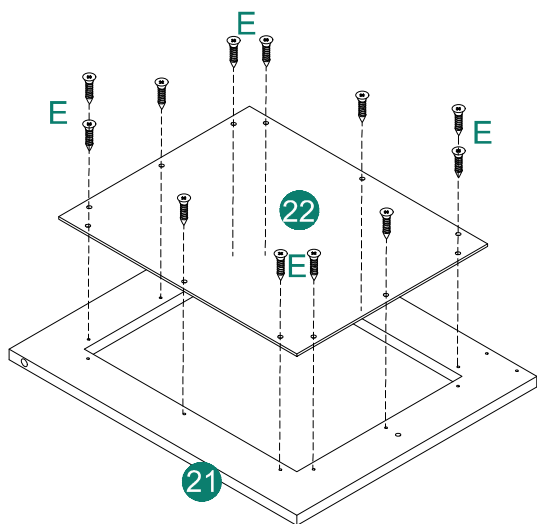

35



N 2pcs



O 2pcs





G 2pcs








M4*12
S 2pcs



Please note that #0 is elastic

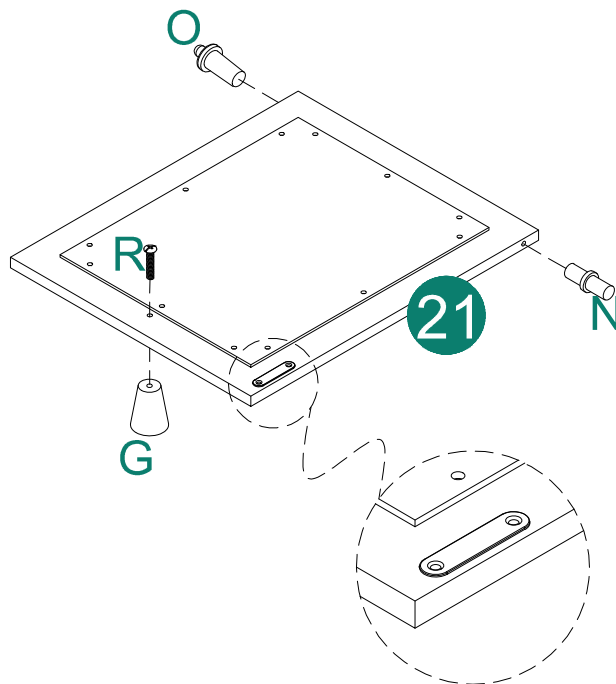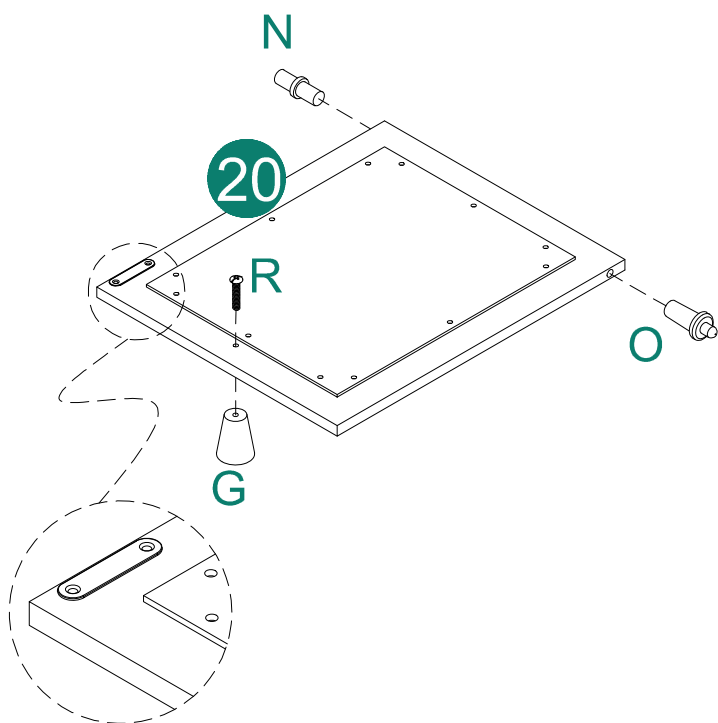


Please note that during installation, you need to insert #N into the hole first.

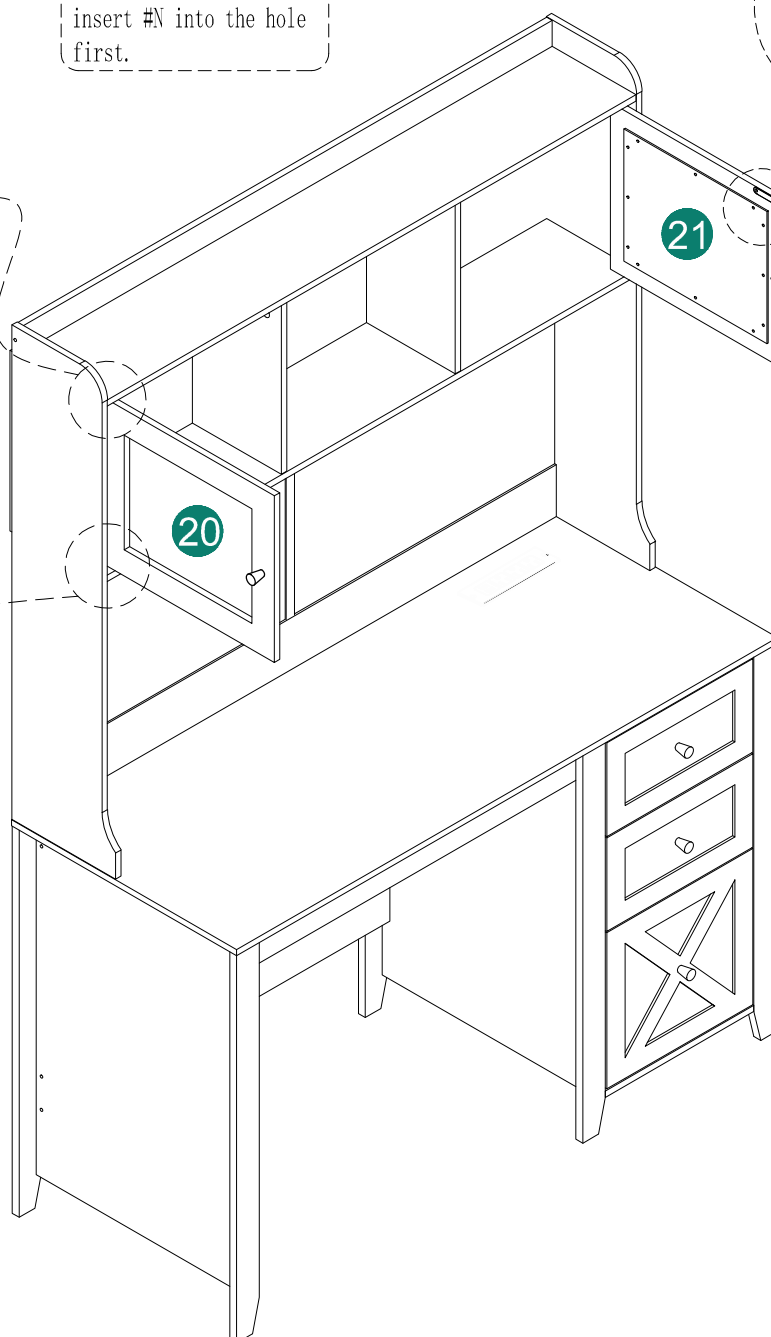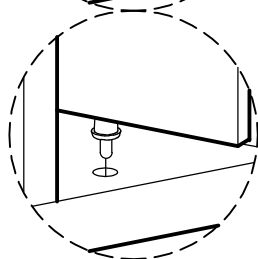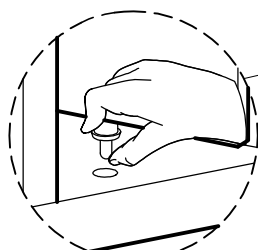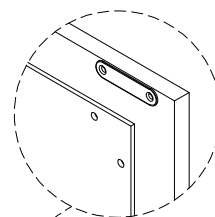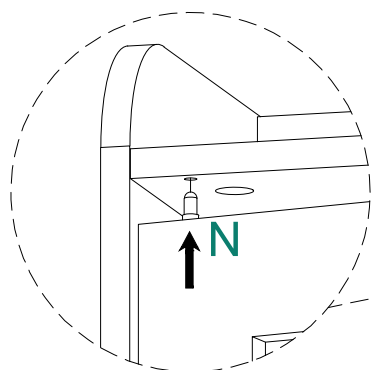



37

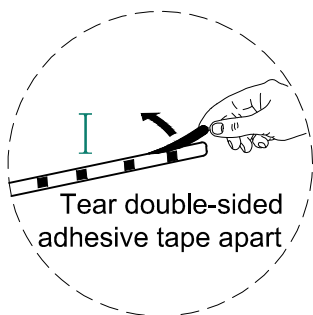

Please note that the light strip should be applied to the inner side of the hole.

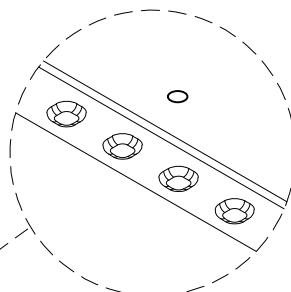


Please note that the button switch is located on the side close to the power socket.

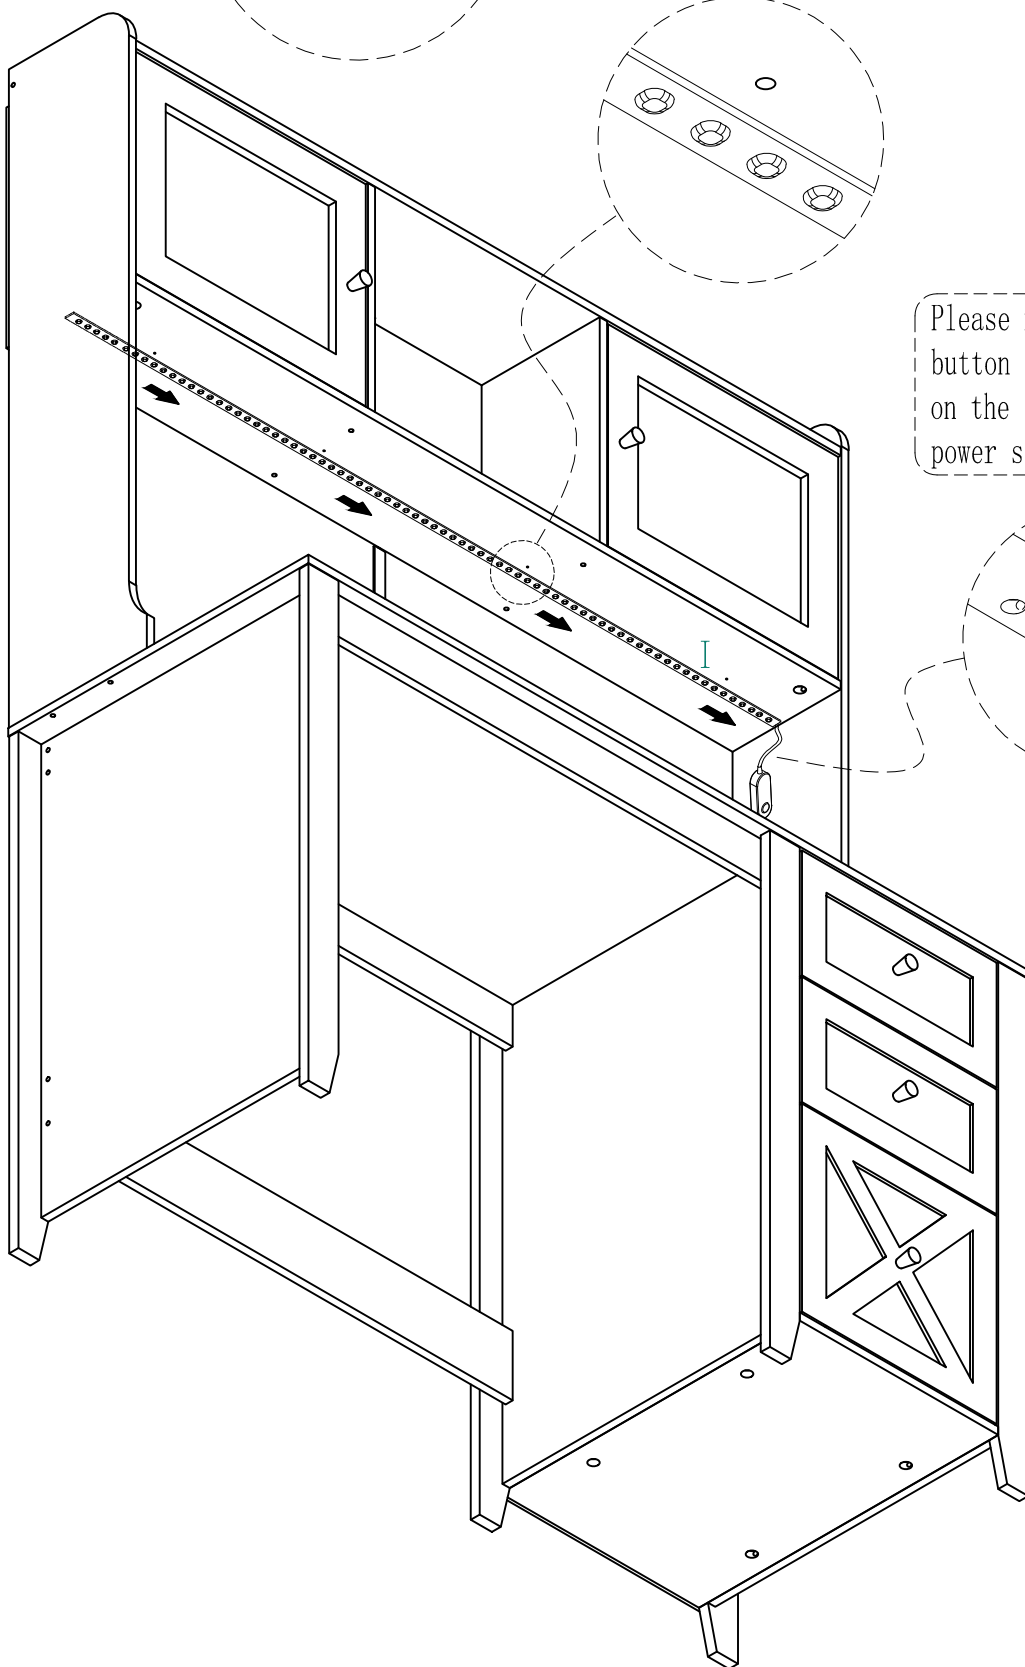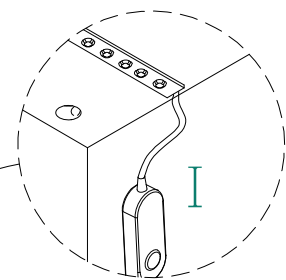

38

E 4pcs


Q 4pcs

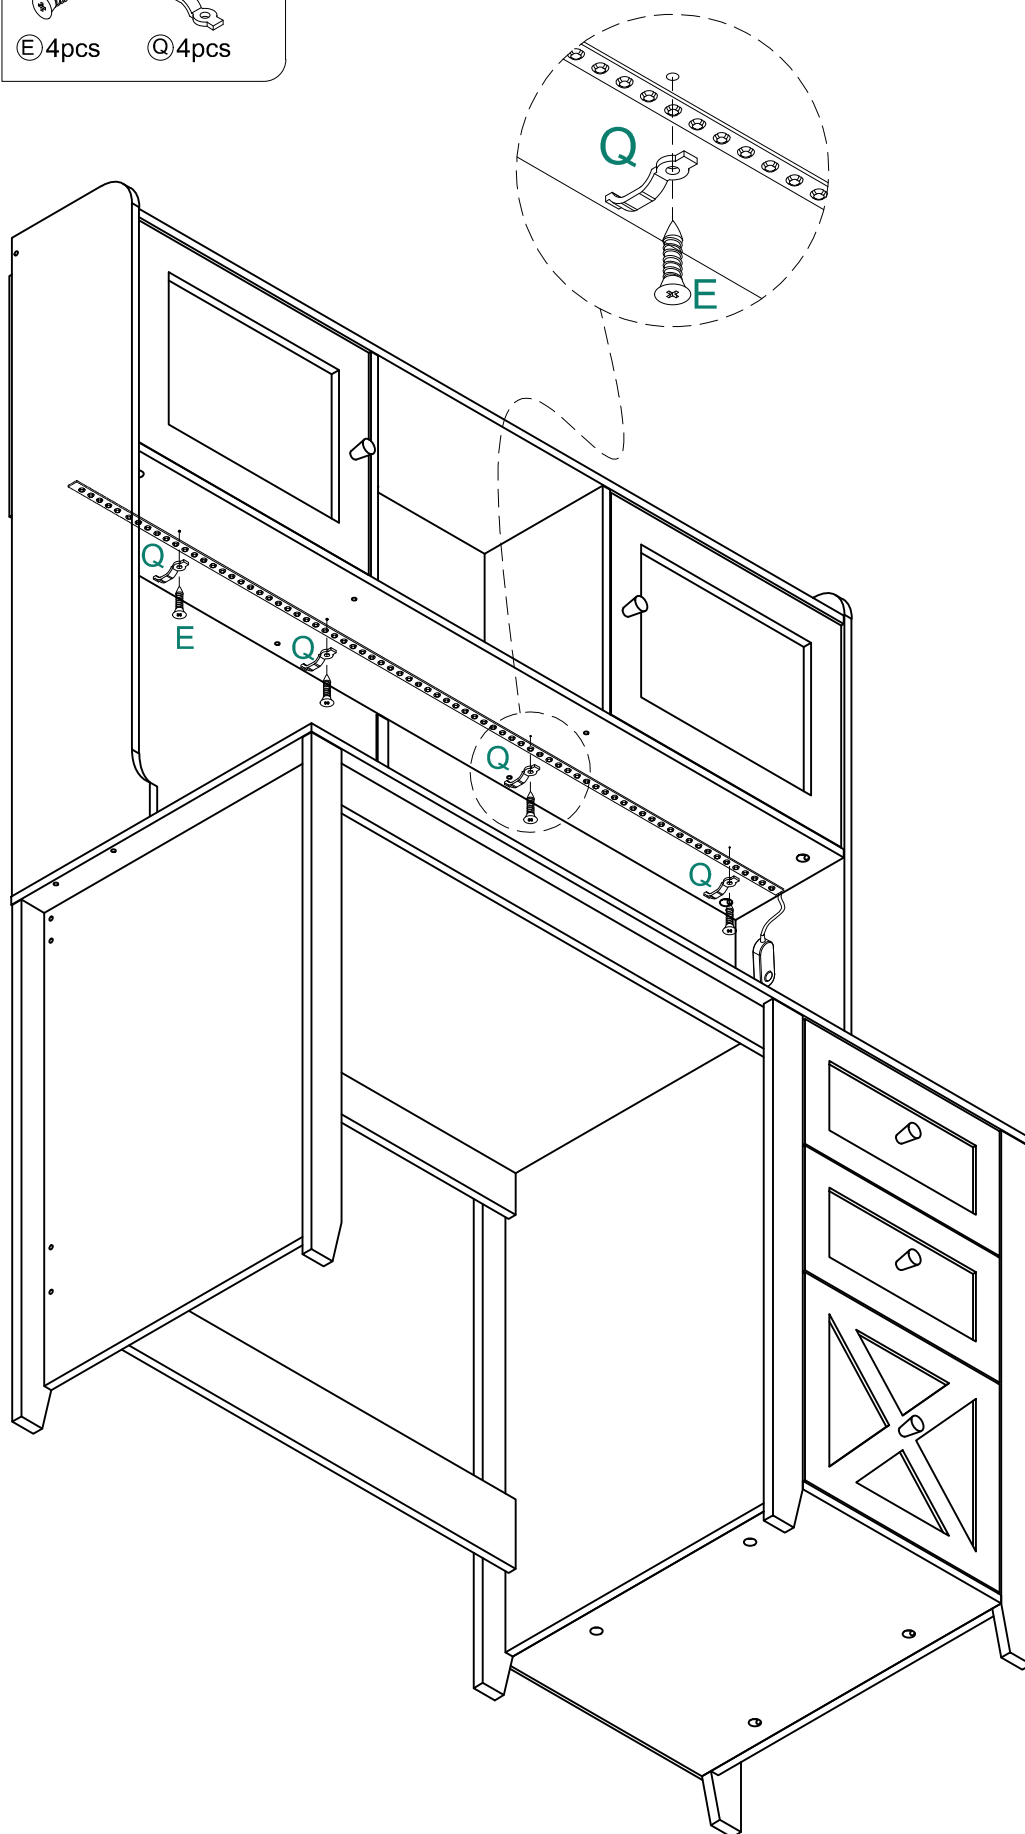

39



ⓐ 8pcs ⓑ 8pcs

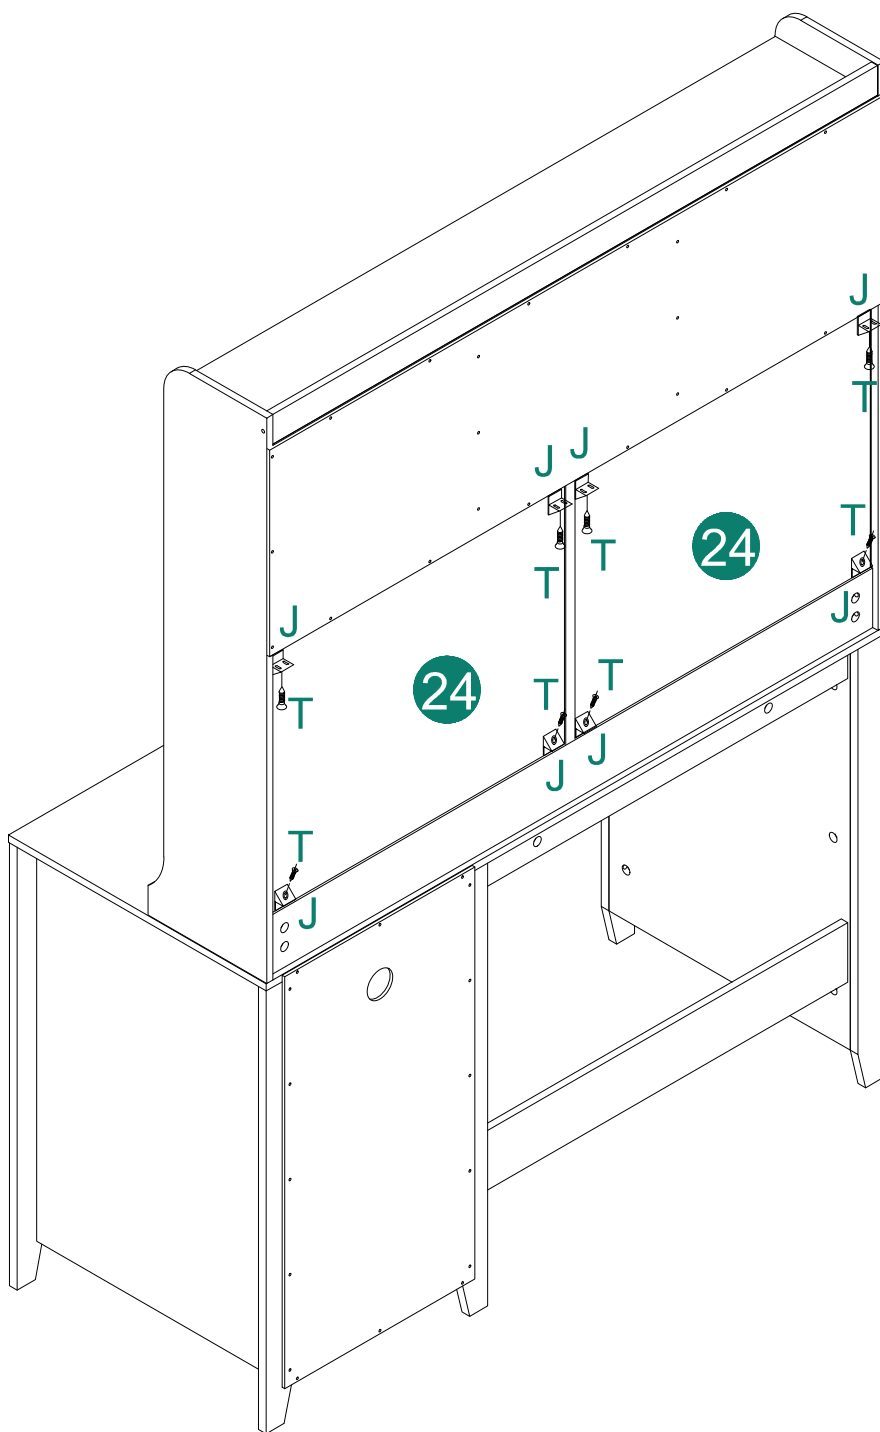


40


M4x12




Ⓚ 2pcs

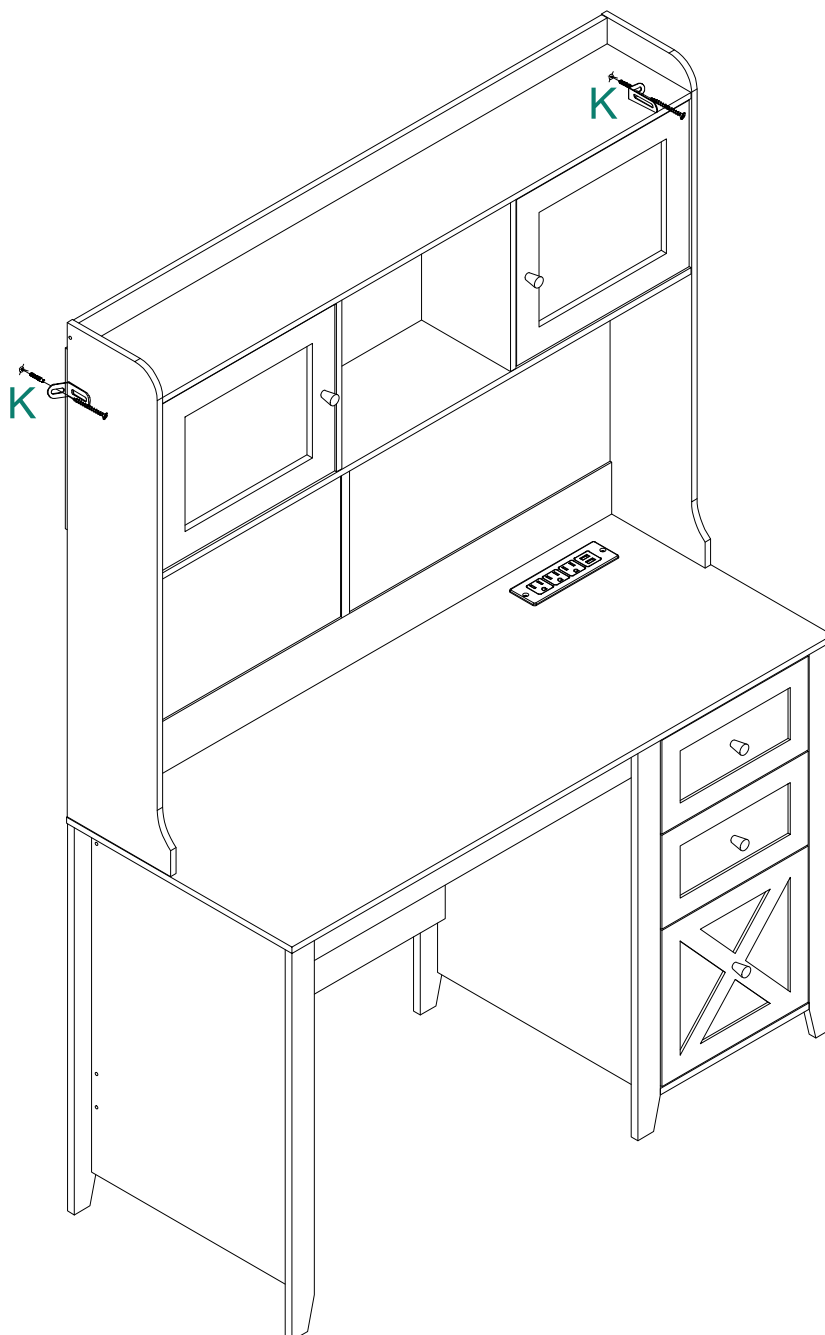


STEP1



STEP2



STEP3

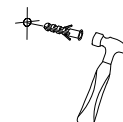

STEP4



STEP5

