


KNOCK-DOWN GLASS TERRARIUM INSTRUCTION MANUAL JRKF SERIES

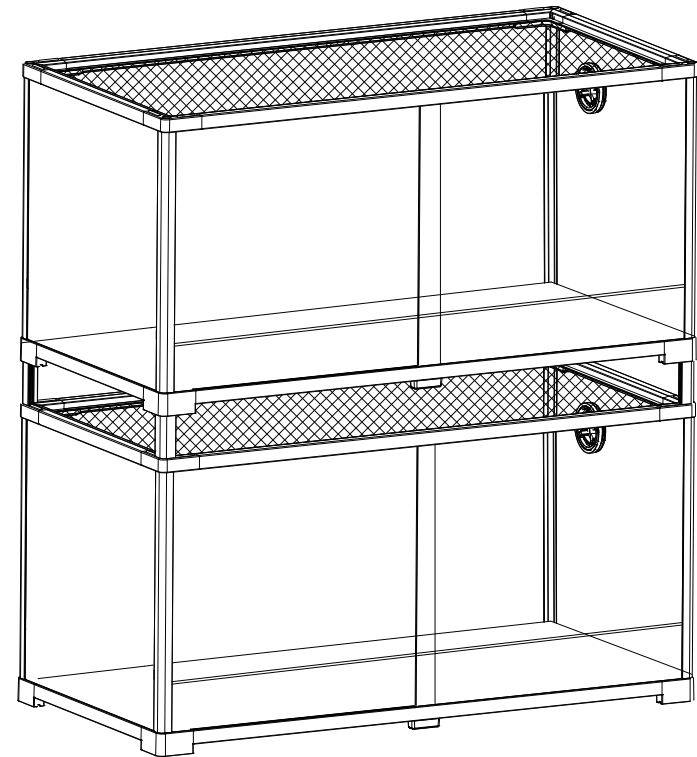

Thank you for choosing our company's products. To use this product properly and ensure its service life, please read this manual carefully before using.


1 Product Overview

JRKF Knock-Down Glass Terrarium can be quickly disassembled and assembled, which is simple and practical. It can be stacked in multiple layers with additional stackers to save space. It can be combined with splicing accessories and multiple JRKF Knock-Down Glass Terrariums of the same specifications to expand the use space of the terrarium as well.

This product is mainly suitable for raising geckos, snakes, tortoises, hamsters and other reptile pets.

Thank you for choosing our company's products. Before using this product, please read the instructions carefully and operate according to the instructions.

2 Parts List

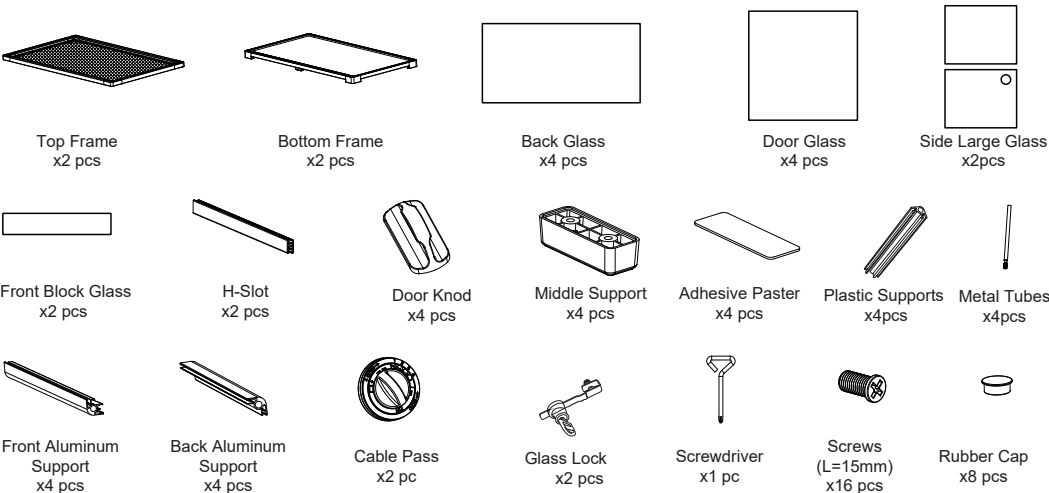


3 Product Features


1. Adopting new patented design, high-end reptile terrarium
2. Fully knock-down, easy to use, practical and convenient
3. The top is designed with a ventilation mesh cover, which is not only ventilated but also convenient for placing various lamps.
4. The base can be equipped with multiple supports to make the terrarium load-bearing evenly, safe and stable.

4 Installation Method

1. Install the front and back aluminum supports to the four corners of the bottom frame. (Refer to Diagram A).

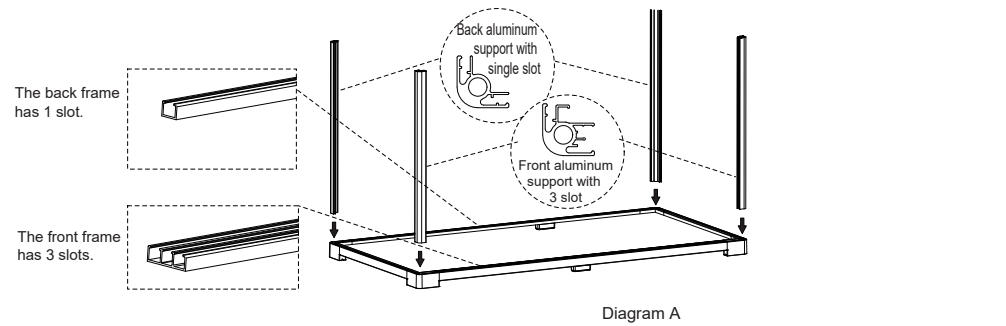

10. Door knob installation method

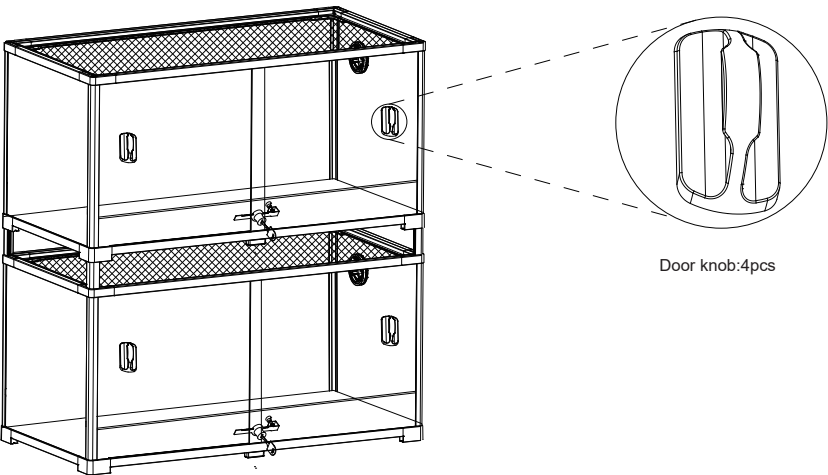


1.Clean the outside of the glass terrarium doors before installing door knob on glass.


2.Remove the adhesive protective film from the door knob. Install it on any desire position of the glass terrarium doors .

Note: Press firmly on the edges and middle of the adhesive piece for more than 5 seconds to ensure the door knob is strongly adhered to the glass.


2. After completing Step 1, use screws (L=15mm) to fix the 4 pcs supports. Then adhere 2 pcs adhesive pasters to the 2 pcs middle supports and paste them centered on the front and back of the bottom frame. (Refer to Diagram B).

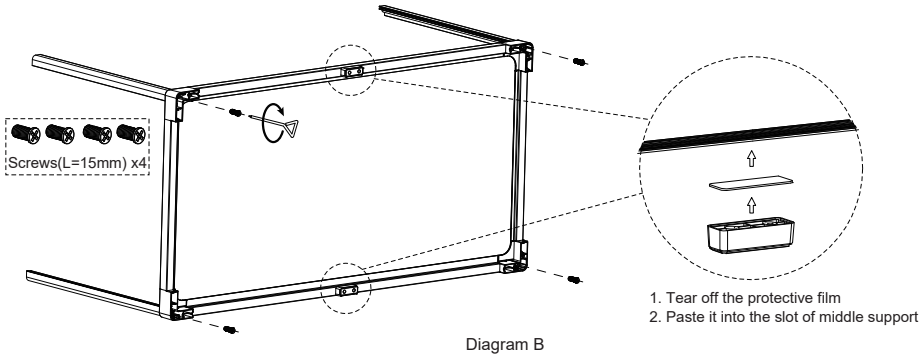


3. Install the back glass and the H-slots in sequence. Then install side large glass.

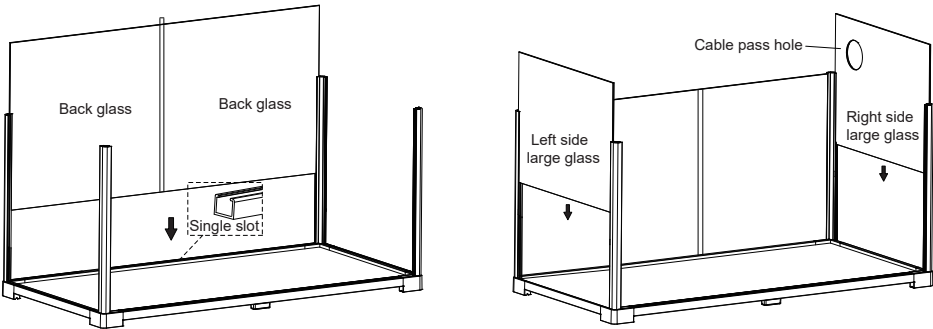


4. After installing the front block glass into the innermost slot of the front of bottom frame, install the top frame on the 4 pcs aluminum supports (the four holes of the top frame correspond to the four holes of the aluminum supports), and put them in order 4 metal tubes

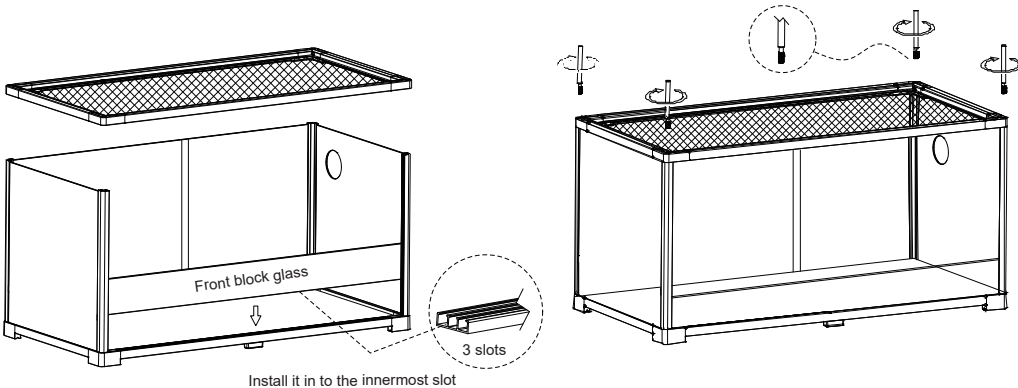


5. Adhere to the identical method5 to accomplish the assembly of the top terrarium.

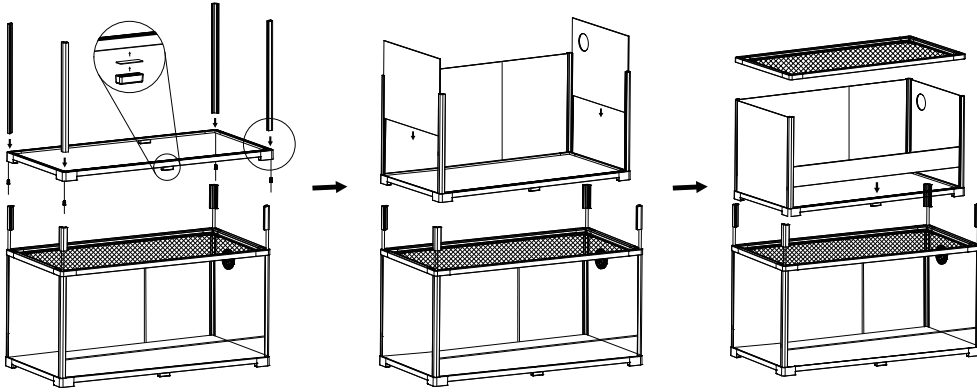

6. Install the top frame on the 4 pcs aluminum supports (the four holes of the top frame correspond to the four holes of the aluminum supports), and put them in order 4 screws and use the screwdriver to tighten them. Finally, put four rubber caps on the four screws.

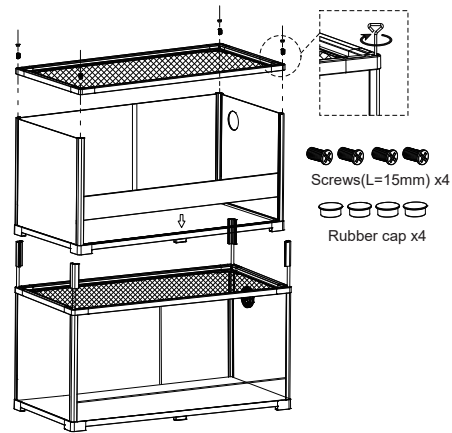


7. Install Door glass.

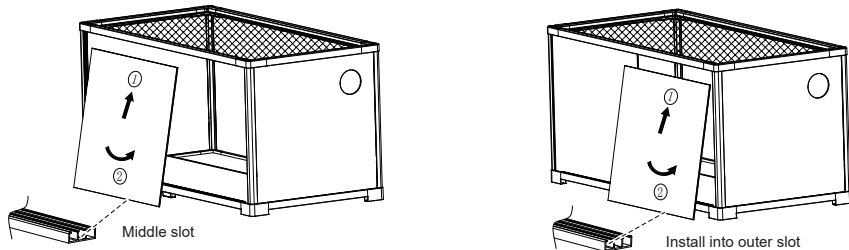


- ①. Install the upper end of the door glass into the inner slot of the Top frame.
- ②. Install the lower end of the door glass into the middle slot of the bottom frame.

- ①. Insert the upper end of the door glass into the outer slot of the Top frame.
- ②. Insert the lower end of the door glass into the outer slot of the bottom frame.


8. Install cable pass:





Put B1 on the outside of the terrarium and put B2 on the inside of the terrarium. Then turn B2 clockwise.



Align the arrows and install A into B.

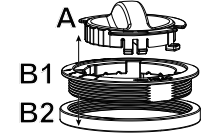

Rotate in the "CLOSE" direction and lock it

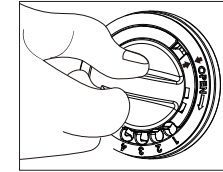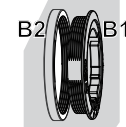

9. Glass lock installation method

