
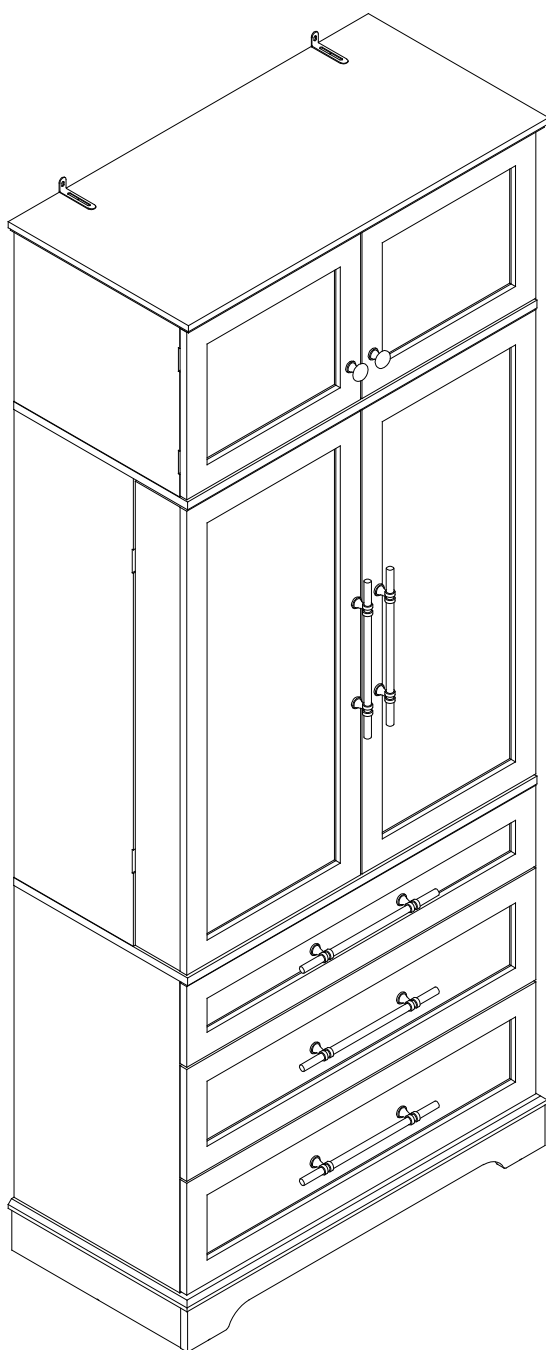
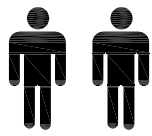


Kitchen Pantry Cabinet

Assembly Instructions - Please keep for future reference

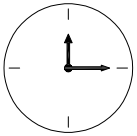

 WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

 2 PERS.	 60 MIN
--	---

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions













To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

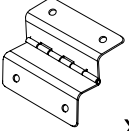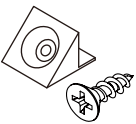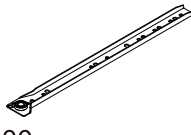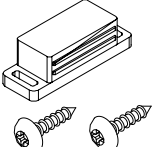(A)  Cam Bolt x94	(B)  6*30mm Dowel x 40	(C)  Cam Lock x94	(D)  x4
(E)  x 30	(F)  4x35mm Screw x24	(G)  Round handle x2 screw 4x20mm	(H)  3x12mm Screw x68
(I)  Anti-fall accessories x2	(J)  Shelf support pin x 20	(K)  x4	(L)  x 20
(M)  Handle 300mm x 2 screw 4x20mm	(DR)  300mm runner x 3	(DL)  300mm runner x 3	(CR)  300mm runner x 3
(CL)  300mm runner x 3	(N)  Handle x 300mm x 3 screw 4x10mm Washer x 6	(O)  Felt Pad x 8	(P)  x 3
(Q)  x4			


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

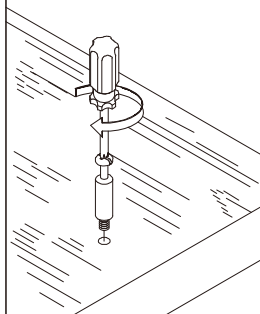

Step 2

Push the male camlock into the entry hole.

2

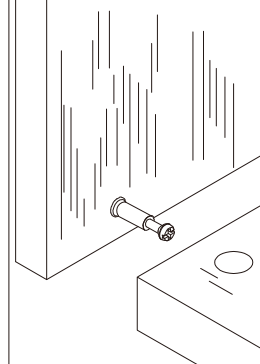


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

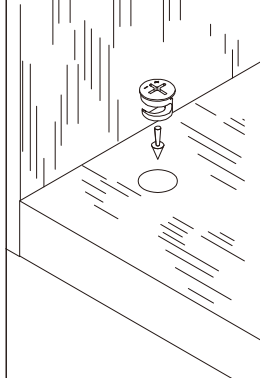


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4


















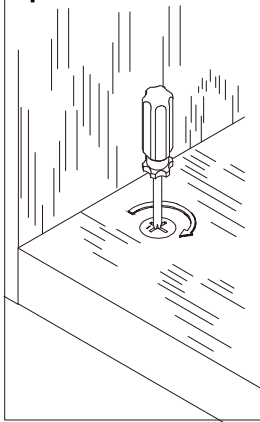


Assembly Instructions








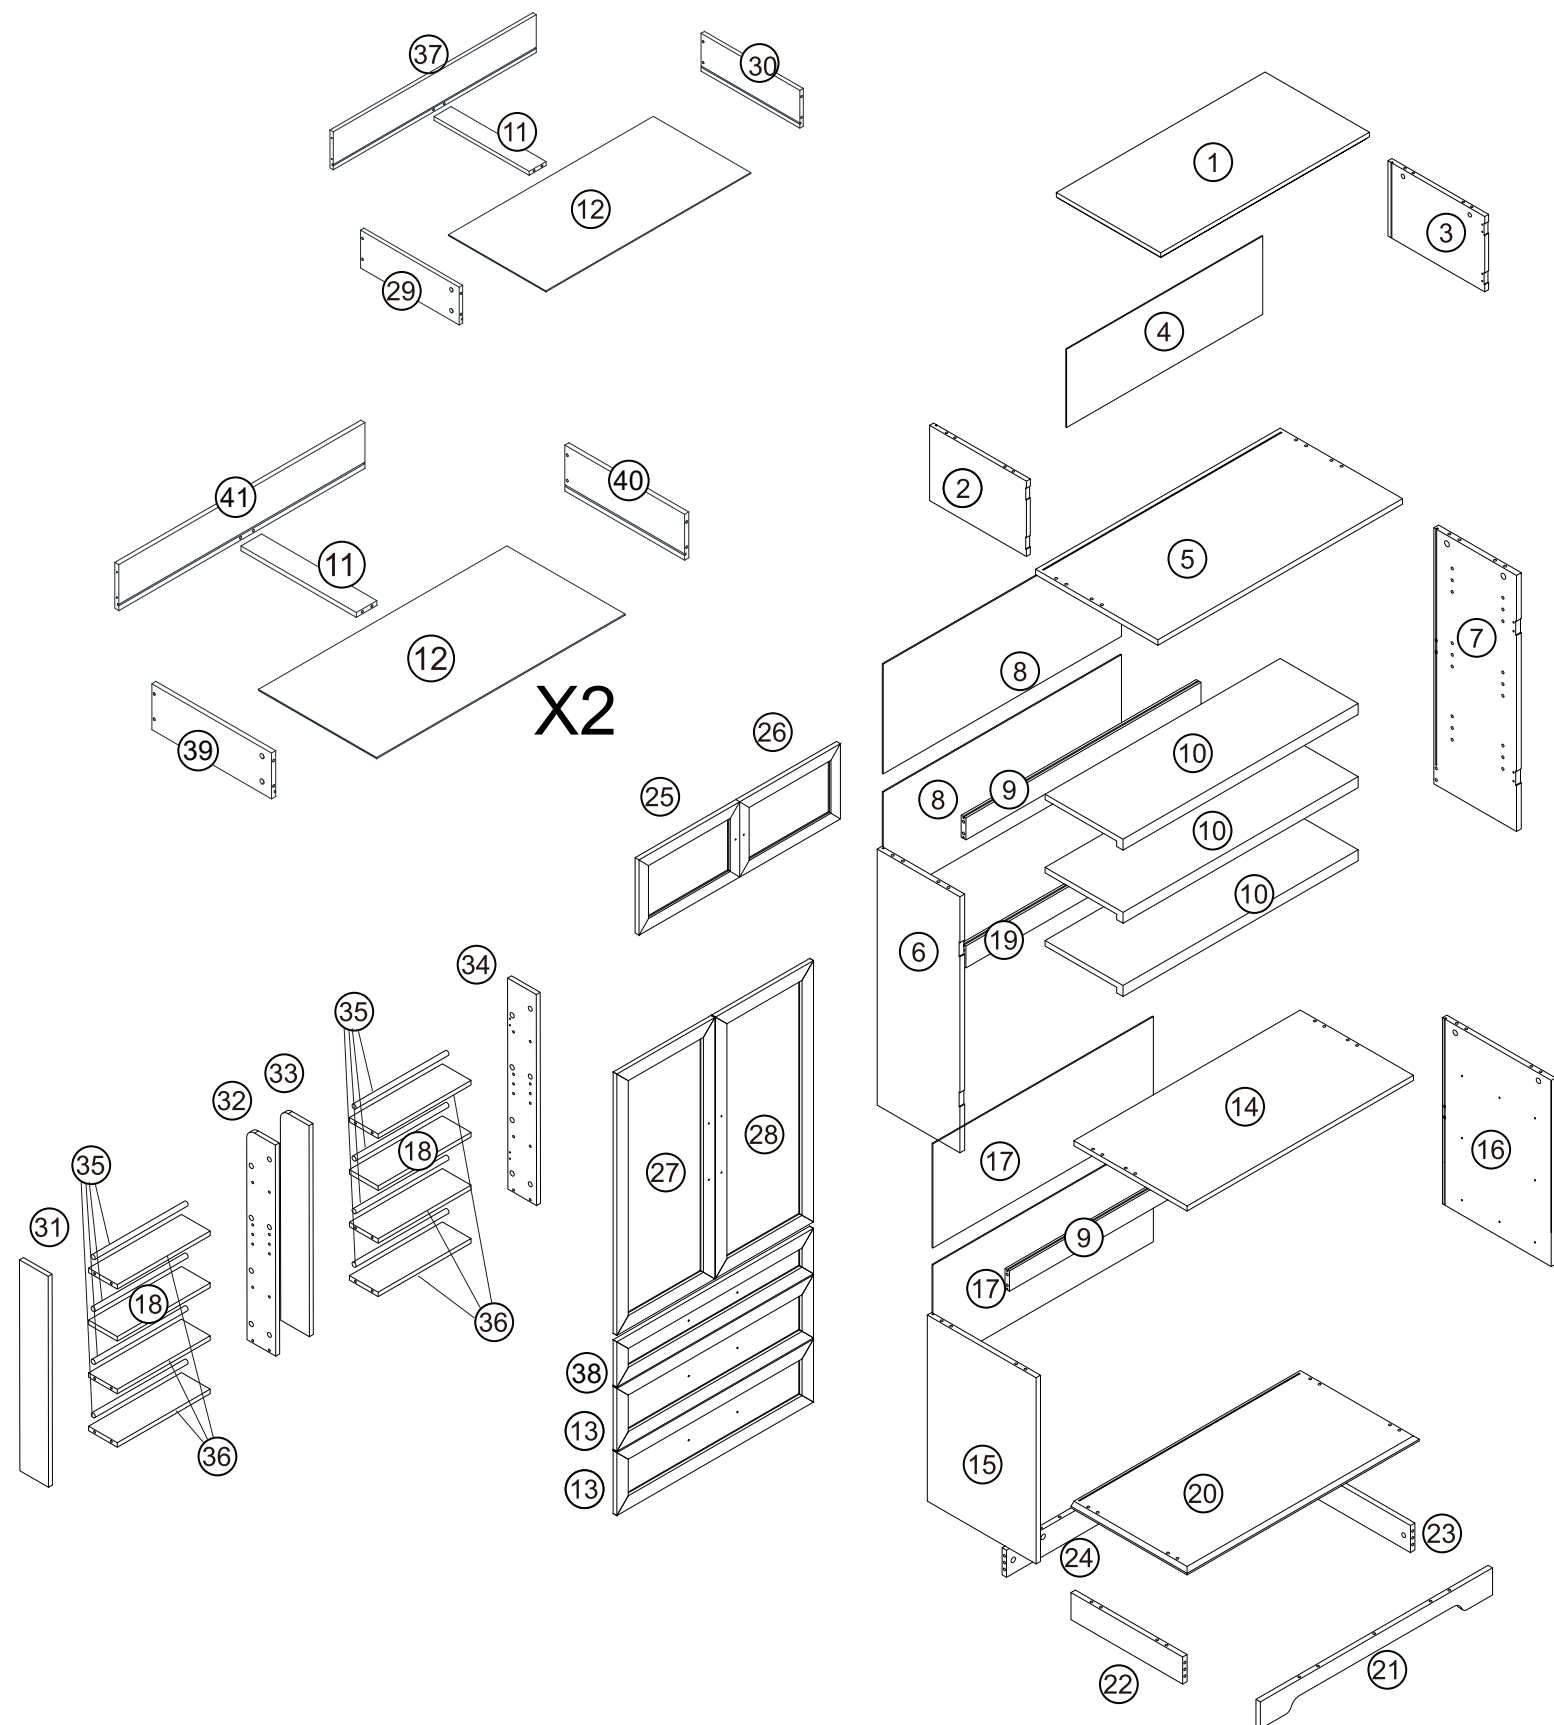


Assembly Instructions








BOX 1

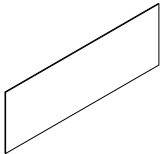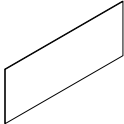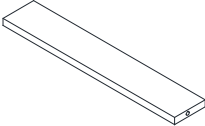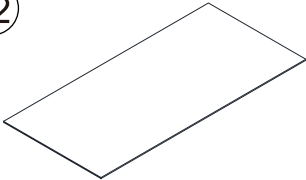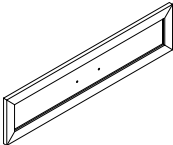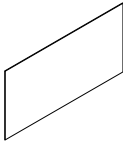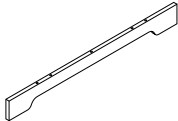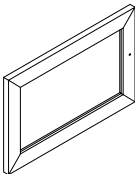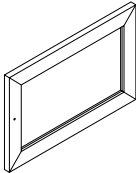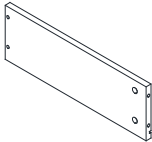1  1PC	4  1PC	5  1PC
6  1PC	7  1PC	8  2PC
10  3PC	11  3PC	12  3PC
13  1PC	15  1PC	16  1PC
17  2PC	18  2PC	20  1PC
21  1PC	22  1PC	23  1PC
25  1PC	26  1PC	29  3PC

Assembly Instructions

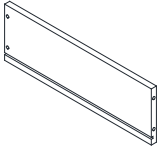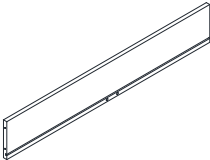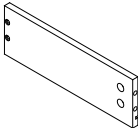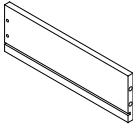
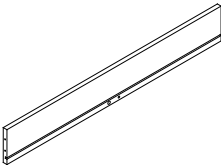
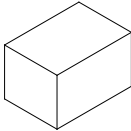
30  3PC	35  8PC	36  6PC
37  3PC	39  2PC	40  2PC
41  2PC	 Hardware	



BOX 2

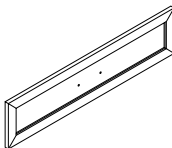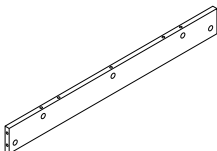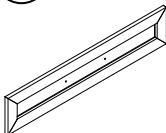2  1PC	3  1PC	9  2PC		
13  3PC	14  1PC	19  1PC		
24  1PC	27  1PC	28  1PC		
31  1PC	32  1PC	33  1PC	34  1PC	38  1PC

Assembly Instructions




Step 1

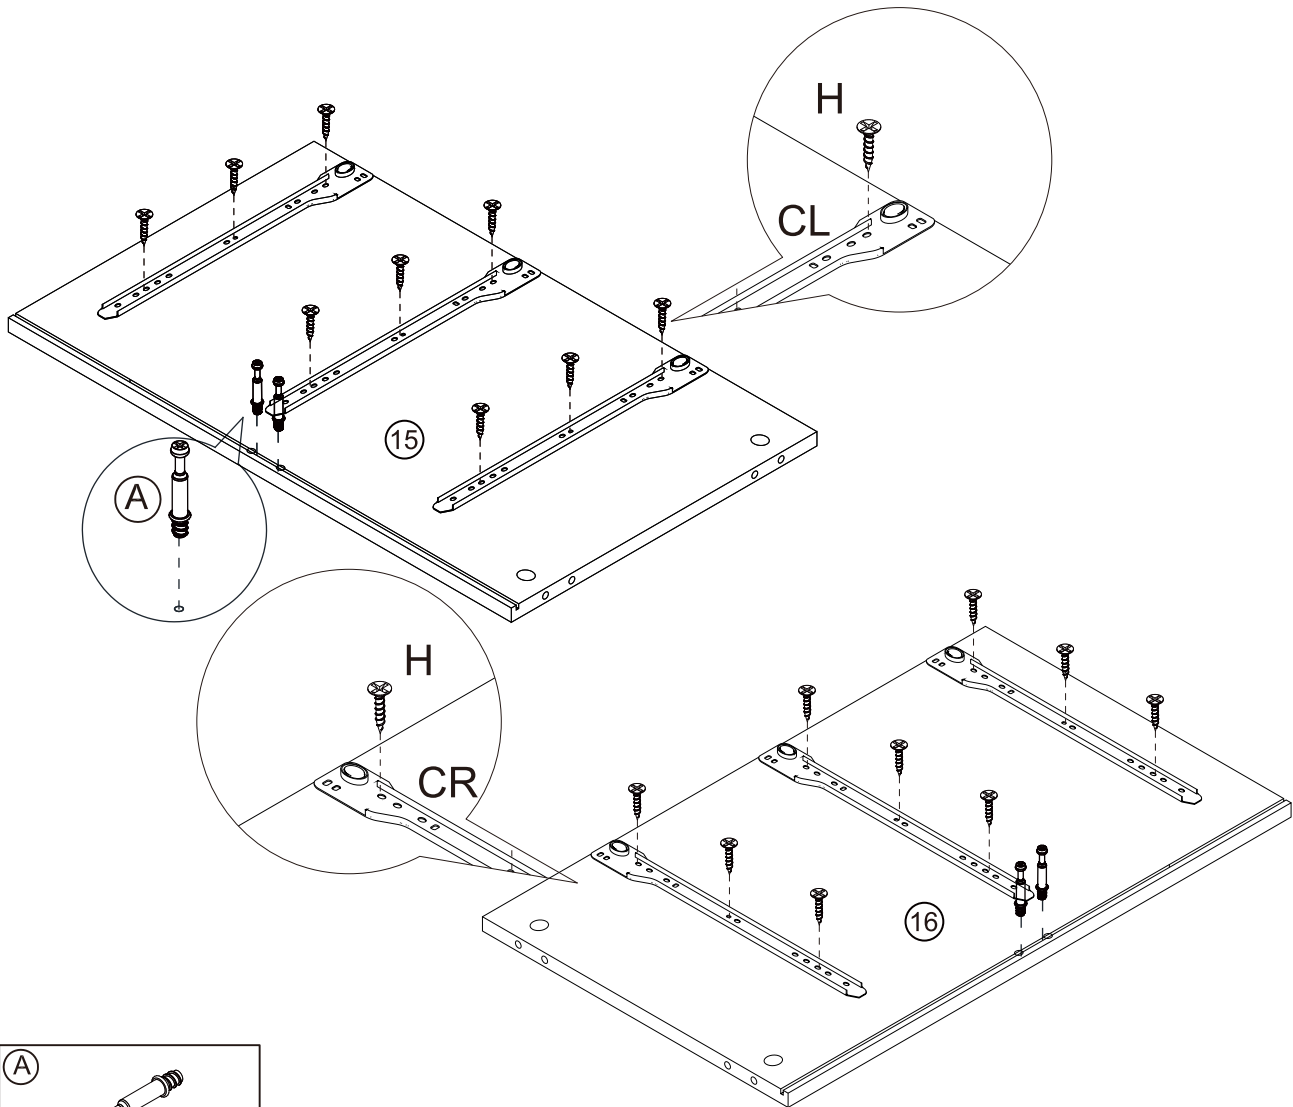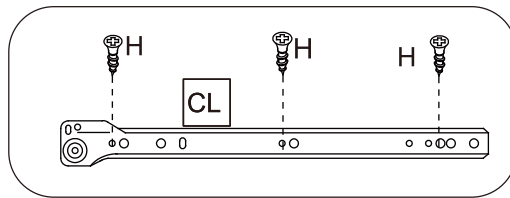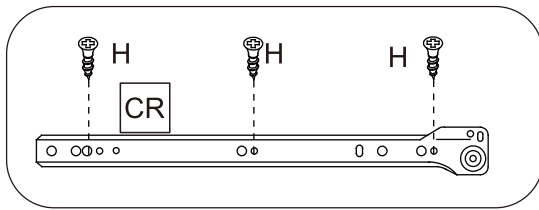


(A)	
Cam Bolt x 4	
(H)	
3*12mm Screw x 18	
(CR)	
300mm runner x 3	
(CL)	
300mm runner x 3	

Assembly Instructions

Step 2

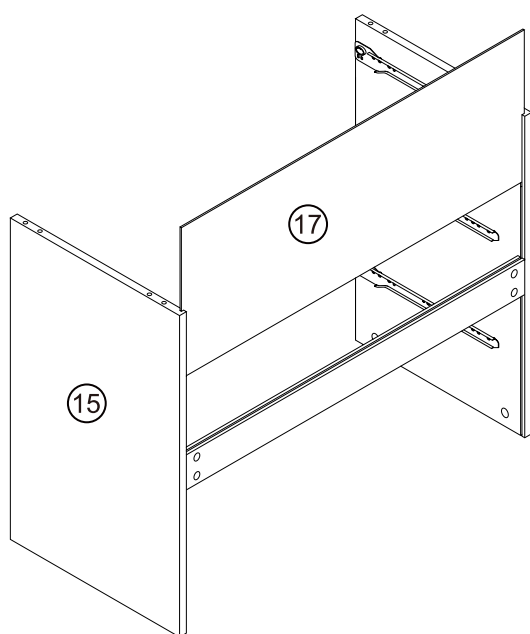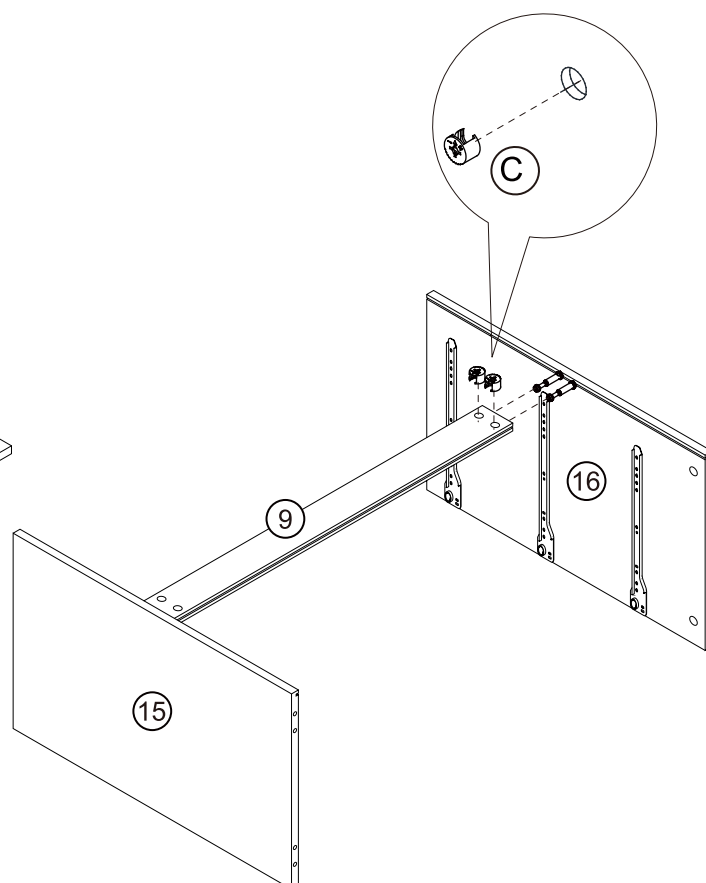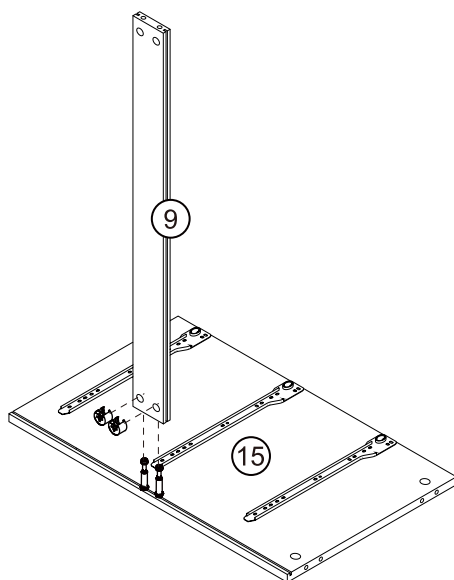


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

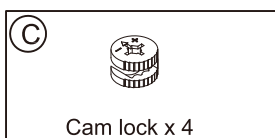



Assembly Instructions

Step 3

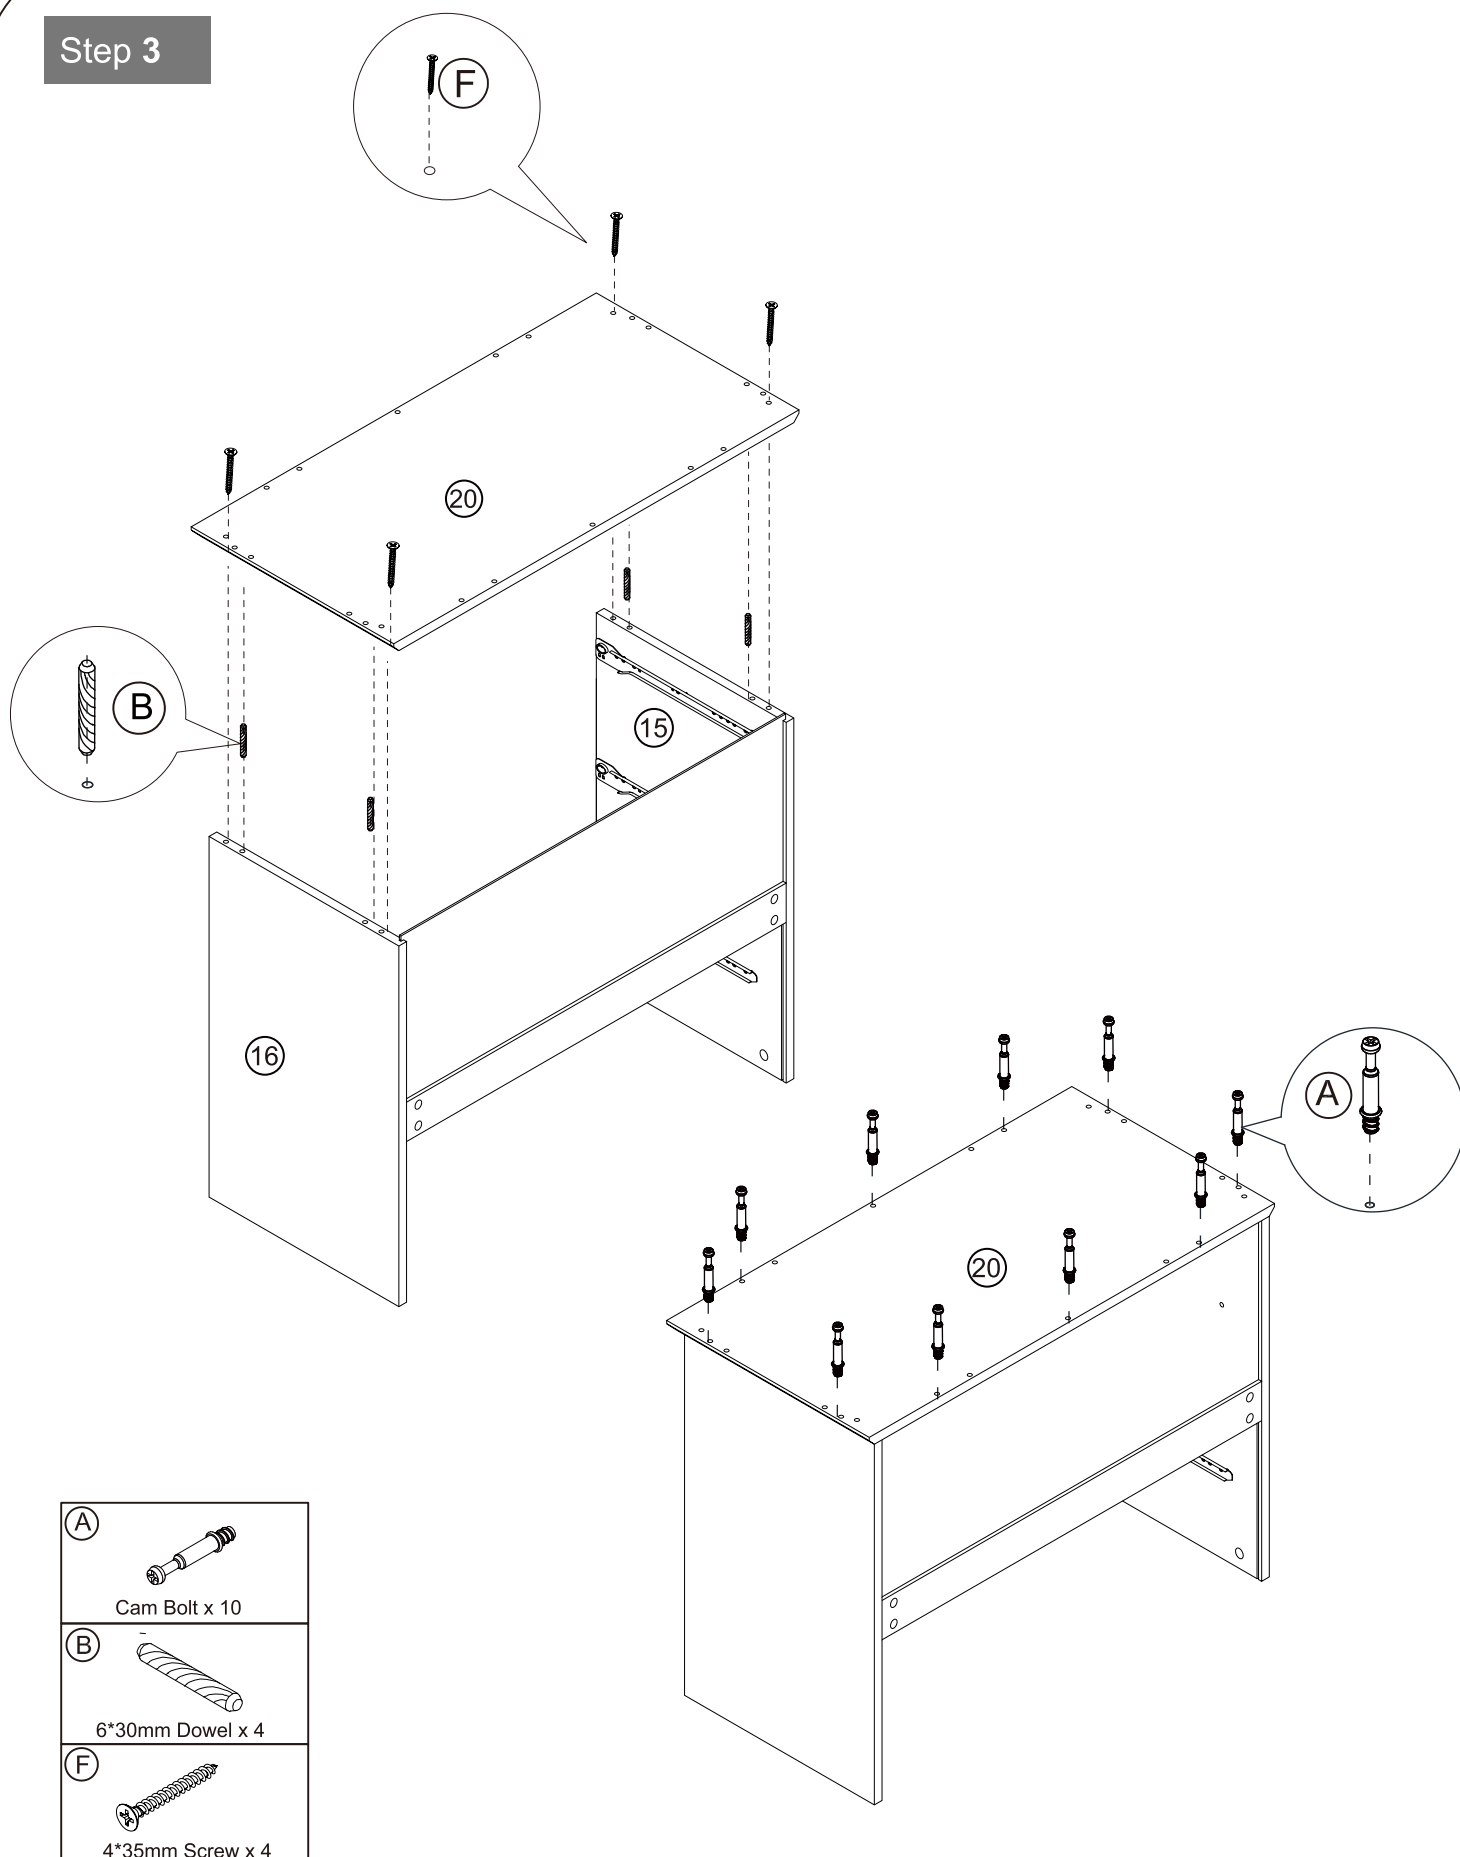

Assembly Instructions


Step 4

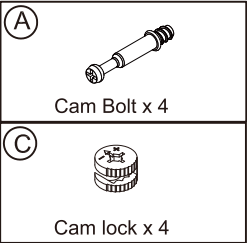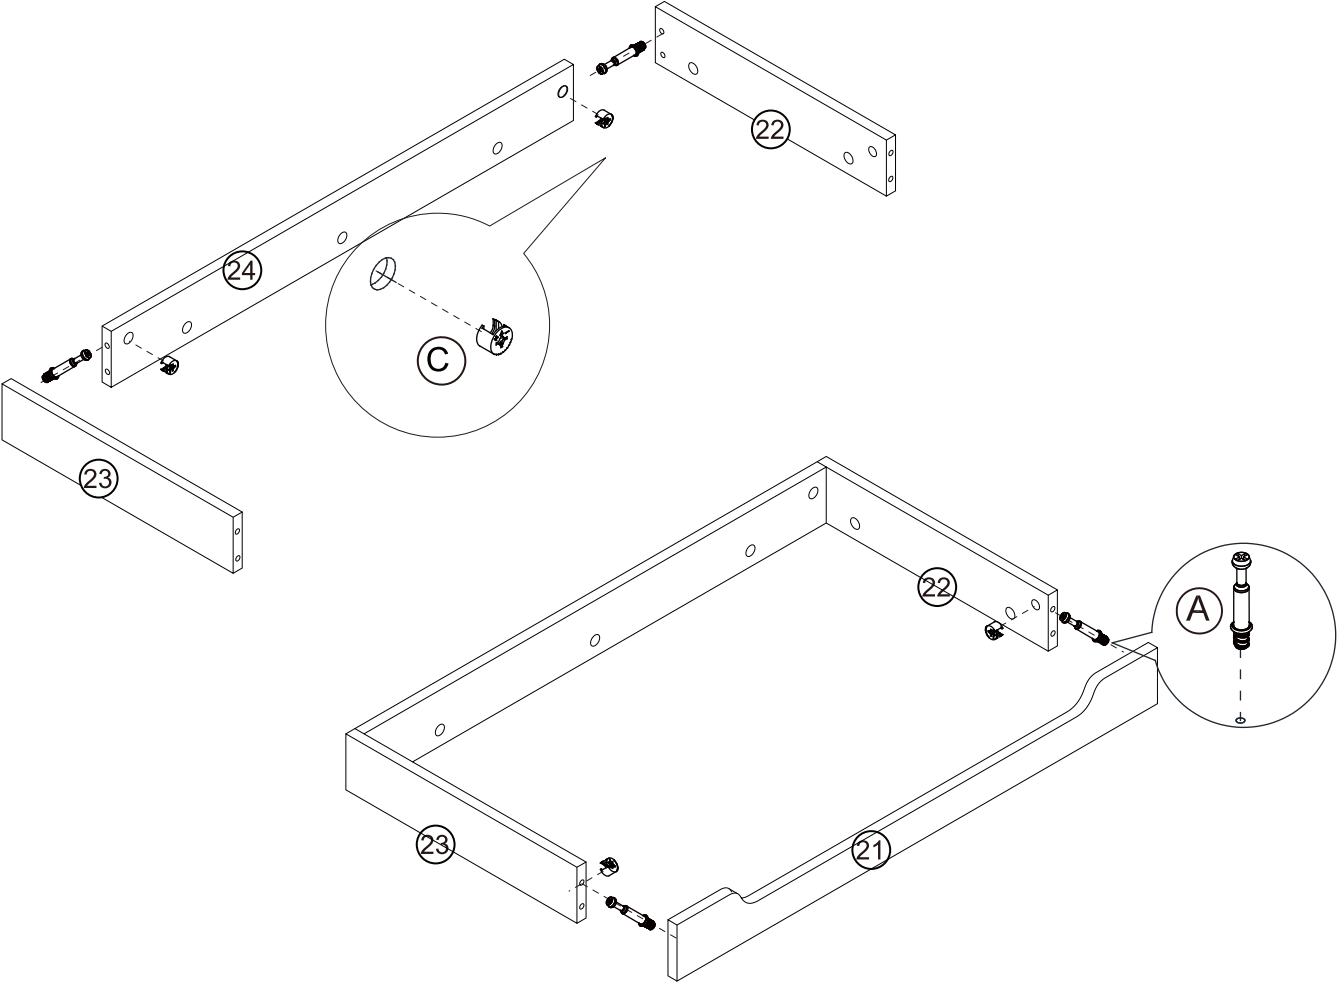

Assembly Instructions




Step 5

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

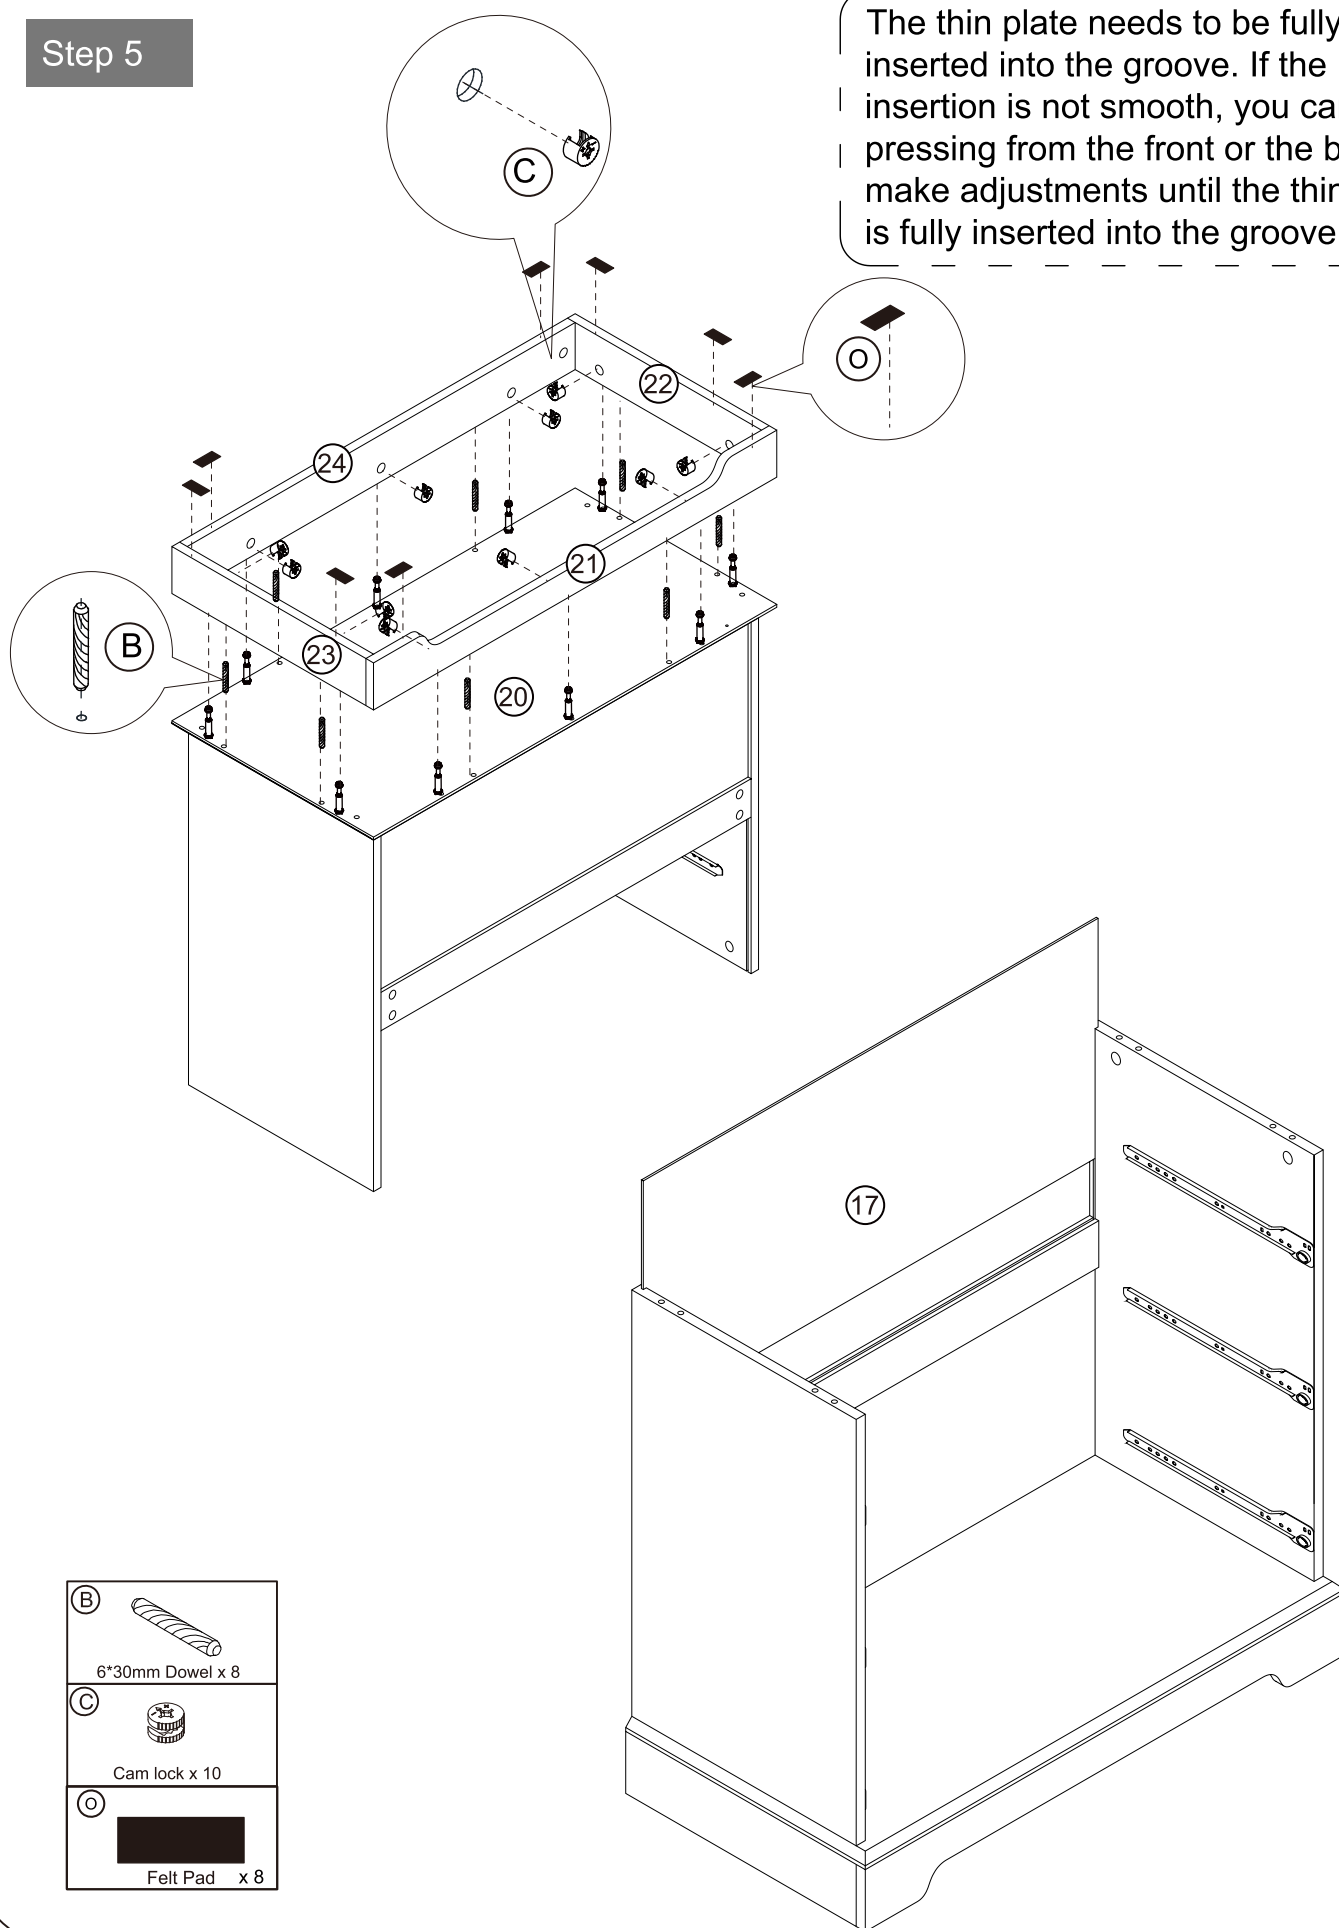



Assembly Instructions

Step 6

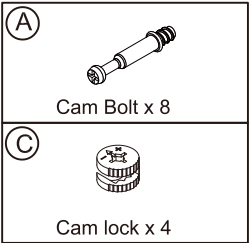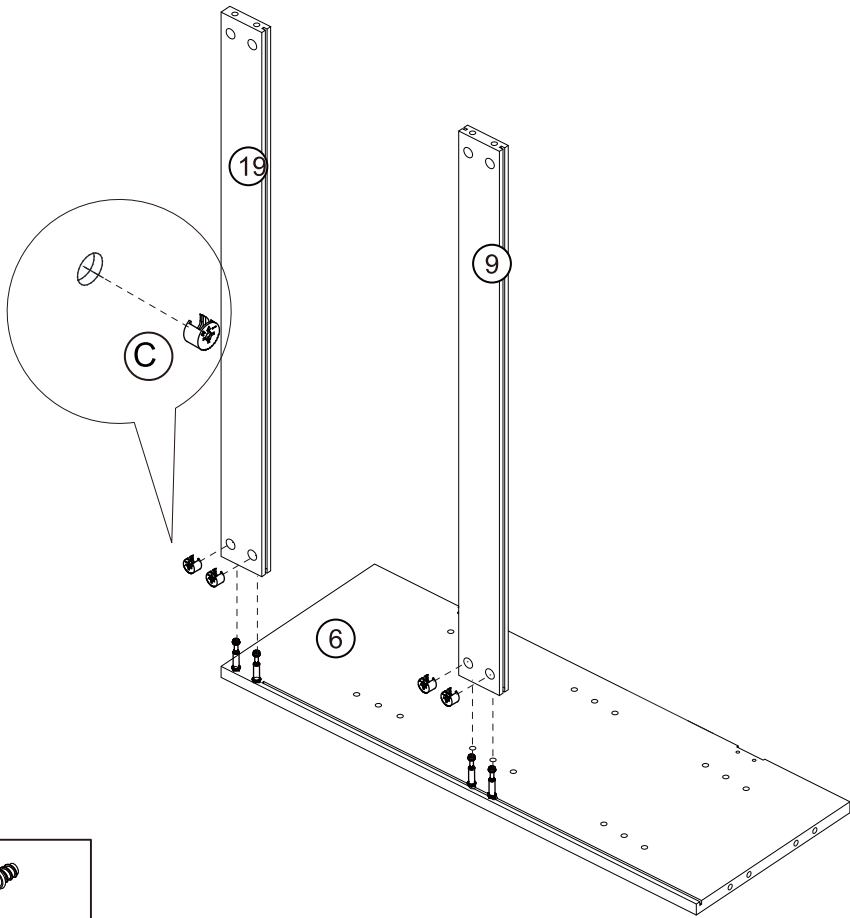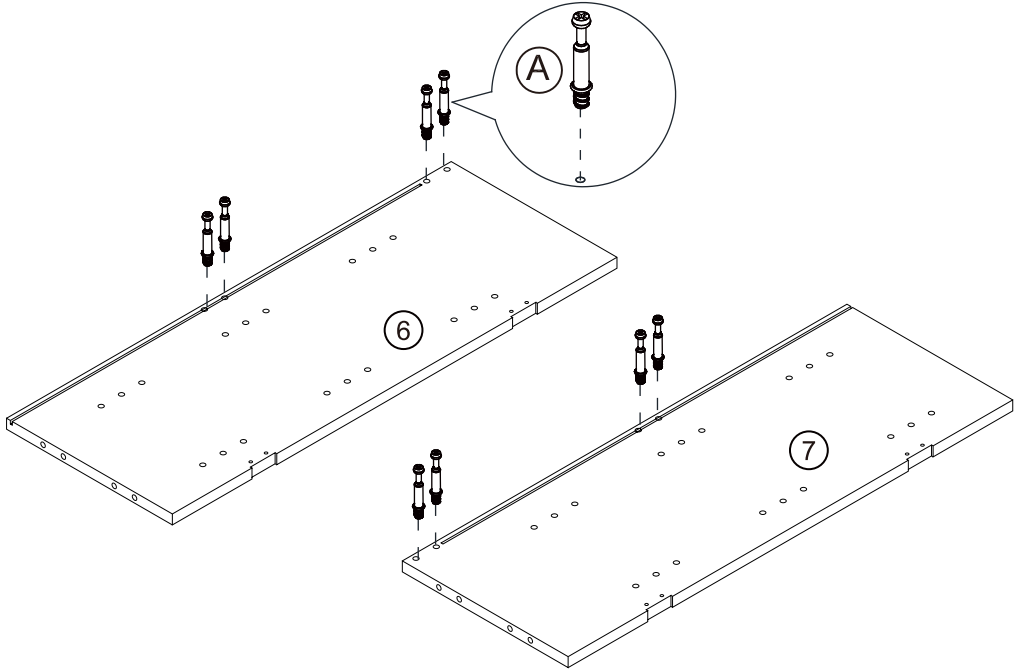

Assembly Instructions

Step 7

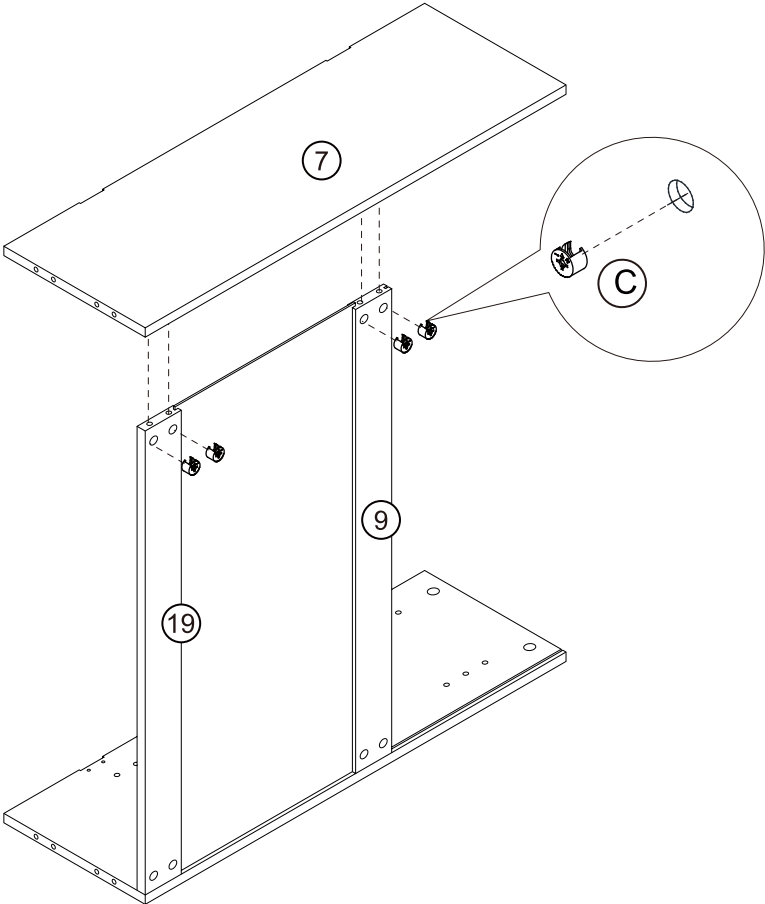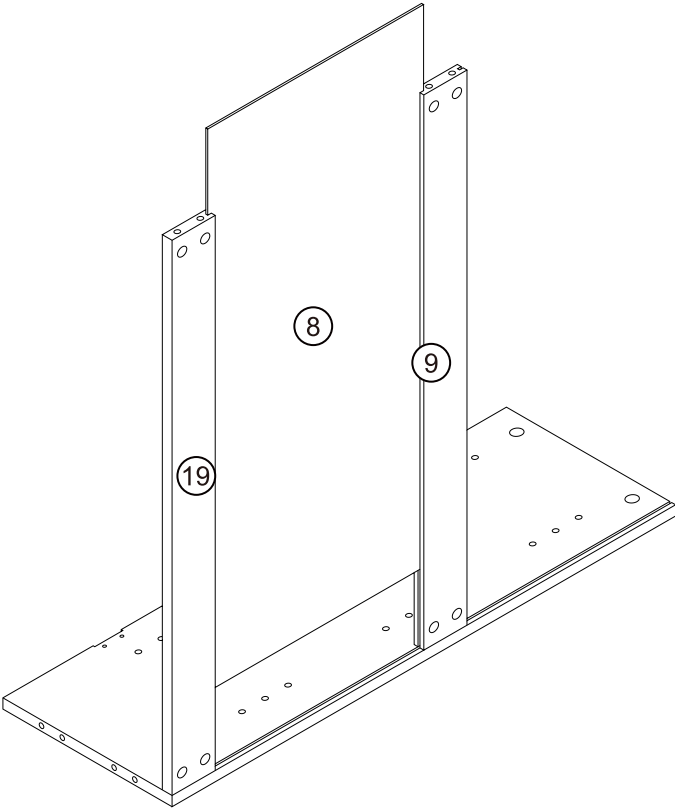

C




Cam lock x 4

Assembly Instructions



Step 8

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

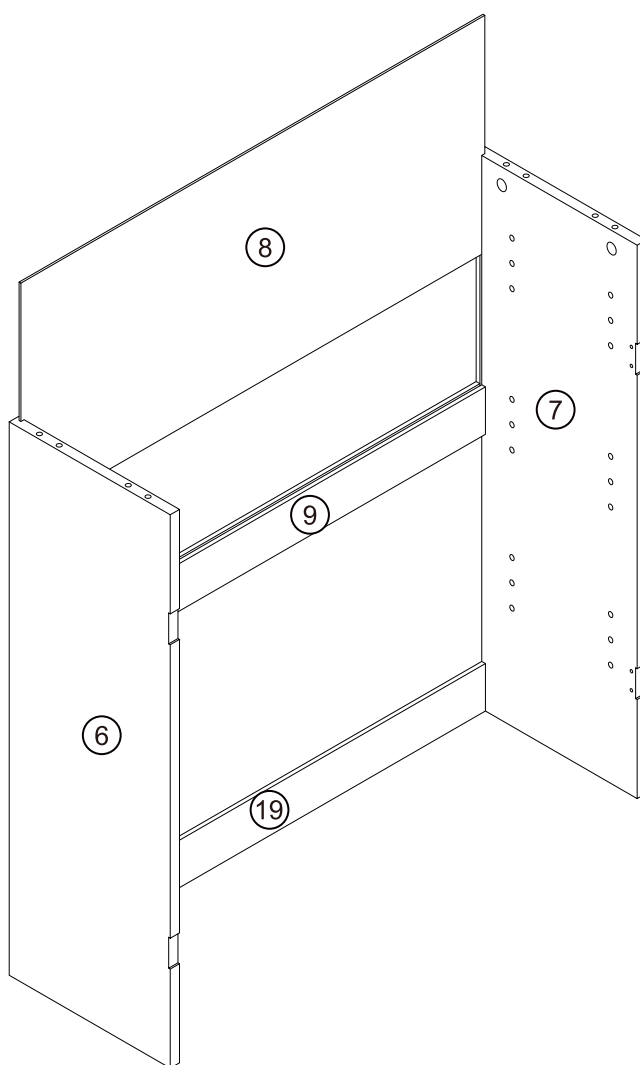

Assembly Instructions


Step 9

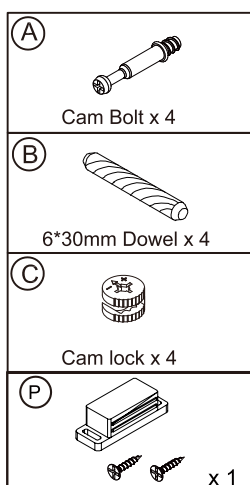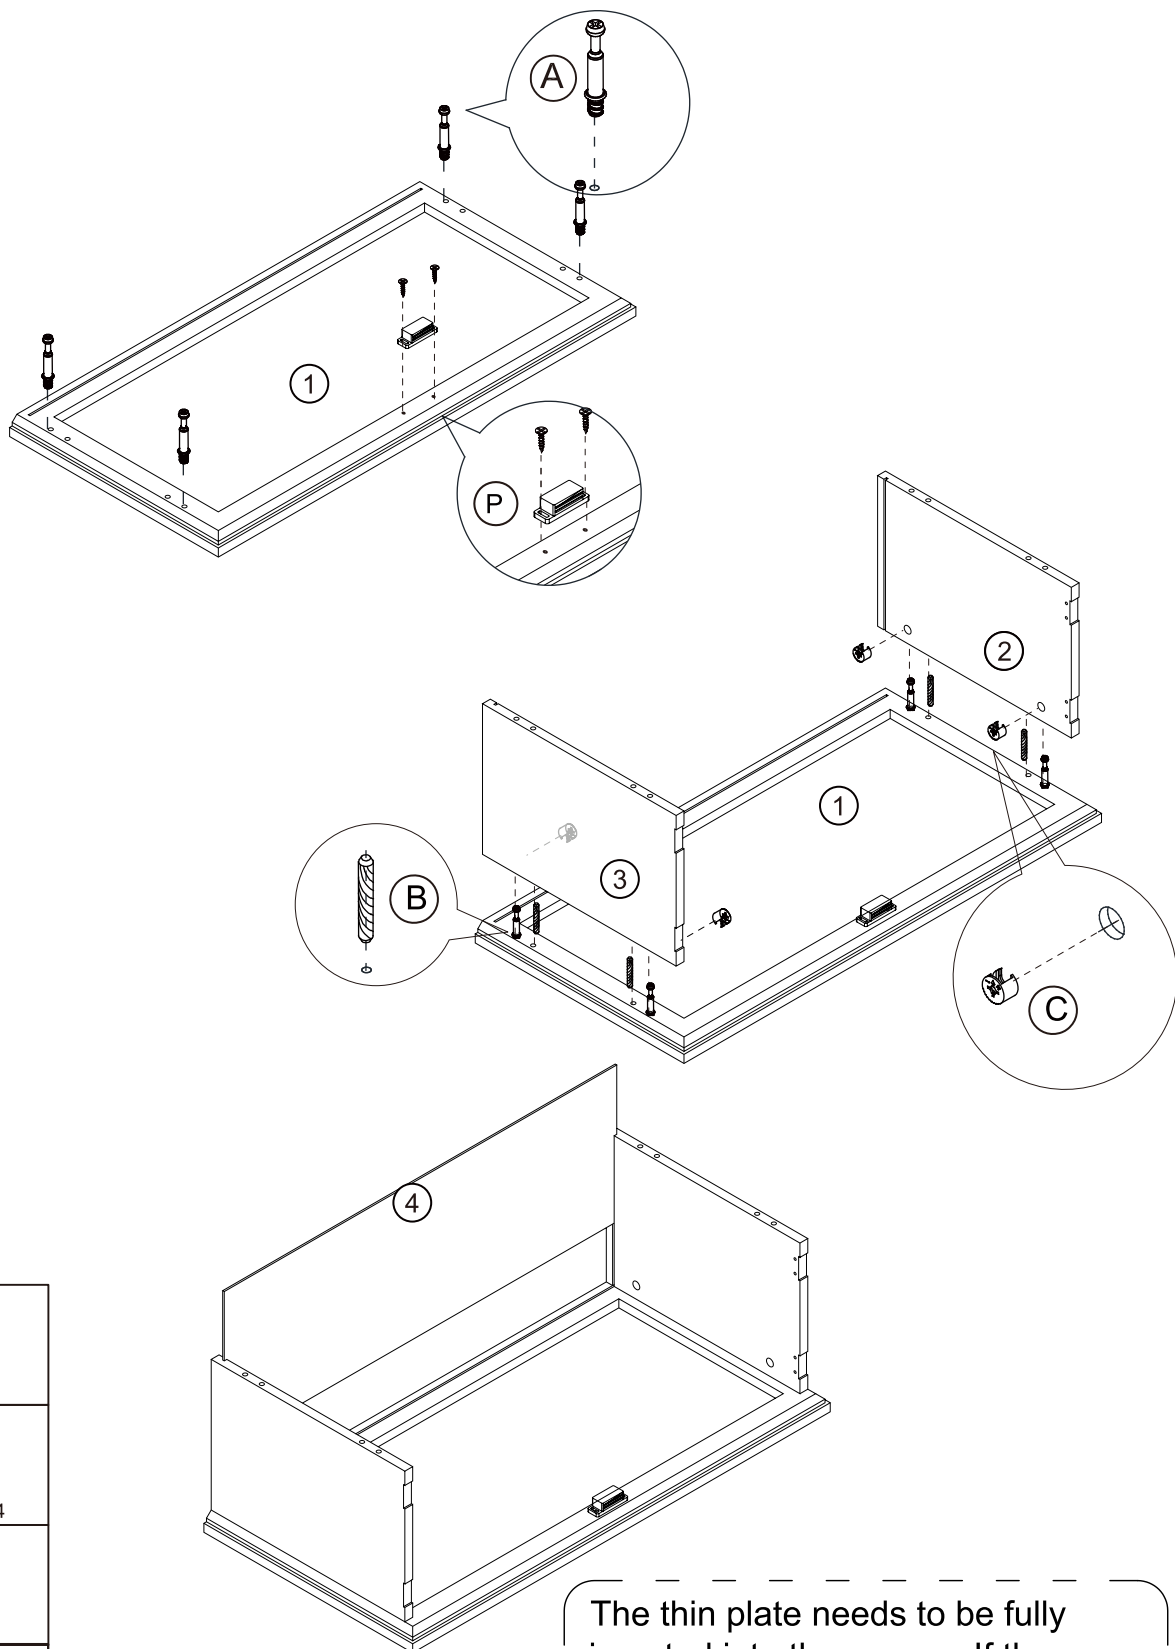

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.



Assembly Instructions

Step 10

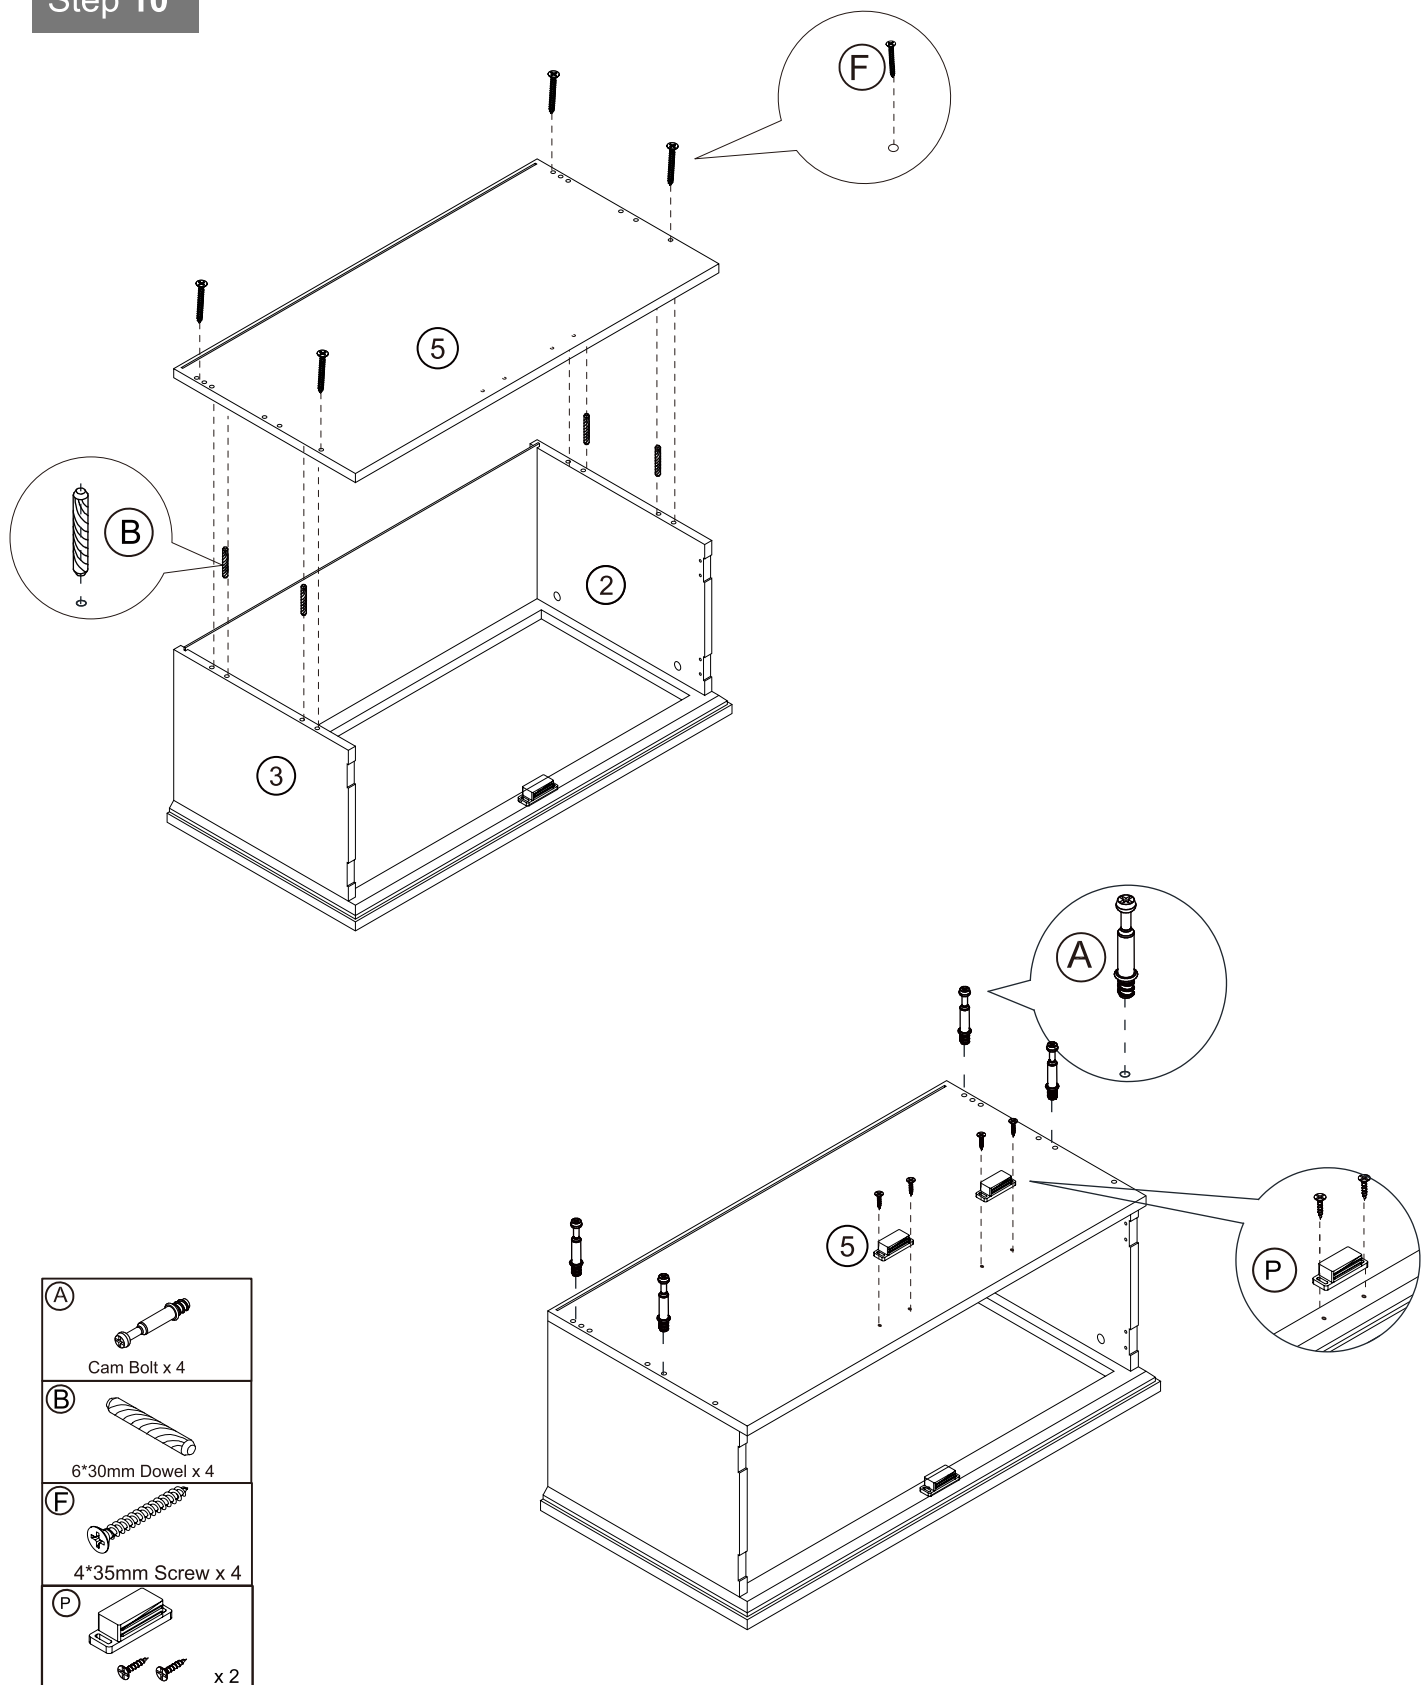



Assembly Instructions


Step 11

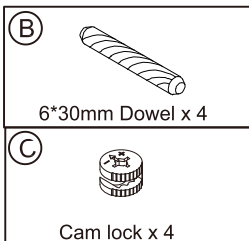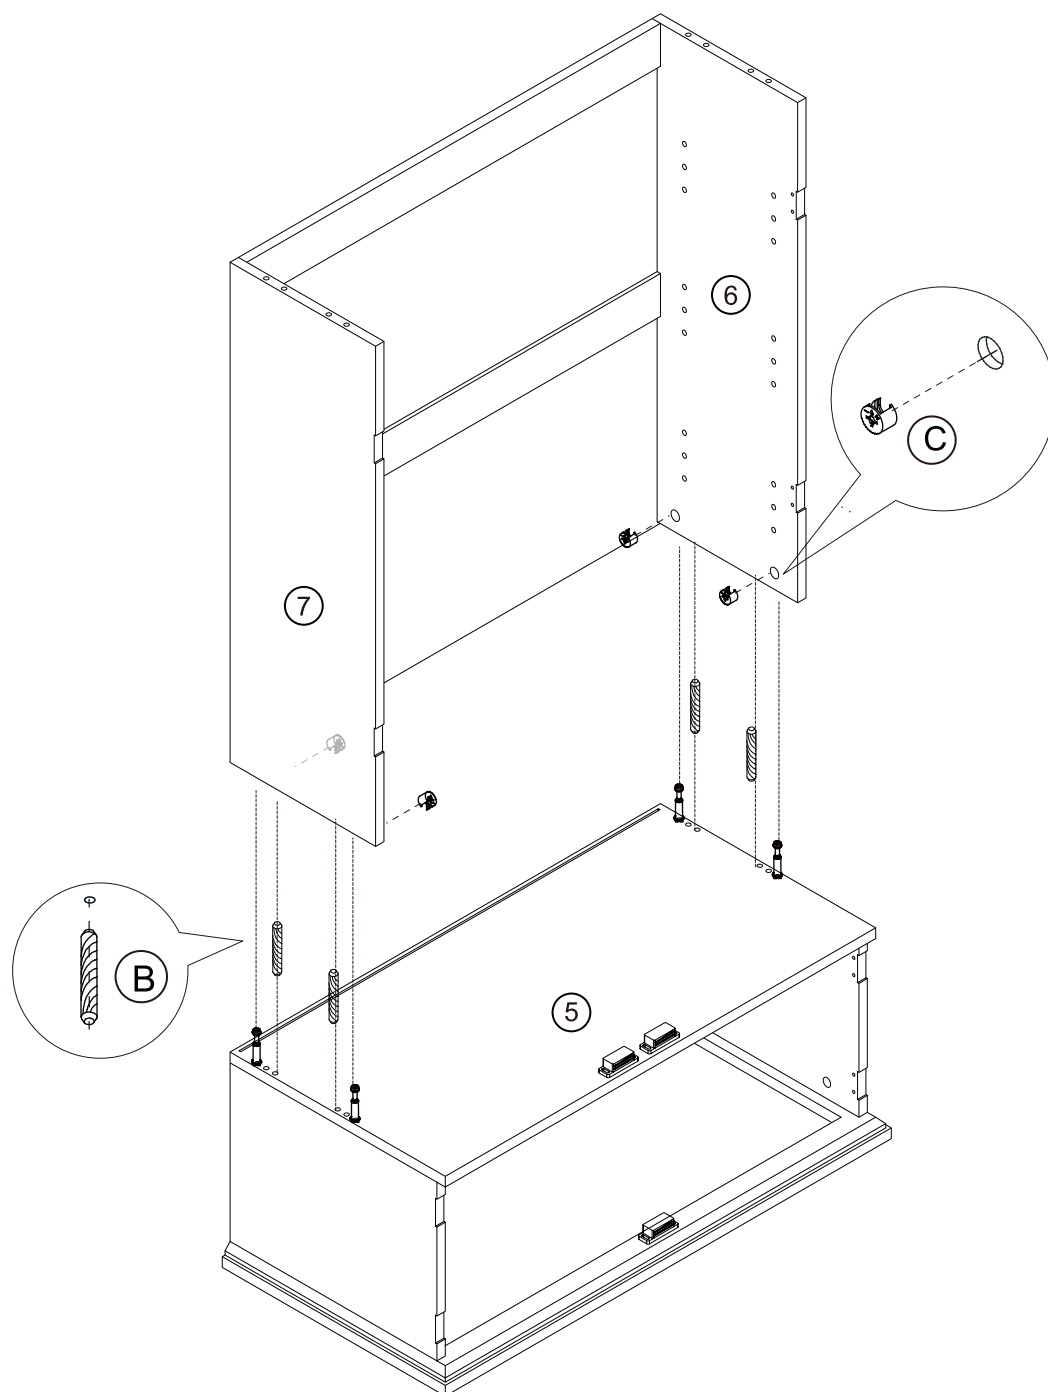

Assembly Instructions




Step 12

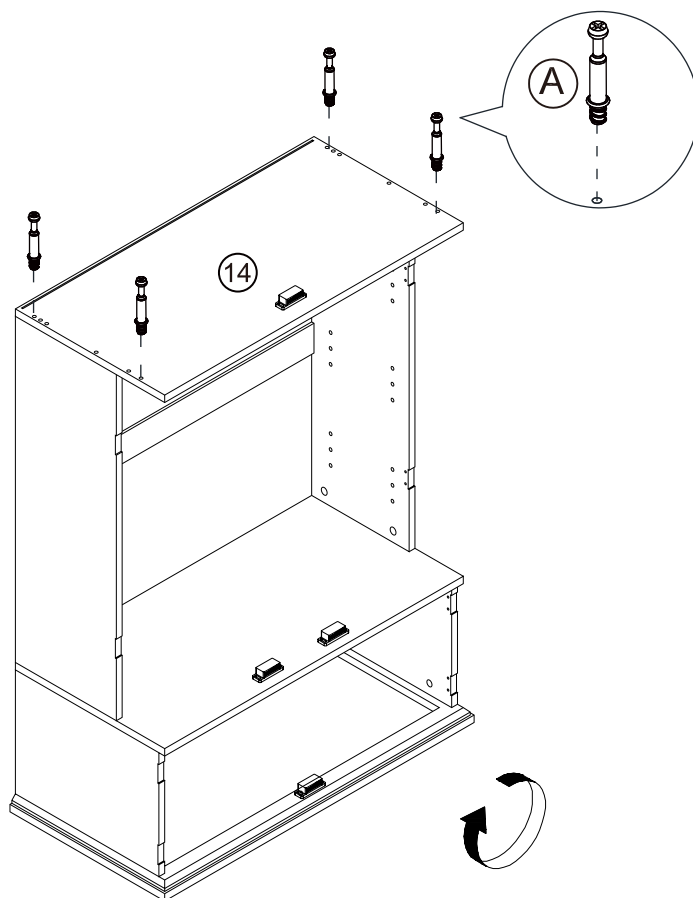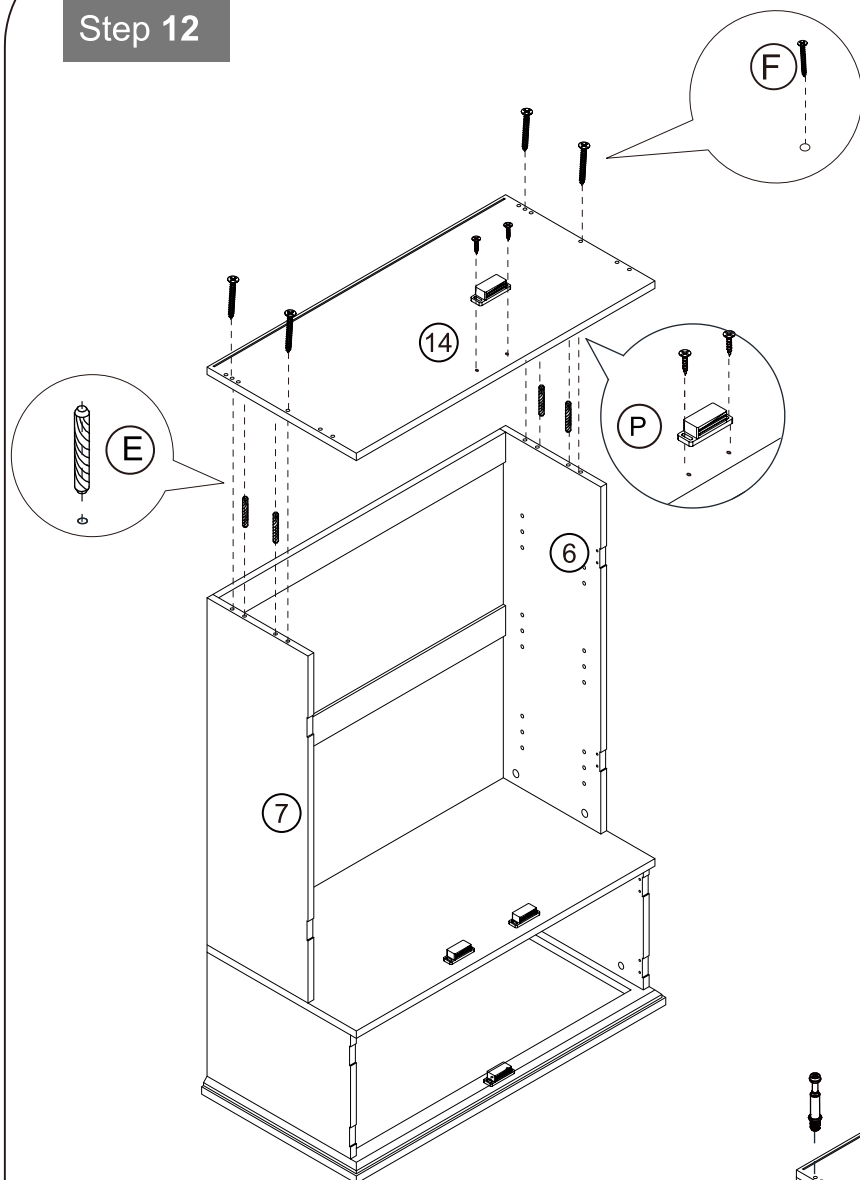

(A)		Cam Bolt x 4
(E)		6*30mm Dowel x 4
(F)		4*35mm Screw x 4
(P)		x1



Assembly Instructions

Step 13

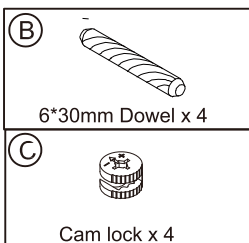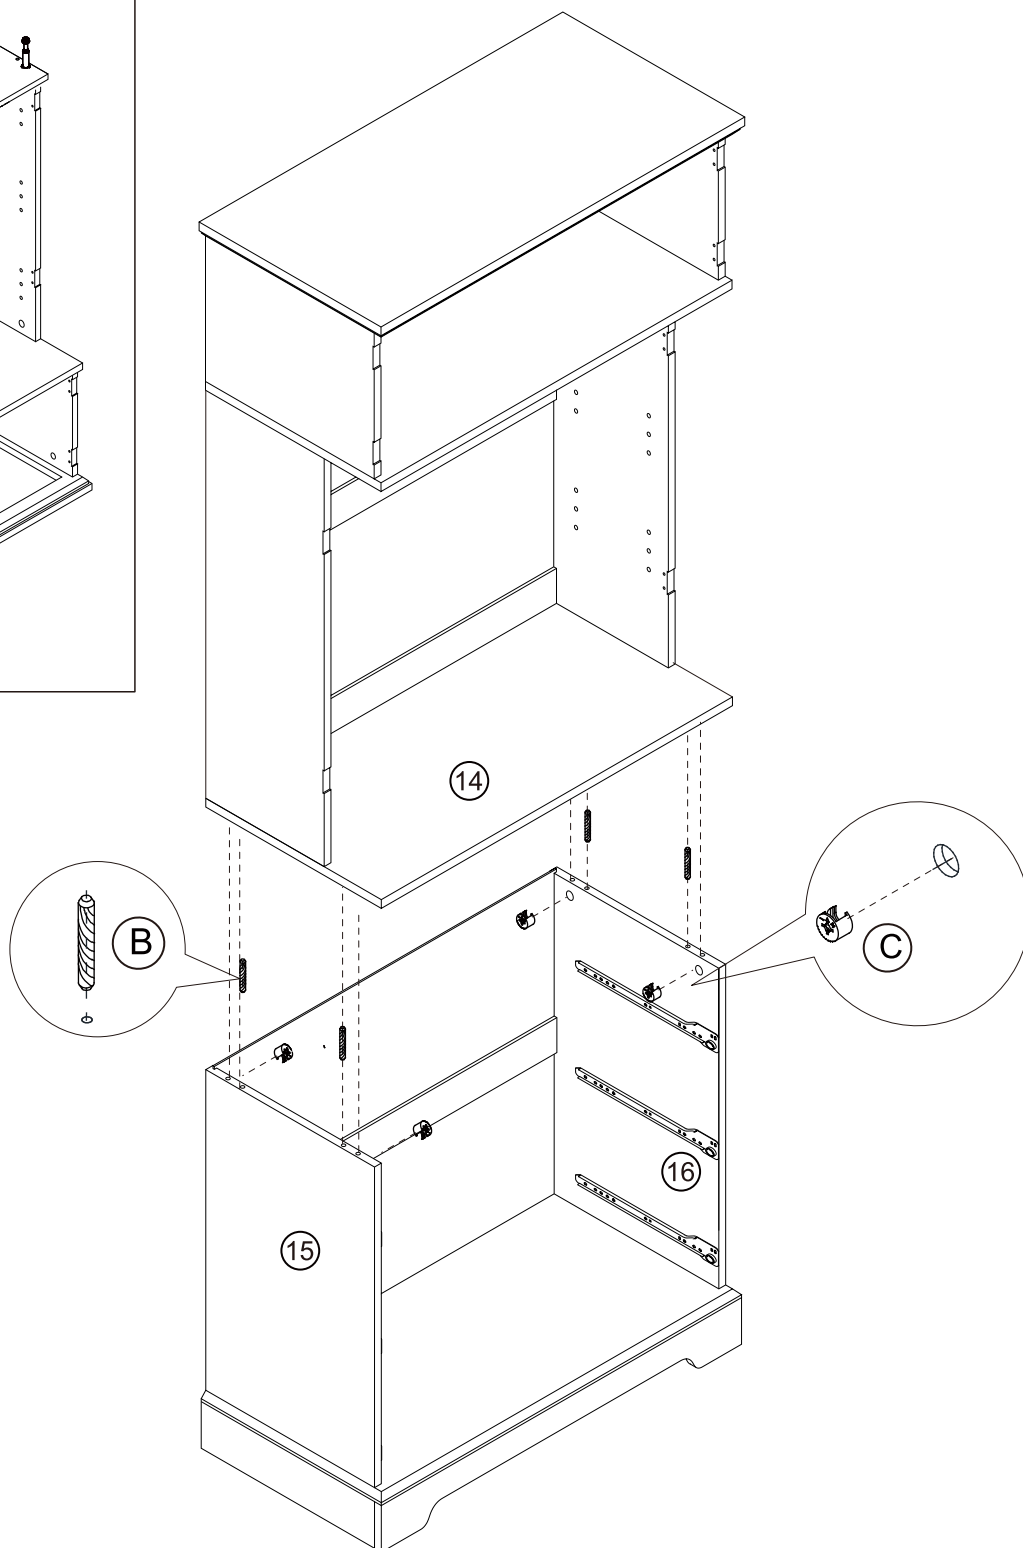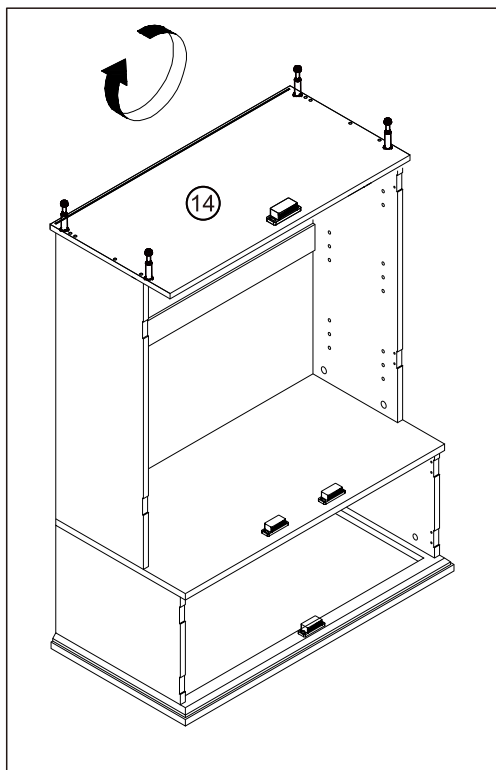




Assembly Instructions

Step 14

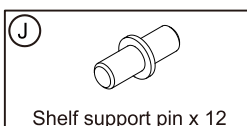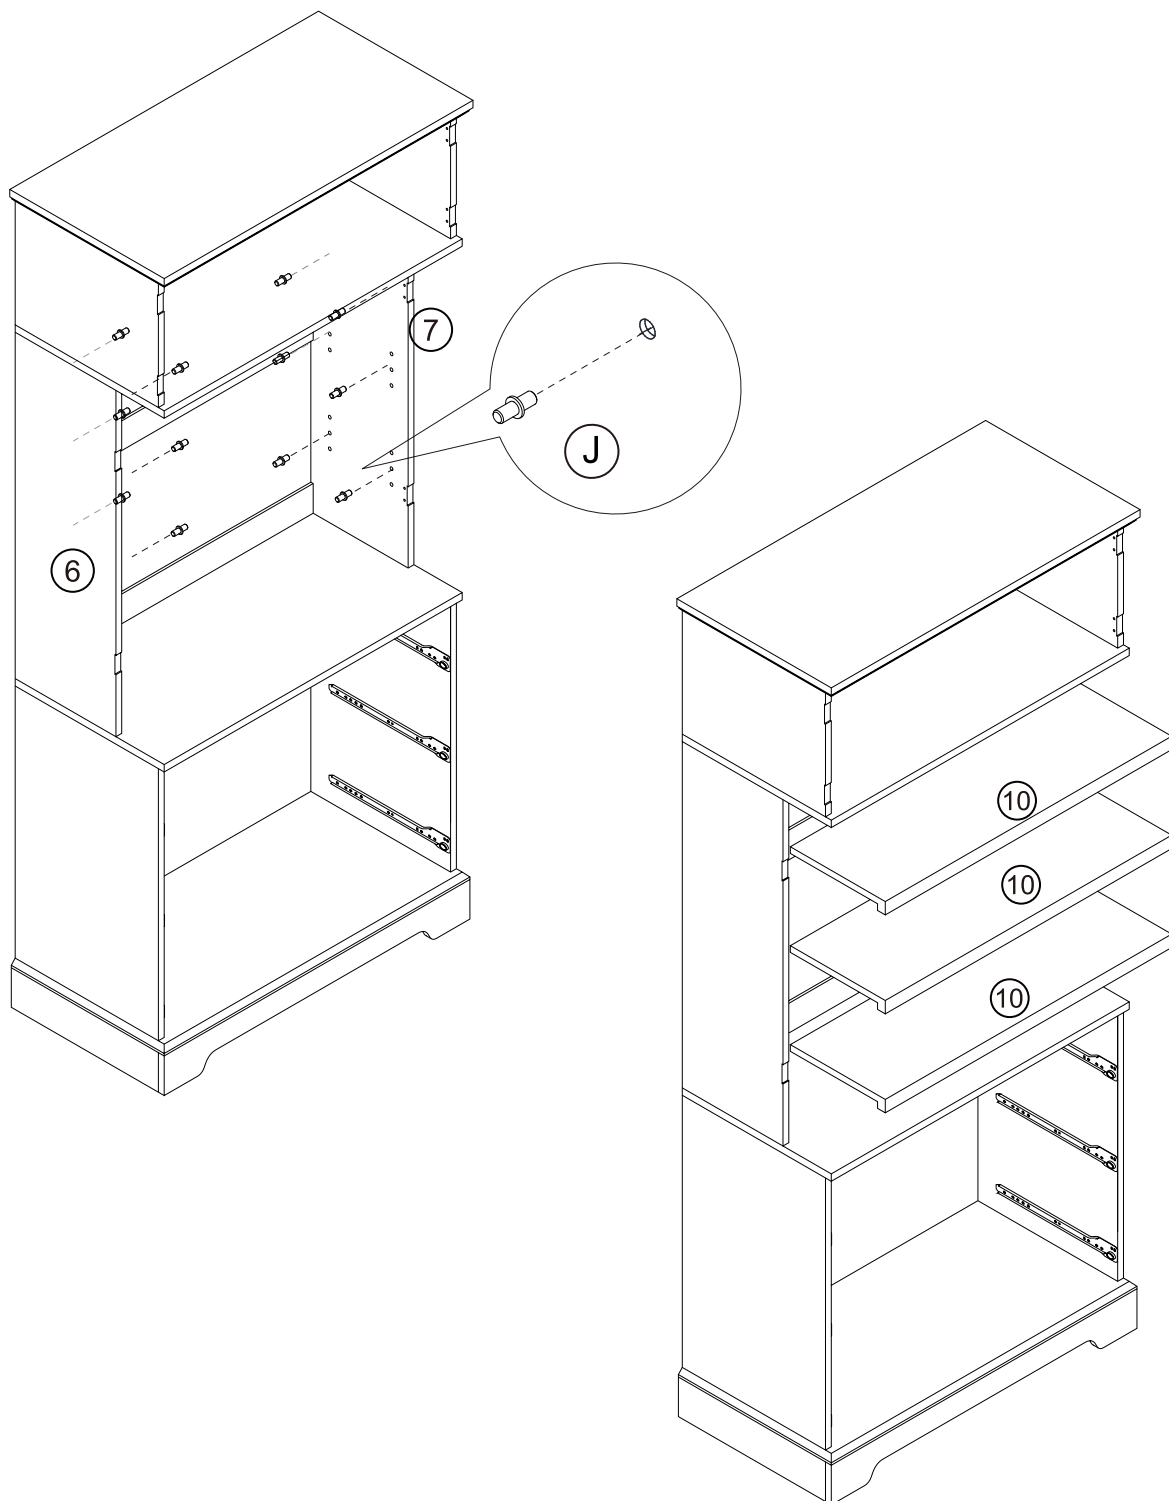


Assembly Instructions

Step 15

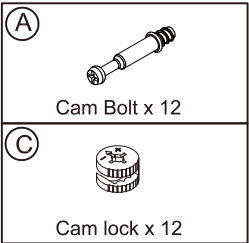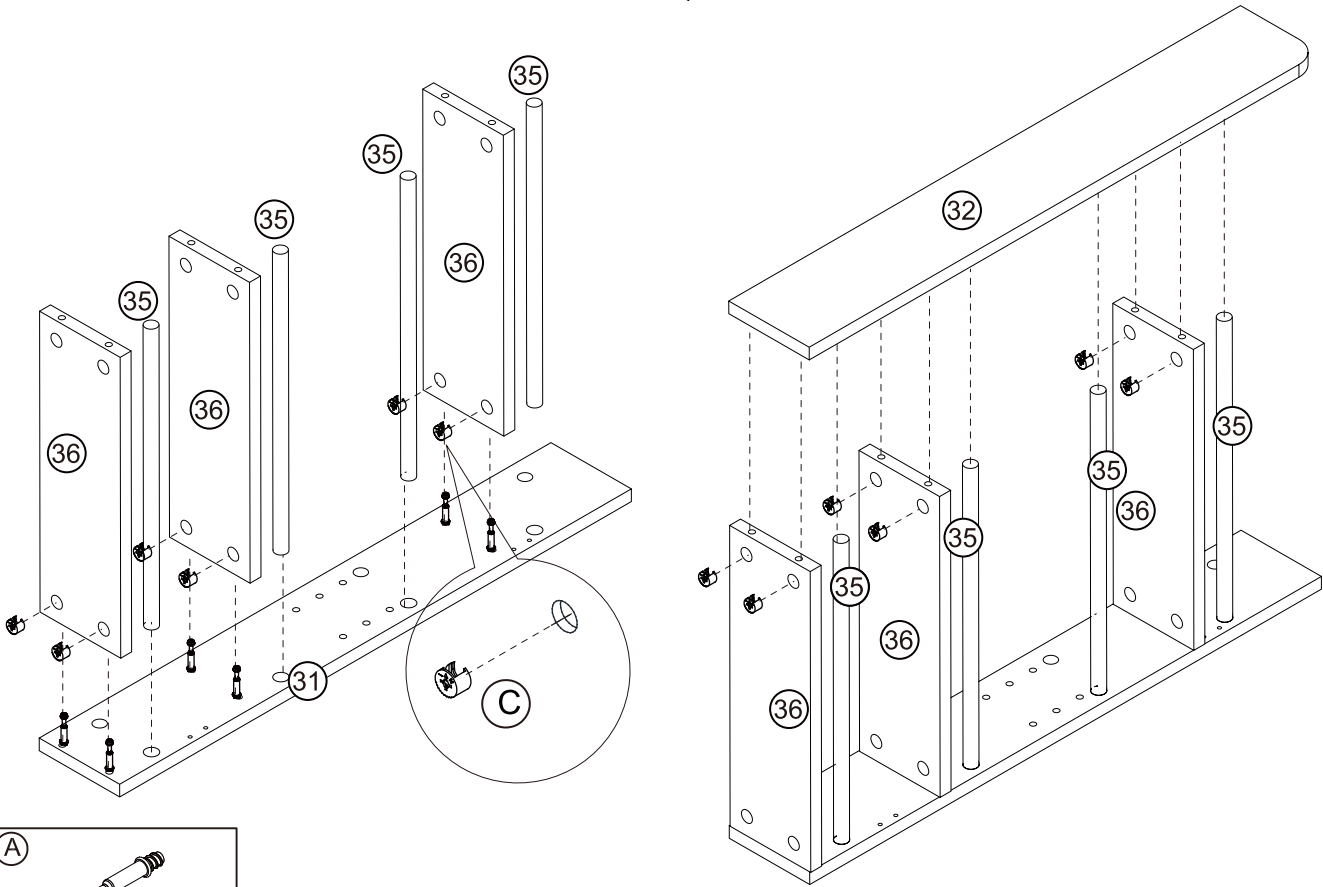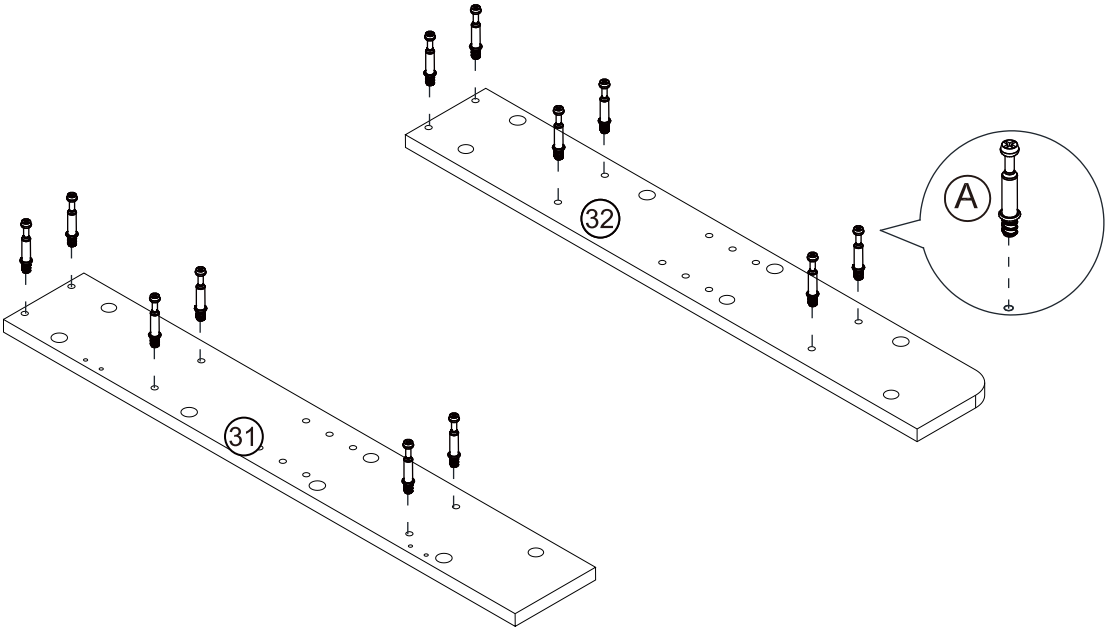

Assembly Instructions


Step 16

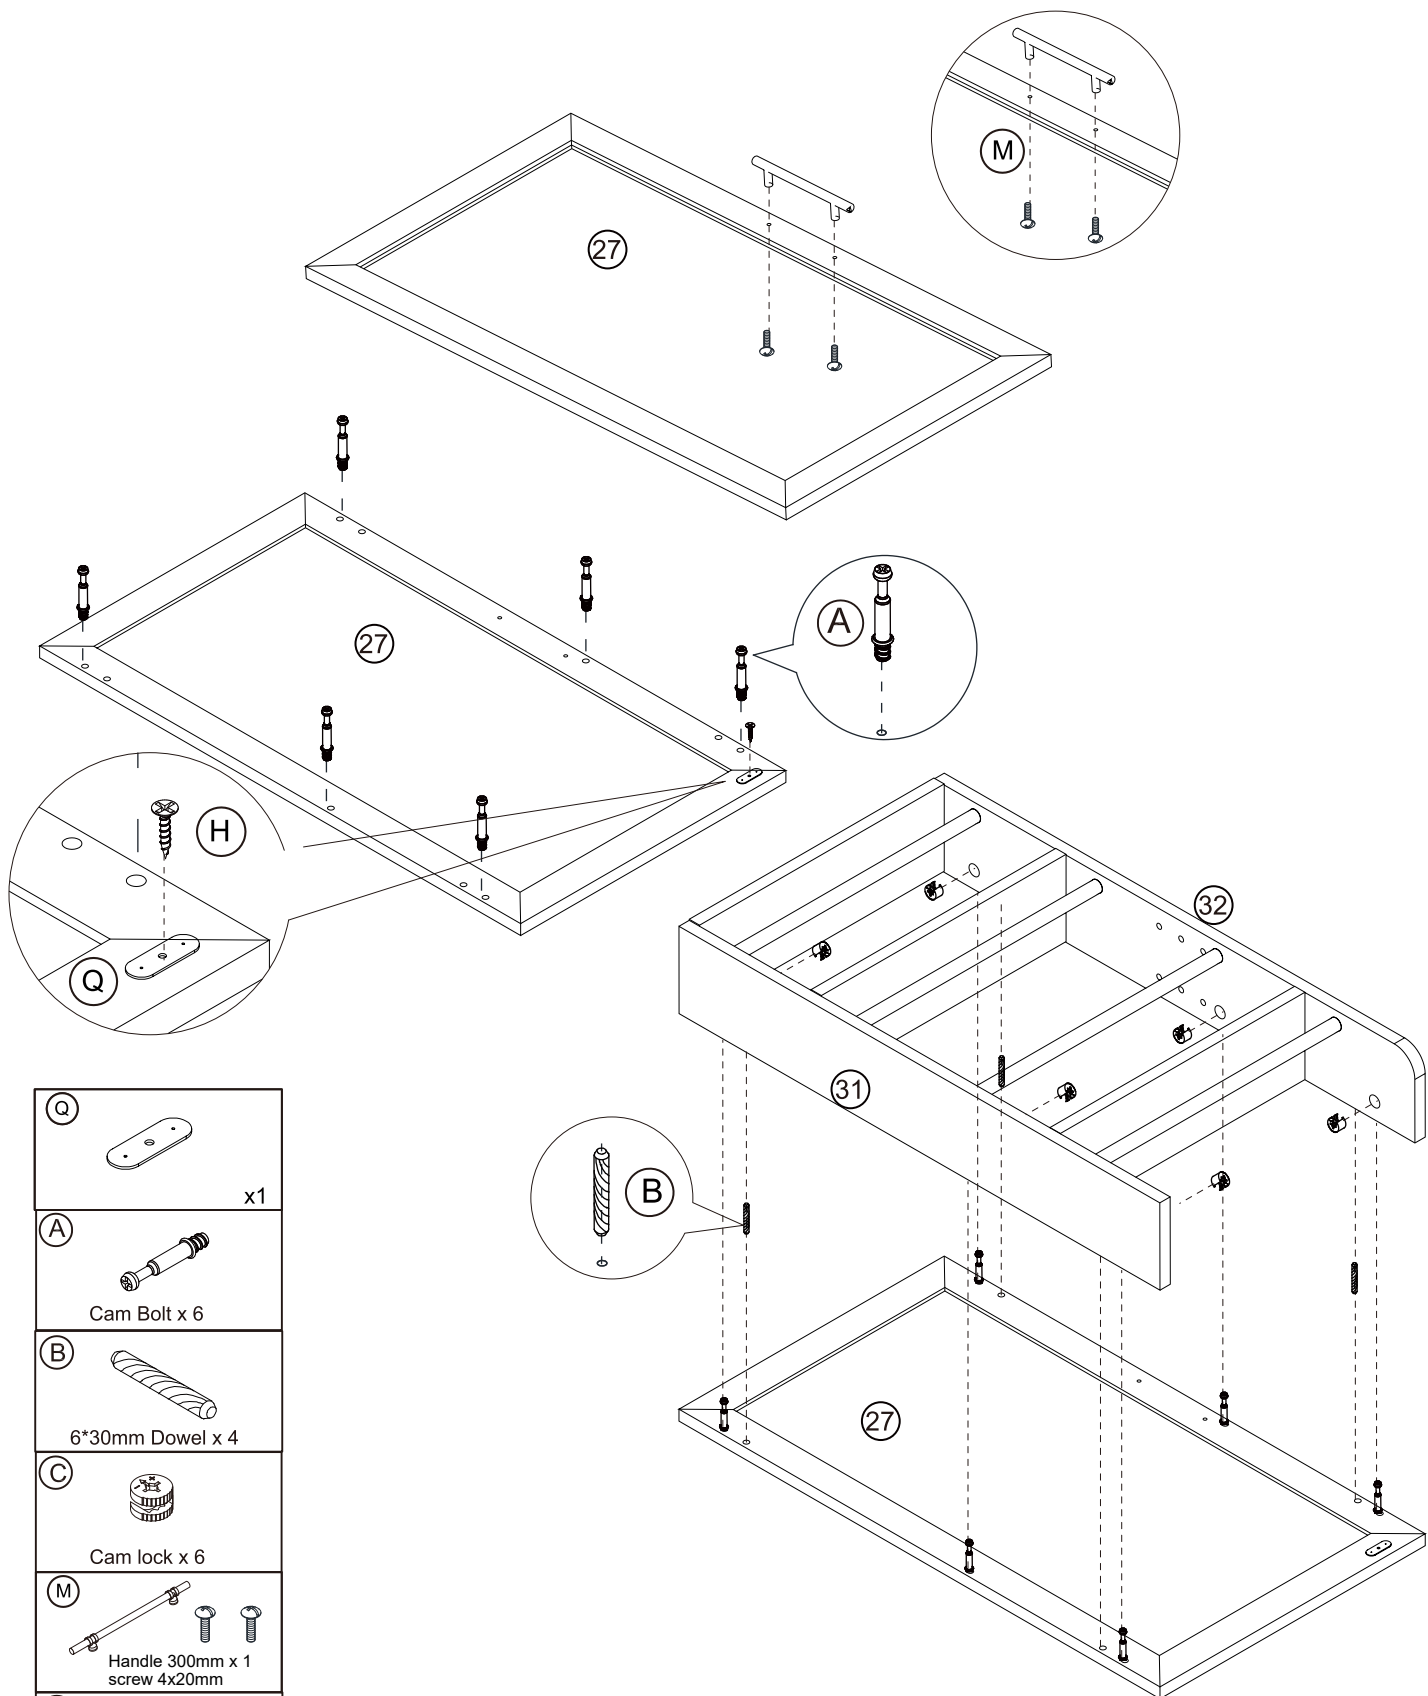

Q		x1
A		Cam Bolt x 6
B		6*30mm Dowel x 4
C		Cam lock x 6
M		Handle 300mm x 1 screw 4x20mm
H		3*12mm Screw x 1

Assembly Instructions






Step 17

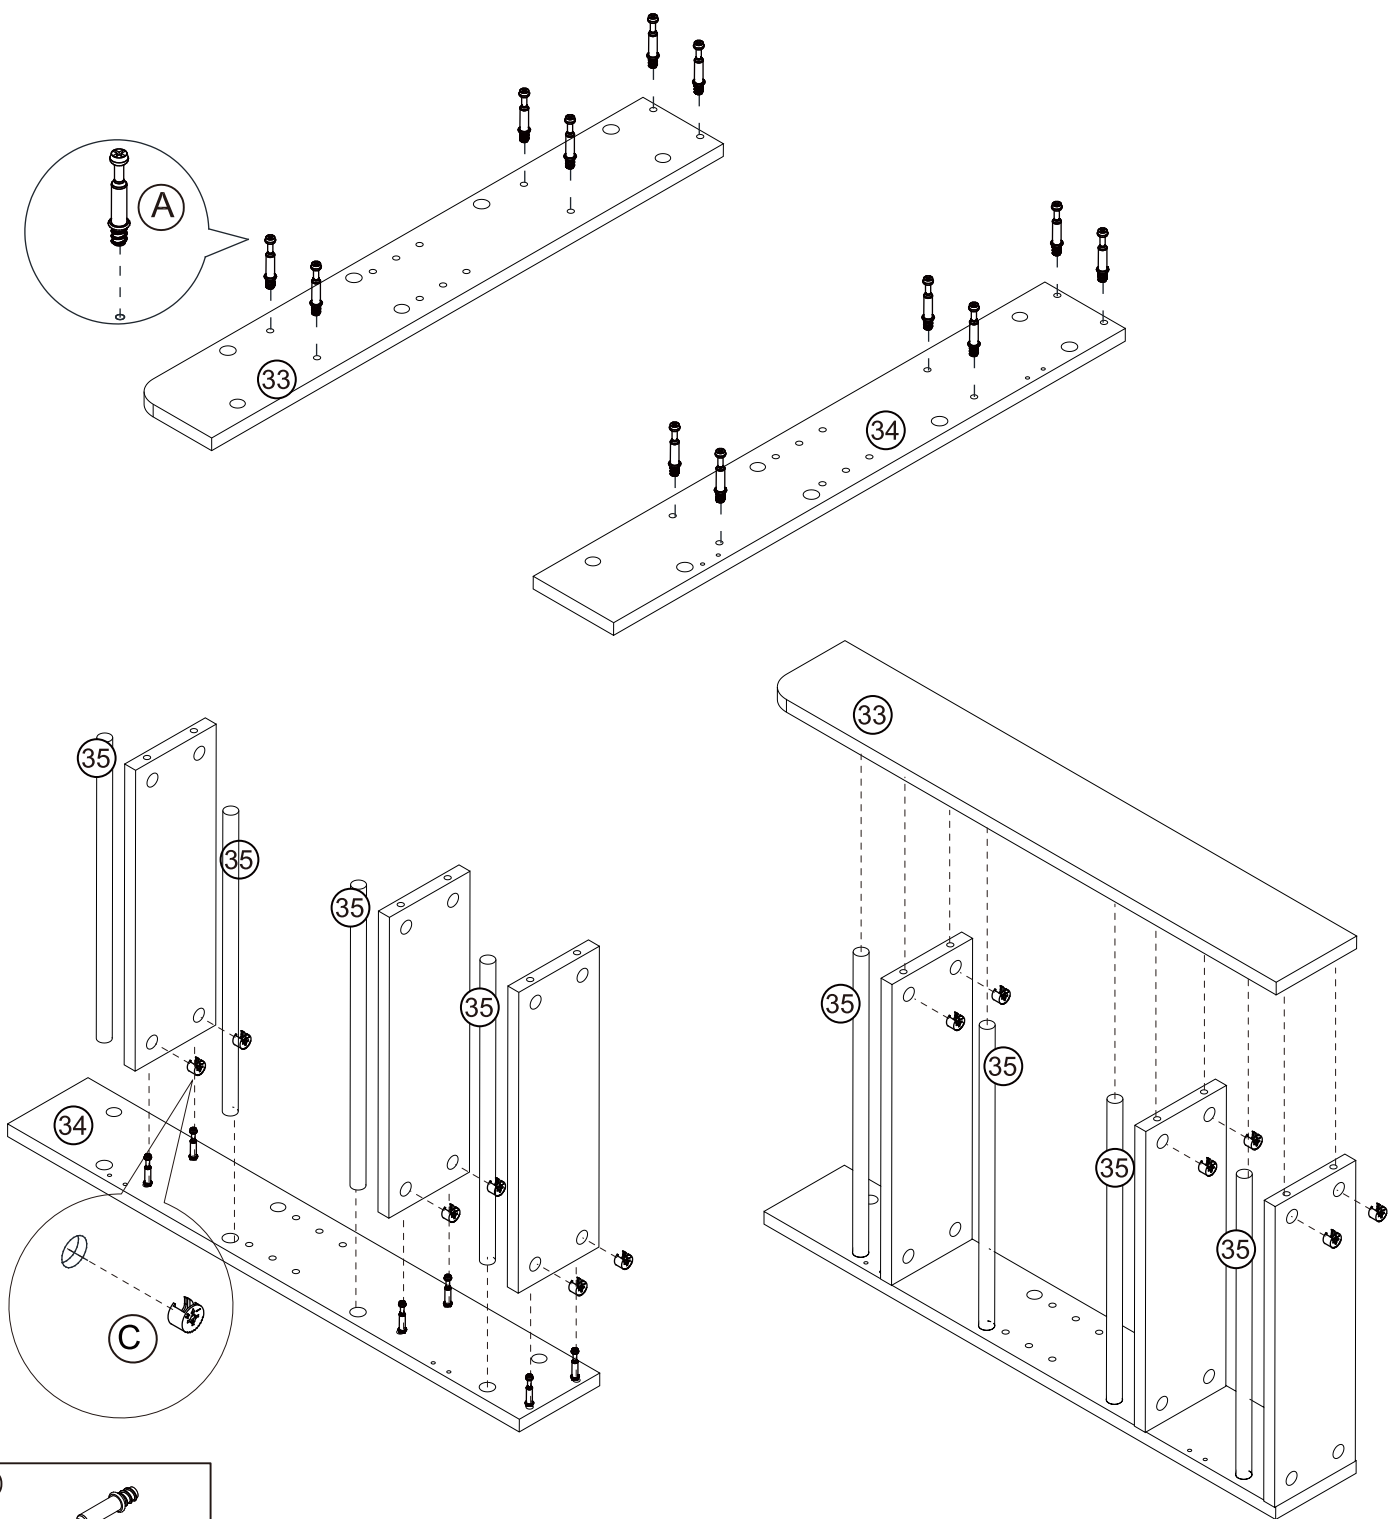



(A)	
	Cam Bolt x 12
(C)	
	Cam lock x 12

Assembly Instructions

Step 18

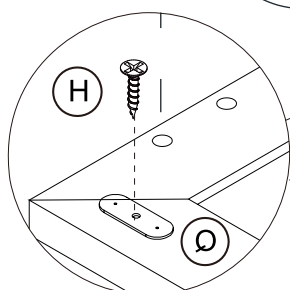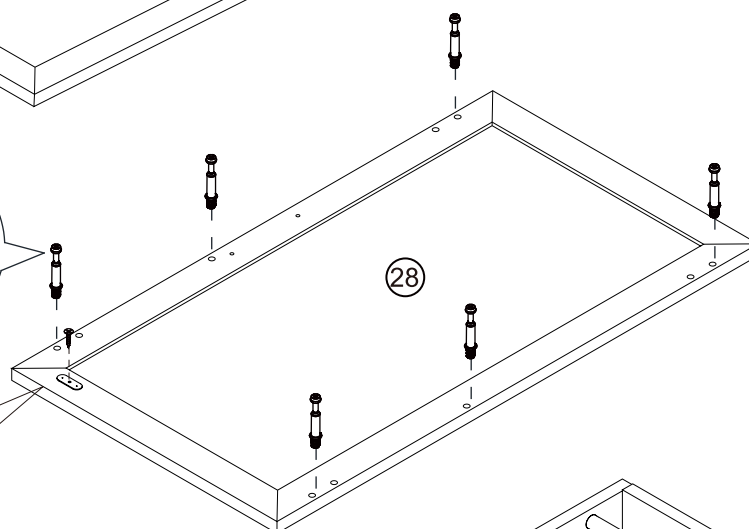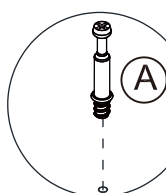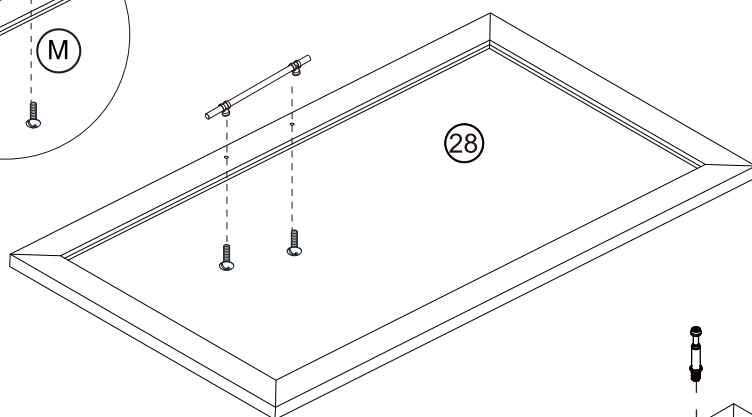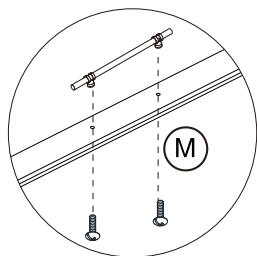


(Q)		x1
(A)		Cam Bolt x 6
(B)		6*30mm Dowel x 4
(C)		Cam lock x 6
(M)		Handle 300mm x 1 screw 4x20mm
(H)		3*12mm Screw x 1

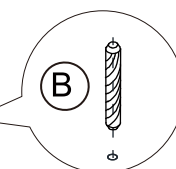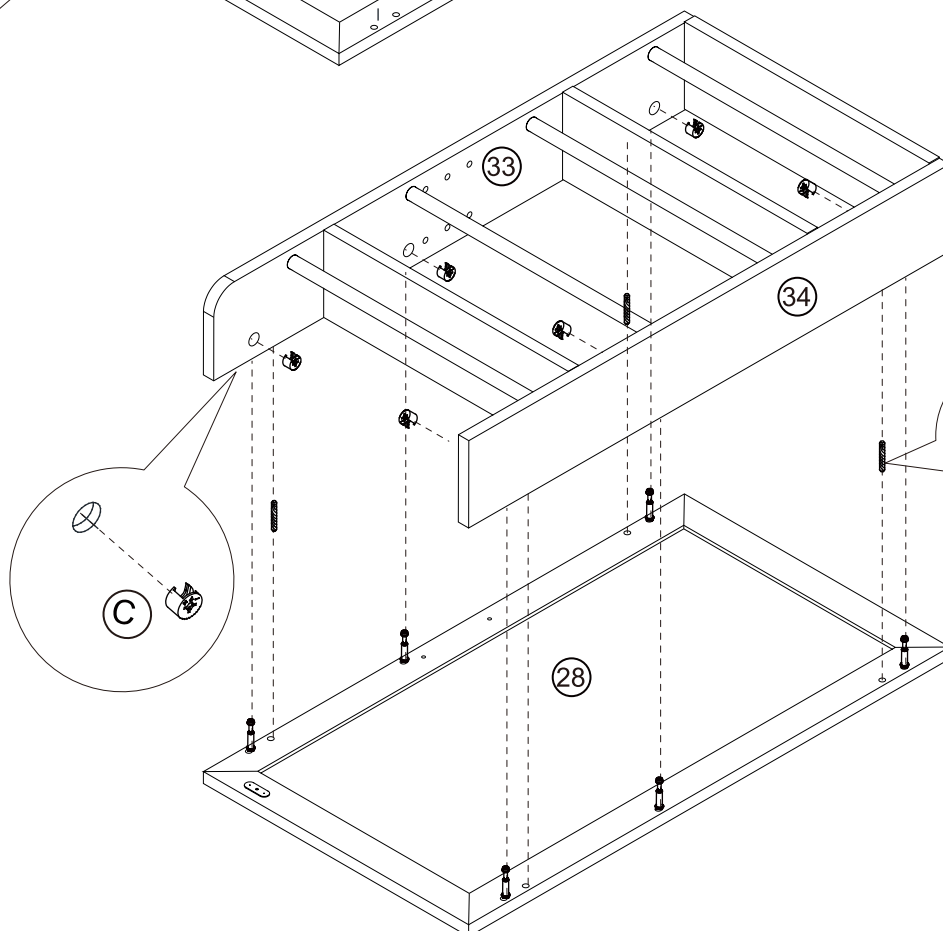

Assembly Instructions






Step 19

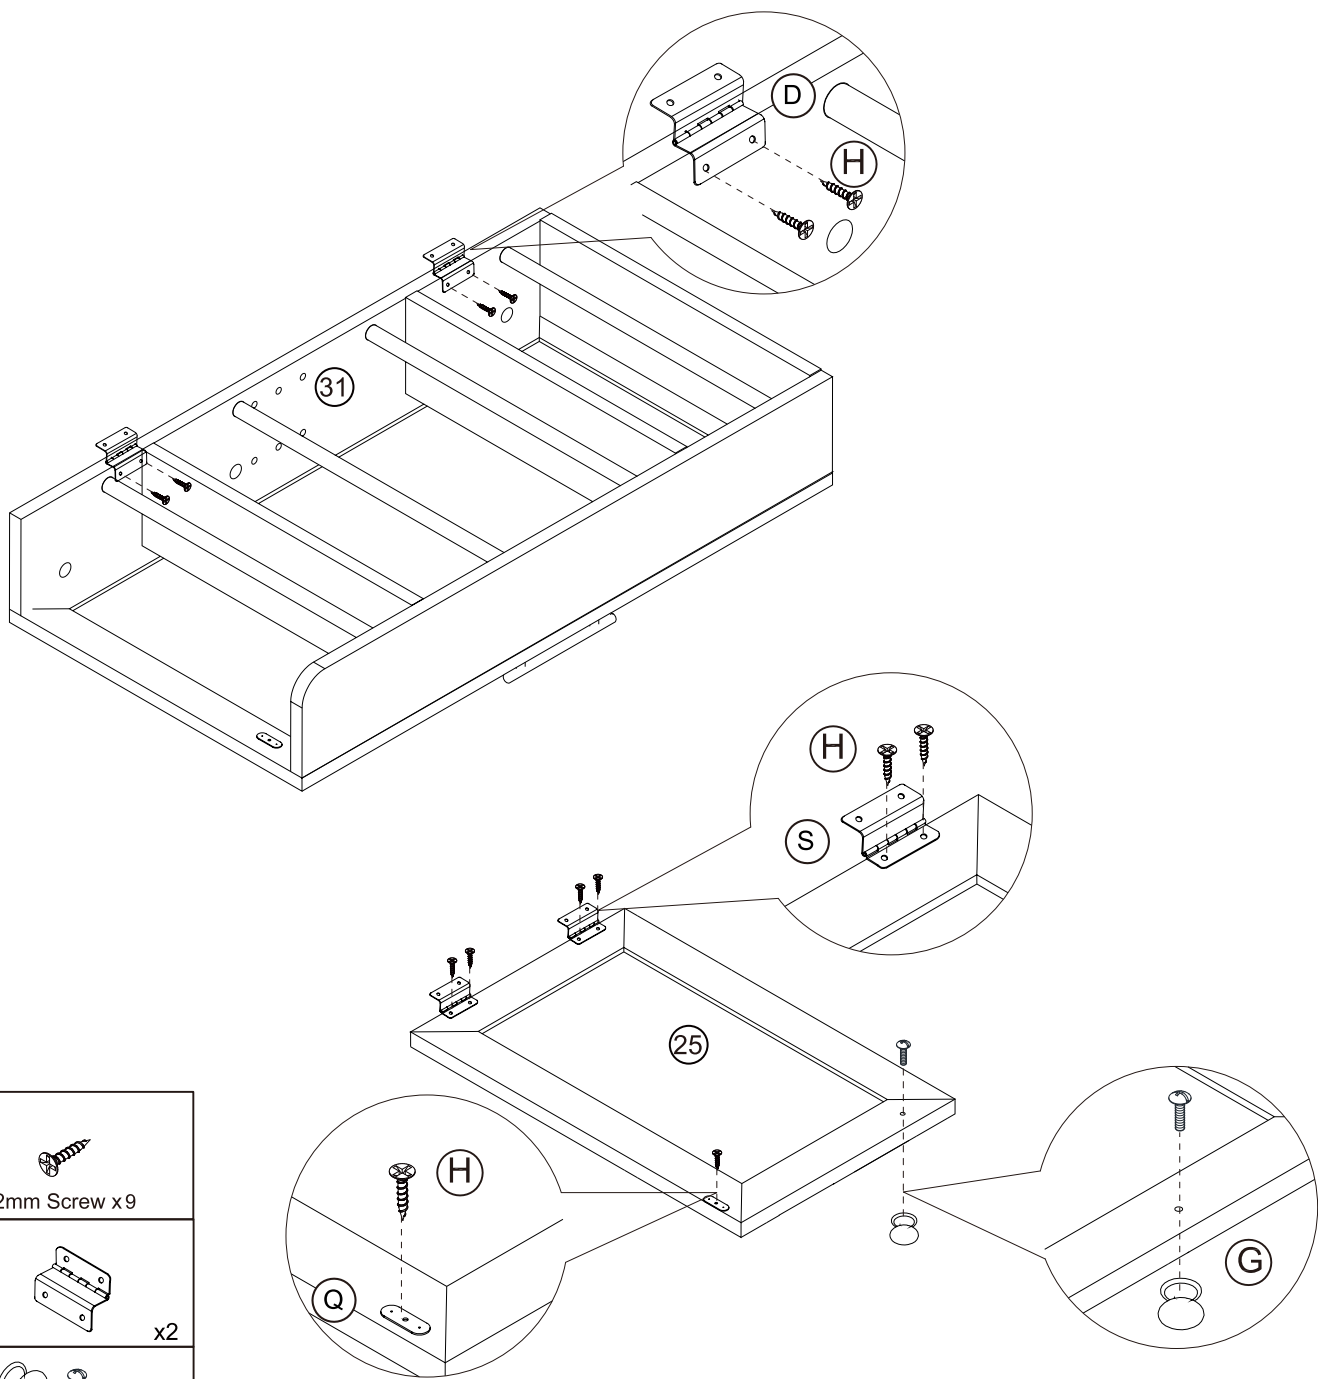

(H)	
(S)	
(G)	
(D)	
(Q)	

Assembly Instructions


Step 20

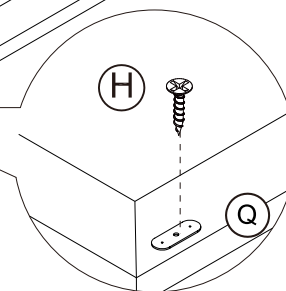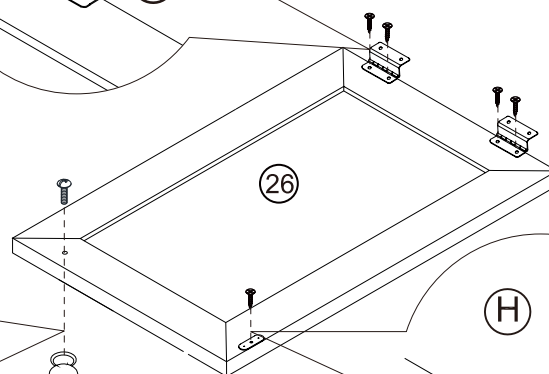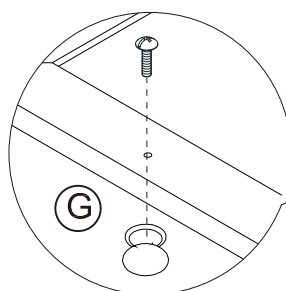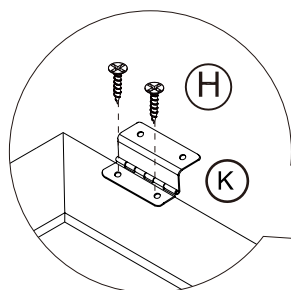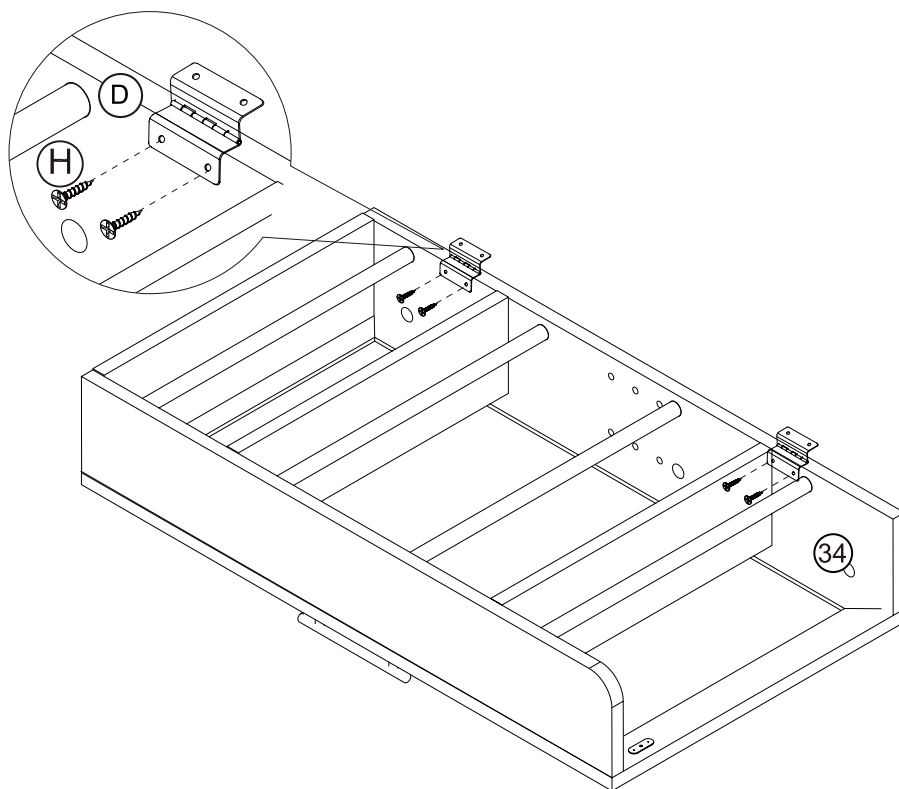

(H)	
3*12mm Screw x9	
(K)	
x2	
(G)	
Round handle x1 screw 4x20mm	
(D)	
x2	
(Q)	
x1	

Assembly Instructions

Step 21

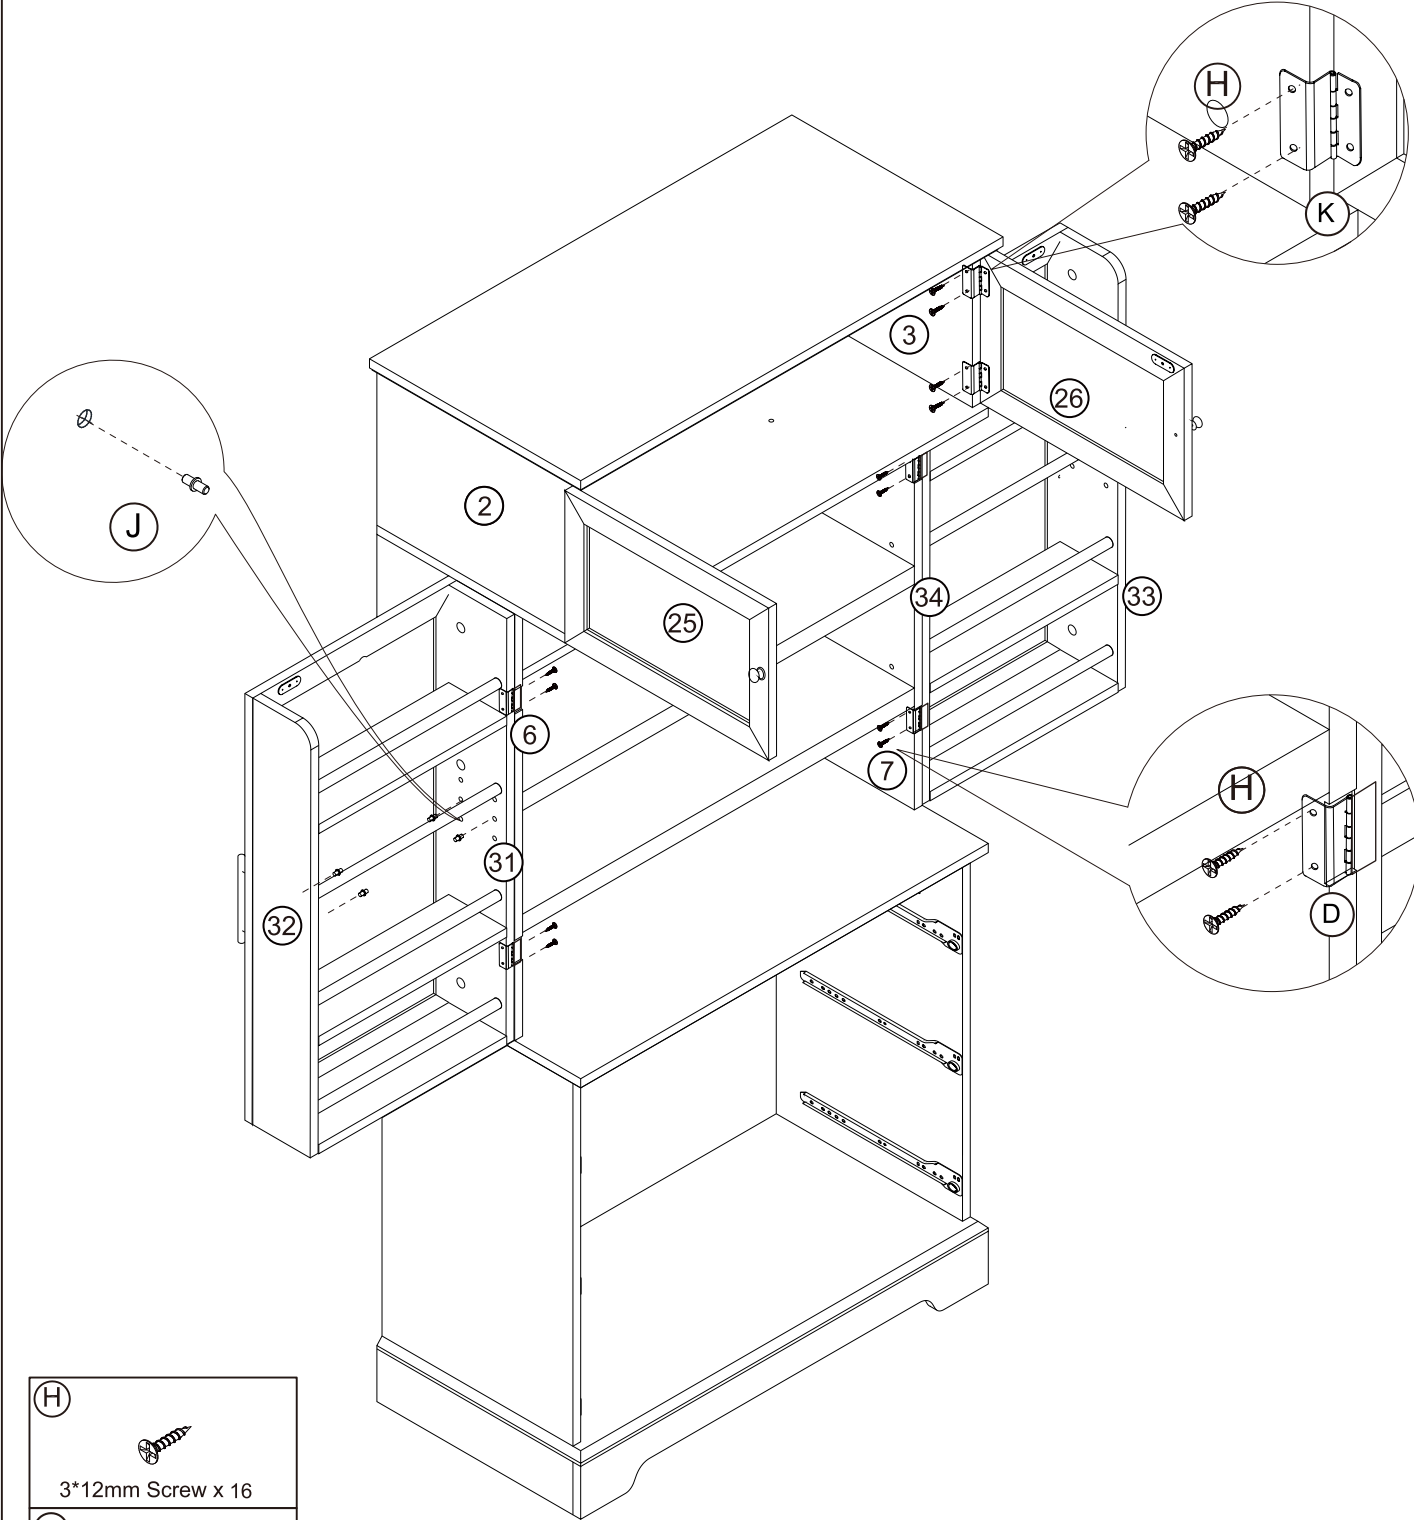


(H)
3*12mm Screw x 16

(J)
Shelf support pin x 8

Assembly Instructions







Step 22

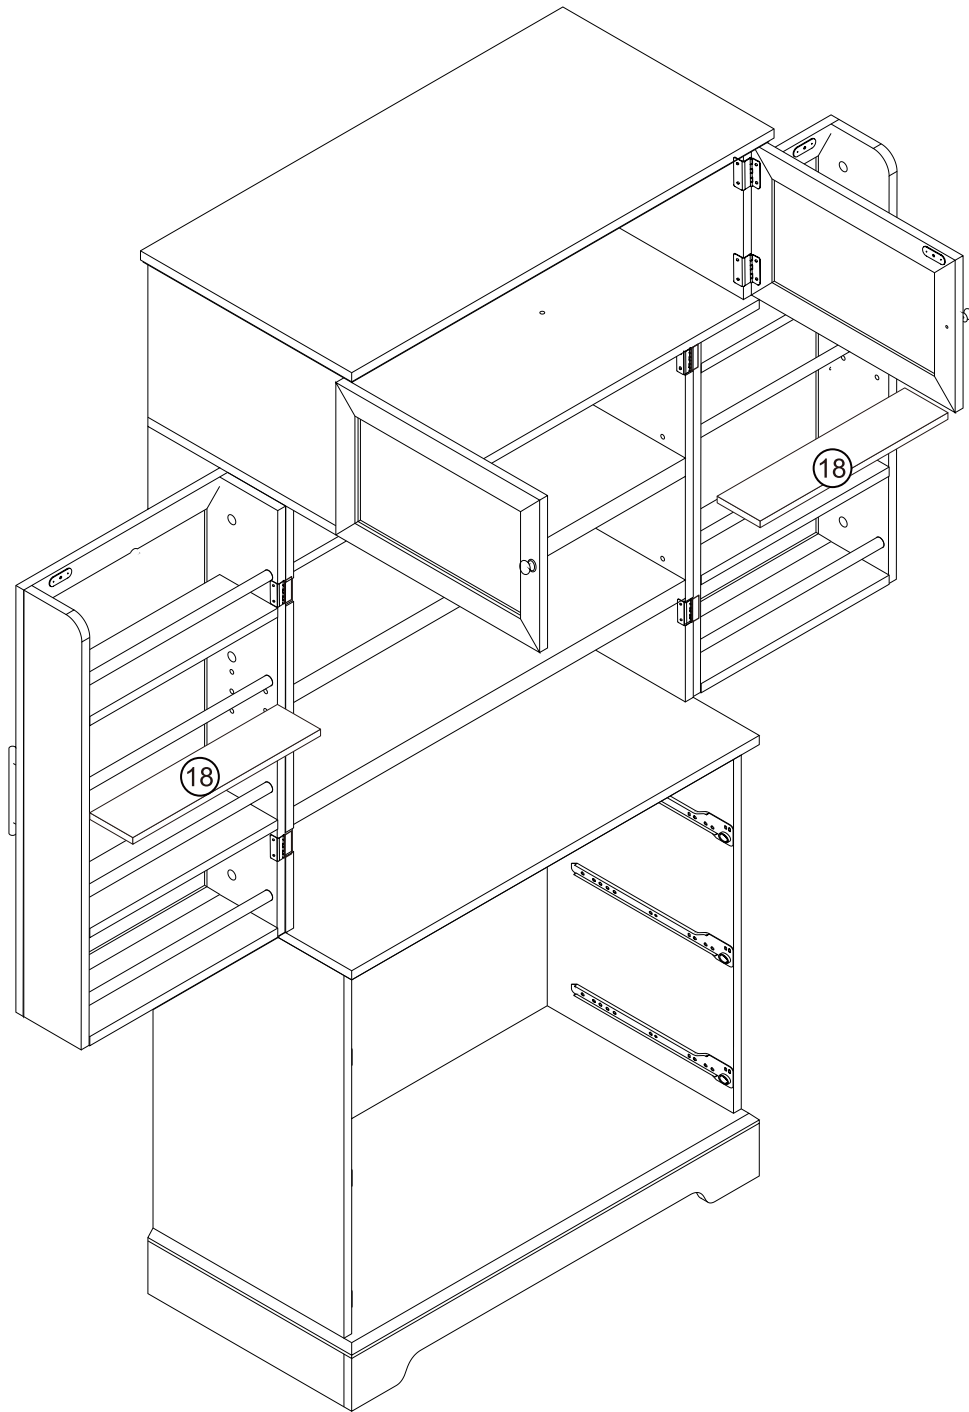


Assembly Instructions

Step 23

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

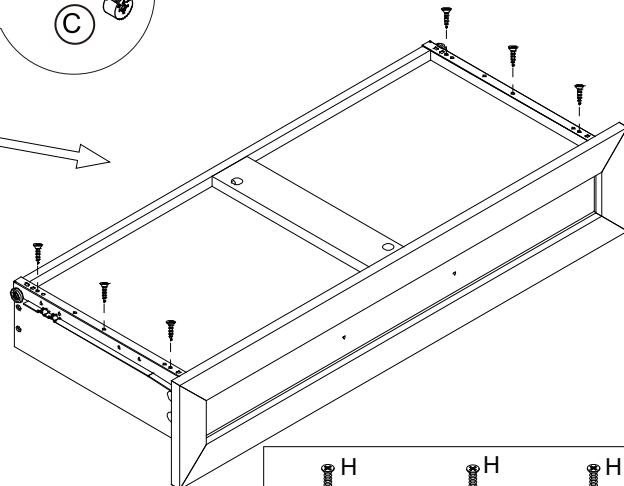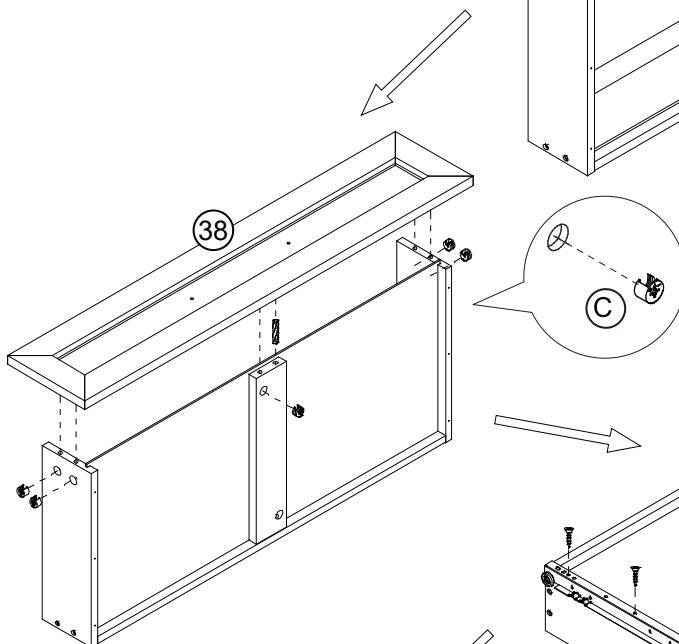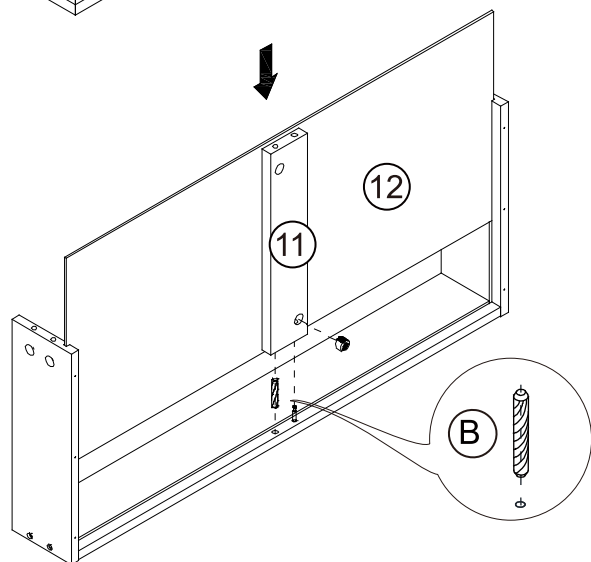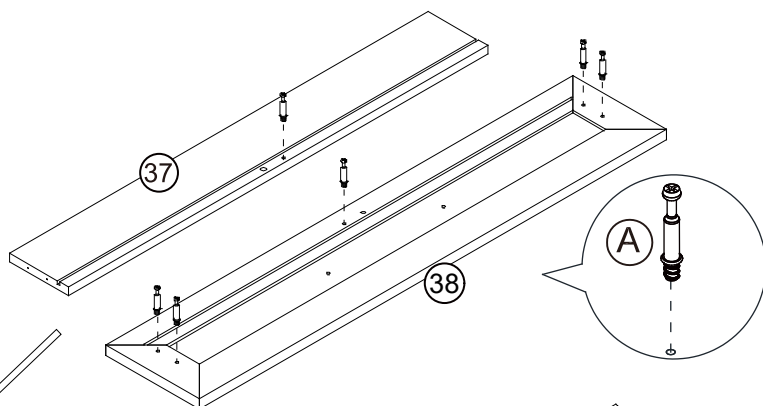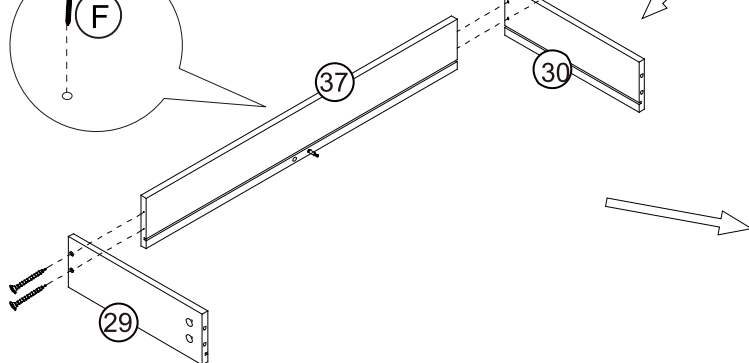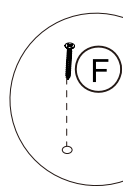

(H)	
	3x12mm Screw x6
(DR)	
	300mm runner x 1
(DL)	
	300mm runner x 1
(N)	
	Handle x 300mm x 1 screw 4x10mm Washer x 2
(A)	
	Cam Bolt x6
(C)	
	Cam Lock x6
(F)	
	4x35mm Screw x4

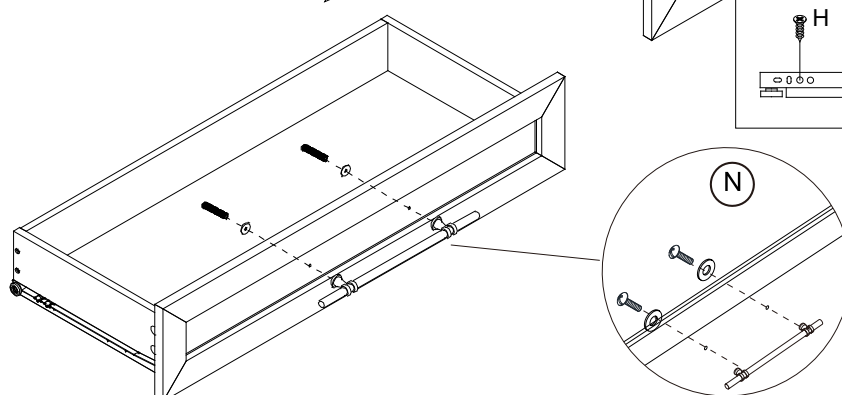


Assembly Instructions

Step 24




The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

X2

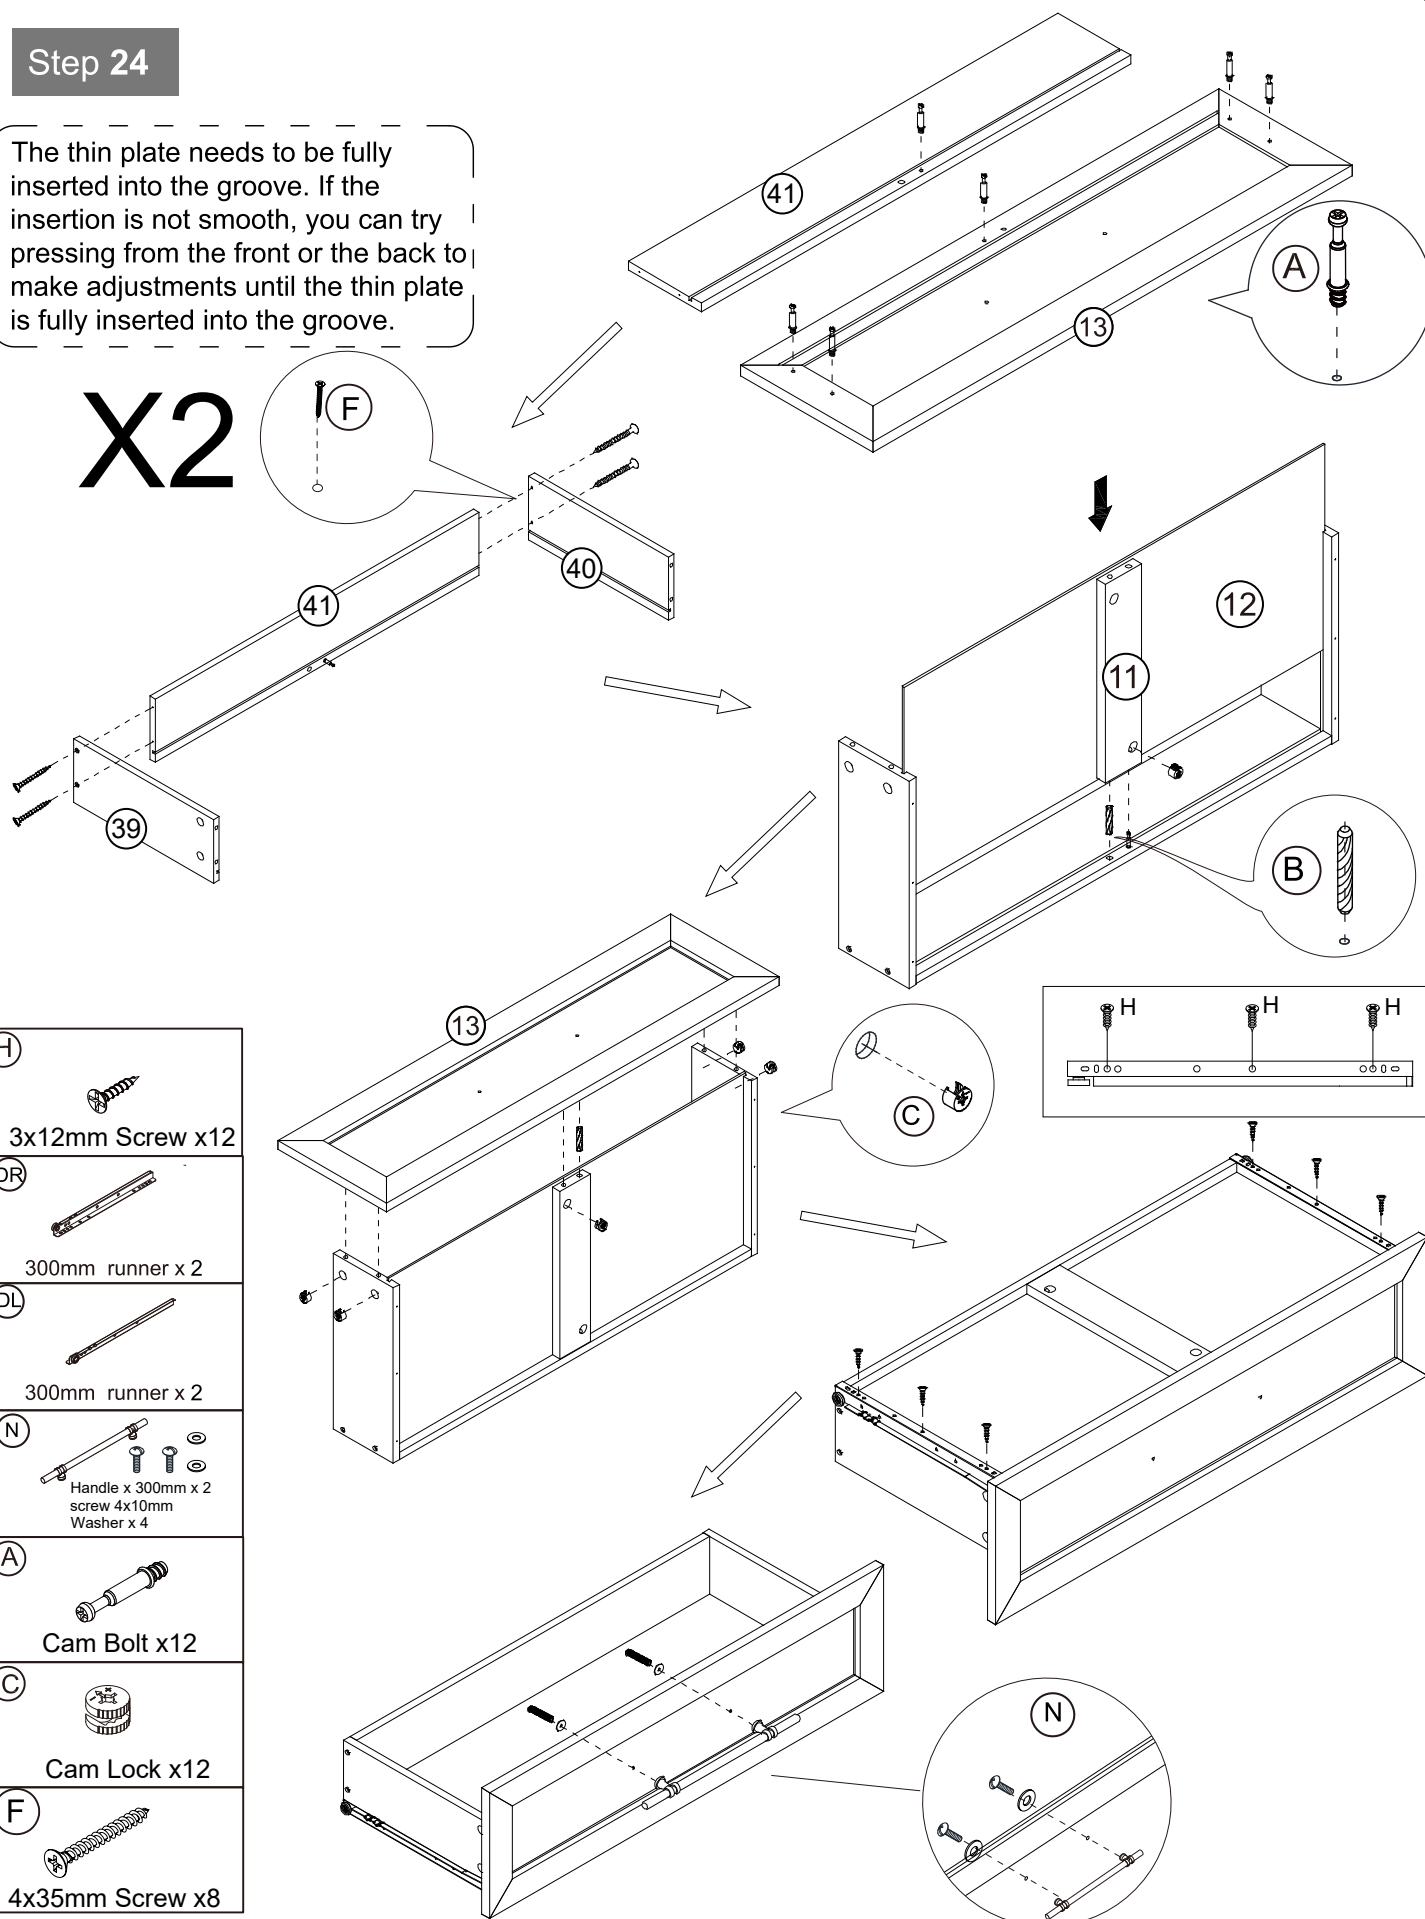



Assembly Instructions

Step 25

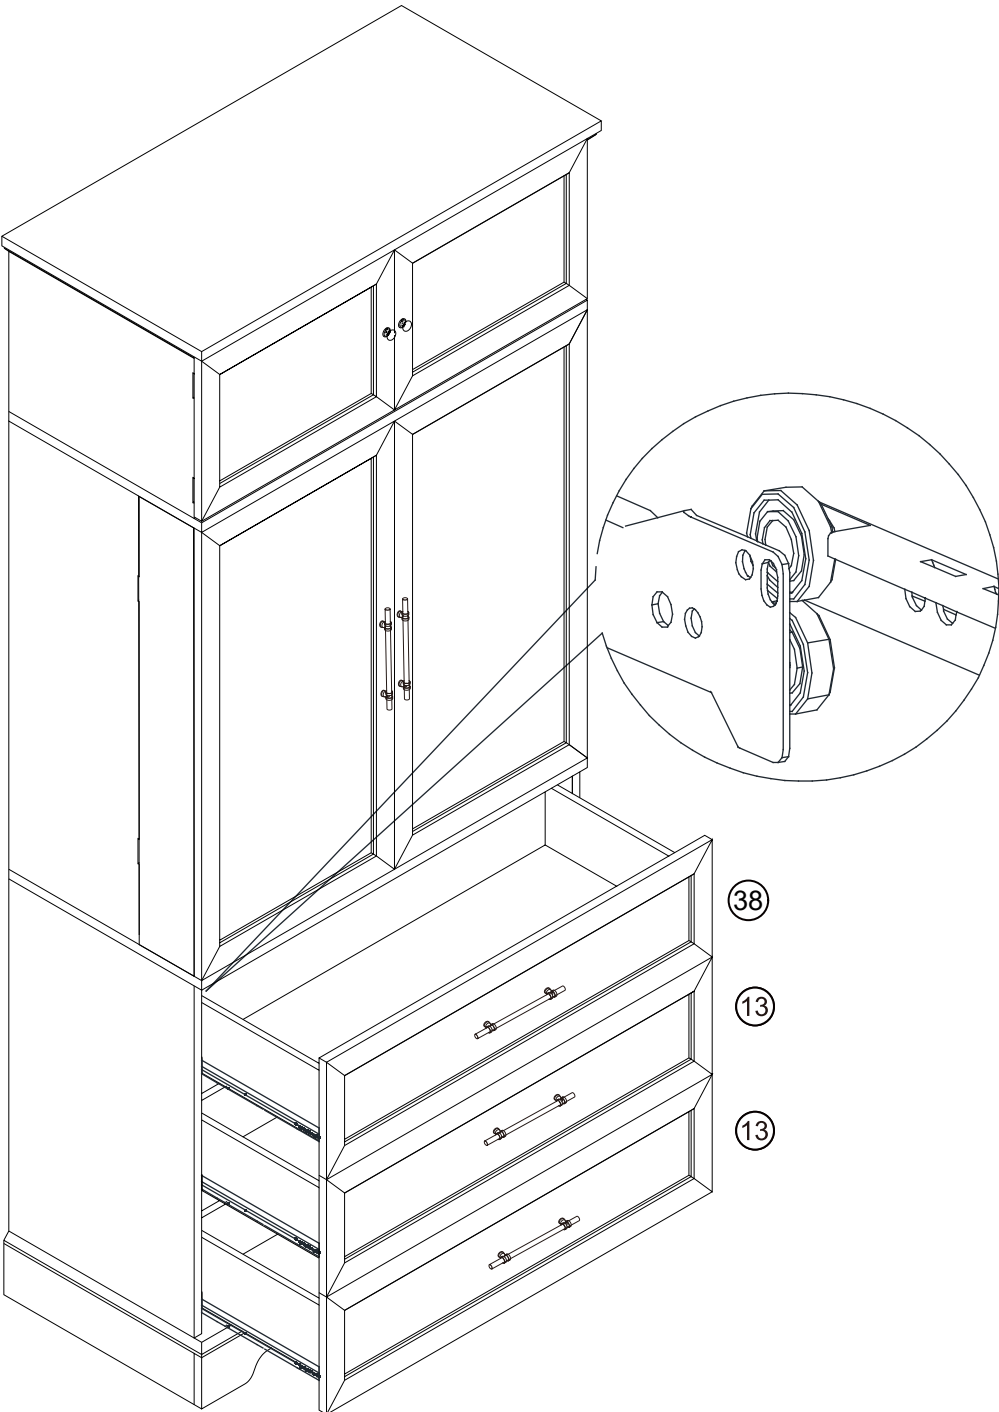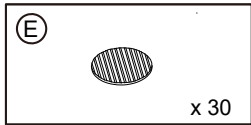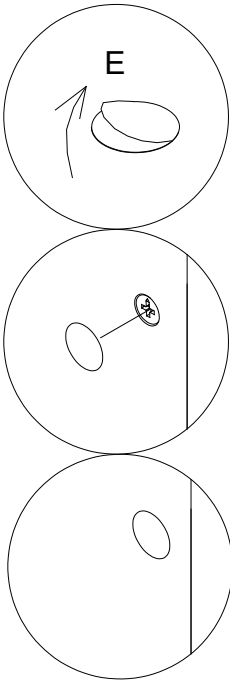

Assembly Instructions

Step 26

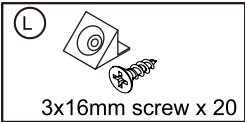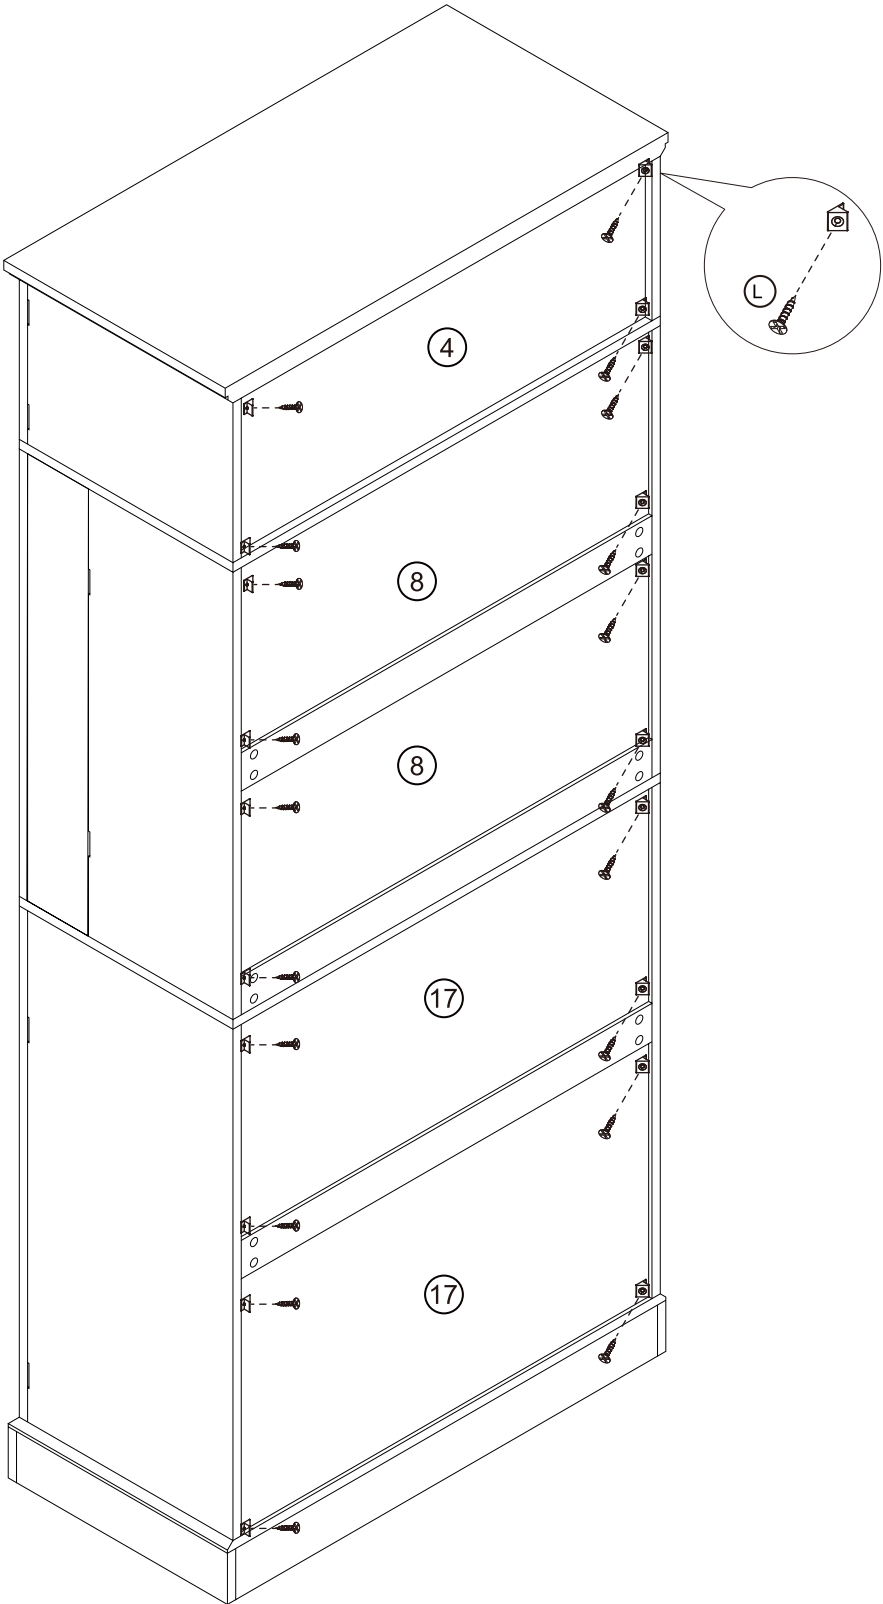

Assembly Instructions

Step 27

