


ASSEMBLY INSTRUCTION


THANK YOU FOR PURCHASING THIS QUALITY PRODUCT.

BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS THAT MAY HAVE COME LOOSE INSIDE THE CARTON DURING TRANSIT.

STEP 1 ① A+C by c ② A+B+e+a+b by c

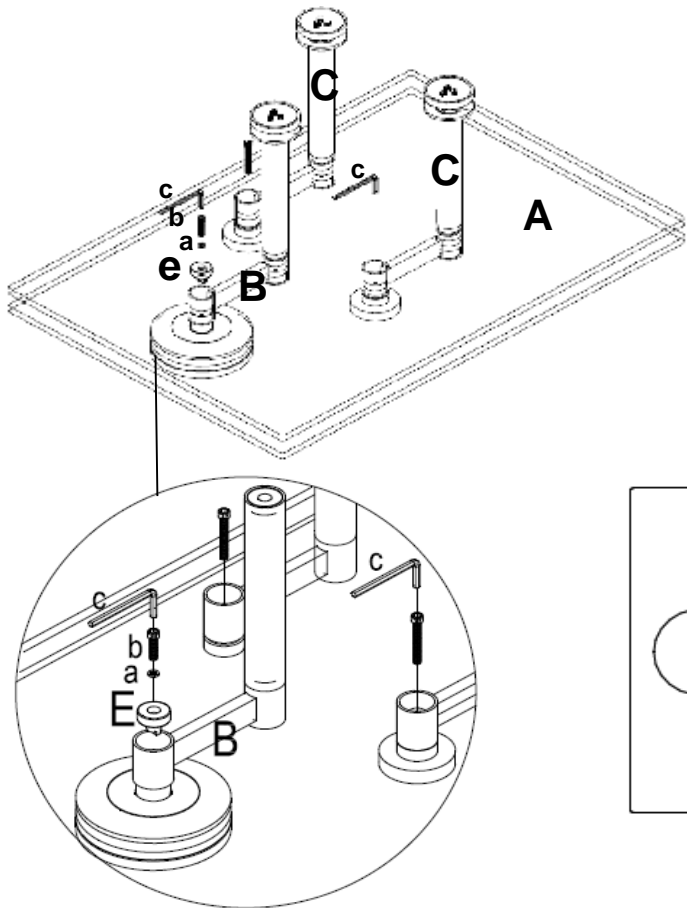

Noted:The direction of the footpillar should be paralalled.

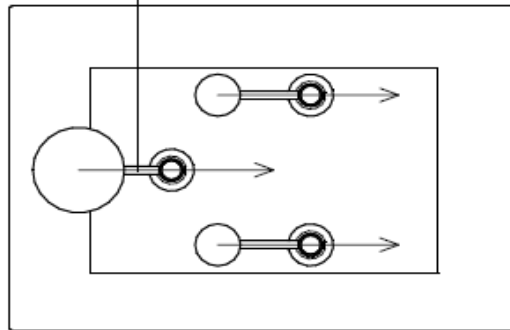

PART LIST

NO	DESC	SKETCH	QTY
A	GLASS TOP		1 PC
B	FOOTPILLAR (WITH M6 SCREW)		1PC
C	FOOTPILLAR (WITH M8,M6 SCREW)		2 PCS
D	BASE		1 PC


HARDWARE LIST





NO	DESC	SKETCH	QTY
a	M8 WASHER		1 PC
b	M8*35 SCREW		1PC


Firstly fix the Footpillar B on the Glass Top by the M8*30 screw which preassembled on the footpillar already according to the direction as showing, then fix the Footpillar C on the Glass top by M8*35 screw .

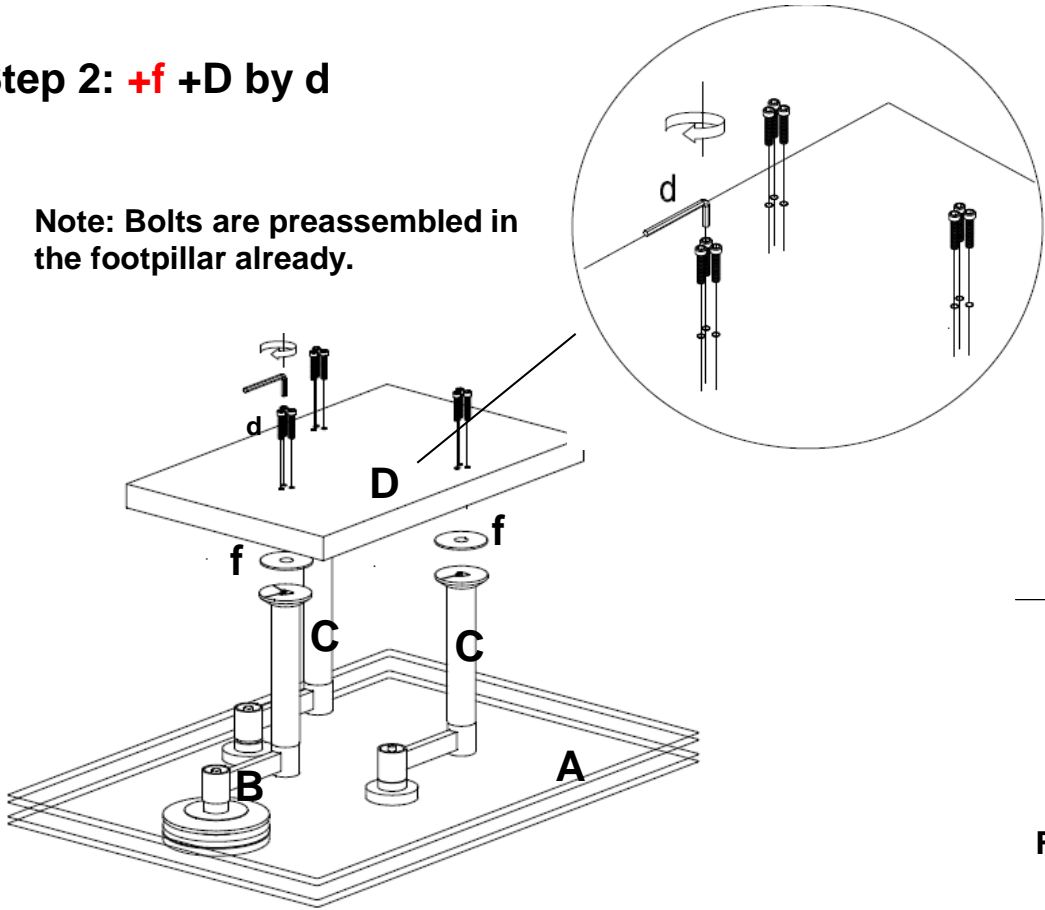Step 2: +f +D by d

Note: Bolts are preassembled in the footpillar already.



c	M8 SPANNER		1PC
d	M6 SPANNER		1PC
e	POSITIONING PARTS		1 PC
f	PLASTIC RUBBER		3PCS

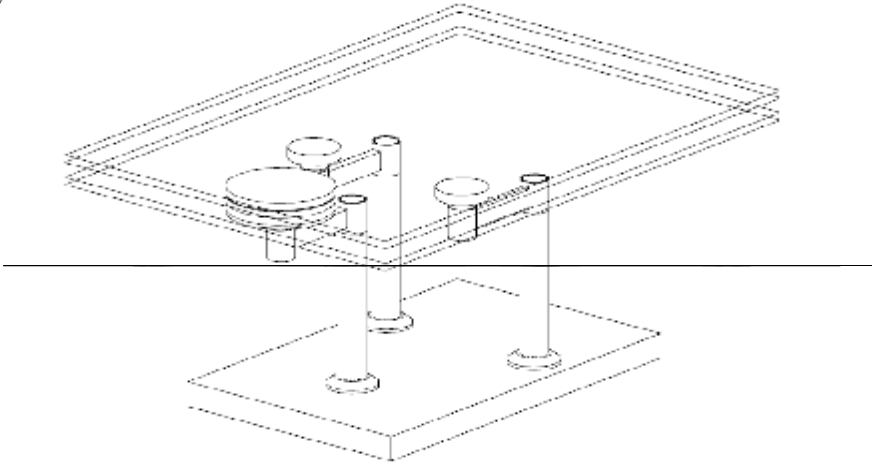

FINISHED

MADE IN CHINA